EXPLODED VIEW

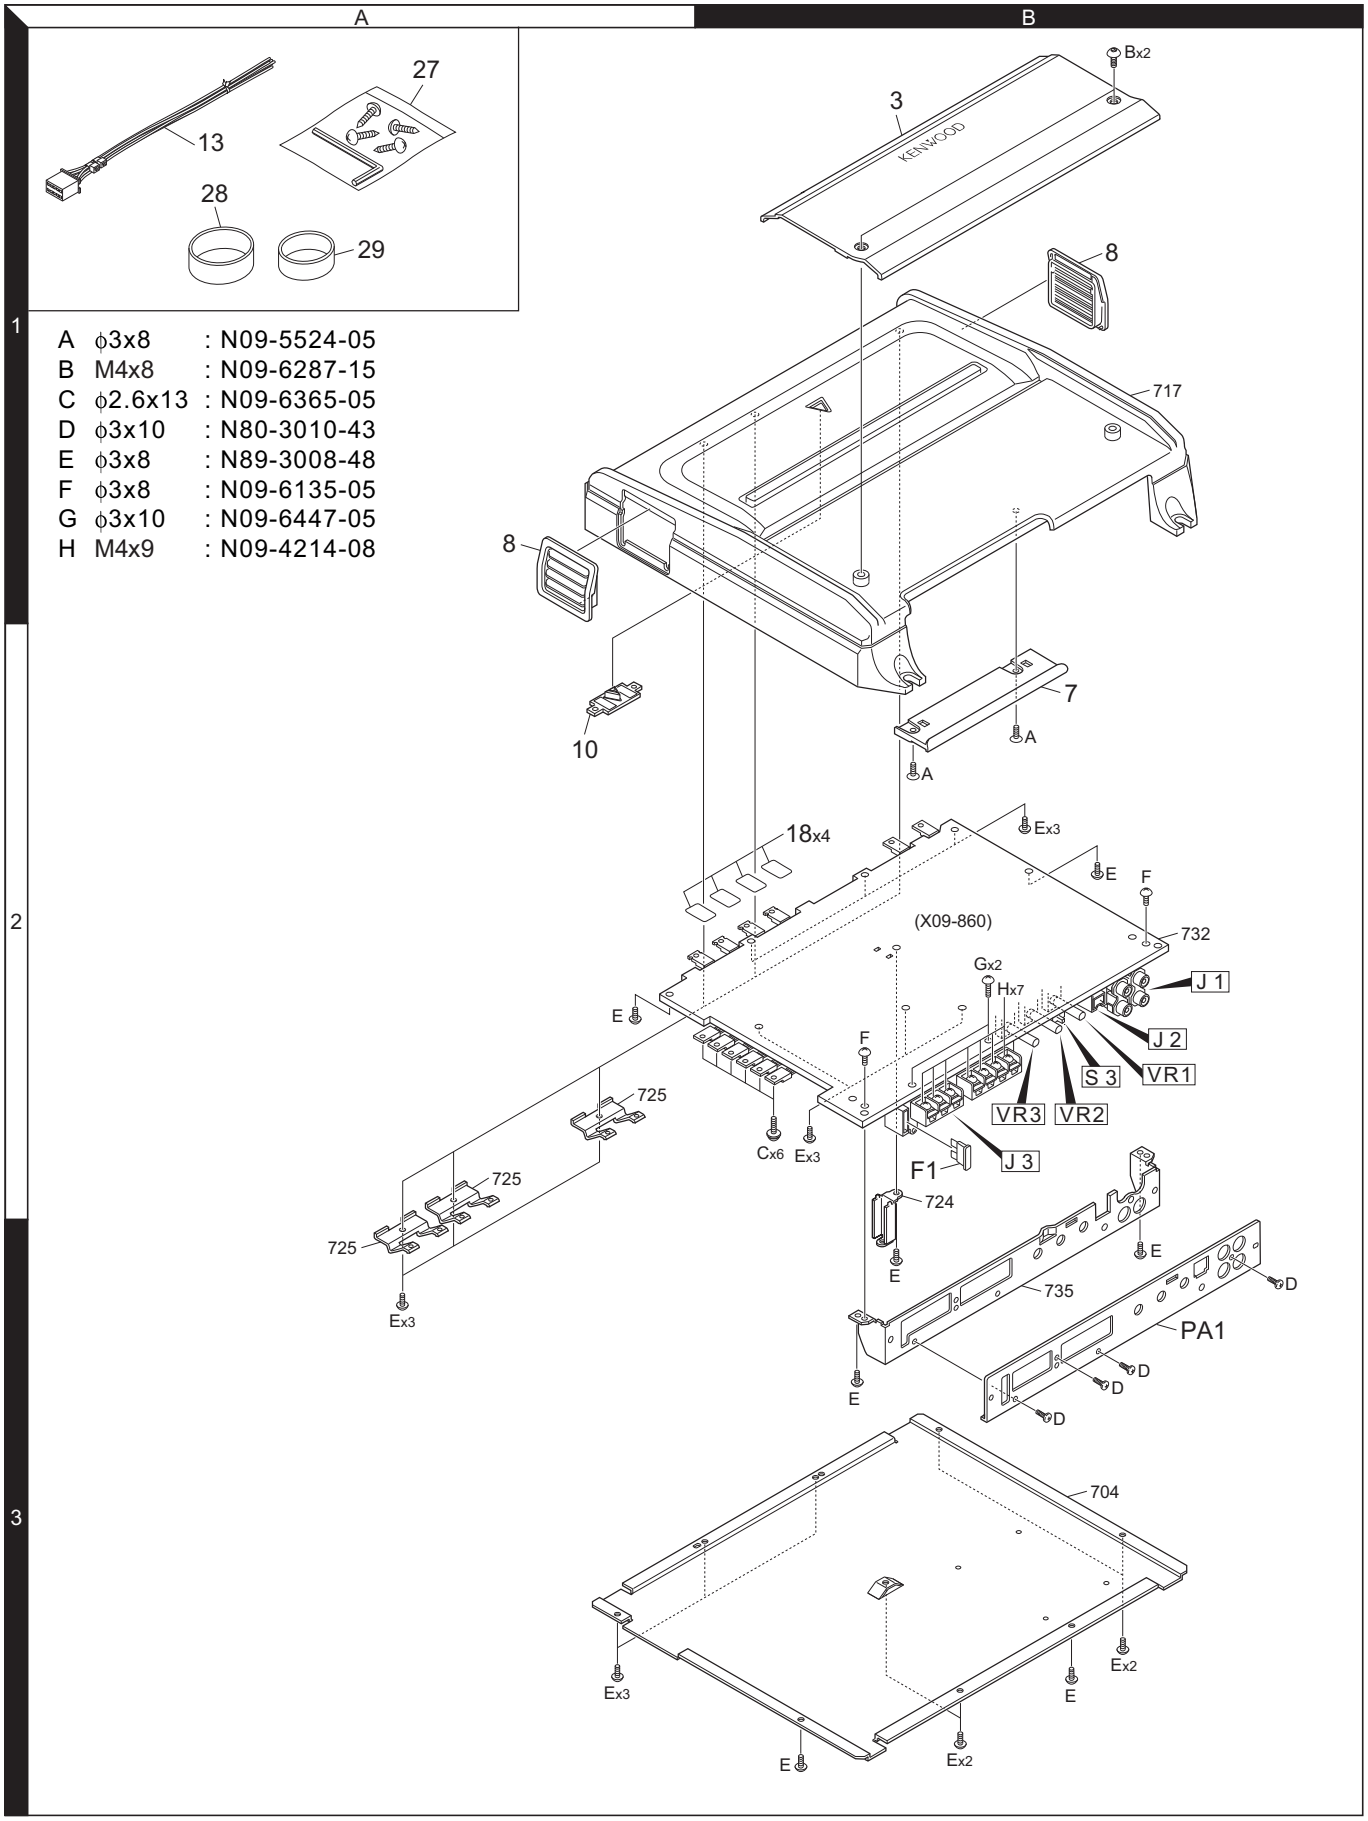

Parts with the exploded numbers larger than 700 are not supplied.

KAC-8103D

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description			Destination
KAC-8103D							
3	1B	✻	A21-6567-02	DRESSING PANEL			K
3	1B	✻	A21-6580-02	DRESSING PANEL			E1M1
PA1	3B	✻	A64-4085-02	PANEL			
7	2B	✻	B07-3195-03	ESCUTCHEON			
8	1A	✻	B07-3197-02	ESCUTCHEON			
10	2A	✻	B19-2420-03	LIGHTING BOARD			
-		✻	B64-3514-00	INSTRUCTI.MANUAL (ENG.FRE.SPA.)			KE1
-		✻	B64-3515-00	INSTR.MANUAL (GER.DUT.ITA.POR.)			E1
-		✻	B64-3516-00	INSTRU.MANUAL (ENG.T-CHI.S-CHI)			M1
13	1A		E30-6145-05	CONNECTING CORD ASSY			
18	2B	✻	F20-2409-04	INSULATING SHEET			
⚠ F1	2B		F52-0016-05	FUSE (BLADE TYPE) 40A			
-		✻	H54-3880-03	ITEM CARTON CASE			K
-		✻	H54-3881-03	ITEM CARTON CASE			E1
-		✻	H54-3882-03	ITEM CARTON CASE			M1
27	1A		N99-1794-05	SCREW & WRENCH KEY SET			
A	2B		N09-5524-05	SET SCREW (3X8)			
B	1B		N09-6287-15	DRESSED SCREW (M4X8)			
C	2B		N09-6365-05	SEMS (TAPTITE SCREW) (2.6X13)			
D	3B		N80-3010-43	PAN HEAD TAPTITE SCREW			
E	3B		N89-3008-48	BINDING HEAD TAPTITE SCREW			
H	2B		N09-4214-08	SCREW (M4X9)			
28	1A		W01-1606-05	ACCESSORIES (LARGE)			
29	1A		W01-1607-05	ACCESSORIES (SMALL)			
AUDIO UNIT (X09-8600-10)							
D3			B30-1743-05	LED (RED LED)			
C1			CD04AU1H100M	NP-ELEC	10UF	50WV	
C2,3			CD04BJ1H100M	ELECTRO	10UF	50WV	
C4			CK73GB1H103K	CHIP C	0.010UF	K	
C5			CD04BJ1H100M	ELECTRO	10UF	50WV	
C6,7			CK73GB1H103K	CHIP C	0.010UF	K	
C10			CK73GB1H104K	CHIP C	0.10UF	K	
C11			CD04AU1H2R2M	NP-ELEC	2.2UF	50WV	
C12,13			CK73GB1H104K	CHIP C	0.10UF	K	
C14			CD04BJ1H470M	ELECTRO	47UF	50WV	
C15			CK73GB1H103K	CHIP C	0.010UF	K	
C16			CK73GB1H102K	CHIP C	1000PF	K	
C17,18		✻	C90-6816-05	ELECTRO	3300UF	16WV	
C19			CQ93FMG1H682J	MYLAR	6800PF	J	
C20-23			CK45FB1H102K	CERAMIC	1000PF	K	
C24			CD04BJ1H470M	ELECTRO	47UF	50WV	
C25,26			C90-5688-05	ELECTRO	1500UF	100WV	
C31,32			CD04BJ1H470M	ELECTRO	47UF	50WV	
C35,36			CD04BJ1H470M	ELECTRO	47UF	50WV	
C40			CK73GB1H103K	CHIP C	0.010UF	K	
C41			CK73GB1H104K	CHIP C	0.10UF	K	
C42			CK73GB1H103K	CHIP C	0.010UF	K	
C100			CK45FF1H223Z	CERAMIC	0.022UF	Z	
C101,102			CK73GB1H102K	CHIP C	1000PF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C103-108			CD04BJ1H100M	ELECTRO	10UF	50WV	
C109			CC73GCH1H330J	CHIP C	33PF	J	
C110			CC73GCH1H470J	CHIP C	47PF	J	
C111,112			CC73GCH1H101J	CHIP C	100PF	J	
C113			CC73GCH1H330J	CHIP C	33PF	J	
C114,115			CK73GB1H103K	CHIP C	0.010UF	K	
C116			CK45FF1H223Z	CERAMIC	0.022UF	Z	
C117			CK73GB1H103K	CHIP C	0.010UF	K	
C118,119			CK45FF1H223Z	CERAMIC	0.022UF	Z	
C151			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C152			CK73GB1H104K	CHIP C	0.10UF	K	
C153			CD04BJ1H470M	ELECTRO	47UF	50WV	
C154			CC73GCH1H470J	CHIP C	47PF	J	
C155			CQ93FMG1H332J	MYLAR	3300PF	J	
C156			CK73GB1H102K	CHIP C	1000PF	K	
C181			CD04BJ1H470M	ELECTRO	47UF	50WV	
C182			CC73GCH1H560J	CHIP C	56PF	J	
C183			CC73GCH1H470J	CHIP C	47PF	J	
C195,196			CQ93FMG1H332J	MYLAR	3300PF	J	
C197,198			C91-2267-05	MP-F	10UF	J	
C200			CD04BJ1H100M	ELECTRO	10UF	50WV	
C201,202			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C205			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C209			CK73GB1E154K	CHIP C	0.15UF	K	
C210			CK73GB1H103K	CHIP C	0.010UF	K	
C211			CK73GB1H333K	CHIP C	0.033UF	K	
C212			CK73GB1E154K	CHIP C	0.15UF	K	
C213-215			CK73GB1H103K	CHIP C	0.010UF	K	
C216			CK73GB1H333K	CHIP C	0.033UF	K	
C217,218			CK73GB1H103K	CHIP C	0.010UF	K	
C220			CK73GB1H104K	CHIP C	0.10UF	K	
C221			CD04BJ1H4R7M	ELECTRO	4.7UF	50WV	
C224			CC73GCH1H101J	CHIP C	100PF	J	
C303			CC73GCH1H331J	CHIP C	330PF	J	
C304-306			CK73GB1H103K	CHIP C	0.010UF	K	
C401			CF92FV2A104J	MF-C	0.10UF	J	
C402-404			CD04BJ1H470M	ELECTRO	47UF	50WV	
C405			CF92FV2A104J	MF-C	0.10UF	J	
C500-503			CD04BJ1H100M	ELECTRO	10UF	50WV	
C504			CC73GCH1H070D	CHIP C	7.0PF	D	
C507			CC73GCH1H070D	CHIP C	7.0PF	D	
C516			CD04BJ1H100M	ELECTRO	10UF	50WV	
C538			CC73GCH1H070D	CHIP C	7.0PF	D	
C600			CK73GB1H102K	CHIP C	1000PF	K	
C601			CK73GB1H103K	CHIP C	0.010UF	K	
C602			CK73FB1C684K	CHIP C	0.68UF	K	
C603			CK73GB1H103K	CHIP C	0.010UF	K	
C604			CD04BJ1H100M	ELECTRO	10UF	50WV	
C605,606			CK73GB1H103K	CHIP C	0.010UF	K	
C607			CD04BJ1H100M	ELECTRO	10UF	50WV	
C608			CK73GB1H103K	CHIP C	0.010UF	K	
C609			CK73GB1H333K	CHIP C	0.033UF	K	
C610,611			CK73GB1H102K	CHIP C	1000PF	K	
C612			CK73GB1H104K	CHIP C	0.10UF	K	
C613			CD04BJ1A101M	ELECTRO	100UF	10WV	

E1 : KAC-8103D (Europe) **K** : KAC-8103D (North America)
M1 : KAC-8103D (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8600-10)

Ref. No.	Add	New	Parts No.	Description	Destination
C614,615			CK73GB1H103K	CHIP C 0.010UF K	
C616			CK73GB1H333K	CHIP C 0.033UF K	
C617			CK73GB1H103K	CHIP C 0.010UF K	
C618			CK73GB1H102K	CHIP C 1000PF K	
C619			CK45FB1H152K	CERAMIC 1500PF K	
C620			CK73GB1H473K	CHIP C 0.047UF K	
C622			CD04BJ1H470M	ELECTRO 47UF 50WV	
C623			CK73GB1H333K	CHIP C 0.033UF K	
C624			CK73GB1H223K	CHIP C 0.022UF K	
C630-634			CK73GB1H103K	CHIP C 0.010UF K	
J1		*	E63-0947-05	PIN JACK	
J2			E58-1031-05	RECTANGULAR RECEPTACLE	
⚠ J3			E70-0831-15	SCREW TERMINAL BOARD	
L1		*	L33-2403-05	CHOKE COIL	
L2		*	L33-2405-05	CHOKE COIL	
L3			L19-0779-05	TRANSFORMER FOR CONVERTER	
F	2B		N09-6135-05	TAPTITE SCREW (3X8 B-T)	
G	2B	*	N09-6447-05	TAPTITE SCREW (3X10 P-T)	
R1			RD14BB2C392J	RD 3.9K J 1/6W	
R2			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R3			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R4			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R5			RK73GB2A103J	CHIP R 10K J 1/10W	
R6			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R7			RK73GB2A333J	CHIP R 33K J 1/10W	
R8			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R9			RK73EB2E333J	CHIP R 33K J 1/4W	
R10			RK73EB2E183J	CHIP R 18K J 1/4W	
R11			RK73GB2A333J	CHIP R 33K J 1/10W	
R12			RK73GB2A753J	CHIP R 75K J 1/10W	
R13			RK73GB2A101J	CHIP R 100 J 1/10W	
R14			RK73GB2A103J	CHIP R 10K J 1/10W	
R15			RK73GB2A273J	CHIP R 27K J 1/10W	
R16			RK73GB2A823J	CHIP R 82K J 1/10W	
R17			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R18			RK73GB2A684J	CHIP R 680K J 1/10W	
R19			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R20			RK73GB2A103J	CHIP R 10K J 1/10W	
R21			RK73GB2A203J	CHIP R 20K J 1/10W	
R22			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R23			RK73GB2A154J	CHIP R 150K J 1/10W	
R24			RK73GB2A103J	CHIP R 10K J 1/10W	
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R26			RK73GB2A101J	CHIP R 100 J 1/10W	
R27			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GB2A103J	CHIP R 10K J 1/10W	
R37,38			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R39,40			RK73GB2A560J	CHIP R 56 J 1/10W	
R41,42			RK73GB2A330J	CHIP R 33 J 1/10W	
R43,44			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R45			RD14DB2H100J	SMALL-RD 10 J 1/2W	
R46,47			RD14DB2H220J	SMALL-RD 22 J 1/2W	
R48,49			RK73EB2E473J	CHIP R 47K J 1/4W	

Ref. No.	Add	New	Parts No.	Description	Destination
R52			RD14BB2C303J	RD 30K J 1/6W	
R53			RK73EB2E100J	CHIP R 10 J 1/4W	
R57			RD14BB2C303J	RD 30K J 1/6W	
R58			RK73EB2E100J	CHIP R 10 J 1/4W	
R61			RK73GB2A100J	CHIP R 10 J 1/10W	
R64			RK73GB2A821J	CHIP R 820 J 1/10W	
R65			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R66			RK73GB2A103J	CHIP R 10K J 1/10W	
R67			RK73GB2A153J	CHIP R 15K J 1/10W	
R73			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R74			RK73EB2E152J	CHIP R 1.5K J 1/4W	
R100			RD14BB2C562J	RD 5.6K J 1/6W	
R101,102			RD14BB2C102J	RD 1.0K J 1/6W	
R103,104			RK73GB2A103J	CHIP R 10K J 1/10W	
R105,106			RK73GB2A273J	CHIP R 27K J 1/10W	
R107,108			RD14BB2C222J	RD 2.2K J 1/6W	
R109-112			RD14BB2C473J	RD 47K J 1/6W	
R113			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R114			RK73GB2A153J	CHIP R 15K J 1/10W	
R115			RK73GB2A103J	CHIP R 10K J 1/10W	
R116			RK73GB2A333J	CHIP R 33K J 1/10W	
R117			RK73GH2A103D	CHIP R 10K D 1/10W	
R119,120			RK73GH2A103D	CHIP R 10K D 1/10W	
R121,122			RK73GB2A753J	CHIP R 75K J 1/10W	
R123			RK73GH2A103D	CHIP R 10K D 1/10W	
R151			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R152			RK73GB2A103J	CHIP R 10K J 1/10W	
R153			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R154			RK73GB2A333J	CHIP R 33K J 1/10W	
R155			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R156			RK73GB2A471J	CHIP R 470 J 1/10W	
R157			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R158			RK73GB2A684J	CHIP R 680K J 1/10W	
R159			RK73GB2A103J	CHIP R 10K J 1/10W	
R160			RK73GB2A683J	CHIP R 68K J 1/10W	
R161			RD14BB2C123J	RD 12K J 1/6W	
R162			RK73GB2A103J	CHIP R 10K J 1/10W	
R163			RD14BB2C123J	RD 12K J 1/6W	
R181			RK73EB2E681J	CHIP R 680 J 1/4W	
R182			RK73GB2A112J	CHIP R 1.1K J 1/10W	
R183,184			RK73GB2A103J	CHIP R 10K J 1/10W	
R203			RS14KB3D4R7JP	FL-PROOF RS 4.7 J 2W	
R204			RK73GB2A473J	CHIP R 47K J 1/10W	
R205			RK73GB2A303J	CHIP R 30K J 1/10W	
R206,207			RK73GB2A103J	CHIP R 10K J 1/10W	
R208			RK73GB2A154J	CHIP R 150K J 1/10W	
R209			RK73GB2A104J	CHIP R 100K J 1/10W	
R211			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R213			RK73GB2A103J	CHIP R 10K J 1/10W	
R214			RK73GB2A243J	CHIP R 24K J 1/10W	
R216			RK73GB2A473J	CHIP R 47K J 1/10W	
R217			RK73GB2A431J	CHIP R 430 J 1/10W	
R218			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R219			RK73GB2A103J	CHIP R 10K J 1/10W	
R220			RK73GB2A822J	CHIP R 8.2K J 1/10W	

E1 : KAC-8103D (Europe) **K** : KAC-8103D (North America)
M1 : KAC-8103D (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8600-10)

Ref. No.	Add	New	Parts No.	Description				Destination
R221			RK73GB2A103J	CHIP R	10K	J	1/10W	
R222			RK73GB2A154J	CHIP R	150K	J	1/10W	
R223			RK73GB2A752J	CHIP R	7.5K	J	1/10W	
R224			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R225			RK73GB2A752J	CHIP R	7.5K	J	1/10W	
R226			RK73GB2A104J	CHIP R	100K	J	1/10W	
R230			RK73GB2A154J	CHIP R	150K	J	1/10W	
R231			RK73GB2A241J	CHIP R	240	J	1/10W	
R233			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R234			RK73GB2A103J	CHIP R	10K	J	1/10W	
R235			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R236			RK73GB2A473J	CHIP R	47K	J	1/10W	
R301,302			RK73GB2A103J	CHIP R	10K	J	1/10W	
R303			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R304			RK73GB2A622J	CHIP R	6.2K	J	1/10W	
R305			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R306			RK73GB2A622J	CHIP R	6.2K	J	1/10W	
R307,308			RK73GB2A103J	CHIP R	10K	J	1/10W	
R309			RK73GB2A161J	CHIP R	160	J	1/10W	
R400		✻	RK73EB2E510J	CHIP R	51	J	1/4W	
R401,402			RK73GB2A103J	CHIP R	10K	J	1/10W	
R403,404			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R405,406			RK73GB2A182J	CHIP R	1.8K	J	1/10W	
R407			RK73GB2A681J	CHIP R	680	J	1/10W	
R408			RK73GB2A911J	CHIP R	910	J	1/10W	
R409			RK73GB2A471J	CHIP R	470	J	1/10W	
R410			RK73GB2A751J	CHIP R	750	J	1/10W	
R411			RK73GB2A510J	CHIP R	51	J	1/10W	
R412			RK73EB2E151J	CHIP R	150	J	1/4W	
R413		✻	RK73EB2E510J	CHIP R	51	J	1/4W	
R414			RK73EB2E101J	CHIP R	100	J	1/4W	
R415,416			RK73GB2A473J	CHIP R	47K	J	1/10W	
R417			RK73EB2E181J	CHIP R	180	J	1/4W	
R418,419			RK73EB2E100J	CHIP R	10	J	1/4W	
R420			RK73EB2E101J	CHIP R	100	J	1/4W	
R421			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R422			RD14BB2C563J	RD	56K	J	1/6W	
R423,424			RK73EB2E100J	CHIP R	10	J	1/4W	
R425,426			R92-5086-05	METAL-PLATE	0.05	J	2W	
R438,439			R92-5086-05	METAL-PLATE	0.05	J	2W	
R440			RK73GB2A681J	CHIP R	680	J	1/10W	
R500-503			RK73EB2E1R0J	CHIP R	1.0	J	1/4W	
R504			RK73GB2A101J	CHIP R	100	J	1/10W	
R538			RK73GB2A100J	CHIP R	10	J	1/10W	
R600			RK73GB2A273J	CHIP R	27K	J	1/10W	
R601			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R602			RK73GB2A153J	CHIP R	15K	J	1/10W	
R603			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R604			RK73GB2A224J	CHIP R	220K	J	1/10W	
R605			RK73GB2A103J	CHIP R	10K	J	1/10W	
R606			RK73GB2A243J	CHIP R	24K	J	1/10W	
R607			RK73GB2A104J	CHIP R	100K	J	1/10W	
R608			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R609			RK73GB2A203J	CHIP R	20K	J	1/10W	
R610			RK73GB2A123J	CHIP R	12K	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R611			RK73GB2A103J	CHIP R	10K	J	1/10W	
R612			RK73GB2A132J	CHIP R	1.3K	J	1/10W	
R613,614			RK73GB2A203J	CHIP R	20K	J	1/10W	
R615			RK73GB2A103J	CHIP R	10K	J	1/10W	
R616			RK73GB2A203J	CHIP R	20K	J	1/10W	
R617			RK73GB2A104J	CHIP R	100K	J	1/10W	
R618			RK73GB2A303J	CHIP R	30K	J	1/10W	
R619			RK73GB2A223J	CHIP R	22K	J	1/10W	
R620			RK73GB2A363J	CHIP R	36K	J	1/10W	
R621			RK73GB2A103J	CHIP R	10K	J	1/10W	
R622			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R623			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R624			RK73GB2A514J	CHIP R	510K	J	1/10W	
R625-627			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R628,629			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R630			RK73GB2A103J	CHIP R	10K	J	1/10W	
R631			RK73GB2A104J	CHIP R	100K	J	1/10W	
R632			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R633			RK73GB2A103J	CHIP R	10K	J	1/10W	
R634			RK73GB2A334J	CHIP R	330K	J	1/10W	
R635			RK73GB2A103J	CHIP R	10K	J	1/10W	
R636			RK73GB2A473J	CHIP R	47K	J	1/10W	
R637			RK73GB2A103J	CHIP R	10K	J	1/10W	
R638			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R639			RK73GB2A823J	CHIP R	82K	J	1/10W	
R640,641			RK73GB2A223J	CHIP R	22K	J	1/10W	
R642			RK73GB2A103J	CHIP R	10K	J	1/10W	
R643			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R644,645			RK73GB2A103J	CHIP R	10K	J	1/10W	
R646,647			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R648			RK73GB2A104J	CHIP R	100K	J	1/10W	
R649			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R650			RK73GB2A103J	CHIP R	10K	J	1/10W	
R651			RK73GB2A223J	CHIP R	22K	J	1/10W	
R652			RK73GB2A103J	CHIP R	10K	J	1/10W	
R653			RK73GB2A153J	CHIP R	15K	J	1/10W	
R654			RK73GB2A203J	CHIP R	20K	J	1/10W	
R655			RK73GB2A103J	CHIP R	10K	J	1/10W	
R656,657			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
VR1			R31-0232-15	VARIABLE RESISTOR				
VR2			R31-0215-15	VARIABLE RESISTOR				
VR3		✻	R31-0249-05	VARIABLE RESISTOR				
W300			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W301			R92-1252-05	CHIP R	0 OHM	J	1/16W	
W302			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W303,304			R92-1252-05	CHIP R	0 OHM	J	1/16W	
W305			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W306			R92-1252-05	CHIP R	0 OHM	J	1/16W	
W307			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W308			R92-1252-05	CHIP R	0 OHM	J	1/16W	
W309			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W310,311			R92-1252-05	CHIP R	0 OHM	J	1/16W	
W312			R92-2053-05	CHIP R	0 OHM	J	1/8W	
W313			R92-1252-05	CHIP R	0 OHM	J	1/16W	
W314-319			R92-2053-05	CHIP R	0 OHM	J	1/8W	

E1 : KAC-8103D (Europe) **K** : KAC-8103D (North America)
M1 : KAC-8103D (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8600-10)

Ref. No.	Add	New	Parts No.	Description	Destination
W320,321			R92-1252-05	CHIP R 0 OHM J 1/16W	
W322			R92-2053-05	CHIP R 0 OHM J 1/8W	
W323,324			R92-1252-05	CHIP R 0 OHM J 1/16W	
W325			R92-2053-05	CHIP R 0 OHM J 1/8W	
W326-328			R92-1252-05	CHIP R 0 OHM J 1/16W	
W329,330			R92-2053-05	CHIP R 0 OHM J 1/8W	
W331			R92-1252-05	CHIP R 0 OHM J 1/16W	
S3			S31-2630-05	SLIDE SWITCH	
D1,2			RM4ZLF-J4NF	DIODE	
D4			UDZS6.8B	ZENER DIODE	
D5			UDZS15B	ZENER DIODE	
D6,7			1SS133	DIODE	
D8			UDZS10B	ZENER DIODE	
D9-13			1SS133	DIODE	
D17			LM1MA142WK-G	DIODE	
D18			FCH10A20	DIODE	
D19			FRH10A20	DIODE	
D23			UDZS16B	ZENER DIODE	
D25			UDZS16B	ZENER DIODE	
D101			UMZ6.8N	ZENER DIODE	
D103			LM1MA142WK-G	DIODE	
D104			LM1MA142WA-G	DIODE	
D107			LM1MA142WK-G	DIODE	
D108			LM1MA142WA-G	DIODE	
D151			1SS133	DIODE	
D181			UDZS5.1B	ZENER DIODE	
D182,183			1SS133	DIODE	
D186			1SS133	DIODE	
D303-307			1SS133	DIODE	
D308			UDZS5.1B	ZENER DIODE	
D400			1SS133	DIODE	
D403-406			1SS133	DIODE	
D407			UDZS15B	ZENER DIODE	
D600-604			1SS133	DIODE	
D605			UDZS10B	ZENER DIODE	
D606			1SS133	DIODE	
D607,608			UDZS10B	ZENER DIODE	
D609			1SS133	DIODE	
D610			LM1MA142WA-G	DIODE	
D611			1SS133	DIODE	
D612			UDZS6.2B	ZENER DIODE	
D613			1SS133	DIODE	
IC1			TL494IDR	ANALOGUE IC	
IC11			RC4580IDR	ANALOGUE IC	
IC12,13			SN74HC00D	MOS-IC	
IC14,15			BA4560RF	ANALOGUE IC	
IC18			BA4560RF	ANALOGUE IC	
IC31		✻	BA2903F	ANALOGUE IC	
IC32			BA4560RF	ANALOGUE IC	
IC60,61			BA4560RF	ANALOGUE IC	
IC62,63		✻	BA2903F	ANALOGUE IC	
IC64			BA4560RF	ANALOGUE IC	
Q1,2			2SC4081	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q3			2SB1241	TRANSISTOR	
Q4			2SA1576A	TRANSISTOR	
Q5,6			2SC4081	TRANSISTOR	
Q8,9			2SC4097	TRANSISTOR	
Q10,11			2SA1577	TRANSISTOR	
Q12,13			STP60NF06FP	FET	
Q19,20			STP60NF06FP	FET	
Q25			2SC1845-A(F,E)	TRANSISTOR	
Q26			2SC4883ANF	TRANSISTOR	
Q28			2SA1859ANF	TRANSISTOR	
Q29,30			2SA1576A	TRANSISTOR	
Q37,38			DTA114EUA	DIGITAL TRANSISTOR	
Q42			2SA992-A(F,E)	TRANSISTOR	
Q151			2SC4081	TRANSISTOR	
Q400			2SC4081	TRANSISTOR	
Q401			2SA1576A	TRANSISTOR	
Q402			2SA992-A(F,E)	TRANSISTOR	
Q403			DTA114EUA	DIGITAL TRANSISTOR	
Q404			2SC1845-A(F,E)	TRANSISTOR	
Q405		✻	2SA1370	TRANSISTOR	
Q406			2SC3902	TRANSISTOR	
Q407			2SB1427	TRANSISTOR	
Q408			2SC3415S	TRANSISTOR	
Q409			2SB1427	TRANSISTOR	
Q410-413		✻	IRFB31N20DPBF	FET	
Q414			2SC3902	TRANSISTOR	
Q415			2SC3415S	TRANSISTOR	
Q416			2SD1863	TRANSISTOR	
Q417			2SA992-A(F,E)	TRANSISTOR	
Q600			2SA1576A	TRANSISTOR	
Q601			2SC4081	TRANSISTOR	
Q602			DTA114EUA	DIGITAL TRANSISTOR	
Q603			2SC4081	TRANSISTOR	
Q604			2SC3478AA(L,K)	TRANSISTOR	
Q605,606			2SA1376AA(L,K)	TRANSISTOR	
Q607			2SC3478AA(L,K)	TRANSISTOR	
Q608			2SA1576A	TRANSISTOR	
Q609-611			2SC4081	TRANSISTOR	
Q612			DTA114EUA	DIGITAL TRANSISTOR	
TH1			NCP18XH103J0S	THERMISTOR	

E1 : KAC-8103D (Europe) **K** : KAC-8103D (North America)
M1 : KAC-8103D (Other Areas)

⚠ Indicates safety critical components.