9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

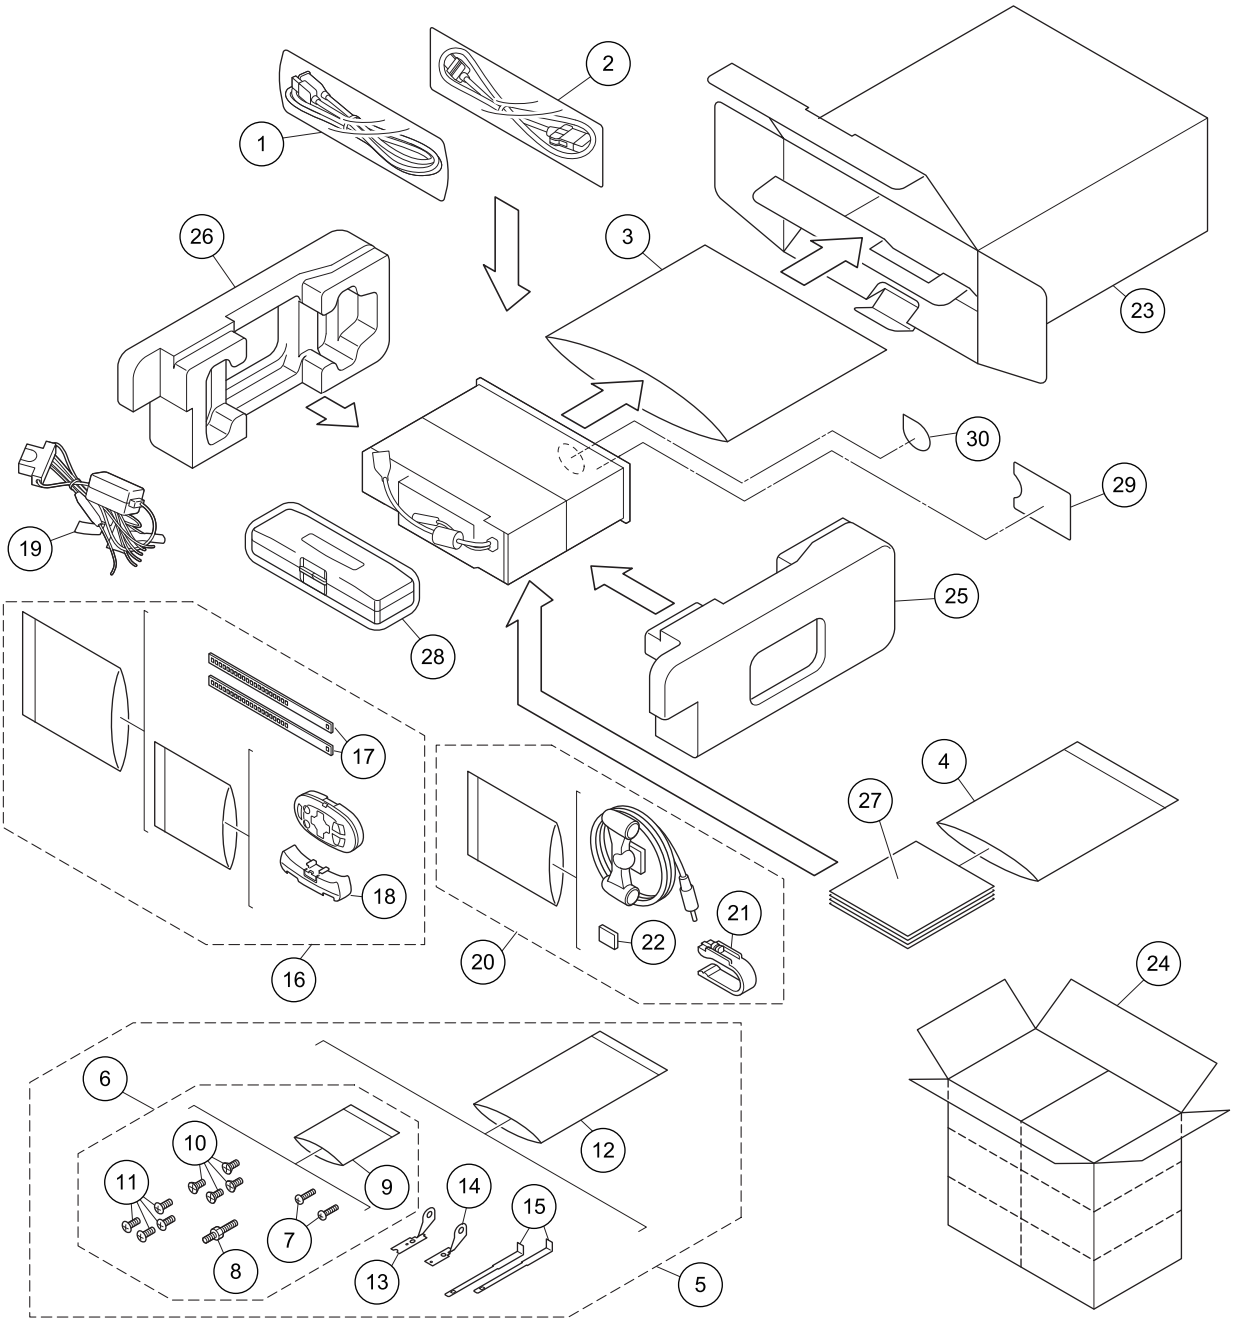

PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDP1219
	2	Cord Assy	See Contrast table (2)
	3	Cover	CEG1419
	4	Polyethylene Bag	CEG1426
	5	Accessory Assy	0A020123
	6	Screw Assy	CEA5317
	7	Screw	BPZ20P060FTB
	8	Screw	CBA1650
*	9	Polyethylene Bag	CEG-127
	10	Screw	CRZ50P090FTC
	11	Screw	TRZ50P080FTC
	12	Polyethylene Bag	CEG1160
	13	Holder (L)	CND1249
	14	Holder (R)	CND1250
	15	Handle	CND3707
	16	Steering RC Assy	0F020034
	17	Belt	CZN5499
	18	Holder	CZN7041
	19	MBL CMPX C-CORD	0F020037
	20	Microphone Assy	0F020056
	21	Holder	CZN7192
	22	Cushion	CZN7193
	23	Unit Box	See Contrast table (2)
	24	Contain Box	See Contrast table (2)
	25	Protector	0G020168
	26	Protector	0G020169
	27-1	Installation Manual	See Contrast table (2)
	27-2	Owner's Manual	See Contrast table (2)
	27-3	Caution Card	CRP1387
*	27-4	Warranty Card	See Contrast table (2)
*	27-5	Caution Card	0G020239
	28	Case Assy	0G020236
	29	Packing Sheet	0G020247
	30	Packing Sheet	See Contrast table (2)

(2) CONTRAST TABLE

DEH-P710BT/XN/UC and DEH-P7100BT/XN/UC are constructed the same except for the following:

Mark	No.	Description	DEH-P710BT/XN/UC	DEH-P7100BT/XN/UC
	2	Cord Assy	CDP1220	Not used
	23	Unit Box	0G020157	0G020158
	24	Contain Box	0G020163	0G020164
	27-1	Installation Manual	0G020184	0G020021
	27-2	Owner's Manual	0G020187	0G020186
*	27-4	Warranty Card	CRY1280	CRY1276
	30	Packing Sheet	0G020248	Not used

Owner's Manual,Installation Manual

Part No.	Language
0G020184	English, French, Spanish(Espanol)
0G020187	English, French, Spanish(Espanol)
0G020021	English, French, Spanish(Espanol)
0G020186	English, French, Spanish(Espanol)

9.2 EXTERIOR(1)

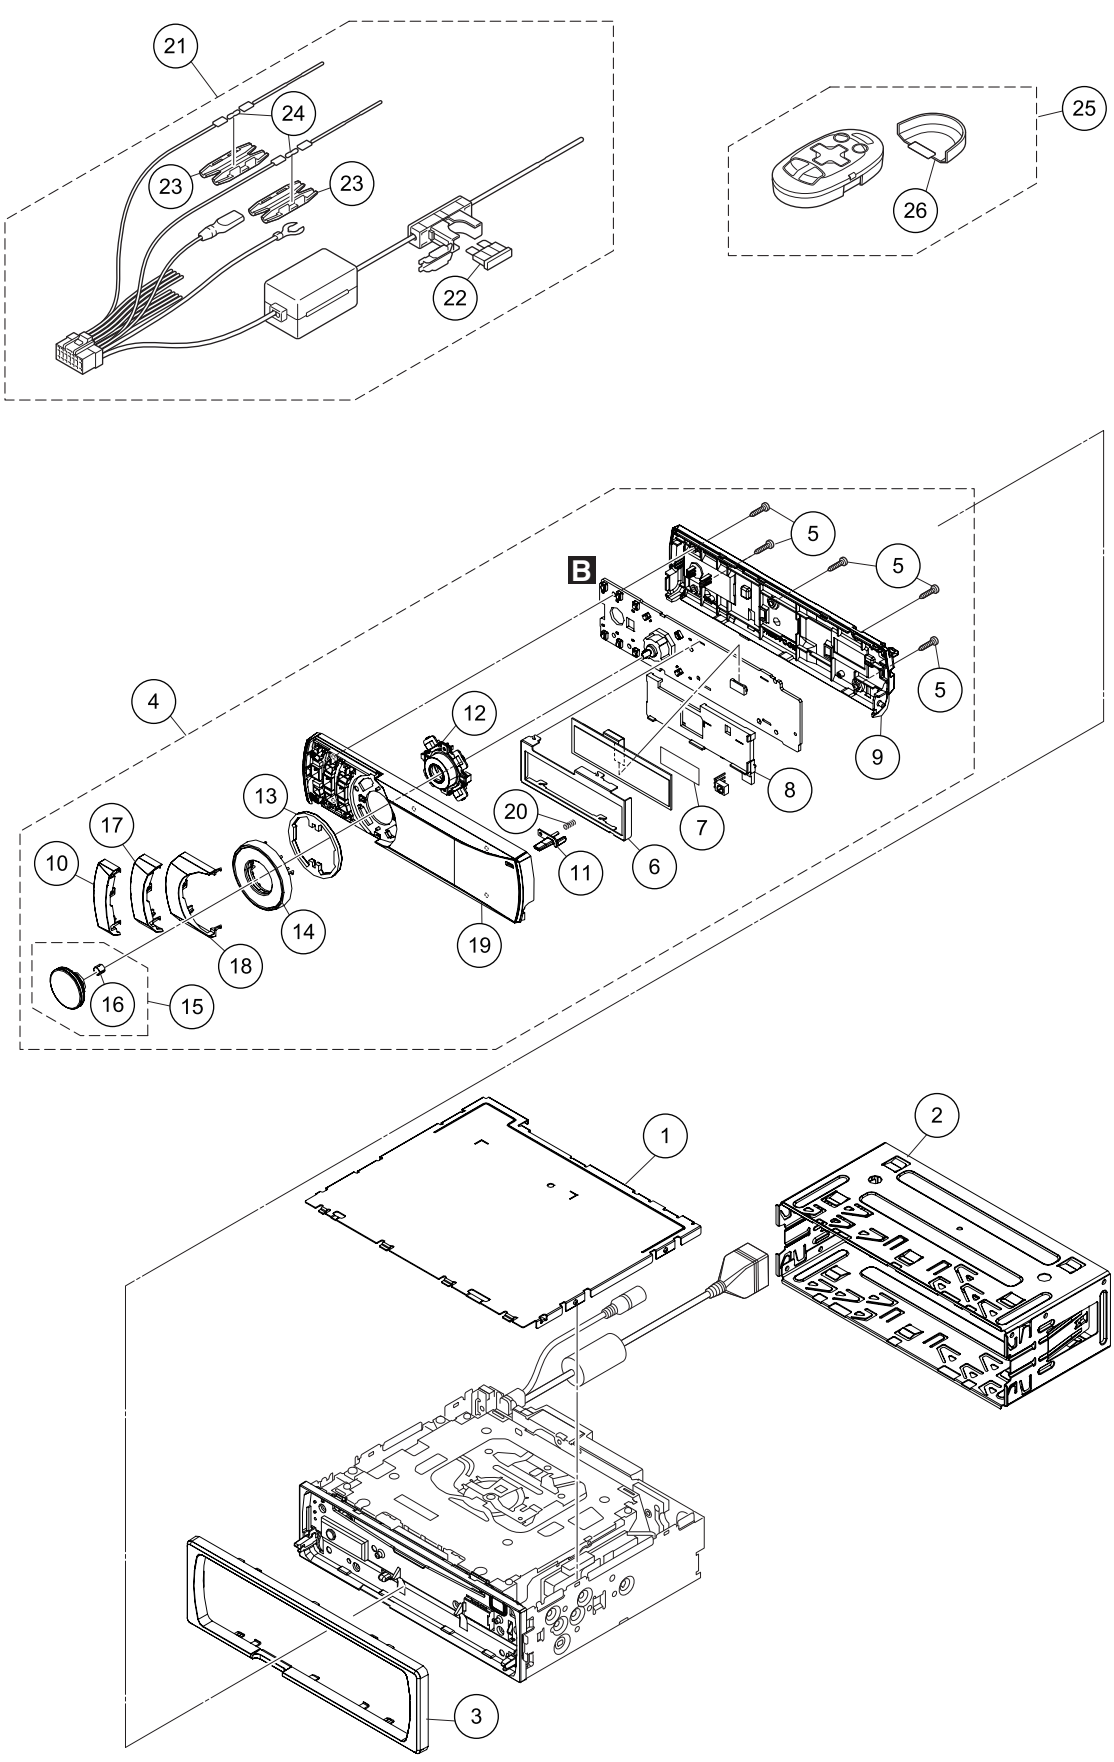

EXTERIOR(1) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Case	CNB3377
	2	Holder	CND3598
	3	Panel	0G020006
	4	Detach Grille Assy(P710BT)	0A020126
		Detach Grille Assy(P7100BT)	0A020121
	5	Screw	BPZ20P100FTB
	6	Holder	CND5194
	7	Double Sided Tape	CNN1878
	8	Holder	CNW1699
	9	Cover	0G020020
	10	Button(SRC, BAND)	0G020039
	11	Button(OPEN)	0G020042
	12	Button(Lighting Conductor)	0G020053
	13	Cushion	0G020054
	14	Button Unit(LIST, DISP, PHONE, MUTE)	0G020061
	15	Knob Unit(P710BT)	0G020073
		Knob Unit(P7100BT)	0G020084
	16	Spring	XBL7005
	17	Button(RDM, CLK)	0G020076
	18	Button(VOICE, S.Rtrv)	0G020077
	19	Grille Unit(P710BT)	0G020079
		Grille Unit(P7100BT)	0G020080
	20	Coil Spring	0G020111
	21	MBL CMPX C-CORD	0F020037
⚠	22	Fuse(10 A)	CEK1136
	23	Cap	CNS1472
	24	Resistor	RS1/2PMF102J
	25	Steering RC Assy	0F020034
	26	Battery Cover	CZN5497

9.3 EXTERIOR(2)

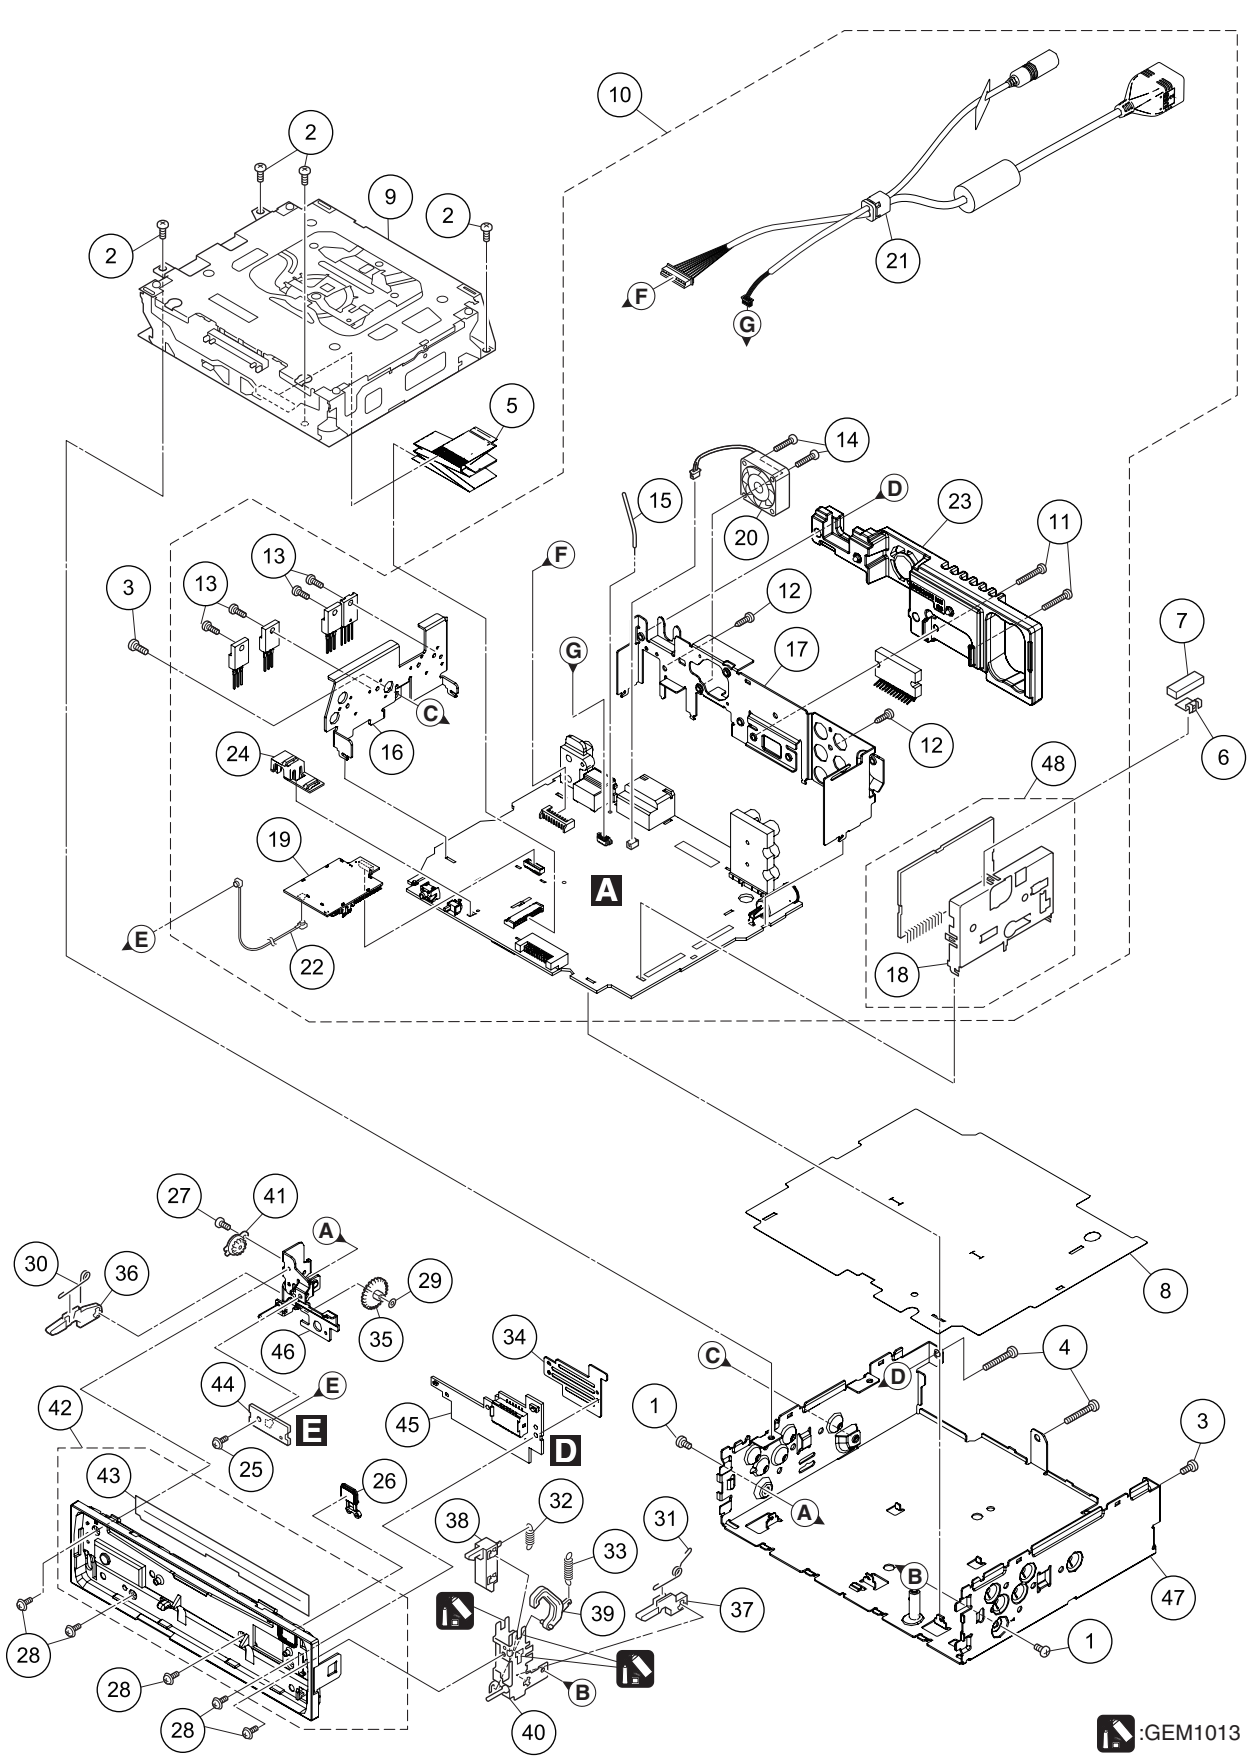

EXTERIOR(2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FTB
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ30P060FTC
	4	Screw	BSZ30P200FTC
	5	Cable	CDE8564
	6	Earth Plate	CNC8915
	7	Cushion	CNM8890
	8	Insulator	CNN1563
	9	CD Mechanism Module(S10.5)(P710BT)	CXK5776
		CD Mechanism Module(S10.5)(P7100BT)	CXK5779
	10	Tuner Amp Unit(P710BT)	0A020124
		Tuner Amp Unit(P7100BT)	0A020119
	11	Screw	BMZ26P200FTC
	12	Screw	BPZ26P070FTC
	13	Screw	BSZ26P060FTC
	14	Screw(M2.6 x 14)	CBA1632
	15	Clamper	CEF1048
	16	Holder	CND3826
	17	Holder	CND4311
	18	Holder	CND4324
	19	Bluetooth Module	CWX3717
	20	Fan Motor	CXM1288
	21	USB P-CBL	0F020012
	22	Coaxial Jumper	0F020015
	23	Heat Sink	0G020011
	24	Holder	0G020135
	25	Screw	ASZ26P050FTC
	26	Button(EJECT)	CAC7752
	27	Screw(M2 x 4)	CBA1649
	28	Screw(M2 x 4.5)	CBA1925
	29	Washer	CBF1038
	30	Spring	CBH2650
	31	Spring	CBH2651
	32	Spring	CBH2652
	33	Spring	CBH2653
	34	Holder	CND1254
	35	Gear	CNV5997
	36	Arm	CNV7400
	37	Arm	CNV7401
	38	Arm	CNV7402
	39	Arm	CNV7403
	40	Holder Unit	CXB9502
	41	Damper Unit	CXB9503
	42	Sub Panel Unit	0A020099
	43	Cover	CNM6854
	44	Antenna Unit	0A020108
	45	Panel Unit	0A020129
	46	Holder Unit	0G020067
	47	Chassis Unit	0G020003
	48	FM/AM Tuner Unit(U401)	CWE2097

9.4 CD MECHANISM MODULE

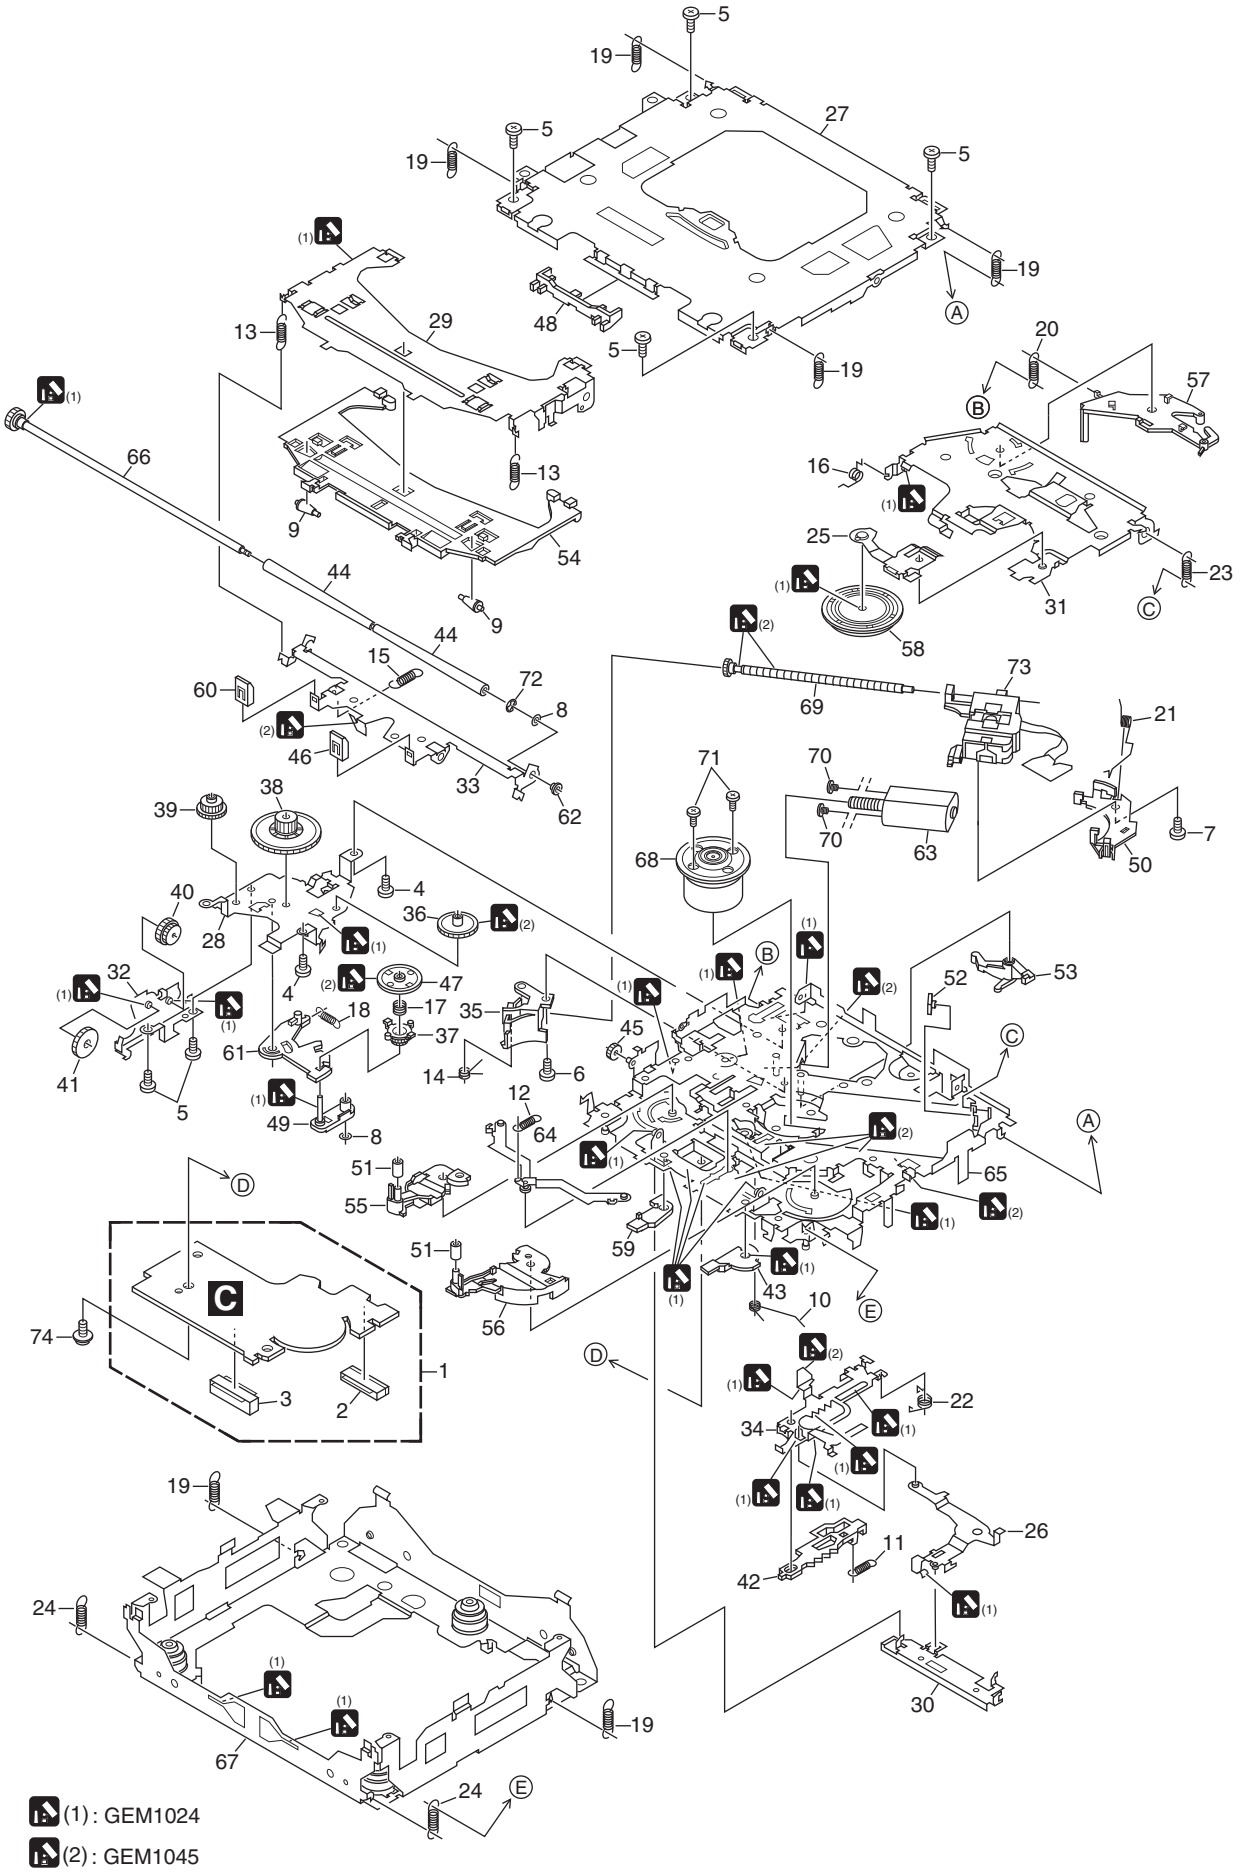

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10.5CODE3H)(P710BT)	CWX3858
		CD Core Unit(S10.5COMP2-iPod-C3)(P7100BT)	CWX3680
	2	Connector(CN101)	CKS4808
	3	Connector(CN701)	CKS5854
	4	Screw	BMZ20P025FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2 x 3)	CBA1511
	7	Screw(M2 x 4)	CBA1835
	8	Washer	CBF1038
	9	Roller	CNV9499
	10	Spring	CBH2609
	11	Spring	CBH2612
	12	Spring	CBH2614
	13	Spring	CBH2616
	14	Spring	CBH2617
	15	Spring	CBH2620
	16	Spring	CBH2855
	17	Spring	CBH2937
	18	Spring	CBH2735
	19	Spring	CBH2854
	20	Spring	CBH2642
	21	Spring	CBH2856
	22	Spring	CBH2857
	23	Spring	CBH2860
	24	Spring	CBH2861
	25	Spring	CBL1686
	26	Arm	CND1909
	27	Frame	CND2582
	28	Bracket	CND2583
	29	Arm	CND3831
	30	Lever	CND2585
	31	Arm	CND2586
	32	Bracket	CND2587
	33	Arm	CND2588
	34	Lever	CND2589
	35	Holder	CNV7201
	36	Gear	CNV7207
	37	Gear	CNV7208
	38	Gear	CNV7209
	39	Gear	CNV7210
	40	Gear	CNV7211
	41	Gear	CNV7212
	42	Rack	CNV7214
	43	Arm	CNV7216
	44	Roller	CNV7218
	45	Gear	CNV7219
	46	Guide	CNV7361
	47	Gear	CNV7595
	48	Guide	CNV7799
	49	Arm	CNV7805
	50	Rack	CNV8342
	51	Roller	CNV8343
	52	Holder	CNV8344
	53	Arm	CNV8345
	54	Guide	CNV9498
	55	Arm	CNV8348
	56	Arm	CNV8349
	57	Arm	CNV8350
	58	Clamper	CNV8365
	59	Arm	CNV8386
	60	Guide	CNV8396
	61	Arm	CNV8413
	62	Collar	CNV8938
	63	Motor Unit(M2)	CXC4026
	64	Arm Unit	CXC4027
	65	Chassis Unit	CXC4028
	66	Gear Unit	CXC4029
	67	Frame Unit	CXC4031
	68	Motor Unit(M1)	CXC7134
	69	Screw Unit	CXC6359
	70	Screw	JFZ20P020FTC
	71	Screw	JGZ17P022FTC
	72	Washer	YE20FTC
	73	Pickup Unit(P10.5)(Service)	CXX1942
	74	Screw	IMS26P030FTC

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

Chip Resistor

RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. **Part No.**

Unit Number : 0A020124(P710BT)
Unit Number : 0A020119(P7100BT)
Unit Name : Tuner Amp Unit
Unit Number : (P710BT)
Unit Number : (P7100BT)
Unit Name : Keyboard Unit
Unit Number : CWX3858(P710BT)
Unit Name : CD Core Unit(S10.5CODE3H)
Unit Number : CWX3680(P7100BT)
Unit Name : CD Core Unit(S10.5COMP2-iPod-C3)
Unit Number : 0A020129
Unit Name : Panel Unit
Unit Number : 0A020108
Unit Name : Antenna Unit

A

Unit Number : 0A020124(P710BT)
Unit Number : 0A020119(P7100BT)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(A,31,118) IC	HA12241FP
IC 151	(A,101,99) IC	NJM2794V
IC 251	(A,94,92) IC	TC4066BFT
IC 351	(A,105,136) IC	PA2030A
IC 431	(A,154,24) IC	NJM2885DL1-33
IC 461	(A,16,65) IC	NJM2885DL1-33
IC 501	(A,100,59) L-MOS And Gate	TC7SET08FUS1
IC 551	(A,90,60) IC	TC4066BFT
IC 581	(A,78,56) IC	NJM4558MD
IC 582	(A,68,64) D/A Converter	PCM1753DBQ
IC 601	(A,129,61) IC	PEG543A8
IC 651	(A,106,69) IC	S-80835CNMC-B8U
IC 701	(A,100,46) IC	NJM2885DL1-33
IC 741	(A,58,76) IC	BD6538G
IC 742	(A,44,76) IC	BD6538G
IC 743	(A,51,81) IC	TC7MB3257FK
IC 781	(A,80,99) Regulator IC	BD9781HFP
IC 851	(A,32,25) IC	NJM2360AM
IC 911	(A,6,117) IC	NJM2388F84
IC 912	(A,123,89) IC	PML017A
Q 101	(A,38,117) Transistor	UMF23N
Q 201	(A,125,103) Transistor	2SC4081
Q 202	(A,122,98) Transistor	RT3T22M
Q 251	(A,95,88) Transistor	RT3T22M
Q 301	(A,136,123) Transistor	IMH23
Q 302	(A,143,123) Transistor	IMH23
Q 303	(A,130,123) Transistor	IMH23
Q 304	(A,129,107) Transistor	RT3T22M
Q 381	(A,126,129) Transistor	2SC4081
Q 382	(A,119,119) Chip Transistor	DTC114EUA
Q 383	(A,112,118) Chip Transistor	DTC114EUA
Q 401	(A,155,48) Transistor	UMH1N
Q 402	(A,155,43) Transistor	UMH1N
Q 451	(A,13,77) Transistor	RT3T22M
Q 452	(A,7,70) Transistor	2SD2396
Q 551	(A,94,56) Transistor	RT3T22M
Q 721	(A,7,48) Transistor	2SD2396
Q 722	(A,17,50) Transistor	RT3T22M
Q 801	(A,84,13) Transistor	2SA1576A
Q 802	(A,80,9) Chip Transistor	DTC114EUA
Q 821	(A,7,57) Transistor	2SD1767
Q 823	(A,24,55) Transistor	RT3T22M
Q 831	(A,37,42) Chip Transistor	DTC114EUA
Q 832	(A,32,43) Transistor	2SA1576A
Q 841	(A,124,31) Transistor	2SA1576A
Q 842	(A,129,25) Chip Transistor	DTC114EUA
Q 851	(A,16,31) Transistor	2SD1760F5
Q 852	(A,17,24) Transistor	RT3T22M
Q 891	(A,91,109) Transistor	RT3T22M
Q 892	(A,84,112) Transistor	2SD1767
Q 901	(A,7,101) Transistor	2SD2396

Circuit Symbol and No.		Part No.
Q 902	(A,14,107) Transistor	RT3T22M
Q 921	(A,93,116) Transistor	UMX1N
Q 922	(A,107,109) Chip Transistor	DTC114EUA
D 151	(A,10,126) Diode	MALS068X
D 152	(A,14,126) Diode	MALS068X
D 201	(A,122,104) Diode	HZU13(B1)
D 203	(A,117,81) Diode Network	DA204U
D 301	(A,125,105) Diode	1SS355
D 381	(A,123,130) Diode	HZU8R2(B3)
D 382	(A,126,126) Diode	MC2848-11
D 383	(A,122,119) Diode(P710BT)	MC2848-11
D 451	(A,12,88) Diode	MPG06G-6415G50
D 452	(A,13,74) Diode	UDZS5R6(B)
D 651	(A,104,62) Diode	1SS355
D 721	(A,13,54) Diode	HZU7R5(B3)
D 781	(A,73,85) Diode	RB060L-40
D 782	(A,63,102) Diode	1SR154-400
D 821	(A,20,51) Diode	UDZS9R1(B)
D 851	(A,21,25) Diode	HZU10(B1)
D 852	(A,37,23) Diode	RB551V-30
D 853	(A,21,22) Diode	MC2848-11
D 891	(A,90,112) Diode	UDZS12(B)
D 901	(A,14,103) Diode	UDZS5R6(B)
D 902	(A,20,100) Diode	MPG06G-6415G50
D 921	(A,87,116) Diode	UDZS7R5(B)
D 922	(A,98,115) Diode	HZU6R8(B2)
D 923	(A,103,113) Diode	MPG06G-6415G50
D 941	(A,117,124) Diode	MPG06G-6415G50
D 942	(A,120,124) Diode	MPG06G-6415G50
D 981	(A,43,122) Diode	MPG06G-6415G50
D 982	(A,46,122) Diode	MPG06G-6415G50
L 101	(A,26,115) Inductor	LCTC1R0K1608
L 401	(A,155,99) Inductor	LCTAW220J2520
L 402	(A,154,91) Chip Coil	LCTAW1R0J2520
L 403	(A,152,53) Inductor	LCTAW2R2J3225
L 581	(A,78,63) Inductor	CTF1379
L 582	(A,72,62) Inductor	CTF1379
L 601	(A,109,59) Chip Coil	LCTAW100J2520
L 741	(A,57,82) Inductor	CTF1713
L 743	(A,44,81) Inductor	CTF1713
L 781	(A,66,81) Inductor	ATH7048
L 841	(A,125,25) Chip Coil	LCTAW4R7J2520
L 851	(A,30,17) Inductor	CTF1660
X 601	(A,114,61) Oscillator 20 000 kHz	CSS1775
S 651	(A,34,6) Switch(RESET)	CSG1020
S 801	(A,51,6) Switch(DETACH)	CSN1039
⚠FU801	(A,87,15) Fuse 250 mA	CEK1276
P 301	(A,159,120) Poly Switch	RXEF075P
P 401	(A,160,109) Surge Protector	IMSA-6801-01Y901
BZ601	(A,144,39) Buzzer	CPV1062
VA151	(A,7,126) Varistor	EZJZ1V270RM
VA152	(A,16,125) Varistor	EZJZ1V270RM
VA741	(A,52,85) Varistor	EZJZ1V800AM
VA742	(A,54,85) Varistor	EZJZ1V800AM
VA743	(A,46,85) Varistor	EZJZ1V800AM
VA744	(A,45,85) Varistor	EZJZ1V800AM
VA761	(A,68,112) Varistor	EZJZ1V270RM
VA762	(A,69,112) Varistor	EZJZ1V270RM
VA763	(A,66,112) Varistor	EZJZ1V270RM
VA764	(A,65,112) Varistor	EZJZ1V270RM

Circuit Symbol and No.		Part No.
U 401	(A,162,98) FM/AM Tuner Unit	CWE2097
CN551	(A,53,63) Connector	CKS6117
CN701	(A,81,29) Connector	CKS3833
CN741	(A,48,91) Plug	KM200NA9L
CN761	(A,67,107) Connector	CKS4824
CN801	(A,114,9) Plug	CKS3537
CN891	(A,77,110) Connector	VKN1928
CN981	(A,59,133) Plug	CKM1278
JA101	(A,32,130) Connector	CKS5271
JA151	(A,14,134) Jack	YKS5001
JA301	(A,144,133) Pin Jack	XKB7001
JA401	(A,169,123) Antenna Jack	CKX1070
	Fan Motor	CXM1288

RESISTORS

R 101	(A,97,102)	RS1/16SS181J
R 102	(A,95,104)	RS1/16SS181J
R 103	(A,99,103)	RS1/16SS102J
R 104	(A,99,104)	RS1/16SS102J
R 105	(A,97,104)	RS1/16SS223J
R 106	(A,39,116)	RS1/16SS222J
R 107	(A,38,120)	RS1/16SS150J
R 108	(A,39,120)	RS1/16SS470J
R 109	(A,35,114)	RS1/16SS101J
R 110	(A,37,120)	RS1/16SS101J
R 111	(A,40,120)	RS1/16SS101J
R 112	(A,28,114)	RS1/16SS102J
R 113	(A,40,118)	RS1/16SS562J
R 114	(A,42,117)	RS1/16SS332J
R 115	(A,99,102)	RS1/16SS223J
R 151	(A,7,123)	RS1/16SS102J
R 152	(A,16,123)	RS1/16SS102J
R 153	(A,92,96)	RS1/16SS181J
R 154	(A,92,101)	RS1/16SS181J
R 155	(A,93,98)	RS1/16SS223J
R 156	(A,93,100)	RS1/16SS223J
R 201	(A,125,100)	RS1/16SS182J
R 202	(A,119,81)	RS1/16SS101J
R 203	(A,114,82)	RS1/16SS101J
R 204	(A,121,80)	RAB4CQ102J
R 209	(A,110,92)	RS1/16SS102J
R 210	(A,136,87)	RS1/16SS102J
R 211	(A,111,83)	RS1/16SS222J
R 212	(A,136,85)	RS1/16SS222J
R 251	(A,99,92)	RS1/16SS103J
R 252	(A,92,88)	RS1/16SS103J
R 301	(A,138,121)	RS1/16SS472J
R 302	(A,142,119)	RS1/16SS472J
R 304	(A,133,121)	RS1/16SS390J
R 305	(A,128,120)	RS1/16SS390J
R 306	(A,129,125)	RS1/16SS223J
R 307	(A,131,125)	RS1/16SS223J
R 308	(A,144,120)	RS1/16SS390J
R 309	(A,141,121)	RS1/16SS390J
R 310	(A,141,125)	RS1/16SS223J
R 311	(A,144,125)	RS1/16SS223J
R 312	(A,139,125)	RS1/16SS390J
R 313	(A,135,120)	RS1/16SS390J
R 314	(A,135,125)	RS1/16SS223J
R 315	(A,137,125)	RS1/16SS223J

Circuit Symbol and No.			Part No.
R 316	(A,126,106)		RS1/16SS102J
R 317	(A,120,131)		RS1/16SS820J
R 351	(A,123,126)		RS1/16SS153J
R 352	(A,102,118)		RS1/16SS182J
R 353	(A,105,118)		RS1/16SS182J
R 354	(A,110,117)		RS1/16SS182J
R 355	(A,110,119)		RS1/16SS182J
R 356	(A,104,118)		RS1/16SS272J
R 357	(A,106,118)		RS1/16SS272J
R 358	(A,109,117)		RS1/16SS272J
R 359	(A,108,119)		RS1/16SS272J
R 381	(A,126,132)		RS1/16SS473J
R 382	(A,129,105)		RS1/16SS473J
R 383	(A,126,131)		RS1/16SS104J
R 384	(A,116,116)		RS1/16SS472J
R 385	(A,123,121)	(P7100BT)	RS1/16SS0R0J
R 386	(A,116,118)		RS1/16SS103J
R 387	(A,116,119)		RS1/16SS103J
R 388	(A,116,120)		RS1/16SS331J
R 389	(A,112,116)		RS1/16SS101J
R 401	(A,148,69)		RS1/16SS104J
R 402	(A,147,69)		RS1/16SS104J
R 412	(A,150,47)		RAB4C223J
R 413	(A,155,61)		RS1/16SS681J
R 415	(A,156,78)		RS1/16SS681J
R 416	(A,156,79)		RS1/16SS681J
R 417	(A,156,81)		RS1/16SS681J
R 418	(A,156,80)		RS1/16SS681J
R 419	(A,156,83)		RS1/16SS681J
R 451	(A,13,80)		RS1/16SS392J
R 453	(A,32,60)		RS1/16S223J
R 454	(A,35,60)		RS1/16S103J
R 501	(A,101,57)		RS1/16SS681J
R 502	(A,101,60)		RS1/16SS0R0J
R 503	(A,99,57)		RS1/16SS681J
R 521	(A,109,52)		RS1/16SS182J
R 522	(A,110,47)		RS1/16SS182J
R 524	(A,106,57)		RS1/16SS332J
R 525	(A,108,47)		RS1/16SS332J
R 551	(A,97,56)		RS1/16SS103J
R 553	(A,88,54)		RS1/16SS0R0J
R 554	(A,45,61)		RS1/16SS0R0J
R 555	(A,91,67)		RS1/16SS102J
R 556	(A,92,55)		RS1/16SS102J
R 557	(A,93,65)		RS1/16SS220J
R 560	(A,85,54)		RS1/16SS105J
R 561	(A,85,55)		RS1/16SS151J
R 563	(A,95,58)		RS1/16SS103J
R 564	(A,62,65)		RS1/16SS101J
R 565	(A,45,64)		RS1/16S0R0J
R 566	(A,50,70)		RS1/16S0R0J
R 581	(A,77,52)		RS1/16SS103J
R 582	(A,79,62)		RS1/16SS103J
R 583	(A,73,53)		RS1/16SS103J
R 584	(A,73,60)		RS1/16SS103J
R 585	(A,74,56)		RS1/16SS473J
R 586	(A,74,58)		RS1/16SS473J
R 587	(A,81,57)		RS1/16SS103J
R 588	(A,82,57)		RS1/16SS103J
R 589	(A,63,63)		RAB4C101J

Circuit Symbol and No.			Part No.
R 601	(A,142,63)	(P7100BT)	RS1/16SS104J
R 602	(A,143,63)	(P710BT)	RS1/16SS104J
R 603	(A,139,33)		RS1/16SS102J
R 605	(A,112,55)		RS1/16SS104J
R 606	(A,140,57)		RAB4C681J
R 607	(A,121,53)		RS1/16SS472J
R 608	(A,134,50)		RAB4C681J
R 609	(A,121,52)		RS1/16SS472J
R 610	(A,140,53)		RS1/16SS103J
R 611	(A,133,73)		RS1/16SS104J
R 612	(A,118,56)		RS1/16SS473J
R 613	(A,139,63)		RS1/16SS681J
R 614	(A,118,64)		RS1/16SS821J
R 616	(A,127,43)		RS1/16SS473J
R 617	(A,124,75)		RS1/16SS103J
R 619	(A,117,71)		RS1/16SS104J
R 620	(A,139,67)		RS1/16SS104J
R 621	(A,139,69)		RS1/16SS104J
R 622	(A,122,71)		RS1/16SS0R0J
R 624	(A,130,72)		RS1/16SS473J
R 625	(A,126,75)		RS1/16SS223J
R 626	(A,139,60)		RS1/16SS103J
R 627	(A,117,54)		RS1/16SS222J
R 628	(A,118,68)		RS1/16SS472J
R 629	(A,131,51)		RS1/16SS473J
R 631	(A,129,52)		RS1/16SS103J
R 632	(A,117,55)		RS1/16SS331J
R 641	(A,139,81)		RS1/16SS104J
R 651	(A,106,60)		RS1/16SS183J
R 652	(A,118,67)		RS1/16SS102J
R 701	(A,75,33)		RAB4C682J
R 702	(A,102,38)		RS1/16SS104J
R 703	(A,103,39)		RS1/16SS473J
R 704	(A,105,37)		RS1/16SS221J
R 705	(A,105,36)		RS1/16SS221J
R 706	(A,105,35)		RS1/16SS221J
R 707	(A,105,34)		RS1/16SS221J
R 708	(A,105,32)		RS1/16SS221J
R 709	(A,105,31)		RS1/16SS102J
R 721	(A,13,50)		RS1/4SA102J
R 742	(A,50,85)		RS1/16S0R0J
R 743	(A,48,85)		RS1/16S0R0J
R 745	(A,59,73)		RS1/16SS102J
R 746	(A,46,70)		RS1/16SS102J
R 747	(A,47,78)		RS1/16SS5R6J
R 748	(A,49,78)		RS1/16SS5R6J
R 749	(A,52,78)		RS1/16SS7502D
R 750	(A,53,78)		RS1/16SS7502D
R 752	(A,54,78)		RS1/16SS102J
R 753	(A,50,75)		RS1/16SS1003D
R 754	(A,49,75)		RS1/16SS1003D
R 755	(A,53,75)		RS1/16SS1003D
R 756	(A,52,75)		RS1/16SS1003D
R 757	(A,46,76)		RS1/16SS102J
R 781	(A,82,84)		RS1/16SS0R0J
R 782	(A,82,88)		RS1/16SS333J
R 783	(A,84,86)		RS1/16SS3302F
R 784	(A,81,90)		RS1/16S683J
R 785	(A,84,89)		RS1/16S8201F
R 786	(A,84,84)		RS1/10SR471J

Circuit Symbol and No.		Part No.
R 787	(A,79,91)	RS1/16SS8202F
R 788	(A,79,89)	RS1/16SS123J
R 802	(A,121,27)	RS1/16S222J
R 803	(A,119,27)	RS1/16S222J
R 804	(A,118,27)	RS1/16S222J
R 805	(A,114,27)	RS1/16S222J
R 806	(A,113,27)	RS1/16S222J
R 807	(A,80,13)	RS1/16SS473J
R 808	(A,79,13)	RS1/16S682J
R 810	(A,112,27)	RS1/16S102J
R 813	(A,120,30)	RS1/16SS104J
R 814	(A,118,31)	RS1/16SS104J
R 815	(A,110,25)	RS1/16SS104J
R 816	(A,109,25)	RS1/16SS104J
R 817	(A,108,25)	RS1/16SS102J
R 821	(A,27,55)	RS1/16SS182J
R 822	(A,10,58)	RS1/16S1R0J
R 823	(A,12,58)	RS1/16S222J
R 831	(A,35,42)	RS1/16SS103J
R 832	(A,34,42)	RS1/16SS473J
R 833	(A,28,43)	RS1/4SA391J
R 841	(A,128,28)	RS1/16SS102J
R 842	(A,128,29)	RS1/16SS473J
R 843	(A,125,28)	RS1/16SS472J
R 851	(A,13,25)	RS1/10SR561J
R 852	(A,25,27)	RS1/16S1R0J
R 853	(A,27,24)	RS1/10SR821J
R 854	(A,30,39)	RS1/16S1502F
R 855	(A,28,39)	RS1/16S4700F
R 856	(A,27,39)	RS1/16S8200F
R 891	(A,80,112)	RS1/16SS152J
R 894	(A,80,109)	RS1/16SS1R0J
R 901	(A,14,101)	RS1/16S333J
R 902	(A,14,100)	RS1/16S392J
R 912	(A,13,109)	RS1/16S473J
R 921	(A,90,116)	RS1/16SS104J
R 922	(A,96,115)	RS1/16SS103J
R 923	(A,90,117)	RS1/16SS473J
R 924	(A,96,114)	RS1/16SS223J
R 925	(A,96,117)	RS1/16SS472J
R 926	(A,107,112)	RS1/16SS103J

CAPACITORS

C 103	(A,19,124)	CKSRYB104K16
C 106	(A,26,117)	CKSSYB104K16
C 151	(A,91,98)	CKSSYB472K16
C 152	(A,91,100)	CKSSYB472K16
C 153	(A,95,96)	CKSRYB105K6R3
C 154	(A,95,101)	CKSRYB105K6R3
C 155	(A,95,97)	CKSRYB105K6R3
C 156	(A,95,100)	CKSRYB105K6R3
C 157	(A,94,99)	CKSSYB104K16
C 158	(A,105,99)	CKSSYB104K16
C 159	(A,104,105)	CEJQ220M16
C 201	(A,121,109)	CEJQ470M16
C 202	(A,118,97)	CKSSYB104K16
C 203	(A,123,100)	CKSRYB224K16
C 204	(A,126,80)	CKSRYB474K10
C 205	(A,145,86)	CEJQ470M16
C 206	(A,124,81)	CKSRYB105K10
C 211	(A,112,82)	CKSRYB105K6R3
C 212	(A,132,84)	CKSRYB105K6R3
C 213	(A,114,84)	CKSRYB105K6R3
C 214	(A,132,85)	CKSRYB105K6R3
C 215	(A,114,85)	CKSRYB105K6R3
C 216	(A,131,86)	CKSRYB105K6R3
C 217	(A,114,87)	CKSRYB105K6R3
C 218	(A,131,88)	CKSRYB105K6R3
C 219	(A,114,88)	CKSRYB105K6R3
C 220	(A,131,89)	CKSRYB105K6R3
C 221	(A,115,90)	CKSRYB105K6R3
C 222	(A,132,91)	CKSRYB105K6R3
C 223	(A,115,93)	CKSRYB105K6R3
C 224	(A,132,95)	CKSRYB105K6R3
C 225	(A,117,95)	CKSRYB105K6R3
C 226	(A,129,95)	CKSRYB105K6R3
C 227	(A,114,105)	CEJQ100M50
C 228	(A,138,93)	CEJQ100M16
C 229	(A,149,101)	CKSSYB104K16
C 231	(A,115,82)	CCSSCH470J50
C 251	(A,99,89)	CKSRYB105K6R3
C 252	(A,89,90)	CKSRYB105K6R3
C 253	(A,100,91)	CKSRYB224K10
C 254	(A,89,93)	CKSRYB224K10
C 255	(A,99,93)	CKSSYB104K16
C 301	(A,129,117)	CEJQ100M25
C 302	(A,135,112)	CEJQ100M25
C 305	(A,147,114)	CEJQ100M25
C 306	(A,152,114)	CEJQ100M25
C 309	(A,135,117)	CEJQ100M25
C 310	(A,141,114)	CEJQ100M25
C 313	(A,128,111)	CEJQ220M16
C 351	(A,106,121)	CKSRYB474K16
C 352	(A,104,121)	CKSRYB474K16
C 353	(A,109,122)	CKSRYB474K16
C 354	(A,111,122)	CKSRYB474K16
C 355	(A,106,124)	CKSQYB474K16
C 356	(A,104,124)	CKSQYB474K16
C 357	(A,109,125)	CKSQYB474K16
C 358	(A,111,125)	CKSQYB474K16
C 359	(A,113,122)	CKSQYB225K10
C 360	(A,113,125)	CKSQYB225K10
C 362	(A,121,114)	CEJQ100M25
C 363	(A,86,132)	CKSRYB104K16
C 364	(A,82,120) 3 300 uF/16 V	CCH1486
C 382	(A,114,112)	CEJQ330M16
C 401	(A,149,69)	CKSSYB122K50
C 402	(A,146,69)	CKSSYB122K50
C 412	(A,156,55)	CKSSYB103K16
C 413	(A,155,65)	CKSSYB102K50
C 414	(A,153,58)	CEJQ470M10
C 416	(A,155,93)	CKSSYB103K16
C 417	(A,152,85)	CEJQ101M10
C 431	(A,166,27)	CEJQ470M10
C 432	(A,161,29)	CKSRYB103K16
C 433	(A,158,20)	CKSRYB103K16
C 434	(A,164,21)	CEJQ4R7M35
C 451	(A,34,64)	CEJQ101M10
C 452	(A,13,73)	CKSSYB103K16

Circuit Symbol and No.		Part No.
C 454	(A,33,82) 470 uF/16 V	CCH1331
C 463	(A,34,55)	CEJQ220M16
C 464	(A,26,67)	CKSRYB103K16
C 465	(A,26,64)	CKSRYB103K16
C 466	(A,24,63)	CKSYB475K16
C 501	(A,104,56)	CKSRYB104K16
C 551	(A,88,55)	CKSSYB104K16
C 552	(A,90,54)	CKSSYB104K16
C 553	(A,86,63)	CKSSYB104K16
C 554	(A,89,65)	CKSSYB104K16
C 555	(A,50,68)	CKSSYB104K16
C 556	(A,46,61)	CKSSYB104K16
C 557	(A,91,66)	CKSSYB104K16
C 558	(A,97,64)	CEJQ330M16
C 581	(A,74,53)	CCSRCH391J50
C 582	(A,77,61)	CCSRCH391J50
C 583	(A,81,54)	CCSSCH221J50
C 584	(A,82,63)	CCSSCH221J50
C 585	(A,75,63)	CKSRYB105K10
C 586	(A,81,67)	CEJQ100M50
C 587	(A,73,56)	CKSRYB105K6R3
C 588	(A,73,59)	CKSRYB105K6R3
C 589	(A,74,67)	CEJQ100M50
C 590	(A,72,63)	CKSSYB102K10
C 593	(A,67,71)	CEVW100M10
C 601	(A,137,50)	CCSRCH470J50
C 602	(A,141,61)	CKSRYB104K10
C 603	(A,118,60)	CCSSCH120J50
C 605	(A,118,62)	CCSSCH120J50
C 606	(A,109,65)	CEJQ4R7M35
C 607	(A,110,61)	CKSSYB103K16
C 609	(A,122,72)	CKSRYB474K10
C 610	(A,126,72)	CKSRYB474K10
C 611	(A,123,75)	CKSSYB102K50
C 651	(A,104,63)	CKSRYB105K10
C 702	(A,80,41)	CKSSYB104K16
C 704	(A,89,43)	CEJQ220M16
C 705	(A,93,46)	CKSSYB152K50
C 706	(A,104,40)	CKSRYB474K10
C 721	(A,20,45)	CEJQ101M10
C 722	(A,12,42)	CKSRYB102K50
C 723	(A,14,54)	CKSSYB473K16
C 743	(A,56,85)	CKSRYB105K6R3
C 744	(A,44,85)	CKSRYB105K6R3
C 745	(A,57,73)	CKSRYB105K6R3
C 746	(A,44,73)	CKSRYB105K6R3
C 747	(A,56,80)	CKSSYB104K10
C 781	(A,82,86)	CKSSYB471K50
C 782	(A,81,91)	CKSSYB103K16
C 784	(A,68,93) 470 uF/16 V	CCH1339
C 785	(A,76,89)	CKSRYB105K16
C 786	(A,78,81) 150 uF/6.3 V	CCH1804
C 787	(A,78,91)	CKSSYB104K16
C 805	(A,88,13)	CKSSYB102K50
C 807	(A,99,16)	CKSSYB104K16
C 821	(A,18,58)	CEJQ1R0M50
C 823	(A,20,54)	CKSSYB104K16
C 841	(A,125,27)	CKSSYB105K6R3
C 851	(A,22,27)	CKSSYB104K16
C 852	(A,26,33)	CEJQ101M16

Circuit Symbol and No.		Part No.
C 853	(A,27,27)	CKSSYB104K16
C 854	(A,37,26)	CCSSCH331J50
C 855	(A,28,29)	CKSSYB103K25
C 856	(A,34,33)	CEJQ470M25
C 857	(A,34,39) 10 uF	CCG1236
C 891	(A,90,111)	CKSRYB224K16
C 892	(A,81,109)	CKSSYB103K25
C 893	(A,97,108)	CEJQ100M25
C 901	(A,32,91)	CEJQ101M10
C 902	(A,13,97)	CKSRYB104K16
C 903	(A,14,105)	CKSRYB103K16
C 904	(A,22,95) 2 200 uF/16 V	CCH1405
C 911	(A,21,105)	CEJQ101M10
C 912	(A,12,112)	CKSRYB103K16
C 913	(A,20,113)	CEJQ101M16
C 921	(A,100,117)	CKSRYB104K25
C 922	(A,106,114)	CKSRYB105K16
C 942	(A,123,124)	CKSRYB473K50

B

Unit Number : (P710BT)
Unit Number : (P7100BT)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1846	(A,151,7) IC	GP1UX31RK
IC 1851	(B,153,23) IC	S-1200B33-M5
IC 1855	(B,103,24) IC	PEG538A8
IC 1856	(A,89,25) IC(P710BT)	PD8182A
	(A,89,25) IC(P7100BT)	PD8189A9
Q 1801	(B,34,10) Transistor	UMD22N
Q 1802	(B,61,32) Digital Transistor	DTC143EUA
Q 1803	(B,61,35) Transistor	UMD3N
Q 1804	(B,61,13) Digital Transistor	DTC143EUA
Q 1805	(A,79,7) Transistor	UMD3N
Q 1806	(B,29,10) Digital Transistor	DTC143EUA
Q 1807	(B,25,39) Digital Transistor	DTC143EUA
Q 1808	(B,42,11) Transistor	DTC123JU
D 1801	(A,72,36) LED	SMLE12BC7T(NP)
D 1803	(A,5,34) LED	SMLE12BC7T(NP)
D 1804	(A,62,13) LED	SMLE12BC7T(NP)
D 1805	(A,5,12) LED	SMLE12BC7T(NP)
D 1808	(A,72,11) LED	SMLE12BC7T(NP)
D 1809	(A,42,34) LED	SMLE12BC7T(NP)
D 1810	(A,28,14) LED	SMLE12BC7T(NP)
D 1811	(A,16,13) LED	SMLE12BC7T(NP)
D 1812	(A,62,34) LED	SMLE12BC7T(NP)
D 1813	(A,16,34) LED	SMLE12BC7T(NP)
D 1814	(A,28,33) LED	SMLE12BC7T(NP)
D 1815	(A,42,13) LED	SMLE12BC7T(NP)
D 1854	(B,116,33) Diode	1SS355
X 1854	(B,115,27) Ceramic Resonator 16.000 MHz	CSS1616
S 1801	(A,7,39) Push Switch	CSG1155
S 1802	(A,64,11) Push Switch	CSG1155
S 1803	(A,7,7) Push Switch	CSG1155
S 1804	(A,40,36) Push Switch	CSG1155
S 1805	(A,31,8) Push Switch	CSG1155
S 1806	(A,19,7) Push Switch	CSG1155
S 1807	(A,64,36) Push Switch	CSG1155

Circuit Symbol and No.		Part No.
S 1808	(A,31,39) Push Switch	CSG1155
S 1809	(A,40,11) Push Switch	CSG1155
S 1810	(A,19,39) Push Switch	CSG1155
S 1831	(A,52,23) Switch(MULTI-CONTROL)	CSX1120
CN1841	(B,132,25) Connector	CKS5207
CN1886	(A,110,25) Connector	CKS6036
	OEL Module	MXS8281

RESISTORS

R 1804	(B,58,35)	RS1/16S561J
R 1806	(B,67,36)	RS1/16S471J
R 1807	(B,59,13)	RS1/16S561J
R 1809	(A,67,9)	RS1/16S471J
R 1813	(B,21,11)	RS1/16S182J
R 1815	(B,22,13)	RS1/16S681J
R 1816	(B,25,13)	RS1/16S471J
R 1818	(B,29,37)	RS1/16S182J
R 1820	(B,24,36)	RS1/16S681J
R 1821	(B,26,36)	RS1/16S471J
R 1822	(A,58,40)	RS1/16S561J
R 1824	(A,8,16)	RS1/16S561J
R 1825	(B,45,11)	RS1/16S181J
R 1827	(A,34,14)	RS1/16S561J
R 1828	(A,22,14)	RS1/16S561J
R 1831	(B,42,35)	RS1/16S103J
R 1832	(B,54,11)	RS1/16S333J
R 1833	(B,51,11)	RS1/16S103J
R 1834	(B,45,34)	RS1/16S102J
R 1835	(B,45,29)	RS1/16S332J
R 1836	(B,37,36)	RS1/16S102J
R 1838	(B,90,38)	RS1/16S103J
R 1839	(B,59,17)	RS1/16S222J
R 1841	(A,142,26)	RS1/16S223J
R 1846	(B,153,10)	RS1/16S101J
R 1848	(B,149,10)	RS1/16S2R2J
R 1851	(B,150,19)	RS1/16S222J
R 1857	(A,133,20)	RS1/16S103J
R 1858	(B,123,14)	RAB4C473J
R 1859	(A,123,34)	RS1/16S473J
R 1860	(B,116,32)	RS1/16S154J
R 1861	(A,97,35)	RS1/16S102J
R 1862	(A,81,34)	RS1/16S102J
R 1863	(A,101,32)	RS1/16S102J
R 1864	(A,121,30)	RS1/16S472J
R 1865	(A,125,30)	RS1/16S103J
R 1866	(A,150,19)	RS1/16S104J
R 1867	(A,131,20)	RS1/16S222J
R 1868	(A,132,18)	RS1/16S222J
R 1869	(B,110,8)	RAB4C473J
R 1870	(B,103,35)	RAB4C102J
R 1871	(B,106,8)	RAB4C473J
R 1872	(B,99,37)	RS1/16S221J
R 1873	(B,96,36)	RAB4C101J
R 1874	(B,73,24)	RAB4C101J
R 1875	(B,103,8)	RS1/16S473J
R 1876	(B,76,18)	RAB4C101J
R 1877	(A,90,15)	RS1/16S101J
R 1878	(B,101,12)	RS1/16S101J
R 1879	(B,81,19)	RAB4C101J

Circuit Symbol and No.		Part No.
R 1880	(B,91,26)	RAB4C101J
R 1881	(B,90,22)	RAB4C101J
R 1882	(A,96,15)	RAB4C101J
R 1883	(A,92,15)	RAB4C101J
R 1884	(A,102,22)	RAB4C101J
R 1893	(B,112,15)	RS1/16S101J
R 1894	(A,116,16)	RAB4C101J
R 1895	(A,113,19)	RS1/16S101J

CAPACITORS

C 1841	(A,142,29)	CKSRYB104K25
C 1846	(B,151,7)	CKSQYB106K6R3
C 1851	(B,150,23)	CKSRYB104K16
C 1852	(B,153,21)	CKSRYB104K16
C 1854	(B,112,24)	CKSRYB105K16
C 1855	(B,116,30)	CKSRYB104K16
C 1857	(B,89,19)	CKSRYB105K16
C 1858	(A,83,14)	CKSRYB103K50
C 1889	(A,105,18)	CKSQYB105K25
C 1890	(A,116,19)	CKSQYB105K25
C 1891	(A,109,17)	CKSRYB105K16
C 1892	(A,108,14)	CKSRYB104K16

C

Unit Number : CWX3858(P710BT)
Unit Name : CD Core Unit(S10.5CODE3H)
Unit Number : CWX3680(P7100BT)
Unit Name : CD Core Unit(S10.5COMP2-iPod-C3)

MISCELLANEOUS

IC 201	(A,33,34)	IC	PE5662A
IC 205	(B,30,23)	IC	341S2162
IC 301	(A,64,28)	IC	BA5839FP
Q 101	(B,10,57)	Transistor	2SA1577
Q 102	(B,21,48)	Chip Transistor	2SB1689
Q 201	(B,25,26)	Transistor	2SA1577
X 201	(A,42,21)	Ceramic Resonator 16.934 MHz	CSS1603
X 205	(B,16,33)	Oscillator 48.000 MHz	CSS1753
S 901	(A,42,54)	Switch(HOME)	CSN1067
S 903	(B,21,19)	Switch(DSCSNS)	CSN1067
S 904	(B,11,40)	Switch(12EJ)	CSN1068
S 905	(B,10,24)	Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,6,60)	RS1/10SR2R4J
R 102	(B,7,60)	RS1/10SR2R4J
R 103	(B,8,60)	RS1/10SR2R7J
R 104	(B,13,53)	RS1/16SS222J
R 105	(B,22,44)	RS1/16SS102J
R 107	(B,19,51)	RS1/16SS105J
R 203	(A,35,50)	RS1/16S473J
R 204	(A,22,23)	RS1/16SS221J
R 209	(B,28,18)	RS1/16SS103J
R 210	(B,56,9)	RS1/16SS102J
R 214	(B,29,49)	RS1/16SS472J
R 216	(B,31,48)	RS1/16SS472J
R 221	(A,31,50)	RS1/16SS103J
R 222	(A,33,50)	RS1/16SS103J
R 223	(B,36,13)	RS1/16SS473J

Circuit Symbol and No.		Part No.
R 225	(A,30,50)	RS1/16SS103J
R 226	(A,29,50)	RS1/16SS393J
R 227	(B,28,47)	RS1/16SS562J
R 228	(B,28,44)	RS1/16SS122J
R 229	(B,26,46)	RS1/16SS472J
R 230	(B,54,21)	RS1/16SS0R0J
R 232	(B,28,45)	RS1/16SS122J
R 233	(B,20,25)	RS1/16SS103J
R 235	(A,20,25)	RS1/16SS473J
R 237	(A,44,23)	RS1/16SS151J
R 240	(B,53,13)	RS1/16S473J
R 241	(B,54,13)	RS1/16SS103J
R 249	(B,30,13)	RS1/16SS103J
R 250	(B,29,19)	RS1/16SS101J
R 252	(B,32,18)	RS1/16SS101J
R 254	(A,15,25)	RS1/16SS104J
R 255	(A,16,25)	RS1/16SS104J
R 256	(A,17,25)	RS1/16SS104J
R 259	(A,13,27)	RS1/16SS0R0J
R 261	(A,14,25)	RS1/16SS104J
R 262	(A,20,29)	RS1/16SS0R0J
R 263	(A,16,27)	RS1/16SS0R0J
R 273	(B,31,18)	RS1/16SS103J
R 277	(B,30,17)	RS1/16SS103J
R 282	(A,18,29)	RS1/16SS120J
R 283	(A,18,28)	RS1/16SS120J
R 284	(B,16,28)	RS1/16SS153J
R 285	(B,16,27)	RS1/16SS153J
R 291	(B,17,42)	RS1/16SS272J
R 292	(B,36,24)	RS1/16SS272J
R 293	(B,27,26)	RS1/16SS472J
R 294	(A,17,31)	RS1/16SS471J
R 307	(A,60,34)	RS1/16SS183J
R 308	(A,60,37)	RS1/16SS183J
R 309	(A,58,34)	RS1/16SS183J
R 310	(A,57,37)	RS1/16SS183J
R 502	(A,47,19)	RS1/16SS101J
R 503	(B,53,22)	RS1/16SS473J
R 504	(B,46,20)	RS1/16SS101J
R 505	(B,47,23)	RS1/16SS473J
R 506	(B,41,21)	RS1/16SS101J
R 507	(B,41,20)	RS1/16SS101J
R 508	(A,45,20)	RS1/16SS101J
R 510	(B,38,16)	RS1/16SS473J
R 601	(B,49,29)	RS1/16SS0R0J
R 602	(B,49,26)	RS1/16SS0R0J
R 606	(B,56,27)	RS1/16S0R0J
R 701	(B,43,11)	RS1/16SS221J
R 702	(A,24,23)	RS1/16SS221J
R 708	(B,42,14)	RS1/16S0R0J
R 712	(B,25,13)	RS1/16SS0R0J
R 713	(B,26,14)	RS1/16SS0R0J

CAPACITORS

C 106	(B,12,56)	CKSQYB475K10
C 202	(A,22,27)	CKSSYB104K10
C 204	(A,20,23)	CKSSYB103K16
C 205	(B,38,26)	CKSQYB475K10
C 206	(A,39,22)	CKSSYB104K10
C 207	(A,42,24)	CKSRYB104K16
C 209	(B,45,35)	CEVW220M6R3
C 210	(B,42,28)	CKSSYB104K10
C 211	(A,44,27)	CKSSYB104K10
C 212	(A,49,28)	CKSRYB104K16
C 213	(A,40,45)	CKSSYB104K10
C 214	(A,46,28)	CKSSYB104K10
C 216	(A,27,50)	CKSSYB332K50
C 217	(A,28,47)	CKSSYB104K10
C 218	(A,27,49)	CKSSYB473K10
C 219	(A,26,46)	CKSSYB104K10
C 220	(A,26,47)	CKSSYB182K50
C 221	(A,25,45)	CKSSYB104K10
C 222	(B,26,45)	CCSSCH560J50
C 223	(B,26,47)	CCSSCH4R0C50
C 224	(A,24,43)	CKSSYB104K10
C 226	(A,20,41)	CCSSCH680J50
C 227	(A,18,41)	CCSSCH470J50
C 228	(B,18,40)	CKSSYB103K16
C 229	(B,19,47)	CKSSYB104K10
C 236	(A,21,49)	CKSSYB104K10
C 239	(B,28,46)	CCSSCH220J50
C 240	(A,18,37)	CKSSYB104K10
C 243	(B,38,21)	CKSQYB475K10
C 250	(A,31,51)	CKSSYB102K50
C 251	(A,33,51)	CKSSYB102K50
C 260	(A,18,27)	CKSSYB104K10
C 261	(B,13,33)	CCSSCH8R0D50
C 262	(B,13,31)	CCSSCH8R0D50
C 290	(B,34,25)	CKSSYB104K10
C 293	(B,18,43)	CKSSYB102K50
C 294	(B,38,24)	CKSSYB104K10
C 303	(A,60,35)	CKSSYB472K25
C 304	(A,58,35)	CKSSYB223K16
C 307	(A,68,21)	CKSRYB104K16
C 308	(B,61,10)	CKSRYB105K10
C 501	(A,55,22)	CKSSYB104K10
C 502	(B,47,22)	CKSSYB102K50
C 703	(B,44,14)	CCSSCH101J50
C 704	(B,44,11)	CKSSYB102K50
C 711	(A,54,30)	CKSSYB104K10

D

Unit Number : 0A020129
Unit Name : Panel Unit

MISCELLANEOUS

D 1970	(A,5,19) LED	CL220PGC
D 1973	(B,45,18) Diode	MALS068X
D 1974	(B,57,6) Diode	MALS068X
D 1975	(B,51,10) Diode	MALS068X
D 1976	(B,46,15) Diode	MALS068X
S 1970	(A,78,40) Push Switch(EJECT)	CSG1174
CN1971	(B,37,9) Connector	CKS5192
CN1972	(A,63,28) Connector	CKS4806

RESISTORS

R 1970	(B,63,10)	RS1/16S101J

Circuit Symbol and No.		Part No.
R 1971	(B,67,10)	RS1/16S101J

CAPACITORS

C 1970	(B,36,18)	CKSRYB104K16
C 1971	(B,59,6)	CKSRYB104K16

E

Unit Number : 0A020108
Unit Name : Antenna Unit

MISCELLANEOUS

CN1501	(A,17,5) Connector	CKS5749
JA1501	(B,9,9) Antenna	CTX1111

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC7134
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026