9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

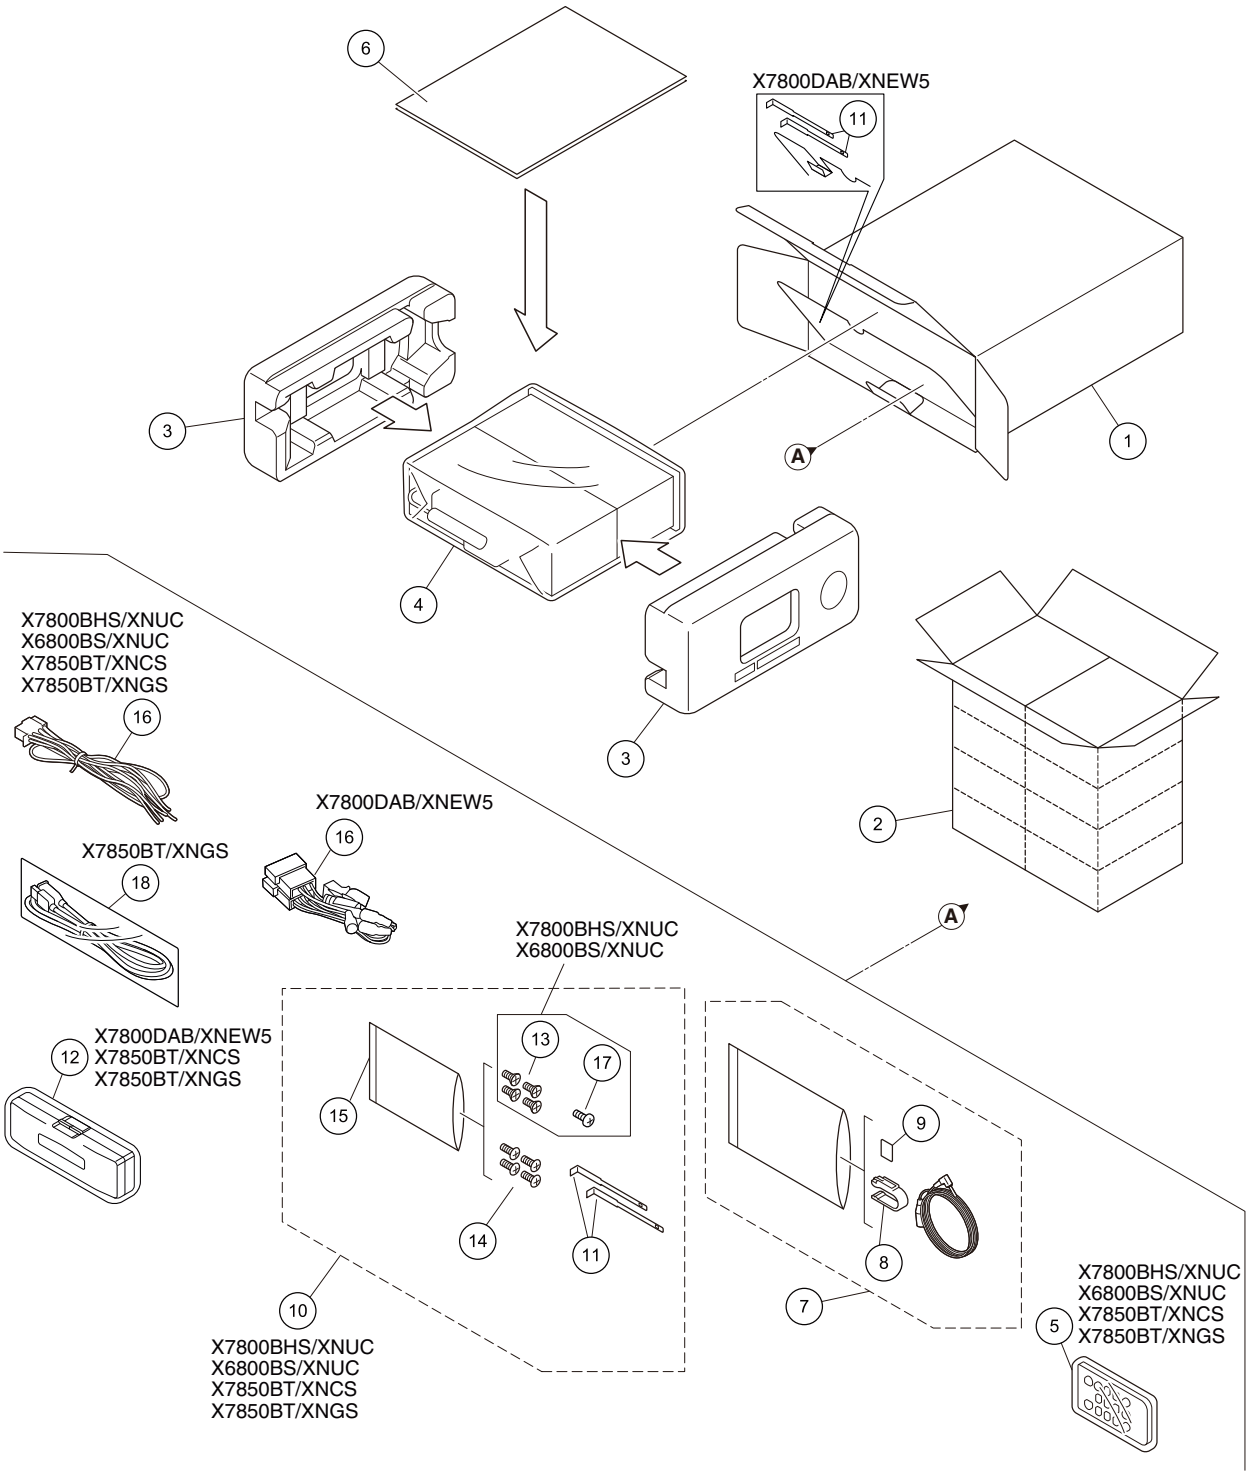

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Unit Box	See Contrast table (2)
	2	Contain Box	See Contrast table (2)
	3	Protector	CHP4594
	4	Polyethylene Bag	See Contrast table (2)
	5	Card Remote Control Unit	See Contrast table (2)
*	6-1	Warranty Card	See Contrast table (2)
	6-2	Owner's Manual	See Contrast table (2)
	7	Microphone Assy	CPM1109
	8	Holder	CZN7192
	9	Cushion	CZN7193
	10	Accessory Assy	See Contrast table (2)
	11	Handle	QNC3021
	12	Case Assy	See Contrast table (2)
	13	Screw	See Contrast table (2)
	14	Screw	See Contrast table (2)
*	15	Polyethylene Bag	See Contrast table (2)
	16	Cord Assy	See Contrast table (2)
	17	Screw	See Contrast table (2)
	18	USB Extended Cable	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X7800BHS/XNUC, DEH-X7800DAB/XNEW5, DEH-X6800BS/XNUC, DEH-X7850BT/XNCS and DEH-X7850BT/XNGS are constructed the same except for the following:

Mark	No.	Description	DEH-X7800BHS/XNUC	DEH-X7800DAB/XNEW5	DEH-X6800BS/XNUC	DEH-X7850BT/XNCS	DEH-X7850BT/XNGS
	1	Unit Box	QHG3876	QHG3875	QHG3877	QHG3879	QHG3880
	2	Contain Box	QHL3876	QHL3875	QHL3877	QHL3879	QHL3880
	4	Polyethylene Bag	CEG1173	QEG3001	CEG1173	QEG3001	QEG3001
	5	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044	QXE1044
*	6-1	Warranty Card	QRY3001	CRY1376	QRY3001	Not used	Not used
	6-2	Owner's Manual	QRD3346	QRD3345	QRD3346	QRD3350	QRD3347
	10	Accessory Assy	QEA3337	Not used	QEA3337	QEA3338	QEA3338
	12	Case Assy	Not used	QXA3129	Not used	QXA3129	QXA3129
	13	Screw	CBA2383	Not used	CBA2383	Not used	Not used
	14	Screw	CBA2384	Not used	CBA2384	CBA2384	CBA2384
*	15	Polyethylene Bag	CEG1160	Not used	CEG1160	CEG1160	CEG1160
	16	Cord Assy	CDP1484	QDP3072	CDP1484	CDP1484	CDP1484
	17	Screw	BPZ20P060FTC	Not used	BPZ20P060FTC	Not used	Not used
	18	USB Extended Cable	Not used	Not used	Not used	Not used	CDP1587

Owner's Manual,Installation Manual

Part No.	Language
QRD3345	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3346	English, French, Spanish(Espanol)
QRD3347	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic, Persian
QRD3350	English, Spanish(Espanol), Portuguese(B)

9.2 EXTERIOR

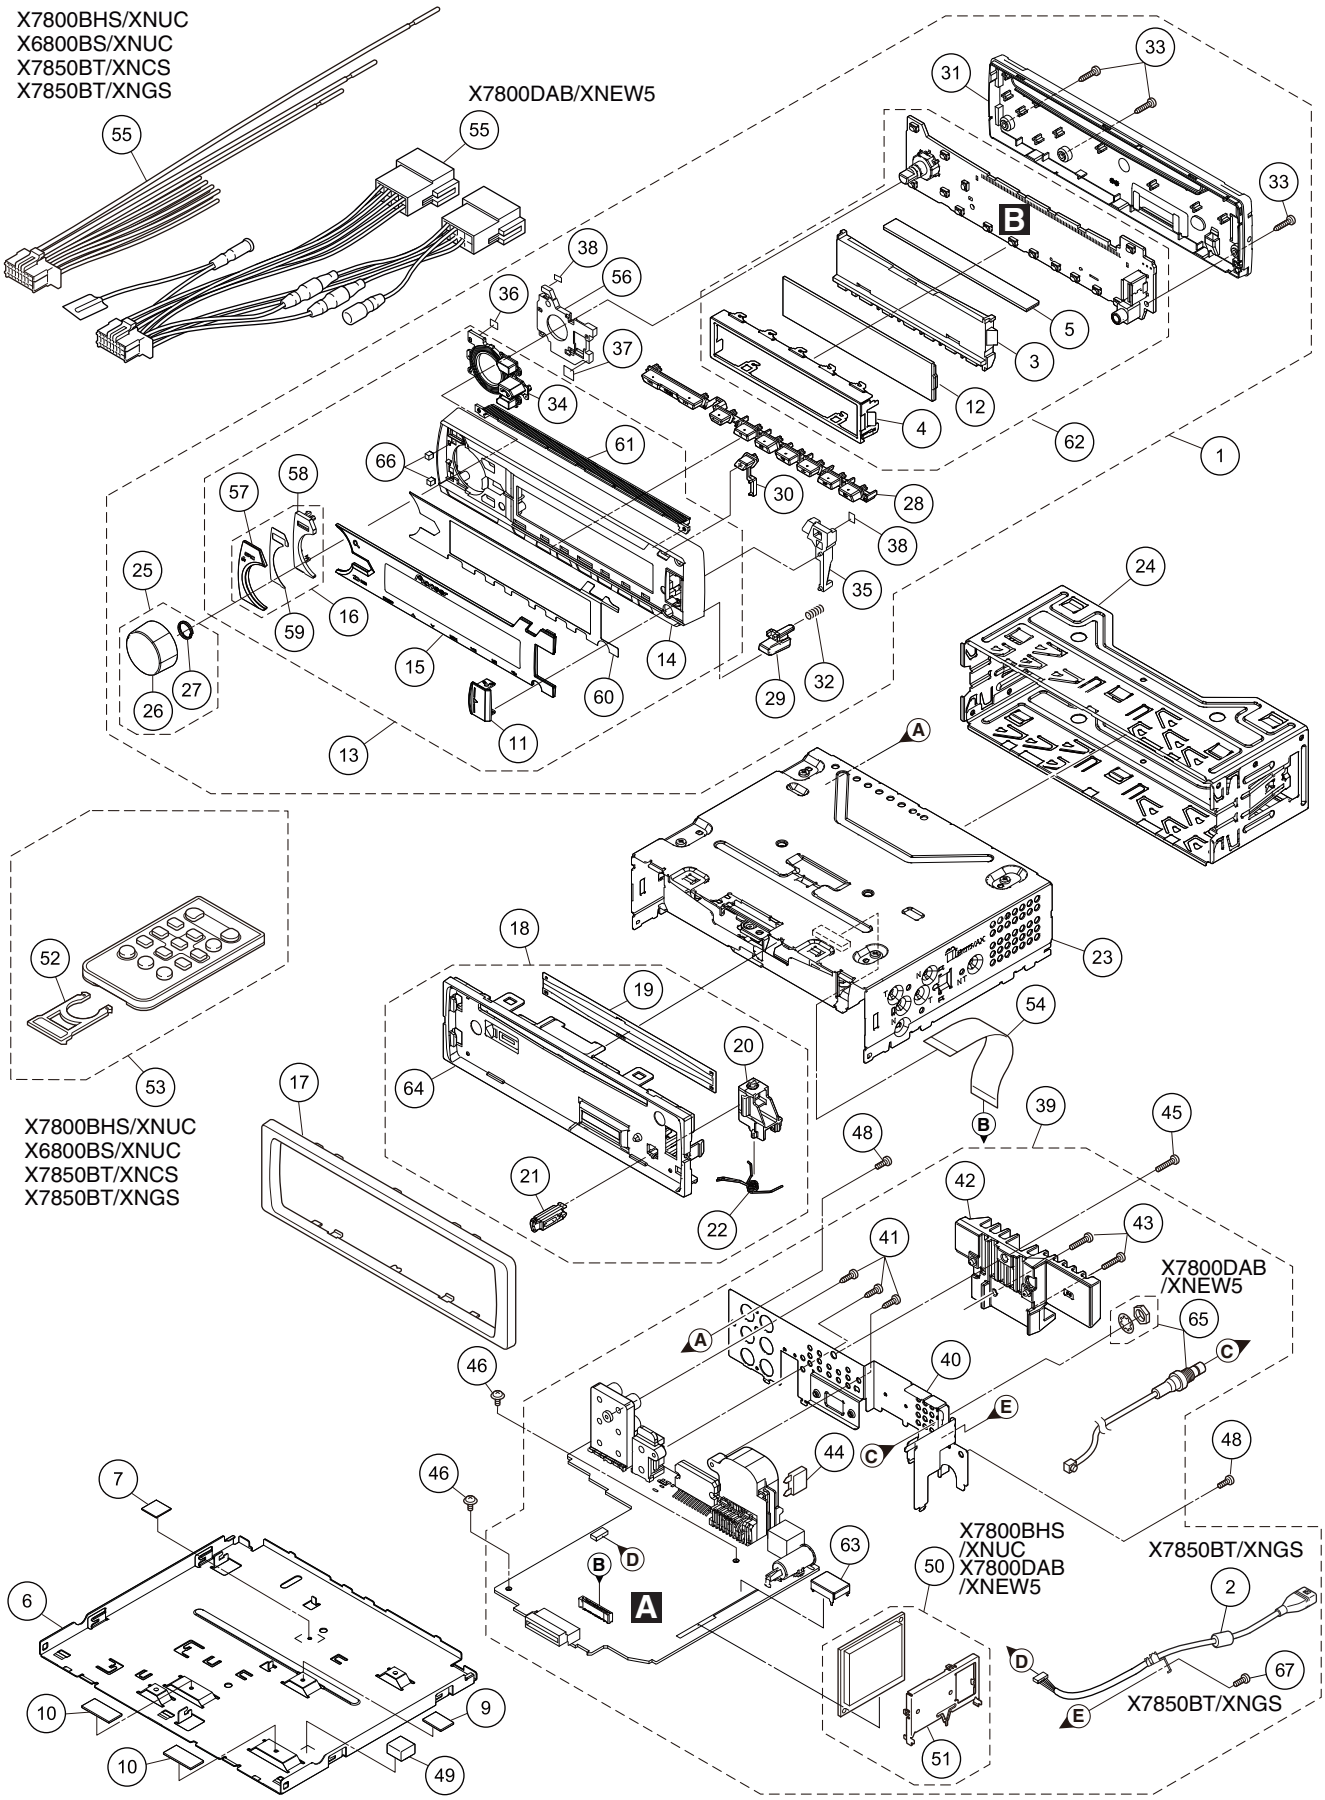
X7800BHS/XNUC
X6800BS/XNUC
X7850BT/XNCS
X7850BT/XNGS
X7800DAB/XNEW5
X7800BHS/XNUC
X6800BS/XNUC
X7850BT/XNCS
X7850BT/XNGS
X7800DAB
/XNEW5
X7800BHS
/XNUC
X7800DAB
/XNEW5
X7850BT/XNGS
X7850BT/XNGS

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Detach Grille Assy	See Contrast table (2)
	2	USB Cable	See Contrast table (2)
	3	Lighting Conductor	QNV3120
	4	Holder	QNC3120
	5	Rubber Connector	QNV3126
	6	Case	QNB3034
	7	Heat Conductor Sheet	QNM3165
	8	.....	
	9	Heat Conductor Sheet	QNM3164
	10	Heat Conductor Sheet	QNM3135
	11	Door	QAT3021
	12	Segment LCD(V1801)	CAW2057
	13	Grille Unit	See Contrast table (2)
	14	Grille	See Contrast table (2)
	15	Plate	See Contrast table (2)
	16	Button Unit	QXA4598
	17	Panel	QNS3576
	18	Panel Assy	QXA4716
	19	Cover	QNM3029
	20	Arm	QNV3025
	21	Button	QNV3026
	22	Spring	QBH3001
	23	CD Mechanism Module (11.6VA_T07)	CXK5808
	24	Holder	QNC3020
	25	Knob Unit	See Contrast table (2)
	26	Knob	See Contrast table (2)
*	27	Spring	YBL5010
	28	Button(TRACK, 1-6)	QAC3222
	29	Button(DETACH)	QAC3224
	30	Button(EJECT)	QAC3223
	31	Cover	QNS3962
	32	Spring	CBH2210
	33	Screw	BPZ20P100FTC
	34	Button(PHONE)	QAC3220
	35	Lighting Conductor	QNV3118
	36	Sheet	QNM3143
	37	Sheet	QNM3144
	38	Sheet	QNM3145
	39	Tuner Amp Unit	See Contrast table (2)
	40	Holder	See Contrast table (2)
	41	Screw	BPZ26P080FTC
	42	Heat Sink	See Contrast table (2)
	43	Screw	BSZ26P120FTC
⚠	44	Fuse(10 A)	YEK5001
	45	Screw	BSZ26P120FTC
	46	Screw	ASZ26P050FTC
	47	.....	
	48	Screw	BSZ26P060FTC
	49	Gasket	QNM3174
	50	BE Core Unit(U951)	See Contrast table (2)
	51	Holder	See Contrast table (2)
	52	Cover	See Contrast table (2)
	53	Card Remote Control Unit	See Contrast table (2)
	54	FFC	QDE3029
	55	Cord Assy	See Contrast table (2)
	56	Lighting Conductor	QNV3117
	57	Plate	QNS3966
	58	Holder	QNS3968
	59	Double Side Tape	QNM3141
	60	Double Side Tape	QNM3140
	61	Lighting Conductor	QNV3119
	62	Keyboard Unit	See Contrast table (2)
	63	Shield Case	QNC3107
	64	Panel	QNS4071
	65	ANT Pigtail Cable Assy	See Contrast table (2)
	66	Cushion	QNM3142
	67	Screw	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X7800BHS/XNUC, DEH-X7800DAB/XNEW5, DEH-X6800BS/XNUC, DEH-X7850BT/XNCS and DEH-X7850BT/XNGS are constructed the same except for the following:

Mark	No.	Description	DEH-X7800BHS/XNUC	DEH-X7800DAB/XNEW5	DEH-X6800BS/XNUC	DEH-X7850BT/XNCS	DEH-X7850BT/XNGS
	1	Detach Grille Assy	QXA4627	QXA4626	QXA4628	QXA4630	QXA4631
	2	USB Cable	Not used	Not used	Not used	Not used	QDP3089
	13	Grille Unit	QXA4585	QXA4584	QXA4586	QXA4588	QXA4588
	14	Grille	QNS3960	QNS3960	QNS3969	QNS3960	QNS3960
	15	Plate	QNS3971	QNS3961	QNS3972	QNS3974	QNS3974
	25	Knob Unit	QXA4712	QXA4713	QXA4712	QXA4712	QXA4713
	26	Knob	QAA3056	QAA3057	QAA3056	QAA3056	QAA3057
	39	Tuner Amp Unit	QWM4149	QWM4148	QWM4150	QWM4151	QWM4152
	40	Holder	QNC3112	QNC3115	QNC3112	QNC3113	QNC3117
	42	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3010	QNR3002

Mark	No.	Description	DEH-X7800BHS/ XNUC	DEH-X7800DAB/ XNEW5	DEH-X6800BS/ XNUC	DEH-X7850BT/ XNCS	DEH-X7850BT/ XNGS
	50	BE Core Unit(U951)	CWE2518	CWE2534(WWR Tuner Unit)	Not used	Not used	Not used
	51	Holder	CND7288	CND7288	Not used	Not used	Not used
	52	Cover	CNS7068	Not used	CNS7068	CNS7068	CNS7068
	53	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044	QXE1044
	55	Cord Assy	CDP1484	QDP3072	CDP1484	CDP1484	CDP1484
	62	Keyboard Unit	QWM4240	QWM4167	QWM4240	QWM4240	QWM4240
	65	ANT Pigtail Cable Assy	Not used	QXA4122	Not used	Not used	Not used
	67	Screw	Not used	Not used	Not used	Not used	BSZ26P060FTC

9.3 CD MECHANISM MODULE

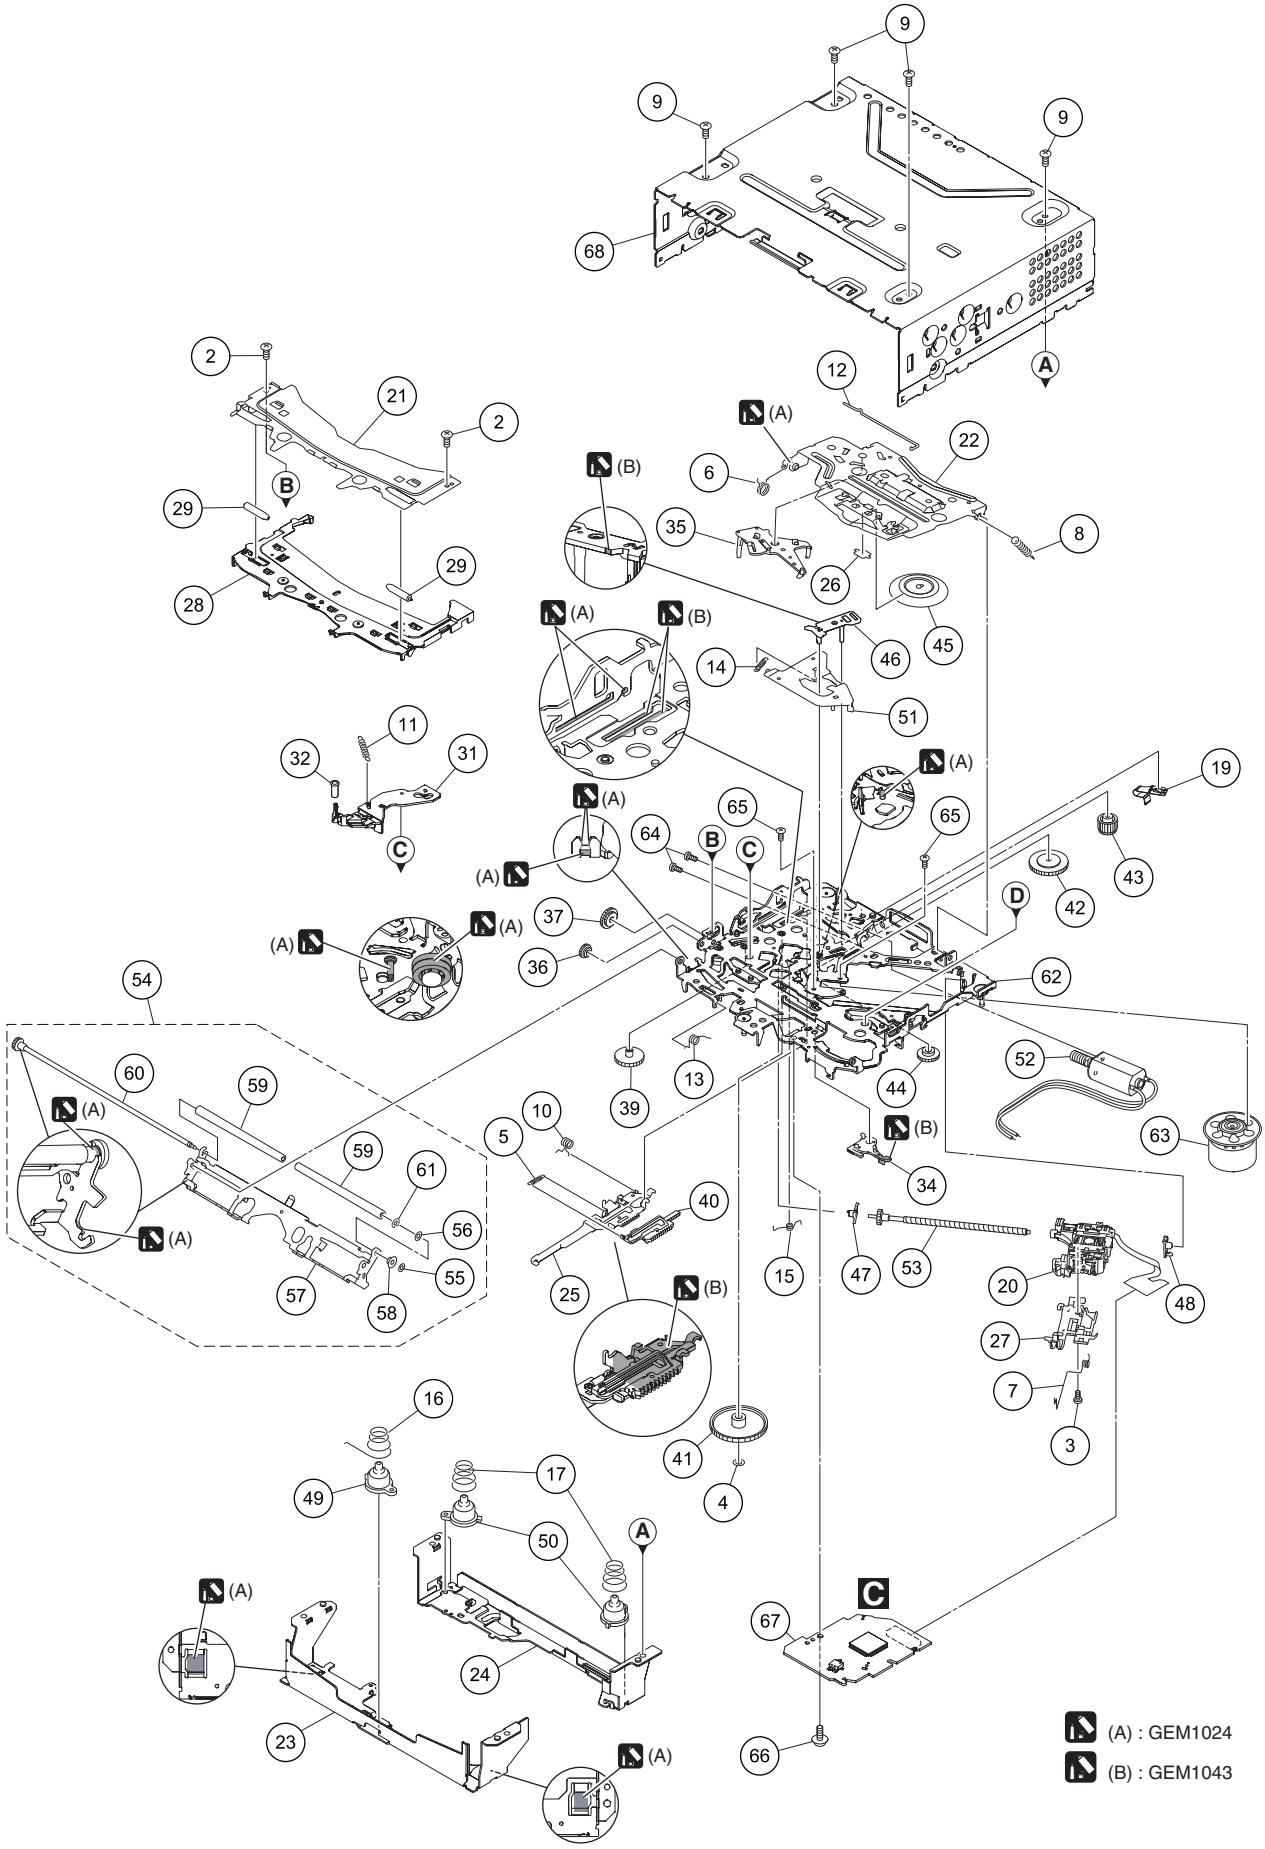

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	.....	
	2	Screw	BSZ20P040FTC
	3	Screw(M2 x 4)	CBA1835
	4	Washer	CBF1038
	5	Spring	CBH3010
	6	Spring	CBH2855
	7	Spring	CBH2856
	8	Spring	CBH2860
	9	Screw	BSZ26P060FTC
	10	Spring	CBH3011
	11	Coil Spring	CBH3095
	12	Spring	CBH3014
	13	Spring	CBH3015
	14	Spring	CBH3016
	15	Spring	CBH3017
	16	Spring	CBH3086
	17	Spring	CBH3019
	18	.....	
	19	Leaf Spring	CBL1824
	20	Service Unit (P11)	CXX4754
	21	Bracket	CND4553
	22	Arm	CND6406
	23	Bracket	CND6127
	24	Bracket	CND5710
	25	Lever	CND5398
	26	Sheet	CNN3678
	27	Rack	CNV8342
	28	Guide	CNW2240
	29	Roller	CNW1172
	30	.....	
	31	Arm	CNW2241
	32	Roller	CNW1175
	33	.....	
	34	Arm	CNW1177
	35	Arm	CNW1178
	36	Gear	CNW1180
	37	Gear	CNW1181
	38	.....	
	39	Gear	CNW1183
	40	Rack	CNW1184
	41	Gear	CNW1185
	42	Gear	CNW1186
	43	Gear	CNW1187
	44	Gear	CNW2287
	45	Clamper	CNW1190
	46	Arm	CNW1192
	47	Holder	CNW1193
	48	Holder	CNW1194
	49	Damper	CNW1197
	50	Damper	CNW1198
	51	Arm	CNW1726
	52	Motor Unit(M2)(LOAD/CRG)	CXC4026
	53	Screw Unit	CXC8894
	54	Arm Assy	CXE6232
	55	Washer	CBF1037
	56	Washer	CBF1038
	57	Arm	CND6242
	58	Collar	CNW2444
	59	Roller	CNW2500
	60	Gear Unit	CXE6225
	61	Washer	YE15FTC
	62	Chassis Unit	CXE4528
	63	Motor Unit(M1)(SPDL)	CXE2273
	64	Screw	JFZ20P025FTC
	65	Screw	JGZ17P022FTC
	66	Screw	EBA1028
	67	CD Core Unit (S11.6VA)	CWX4269
	68	Chassis	CNA3181

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:DEH-X7800BHS/XNUC

B:DEH-X7800DAB/XNEW5

C:DEH-X6800BS/XNUC

D:DEH-X7850BT/XNCS

E:DEH-X7850BT/XNGS

Unit Number : QWM4149(A)
Unit Number : QWM4148(B)
Unit Number : QWM4150(C)
Unit Number : QWM4151(D)
Unit Number : QWM4152(E)
Unit Name : Tuner Amp Unit
Unit Number : QWM4240(A,C,D,E)
Unit Number : QWM4167(B)
Unit Name : Keyboard Unit
Unit Number : CWX4269
Unit Name : CD Core Unit(S11.6VA)

A

Unit Number : QWM4149(A)
Unit Number : QWM4148(B)
Unit Number : QWM4150(C)
Unit Number : QWM4151(D)
Unit Number : QWM4152(E)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 201	Power supply IC	BD49101AEFS
IC 202	Power supply IC	BD2232G-G
IC 301	DC/DC Converter IC(A,B,E)	KBD9876EFJ
IC 321	Power supply IC(E)	BD2232G-G
IC 421	Regulator IC(B)	S-1155B33-U5
IC 422	Regulator IC(A,B)	MM3411A33N
IC 423	Regulator IC(A,B)	S-1172B12-E6
IC 461	Regulator IC(E)	NJW4184DL3-08A
* IC501	Microprocessor IC	STA1080
IC 502	IC	S-80827CNMC-B8M
IC 503	L-MOS And Gate(A,C)	TC7SET08FUS1
IC 504	IC(A,C)	TC7SH126FU
IC 701	IC	337S3959
IC 702	RAM IC	M12L128168A-5TG2N
IC 731	ROM IC	M95512-RMN6P
IC 741	IC(A)	QWW4080
IC 741	IC(B)	QWW4082
IC 741	IC(C)	QWW4081
IC 741	IC(D,E)	QWW4078
IC 742	IC	MX25L1636EM2I-08G
IC 751	E-VOL System LSI	PM9015A
IC 801	Op-amp IC(E)	NJW1240V
IC 851	Tuner IC(A)	TEF6688HN-V102
IC 851	Tuner IC(B,C,D,E)	TEF6686HN-V102
IC 1301	Power Amp IC(A,B,C)	PAL013B
IC 1301	Power Amp IC(D,E)	PA2032A
Q 111	Bipolar Transistor	LSCR523UB
Q 121	Resistor Built-in Transistor	LTC014EEB
Q 141	Bipolar Transistor	LSCR523UB
Q 142	Bipolar Transistor	LSCR523UB
Q 201	Bipolar Transistor	LSCR523UB
Q 202	FET	SSM3J332R
Q 203	Power MOS FET	RRR040P03
Q 401	Transistor(B)	2SAR293PGZE
Q 402	Transistor(B)	LTC014EEB
Q 441	Transistor	2SAR502UB
Q 442	Resistor Built-in Transistor	LTC023YEB
Q 481	Transistor	2SAR502UB
Q 482	Resistor Built-in Transistor	LTC043EEB
Q 701	Bipolar Transistor	LSAR523UB
Q 801	Transistor(E)	LTC014EEB
Q 851	Bipolar Transistor(A)	MMBT2369L
Q 852	Bipolar Transistor(A)	MMBT2369L
Q 853	Bipolar Transistor(A)	MMBT2369L
Q 854	Bipolar Transistor(A)	MMBT2369L
Q 1241	Transistor(A,B,C,D)	EMH53
Q 1242	Transistor(A,B,C,D)	EMH53
Q 1243	Transistor(A,B,C,D)	EMH53
Q 1276	Transistor(E)	EMD53
Q 1301	Transistor	EMD52
D 101	Diode	D1F60-5053

Circuit Symbol and No.		Part No.
D 102	Diode	D1F60-5053
D 111	Diode(A,C,D,E)	DZ2J068M0
D 111	Diode(B)	DZ2J075M0
D 121	Diode	CRG03
D 141	Diode	DZ2J075M0
D 201	Schottky Diode	RB162M-40
D 202	Diode	RR264MM-400TF
D 203	Diode	RB056L-40
D 206	Schottky Diode	CMS30I30A
D 207	Schottky Diode	RB751SM-40
D 208	Diode(A,B,C,D)	DZ2S068C
D 209	Diode(E)	DZ2S068C
D 210	Diode(A,B,C,D)	DZ2S068C
D 211	Diode(E)	DZ2S068C
D 301	Diode(A,B,E)	RB056L-40
D 302	Diode(A,B,E)	RB060M-30
D 321	Switching Diode(E)	1SS355VM
D 421	Diode(B)	RR264MM-400TF
D 422	Diode(A,B)	RR264MM-400TF
D 423	Diode(A,B)	RR264MM-400TF
D 424	Diode(A,B)	RR264MM-400TF
D 425	Diode(A,B)	RR264MM-400TF
D 501	Schottky Diode(A,B,C)	RB751SM-40
D 502	Schottky Diode(A,B,C)	RB751SM-40
D 504	Diode	EZAEG2A50AX
D 505	Diode	EZAEG2A50AX
D 506	Diode(E)	EZAEG2A50AX
D 507	Diode(E)	EZAEG2A50AX
D 1102	Diode	DZ2S068C
D 1201	Diode	DZ2S068C
D 1204	Diode	EZAEG2A50AX
D 1205	Diode	EZAEG2A50AX
D 1206	Diode	DZ2S068C
D 1207	Diode	DZ2S068C
D 1208	Diode	DZ2S068C
D 1209	Diode	DZ2S068C
D 1210	Diode	DZ2S068C
D 1291	Diode(E)	EZAEG2A50AX
D 1292	Diode(E)	EZAEG2A50AX
D 1293	Rectifier Diode	DAN202UM
D 1301	Diode(A,B,C)	CRG03
D 1302	Diode	CRG03
L 101	Choke Coil	CTH1620
L 201	SMD SPL Inductor	CTH1521
L 202	SMD SPL Inductor	CTH1524
L 301	SMD SPL Inductor(A,B,E)	CTH1584
L 401	Inductor	CTF1793
L 502	Inductor	CTF1645
L 503	Chip Beads	VTL1133
L 504	Chip Beads	VTL1133
L 505	Chip Beads	VTL1133
L 854	Inductor	LCMAR27J1608
L 855	Inductor	CTF1786
L 856	Inductor(A,B,C,D)	CTF1389
L 857	Inductor(E)	ATL7033
L 858	Chip Coil(E)	LCTAWR27J2520
L 859	Chip Coil(E)	LCTAW3R3J2520
L 860	Inductor(A,B,C,D)	LCYC150K1608
L 1001	Inductor	CTF1789
L 1101	Inductor	CTF1389

Circuit Symbol and No.		Part No.
L 1102	Chip Beads	VTL1133
L 1103	Chip Beads	VTL1133
L 1104	Chip Beads	VTL1133
L 1276	Chip Beads	VTL1126
L 1277	Chip Beads	VTL1126
L 1278	Chip Beads	VTL1126
L 1279	Chip Beads	VTL1126
L 1291	Inductor(E)	CTF1713
L 1292	Chip Beads	VTL1126
L 1293	Chip Beads	VTL1126
L 1294	Chip Beads	VTL1126
L 1295	Chip Beads	VTL1126
L 1296	Chip Beads	VTL1126
L 1297	Chip Beads	VTL1126
T 851	Variable Coil	CTC1215
X 501	Resonator 24 MHz	CSS1773
X 502	Resonator 32.768 kHz	CSS1807
X 751	Crystal Resonator 18.432MHz	CSS1826
X 851	Crystal Resonator	CSS1868
S 501	Switch (RESET)	CSG1020
P 401	Poly Switch(A,C)	FSMD110-24R
P 401	Poly Switch(B)	FSMD020-R
P 852	Surge Absorber	IMSA-6803-01Y900
P 1243	Poly Switch	FSMD075-24R
P 1276	Poly Switch	FSMD075-24R
VA321	SMD Varistor	MLV0402ES012V0010N
VA1101	SMD Varistor	MLV0402ES012V0010N
VA1201	SMD Varistor	MLV0402ES012V0010N
VA1202	SMD Varistor	MLV0402ES012V0010N
U 951	BE Core Unit(A)	CWE2518
U 951	WWR Tuner Unit(B)	CWE2534
U 1001	BT Module	CWX4751
CN1101	Connector	VKN1192
CN1201	Connector	CKS6452
CN1291	Connector(E)	KM200NA5L
CN1292	Clamper(E)	CEF1046
CN1552	Clamper(E)	CEF1046
JA101	Plug	CKM1624
JA851	Antenna Jack	CKX1104
JA1231	Connector(A,C)	CKS3806
JA1241	Jack	CKB1113
JA1276	Jack	CKN1103

RESISTORS

R 111		RS1/16SS223J
R 112		RS1/16SS473J
R 113	(A,C,D,E)	RS1/16SS682J
R 113	(B)	RS1/16SS333J
R 114	(A,C,D,E)	RS1/4SA102J
R 114	(B)	RS1/4SA122J
R 121		RS1/16SS103J
R 123		RS1/4SA102J
R 141		RS1/16SS104J
R 142		RS1/16SS473J
R 143		RS1/16SS103J
R 144		RS1/16SS472J
R 145		RS1/16SS0R0J
R 202		RS1/16SS3303D
R 207		RS1/16SS222J

Circuit Symbol and No.		Part No.
R 208		RS1/16SS472J
R 209		RS1/4SA472J
R 210		RS1/16SS103J
R 214		RS1/16SS102J
R 215		RS1/16SS2403D
R 216		RS1/16SS7502D
R 217		RS1/16SS4303D
R 218		RS1/16SS4303D
R 219		RS1/16SS104J
R 220		RS1/16SS3903D
R 221		RS1/16SS6202D
R 222		RS1/16SS6802D
R 223	0.02 ohm	CCN1401
R 224		RS1/16SS6802D
R 225		RS1/16SS102J
R 226		RS1/16SS1203D
R 227		RS1/16SS1802D
R 229		RS1/16SS3902D
R 230		RS1/16SS682J
R 231		RS1/16SS4703D
R 232		RS1/16SS1503D
R 233		RS1/16SS1003D
R 234		RS1/16SS7503D
R 235		RS1/16SS1603D
R 236		RS1/16SS102J
R 237	(A,B,C,D)	RS1/16SS102J
R 238		RS1/16SS102J
R 239		RS1/16SS101J
R 240		RS1/16SS221J
R 241		RS1/16SS121J
R 242		RS1/16SS6801F
R 243		RS1/16SS393J
R 244		RS1/16SS103J
R 245	(A,B,C,D)	RS1/8SQ0R0J
R 246	(E)	RS1/8SQ0R0J
R 247	(E)	RS1/16SS102J
R 248	(A,B,C,D)	RS1/16SS332J
R 249	(E)	RS1/16SS332J
R 250		RS1/10SR471J
R 256		RS1/16SS0R0J
R 260		RS1/16SS473J
R 263		RS1/10SR471J
R 264		RS1/10SR0R0J
R 268		RS1/10SR0R0J
R 269		RS1/16SS101J
R 301	(A,B,E)	RS1/10SR471J
R 303	(A,B,E)	RS1/16SS1803D
R 304	(A,B,E)	RS1/16SS4302D
R 305	(A,B,E)	RS1/16SS682J
R 306	(A,B,E)	RS1/16SS0R0J
R 321	(E)	RS1/16SS222J
R 322		RS1/16SS0R0J
R 323	(A,B,E)	RS1/16SS102J
R 401	(B)	RS1/10SR103J
R 402	(B)	RS1/4SA471J
R 403	(B)	RS1/4SA471J
R 404	(A,C)	RS1/10SR0R0J
R 405	(B)	RS1/16SS1003F
R 406		RS1/16SS183J
R 422	(A,B)	RS1/16SS102J

Circuit Symbol and No.		Part No.
R 441		RS1/16SS103J
R 442		RS1/10SR221J
R 481		RS1/16SS471J
R 482		RS1/16SS103J
R 501	(E)	RS1/16SS222J
R 503		RS1/16SS222J
R 504		RS1/16SS222J
R 506		RS1/16SS473J
R 507		RS1/16SS473J
R 508		RS1/16SS473J
R 509		RS1/16SS473J
R 510		RS1/16SS473J
R 511		RS1/16SS473J
R 512		RS1/16SS101J
R 513		RS1/16SS222J
R 514		RS1/16SS221J
R 515		RS1/16SS221J
R 516		RS1/16SS221J
R 517		RS1/16SS221J
R 518		RS1/16SS472J
R 519		RS1/16SS271J
R 520	(A,B)	RS1/16SS472J
R 522		RS1/16SS0R0J
R 524		RS1/16SS3001D
R 525		RS1/16SS103J
R 526		RS1/16SS1213F
R 527	(E)	RS1/16SS0R0J
R 528	(E)	RS1/16SS0R0J
R 529		RS1/16SS0R0J
R 530		RS1/16SS0R0J
R 531		RS1/16SS222J
R 532		RS1/16SS102J
R 533		RS1/10SR103J
R 534		RS1/10SR103J
R 536	(E)	RS1/16SS473J
R 537	(A,B,C,D)	RS1/16SS473J
R 538	(A,C,D)	RS1/16SS473J
R 538	(B,E)	RS1/16SS472J
R 539	(A,C)	RS1/16SS103J
R 539	(D)	RS1/16SS223J
R 540		RS1/16SS103J
R 541		RS1/16SS103J
R 545		RS1/16SS473J
R 546		RS1/16SS103J
R 547		RS1/16SS473J
R 548		RS1/16SS102J
R 550		RS1/16SS103J
R 551		RS1/16SS103J
R 554		RS1/16SS222J
R 555		RS1/16SS0R0J
R 557		RS1/16SS221J
R 558		RS1/16SS221J
R 559		RS1/16SS221J
R 560		RS1/16SS473J
R 561		RS1/16SS103J
R 563		RS1/16SS0R0J
R 564		RS1/16SS472J
R 565		RS1/16SS0R0J
R 566		RAB4CQ473J
R 570		RS1/16SS221J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 571		RS1/16SS221J	R 701		RS1/16SS103J
R 573		RS1/16SS473J	R 702		RS1/16SS472J
R 574		RS1/16SS473J	R 703		RS1/16SS101J
R 575		RS1/16SS473J	R 704		RS1/16SS101J
R 576		RS1/16SS473J	R 705		RS1/16SS222J
R 577		RS1/16SS473J	R 706		RS1/16SS222J
R 578		RS1/16SS473J	R 707		RS1/16SS472J
R 579		RS1/16SS473J	R 708		RS1/16SS272J
R 580		RS1/16SS473J	R 709		RS1/16SS473J
R 581		RS1/16SS472J	R 710		RS1/16SS0R0J
R 584		RS1/16SS102J	R 711		RS1/16SS0R0J
R 586		RS1/16SS103J	R 714		RAB4CQ121J
R 587		RS1/16SS0R0J	R 715		RAB4CQ121J
R 591		RS1/16SS361J	R 716		RAB4CQ121J
R 595		RS1/16SS0R0J	R 717		RAB4CQ121J
R 596		RS1/16SS0R0J	R 718		RAB4CQ121J
R 597		RS1/16SS102J	R 719		RAB4CQ121J
R 598		RS1/16SS102J	R 720		RAB4CQ121J
R 599		RS1/16SS102J	R 721		RAB4CQ121J
R 610	(C,D,E)	RS1/16SS473J	R 722		RAB4CQ121J
R 611		RS1/16SS472J	R 724		RS1/16SS121J
R 614		RS1/16SS473J	R 728		RS1/10SR0R0J
R 615		RS1/16SS103J	R 729		RS1/10SR0R0J
R 616	(E)	RS1/10SR473J	R 730		RS1/10SR0R0J
R 617		RS1/16SS473J	R 731		RS1/16SS330J
R 619	(A,B,C,D)	RS1/16SS473J	R 732		RS1/16SS330J
R 620		RS1/16SS0R0J	R 733		RS1/16SS103J
R 622		RS1/16SS0R0J	R 734		RS1/16SS103J
R 627	(A,B,C,D)	RS1/16SS153J	R 735		RS1/16SS103J
R 628	(A,B,C,D)	RS1/16SS153J	R 736		RS1/16SS330J
R 629		RS1/16SS472J	R 737		RS1/16SS330J
R 630		RS1/16SS101J	R 741		RS1/16SS330J
R 631		RS1/16SS221J	R 742		RS1/16SS103J
R 632		RS1/16SS101J	R 743		RS1/16SS103J
R 633		RS1/16SS101J	R 744		RS1/16SS330J
R 634		RS1/16SS101J	R 745		RS1/16SS330J
R 635		RS1/16SS101J	R 746		RS1/16SS103J
R 636		RS1/16SS101J	R 747		RS1/16SS330J
R 637		RS1/16SS221J	R 748		RS1/16SS330J
R 638		RS1/16SS221J	R 749		RS1/16SS330J
R 639		RS1/16SS101J	R 750		RS1/16SS103J
R 640		RS1/16SS101J	R 753		RS1/16SS0R0J
R 642		RS1/16SS0R0J	R 754		RS1/16SS105J
R 643		RS1/16SS101J	R 755		RS1/16SS471J
R 644		RS1/16SS102J	R 758		RS1/10SR221J
R 645		RS1/16SS101J	R 798	(A,B,C,D)	RS1/10SR0R0J
R 646		RS1/16SS102J	R 799	(E)	RS1/16SS0R0J
R 647		RS1/16SS102J	R 801	(E)	RS1/16SS103J
R 648		RS1/16SS102J	R 802	(E)	RS1/16SS100J
R 649		RS1/16SS102J	R 803	(E)	RS1/16SS0R0J
R 650		RS1/16SS121J	R 804	(E)	RS1/16SS684J
R 651		RS1/16SS102J	R 805	(E)	RS1/16SS102J
R 652		RS1/16SS101J	R 800		RS1/16SS0R0J
R 653		RS1/16SS102J	R 810		RS1/10SR0R0J
R 654		RS1/16SS102J	R 851		RS1/16SS105J
R 655		RS1/16SS102J	R 852		RS1/16SS105J
R 657		RS1/4SA0R0J	R 853	(A,B,C,D)	RS1/16SS391J
R 658		RS1/4SA0R0J	R 853	(E)	RS1/16SS101J
R 659		RS1/10SR0R0J	R 860	(A)	RS1/16SS0R0J
R 672		RS1/16SS101J	R 861	(A)	RS1/16SS0R0J

Circuit Symbol and No.		Part No.
R 862	(A)	RS1/16SS0R0J
R 864		RS1/16SS103J
R 865	(A)	RS1/16SS332J
R 866	(A)	RS1/16SS182J
R 868		RS1/16SS103J
R 869	(A)	RS1/16SS0R0J
R 870		RS1/16SS101J
R 871	(A)	RS1/16SS102J
R 872	(A)	RS1/16SS121J
R 873		RS1/16SS472J
R 874		RS1/16SS101J
R 875		RS1/16SS472J
R 876	(A)	RS1/16SS121J
R 876	(B)	RS1/16SS0R0J
R 877	(A)	RS1/16SS121J
R 877	(B)	RS1/16SS0R0J
R 878	(A)	RS1/16SS121J
R 878	(B)	RS1/16SS0R0J
R 879	(A)	RS1/16SS121J
R 879	(B)	RS1/16SS0R0J
R 881	(A)	RS1/16SS332J
R 882	(A)	RS1/16SS182J
R 883	(A)	RS1/16SS102J
R 884	(A)	RS1/16SS121J
R 890		RS1/16SS0R0J
R 891		RS1/10SR0R0J
R 952	(A)	RS1/16SS101J
R 953	(A)	RS1/16SS101J
R 954	(A)	RS1/16SS101J
R 955	(A)	RS1/16SS101J
R 957	(A,B)	RS1/16SS101J
R 958	(A,B)	RS1/16SS101J
R 959	(A,B)	RS1/16SS101J
R 960	(A,B)	RS1/16SS101J
R 961	(A,B)	RS1/10SR102J
R 962	(A,B)	RS1/10SR221J
R 963	(A,B)	RS1/10SR121J
R 966		RS1/10SR0R0J
R 968		RS1/10SR0R0J
R 970		RS1/4SA0R0J
R 971		RS1/4SA0R0J
R 1001		RS1/16SS0R0J
R 1002		RS1/16SS221J
R 1004		RS1/16SS473J
R 1005		RS1/16SS221J
R 1006		RS1/16SS0R0J
R 1007		RS1/16SS0R0J
R 1008		RS1/10SR0R0J
R 1011		RS1/16SS0R0J
R 1012		RS1/16SS221J
R 1013		RS1/16SS0R0J
R 1014		RS1/10SR0R0J
R 1015		RS1/10SR0R0J
R 1016		RS1/4SA0R0J
R 1017		RS1/16SS473J
R 1018		RS1/16SS473J
R 1101		RS1/16SS104J
R 1104		RS1/16SS104J
R 1105		RS1/16SS221J
R 1106		RS1/16SS221J

Circuit Symbol and No.		Part No.
R 1107		RS1/16SS101J
R 1108		RS1/16SS221J
R 1109		RS1/16SS101J
R 1110		RS1/16SS102J
R 1112		RS1/16SS221J
R 1113		RS1/16SS104J
R 1114		RS1/16SS473J
R 1115		RS1/16SS472J
R 1116		RS1/16SS472J
R 1117		RS1/16SS472J
R 1120		RS1/16SS151J
R 1121		RS1/16SS151J
R 1122		RS1/16SS151J
R 1123		RS1/16SS0R0J
R 1126		RS1/16SS0R0J
R 1201		RS1/10SR222J
R 1203		RS1/16SS223J
R 1204		RS1/16SS223J
R 1205		RS1/10SR222J
R 1206		RS1/10SR221J
R 1207		RS1/10SR221J
R 1208		RS1/10SR0R0J
R 1209		RS1/10SR222J
R 1210		RS1/10SR222J
R 1211		RS1/10SR222J
R 1212		RS1/10SR222J
R 1213		RS1/16SS123J
R 1214		RS1/10SR222J
R 1215		RS1/10SR101J
R 1218		RS1/10SR0R0J
R 1231	(A,C)	RS1/16SS181J
R 1232	(A,C)	RS1/16SS181J
R 1233	(A,C)	RS1/16SS223J
R 1234	(A,C)	RS1/16SS223J
R 1235	(A,C)	RS1/16SS181J
R 1236	(A,C)	RS1/16SS181J
R 1237	(A,C)	RAB4CQ102J
R 1241	(A,B,C,D)	RS1/16SS821J
R 1241	(E)	RS1/16SS0R0J
R 1242	(A,B,C,D)	RS1/16SS821J
R 1242	(E)	RS1/16SS0R0J
R 1243	(A,B,C,D)	RS1/16SS821J
R 1243	(E)	RS1/16SS0R0J
R 1244	(A,B,C,D)	RS1/16SS821J
R 1244	(E)	RS1/16SS0R0J
R 1245	(A,B,C,D)	RS1/16SS821J
R 1245	(E)	RS1/16SS0R0J
R 1246	(A,B,C,D)	RS1/16SS821J
R 1246	(E)	RS1/16SS0R0J
R 1247		RS1/16SS223J
R 1248		RS1/16SS223J
R 1249		RS1/16SS223J
R 1250		RS1/16SS223J
R 1251		RS1/16SS223J
R 1252		RS1/16SS223J
R 1253		RS1/16SS0R0J
R 1255		RS1/16SS0R0J
R 1257	(A,B,C,D)	RS1/16SS0R0J
R 1258	(A,B,C,D)	RS1/16SS0R0J
R 1259	(A,B,C,D)	RS1/16SS0R0J

Circuit Symbol and No.		Part No.
R 1260	(A,B,C,D)	RS1/16SS0R0J
R 1261	(A,B,C,D)	RS1/16SS0R0J
R 1262	(A,B,C,D)	RS1/16SS0R0J
R 1263		RS1/10SR0R0J
R 1277	(E)	RS1/16SS471J
R 1278		RS1/16SS102J
R 1279	(E)	RS1/16SS471J
R 1280		RS1/16SS102J
R 1281		RS1/16SS101J
R 1282		RS1/16SS101J
R 1284		RS1/10SR0R0J
R 1286		RS1/16SS0R0J
R 1287		RS1/16SS0R0J
R 1301		RS1/16SS103J
R 1302		RS1/16SS223J
R 1303		RS1/16SS221J
R 1306		RS1/16SS103J
R 1307		RS1/16SS0R0J
R 1309		RS1/10SR0R0J
R 1313		RS1/10SR0R0J
R 1314		RS1/10SR0R0J

CAPACITORS

C 101	2 200 uF/16 V	CCH1405
C 102		CKSRYB103K50
C 103		CKSSYB102K50
C 104		CKSSYB102K50
C 105		CKSSYB102K50
C 106		CKSSYB102K50
C 107		CKSSYB102K50
C 108		CKSSYB102K50
C 109		CKSSYB102K50
C 110		CKSSYB102K50
C 111		CKSRYB104K50
C 122	1 uF	CCG1396
C 201		CCSSCH681J50
C 202		CEVW101M16
C 203	10 uF	CCG1192
C 204		CEVQW221M6R3
C 205	1 uF	CCG1396
C 206	10 uF	CCG1236
C 208		CCSSCH471J50
C 209		CCSSCH681J50
C 210	2 200 uF/16 V	CCH1405
C 211	10 uF	CCG1192
C 213	1 uF	CCG1396
C 214	10 uF	CCG1192
C 216	10 uF	CCG1236
C 217		CKSRYB105K10
C 218	10 uF	CCG1236
C 220	10 uF	CCG1236
C 221	10 uF	CCG1236
C 222		XCEVW221M10
C 223		CCSSCH221J50
C 224		CKSRYB105K10
C 225		CKSRYB105K10
C 227		CCSSCH391J50
C 228		CCSSCH681J50
C 230	10 uF	CCG1192

Circuit Symbol and No.		Part No.
C 231		CKSRYB104K16
C 232		CEVQW221M6R3
C 234	4.7 uF	CCG1212
C 236	10 uF	CCG1236
C 238	22 uF	CCG1254
C 239		CCSSCH100D50
C 240		CCSSCH100D50
C 241	10 uF	CCG1192
C 242		CEVW101M16
C 243	10 uF	CCG1236
C 245		CKSRYB104K16
C 247		CKSRYB105K10
C 248	1 uF	CCG1393
C 249		CKSRYB105K10
C 250		CKSRYB105K10
C 251		CKSRYB105K10
C 252	4.7 uF	CCG1212
C 253	1 uF	CCG1393
C 255	1 uF	DCH1246
C 257	10 uF	CCG1236
C 259	10 uF	CCG1192
C 260	10 uF	CCG1192
C 261		CKSSYB104K10
C 263	(E)	CKSRYB105K16
C 264	(E)	CKSRYB102K50
C 265	10 uF	CCG1236
C 266	10 uF	CCG1236
C 270	4.7 uF	CCG1212
C 302	(A,B,E)	CEVQW221M6R3
C 303	1 uF(A,B,E)	DCH1246
C 304	(A,B,E)	CKSRYB105K10
C 305	4.7 uF(A,B,E)	CCG1212
C 306	(A,B,E)	CKSSYB682K25
C 308	(A,B,E)	CKSRYB103K50
C 309	10 uF(A,B,E)	CCG1236
C 311	1 uF(A,B,E)	CCG1396
C 312	(A,B,E)	CEAT102M16
C 313		CKSRYB102K50
C 315		CKSRYB104K16
C 317		CKSRYB105K10
C 321		CKSRYB105K10
C 322	(E)	CKSRYB105K10
C 324	(E)	CKSRYB105K10
C 401	(B)	CKSRYB104K50
C 422	10 uF(B)	CCG1192
C 424	10 uF(B)	CCG1192
C 425	4.7 uF(A,B)	CCG1212
C 426	10 uF(A,B)	CCG1192
C 427	4.7 uF(A,B)	CCG1212
C 428	10 uF(A,B)	CCG1192
C 430	10 uF(A,B)	CCG1192
C 432	10 uF(A,B)	CCG1192
C 433	1 uF(A,B)	DCH1246
C 442	10 uF	CCG1192
C 444	10 uF	CCG1192
C 462	10 uF(E)	CCG1192
C 464	10 uF(E)	CCG1236
C 481		CEVQW470M6R3
C 482	1 uF	DCH1246
C 502		CKSSYB104K10

Circuit Symbol and No.		Part No.
C 503	4.7 uF	CCG1212
C 505		CKSSYB104K10
C 506	4.7 uF	CCG1212
C 507	4.7 uF	CCG1212
C 508		CKSSYB104K10
C 509	4.7 uF	CCG1212
C 510		CKSSYB104K10
C 511	4.7 uF	CCG1212
C 512		CKSSYB104K10
C 513	4.7 uF	CCG1212
C 514		CKSSYB104K10
C 517		CKSSYB104K10
C 518		CCSSCH100D50
C 519		CCSSCH100D50
C 520	4.7 uF	CCG1212
C 521		CKSSYB104K10
C 522	4.7 uF	CCG1212
C 523	4.7 uF	CCG1212
C 524	4.7 uF	CCG1212
C 525	10 uF	CCG1192
C 526		CKSSYB103K16
C 527	10 uF	CCG1192
C 528		CKSSYB103K16
C 529		CKSSYB104K10
C 530	4.7 uF	CCG1212
C 531	1 uF	DCH1246
C 532	1 uF	DCH1246
C 533	4.7 uF	CCG1212
C 534		CKSSYB104K10
C 535		XCEVW221M10
C 536		CCSSCH101J50
C 537		CKSSYB103K16
C 538	10 uF	CCG1192
C 539		CKSSYB103K16
C 540	10 uF	CCG1192
C 541		CKSSYB222K50
C 542		CKSSYB104K10
C 543	1 uF	DCH1246
C 544		CKSSYB473K16
C 545		CCSSCH100D50
C 546		CCSSCH120J50
C 551		CKSSYB104K10
C 552	4.7 uF	CCG1212
C 553	10 uF	CCG1192
C 555		CKSSYB103K16
C 556		CKSSYB104K10
C 557	(A,C)	CKSSYB104K10
C 558	(A,C)	CKSSYB104K10
C 559		CKSQYB224K50
C 560		CKSSYB103K16
C 565		CCSRCH330J50
C 566		CCSRCH330J50
C 569		CCSSCH101J50
C 571		CCSRCH330J50
C 572		CCSRCH330J50
C 573		CCSRCH101J50
C 574		CCSSCH101J50
C 575		CKSSYB104K10
C 577		CCSSCH101J50
C 578		CKSSYB104K10

Circuit Symbol and No.		Part No.
C 579		CKSSYB104K10
C 580		CKSRYB104K16
C 586		CCSSCH102J50
C 701		CKSSYB104K10
C 702		CKSSYB104K10
C 711	4.7 uF	CCG1212
C 712	1 uF	DCH1246
C 713		CKSSYB104K10
C 714	1 uF	DCH1246
C 715	1 uF	DCH1246
C 716	1 uF	DCH1246
C 718		CKSSYB104K10
C 719		CKSSYB104K10
C 720	1 uF	DCH1246
C 722		CKSSYB104K10
C 724		CKSRYB102K50
C 730	10 uF	CCG1192
C 731		CKSSYB104K10
C 741	2.2 uF	CCG1205
C 742		CKSSYB104K10
C 743		CKSSYB104K10
C 751	(A,C)	CKSRYB105K10
C 752	(A,C)	CKSRYB105K10
C 753		CKSRYB105K10
C 754		CKSRYB105K10
C 755		CKSRYB105K10
C 757		CKSRYB105K10
C 758		CKSRYB105K10
C 759	(A,C)	CKSRYB105K10
C 760	(A,C)	CKSRYB105K10
C 762		CEVQW470M6R3
C 763	(E)	CKSSYB104K10
C 764		CKSSYB104K10
C 765		CCSSCH151J50
C 766		CCSSCH151J50
C 767		CEVQW470M6R3
C 768		CEVQW470M6R3
C 771	10 uF	CCG1192
C 772		CKSSYB104K10
C 773		CKSSYB104K10
C 774		CCSSCH100D50
C 775		CCSSCH100D50
C 776		CKSRYB105K10
C 777		CKSRYB105K10
C 778		CKSRYB105K10
C 783	1 uF	DCH1246
C 790		CKSSYB102K50
C 791	10 uF	CCG1192
C 792		CKSSYB472K50
C 793		CKSSYB103K16
C 799		CKSSYB222K50
C 800		CKSSYB222K50
C 801	1 uF(E)	CCG1255
C 802	1 uF(E)	CCG1255
C 803	1 uF(E)	CCG1325
C 804	1 uF(E)	CCG1325
C 805	1 uF(E)	CCG1325
C 806	1 uF(E)	CCG1325
C 807	1 uF(E)	CCG1325
C 808	1 uF(E)	CCG1325

Circuit Symbol and No.		Part No.
C 809	1 uF(E)	CCG1255
C 810	1 uF(E)	CCG1255
C 811	(E)	CKSQYB104K50
C 813	1 uF(E)	CCG1255
C 814	1 uF(E)	CCG1255
C 853		CCSSCH100D50
C 854		CCSSCH471J50
C 858		CCSSCH220J50
C 859		CCSSCH331J50
C 860	(E)	CCSSCK2R0C50
C 861	(E)	CCSSCK1R0C50
C 862	(E)	CCSSCK1R0C50
C 863	(E)	CCSSCH120J50
C 866		CKSSYB224K6R3
C 867		CKSSYB102K50
C 870		CCSSCH102J50
C 871		CKSSYB104K10
C 872		CKSSYB104K10
C 874		CCSSCH390J50
C 878		CKSSYB152K50
C 882	1 uF(C,D,E)	DCH1246
C 885	(A,E)	CKSSYB104K10
C 886		CKSRYB102K50
C 887		CKSRYB104K50
C 888	(C,D,E)	CKSRYB104K16
C 889		CKSSYB104K10
C 890	2.2 uF	CCG1205
C 891	2.2 uF	CCG1205
C 892		CKSRYB105K10
C 951	(B)	CCSSCH101J50
C 952	(B)	CKSSYB104K10
C 954	(A)	CCSSCH150J50
C 955	(A)	CCSSCH150J50
C 958	10 uF(A,B)	CCG1192
C 959	(A,B)	CKSSYB104K10
C 960	10 uF(A,B)	CCG1192
C 961	(A,B)	CKSSYB104K10
C 969	(B)	CCSSCH150J50
C 970	(B)	CCSSCH150J50
C 1003		CKSRYB104K16
C 1004		CKSRYB104K16
C 1101		CKSSYB103K16
C 1105	1 uF	DCH1246
C 1106	1 uF	DCH1246
C 1107		CKSRYB104K16
C 1108		CKSRYB104K16
C 1111		CKSSYB102K50
C 1201		CCSRCH102J50
C 1202		CKSRYB104K50
C 1203		CKSRYB104K16
C 1204		CKSRYB105K10
C 1205		CCSRCH221J50
C 1206		CCSRCH221J50
C 1207		CKSRYB474K10
C 1210		CKSRYB105K10
C 1213		CKSRYB104K16
C 1214		CKSRYB102K50
C 1215		CKSRYB105K10
C 1217		CCSSCH121J50
C 1218		CKSRYB104K16

Circuit Symbol and No.		Part No.
C 1231	(A,C)	CKSRYB104K16
C 1232	(A,C)	CKSRYB105K16
C 1241	10 uF	CCG1192
C 1242	10 uF	CCG1192
C 1243	10 uF	CCG1192
C 1244	10 uF	CCG1192
C 1245	10 uF	CCG1192
C 1246	10 uF	CCG1192
C 1247		CCSSCH101J50
C 1248		CCSSCH101J50
C 1249		CCSSCH101J50
C 1250		CCSSCH101J50
C 1251		CCSSCH101J50
C 1252		CCSSCH101J50
C 1253		CKSSYB103K16
C 1254		CKSSYB104K10
C 1255		CKSSYB104K10
C 1257		CKSSYB102K50
C 1276		CKSRYB104K16
C 1277		CKSRYB104K16
C 1278		CKSRYB104K16
C 1279		CKSRYB104K16
C 1280		CKSSYB102K50
C 1281		CKSSYB102K50
C 1291	(E)	CKSRYB105K16
C 1292	(E)	CKSRYB102K50
C 1294	(E)	CCSSCH470J50
C 1295	(E)	CCSSCH470J50
C 1301		CKSRYB474K10
C 1302		CKSRYB474K10
C 1303		CKSRYB474K10
C 1304		CKSRYB474K10
C 1306		CKSRYB105K10
C 1310	10 uF/16 V	DCH1263
C 1311	2.2 uF	CCG1205
C 1312		CKSRYB104K50
C 1316		CKSRYB104K50
C 1317		CKSRYB105K10
C 1319		CKSSYB103K16
C 1328		CKSRYB105K10

B

Unit Number : QWM4240(A,C,D,E)
Unit Number : QWM4167(B)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	Driver IC	BU97540KV-M
IC 1802	Driver IC	BU97540KV-M
IC 1951	IC(A,C,D,E)	PNJ4833M
Q 1841	Bipolar Transistor	LSCR523UB
Q 1842	Bipolar Transistor	LSCR523UB
Q 1843	Bipolar Transistor	LSCR523UB
Q 1847	Bipolar Transistor	LSCR523UB
Q 1848	Bipolar Transistor	LSCR523UB
Q 1849	Bipolar Transistor	LSCR523UB
D 1841	LED	SMLVN6RGB2UK(B)
D 1842	LED	SMLVN6RGB2UK(B)

Circuit Symbol and No.		Part No.
D 1843	LED	SMLVN6RGB2UK(B)
D 1844	LED	SMLVN6RGB2UK(B)
D 1845	LED	SMLVN6RGB2UK(B)
D 1901	SMD Varistor	MLV0402ES012V0010N
D 1902	SMD Varistor	MLV0402ES012V0010N
L 1901	Inductor	CTF1713
L 1921	Inductor	CTF1786
L 1922	Inductor	CTF1786
L 1923	Inductor	CTF1786
S 1821	Push Switch	CSG1155
S 1822	Push Switch	CSG1155
S 1823	Push Switch	CSG1155
S 1825	Push Switch	CSG1155
S 1826	Push Switch	CSG1155
S 1827	Push Switch	CSG1155
S 1828	Push Switch	CSG1155
S 1829	Push Switch	CSG1155
S 1830	Push Switch	CSG1155
S 1831	Push Switch	CSG1155
S 1832	Push Switch	CSG1155
S 1833	Push Switch	CSG1155
S 1834	Push Switch	CSG1155
S 1835	Push Switch	CSG1155
S 1836	Encoder (MULTI-CONTROL)	CSD1168
CN1941	Connector	CKS6451
JA1901	Connector	CKS6443
JA1921	Jack	CKN1090
V 1801	LCD	CAW2057

RESISTORS

R 1801		RS1/16SS0R0J
R 1802		RS1/16SS0R0J
R 1803		RS1/16SS0R0J
R 1804		RS1/16SS0R0J
R 1805		RS1/16SS472J
R 1821		RS1/16SS273J
R 1841		RS1/16SS332J
R 1842		RS1/16SS152J
R 1843		RS1/16SS332J
R 1844		RS1/16SS152J
R 1845		RS1/16SS332J
R 1846		RS1/16SS152J
R 1847		RS1/16SS470J
R 1849		RS1/16SS470J
R 1851		RS1/16SS470J
R 1865		RS1/16SS332J
R 1866		RS1/16SS152J
R 1867		RS1/16SS332J
R 1868		RS1/16SS152J
R 1869		RS1/16SS332J
R 1870		RS1/16SS152J
R 1871		RS1/16SS390J
R 1873		RS1/16SS390J
R 1875		RS1/16SS390J
R 1877		RS1/16SS0R0J
R 1878		RS1/16SS0R0J
R 1879		RS1/16SS0R0J
R 1883		RS1/8SQ101J
R 1884		RS1/10SR221J
R 1885		RS1/10SR0R0J
R 1886		RS1/10SR0R0J
R 1887		RS1/16SS101J
R 1888		RS1/16SS101J
R 1941		RS1/10SR222J
R 1942		RS1/10SR222J
R 1943		RS1/10SR222J
R 1944		RS1/10SR222J
R 1952	(B)	RS1/16SS473J
R 1953	(A,C,D,E)	RS1/10SR101J

CAPACITORS

C 1801		CKSRYB105K10
C 1802		CKSRYB105K10
C 1901		CKSRYB105K10
C 1902		CKSRYB104K16
C 1904		CKSRYB105K16
C 1905		CKSRYB105K16
C 1906	4.7 uF	CCG1212
C 1951	10 uF(A,C,D,E)	CCG1192
C 1952		CCSSCH470J50
C 1953		CCSSCH470J50

C

Unit Number : CWX4269
Unit Name : CD Core Unit(S11.6VA)

MISCELLANEOUS

IC 201	IC	PEQ094A
IC 301	IC	BD8223EFV
Q 101	Transistor	2SA1577
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603
S 901	Spring Switch(HOME)	CSN1080
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

RESISTORS

R 101		RS1/10SR2R4J
R 102		RS1/10SR2R4J
R 103		RS1/10SR2R7J
R 108		RS1/16SS105J
R 109		RS1/16SS152J
R 214		RS1/16SS103J
R 215		RS1/16SS393J
R 216		RS1/16SS102J
R 217		RS1/16SS562J
R 218		RS1/16SS472J
R 229		RS1/16SS471J
R 232		RS1/16SS0R0J
R 237		RS1/16SS221J
R 240		RS1/16SS473J
R 245		RS1/16SS104J
R 254		RS1/16SS104J
R 260		RS1/16SS103J
R 264		RS1/16SS102J
R 281		RS1/16SS560J
R 282		RS1/16SS560J

Circuit Symbol and No.	Part No.
R 291	RS1/16SS560J
R 294	RS1/16SS471J
R 303	RS1/16SS123J
R 304	RS1/16SS123J
R 305	RS1/16SS102J
R 306	RS1/16SS472J
R 307	RS1/16SS102J
R 308	RS1/16SS472J
R 309	RS1/16SS473J
R 310	RS1/16SS472J
R 311	RS1/16SS472J
R 312	RS1/16SS472J
R 313	RS1/16SS472J
R 701	RS1/16SS101J
R 702	RS1/16SS101J
R 706	RS1/16SS221J

CAPACITORS

C 104	CKSQYB475K6R3
C 110	CKSSYB104K10
C 111	CKSSYB103K16
C 203	CKSSYB104K10
C 205	CKSRYB105K10
C 209	CKSRYB104K16
C 210	CKSSYB104K10
C 211	CKSSYB104K10
C 212	CKSSYB104K10
C 213	CKSSYB332K50
C 214	CKSSYB473K16
C 215	CKSSYB104K10
C 216	CKSSYB152K50
C 217	CCSSCH390J50
C 218	CCSSCH5R0C50
C 219	CKSSYB104K10
C 220	CKSSYB104K10
C 221	CKSSYB104K10
C 222	CKSSYB104K10
C 223	CCSSCH680J50
C 224	CCSSCH470J50
C 225	CKSSYB103K16
C 228	CCSSCH180J50
C 229	CKSSYB104K10
C 233	CKSSYB103K16
C 236	CKSSYB104K10
C 238	CKSRYB104K16
C 299	CKSSYB104K10
C 302	CKSSYB102K50
C 303	CKSSYB102K50
C 304	CKSSYB223K16
C 305	CKSSYB104K10
C 306	CKSSYB104K10
C 307	CKSRYB105K10
C 308	CKSRYB105K10
C 710	CKSSYB102K50