9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by "* " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to ▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING

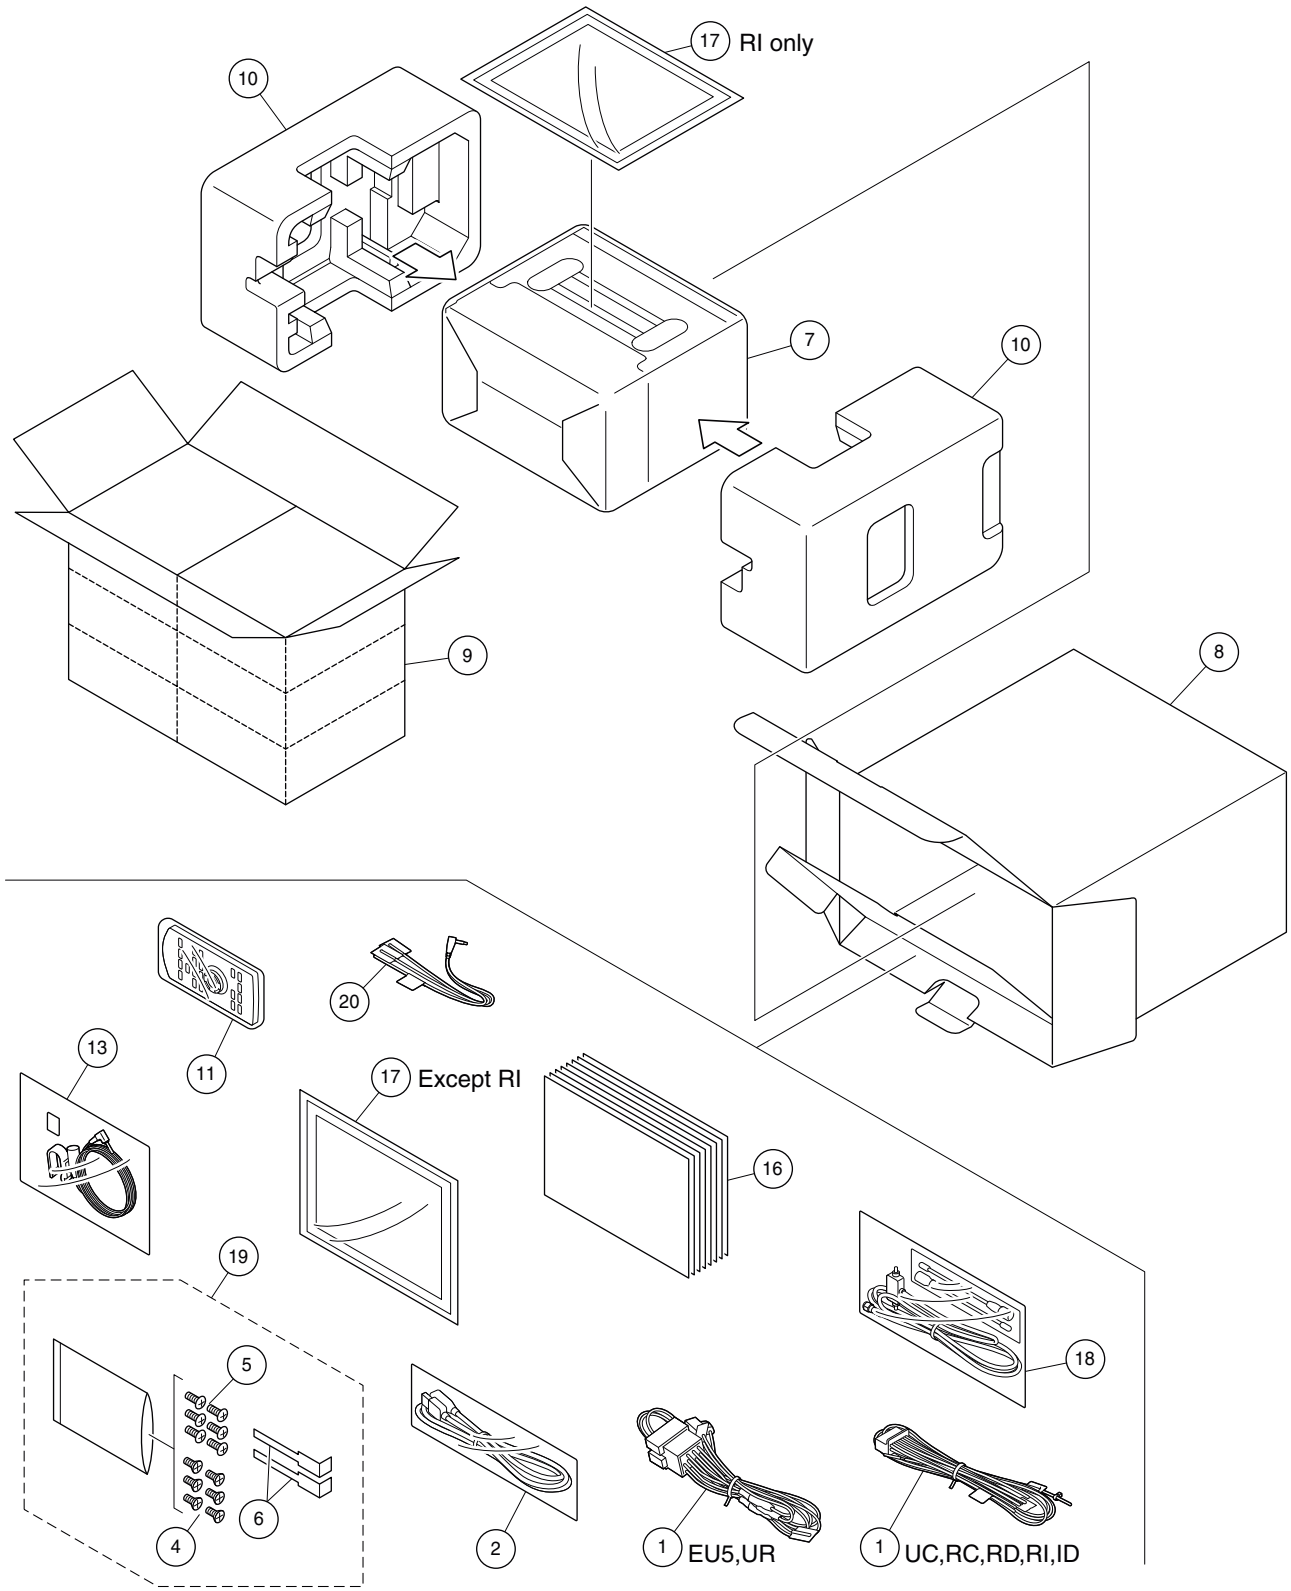

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	See Contrast table (2)
	2	USB Extended Cable	CDP1587
	3	•••••	
	4	Screw (M5 x 9)	See Contrast table (2)
	5	Screw (M5 x 9)	CBA2384
	6	Handle	See Contrast table (2)
	7	Cover	See Contrast table (2)
	8	Unit Box	See Contrast table (2)
	9	Contain Box	See Contrast table (2)
	10	Protector	See Contrast table (2)
	11	Card Remote Control Unit	See Contrast table (2)
	12	•••••	
	13	Microphone Assy (3 m)	CPM1113
	14	•••••	
	15	•••••	
	16-1	Quick Start Guide	See Contrast table (2)
	16-2	Installation Manual	See Contrast table (2)
*	16-3	Warranty Card	See Contrast table (2)
*	16-4	Caution Card	See Contrast table (2)
	16-5	Owner's Manual	See Contrast table (2)
	17	Panel	See Contrast table (2)
	18	Rod Antenna	See Contrast table (2)
	19	Accessory Assy	See Contrast table (2)
	20	Cord Assy	See Contrast table (2)

(2) CONTRAST TABLE

AVH-2550NEX/XNUC, AVH-2500NEX/XNUC, AVH-Z5200DAB/XNEU5, AVH-Z5200BT/XNUR, AVH-Z5250BT/XNRC, AVH-Z5250TV/XNRD, AVH-Z5250BT/XNRD, AVH-Z5250BT/XNRI and AVH-Z5290BT/XNID are constructed the same except for the following:

Mark	No.	Description	AVH-2550NEX/XNUC	AVH-2500NEX/XNUC	AVH-Z5200DAB/XNEU5
	1	Cord Assy	CDP1665	CDP1665	CDP1670
	4	Screw (M5 x 9)	CBA2383	CBA2383	CBA2383
	6	Handle	Not used	Not used	CND7909
	7	Cover	CEG1359	CEG1359	CEG1356
	8	Unit Box	CHG9696	CHG9692	CHG9695
	9	Contain Box	CHL9708	CHL9705	CHL9707
	10	Protector	CHP4863	CHP4863	CHP4864
	11	Card Remote Control Unit	CXE5116	Not used	Not used
	16-1	Quick Start Guide	CRD5129	CRD5129	CRD5127
	16-2	Installation Manual	CRD5130	CRD5130	CRD5128
*	16-3	Warranty Card	QRY3001	QRY3001	CRY1376
*	16-4	Caution Card	Not used	Not used	CRP1481
	16-5	Owner's Manual	See Contents of Web IM (3)	See Contents of Web IM (3)	See Contents of Web IM (3)
	17	Panel	Not used	Not used	Not used
	18	Rod Antenna	Not used	Not used	Not used
	19	Accessory Assy	*CEC7756	*CEC7756	CEW3026
	20	Cord Assy	Not used	Not used	Not used

Mark	No.	Description	AVH-Z5200BT/XNUR	AVH-Z5250BT/XNRC	AVH-Z5250TV/XNRD
	1	Cord Assy	CDP1670	CDP1665	CDP1665
	4	Screw (M5 x 9)	CBA2383	Not used	Not used
	6	Handle	CND7909	Not used	Not used
	7	Cover	CEG1356	CEG1356	CEG1356
	8	Unit Box	CHG9701	CHG9697	CHG9693
	9	Contain Box	CHL9713	CHL9709	CHL9706
	10	Protector	CHP4864	CHP4863	CHP4863
	11	Card Remote Control Unit	Not used	CXE5116	CXE5116
	16-1	Quick Start Guide	Not used	Not used	Not used
	16-2	Installation Manual	Not used	Not used	Not used
*	16-3	Warranty Card	CRY1376	Not used	Not used
*	16-4	Caution Card	Not used	Not used	Not used
	16-5	Owner's Manual	CRB5220	CRD5131	CRD5132
	17	Panel	Not used	CNS9475	CNS9475
	18	Rod Antenna	Not used	Not used	CXE9491
	19	Accessory Assy	CEW3026	*CEC7757	*CEC7757
	20	Cord Assy	Not used	CDP1805	Not used

Mark	No.	Description	AVH-Z5250BT/XNRD	AVH-Z5250BT/XNRI	AVH-Z5290BT/XNID
	1	Cord Assy	CDP1665	CDP1665	CDP1665
	4	Screw (M5 x 9)	Not used	Not used	Not used
	6	Handle	Not used	CND7909	Not used
	7	Cover	CEG1356	CEG1356	CEG1356
	8	Unit Box	CHG9698	CHG9702	CHG9699
	9	Contain Box	CHL9710	CHL9714	CHL9711
	10	Protector	CHP4863	CHP4864	CHP4863
	11	Card Remote Control Unit	CXE5116	CXE5116	CXE5116
	16-1	Quick Start Guide	Not used	Not used	CRB5221
	16-2	Installation Manual	Not used	Not used	Not used
*	16-3	Warranty Card	Not used	Not used	CRY1304
*	16-4	Caution Card	Not used	Not used	Not used
	16-5	Owner's Manual	CRD5132	CRD5133	See Contents of Web IM (3)
	17	Panel	CNS9475	CNS9475	CNS9475
	18	Rod Antenna	Not used	Not used	Not used
	19	Accessory Assy	*CEC7757	CEW3027	*CEC7757
	20	Cord Assy	Not used	CDP1805	Not used

Owner's Manual, Quick Start Guide, Installation Manual

Part No.	Language
CRB5220	Russian
CRB5221	English
CRD5127	English, French, Italian, Spanish (Espanol), German, Dutch
CRD5128	English, French, Italian, Spanish (Espanol), German, Dutch
CRD5129	English, French, Spanish (Espanol)
CRD5130	English, French, Spanish (Espanol)
CRD5131	English, Traditional Chinese, Indonesian, Thai
CRD5132	English, Spanish (Espanol), Portuguese (B)
CRD5133	English, Arabic, Persian

(3) CONTENTS OF Web IM

Part No.	Language
*OPMWEB_AVH2500NEXXNUC_en_A	(UC model) English
*OPMWEB_AVH2500NEXXNUC_frca_A	(UC model) French
*OPMWEB_AVH2500NEXXNUC_esmx_A	(UC model) Spanish (Espanol)
*OPMWEB_AVHZ5200DABXNEU5_engb_A	(EU5 model) English
*OPMWEB_AVHZ5200DABXNEU5_fr_A	(EU5 model) French
*OPMWEB_AVHZ5200DABXNEU5_it_A	(EU5 model) Italian
*OPMWEB_AVHZ5200DABXNEU5_es_A	(EU5 model) Spanish (Espanol)
*OPMWEB_AVHZ5200DABXNEU5_de_A	(EU5 model) German
*OPMWEB_AVHZ5200DABXNEU5_nl_A	(EU5 model) Dutch
*OPMWEB_AVHZ5200DABXNEU5_sv_A	(EU5 model) Swedish
*OPMWEB_AVHZ5200DABXNEU5_no_A	(EU5 model) Norwegian
*OPMWEB_AVHZ5200DABXNEU5_fi_A	(EU5 model) Finnish
*OPMWEB_AVHZ5200DABXNEU5_da_A	(EU5 model) Danish
*OPMWEB_AVHZ5200DABXNEU5_pt_A	(EU5 model) Portuguese
*OPMWEB_AVHZ5200DABXNEU5_el_A	(EU5 model) Greek
*OPMWEB_AVHZ5200DABXNEU5_tr_A	(EU5 model) Turkish
*OPMWEB_AVHZ5290BTXNID_engb_A	(ID model) English

Above operation manuals are supplied in PDF files by the WEB.
Regarding the availability of paper manual, contact Pioneer Service representative in your region.

9.2 EXTERIOR (1)

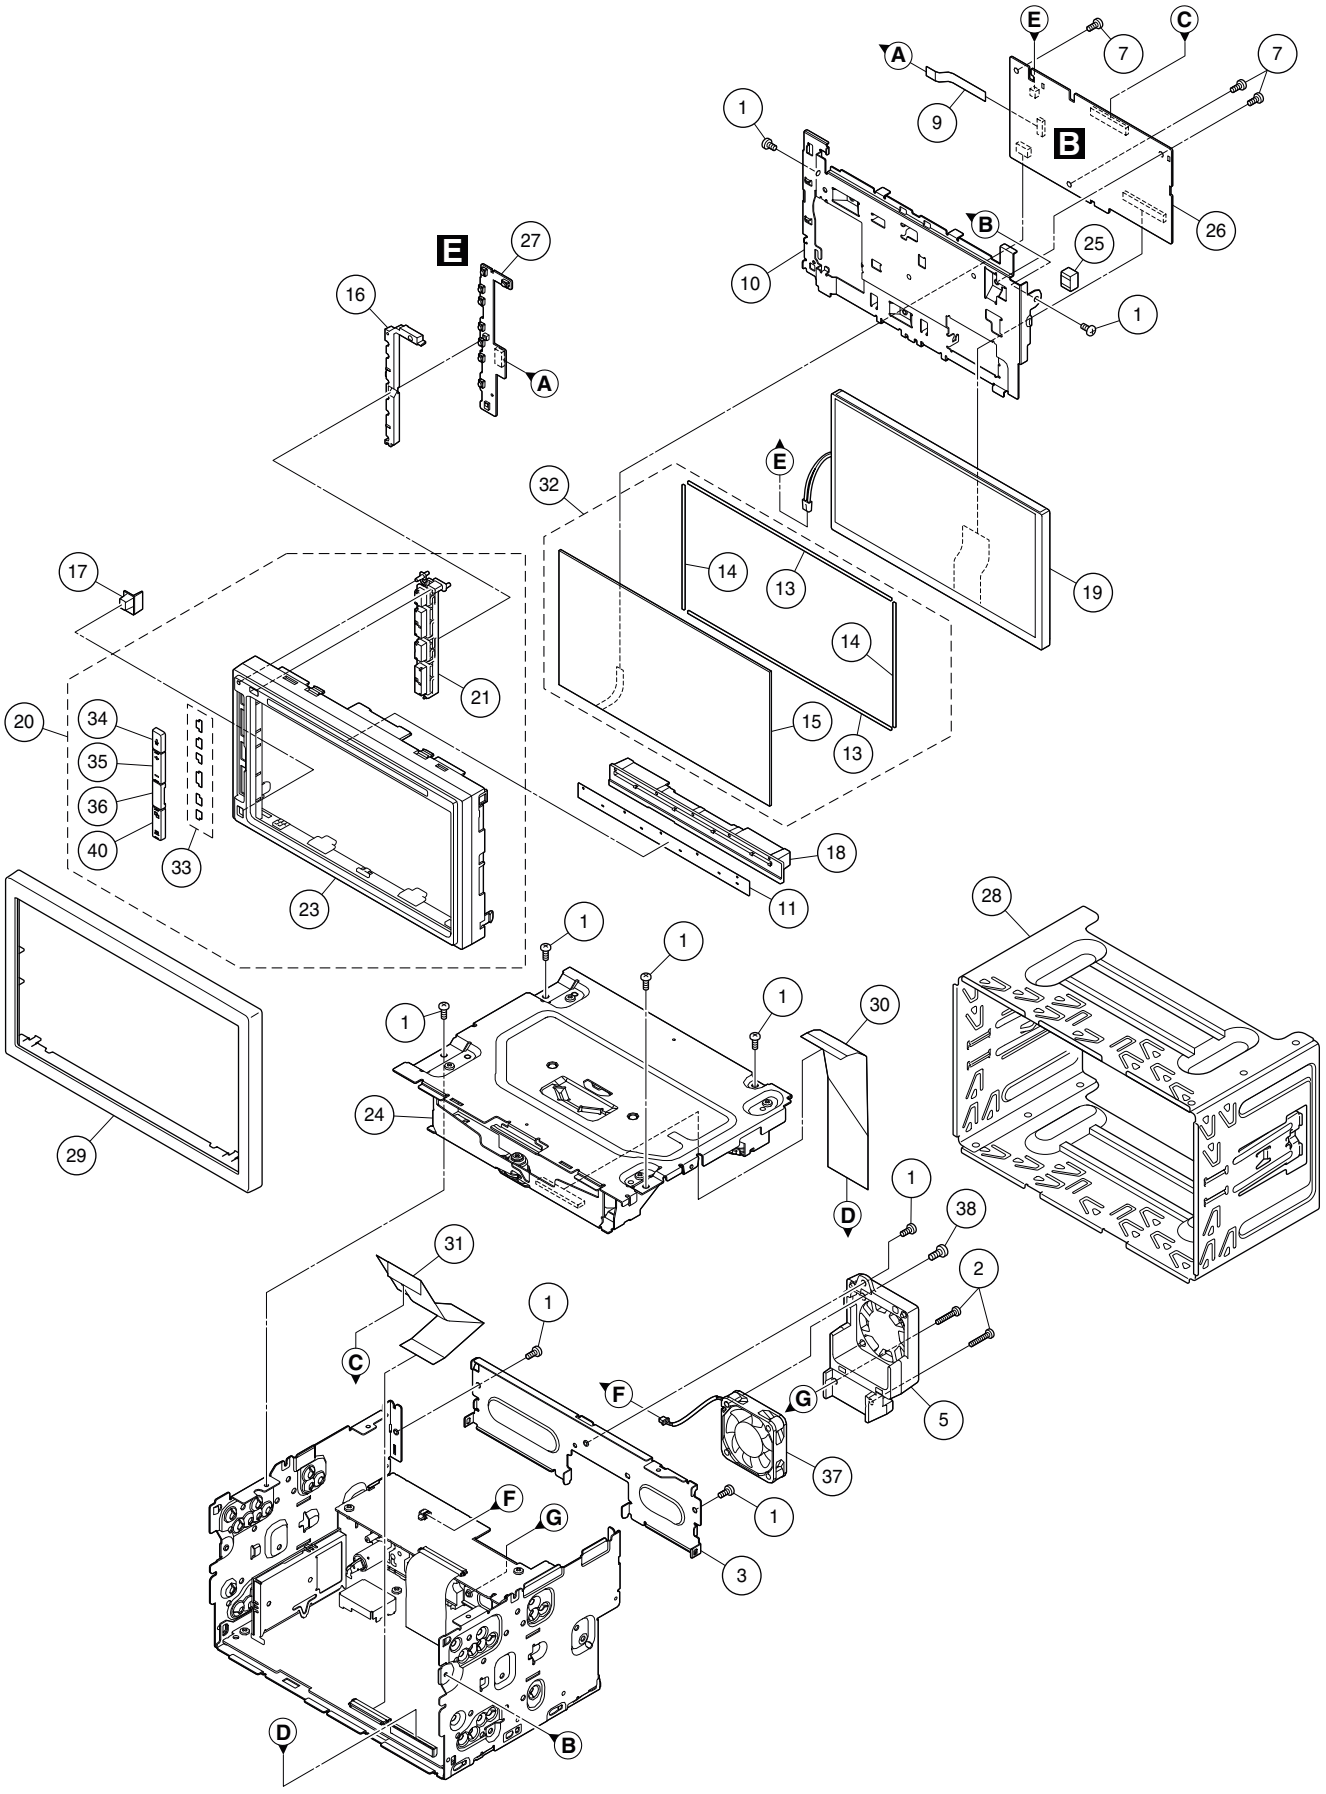

(1) EXTERIOR (1) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	Screw	BSZ26P160FTC
	3	Holder	CND8063
	4	•••••	
	5	Heat Sink	CNR2254
	6	•••••	
	7	Screw	BSZ26P060FTC
	8	•••••	
	9	FFC	CDD1240
	10	Holder	CND8096
	11	Cover	CNN5641
	12	•••••	
	13	Cushion	CNN5639
	14	Cushion	CNN4272
	15	Touch Panel	CSX1388
	16	Lighting Conductor	CNW4038
	17	Lighting Conductor	CNW4040
	18	Holder	CNW4047
	19	TFT LCD	CWX4959
	20	Grille Assy	See Contrast table (2)
*	21	Button (EJECT)	CAI5019
	22	•••••	
*	23	Grille	See Contrast table (2)
	24	DVD Mechanism Module (LS2.5)	CXK8100
	25	Gasket	CNN5699
	26	Service Unit (Monitor)	See Contrast table (2)
	27	Service Unit (Keyboard)	CXY2628
	28	Holder	See Contrast table (2)
	29	Panel	See Contrast table (2)
	30	FFC	CDD1296
	31	FFC	CDD1239
	32	Touch Panel Unit	CXF2340
*	33	DS Tape	CNN5642
*	34	Button (MIC)	CAI5021
*	35	Button (VOL)	CAI5022
*	36	Button (HOME)	CAI5023
	37	Motor	CXM1449
	38	Screw	BPZ30P080FTC
	39	•••••	
*	40	Button (SCREEN)	CAI5024

(2) CONTRAST TABLE

AVH-2550NEX/XNUC, AVH-2500NEX/XNUC, AVH-Z5200DAB/XNEU5, AVH-Z5200BT/XNUR, AVH-Z5250BT/XNRC, AVH-Z5250TV/XNRD, AVH-Z5250BT/XNRD, AVH-Z5250BT/XNRI and AVH-Z5290BT/XNID are constructed the same except for the following:

Mark	No.	Description	AVH-2550NEX/XNUC	AVH-2500NEX/XNUC	AVH-Z5200DAB/XNEU5
	20	Grille Assy	CXF2361	CXF2360	CXF2022
*	23	Grille	CNU4255	CNU4257	CNU4256
	26	Service Unit (Monitor)	CXY2618	CXY2618	CXY2619
	28	Holder	Not used	Not used	CND7859
	29	Panel	Not used	Not used	CNU2645

Mark	No.	Description	AVH-Z5200BT/XNUR	AVH-Z5250BT/XNRC	AVH-Z5250TV/XNRD
	20	Grille Assy	CXF2364	CXF2365	CXF2362
*	23	Grille	CNU4262	CNU4261	CNU4258
	26	Service Unit (Monitor)	CXY2618	CXY2618	CXY2618
	28	Holder	CND7859	Not used	Not used
	29	Panel	CNU2645	Not used	Not used

Mark	No.	Description	AVH-Z5250BT/XNRD	AVH-Z5250BT/XNRI	AVH-Z5290BT/XNID
	20	Grille Assy	CXF2365	CXF2365	CXF2368
*	23	Grille	CNU4261	CNU4261	CNU4260
	26	Service Unit (Monitor)	CXY2618	CXY2618	CXY2618
	28	Holder	Not used	CND7859	Not used
	29	Panel	Not used	CNU2645	Not used

9.3 EXTERIOR (2)

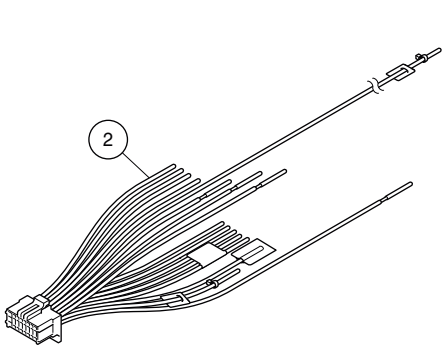

UC,RC,RD,RI,ID

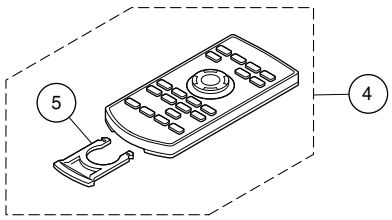

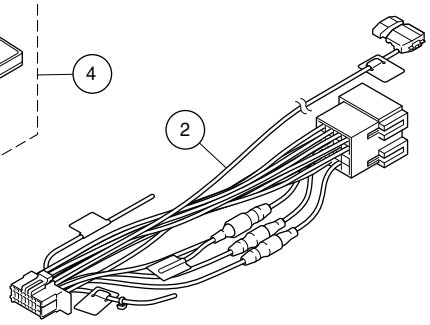

EU5,UR

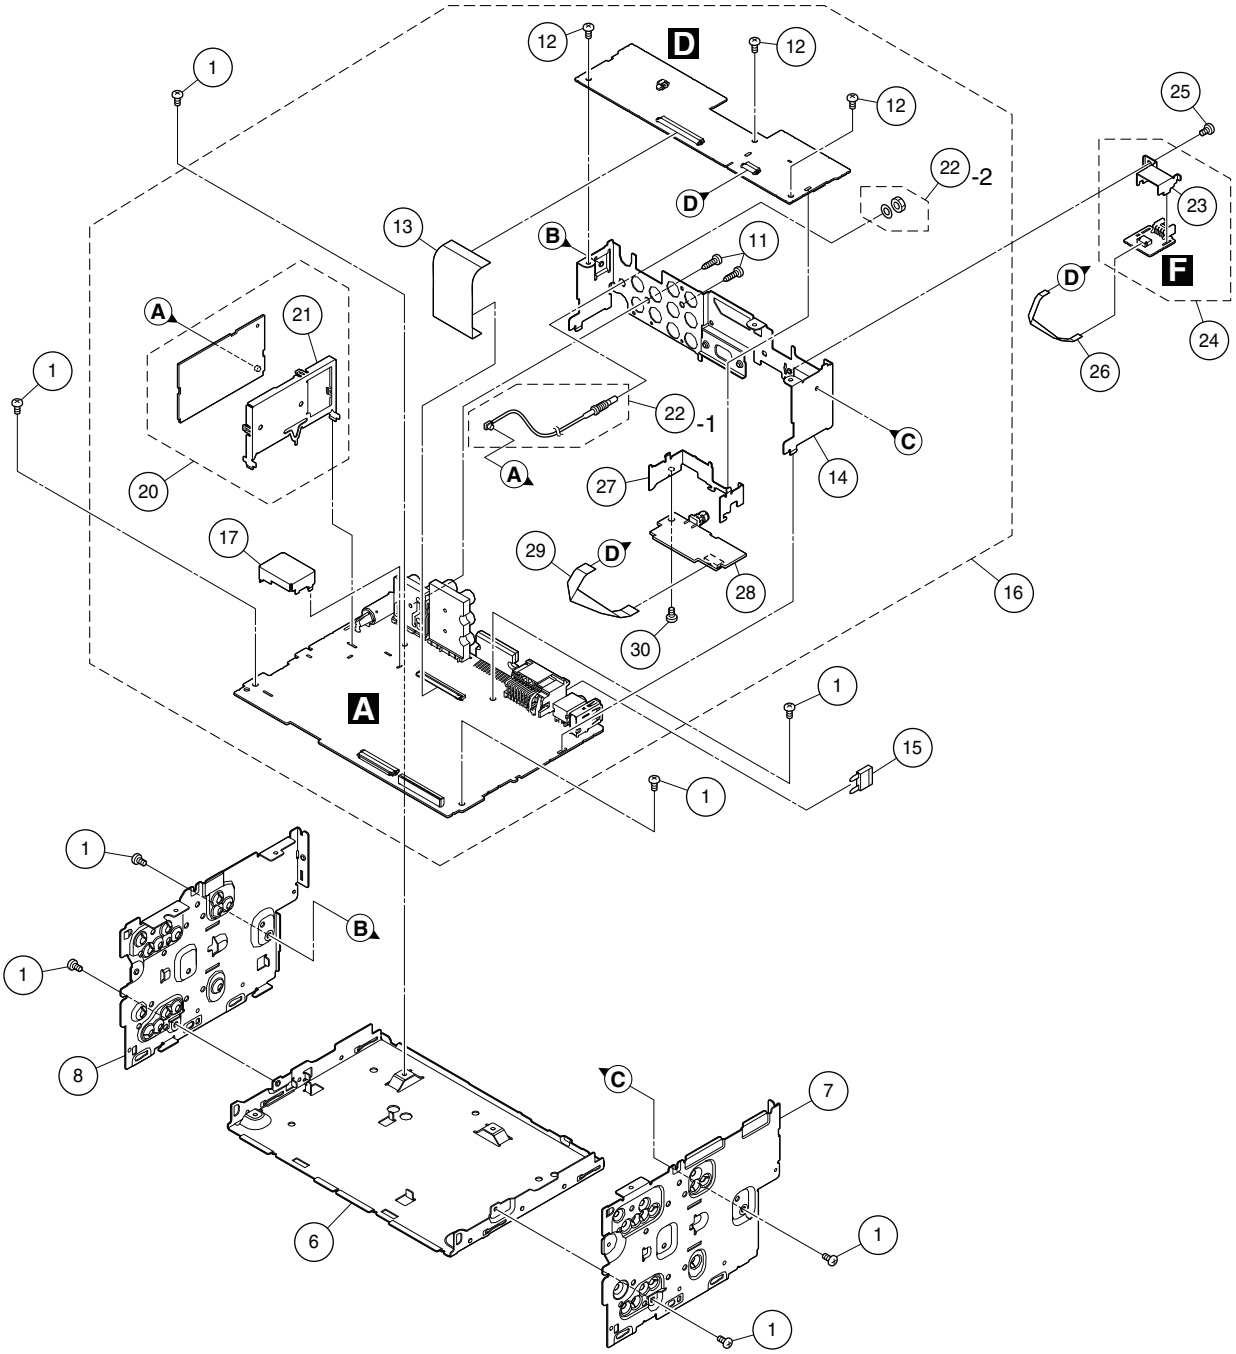

(1) EXTERIOR (2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	Cord Assy	See Contrast table (2)
	3	•••••	
	4	Card Remote Control Unit	See Contrast table (2)
	5	Battery Cover	See Contrast table (2)
	6	Chassis	CNA3468
	7	Bracket	CND8061
	8	Bracket	CND8062
	9	•••••	
	10	•••••	
	11	Screw	BPZ26P080FTC
	12	Screw	BSZ26P060FTC
	13	FFC	See Contrast table (2)
	14	Holder	See Contrast table (2)
⚠	15	Fuse (10 A)	YEK5001
	16	Service Unit (Mother I/F)	See Contrast table (2)
	17	Shield Case	See Contrast table (2)
	18	•••••	
	19	•••••	
	20	BE Core Unit (U1801)	See Contrast table (2)
	21	Holder	See Contrast table (2)
	22	Antenna Cable Assy	See Contrast table (2)
	23	Holder	See Contrast table (2)
	24	Service Unit (I-Data)	See Contrast table (2)
	25	Screw	See Contrast table (2)
	26	FFC	See Contrast table (2)
	27	Holder	See Contrast table (2)
	28	TV Tuner	See Contrast table (2)
	29	FFC	See Contrast table (2)
	30	Screw	See Contrast table (2)

(2) CONTRAST TABLE

AVH-2550NEX/XNUC, AVH-2500NEX/XNUC, AVH-Z5200DAB/XNEU5, AVH-Z5200BT/XNUR, AVH-Z5250BT/XNRC, AVH-Z5250TV/XNRD, AVH-Z5250BT/XNRD, AVH-Z5250BT/XNRI and AVH-Z5290BT/XNID are constructed the same except for the following:

Mark	No.	Description	AVH-2550NEX/XNUC	AVH-2500NEX/XNUC	AVH-Z5200DAB/XNEU5
	2	Cord Assy	CDP1665	CDP1665	CDP1670
	4	Card Remote Control Unit	CXE5116	Not used	Not used
	5	Battery Cover	CNU1624	Not used	Not used
	13	FFC	CDD1220	CDD1219	CDD1219
	14	Holder	CND7745	CND8133	CND7746
	16	Service Unit (Mother I/F)	CXY2596	CXY2597	CXY2598
	17	Shield Case	CND7762	CND7762	CND7762
	20	BE Core Unit (U1801)	CWE2518	CWE2518	CWE2571 (WWR Tuner Unit)
	21	Holder	CND7288	CND7288	CND7288
	22	Antenna Cable Assy	Not used	Not used	CXE7975
	23	Holder	CND7760	Not used	Not used
	24	Service Unit (I-Data)	CXY3599	Not used	Not used
	25	Screw	BSZ26P060FTC	Not used	Not used
	26	FFC	CDD1222	Not used	Not used
	27	Holder	Not used	Not used	Not used
	28	TV Tuner	Not used	Not used	Not used
	29	FFC	Not used	Not used	Not used
	30	Screw	Not used	Not used	Not used

Mark	No.	Description	AVH-Z5200BT/XNUR	AVH-Z5250BT/XNRC	AVH-Z5250TV/XNRD
	2	Cord Assy	CDP1670	CDP1665	CDP1665
	4	Card Remote Control Unit	Not used	CXE5116	CXE5116
	5	Battery Cover	Not used	CNU1624	CNU1624
	13	FFC	CDD1219	CDD1219	CDD1220
	14	Holder	CND7746	CND7746	CND8185
	16	Service Unit (Mother I/F)	CXY2601	CXY2602	CXY2599
	17	Shield Case	Not used	Not used	Not used
	20	BE Core Unit (U1801)	Not used	Not used	Not used
	21	Holder	Not used	Not used	Not used
	22	Antenna Cable Assy	Not used	Not used	Not used
	23	Holder	Not used	Not used	Not used
	24	Service Unit (I-Data)	Not used	Not used	Not used
	25	Screw	Not used	Not used	Not used
	26	FFC	Not used	Not used	Not used
	27	Holder	Not used	Not used	CND7761
	28	TV Tuner	Not used	Not used	CWE2519
	29	FFC	Not used	Not used	CDD1221
	30	Screw	Not used	Not used	BSZ26P060FTC

Mark	No.	Description	AVH-Z5250BT/XNRD	AVH-Z5250BT/XNRI	AVH-Z5290BT/XNID
	2	Cord Assy	CDP1665	CDP1665	CDP1665
	4	Card Remote Control Unit	CXE5116	CXE5116	CXE5116
	5	Battery Cover	CNU1624	CNU1624	CNU1624
	13	FFC	CDD1219	CDD1219	CDD1219
	14	Holder	CND7746	CND7746	CND7746
	16	Service Unit (Mother I/F)	CXY2603	CXY2604	CXY2605
	17	Shield Case	Not used	Not used	Not used
	20	BE Core Unit (U1801)	Not used	Not used	Not used
	21	Holder	Not used	Not used	Not used
	22	Antenna Cable Assy	Not used	Not used	Not used
	23	Holder	Not used	Not used	Not used
	24	Service Unit (I-Data)	Not used	Not used	Not used
	25	Screw	Not used	Not used	Not used
	26	FFC	Not used	Not used	Not used
	27	Holder	Not used	Not used	Not used
	28	TV Tuner	Not used	Not used	Not used
	29	FFC	Not used	Not used	Not used
	30	Screw	Not used	Not used	Not used

9.4 DVD MECHANISM MODULE (1)

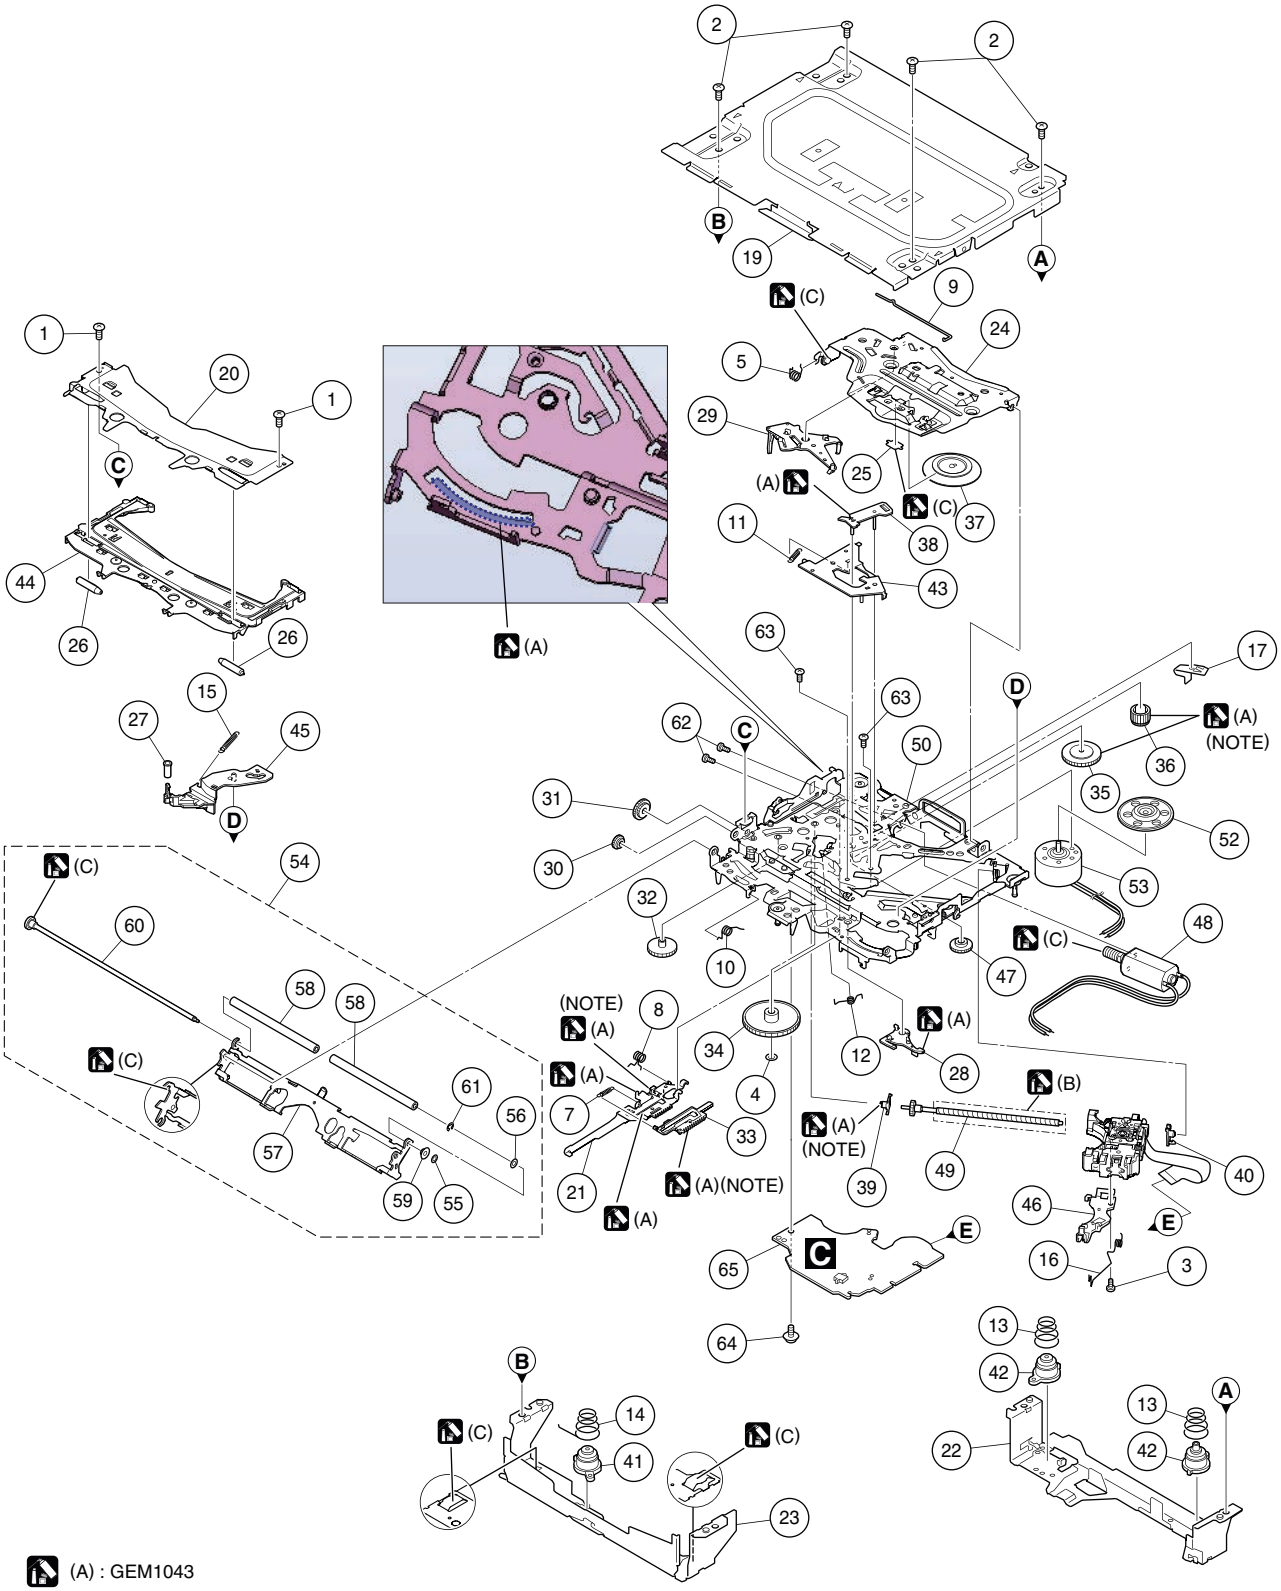

DVD MECHANISM MODULE (1) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ20P040FTC
	2	Screw	BSZ26P060FTC
	3	Screw (M2 x 4)	CBA1835
	4	Washer	CBF1038
	5	Spring	CBH2855
	6	•••••	
	7	Spring	CBH3010
	8	Spring	CBH3011
	9	Spring	CBH3014
	10	Spring	CBH3015
	11	Spring	CBH3016
	12	Spring	CBH3017
	13	Spring	CBH3019
	14	Spring	CBH3086
	15	Coil Spring	CBH3095
	16	Torsion Spring	CBH3096
	17	Leaf Spring	CBL1824
	18	•••••	
	19	Case	CNB3928
	20	Bracket	CND4553
	21	Lever	CND7225
	22	Bracket	CND5710
	23	Bracket	CND6127
	24	Arm	CND7224
	25	Sheet	CNN3678
	26	Roller	CNW1172
	27	Roller	CNW1175
	28	Arm	CNW1177
	29	Arm	CNW1178
	30	Gear	CNW1180
	31	Gear	CNW1181
	32	Gear	CNW1183
	33	Rack	CNW1184
	34	Gear	CNW1185
	35	Gear	CNW1186
	36	Gear	CNW1187
	37	Clamper	CNW1190
	38	Arm	CNW1192
	39	Holder	CNW1193
	40	Holder	CNW1194
	41	Damper	CNW2439
	42	Damper	CNW2440
	43	Arm	CNW1726
	44	Guide	CNW3489
	45	Arm	CNW2241
	46	Rack	CNW2265
	47	Gear	CNW2287
	48	Motor Unit	CXF1847
	49	Screw Unit	CXC8894
	50	Chassis Unit	CXE9532
	51	•••••	
*	52	Support Wheel	CNW2052
*	53	Spindle Motor	EXM5003
	54	Arm Assy	CXE9036
	55	Washer	CBF1037
	56	Washer	CBF1038
	57	Arm	CND6779
	58	Roller	CNW2500
	59	Collar	CNW2444
	60	Gear Unit	CXE8952
	61	Washer	YE15FTC
	62	Screw	JFZ20P025FTC
	63	Screw	JGZ17P020FTC
	64	Screw (M2 x 5)	EBA1028
	65	DVD Core Unit	CWX4609

Pickup, Spindle Motor and Support Wheel are not available as service parts, because they need adjustment by special equipment after replacing.

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A: AVH-2550NEX/XNUC
B: AVH-2500NEX/XNUC
C: AVH-Z5200DAB/XNEU5
D: AVH-Z5200BT/XNUR
E: AVH-Z5250BT/XNRC
F: AVH-Z5250TV/XNRD
G: AVH-Z5250BT/XNRD
H: AVH-Z5250BT/XNRI
I: AVH-Z5290BT/XNID

Circuit Symbol and No.	Part No.
Unit Number :	**CXY2596 (A)**
Unit Number :	**CXY2597 (B)**
Unit Number :	**CXY2598 (C)**
Unit Number :	**CXY2601 (D)**
Unit Number :	**CXY2602 (E)**
Unit Number :	**CXY2599 (F)**
Unit Number :	**CXY2603 (G)**
Unit Number :	**CXY2604 (H)**
Unit Number :	**CXY2605 (I)**
Unit Name :	**Service Unit (Mother I/F)**
Unit Number :	**CXY2618 (A, B, D, E, F, G, H, I)**
Unit Number :	**CXY2619 (C)**
Unit Name :	**Service Unit (Monitor)**
Unit Number :	**CWX4609**
Unit Name :	**DVD Core Unit**
Unit Number :	**CXY2628**
Unit Name :	**Service Unit (Keyboard)**
Unit Number :	**CXY3599 (A)**
Unit Name :	**Service Unit (I-Data)**

Circuit Symbol and No.	Part No.
Service Unit (Mother I/F)	
Consists of	
Mother PCB	
Interface PCB	

A D

Unit Number :	**CXY2596 (A)**
Unit Number :	**CXY2597 (B)**
Unit Number :	**CXY2598 (C)**
Unit Number :	**CXY2601 (D)**
Unit Number :	**CXY2602 (E)**
Unit Number :	**CXY2599 (F)**
Unit Number :	**CXY2603 (G)**
Unit Number :	**CXY2604 (H)**
Unit Number :	**CXY2605 (I)**
Unit Name :	**Service Unit (Mother I/F)**

MISCELLANEOUS

IC	101	Regulator IC	NJW4181U3-33B
IC	111	Regulator IC	NJW4184DL3-08A
IC	141	Regulator IC	MM3411A33N
IC	161	Regulator IC	RP108J081D-AE
IC	231	Regulator IC	MM1856A50N
IC	271	Regulator IC	MM1856A58N
IC	301	Regulator IC (A, B, C)	MM3479A33P
IC	302	Regulator IC (A, B, C)	MM3479A12P
IC	303	Regulator IC (C)	MM3479A33P
IC	304	Regulator IC	MM3479A33P
IC	351	DC/DC CONV IC	KBD9876EFJ
IC	401	IC	AN33012UA
IC	451	DC/DC CONV IC	MM3630BR
IC	501	DC/DC CONV IC	TLV62065TDSGQ1
*IC	601	Flash Blank UC IC	MN103LFA5RXW
IC	901	U-PRO IC	MN2KSC100M
IC	1101	CONV IC	AK5720VT
IC	1131	IC	CA0024AN
IC	1191	IC	337S3959
IC	1301	Flash ROM Unit (A)	CVQ1219
IC	1301	Flash ROM Unit (B)	CVQ1218

Circuit Symbol and No.			Part No.
IC	1301	Flash ROM Unit (C, D, E, F, G, H, I)	CVQ1220
IC	1321	Flash Memory IC (A, B)	W25Q64JVSSIQ
IC	1321	Flash Memory IC (C, D, E, F, G, H, I)	W25Q16JVSSIQ
IC	1341	Flash ROM Unit	CVQ1222
IC	1401	RAM IC	W631GG6MB-12
IC	1402	RAM IC	W631GG6MB-12
IC	1501	IC	AK4223VQ
IC	1601	OP AMP IC	NJW1240V
IC	1721	Logic IC	TC7SH32FUS2
IC	1901	Logic IC	TC7SZU04FUS2
IC	2101	Logic IC	TC7SZ32FUS2
IC	2451	Interface IC	STCC2540IQ
IC	2501	Comparator IC	TC75S57FU
IC	4011	Variable Regulator	BA00CC0WFP
IC	4021	IC	CA0023AN
IC	4022	IC	CA0023AN
IC	4131	Buffer Logic IC (A, B)	TC7SH126FUS1
IC	4132	AND Logic IC (A, B)	MC74VHC1GT08DFG
IC	4171	AND Logic IC (A)	MC74VHC1GT08DFG
IC	4172	AND Logic IC (A)	MC74VHC1GT08DFG
IC	4201	OP AMP IC	NJU7043V
IC	8401	Tuner IC (A, B)	TEF6688HN-V102
IC	8401	Tuner IC (C, D, E, F, G, H, I)	TEF6686HN-V102
IC	9001	E-VOL SYS LSI	PM9015A
IC	9201	Power AMP IC	TCB501HQ
Q	3	Bipolar TR	HN1C01FUS1
Q	5	Resistor Built-IN TR	LTC014EEB
Q	6	Bipolar TR	LSCR523UB
Q	7	Bipolar TR	LSAR523UB
Q	8	Bipolar TR	LSAR523UB
Q	190	Resistor Built-IN TR	LTC014EEB
Q	191	Bipolar TR	LSAR523UB
Q	301	Transistor (C)	2SD2153
Q	302	Transistor (C)	2SAR293PGZE
Q	303	Resistor Built-IN TR (C)	LTC014EEB
Q	401	Power MOS FET	SFT1342
Q	402	Power MOS FET	SFT1342
Q	601	Bipolar TR	LSCR523UB
Q	602	Resistor Built-IN TR (E, F, G, H, I)	RN4982S1
Q	603	Resistor Built-IN TR (E, F, G, H, I)	RN4982S1
Q	604	Resistor Built-IN TR (E, F, G, H, I)	RN4982S1
Q	605	Resistor Built-IN TR (E, F, G, H, I)	RN4982S1
Q	1131	Bipolar TR	LSCR523UB
Q	1132	Bipolar TR	LSCR523UB
Q	1133	Bipolar TR	LSCR523UB
Q	1134	Bipolar TR	LSCR523UB
Q	1191	Bipolar TR	LSAR523UB
Q	1601	Resistor Built-IN TR	LTC044EEB
Q	1721	Resistor Built-IN TR	LTC043ZEB
Q	1901	Transistor	2SAR502UB
Q	1902	Resistor Built-IN TR	LTC023YEB
Q	2251	Bipolar TR	HN1B04FUS1
Q	2301	Transistor	2SD2114K
Q	2302	Resistor Built-IN TR	RN4984S1
Q	2303	Resistor Built-IN TR	RN4984S1
Q	4011	Resistor Built-IN TR	LTC014EEB
Q	4201	Bipolar TR	LSCR523UB
Q	8401	Bipolar TR (A, B)	MMBT2369L
Q	8402	Bipolar TR (A, B)	MMBT2369L
Q	8403	Bipolar TR (A, B)	MMBT2369L

Circuit Symbol and No.			Part No.
Q	8404	Bipolar TR (A, B)	MMBT2369L
D	4	Diode	D1F60-5053
D	5	Diode	D1F60-5053
D	7	Zener Diode	UDZV6R2(B)
D	8	Zener Diode	UDZV6R8(B)
D	9	Switching Diode	1SS355VM
D	10	Zener Diode	UDZV5R6(B)
D	12	Switching Diode	1SS355VM
D	13	Switching Diode	1SS355VM
D	14	Schottky Diode	RB080LAM-30TF
D	163	Schottky Diode	RB056LAM-40TF
D	164	Schottky Diode	RB056LAM-40TF
D	303	Zener Diode (C)	UDZV16(B)
D	351	Schottky Diode	RB056LAM-40TF
D	401	Schottky Diode	RB056LAM-40TF
D	402	Schottky Diode	RB056LAM-40TF
D	451	Schottky Diode	RB080LAM-30TF
D	601	Schottky Diode	RB751SM-40
D	602	Schottky Diode	RB751SM-40
D	801	Zener Diode	RSB6R8SM
D	871	Zener Diode	RSB6R8SM
D	872	Zener Diode	RSB6R8SM
D	873	Zener Diode	RSB6R8SM
D	874	Zener Diode	RSB6R8SM
D	1901	Zener Diode	RSB6R8SM
D	1904	Zener Diode	RSB6R8SM
D	1905	Zener Diode	RSB6R8SM
D	2211	Zener Diode	RSB6R8SM
D	2301	Diode	RSB18V
D	2302	Diode	RSB18V
D	2303	Diode	RSB18V
D	2304	Diode	RSB18V
D	2305	Zener Diode	UDZV3R9(B)
D	2352	Diode	RSB18V
D	2353	Diode	RSB18V
D	2354	Diode	RSB18V
D	2451	Diode	EZAEG2A50AX
D	2452	Diode	EZAEG2A50AX
D	4171	Switching Diode (A)	1SS355VM
D	8451	Diode	EZAEG2A50AX
D	8452	Diode	EZAEG2A50AX
D	8453	Zener Diode	RSB6R8SM
L	3	Choke Coil 120 uH	CTH1636
L	51	Choke Coil 3.6 uH (C, E)	CTH1479
L	101	Chip Beads	VTL1127
L	351	SMD SPL Inductor	CTH1678
L	401	SMD SPL Inductor	CTH1542
L	402	Choke Coil 7.0 uH	CTH1381
L	451	SMD SPL Inductor	CTH1584
L	501	Inductor	CTH1629
L	801	Inductor	CTF1645
L	802	Inductor	CTF1740
L	803	Inductor	CTF1645
L	804	SMD Ferrite Beads	CTF1869
L	1801	Inductor (C)	CTF1786
L	1802	Inductor (A, B, C)	CTF1872
L	1803	Inductor (A, B, C)	CTF1872
L	1901	SMD Ferrite Beads	CTF1869
L	2103	Chip Beads	VTL1127
L	2301	Chip Beads	VTL1126

Circuit Symbol and No.			Part No.
L	2302	Chip Beads	VTL1126
L	2303	Chip Beads	VTL1126
L	2304	Chip Beads	VTL1126
L	2351	Chip Beads	VTL1126
L	2352	Chip Beads	VTL1126
L	2353	Chip Beads	VTL1126
L	2354	Chip Beads	VTL1126
L	2355	Chip Beads	VTL1126
L	2356	Chip Beads	VTL1126
L	2357	Chip Beads	VTL1126
L	2401	Chip Beads	VTL1126
L	2402	Chip Beads	VTL1126
L	2403	Chip Beads	VTL1126
L	2404	Chip Beads	VTL1126
L	2405	Chip Beads	VTL1126
L	2406	Chip Beads	VTL1126
L	2407	SMD Ferrite Beads	CTF1869
L	2451	Noise Filter	CTF1887
L	4021	SMD SPL Inductor	LCYA100J2016
L	4083	Chip Beads	VTL1126
L	4084	Chip Beads	VTL1126
L	4104	Chip Beads	VTL1126
L	4105	Chip Beads	VTL1126
L	4122	Chip Beads	VTL1126
L	4123	Chip Beads	VTL1126
L	4201	Ferrite Bead	CTF1528
L	8401	SMD Ferrite Beads	CTF1893
L	8403	Inductor	LCTC150K1608
L	8405	Inductor	LCMAR27J1608
L	8409	Inductor	CTF1787
X	601	Crystal Resonator 12.500 MHz	CSS1839
X	801	Resonator 24 MHz	CSS1773
X	1901	Resonator 32.768 kHz	CSS1807
X	8401	Crystal Resonator 9.216 MHz	CSS1888
⚠ P	301	Poly Switch (A, B)	FSMD110-24R
⚠ P	301	Poly Switch (C)	FSMD050-R
⚠ P	301	Poly Switch (D, E, F, G, H, I)	FSMD020-R
⚠ P	2201	Fuse 0.75 A	CEK1398
⚠ P	2352	Poly Switch	FSMD075-24R
⚠ P	2401	Poly Switch	FSMD075-24R
⚠ P	4021	Poly Switch	FSMD075-24R
⚠ P	4081	Poly Switch	FSMD075-24R
P	8451	Surge Absorber	IMSA-6803-01Y900
F	9001	EMI Filter	CCG1142
F	9002	EMI Filter	CCG1142
F	9201	EMI Filter	CCG1142
F	9202	EMI Filter	CCG1142
TH	801	Thermistor	CCX1084
VL	8401	Variable Coil	CTC1215
CN	1801	FFC/FPC Connector (C)	CKS6635
CN	2101	Connector	CKS3871
CN	2201	FFC/FPC Connector	CKS6645
CN	2251	FFC/FPC Connector (B, C, D, E, G, H, I)	CKS6710
CN	2252	FFC/FPC Connector (A, F)	CKS6703
CN	4001	FFC/FPC Connector (B, C, D, E, G, H, I)	CKS6645
CN	4002	FFC/FPC Connector (A, F)	CKS6646
CN	4011	Connector	CKS4977
CN	4021	Connector	CKS4497
CN	4051	FFC/FPC Connector (F)	CKS6638

Circuit Symbol and No.			Part No.
CN	4171	FFC/FPC Connector (A)	CKS6634
JA	1	Connector	CKM1613
JA	2301	3.5 DIA Jack	CKN1106
JA	2351	RCA Jack	CKB1110
JA	2401	RCA Jack	CKB1113
JA	2451	USB Jack	CKN1136
JA	4081	3.5 DIA Jack	CKS6437
JA	4101	Jack	CKN1101
JA	4121	RCA Jack	CKB1106
JA	4131	Connector (A, B)	CKS6495
JA	8451	Antenna Jack	CKX1104
U	1801	BE Core Unit (A, B)	CWE2518
U	1801	WWR Tuner Unit (C)	CWE2571
U	1901	BT Module	CWX4751

RESISTORS

R	51	(A, B, D, F, G, H, I)	RS1/4SA0R0J
R	53		RS1/16SS103J
R	55		RS1/16SS473J
R	56		RS1/16SS472J
R	57		RS1/16SS104J
R	58		RS1/16SS473J
R	59		RS1/4SA102J
R	60		RS1/16SS103J
R	61		RS1/16SS472J
R	62		RS1/4SA102J
R	63		RS1/16SS473J
R	64		RS1/16SS104J
R	65		RS1/16SS472J
R	66		RS1/4SA102J
R	67		RS1/16SS102J
R	68		RS1/16SS473J
R	69		RS1/16SS223J
R	70		RS1/16SS103J
R	71		RS1/16SS223J
R	72		RS1/16SS102J
R	73		RS1/16SS473J
R	74		RS1/16SS103J
R	161		RS1/16SS5601D
R	162		RS1/16SS1202D
R	190		RS1/16SS222J
R	191		RS1/16SS222J
R	304	(A, B, C)	RS1/16SS102J
R	307	(C)	RS1/16SS102J
R	308		RS1/16SS102J
R	315	(C)	RS1/16SS911J
R	316	(C)	RS1/16SS103J
R	317	(C)	RS1/4SA471J
R	318	(C)	RS1/4SA471J
R	319	(C)	RS1/16SS104J
R	320	(C)	RS1/16SS183J
R	321	(A, B, C)	RS1/16SS102J
R	351		RS1/16SS302J
R	352		RS1/16SS4702D
R	353		RS1/16SS1202D
R	354		RS1/16SS822J
R	357		RS1/8SQ331J
R	401		RS1/16SS561J
R	402		RS1/16SS1502D

Circuit Symbol and No.		Part No.
R 403		RS1/16SS1301D
R 404		RS1/16SS5101D
R 405		RS1/16SS222J
R 406		RS1/16SS103J
R 408	11 mohm	CCN1341
R 409		RS1/16SS204J
R 410		RS1/16SS394J
R 411	15 mohm	CCN1328
R 412		RS1/16SS224J
R 413		RS1/16SS272J
R 414		RS1/16SS1101D
R 415		RS1/16SS1001D
R 416		RS1/16SS1502D
R 417		RS1/16SS101J
R 422		RS1/16SS473J
R 423		RS1/16SS473J
R 432	15 mohm	CCN1328
R 437		RS1/4SA331J
R 451		RS1/16SS123J
R 452		RS1/16SS3001D
R 453		RS1/16SS1602D
R 455		RS1/16SS2001D
R 456		RS1/16SS473J
R 457		RS1/16SS304J
R 458	100 mohm	CCN1339
R 461		RS1/4SA331J
R 502		RS1/16SS473J
R 505		RS1/16SS1803D
R 507		RS1/16SS2703D
R 603		RS1/16SS472J
R 604		RS1/16SS104J
R 605		RS1/16SS473J
R 606		RS1/16SS473J
R 607		RS1/16SS221J
R 608		RS1/16SS221J
R 609		RS1/16SS472J
R 610		RS1/16SS102J
R 611		RS1/16SS103J
R 612		RS1/16SS471J
R 613		RS1/16SS473J
R 614		RS1/16SS471J
R 615		RS1/16SS473J
R 618		RS1/16SS472J
R 619		RS1/16SS472J
R 621		RS1/16SS473J
R 622		RS1/16SS473J
R 624		RS1/16SS104J
R 625		RS1/16SS102J
R 626		RS1/16SS0R0J
R 627		RS1/16SS102J
R 628		RS1/16SS104J
R 629		RS1/16SS473J
R 631		RS1/16SS121J
R 632		RS1/16SS104J
R 633		RS1/16SS121J
R 634	(C)	RS1/16SS0R0J
R 635		RS1/16SS102J
R 636		RS1/16SS473J
R 638	(F)	RS1/16SS104J
R 640		RS1/16SS682J

Circuit Symbol and No.		Part No.
R 643	(A, B, C)	RS1/16SS102J
R 644	(A, B, C)	RS1/16SS104J
R 646	(F)	RS1/16SS471J
R 648	(F)	RS1/16SS473J
R 649	(C)	RS1/16SS0R0J
R 650		RS1/16SS101J
R 651	(A, B, C, D)	RS1/16SS102J
R 651	(E, F, G, H, I)	RS1/16SS1001D
R 652	(E, F, G, H, I)	RS1/16SS6800D
R 656		RS1/16SS822J
R 657		RS1/16SS471J
R 659		RS1/16SS473J
R 660		RS1/16SS473J
R 661		RS1/16SS222J
R 665		RS1/16SS221J
R 666		RS1/16SS221J
R 668		RS1/16SS221J
R 669		RS1/16SS104J
R 670	(F, H, I)	RS1/16SS104J
R 671	(D, E, G)	RS1/16SS104J
R 672	(E, F, G)	RS1/16SS104J
R 673	(D, H, I)	RS1/16SS104J
R 674	(D, F, G, I)	RS1/16SS104J
R 675	(E, H)	RS1/16SS104J
R 676	(E, F, G, H, I)	RS1/16SS104J
R 677	(D)	RS1/16SS104J
R 678	(A, C, D, E, F, G, H, I)	RS1/16SS104J
R 679	(B)	RS1/16SS104J
R 683		RS1/16SS103J
R 684		RS1/16SS221J
R 685		RS1/16SS104J
R 686		RS1/16SS103J
R 687		RS1/16SS221J
R 688		RS1/16SS104J
R 689		RS1/16SS104J
R 690		RS1/16SS101J
R 691		RS1/16SS221J
R 692		RS1/16SS221J
R 693		RS1/16SS221J
R 694		RS1/16SS104J
R 695		RS1/16SS471J
R 696		RS1/16SS103J
R 698		RS1/16SS473J
R 699		RS1/16SS471J
R 700		RS1/16SS472J
R 701		RS1/16SS471J
R 702		RS1/16SS472J
R 703		RS1/16SS221J
R 706	(E, F, G, H, I)	RS1/16SS6800D
R 708		RS1/16SS473J
R 709	(E, F, G, H, I)	RS1/16SS8201D
R 710	(E, F, G, H, I)	RS1/16SS8201D
R 711	(A, B, C, D)	RS1/16SS102J
R 711	(E, F, G, H, I)	RS1/16SS1001D
R 716		RS1/16SS103J
R 717		RS1/16SS101J
R 720		RS1/16SS0R0J
R 800		RS1/16SS473J
R 802		RS1/16SS183J
R 804		RS1/16SS101J

Circuit Symbol and No.			Part No.	Circuit Symbol and No.			Part No.
R	807	(A, B)	RS1/16SS473J	R	913		RS1/16SS1R0J
R	808	(A, B)	RS1/16SS0R0J	R	924		RS1/16SS390J
R	809	(A, B)	RS1/16SS0R0J	R	925		RS1/16SS104J
R	810	(F)	RS1/16SS473J	R	926		RS1/16SS473J
R	811	(F)	RS1/16SS0R0J	R	929		RS1/16SS104J
R	812	(A)	RS1/16SS0R0J	R	930		RS1/16SS390J
R	813	(A, B)	RS1/16SS473J	R	931		RS1/16SS390J
R	814	(A, B)	RS1/16SS0R0J	R	932		RS1/16SS390J
R	815	(A, B)	RS1/16SS0R0J	R	933		RS1/16SS2402D
R	825		RS1/16SS103J	R	935		RS1/16SS103J
R	830		RS1/16SS121J	R	936		RS1/16SS1802D
R	831	(A)	RS1/16SS0R0J	R	937		RS1/16SS6201D
R	834		RS1/16SS473J	R	938		RS1/10SR2400D
R	835		RS1/16SS473J	R	940		RAB4CQ200J
R	836	(A)	RS1/16SS473J	R	941		RAB4CQ200J
R	837		RS1/16SS473J	R	942		RAB4CQ200J
R	840		RS1/16SS473J	R	943		RAB4CQ200J
R	841		RS1/16SS473J	R	944		RAB4CQ200J
R	842		RS1/16SS473J	R	945		RS1/16SS200J
R	843		RS1/16SS473J	R	946		RS1/16SS200J
R	844		RS1/16SS473J	R	947		RS1/16SS200J
R	845		RS1/16SS103J	R	948		RS1/16SS200J
R	848	(A, B)	RS1/16SS473J	R	949		RS1/16SS200J
R	852		RS1/16SS104J	R	950		RS1/16SS200J
R	853	(A, B)	RS1/16SS105J	R	953		RS1/16SS101J
R	855		RS1/16SS473J	R	955		RS1/16SS680J
R	861		RAB4CQ390J	R	956		RS1/16SS101J
R	862		RAB4CQ390J	R	957		RS1/16SS101J
R	863		RAB4CQ390J	R	958		RS1/16SS680J
R	864		RAB4CQ390J	R	959		RS1/16SS680J
R	865		RAB4CQ390J	R	960		RS1/16SS680J
R	866		RAB4CQ390J	R	961		RS1/16SS680J
R	869		RS1/16SS390J	R	962		RS1/16SS101J
R	870		RS1/16SS101J	R	963		RS1/16SS101J
R	871		RS1/16SS101J	R	964		RS1/16SS101J
R	882		RAB4CQ390J	R	1102		RS1/16SS472J
R	884		RS1/16SS680J	R	1109		RS1/16SS222J
R	885		RS1/16SS271J	R	1110		RS1/16SS103J
R	886		RS1/16SS101J	R	1116		RS1/10SR0R0J
R	887		RS1/16SS101J	R	1117		RS1/16SS820J
R	888		RS1/16SS101J	R	1118		RS1/16SS0R0J
R	889		RS1/16SS101J	R	1119		RS1/16SS820J
R	890		RAB4CQ390J	R	1120		RS1/16SS820J
R	891		RS1/16SS473J	R	1122		RS1/16SS103J
R	892		RS1/16SS473J	R	1123		RS1/16SS103J
R	893		RS1/16SS222J	R	1124		RS1/16SS0R0J
R	894		RS1/16SS222J	R	1125		RS1/16SS0R0J
R	896		RAB4CQ103J	R	1132		RS1/16SS103J
R	899		RAB4CQ103J	R	1134		RS1/16SS104J
R	900		RS1/16SS104J	R	1135		RS1/16SS153J
R	901		RS1/16SS104J	R	1136		RS1/16SS471J
R	902		RS1/16SS104J	R	1139		RS1/16SS0R0J
R	903		RS1/16SS104J	R	1143		RS1/16SS471J
R	904		RS1/16SS105J	R	1146		RS1/16SS471J
R	905		RS1/16SS102J	R	1149		RS1/16SS471J
R	906		RS1/16SS2202D	R	1150		RS1/16SS104J
R	907		RS1/16SS5601D	R	1151		RS1/16SS104J
R	908		RS1/16SS3301D	R	1155		RS1/16SS104J
R	911		RS1/16SS104J	R	1172		RS1/16SS102J
R	912		RS1/16SS104J	R	1173		RS1/16SS103J

Circuit Symbol and No.		Part No.
R 1174		RAB4CQ103J
R 1191		RS1/16SS472J
R 1192		RS1/16SS473J
R 1193		RS1/16SS183J
R 1195		RS1/16SS222J
R 1196		RS1/16SS222J
R 1197		RS1/16SS220J
R 1198		RS1/16SS222J
R 1401		RS1/16SS4700D
R 1402		RS1/16SS4700D
R 1403		RS1/16SS4700D
R 1404		RS1/16SS4700D
R 1405		RS1/16SS103J
R 1406		RS1/16SS103J
R 1409		RS1/16SS103J
R 1411		RS1/16SS2200D
R 1412		RS1/16SS2200D
R 1413		RS1/16SS2400F
R 1414		RS1/16SS2400F
R 1501	(F)	RS1/16SS0R0J
R 1502	(F)	RS1/16SS0R0J
R 1503	(F)	RS1/16SS0R0J
R 1507	(F)	RS1/16SS75R0D
R 1509		RS1/16SS75R0D
R 1510		RS1/16SS104J
R 1511		RS1/16SS75R0D
R 1512		RS1/16SS2200D
R 1514		RS1/16SS750J
R 1515	(F)	RS1/16SS0R0J
R 1516	(F)	RS1/16SS0R0J
R 1517		RS1/16SS101J
R 1518		RS1/16SS101J
R 1519		RS1/16SS101J
R 1520		RS1/16SS101J
R 1521		RS1/16SS101J
R 1522		RS1/16SS101J
R 1523	(D, E, G, H)	RS1/16SS0R0J
R 1524	(D, E, G, H)	RS1/16SS104J
R 1527	(A, B, C, I)	RS1/16SS0R0J
R 1528	(A, B, C, I)	RS1/16SS0R0J
R 1535	(D, E, G, H)	RS1/16SS0R0J
R 1536	(D, E, G, H)	RS1/16SS0R0J
R 1537	(D, E, G, H)	RS1/16SS0R0J
R 1538		RS1/16SS470J
R 1541	(D, E, G, H)	RS1/16SS0R0J
R 1601		RS1/16SS103J
R 1602		RS1/16SS684J
R 1604		RS1/16SS100J
R 1605		RS1/16SS102J
R 1701		RS1/16SS0R0J
R 1702		RS1/16SS103J
R 1723		RS1/16SS683J
R 1724		RS1/16SS683J
R 1725		RS1/16SS221J
R 1801	(A, B, C)	RS1/16SS0R0J
R 1802	(A, B, C)	RS1/16SS0R0J
R 1803	(A, B, C)	RS1/16SS0R0J
R 1804	(A, B)	RS1/16SS103J
R 1805	(C)	RS1/16SS221J
R 1806	(C)	RS1/16SS221J

Circuit Symbol and No.		Part No.
R 1807	(C)	RS1/16SS221J
R 1808	(C)	RS1/16SS221J
R 1809	(A, B)	RS1/16SS221J
R 1810	(A, B)	RS1/16SS221J
R 1811	(A, B)	RS1/16SS221J
R 1812	(A, B)	RS1/16SS221J
R 1813	(A, B)	RS1/16SS0R0J
R 1814	(A, B)	RS1/16SS0R0J
R 1815	(A, B)	RS1/16SS0R0J
R 1816	(A, B)	RS1/16SS0R0J
R 1817	(A, B)	RS1/16SS221J
R 1818	(A, B)	RS1/16SS0R0J
R 1819	(A, B)	RS1/16SS0R0J
R 1820	(A, B)	RS1/16SS0R0J
R 1821	(C)	RS1/16SS0R0J
R 1901		RS1/16SS0R0J
R 1902		RS1/16SS121J
R 1903		RS1/16SS121J
R 1904		RS1/16SS121J
R 1918		RS1/16SS106J
R 1919		RS1/16SS105J
R 1920		RS1/16SS103J
R 1921		RS1/16SS103J
R 1923		RS1/16SS103J
R 1926		RS1/16SS0R0J
R 1927		RS1/16SS103J
R 1928		RS1/16SS103J
R 1932		RS1/16SS103J
R 1933		RS1/10SR221J
R 1936		RS1/16SS121J
R 1939		RS1/16SS473J
R 2105		RS1/16SS471J
R 2106		RS1/16SS221J
R 2107		RS1/16SS221J
R 2108		RS1/16SS221J
R 2109		RS1/16SS221J
R 2110		RS1/16SS221J
R 2122		RS1/16SS473J
R 2124	91 ohm	CCN1424
R 2251	(A, B)	RS1/16SS0R0J
R 2252	(A, B)	RS1/16SS0R0J
R 2256		RS1/16SS562J
R 2257	(F)	RS1/16SS0R0J
R 2258		RS1/16SS103J
R 2259		RS1/16SS103J
R 2260		RS1/10SR222J
R 2261		RS1/16SS332J
R 2262	(F)	RS1/16SS0R0J
R 2263		RS1/16SS0R0J
R 2264	(F)	RS1/16SS0R0J
R 2265	(F)	RS1/16SS0R0J
R 2305		RS1/16SS223J
R 2306		RS1/16SS223J
R 2308		RS1/16SS103J
R 2309		RS1/16SS122J
R 2310		RS1/16SS152J
R 2311		RS1/16SS0R0J
R 2359		RS1/16SS223J
R 2360		RS1/16SS223J
R 2408		RS1/16SS223J

Circuit Symbol and No.		Part No.
R 2410		RS1/16SS223J
R 2414		RS1/16SS223J
R 2417		RS1/16SS223J
R 2420		RS1/16SS223J
R 2423		RS1/16SS223J
R 2451		RS1/16SS103J
R 2452		RS1/16SS183J
R 2453		RS1/16SS102J
R 2454		RS1/16SS103J
R 2455		RS1/16SS103J
R 2504		RS1/16SS2002D
R 2505		RS1/16SS1302D
R 2506		RS1/16SS682J
R 2507		RS1/16SS103J
R 2508		RS1/16SS0R0J
R 2509		RS1/16SS103J
R 2551		RS1/16SS0R0J
R 2552		RS1/10SR0R0J
R 2553		RS1/10SR0R0J
R 2554		RS1/16SS0R0J
R 2555		RS1/16SS0R0J
R 2556		RS1/16SS0R0J
R 2557		RS1/16SS0R0J
R 2558		RS1/10SR0R0J
R 2559		RS1/10SR0R0J
R 2560		RS1/10SR0R0J
R 2561		RS1/10SR0R0J
R 2562		RS1/10SR0R0J
R 2563		RS1/10SR0R0J
R 2564		RS1/16SS0R0J
R 2565		RS1/16SS0R0J
R 2570		RS1/16SS0R0J
R 4011		RS1/16SS473J
R 4012		RS1/16SS3601D
R 4013		RS1/16SS7501D
R 4014		RS1/16SS1601D
R 4026		RAB4CQ750J
R 4027		RS1/16SS223J
R 4028		RS1/16SS223J
R 4029		RS1/16SS562J
R 4030		RS1/16SS101J
R 4031		RS1/16SS101J
R 4032		RS1/16SS101J
R 4033		RS1/16SS102J
R 4034		RS1/16SS102J
R 4035		RS1/16SS471J
R 4036		RS1/16SS471J
R 4037		RS1/16SS272J
R 4038		RS1/16SS272J
R 4039		RS1/16SS103J
R 4053	(F)	RS1/16SS101J
R 4054	(F)	RS1/16SS471J
R 4055	(F)	RS1/16SS471J
R 4058	(F)	RS1/16SS473J
R 4059	(F)	RS1/16SS473J
R 4060	(F)	RS1/16SS471J
R 4121		RS1/16SS750J
R 4142	(A, B)	RS1/16SS471J
R 4143	(A, B)	RS1/16SS223J
R 4144	(A, B)	RS1/16SS223J

Circuit Symbol and No.		Part No.
R 4145	(A, B)	RS1/16SS181J
R 4146	(A, B)	RS1/16SS181J
R 4147	(A, B)	RS1/10SR822J
R 4148	(A, B)	RS1/10SR471J
R 4149	(A, B)	RS1/16SS104J
R 4151	(A, B)	RS1/16SS471J
R 4172	(A)	RS1/16SS101J
R 4174	(A)	RS1/16SS103J
R 4176	(A)	RS1/16SS104J
R 4178	(A)	RS1/16SS102J
R 4201		RS1/16SS0R0J
R 4202		RS1/16SS0R0J
R 4203		RS1/16SS102J
R 4204		RS1/16SS222J
R 4205		RS1/16SS332J
R 4206		RS1/16SS472J
R 4207		RS1/16SS103J
R 4208		RS1/16SS824J
R 4209		RS1/16SS563J
R 4210		RS1/16SS0R0J
R 4211		RS1/16SS0R0J
R 4212		RS1/16SS472J
R 4213		RS1/16SS102J
R 4214		RS1/16SS102J
R 4215		RS1/16SS0R0J
R 8401		RS1/16SS0R0J
R 8404		RS1/16SS103J
R 8406		RS1/16SS103J
R 8407		RS1/16SS472J
R 8408		RS1/16SS472J
R 8409		RS1/16SS101J
R 8410		RS1/16SS101J
R 8412		RS1/16SS391J
R 8413		RS1/16SS105J
R 8414		RS1/16SS105J
R 8421	(A, B)	RS1/16SS182J
R 8422	(A, B)	RS1/16SS332J
R 8423	(A, B)	RS1/16SS121J
R 8424	(A, B)	RS1/16SS102J
R 8425	(A, B)	RS1/16SS182J
R 8426	(A, B)	RS1/16SS332J
R 8427	(A, B)	RS1/16SS121J
R 8428	(A, B)	RS1/16SS102J
R 8432		RS1/10SR0R0J
R 8433		RS1/10SR0R0J
R 9058		RS1/16SS0R0J
R 9208		RS1/10SR0R0J

CAPACITORS

C 46		CKSRYX105K16
C 48		CKSSYB102K50
C 50	(C, E)	CKSYX106K35
C 51		CEAT472M16
C 52	(C, E)	CKSYX106K35
C 53	(C, E)	CKSSYB102K50
C 102		CKSRYX104K50
C 103		CKSSYB104K10
C 104		CKSRYX475K6R3
C 111		CKSRYX105K25

Circuit Symbol and No.		Part No.
C 112		CKSSYB104K16
C 114		CKSRYX104K50
C 115		CKSQYX475K25
C 140		CKSRYB474K16
C 141		CKSQYX106K10
C 143		CKSRYB474K16
C 161		CKSQYX106K10
C 162		CKSQYX106K10
C 190		CKSSYB104K10
C 231		CKSRYX105K16
C 232		CKSSYX105K10
C 271		CKSRYX105K16
C 272		CKSRYX105K16
C 302	(A, B, C)	CKSSYX105K10
C 303	(A, B, C)	CKSSYX105K10
C 304	(A, B, C)	CKSSYX105K10
C 305	(A, B, C)	CKSSYX105K10
C 306	(C)	CKSSYX105K10
C 307	(C)	CKSSYX105K10
C 308	(C)	CKSSYB104K10
C 309		CKSSYX105K10
C 310		CKSSYX105K10
C 312	(A, B, C)	CKSSYB104K10
C 313	(C)	CKSSYB104K16
C 314	(C)	CKSRYX104K50
C 315		CKSSYB104K10
C 316	(A, B, C)	CKSSYB104K10
C 317	(C)	CKSSYB104K10
C 318		CKSSYB102K50
C 347		CKSQYX106K10
C 352		CKSSYB103K16
C 353		CKSQYX106K10
C 356		CKSSYB473K16
C 357		CKSSYB103K16
C 358		CKSYX106K35
C 359		CKSSYB103K50
C 362	47 uF	CCG1256
C 401		CKSSYB102K50
C 402		CKSSYB223K16
C 403		CCSSCH8R0D50
C 404		CCSSCH8R0D50
C 405		CKSSYB223K16
C 406		CKSSYB152K50
C 407		CKSSYB102K50
C 408		CKSSYB104K16
C 409		CKSYX226M16
C 410		CKSYX226M16
C 413		CKSRYB473K50
C 414		CKSSYB102K50
C 416		CKSSYB104K10
C 419		CKSSYB104K16
C 420		CKSSYB103K16
C 421		CKSSYB104K10
C 422		CKSRYX105K16
C 425		CKSYX226M16
C 426		CKSYX226M16
C 427		CKSSYB104K16
C 428		CKSSYB102K50
C 433		CKSYX106K35
C 436		CKSYX106K35

Circuit Symbol and No.		Part No.
C 451		CKSSYB153K16
C 452		CKSSYB222K50
C 454		CKSSYB331K50
C 455		CKSSYX105K10
C 456		CKSRYX104K50
C 457		CKSYX226M16
C 458		CKSRYX225K10
C 459		CEVW101M16
C 460		CKSRYB224K16
C 461		CEVW470M16
C 462		CKSYX106K35
C 465		CKSSYX105K10
C 502		CKSQYX106K10
C 503		CCSSCH220J50
C 504		CKSQYX106K10
C 505		CKSSYB103K16
C 601	(C)	CKSSYB104K10
C 602		CCSSCH100D50
C 603		CCSSCH120J50
C 604		CKSSYX105K10
C 605		CKSSYB104K10
C 606		CKSRYX105K16
C 607		CKSSYB104K10
C 608		CKSSYB104K10
C 609		CKSSYB104K10
C 610		CKSSYB104K10
C 611		CKSSYX105K10
C 615		CKSSYB104K10
C 616		CKSSYX105K10
C 620		CKSSYB104K10
C 621		CKSSYB103K16
C 622		CCSSCH102J50
C 623		CKSSYB104K10
C 624		CKSSYX105K10
C 625		CKSSYB104K10
C 626		CKSSYB104K10
C 627		CKSSYB104K10
C 628		CKSSYB104K10
C 629		CKSSYB104K10
C 630		CKSQYX226M6R3
C 632		CKSSYB104K10
C 635		CCSSCH471J50
C 801		CKSQYX106K10
C 802		CKSQYX476M6R3
C 803		CKSQYX106K10
C 807		CKSSYB104K10
C 810		CKSQYX106K10
C 811		CKSSYB104K10
C 817		CKSSYB104K10
C 818		CKSSYX105K10
C 819		CKSSYX105K10
C 840		CCSSCH120J50
C 841		CCSSCH100D50
C 860		CKSSYX105K10
C 901		CKSSYB104K10
C 902		CKSSYB104K10
C 903		CKSSYB104K10
C 904		CKSSYB104K10
C 905		CKSSYB104K10
C 906		CKSSYB104K10

Circuit Symbol and No.	Part No.	Circuit Symbol and No.		Part No.
C 907	CKSSYB104K10	C 1151		CCSSCH100D50
C 908	CKSSYB104K10	C 1191		CKSSYB104K10
C 909	CKSSYB104K10	C 1192		CKSSYB104K10
C 910	CKSSYB104K10	C 1193		CKSSYB103K16
C 911	CKSSYB104K10	C 1302		CKSSYB104K10
C 912	CKSSYB104K10	C 1321		CKSSYB104K10
C 913	CKSSYB104K10	C 1342		CKSSYB104K10
C 914	CKSSYB104K10	C 1352		CKSRYX225K10
C 915	CKSSYB104K10	C 1353		CKSQYX106K10
C 916	CKSSYB104K10	C 1401		CKSRYX106M6R3
C 917	CKSSYB104K10	C 1402		CKSRYX106M6R3
C 918	CKSSYB104K10	C 1403		CKSRYX106M6R3
C 919	CKSSYB104K10	C 1404		CKSRYX106M6R3
C 920	CKSSYB104K10	C 1405		CKSSYB104K10
C 921	CKSSYB104K10	C 1406		CKSSYB104K10
C 922	CKSSYB104K10	C 1407		CKSSYB104K10
C 923	CKSSYB104K10	C 1408		CKSSYB104K10
C 924	CKSSYB104K10	C 1409		CKSSYB104K10
C 925	CKSSYB104K10	C 1410		CKSSYB104K10
C 926	CKSSYB104K10	C 1411		CKSSYB104K10
C 927	CKSSYB104K10	C 1412		CKSSYB104K10
C 928	CKSSYB104K10	C 1413		CKSSYB104K10
C 929	CKSSYB104K10	C 1414		CKSSYB104K10
C 930	CKSSYB104K10	C 1415		CKSSYB104K10
C 931	CCSSCH100D50	C 1416		CKSSYB104K10
C 932	CKSSYB104K10	C 1417		CKSSYB104K10
C 933	CKSSYX105K10	C 1418		CKSSYB104K10
C 934	CKSSYX105K10	C 1419		CKSSYB104K10
C 935	CKSSYX105K10	C 1420		CKSSYB104K10
C 936	CKSSYX105K10	C 1421		CKSSYB104K10
C 937	CKSSYX105K10	C 1422		CKSSYB104K10
C 938	CKSSYX105K10	C 1423		CKSSYB104K10
C 939	CKSSYX105K10	C 1424		CKSSYB104K10
C 940	CKSSYX105K10	C 1425		CKSSYB104K10
C 941	CKSSYB103K16	C 1426		CKSSYB104K10
C 942	CKSSYB102K50	C 1427		CKSSYB104K10
C 943	CKSSYB104K10	C 1428		CKSSYB104K10
C 944	CKSSYB104K10	C 1431		CKSSYB104K10
C 945	CKSSYB104K10	C 1501		CKSSYX105K10
C 946	CKSSYB104K10	C 1502		CKSSYX105K10
C 947	CKSSYB104K10	C 1503		CKSSYX105K10
C 948	CKSSYB104K10	C 1504		CKSSYX105K10
C 949	CKSSYB104K10	C 1506	(D, E, F, G, H)	CKSSYB104K10
C 1102	CKSSYX105K10	C 1507		CKSSYB104K10
C 1104	CKSSYX474K6R3	C 1508		CKSSYB104K10
C 1105	CKSQYX106K10	C 1510		CKSSYB104K10
C 1106	CKSQYX106K10	C 1512		CKSSYB104K10
C 1107	CKSSYB104K10	C 1514		CKSSYB104K10
C 1108	CKSSYB104K10	C 1515		CKSSYB104K10
C 1109	CKSRYX225K10	C 1516		CKSSYB104K10
C 1131	CKSQYX106K10	C 1517		CKSSYB104K10
C 1132	CKSQYX106K10	C 1518	(D, E, F, G, H)	CKSSYX105K10
C 1133	CKSQYX106K10	C 1519		CKSSYB104K10
C 1134	CKSQYX106K10	C 1520	(D, E, F, G, H)	CKSSYX105K10
C 1135	CKSQYX106K10	C 1521		CKSSYB104K10
C 1136	CKSQYX106K10	C 1522	(D, E, F, G, H)	CKSSYX105K10
C 1137	CKSQYX106K10	C 1523		CKSSYB104K10
C 1138	CKSSYB103K16	C 1524		CKSQYX106K10
C 1139	CKSQYX106K10	C 1525		CKSSYB104K10
C 1148	CKSSYB104K10	C 1529		CKSQYX106K10

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
C 1530		CKSQYX106K10	C 2360		CKSSYB102K50
C 1531	(D, E, F, G, H)	CKSSYB104K10	C 2361		CKSSYB102K50
C 1532		CCSSCH181J50	C 2401		CKSSYB102K50
C 1601		CKSRYX105K25	C 2402		CKSSYB102K50
C 1602		CKSRYX105K25	C 2403		CKSSYB102K50
C 1603		CKSRYX105K25	C 2404		CKSSYB102K50
C 1604		CKSRYX105K25	C 2405		CKSSYB102K50
C 1605		CKSRYX105K25	C 2406		CKSSYB102K50
C 1606		CKSRYX105K25	C 2407		CKSQYX475K10
C 1607		CKSRYX105K25	C 2408		CKSQYX475K10
C 1608		CKSRYX105K25	C 2409		CKSQYX475K10
C 1609		CKSRYX105K25	C 2410		CKSQYX475K10
C 1610		CKSRYX105K25	C 2411		CKSQYX475K10
C 1612		CKSRYX105K25	C 2412		CKSQYX475K10
C 1613		CKSRYX105K25	C 2414		CKSRYX225K16
C 1721		CKSSYB104K10	C 2415		CKSSYB102K50
C 1722		CKSQYX475K10	C 2416		CKSSYB102K50
C 1801	(C)	CKSSYB104K10	C 2451		CKSQYX106K10
C 1803	(A, B, C)	CKSQYX106K10	C 2452		CKSSYB104K10
C 1804	(A, B, C)	CKSSYB104K10	C 2501		CKSSYB104K10
C 1805	(A, B, C)	CKSQYX106K10	C 2502		CKSSYB104K10
C 1806	(A, B, C)	CKSSYB104K10	C 2504		CKSSYX105K10
C 1808	(A, B, C)	CKSSYB104K10	C 4011		CKSQYB334K50
C 1809	(C)	CCSSCH101J50	C 4014		CEVW220M16
C 1810	(C)	CCSSCH101J50	C 4021		CKSSYB102K50
C 1811	(C)	CCSSCH101J50	C 4022		CKSSYB102K50
C 1812	(C)	CCSSCH101J50	C 4023		CKSSYB102K50
C 1901		CCSSCH100D50	C 4024		CKSSYB102K50
C 1902		CCSSCH120J50	C 4025		CCSSCH180J50
C 1903		CKSSYB104K10	C 4026		CCSSCH180J50
C 1904		CKSRYX106M6R3	C 4027		CKSSYB102K50
C 1905		CKSRYX106M6R3	C 4028		CKSSYB104K10
C 1906		CKSSYB104K10	C 4029		CKSQYX106K10
C 1907		CKSSYB104K10	C 4030		CKSSYB104K10
C 1910		CKSQYX106K10	C 4033		CKSSYX105K10
C 1912		CKSQYX106K10	C 4034		CKSSYX105K10
C 1913		CKSSYX105K6R3	C 4035		CKSSYX105K10
C 1914		CKSQYX476M6R3	C 4036		CKSSYX105K10
C 1915		CKSQYX476M6R3	C 4037		CKSSYX105K10
C 2104		CKSSYB104K16	C 4038		CKSSYX105K10
C 2106		CCSSCH221J50	C 4039		CKSSYX105K10
C 2113		CKSSYB104K10	C 4040		CKSSYX105K10
C 2114		CCSSCH390J50	C 4081		CKSSYB102K50
C 2201		CKSQYX475K10	C 4082		CKSSYB102K50
C 2202		CKSQYX106K10	C 4101		CKSSYB102K50
C 2203		CEVW101M16	C 4102		CKSSYB102K50
C 2303		CKSSYB102K50	C 4121		CKSSYB221K50
C 2304		CKSSYB471K50	C 4122		CKSSYB102K50
C 2305		CKSRYX225K10	C 4135	(A, B)	CKSSYB104K10
C 2306		CKSSYB102K50	C 4136	(A, B)	CKSSYB104K10
C 2307		CKSSYB102K50	C 4137	(A, B)	CKSRYX104K50
C 2308		CCSSCH101J50	C 4172	(A)	CKSSYB104K10
C 2351		CKSSYB472K50	C 4174	(A)	CKSSYB104K10
C 2352		CKSRYX105K16	C 4202		CKSRYX106M6R3
C 2353		CKSRYX104K50	C 4203		CKSSYB104K10
C 2354		CKSSYB103K25	C 4204		CKSSYX105K10
C 2355		CKSRYX225K10	C 4205		CKSSYB104K10
C 2357		CKSSYB102K50	C 4206		CCSSCH101J50
C 2358		CCSSCH101J50	C 4207		CKSRYB224K16
C 2359		CKSSYB102K50	C 4208		CKSSYX105K10

Circuit Symbol and No.			Part No.
C	4209		CCSSCH6R0D50
C	4210		CCSSCH220J50
C	4211		CKSSYB104K10
C	4212		CKSQYX226M6R3
C	4214		CCSSCH6R0D50
C	4215		CKSSYB102K50
C	8401		CKSSYB104K16
C	8402		CKSSYB104K16
C	8403		CKSQYX106K10
C	8404		CKSQYX106K10
C	8405		CKSSYB104K16
C	8406		CKSRYX106M6R3
C	8407		CKSSYB224K6R3
C	8408		CKSSYB102K50
C	8409		CKSSYB104K16
C	8410		CKSRYX106M6R3
C	8411		CCSSCH220J50
C	8412		CCSSCH331J50
C	8415		CKSSYB104K16
C	8416		CKSRYX106M6R3
C	8418		CCSSCH102J50
C	8419		CCSSCH471J50
C	8423		CKSSYB152K50
C	8427		CCSSCH100D50
C	9002	(A, B)	CKSRYX105K16
C	9003	(A, B)	CKSRYX105K16
C	9004		CKSRYX105K16
C	9005		CKSRYX105K16
C	9006		CKSSYX105K10
C	9007		CKSSYX105K10
C	9010		CKSRYX105K16
C	9011		CKSRYX105K16
C	9015		CKSSYX105K10
C	9016		CKSRYX105K16
C	9017		CKSRYX105K16
C	9018	(A, B)	CKSRYX105K16
C	9019	(A, B)	CKSRYX105K16
C	9020		CKSSYB104K16
C	9021	100 uF/16 V	CCH1962
C	9022		CKSSYB104K16
C	9023		CEVW470M16
C	9024		CEVW470M16
C	9025		CKSSYB104K10
C	9026	10 uF	CCG1332
C	9027		CKSSYB104K10
C	9029		CEVW470M16
C	9032		CKSSYB104K16
C	9033		CKSSYB104K16
C	9034		CKSSYB472K50
C	9035		CKSSYB103K16
C	9036		CKSSYB103K16
C	9039		CCSSCH151J50
C	9040		CCSSCH151J50
C	9043		CKSRYB102K50
C	9044		CKSRYB102K50
C	9201	0.68 uF	CCE1064
C	9202		CKSRYB684K10
C	9203		CKSRYB684K10
C	9204	0.68 uF	CCE1064
C	9206	10 uF/25 V	CCH2108

Circuit Symbol and No.			Part No.
C	9207	0.47 uF	CCG1328
C	9208	2.2 uF	CCG1322
C	9209	4 700 uF/16 V	CCH2085
C	9210	0.1 uF/50 V	CCG1425
C	9212		CKSRYX104K50
C	9213		CKSSYB102K50
C	9214		CKSSYB102K50
C	9215		CKSSYB102K50
C	9216		CKSSYB102K50
C	9217		CKSSYB102K50
C	9218		CKSSYB102K50
C	9219		CKSSYB102K50
C	9220		CKSSYB102K50
C	9223		CKSRYX105K16
C	9224		CKSRYX105K16
C	9225		CKSRYX105K16
C	9226		CKSRYX105K16
C	9228	0.1 uF	CCG1321
C	9229		CCSRCH101J50

B

Unit Number : CXY2618 (A, B, D, E, F, G, H, I)
Unit Number : CXY2619 (C)
Unit Name : Service Unit (Monitor)

MISCELLANEOUS

IC	5001	Interface IC	AK4187VN
IC	5101	Display IC	OZ527ILN
IC	5201	DC/DC CONV IC	R1294L103A
IC	5301	Logic IC	TC7SH08FUS2
IC	5401	Regulator IC	MM3411A15N
IC	5402	Interface IC	TC90207FG
Q	5051	Bipolar TR	HN1C01FUS1
Q	5052	Bipolar TR	LSCR523UB
Q	5201	Resistor Built-IN TR	LTC024EEB
Q	5202	Transistor	2SAR502UB
Q	5301	Bipolar TR	LSAR523UB
Q	5302	Bipolar TR	LSCR523UB
D	5101	Schottky Diode	RB162MM-40TF
D	5201	Schottky Diode	RB551VM-30
D	5202	Diode	RB548W
D	5204	Diode	RB548W
L	5101	Inductor	BTH1112
L	5102	SMD Ferrite Beads (C)	CTF1869
L	5201	SMD SPL Inductor	CTH1650
L	5202	Chip Beads (C)	VTL1128
L	5301	Inductor	CTF1765
L	5302	Ferrite Bead	CTF1528
L	5303	Chip Beads	VTL1126
L	5401	Inductor	CTF1740
L	5402	Inductor	CTF1740
L	5403	Inductor	CTF1740
L	5404	Inductor	CTF1740
L	5405	Inductor	CTF1740
L	5406	Inductor	CTF1740
L	5407	Inductor	CTF1740
L	5408	Inductor	CTF1740
L	5409	Inductor	CTF1740

Circuit Symbol and No.			Part No.
L	5410	Inductor	CTF1740
L	5411	Inductor	CTF1740
L	5412	Chip Beads	VTL1126
L	5413	Inductor	CTF1740
L	5414	Inductor	CTF1740
L	5415	Inductor	CTF1740
L	5416	Inductor	CTF1740
L	5417	Inductor	CTF1740
L	5418	Inductor	CTF1740
L	5419	Inductor	CTF1740
L	5420	Inductor	CTF1740
L	5421	Inductor	CTF1740
L	5422	Inductor	CTF1740
L	5423	Inductor	CTF1740
L	5424	Inductor	CTF1740
L	5425	Inductor	CTF1740
L	5426	Inductor	CTF1740
L	5427	SMD Ferrite Beads	CTF1869
TH	5001	Thermistor	CCX1084
CN	5001	Connector (2P)	DKN1361
CN	5002	FFC/FPC Connector	CKS6645
CN	5003	FFC/FPC Connector	CKS6625
CN	5051	FFC/FPC Connector	CKS6757
CN	5301	FFC/FPC Connector	CKS6646

RESISTORS

R	5001		RS1/16SS271J
R	5002		RS1/16SS821J
R	5003		RS1/16SS271J
R	5004		RS1/16SS820J
R	5005		RS1/16SS101J
R	5006		RS1/16SS101J
R	5007		RS1/16SS101J
R	5013		RS1/16SS183J
R	5014		RS1/16SS0R0J
R	5051		RS1/16SS121J
R	5052		RS1/16SS820J
R	5054		RS1/16SS121J
R	5055		RS1/16SS680J
R	5057		RS1/16SS121J
R	5058		RS1/16SS680J
R	5060		RS1/16SS332J
R	5061		RS1/16SS272J
R	5062		RS1/16SS332J
R	5101		RS1/16SS104J
R	5102		RS1/8SQ2R2J
R	5103	(A, B, D, E, F, G, H, I)	RS1/4S0R0J
R	5105		RS1/16SS104J
R	5106		RS1/16SS104J
R	5107		RS1/16SS102J
R	5108		RS1/16SS0R0J
R	5109		RS1/16SS563J
R	5110		RS1/16SS104J
R	5111		RS1/16SS101J
R	5112		RS1/16SS102J
R	5113		RS1/16SS2702D
R	5114		RS1/16SS1801D
R	5115		RS1/16SS563J
R	5117		RS1/16SS682J

Circuit Symbol and No.			Part No.
R	5201		RS1/16SS1002D
R	5202		RS1/16SS1002D
R	5203		RS1/16SS8201D
R	5206		RS1/16SS9102D
R	5207		RS1/16SS1802D
R	5208		RS1/16SS203J
R	5209		RS1/16SS104J
R	5210		RS1/16SS103J
R	5211		RS1/16SS332J
R	5212		RS1/16SS1003D
R	5213		RS1/16SS9101D
R	5214		RS1/8SQ2R2J
R	5216		RS1/16SS8202D
R	5217		RS1/16SS6202D
R	5218		RS1/16SS1502D
R	5219		RS1/16SS472J
R	5220		RS1/16SS103J
R	5221		RS1/16SS272J
R	5222	(A, B, D, E, F, G, H, I)	RS1/16SS0R0J
R	5224		RS1/16SS473J
R	5225		RS1/16SS272J
R	5226		RS1/16SS0R0J
R	5327		RS1/16SS153J
R	5329		RS1/16SS105J
R	5331		RS1/16SS103J
R	5332		RS1/16SS472J
R	5333		RS1/16SS101J
R	5334		RS1/16SS123J
R	5335		RS1/16SS393J
R	5337		RS1/16SS473J
R	5338		RS1/16SS473J
R	5339		RS1/16SS473J
R	5340		RS1/16SS473J
R	5341		RS1/16SS473J
R	5343		XRS1/16SS470J
R	5403		RS1/16SS101J
R	5404		RS1/16SS101J
R	5405		RS1/16SS101J
R	5406		RS1/16SS101J
R	5407		RS1/16SS101J
R	5408		RS1/16SS101J
R	5409		RS1/16SS101J
R	5410		RS1/16SS101J
R	5411		RS1/16SS101J
R	5412		RS1/16SS101J
R	5413		XRS1/16SS330J
R	5414		RS1/16SS101J
R	5415		RS1/16SS101J
R	5416		RS1/16SS101J
R	5417		RS1/16SS101J
R	5418		RS1/16SS101J
R	5419		RS1/16SS101J
R	5420		RS1/16SS101J
R	5421		RS1/16SS101J
R	5422		RS1/16SS101J
R	5423		RS1/16SS101J
R	5424		RS1/16SS1000D
R	5425		RS1/16SS1000D
R	5426		RS1/16SS1000D
R	5427		RS1/16SS1000D

Circuit Symbol and No.		Part No.
R 5428		RS1/16SS1000D
R 5429		RS1/16SS101J
R 5430		RS1/16SS101J
R 5431		RS1/16SS101J
R 5432		RS1/16SS101J
R 5433		RS1/16SS101J
R 5434		RS1/16SS103J
R 5435		RS1/16SS103J
R 5436		RS1/16SS103J
R 5437		RS1/16SS103J
R 5438		RS1/16SS103J
R 5439		RS1/16SS103J
R 5440		RS1/16SS221J
R 5443		RS1/16SS473J

CAPACITORS

C 5001		CKSSYB104K10
C 5002		CKSSYB103K16
C 5003		CKSSYB103K16
C 5004		CKSSYB104K10
C 5005		CKSSYB104K10
C 5006		CKSSYB103K16
C 5007		CKSSYB103K16
C 5008		CKSRYX106M6R3
C 5009		CKSSYB104K10
C 5010		CKSSYB104K10
C 5013		CKSSYX105K10
C 5014		CKSSYX105K10
C 5101		CKSSYB332K50
C 5103		CKSQYX106K16
C 5106		CKSSYX105K16
C 5107		CKSSYX105K16
C 5108		CKSSYB104K16
C 5109		CKSSYX105K10
C 5110		CCSSCH101J50
C 5111	(C)	CCSSCH471J50
C 5112		CKSYX106K35
C 5114		CKSRYB224K16
C 5117	(C)	CCSSCH471J50
C 5201		CKSSYB224K6R3
C 5203		CKSSYX105K10
C 5204		CKSSYB224K6R3
C 5205		CKSRYB224K16
C 5206		CKSSYB682K25
C 5207	(A, B, D, E, F, G, H, I)	CKSSYB102K50
C 5207	(C)	CKSSYB104K10
C 5208		CKSSYX105K16
C 5209		CKSSYX105K10
C 5210		CKSRYX105K25
C 5213		CKSRYX104K50
C 5214		CKSRYX104K50
C 5217		CKSQYX475K25
C 5218		CKSSYB682K25
C 5219		CKSRYX475K6R3
C 5220		CCSSCH101J50
C 5221		CKSSYB561K50
C 5222		CKSQYX475K25
C 5224		CKSSYB102K50
C 5301		CKSSYB102K50
C 5302		CKSSYB102K50
C 5303		CKSSYB102K50
C 5309		CKSSYB104K16
C 5310	(C)	CKSYX106K35
C 5311		CKSYX106K35
C 5312		CKSSYB102K50
C 5313	(C)	CKSYX106K35
C 5314		CKSSYB104K10
C 5315		CKSQYX106K10
C 5317		CKSSYB102K50
C 5318		CKSRYX104K50
C 5319		CKSQYB334K50
C 5321		CKSSYB102K50
C 5322		CKSSYB104K16
C 5323		CKSQYX475K25
C 5326		CKSSYB104K10
C 5327		CKSYX106K35
C 5329		CKSSYB102K50
C 5330		CKSSYB102K50
C 5331		CKSSYX105K10
C 5333		CKSSYB104K10
C 5404		CKSSYB103K16
C 5408		CKSSYB103K16
C 5412		CKSSYB104K10
C 5413		CKSSYB104K10
C 5414		CKSSYB104K10
C 5415		CKSSYB104K10
C 5416		CKSSYB104K10
C 5417		CKSSYB104K10
C 5418		CKSSYB104K10
C 5420		CKSSYX105K10
C 5421		CKSSYX105K10
C 5422		CCSSCH820J50
C 5423		CKSSYB103K16
C 5424		CKSSYB103K16
C 5425		CKSSYB104K10
C 5426		CKSSYB103K16
C 5427		CKSSYB103K16
C 5428		CKSRYX106M6R3
C 5429		CKSSYB103K16
C 5430		CKSSYB103K16
C 5431		CKSQYX225K16
C 5432		CKSSYB104K10
C 5433		CKSSYB103K16
C 5434		CKSSYB104K10
C 5435		CKSSYB103K16
C 5436		CKSSYB104K10
C 5437		CKSSYB103K16
C 5438		CKSSYB103K16
C 5439		CKSSYB103K16

C

Unit Number : CWX4609
Unit Name : DVD Core Unit

MISCELLANEOUS

IC	1002	Regulator IC	MM1886A50P
IC	1004	IC	NJM2855DL1-33

Circuit Symbol and No.			Part No.
IC	1251	IC	BA5839FP
IC	1401	Flash ROM Unit	CWJ3337
IC	1402	Flash ROM Unit	CWJ3338
IC	1480	RAM IC	M12L64164A-5TG2Y
IC	1501	IC	MN2DS0018MA
IC	1953	IC	S-1135D12-A6
Q	1101	Bipolar TR	LSCR523UB
Q	1102	Bipolar TR	LSCR523UB
Q	1103	Transistor	2SAR293PGZE
Q	1104	Transistor	2SAR293PGZE
L	1501	Inductor	CTF1743
L	1511	Chip Beads	VTL1126
L	1902	Inductor	CTF1487
L	1903	Inductor	CTF1558
L	1904	Resistor	RS1/16SS0R0J
X	1501	Crystal Resonator 27.000 MHz	CSS1823
S	1	Lever Switch	CSN1090
S	3	Lever Switch	CSN1089
F	1001	Filter	DTF1106
F	1002	EMI Filter	DTL1106
VR	1101	SMD Semi Fixed VR 6.8 kohm (B)	CCP1661
VR	1102	SMD Semi Fixed VR 15 kohm (B)	CCP1573
CN	1101	FFC/FPC Connector	CKS6776
CN	1952	Connector	CKS4926

RESISTORS

R	1004		RS1/16SS4702F
R	1007		RS1/16SS6801F
R	1019		RS1/16SS101J
R	1025		RS1/16SS101J
R	1027		RS1/16SS101J
R	1101		RS1/16SS104J
R	1102		RS1/16SS104J
R	1103		RS1/16SS4300F
R	1104		RS1/16SS5100F
R	1105		RS1/16SS4300F
R	1106		RS1/16SS5600F
R	1109		RS1/16SS3R3J
R	1110		RS1/16SS3R3J
R	1111		RS1/10SR3R3J
R	1112		RS1/10SR3R3J
R	1113		RS1/10SR3R9J
R	1114		RS1/10SR3R3J
R	1115		RS1/10SR2R7J
R	1116		RS1/10SR2R7J
R	1117		RS1/10SR3R9J
R	1118		RS1/10SR3R9J
R	1223		RS1/16SS561J
R	1225		RS1/16SS471J
R	1251		RS1/16SS333J
R	1252		RS1/16SS473J
R	1253		RS1/16SS333J
R	1254		RS1/16SS473J
R	1255		RS1/16SS183J
R	1256		RS1/16SS153J
R	1257		RS1/16SS221J
R	1258		RS1/16SS221J
R	1401		RS1/16SS221J
R	1402		RS1/16SS104J

Circuit Symbol and No.			Part No.
R	1405		RS1/16SS104J
R	1406		RS1/16SS472J
R	1480		RAB4CQ560J
R	1481		RAB4CQ560J
R	1482		RAB4CQ560J
R	1483		RAB4CQ560J
R	1484		RAB4CQ560J
R	1485		RAB4CQ560J
R	1486		RAB4CQ560J
R	1487		RAB4CQ560J
R	1488		RAB4CQ560J
R	1489		RS1/16SS560J
R	1490		RS1/16SS560J
R	1501		RS1/16SS122J
R	1503		RS1/16SS105J
R	1504		RS1/16SS121J
R	1509		RS1/16SS102J
R	1510		RS1/16SS102J
R	1512		RS1/16SS470J
R	1513		RS1/16SS203J
R	1514		RS1/16SS183J
R	1516		RS1/16SS104J
R	1517		RS1/16SS103J
R	1518		RS1/16SS103J
R	1522		RS1/16SS104J
R	1523		RS1/16SS221J
R	1524		RS1/16SS472J
R	1525		RS1/16SS103J
R	1526		RS1/16SS103J
R	1527		RS1/16SS682J
R	1528		RS1/16SS103J
R	1529		RS1/16SS103J
R	1530		RS1/16SS103J
R	1531		RS1/16SS103J
R	1533		RS1/16SS104J
R	1534		RS1/16SS221J
R	1535		RS1/16SS104J
R	1536		RS1/16SS104J
R	1537		RS1/16SS104J
R	1538		RS1/16SS104J
R	1539		RS1/16SS104J
R	1540		RS1/16SS221J
R	1541		RS1/16SS221J
R	1542		RS1/16SS103J
R	1546		RS1/16SS682J
R	1601		RS1/16SS123J
R	1602		RS1/16SS123J
R	1603		RS1/16SS1002D
R	1604		RS1/16SS105J
R	1605		RS1/16SS105J
R	1670		RS1/16SS1002D
R	1671		RS1/16SS2402D
R	1672		RS1/16SS2000D
R	1674		RS1/16SS3002D
R	1982		RS1/16SS822J
R	1983		RS1/16SS1000D
R	1990		RS1/16SS2000D
R	1991		RS1/16SS101J
R	1996		RS1/16SS2000D
R	1997		RS1/16SS101J

Circuit Symbol and No.		Part No.
R 2002		RS1/16SS2000D
R 2003		RS1/16SS101J

CAPACITORS

C 1002		CKSSYB104K16
C 1003		CKSSYB104K16
C 1004	4.7 uF	CCG1201
C 1005		CKSRYB105K16
C 1011		CKSRYB105K10
C 1015		CKSSYB102K50
C 1016		CKSSYB102K50
C 1018		CKSSYB104K10
C 1040		CCSRCH821J50
C 1041		CCSRCH271J50
C 1101	10 uF	DCH1201
C 1104		CKSSYB104K10
C 1105		CKSSYB104K10
C 1106		CKSSYB103K16
C 1107		CKSSYB103K16
C 1108		CKSSYB103K16
C 1109		CKSRYB224K16
C 1110		CKSSYB103K16
C 1111		CKSRYB224K16
C 1112	22 uF	DCH1256
C 1113	22 uF	DCH1256
C 1210		CKSSYB104K16
C 1251		CEVW101M16
C 1252	4.7 uF	CCG1222
C 1253		CKSSYB104K16
C 1254		CKSSYB104K16
C 1255		CKSSYB104K16
C 1401		CKSSYB104K16
C 1403		CKSSYB104K10
C 1408		CKSSYB104K10
C 1410		CKSSYB104K16
C 1480		CKSSYB104K10
C 1481		CKSSYB104K10
C 1482		CKSSYB104K10
C 1484		CKSSYB104K10
C 1485		CKSSYB104K10
C 1487		CKSSYB104K10
C 1488		CKSSYB104K10
C 1489	10 uF	DCH1201
C 1490		CKSSYB102K50
C 1501	10 uF	DCH1201
C 1502	10 uF	DCH1201
C 1503		CKSSYB104K10
C 1504		CKSSYB104K10
C 1505		CKSSYB104K10
C 1506		CKSSYB104K10
C 1507		CKSSYB104K10
C 1508		CKSSYB104K10
C 1509		CKSSYB104K10
C 1510		CCSSCH120J50
C 1511		CKSSYB104K10
C 1512		CCSSCH120J50
C 1513		CKSSYB104K10
C 1514		CKSSYB104K10
C 1515		CKSSYB104K10

Circuit Symbol and No.		Part No.
C 1516		CKSSYB104K10
C 1517		CKSSYB104K10
C 1518		CKSSYB104K10
C 1519		CKSSYB104K10
C 1520		CKSSYB104K10
C 1521		CKSSYB104K10
C 1522		CKSSYB104K10
C 1523		CKSSYB104K10
C 1524		CKSSYB473K16
C 1526		CKSSYB103K16
C 1528		CKSSYB471K50
C 1601		CKSSYB103K16
C 1602		CCSSCH101J50
C 1603		CCSSCH101J50
C 1604		CCSSCH680J50
C 1605		CCSSCH680J50
C 1606		CKSSYB104K10
C 1607	10 uF	DCH1201
C 1608	4.7 uF	CCG1201
C 1609		CKSSYB104K10
C 1612		CKSSYB104K10
C 1613		CKSSYB104K10
C 1614		CKSSYB104K10
C 1615		CKSSYB104K10
C 1616		CKSSYB104K10
C 1617		CKSSYB104K10
C 1618		CCSSCH101J50
C 1619		CKSSYB562K25
C 1620		CKSSYB224K6R3
C 1621		CKSSYB224K6R3
C 1622		CKSSYB333K16
C 1623		CKSRYB105K10
C 1624		CKSSYB104K10
C 1625		CKSSYB104K10
C 1671		CKSSYB104K10
C 1673		CKSSYB104K10
C 1674		CKSSYB104K10
C 1676		CKSRYB105K10
C 1809		CKSSYB102K50
C 1954		CKSRYB105K10
C 1955		CKSSYB104K16
C 1962		CKSRYB105K10

E

Unit Number : CXY2628
Unit Name : Service Unit (Keyboard)

MISCELLANEOUS

IC	6001	IR RC Rec Module	PNJ4833M
D	6001	LED	NESM026D-A21690
S	6001	Push Switch	CSG1155
S	6002	Push Switch	CSG1155
S	6003	Push Switch	CSG1155
S	6004	Push Switch	CSG1155
S	6005	Push Switch	CSG1155
S	6006	Push Switch	CSG1155
S	6007	Push Switch	CSG1155
S	6008	Push Switch	CSG1155

Circuit Symbol and No.		Part No.
CN 6001	FFC/FPC Connector	CKS6757

RESISTORS

R 6001		RS1/16SS470J
R 6002		RS1/16SS392J
R 6003		RS1/16SS472J
R 6004		RS1/16SS123J
R 6005		RS1/16SS182J
R 6006		RS1/16SS682J

CAPACITORS

C 6004		CKSRAYX106M10
C 6006		CKSSYX104K50

F

Unit Number : CXY3599 (A)
Unit Name : Service Unit (I-Data)

MISCELLANEOUS

CN 3201	Connector (A)	CKS6603
CN 3202	FFC/FPC Connector (A)	CKS6634

RESISTORS

R 3202	(A)	RS1/16SS102J