EXPLODED VIEW

A	N67-3008-46	PAN HEAD SEMS SCREW
B	N87-2606-46	BRAZIER HEAD TAPTITE SCREW
C	N87-2614-46	BRAZIER HEAD TAPTITE SCREW

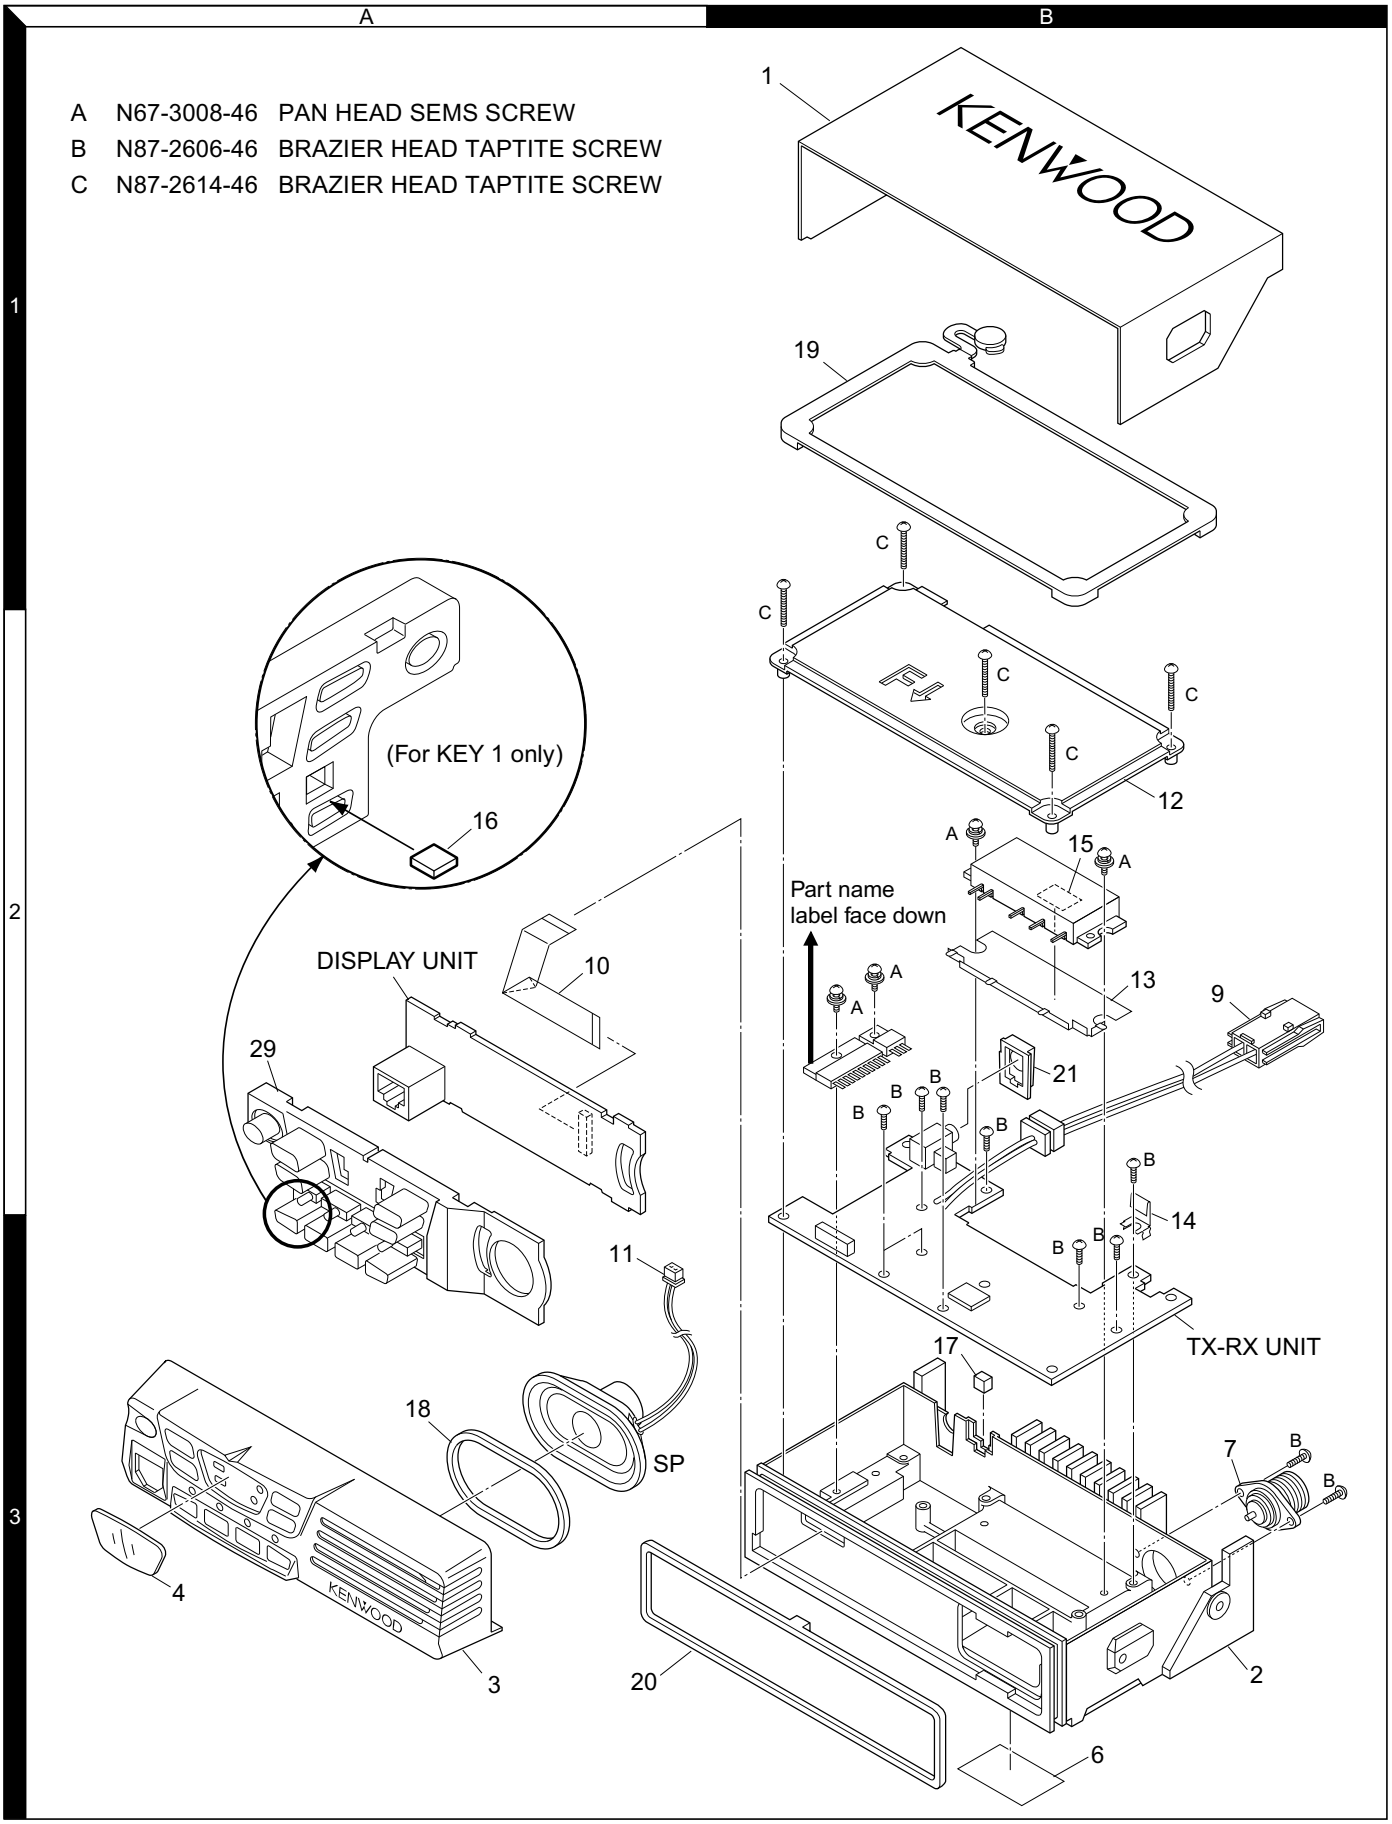

Parts with the exploded numbers larger than 700 are not supplied.

Downloaded from www.Manualslib.com manuals search engine

PACKING

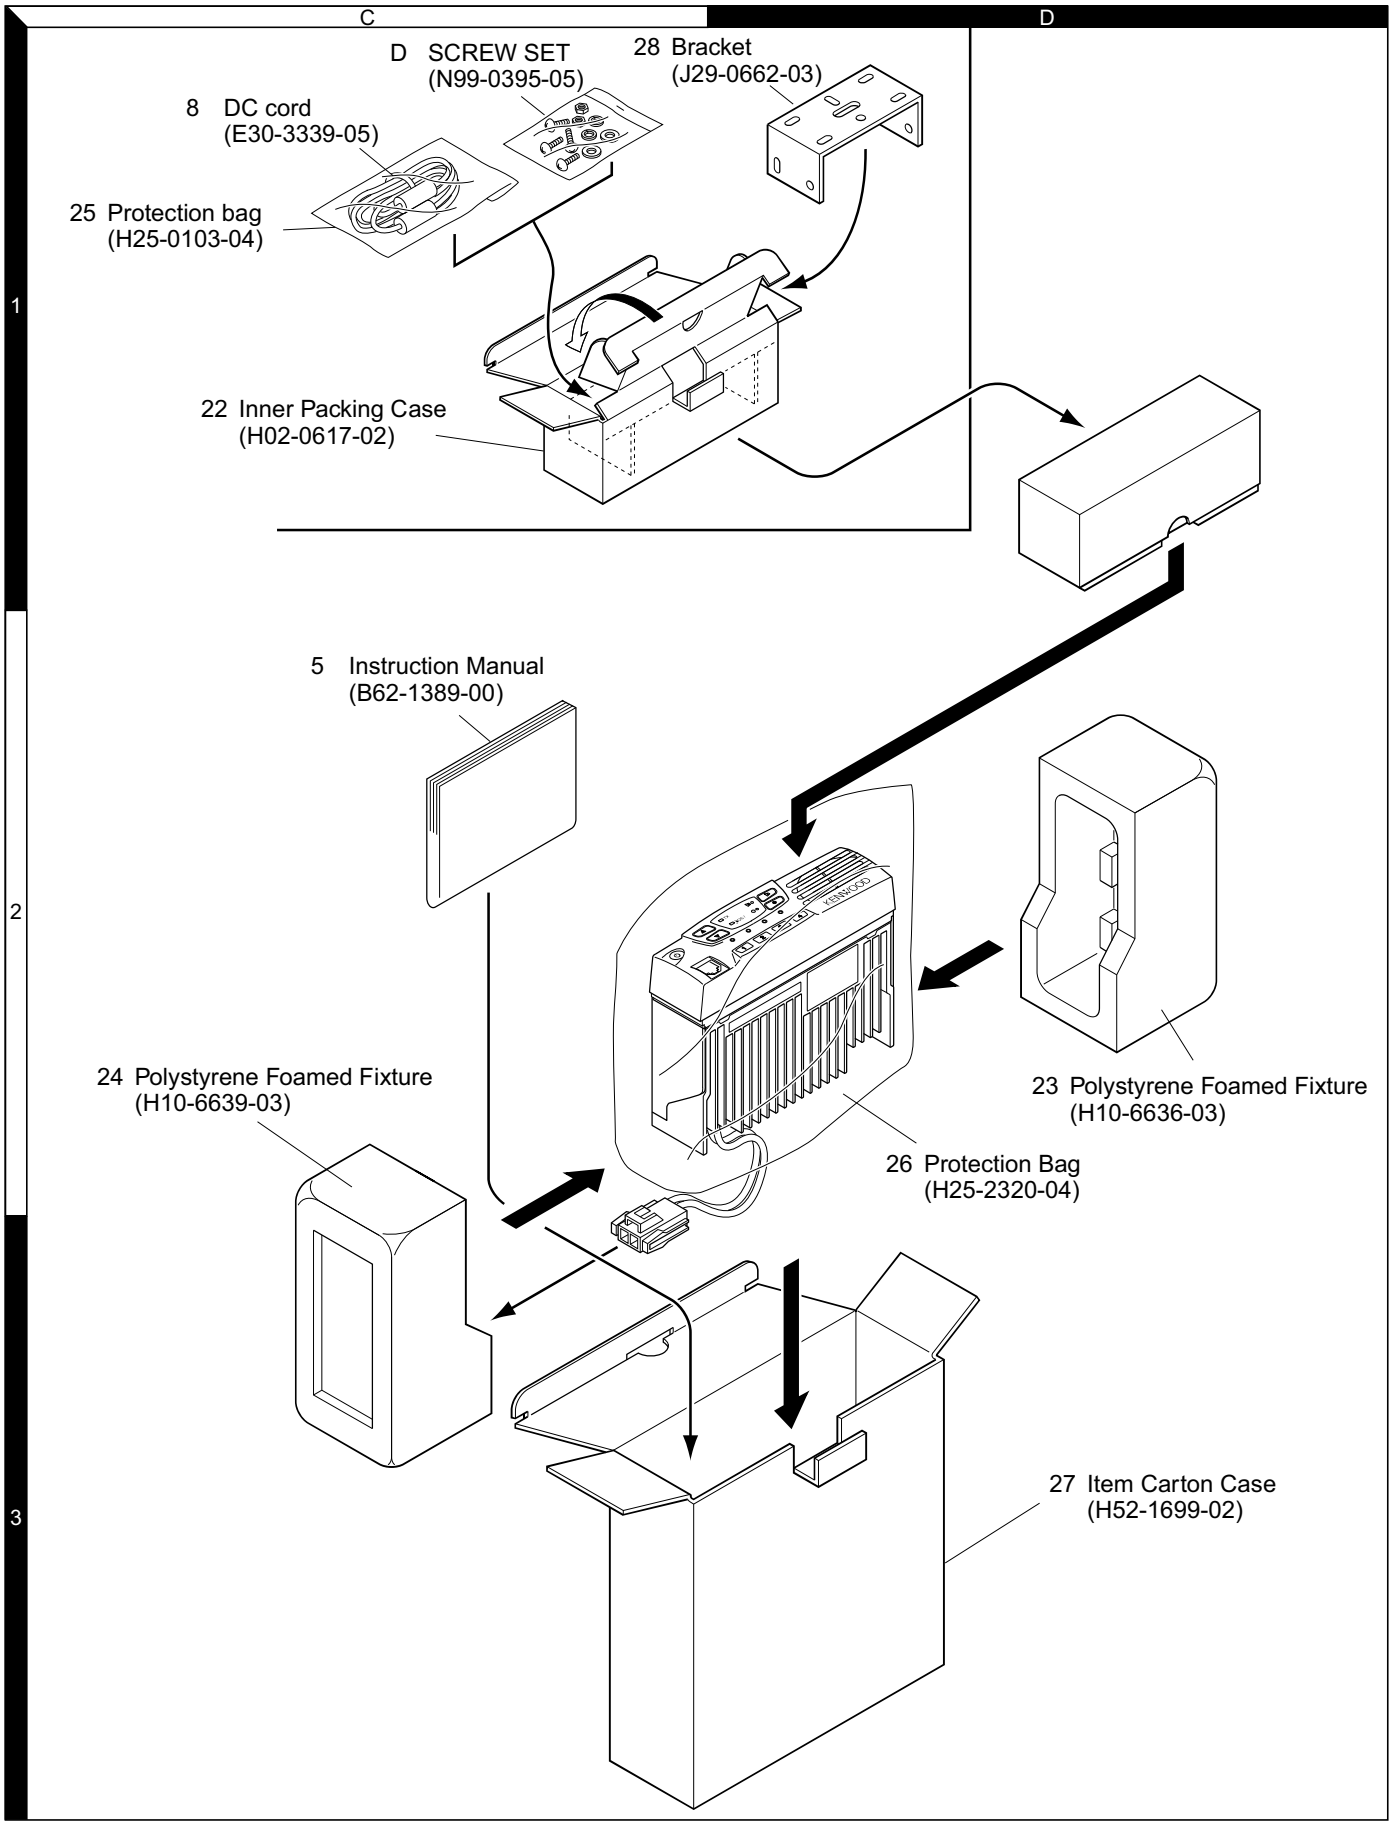

Parts with the exploded numbers larger than 700 are not supplied.

Downloaded from www.Manualslib.com manuals search engine

PARTS LIST

∗ New Parts. ⚠ indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

TK-8102

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-8102					
1	1B		A01-2178-02	CABINET	
2	3B		A10-4047-01	CHASSIS	
3	3A		A62-0942-03	PANEL ASSY	
4	3A		B10-2668-03	FRONT GLASS	
5	2C		B62-1389-00	INSTRUCTION MANUAL	
6	3B	∗	B72-1946-14	MODEL NAME PLATE	M
6	3B	∗	B72-1947-04	MODEL NAME PLATE	M2
6	3B	∗	B72-1948-04	MODEL NAME PLATE	M3
7	3B		E04-0167-05	RF COAXIAL PECEPTACLE(M)	
8	1C		E30-3339-05	DC CORD ACCESSORY	
9	2B		E30-3448-05	DC CORD(RADIO)	
10	2A		E37-0961-05	FLAT CABLE	
11	3A		E37-0962-05	SPEAKER CABLE	
12	2B		F10-2405-12	SHIELDING COVER(UPPER)	
13	2B		F10-2414-03	SHIELDING PLATE(POWER MODULE)	
			F51-0016-05	FUSE(6*30) ACCESSORY	
14	3B		G02-0887-03	EARTH SPRING(TX/RX)	
15	2B		G10-0792-14	FIBROUS SHEET(POWER MODULE)	M2,M3
16	2A	∗	G11-4065-04	SHEET(KEY TOP)	
17	3B		G13-1468-04	CUSHION(DC CORD)	
18	3A		G13-1836-04	CUSHION(SPEAKER)	
19	1B		G53-1524-02	PACKING	
20	3B		G53-1525-03	PACKING(PANEL)	
21	2B		G53-1542-03	PACKING(PHONE JACK)	
22	1C		H02-0617-02	INNER PACKING CASE	
23	3C		H10-6636-03	POLYSTYRENE FOAMED FIXTURE	
24	2D		H10-6639-03	POLYSTYRENE FOAMED FIXTURE	
25	1C		H25-0103-04	PROTECTION BAG	
26	2D		H25-2320-04	PROTECTION BAG	
27	3D	∗	H52-1699-12	ITEM CARTON CASE	
28	1D		J29-0662-03	BRACKET ACCESSORY	
29	2A		K29-9065-01	KEY TOP	
A	2B		N67-3008-46	PAN HEAD SEMS SCREW	
B	2B		N87-2606-46	BRAZIER HEAD TAPTITE SCREW	
C	2B		N87-2614-46	BRAZIER HEAD TAPTITE SCREW	
D	1C		N99-0395-05	SCREW SET ACCESSORY	
SP	3A		T07-0727-05	SPEAKER	
DISPLAY UNIT (X54-3340-20)					
D1-4			B30-2238-05	LED(Y)	
D5-10			B30-2239-05	LED(SY)	
D11			B30-2237-05	LED(YG)	
D12			B30-2240-05	LED(SR)	
C4			CK73GB1H103K	CHIP C 0.010UF K	
C8-17			CK73GB1H103K	CHIP C 0.010UF K	
C18			CC73GCH1H101J	CHIP C 100PF J	
C19			CK73GB1H102K	CHIP C 1000PF K	
CN1			E40-6170-05	FLAT CABLE CONNECTOR	

TX-RX UNIT (X57-6300-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
J1			E08-0877-05	MODULAR JACK	
CP3,4			RK75GB1J392J	CHIP-COM 3.9K J 1/16W	
R1-6			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R7-15			RK73FB2A272J	CHIP R 2.7K J 1/10W	
Q1-8			KRC102S	DIGITAL TRANSISTOR	
Q9			KRA225S	DIGITAL TRANSISTOR	
Q10			KRC102S	DIGITAL TRANSISTOR	
TX-RX UNIT (X57-6300-XX) -20:M, -21:M2, -22:M3					
C12			CK73GB1H102K	CHIP C 1000PF K	
C14			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C22			CK73GB1H102K	CHIP C 1000PF K	
C24			CK73GB1H103K	CHIP C 0.010UF K	
C25			CC73GCH1H220J	CHIP C 22PF J	
C26			CK73GB1C104K	CHIP C 0.10UF K	
C27			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C28			CK73GB1H471K	CHIP C 470PF K	
C29,30			CK73GB1C104K	CHIP C 0.10UF K	
C31,32			C92-0507-05	CHIP-TAN 4.7UF 6.3WV	
C34			CK73GB1C104K	CHIP C 0.10UF K	
C35			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C36			CK73GB1H103K	CHIP C 0.010UF K	
C37			CK73GB1C104K	CHIP C 0.10UF K	
C40			C92-0514-05	CHIP-TAN 2.2UF 10WV	
C42			CK73GB1H102K	CHIP C 1000PF K	
C44			CK73GB1C273K	CHIP C 0.027UF K	
C45			CK73GB1H102K	CHIP C 1000PF K	
C48,49			CK73GB1H471K	CHIP C 470PF K	
C50			CK73GB1C223K	CHIP C 0.022UF K	
C51			CK73GB1C104K	CHIP C 0.10UF K	
C52			C92-0507-05	CHIP-TAN 4.7UF 6.3WV	
C53			CK73GB1C104K	CHIP C 0.10UF K	
C54			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C55			CK73GB1H471K	CHIP C 470PF K	
C56			C92-0555-05	CHIP-TAN 0.047UF 35WV	
C58			CK73GB1H122K	CHIP C 1200PF K	
C59			CK73GB1E103K	CHIP C 0.010UF K	
C60			C92-0543-05	CHIP-TAN 3.3UF 10WV	
C61			CK73GB1H821K	CHIP C 820PF K	
C62			CK73GB1H332K	CHIP C 3300PF K	
C63			CK73GB1H472K	CHIP C 4700PF K	
C64			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C65			C92-0001-05	CHIP-C 0.1UF 35WV	
C66			CC73GCH1H151J	CHIP C 150PF J	
C69			CK73GB1H471K	CHIP C 470PF K	
C71			CK73GB1C104K	CHIP C 0.10UF K	
C73			CC73GCH1H040B	CHIP C 4.0PF B	M2
C73			CC73GCH1H070B	CHIP C 7.0PF B	M3
C73,74			CC73GCH1H080B	CHIP C 8.0PF B	M
C74			CC73GCH1H050B	CHIP C 5.0PF B	M2
C74			CC73GCH1H080B	CHIP C 8.0PF B	M3
C75			CC73GCH1H030B	CHIP C 3.0PF B	M2
C75			CC73GCH1H060B	CHIP C 6.0PF B	M,M3

Downloaded from www.Manualslib.com manuals search engine

PARTS LIST

TX-RX UNIT (X57-6300-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C77			CC73GCH1H0R5B	CHIP C	0.5PF	B	
C78			CC73GCH1H040B	CHIP C	4.0PF	B	M2
C78			CC73GCH1H050B	CHIP C	5.0PF	B	M3
C78			CC73GCH1H060B	CHIP C	6.0PF	B	M
C79			CK73GB1H471K	CHIP C	470PF	K	
C80			CK73GB1H103K	CHIP C	0.010UF	K	
C81			CC73GCH1H271J	CHIP C	270PF	J	
C82			CK73GB1H471K	CHIP C	470PF	K	
C84			CK73GB1C104K	CHIP C	0.10UF	K	
C85			CC73GCH1H010B	CHIP C	1.0PF	B	M
C85			CC73GCH1H020B	CHIP C	2.0PF	B	M2
C85,86			CC73GCH1H020B	CHIP C	2.0PF	B	M3
C86			CC73GCH1H1R5B	CHIP C	1.5PF	B	M,M2
C87			CC73GCH1H560J	CHIP C	56PF	J	
C88			CK73GB1C104K	CHIP C	0.10UF	K	
C89			CC73GCH1H270J	CHIP C	27PF	J	
C90			CK73GB1H471K	CHIP C	470PF	K	
C94			CC73GCH1H101J	CHIP C	100PF	J	
C95			CC73GCH1H020B	CHIP C	2.0PF	B	M2,M3
C95			CC73GCH1H050B	CHIP C	5.0PF	B	M
C97			CC73GCH1H020B	CHIP C	2.0PF	B	M2,M3
C97			CC73GCH1H040B	CHIP C	4.0PF	B	M
C99			CC73GCH1H050B	CHIP C	5.0PF	B	M
C99,100			CC73GCH1H030B	CHIP C	3.0PF	B	M2,M3
C100			CC73GCH1H040B	CHIP C	4.0PF	B	M
C101			CK73GB1H471K	CHIP C	470PF	K	
C102			CK73GB1C104K	CHIP C	0.10UF	K	
C103			C92-0568-05	CHIP-TAN	22UF	10WV	
C104,105			CC73GCH1H0R5B	CHIP C	0.5PF	B	
C106			CC73GCH1H180J	CHIP C	18PF	J	
C107			CC73GCH1H060B	CHIP C	6.0PF	B	
C108,109			CK73GB1H471K	CHIP C	470PF	K	
C110			CC73GCH1H060B	CHIP C	6.0PF	B	
C111,112			CC73GCH1H121J	CHIP C	120PF	J	M3
C111,112			CC73GCH1H221J	CHIP C	220PF	J	M,M2
C113			CK73GB1H471K	CHIP C	470PF	K	
C114			CK73GB1C104K	CHIP C	0.10UF	K	
C115			CC73GCH1H060B	CHIP C	6.0PF	B	
C116,117			CK73GB1C104K	CHIP C	0.10UF	K	
C118			CC73GCH1H020B	CHIP C	2.0PF	B	
C119			CK73GB1H103K	CHIP C	0.010UF	K	
C120			CK73GB1H102K	CHIP C	1000PF	K	M3
C120			CK73GB1H472K	CHIP C	4700PF	K	M,M2
C122			CC73GCH1H040B	CHIP C	4.0PF	B	
C123			C92-0662-05	CHIP-TAN	15UF	6.3WV	
C125,126			CK73GB1H471K	CHIP C	470PF	K	
C127			CK73GB1H103K	CHIP C	0.010UF	K	
C128			CK73GB1H102K	CHIP C	1000PF	K	
C129			CK73GB1C104K	CHIP C	0.10UF	K	
C135			CK73GB1H103K	CHIP C	0.010UF	K	
C136			CK73GB1H102K	CHIP C	1000PF	K	
C138			CC73GCH1H330J	CHIP C	33PF	J	
C141			CK73GB1H471K	CHIP C	470PF	K	
C142			CK73GB1E223K	CHIP C	0.022UF	K	
C143			CK73GB1H102K	CHIP C	1000PF	K	
C144			CK73GB1H392K	CHIP C	3900PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C145			CC73GCH1H060B	CHIP C	6.0PF	B	
C146			CK73GB1H471K	CHIP C	470PF	K	
C147			CK73GB1E223K	CHIP C	0.022UF	K	
C150			CC73GCH1H180J	CHIP C	18PF	J	
C154			CK73GB1H471K	CHIP C	470PF	K	
C155			CK73GB1H103K	CHIP C	0.010UF	K	
C156			CC73GCH1H020B	CHIP C	2.0PF	B	
C157			CK73GB1H471K	CHIP C	470PF	K	
C160			CK73FB1C334K	CHIP C	0.33UF	K	
C162			CC73GCH1H050B	CHIP C	5.0PF	B	
C163			CC73GCH1H120J	CHIP C	12PF	J	
C165			CK73GB1H103K	CHIP C	0.010UF	K	
C166			CC73GCH1H1R5B	CHIP C	1.5PF	B	M,M3
C168			CK73GB1H103K	CHIP C	0.010UF	K	
C169			CK73GB1H471K	CHIP C	470PF	K	
C170			CC73GCH1H050B	CHIP C	5.0PF	B	
C171			CC73GCH1H080B	CHIP C	8.0PF	B	
C173			CK73GB1C104K	CHIP C	0.10UF	K	
C174			CC73GCH1H050B	CHIP C	5.0PF	B	
C176			CK73GB1H471K	CHIP C	470PF	K	
C177			CC73GCH1H070B	CHIP C	7.0PF	B	
C178			CK73GB1C104K	CHIP C	0.10UF	K	
C179			CK73GB1H471K	CHIP C	470PF	K	
C180			CK73GB1H103J	CHIP C	0.010UF	J	
C182			CK73GB1C104K	CHIP C	0.10UF	K	
C184			CK73GB1H471K	CHIP C	470PF	K	
C185			CK73GB1H103J	CHIP C	0.010UF	J	
C186			CC73GCH1H0R5B	CHIP C	0.5PF	B	
C187,188			CK73GB1H471K	CHIP C	470PF	K	
C191			CK73GB1C473K	CHIP C	0.047UF	K	
C192,193			CK73GB1H103J	CHIP C	0.010UF	J	
C194			CK73GB1H471K	CHIP C	470PF	K	
C196			CK73GB1C333K	CHIP C	0.033UF	K	
C197			CK73GB1H471K	CHIP C	470PF	K	
C198			CK73GB1C333K	CHIP C	0.033UF	K	
C199			CC73GCH1H080B	CHIP C	8.0PF	B	M
C199,200			CC73GCH1H080B	CHIP C	8.0PF	B	M2,M3
C200			CC73GCH1H090B	CHIP C	9.0PF	B	M
C201			CK73GB1H471K	CHIP C	470PF	K	
C202			CC73GCH1H150J	CHIP C	15PF	J	
C204			CK73GB1H471K	CHIP C	470PF	K	
C207			CC73GCH1H221J	CHIP C	220PF	J	
C208			CK73GB1H103K	CHIP C	0.010UF	K	
C209,210			CK73GB1H471K	CHIP C	470PF	K	
C211			CK73GB1E183K	CHIP C	0.018UF	K	
C212			CK73GB1H822K	CHIP C	8200PF	K	
C213			CK73GB1H471K	CHIP C	470PF	K	
C214			CK73GB1C683K	CHIP C	0.068UF	K	
C216			CC73GCH1H070B	CHIP C	7.0PF	B	
C217			CK73FB1A105K	CHIP C	1.0UF	K	
C218			CK73GB1C104K	CHIP C	0.10UF	K	
C220			CK73GB1C473K	CHIP C	0.047UF	K	
C221			CK73GB1H471K	CHIP C	470PF	K	
C222			CK73GB1E123K	CHIP C	0.012UF	K	
C223			C92-0507-05	CHIP-TAN	4.7UF	6.3WV	
C225			CK73GB1H222K	CHIP C	2200PF	K	

Downloaded from www.Manualslib.com manuals search engine

PARTS LIST

TX-RX UNIT (X57-6300-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C226			CK73GB1C683K	CHIP C 0.068UF K	
C228			CK73GB1H471K	CHIP C 470PF K	
C230			CK73GB1H471K	CHIP C 470PF K	
C232			CK73GB1H471K	CHIP C 470PF K	
C233			C92-0719-05	ELECTRO 47UF 25WV	
C236			CC73GCH1H060B	CHIP C 6.0PF B	M2
C236			CC73GCH1H070B	CHIP C 7.0PF B	M,M3
C237			CK73GB1C104K	CHIP C 0.10UF K	
C239			CK73GB1H471K	CHIP C 470PF K	
C242			CK73GB1H471K	CHIP C 470PF K	
C243			CK73GB1C104K	CHIP C 0.10UF K	
C246			C92-0719-05	ELECTRO 47UF 25WV	
C247			CC73GCH1H050B	CHIP C 5.0PF B	M2
C247			CC73GCH1H070B	CHIP C 7.0PF B	M,M3
C251,252			CK73GB1H471K	CHIP C 470PF K	
C254			C92-0004-05	CHIP-TAN 1.0UF 16WV	
C255			CC73GCH1H0R5B	CHIP C 0.5PF B	
C256			CK73GB1C104K	CHIP C 0.10UF K	
C262			C92-0568-05	CHIP-TAN 22UF 10WV	
C264			CK73GB1H471K	CHIP C 470PF K	
C265			C92-0568-05	CHIP-TAN 22UF 10WV	
C266			CC73GCH1H030B	CHIP C 3.0PF B	M2
C266			CC73GCH1H060B	CHIP C 6.0PF B	M,M3
C268			C92-0568-05	CHIP-TAN 22UF 10WV	
C269			CK73GB1H103K	CHIP C 0.010UF K	
C271			CK73GB1H103K	CHIP C 0.010UF K	
C273			CC73GCH1H0R5B	CHIP C 0.5PF B	
C274			CK73GB1H103K	CHIP C 0.010UF K	
C275			CK73GB1C104K	CHIP C 0.10UF K	
C277			CK73FB1A105K	CHIP C 1.0UF K	
C279			CK73GB1H471K	CHIP C 470PF K	
C280			C92-0633-05	CHIP-TAN 22UF 10WV	
C283			CK73GB1H471K	CHIP C 470PF K	
C284			CK73FB1C224K	CHIP C 0.22UF K	
C286			CK73GB1C104K	CHIP C 0.10UF K	
C288			C92-0721-05	ELECTRO 330UF 25WV	
C289			C93-0603-05	CHIP C 1000PF K	
C290			CK73GB1H471K	CHIP C 470PF K	
C291			CC73GCH1H0R5B	CHIP C 0.5PF B	
C292			CC73GCH1H020B	CHIP C 2.0PF B	
C294,295			CK73GB1H471K	CHIP C 470PF K	
C296			C93-0550-05	CHIP C 1.0PF C	M2
C296			C93-0552-05	CHIP C 2.0PF C	M,M3
C298,299			CK73GB1H471K	CHIP C 470PF K	
C301			C93-0550-05	CHIP C 1.0PF C	
C302			C92-0040-05	CHIP-ELE 47UF 16WV	
C303,304			CK73GB1H471K	CHIP C 470PF K	
C305			C93-0554-05	CHIP C 4.0PF C	M2
C305			C93-0556-05	CHIP C 6.0PF D	M
C305			C93-0557-05	CHIP C 7.0PF D	M3
C307			CK73GB1H471K	CHIP C 470PF K	
C308			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C310			CK73GB1H103K	CHIP C 0.010UF K	
C312			CC73GCH1H0R5B	CHIP C 0.5PF B	
C313			CC73GCH1H020B	CHIP C 2.0PF B	
C314			CK73GB1C104K	CHIP C 0.10UF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C316			C92-0516-05	CHIP-TAN 4.7UF 16WV	
C318			CK73GB1H471K	CHIP C 470PF K	
C320			C92-0722-05	ELECTRO 470UF 16WV	
C323			C93-0553-05	CHIP C 3.0PF C	M2
C323			C93-0554-05	CHIP C 4.0PF C	M
C323			C93-0556-05	CHIP C 6.0PF D	M3
C324			CK73GB1H471K	CHIP C 470PF K	
C326			CK73GB1H471K	CHIP C 470PF K	
C327			CK73GB1H102K	CHIP C 1000PF K	
C328			CK73GB1H471K	CHIP C 470PF K	
C329			CK73GB1H103K	CHIP C 0.010UF K	
C330-332			CC73GCH1H101J	CHIP C 100PF J	
C333			CK73GB1H471K	CHIP C 470PF K	
C334			CC73GCH1H180J	CHIP C 18PF J	
C335,336			CK73GB1C104K	CHIP C 0.10UF K	
C337			C92-0507-05	CHIP-TAN 4.7UF 6.3WV	
C338			CK73GB1C104K	CHIP C 0.10UF K	
C340			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C341			CK73GB1H471K	CHIP C 470PF K	
C342			C92-0507-05	CHIP-TAN 4.7UF 6.3WV	
C344-350			CK73GB1H471K	CHIP C 470PF K	
C351			CK73GB1H102K	CHIP C 1000PF K	
C352,353			CK73GB1H471K	CHIP C 470PF K	
C355			CK73GB1C104K	CHIP C 0.10UF K	
C356			CK73GB1H103K	CHIP C 0.010UF K	
C358-361			CK73GB1H471K	CHIP C 470PF K	
C362			CK73GB1C104K	CHIP C 0.10UF K	
C363			CC73GCH1H050B	CHIP C 5.0PF B	M2
C363			CC73GCH1H080B	CHIP C 8.0PF B	M,M3
C364,365			CK73GB1H471K	CHIP C 470PF K	
C366			CC73GCH1H070B	CHIP C 7.0PF B	
C367			CK73GB1H471K	CHIP C 470PF K	
C369			CK73GB1H471K	CHIP C 470PF K	
C371,372			CK73GB1H471K	CHIP C 470PF K	
C374			C92-0507-05	CHIP-TAN 4.7UF 6.3WV	
C375			CK73GB1C104K	CHIP C 0.10UF K	
C376			CK73GB1H471K	CHIP C 470PF K	
C377			C92-0004-05	CHIP-TAN 1.0UF 16WV	
C378			CK73GB1H471K	CHIP C 470PF K	
C379			CK73GB1C104K	CHIP C 0.10UF K	
C511			CK73GB1H471K	CHIP C 470PF K	
C512,513			CC73GCH1H101J	CHIP C 100PF J	
C514			C92-0004-05	CHIP-TAN 1.0UF 16WV	M,M2
C514			C92-0514-05	CHIP-TAN 2.2UF 10WV	M3
C515			CK73GB1H471K	CHIP C 470PF K	
C518			C92-0507-05	CHIP-TAN 4.7UF 6.3WV	
C520			CK73GB1H102K	CHIP C 1000PF K	
C521			CK73GB1H392K	CHIP C 3900PF K	
C522			CK73FB1A105K	CHIP C 1.0UF K	
C523			C93-0550-05	CHIP C 1.0PF C	
C524			CK73GB1H102K	CHIP C 1000PF K	
C525			C93-0550-05	CHIP C 1.0PF C	M,M2
C525			C93-0552-05	CHIP C 2.0PF C	M3
C526			CK73GB1H102K	CHIP C 1000PF K	
TC1			C05-0245-05	CERAMIC TRIMMER CAP(10PF)	M3
TC1,2			C05-0245-05	CERAMIC TRIMMER CAP(10PF)	M,M2

Downloaded from www.Manualslib.com manuals search engine

PARTS LIST

TX-RX UNIT (X57-6300-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TC2,3			C05-0399-05	CERAMIC TRIMMER CAP(6PF)	M3
TC3			C05-0399-05	CERAMIC TRIMMER CAP(6PF)	M,M2
TC5			C05-0399-05	CERAMIC TRIMMER CAP(6PF)	M,M2
TC5			C05-0400-05	CERAMIC TRIMMER CAP(3PF)	M3
CN1			E40-5651-05	FLAT CABLE CONNECTOR	
CN5			E40-3246-05	PIN ASSY	
CN6			E23-0486-05	TERMINAL	
J1			E11-0425-05	3.5D PHONE JACK(3P)	
J2			E37-0804-05	PROCESSED LEAD WIRE	M
CF1			L72-0993-05	CERAMIC FILTER	
CF2			L72-0994-05	CERAMIC FILTER	M
CF2		*	L72-0999-05	CERAMIC FILTER	M2,M3
L1			L92-0140-05	FERRITE CHIP	
L2		*	L41-1005-08	SMALL FIXED INDUCTOR	
L3			L92-0138-05	FERRITE CHIP	
L4			L92-0140-05	FERRITE CHIP	
L5,6			L40-2702-86	SMALL FIXED INDUCTOR(27UH)	M
L5,6			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	M2,M3
L7			L92-0140-05	FERRITE CHIP	
L8			L40-2702-86	SMALL FIXED INDUCTOR(27UH)	M
L8			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	M2,M3
L9			L40-3378-67	SMALL FIXED INDUCTOR(33NH)	M
L9			L40-3978-67	SMALL FIXED INDUCTOR(39NH)	M2
L9			L40-5678-67	SMALL FIXED INDUCTOR(56NH)	M3
L10			L40-2702-86	SMALL FIXED INDUCTOR(27UH)	M
L10			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	M2,M3
L11			L40-2778-67	SMALL FIXED INDUCTOR(27NH)	M
L11			L40-3378-67	SMALL FIXED INDUCTOR(33NH)	M2
L11			L40-4778-67	SMALL FIXED INDUCTOR(47NH)	M3
L12			L40-3381-86	SMALL FIXED INDUCTOR(0.33UH)	
L13			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	M2,M3
L13			L40-2702-86	SMALL FIXED INDUCTOR(27UH)	M
L14			L40-3381-86	SMALL FIXED INDUCTOR(0.33UH)	
L15			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	M2
L15			L40-2702-86	SMALL FIXED INDUCTOR(27UH)	M
L15			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	M3
L16			L92-0140-05	FERRITE CHIP	
L17		*	L41-3385-08	SMALL FIXED INDUCTOR	
L18			L92-0140-05	FERRITE CHIP	
L19,20			L40-2702-86	SMALL FIXED INDUCTOR(27UH)	M
L19,20			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	M2,M3
L21			L41-2775-06	SMALL FIXED INDUCTOR	
L22			L34-4554-05	COIL	
L23			L92-0140-05	FERRITE CHIP	
L24			L41-2775-06	SMALL FIXED INDUCTOR	
L26,27			L40-4785-85	SMALL FIXED INDUCTOR(0.47UH)	
L30			L34-4603-05	AIR-CORE COIL	M2
L30			L34-4604-05	AIR-CORE COIL	M
L30			L34-4605-05	AIR-CORE COIL	M3
L31			L41-1875-08	SMALL FIXED INDUCTOR	
L32			L34-4604-05	AIR-CORE COIL	M,M2
L32			L34-4605-05	AIR-CORE COIL	M3
L33			L41-2275-08	SMALL FIXED INDUCTOR	
L36			L34-4603-05	AIR-CORE COIL	M2
L36			L34-4604-05	AIR-CORE COIL	M
L36			L34-4605-05	AIR-CORE COIL	M3

Ref. No.	Address	New parts	Parts No.	Description	Destination
L38			L34-4604-05	AIR-CORE COIL	M,M2
L38			L34-4605-05	AIR-CORE COIL	M3
L40			L34-4478-05	AIR-CORE COIL	
L42			L34-1185-05	AIR-CORE COIL	
L43,44			L34-1039-05	AIR-CORE COIL	
L45			L34-4478-05	AIR-CORE COIL	
L46			L41-2775-06	SMALL FIXED INDUCTOR	
L48,49			L34-4604-05	AIR-CORE COIL	
L50			L40-3975-92	SMALL FIXED INDUCTOR(39NH)	
L51			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	M,M2
L51			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	M3
L54,55			L92-0179-05	FERRITE CHIP	
X1		*	L77-1868-15	TCXO (16.8MHZ)	
X2			L77-1867-05	CRYSTAL RESONATOR(7.159MHZ)	
XF1			L71-0591-05	MCF (49.95MHZ)	
R1			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R2			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R3			R92-1252-05	CHIP R 0 OHM	
R4,5			RK73GB1J101J	CHIP R 100 J 1/16W	
R6,7			R92-1252-05	CHIP R 0 OHM	
R10,11			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R12			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R13			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R15			RK73GB1J100J	CHIP R 10 J 1/16W	
R18			RK73GB1J913J	CHIP R 91K J 1/16W	
R19			RK73GB1J683J	CHIP R 68K J 1/16W	
R20			RK73GB1J104J	CHIP R 100K J 1/16W	
R21			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R22			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R23			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R24			RK73GB1J754J	CHIP R 750K J 1/16W	
R26,27			RK73GH1J153D	CHIP R 15K D 1/16W	
R28			R92-1252-05	CHIP R 0 OHM	
R30			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R31			RK73GB1J244J	CHIP R 240K J 1/16W	
R32			R92-1252-05	CHIP R 0 OHM	
R33			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R34			RK73GB1J123J	CHIP R 12K J 1/16W	
R36			RK73GB1J471J	CHIP R 470 J 1/16W	
R37-39			RK73GB1J103J	CHIP R 10K J 1/16W	
R40			RK73GB1J224J	CHIP R 220K J 1/16W	
R41,42			RK73GB1J183J	CHIP R 18K J 1/16W	
R43			RK73GB1J223J	CHIP R 22K J 1/16W	
R44			R92-1252-05	CHIP R 0 OHM	
R45			RK73GB1J334J	CHIP R 330K J 1/16W	
R46			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R47			RK73GB1J473J	CHIP R 47K J 1/16W	
R48			RK73GB1J683J	CHIP R 68K J 1/16W	
R49			RK73GB1J823J	CHIP R 82K J 1/16W	
R50			RK73GB1J153J	CHIP R 15K J 1/16W	
R51			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R52			RK73GB1J683J	CHIP R 68K J 1/16W	
R53			RK73GB1J823J	CHIP R 82K J 1/16W	
R54			RK73GB1J103J	CHIP R 10K J 1/16W	
R55			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R56			RK73GB1J152J	CHIP R 1.5K J 1/16W	

Downloaded from www.Manualslib.com manuals search engine

PARTS LIST

TX-RX UNIT (X57-6300-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R57			RK73GB1J683J	CHIP R 68K J 1/16W	
R58			RK73GB1J473J	CHIP R 47K J 1/16W	
R59			RK73GB1J223J	CHIP R 22K J 1/16W	
R60			RK73GB1J103J	CHIP R 10K J 1/16W	
R61			RK73GB1J473J	CHIP R 47K J 1/16W	
R62,63			RK73GB1J104J	CHIP R 100K J 1/16W	
R64			RK73GB1J154J	CHIP R 150K J 1/16W	
R67			RK73GB1J223J	CHIP R 22K J 1/16W	
R70			RK73GB1J473J	CHIP R 47K J 1/16W	
R72			RK73GB1J154J	CHIP R 150K J 1/16W	
R73,74			RK73GB1J103J	CHIP R 10K J 1/16W	
R76			RK73GB1J101J	CHIP R 100 J 1/16W	
R77,78			RK73GB1J103J	CHIP R 10K J 1/16W	
R80-85			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R86			RK73GB1J101J	CHIP R 100 J 1/16W	
R87			RK73GB1J223J	CHIP R 22K J 1/16W	
R88			RK73GB1J101J	CHIP R 100 J 1/16W	
R89			RK73GB1J104J	CHIP R 100K J 1/16W	
R94			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R97			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R98			RK73GB1J221J	CHIP R 220 J 1/16W	M
R98			RK73GB1J271J	CHIP R 270 J 1/16W	M2
R98			RK73GB1J331J	CHIP R 330 J 1/16W	M3
R99			RK73GB1J151J	CHIP R 150 J 1/16W	M
R99			RK73GB1J221J	CHIP R 220 J 1/16W	M2
R99			RK73GB1J271J	CHIP R 270 J 1/16W	M3
R100			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R101			RK73GB1J124J	CHIP R 120K J 1/16W	
R102			RK73GB1J223J	CHIP R 22K J 1/16W	
R103			RK73GB1J182J	CHIP R 1.8K J 1/16W	M,M2
R103			RK73GB1J183J	CHIP R 18K J 1/16W	M2
R104			R92-1252-05	CHIP R 0 OHM	
R106			RK73GB1J123J	CHIP R 12K J 1/16W	M3
R106			RK73GB1J472J	CHIP R 4.7K J 1/16W	M,M2
R107			RK73GB1J101J	CHIP R 100 J 1/16W	
R108			RK73GB1J224J	CHIP R 220K J 1/16W	M3
R108			RK73GB1J274J	CHIP R 270K J 1/16W	M,M2
R109			R92-1252-05	CHIP R 0 OHM	
R111			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R113			RK73GB1J183J	CHIP R 18K J 1/16W	
R114			R92-1252-05	CHIP R 0 OHM	
R115			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R117			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R118			RK73GB1J473J	CHIP R 47K J 1/16W	
R119			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R120			RK73GB1J473J	CHIP R 47K J 1/16W	
R122,123			RK73GB1J473J	CHIP R 47K J 1/16W	
R124			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R127			RK73GB1J104J	CHIP R 100K J 1/16W	
R128			RK73GB1J105J	CHIP R 1.0M J 1/16W	
R130			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R132			RK73GB1J471J	CHIP R 470 J 1/16W	
R133			RK73GB1J101J	CHIP R 100 J 1/16W	
R134			R92-1252-05	CHIP R 0 OHM	
R135-140			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R141			RK73GB1J152J	CHIP R 1.5K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R142-144			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R145			R92-1252-05	CHIP R 0 OHM	
R146			RK73GB1J334J	CHIP R 330K J 1/16W	
R147			RK73GB1J124J	CHIP R 120K J 1/16W	
R149			RK73GB1J104J	CHIP R 100K J 1/16W	
R150			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R151			RK73GB1J103J	CHIP R 10K J 1/16W	
R152			RK73GB1J473J	CHIP R 47K J 1/16W	
R153			RK73GB1J561J	CHIP R 560 J 1/16W	
R154			RK73GB1J471J	CHIP R 470 J 1/16W	
R155			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R156			RK73GB1J101J	CHIP R 100 J 1/16W	
R158			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R159			RK73GB1J101J	CHIP R 100 J 1/16W	
R160			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R161			RK73GB1J333J	CHIP R 33K J 1/16W	
R162			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R163			RK73GB1J561J	CHIP R 560 J 1/16W	
R164			RK73GB1J473J	CHIP R 47K J 1/16W	
R165			RK73GB1J333J	CHIP R 33K J 1/16W	
R166			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R167			RK73GB1J470J	CHIP R 47 J 1/16W	
R168			RK73GB1J333J	CHIP R 33K J 1/16W	
R169			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R172			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R173			RK73GB1J104J	CHIP R 100K J 1/16W	
R174			RK73GB1J220J	CHIP R 22 J 1/16W	
R175			RK73GB1J181J	CHIP R 180 J 1/16W	
R176			RK73GB1J823J	CHIP R 82K J 1/16W	
R177			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R178			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R179			RK73GB1J154J	CHIP R 150K J 1/16W	
R181			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R183			RK73GB1J101J	CHIP R 100 J 1/16W	
R184			R92-1252-05	CHIP R 0 OHM	
R185			RK73GB1J471J	CHIP R 470 J 1/16W	
R186			RK73GB1J100J	CHIP R 10 J 1/16W	
R188			RK73GB1J104J	CHIP R 100K J 1/16W	
R189			RK73GH1J124D	CHIP R 120K D 1/16W	
R190			RK73GB1J123J	CHIP R 12K J 1/16W	
R191			RK73GH1J913D	CHIP R 91K D 1/16W	
R192			RK73GB1J562J	CHIP R 5.6K J 1/16W	
R194			RK73GB1J153J	CHIP R 15K J 1/16W	
R195			RK73GH1J562D	CHIP R 5.6K D 1/16W	
R197			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R198			RK73GB1J100J	CHIP R 10 J 1/16W	
R201			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R202			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R203			RK73FB2A331J	CHIP R 330 J 1/10W	
R204			RK73GB1J104J	CHIP R 100K J 1/16W	
R205			RK73FB2A100J	CHIP R 10 J 1/10W	M,M3
R205			RK73FB2A330J	CHIP R 33 J 1/10W	M2
R207			RK73GB1J823J	CHIP R 82K J 1/16W	
R208			RK73GB1J151J	CHIP R 150 J 1/16W	
R209			RK73GB1J394J	CHIP R 390K J 1/16W	
R210			RK73GB1J334J	CHIP R 330K J 1/16W	

Downloaded from www.Manualslib.com manuals search engine

PARTS LIST

TX-RX UNIT (X57-6300-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R211			RK73GB1J473J	CHIP R 47K J 1/16W	
R213			R92-0685-05	CHIP R 22 J 1/2W	
R214			RK73GB1J562J	CHIP R 5.6K J 1/16W	
R215			RK73GB1J104J	CHIP R 100K J 1/16W	
R216			RK73GB1J562J	CHIP R 5.6K J 1/16W	
R217			RK73GB1J474J	CHIP R 470K J 1/16W	
R218			RK73GB1J394J	CHIP R 390K J 1/16W	
R219			RK73GB1J105J	CHIP R 1.0M J 1/16W	
R221			RK73FB2A471J	CHIP R 470 J 1/10W	
R224			RK73FB2A120J	CHIP R 12 J 1/10W	
R227			RK73GB1J223J	CHIP R 22K J 1/16W	
R228			RK73GB1J184J	CHIP R 180K J 1/16W	
R229			RK73GB1J223J	CHIP R 22K J 1/16W	
R232			RK73GB1J184J	CHIP R 180K J 1/16W	
R233			RK73FB2A471J	CHIP R 470 J 1/10W	
R234			RK73GB1J153J	CHIP R 15K J 1/16W	
R236			R92-1213-05	CHIP R 100 J 1/2W	
R237			RK73GB1J104J	CHIP R 100K J 1/16W	
R238			RK73GB1J153J	CHIP R 15K J 1/16W	
R239			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R240			RK73FB2A222J	CHIP R 2.2K J 1/10W	
R241			RK73GB1J334J	CHIP R 330K J 1/16W	
R242			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R243			RK73GB1J103J	CHIP R 10K J 1/16W	
R244			RK73GB1J682J	CHIP R 6.8K J 1/16W	
R245,246			RK73GB1J104J	CHIP R 100K J 1/16W	
R247			RK73GB1J103J	CHIP R 10K J 1/16W	
R248			RK73GB1J473J	CHIP R 47K J 1/16W	
R249			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R250			RK73GB1J223J	CHIP R 22K J 1/16W	
R251			RK73GB1J273J	CHIP R 27K J 1/16WM	
R252			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R254,255			RK73GB1J473J	CHIP R 47K J 1/16W	
R256			RK73GB1J104J	CHIP R 100K J 1/16W	
R257			R92-1261-05	CHIP R 150 J 1/2W	
R258			RK73GB1J104J	CHIP R 100K J 1/16W	
R260			RK73GB1J473J	CHIP R 47K J 1/16W	
R261			RK73GB1J123J	CHIP R 12K J 1/16W	
R262			R92-1215-05	CHIP R 470 J 1/2W	
R263			RK73GB1J682J	CHIP R 6.8K J 1/16W	
R264			RK73GB1J391J	CHIP R 390 J 1/16W	
R265			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R266			RK73GB1J334J	CHIP R 330K J 1/16W	
R267			RK73GB1J223J	CHIP R 22K J 1/16W	
R268			R92-0670-05	CHIP R 0 OHM	
R271			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R273			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R274			RK73GB1J223J	CHIP R 22K J 1/16W	
R275			RK73GB1J333J	CHIP R 33K J 1/16W	
R276-278			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R279			RK73GJ1J393D	CHIP R 39K D 1/16W	
R280			RK73GH1J274D	CHIP R 270K D 1/16W	
R281			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R282			RK73GB1J684J	CHIP R 680K J 1/16W	
R283			RK73GB1J184J	CHIP R 180K J 1/16W	
R285			RK73GB1J681J	CHIP R 680 J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R286			RK73GB1J124J	CHIP R 120K J 1/16W	
R287			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R288,289			R92-1252-05	CHIP R 0 OHM	
R291			RK73GB1J124J	CHIP R 120K J 1/16W	
R293			RK73GB1J221J	CHIP R 220 J 1/16W	
R294			RK73GB1J681J	CHIP R 680 J 1/16W	
R295,296			R92-1252-05	CHIP R 0 OHM	
R298			RK73GB1J101J	CHIP R 100 J 1/16W	
R300			R92-1252-05	CHIP R 0 OHM	
R301			RK73GB1J104J	CHIP R 100K J 1/16W	
R302			RK73GB1J683J	CHIP R 68K J 1/16W	
R303			RK73GB1J334J	CHIP R 330K J 1/16W	
R304			RK73GB1J224J	CHIP R 220K J 1/16W	
R305			RK73GB1J913J	CHIP R 91K J 1/16W	
R306			RK73GB1J334J	CHIP R 330K J 1/16W	
R307			RK73GB1J333J	CHIP R 33K J 1/16W	
R308			R92-1252-05	CHIP R 0 OHM	
R310			RK73GB1J104J	CHIP R 100K J 1/16W	
R311			RK73GB1J101J	CHIP R 100 J 1/16W	
R313			RK73GB1J821J	CHIP R 820 J 1/16W	
R316			R92-1252-05	CHIP R 0 OHM	
R318			RK73FB2A332J	CHIP R 3.3K J 1/10W	
R319,320			RK73GB1J474J	CHIP R 470K J 1/16W	
R321			R92-1252-05	CHIP R 0 OHM	
R322			RK73GB1J683J	CHIP R 68K J 1/16W	
R323			R92-1252-05	CHIP R 0 OHM	
R324,325			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R326			RK73GB1J333J	CHIP R 33K J 1/16W	
R327			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R328			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R329			RK73GB1J474J	CHIP R 470K J 1/16W	
R330			RK73GB1J394J	CHIP R 390K J 1/16W	
R332			R92-0679-05	CHIP R 0 OHM	
R335			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R336			RK73GB1J473J	CHIP R 47K J 1/16W	
D1-4			DA221	DIODE	
D6			MA2S111	DIODE	
D7			HZU5ALL	DIODE	
D9-12			MA2S304	VARI CAP	
D13			DAN222	DIODE	
D14			MA360	VARI CAP	
D15			DAN222	DIODE	
D16			MA2S111	DIODE	
D18			MA742	DIODE	
D19			DAN235E	DIODE	
D21,22			HVC350B	VARI CAP	M,M3
D21,22			HVC355B	VARI CAP	M2
D23			DA221	DIODE	
D24			MA742	DIODE	
D25			HVC355B	VARI CAP	M3
D25,26			HVC350B	VARI CAP	M
D25,26			HVC355B	VARI CAP	M2
D26			HVC350B	VARI CAP	M3
D27			MA2S111	DIODE	
D28			HVC350B	VARI CAP	M,M3
D28			HVC355B	VARI CAP	M2

Downloaded from www.Manualslib.com manuals search engine

PARTS LIST

TX-RX UNIT (X57-6300-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
D30			MA4PH633	DIODE	
D31,32			XB15A709	DIODE	
D34			MA742	DIODE	
D36			MA742	DIODE	
D38			ZSH5MA27	SURGE ABSORBER	
D39			02DZ18(X,Y)	ZENER DIODE	
D41			1812L110PR	VARISTOR	
D43			DAN222	DIODE	
D44			1SS372	DIODE	
IC1			MB15A02	MOS IC	
IC3			M62363FP	MOS IC	
IC4			NJM2902V	MOS IC	
IC5			TK14489V	BI-POLAR IC	
IC6			784214AGC119	MPU	M
IC6		*	784214AGC125	MPU	M2,M3
IC7			24LC08BT-ISN	ROM IC	
IC9			LC73872M	MOS IC	
IC10			NJM2902V	MOS IC	
IC11			NJM2904V	MOS IC	
IC12			TA75S01F	MOS IC	
IC14			NJM78L05UA	BI-POLAR IC	
IC15			PST9140NR	MOS IC	
IC17			NJM78L05UA	BI-POLAR IC	
IC18			PST9140NR	MOS IC	
IC19			TC7W74FU	MOS IC	
IC20			KIA7808AF	ANALOG IC	
IC21			NJM2100V	MOS IC	
IC22			NJM2904V	MOS IC	
IC101			S-AU27AH(K1)	POWER MODULE	M2
IC101			S-AU27AL(K3)	POWER MODULE	M3
IC101			S-AU27AM(K3)	POWER MODULE	M
IC102			LA4600	AF POWER AMP	
Q2			2SJ243	FET	
Q3			2SC4649(N,P)	TRANSISTOR	
Q4			2SA1832(GR)	TRANSISTOR	
Q5			2SC4738(GR)	TRANSISTOR	
Q6			2SC4649(N,P)	TRANSISTOR	
Q7			2SJ243	FET	
Q10,11			2SK508NV(K52)	FET	
Q12			KRX102U	TRANSISTOR	
Q13			KRC404RTK	DIGITAL TRANSISTOR	
Q14			2SC4617(S)	TRANSISTOR	
Q15			2SC5108(Y)	TRANSISTOR	
Q16			KRC414RTK	DIGITAL TRANSISTOR	
Q18			2SC2412K	TRANSISTOR	
Q19			2SC4649(N,P)	TRANSISTOR	
Q20			2SC5108(Y)	TRANSISTOR	
Q21			3SK255	FET	
Q22			2SK1824	FET	
Q23			2SC3357	TRANSISTOR	
Q24			2SC4617(S)	TRANSISTOR	
Q25			2SC3357	TRANSISTOR	
Q26			3SK255	FET	
Q27			2SC2412K	TRANSISTOR	
Q29,30			KRC102S	DIGITAL TRANSISTOR	
Q31			2SA1745(6,7)	TRANSISTOR	

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q32			DTC363EU	DIGITAL TRANSISTOR	
Q33			KTA1664(Y)	TRANSISTOR	
Q34,35			KRC102S	DIGITAL TRANSISTOR	
Q37,38			KRC404RTK	DIGITAL TRANSISTOR	
Q39			2SC5108(Y)	TRANSISTOR	
Q41			2SC4919	TRANSISTOR	
Q42			2SA1641(S,T)	TRANSISTOR	
Q43			2SK1824	FET	
Q101			KTA1046(Y)	TRANSISTOR	
TH1-3			S1R104J475H	THERMISTOR	
TH5			S1R104J475H	THERMISTOR	

Downloaded from www.Manualslib.com manuals search engine