EXPLODED VIEW

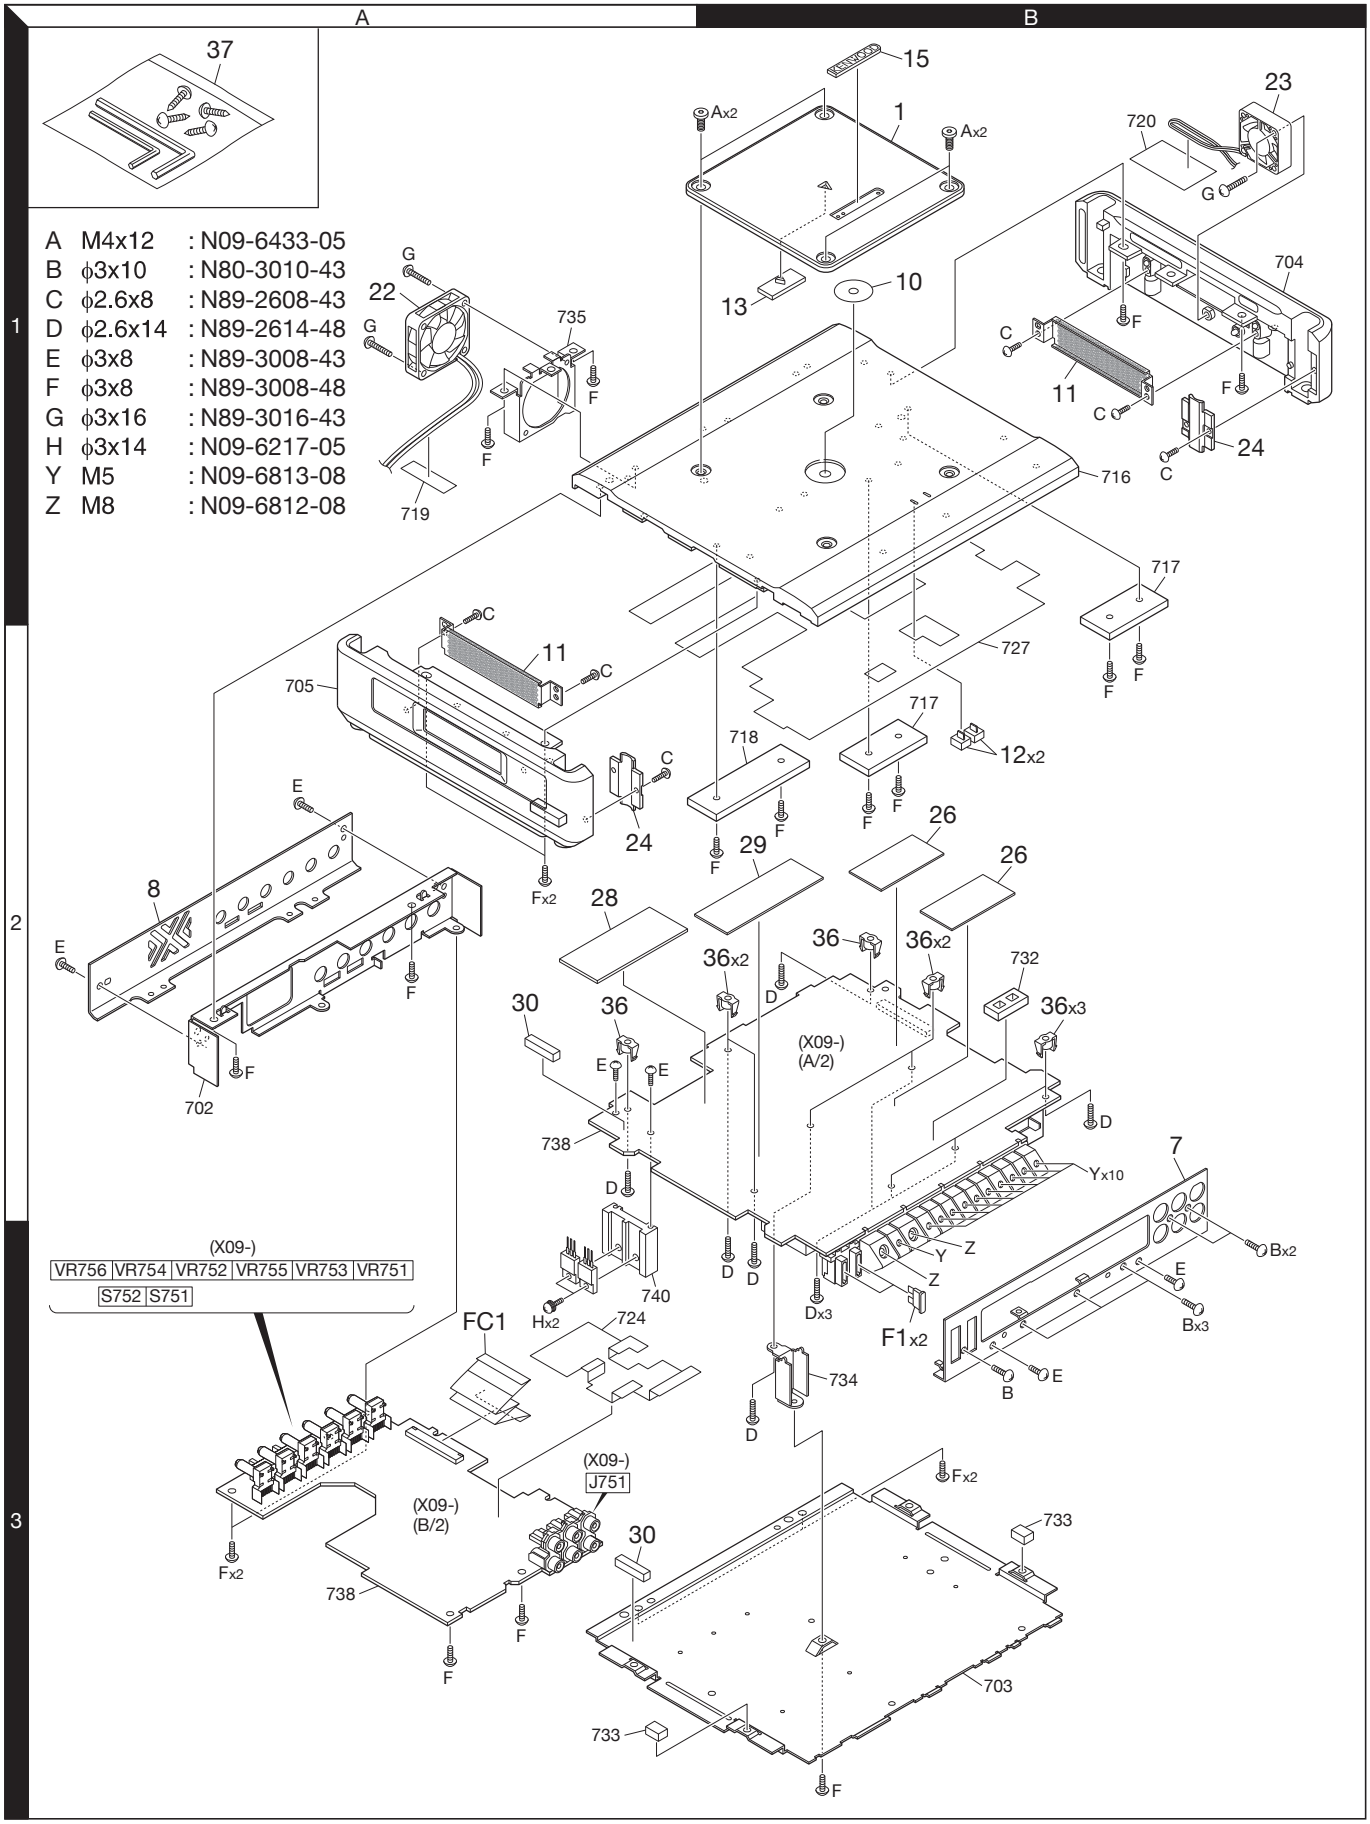

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description			Destination
KAC-X5D/XR-5S							
1	1B	✻	A21-6780-02	DRESSING PANEL			K
1	1B	✻	A21-6781-02	DRESSING PANEL			E1
7	2B	✻	A64-5127-02	PANEL			
8	2A	✻	A84-0627-02	REAR PANEL			
10	1B		B03-5109-04	DRESSING PLATE			
11	1A		B04-0604-04	PUNCHING METAL			
12	2B		B19-2525-04	LIGHTING BOARD			
13	1B		B19-2526-04	LIGHTING BOARD			
15	1B		B43-0336-04	BADGE			
-		✻	B64-4543-00	INSTRUCTION MANUAL (ENG.FRE.SPA			
-		✻	B64-4544-00	INSTRUCTION MANUAL (GER.DUT.ITA			E1
-		✻	B64-4545-00	INSTRUCTION MANUAL (POR.RUS.UKR			E1
FC1	3A	✻	E39-1123-05	FLAT CABLE			
22	1A		F09-2974-05	FAN			
23	1B		F09-3014-05	FAN			
24	1B		F19-1820-04	BLIND PLATE			
26	2B	✻	F20-2529-04	INSULATING SHEET (47X24X1)			
28	2A	✻	F20-2531-04	INSULATING SHEET (70X25X1.5)			
29	2B	✻	F20-2547-04	INSULATING SHEET (74X24X1)			
30	2A	✻	F20-2548-04	INSULATING SHEET (22X6X5)			
F1	3B		F52-0045-05	FUSE (BLADE TYPE) 30A			
-		✻	H54-4748-03	ITEM CARTON CASE			K
-		✻	H54-4749-03	ITEM CARTON CASE			E1
36	2B		J30-1066-14	SPACER			
37	1A		N99-1833-05	SCREW & WRENCH KEY SET			
A	1B		N09-6433-05	DRESSED SCREW (M4X12)			
B	3B		N80-3010-43	PAN HEAD TAPTITE SCREW			
C	1B		N89-2608-43	BINDING HEAD TAPTITE SCREW			
D	3B	✻	N89-2614-48	BINDING HEAD TAPTITE SCREW			
E	3B		N89-3008-43	BINDING HEAD TAPTITE SCREW			
F	3A		N89-3008-48	BINDING HEAD TAPTITE SCREW			
G	2A		N89-3016-43	BINDING HEAD TAPTITE SCREW			
Y	2B		N09-6813-08	SCREW (TERMINAL) M5			
Z	3B		N09-6812-08	SCREW (TERMINAL) M8			
AUDIO UNIT (X09-8960-10)							
D62			B30-1779-05	LED (1608_SR)			
D64			B30-1779-05	LED (1608_SR)			
D87			B30-1760-05	LED (1608 RED)			
C1			CE32CL1C470M	CHIP EL	47UF	16WV	
C2 ,3		✻	CE32BS1H470M	CHIP EL	47UF	50WV	
C4			CE32CL1C470M	CHIP EL	47UF	16WV	
C5 ,6			CC73GCH1H101J	CHIP C	100PF	J	
C7 ,8		✻	CE32BS1H470M	CHIP EL	47UF	50WV	
C9			CE32CL1C470M	CHIP EL	47UF	16WV	
C10		✻	CE32BS1H470M	CHIP EL	47UF	50WV	
C11			CK73GB1H104K	CHIP C	0.10UF	K	
C12 ,13			CK73GB1H103K	CHIP C	0.010UF	K	
C14 ,15			CK73GB1H104K	CHIP C	0.10UF	K	
C16			CK73GB1C225K	CHIP C	2.2UF	K	
C17			CK73GB1H222K	CHIP C	2200PF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C18			CK73GB1H104K	CHIP C	0.10UF	K	
C19			CC73GCH1H102J	CHIP C	1000PF	J	
C20 ,21			CK73GB1H103K	CHIP C	0.010UF	K	
C22			CE32CL1C470M	CHIP EL	47UF	16WV	
C23			CK73GB1H103K	CHIP C	0.010UF	K	
C24			CC73GCH1H102J	CHIP C	1000PF	J	
C25		✻	CE32BS1H470M	CHIP EL	47UF	50WV	
C26 -29			CC73GCH1H151J	CHIP C	150PF	J	
C30 -33			CC73GCH1H101J	CHIP C	100PF	J	
C34 ,35			CK73EB1E225K	CHIP C	2.2UF	K	
C36 -39			CC73GCH1H391J	CHIP C	390PF	J	
C40 ,41			CK73GB1H103K	CHIP C	0.010UF	K	
C42			CC73GCH1H180J	CHIP C	18PF	J	
C43			CK73GB1H103K	CHIP C	0.010UF	K	
C44 ,45			CK73FB1H224K	CHIP C	0.22UF	K	
C47			CK73GB1H103K	CHIP C	0.010UF	K	
C48 ,49			CK73FB1H224K	CHIP C	0.22UF	K	
C50 ,51			CK73GB1H103K	CHIP C	0.010UF	K	
C52 -55			CC73GCH1H471J	CHIP C	470PF	J	
C56			CK73GB1H332K	CHIP C	3300PF	K	
C57			CC73GCH1H180J	CHIP C	18PF	J	
C58 ,59			CC73GCH1H471J	CHIP C	470PF	J	
C60 ,61			CC73GCH1H180J	CHIP C	18PF	J	
C62 ,63			CC73GCH1H471J	CHIP C	470PF	J	
C64			CK73GB1H103K	CHIP C	0.010UF	K	
C67			CK73GB1H103K	CHIP C	0.010UF	K	
C69 -72			CK73GB1H104K	CHIP C	0.10UF	K	
C73 -75			CK73EB1E106K	CHIP C	10UF	K	
C78			CK73GB1H103K	CHIP C	0.010UF	K	
C79			CK73GB1H104K	CHIP C	0.10UF	K	
C81 -86			CK73GB1H103K	CHIP C	0.010UF	K	
C87 -94			CK73GB1H104K	CHIP C	0.10UF	K	
C95			CE32CL1V220M	CHIP EL	22UF	35WV	
C99			CE32CL1V220M	CHIP EL	22UF	35WV	
C101			CK73GB1H104K	CHIP C	0.10UF	K	
C102			CK73EB1E106K	CHIP C	10UF	K	
C104			CK73EB1E106K	CHIP C	10UF	K	
C105-107			CK73GB1H103K	CHIP C	0.010UF	K	
C108		✻	CE32BS1H101M	CHIP EL	100UF	50WV	
C109,110		✻	C90-6941-05	ELECTRO	4700UF	56WV	
C112-114			CK73GB1H103K	CHIP C	0.010UF	K	
C119,120			CK73GB1H104K	CHIP C	0.10UF	K	
C121			CD04BJ1H471M	ELECTRO	470UF	50WV	
C122,123			CK73GB1H103K	CHIP C	0.010UF	K	
C124,125		✻	CE32BS1H470M	CHIP EL	47UF	50WV	
C126,127			CK73GB1H104K	CHIP C	0.10UF	K	
C128-132			CK73GB1H103K	CHIP C	0.010UF	K	
C133			CK73EB1E106K	CHIP C	10UF	K	
C134			CK73GB1H103K	CHIP C	0.010UF	K	
C135		✻	CE32BS1H101M	CHIP EL	100UF	50WV	
C137-140			CK73EB1E106K	CHIP C	10UF	K	
C141-143			C90-6876-05	ELECTRO	4700UF	16WV	
C144			CK73EB1E106K	CHIP C	10UF	K	
C145,146			CK73GB1H222K	CHIP C	2200PF	K	
C147			CK73EB1E106K	CHIP C	10UF	K	

E1: KAC-X5D (Europe) **K**: XR-5S (North America)

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8960-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C148,149			CK73GB1H103K	CHIP C	0.010UF	K	
C150,151			CE32CL1V220M	CHIP EL	22UF	35WV	
C152			CK73EB1E106K	CHIP C	10UF	K	
C153,154			CK73GB1H152K	CHIP C	1500PF	K	
C155			CK73GB1H103K	CHIP C	0.010UF	K	
C156			CK73EB1E106K	CHIP C	10UF	K	
C157,158			CK73GB1H152K	CHIP C	1500PF	K	
C159,160			CK73GB1H103K	CHIP C	0.010UF	K	
C161			CK73EB1E106K	CHIP C	10UF	K	
C162			CK73GB1H104K	CHIP C	0.10UF	K	
C163			CK73EB1E106K	CHIP C	10UF	K	
C164-167			CC73GCH1H331J	CHIP C	330PF	J	
C168,169			CK73GB1H332K	CHIP C	3300PF	K	
C170			CK73EB1E106K	CHIP C	10UF	K	
C171-176			CE32CL1C100M	CHIP EL	10UF	16WV	
C178			CE32CL1V100M	CHIP EL	10UF	35WV	
C180,181			CC73GCH1H151J	CHIP C	150PF	J	
C182,183			CK73EB1E106K	CHIP C	10UF	K	
C184,185			CC73GCH1H101J	CHIP C	100PF	J	
C186,187			CC73GCH1H391J	CHIP C	390PF	J	
C188,189			CK73GB1H103K	CHIP C	0.010UF	K	
C190-192			CK73EB1E106K	CHIP C	10UF	K	
C193,194			CK73GB1H103K	CHIP C	0.010UF	K	
C195-198			CK73FB1H224K	CHIP C	0.22UF	K	
C199,200			CK73GB1H103K	CHIP C	0.010UF	K	
C201-204			CK73FB1H224K	CHIP C	0.22UF	K	
C205			CC73GCH1H180J	CHIP C	18PF	J	
C206			CK73GB1H103K	CHIP C	0.010UF	K	
C207-209			CK73EB1E106K	CHIP C	10UF	K	
C211,212			CC73GCH1H331J	CHIP C	330PF	J	
C213			CC73GCH1H180J	CHIP C	18PF	J	
C214,215			CC73GCH1H331J	CHIP C	330PF	J	
C216,217			CK73GB1H103K	CHIP C	0.010UF	K	
C219			CE32CL1C100M	CHIP EL	10UF	16WV	
C220-222			CK73GB1H103K	CHIP C	0.010UF	K	
C226			CK73GB1H103K	CHIP C	0.010UF	K	
C228,229			CK73GB1H103K	CHIP C	0.010UF	K	
C232			CK73GB1H104K	CHIP C	0.10UF	K	
C235,236			C91-1567-05	FILM	0.1UF	J	
C237			CK73GB1H104K	CHIP C	0.10UF	K	
C238,239			CK73EB1E106K	CHIP C	10UF	K	
C240			CK73GB1H104K	CHIP C	0.10UF	K	
C241			CK73EB1E106K	CHIP C	10UF	K	
C243-249			CK73EB1E106K	CHIP C	10UF	K	
C250			CK73FB1H334K	CHIP C	0.33UF	K	
C251			CK73GB1H104K	CHIP C	0.10UF	K	
C252			CK73EB1E106K	CHIP C	10UF	K	
C253			CK73EB1E105K	CHIP C	1.0UF	K	
C254-261			C93-1519-05	CERAMIC C	560PF	J	
C262-271			CK73GB1H103K	CHIP C	0.010UF	K	
C272			CK73EB1E106K	CHIP C	10UF	K	
C273-281			CK73GB1H104K	CHIP C	0.10UF	K	
C282-289			C92-2015-05	ELECTRO	22UF	63WV	
C290-295			CK73GB1H104K	CHIP C	0.10UF	K	
C296,297			CK73GB1H223K	CHIP C	0.022UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C298,299			CK73GB1H222K	CHIP C	2200PF	K	
C300-303			C93-1519-05	CERAMIC C	560PF	J	
C304			CK73GB1H103K	CHIP C	0.010UF	K	
C305			CK73GB1H104K	CHIP C	0.10UF	K	
C306			CK73GB1H103K	CHIP C	0.010UF	K	
C307-313			CK73GB1H104K	CHIP C	0.10UF	K	
C316,317			CK73GB1H223K	CHIP C	0.022UF	K	
C318-321			CC73GCH1H102J	CHIP C	1000PF	J	
C322,323			CK73GB1H103K	CHIP C	0.010UF	K	
C326,327			CK73GB1H222K	CHIP C	2200PF	K	
C332,333			CK73GB1H222K	CHIP C	2200PF	K	
C334-337			C91-2305-05	METAL PF C	0.56UF		
C338,339			CK73GB1H222K	CHIP C	2200PF	K	
C340			CK73GB1H103K	CHIP C	0.010UF	K	
C341			CK73GB1H104K	CHIP C	0.10UF	K	
C342,343			C91-2305-05	METAL PF C	0.56UF		
C354,355			CK73GB1H103K	CHIP C	0.010UF	K	
C357			CK73GB1H103K	CHIP C	0.010UF	K	
C360-363			C91-1567-05	FILM	0.1UF	J	
C366			CK73GB1H104K	CHIP C	0.10UF	K	
C367,368			CK73GB1H222K	CHIP C	2200PF	K	
C369			CK73GB1H103K	CHIP C	0.010UF	K	
C370			CK73GB1H222K	CHIP C	2200PF	K	
C371			CK73GB1H104K	CHIP C	0.10UF	K	
C372			CK73GB1H103K	CHIP C	0.010UF	K	
C373			CK73GB1H222K	CHIP C	2200PF	K	
C374			CK73EB1E106K	CHIP C	10UF	K	
C376,377			CK73GB1H103K	CHIP C	0.010UF	K	
C379-382			CC73GCH1H101J	CHIP C	100PF	J	
C385-392			CK73GB1H104K	CHIP C	0.10UF	K	
C393-396			C92-2015-05	ELECTRO	22UF	63WV	
C398,399			CK73GB1H104K	CHIP C	0.10UF	K	
C400,401			CK73GB1H103K	CHIP C	0.010UF	K	
C402,403			CK73GB1H104K	CHIP C	0.10UF	K	
C404			CK73GB1H103K	CHIP C	0.010UF	K	
C405-408			CK73GB1H223K	CHIP C	0.022UF	K	
C409-413			CK73GB1H104K	CHIP C	0.10UF	K	
C414			CK73GB1H472K	CHIP C	4700PF	K	
C415,416			CK73GB1H104K	CHIP C	0.10UF	K	
C419			CC73GCH1H102J	CHIP C	1000PF	J	
C420-425			CK73GB1H223K	CHIP C	0.022UF	K	
C426			CK73EB1E106K	CHIP C	10UF	K	
C427,428			CC73GCH1H102J	CHIP C	1000PF	J	
C429,430			CK73GB1H103K	CHIP C	0.010UF	K	
C431			CK73GB1H152K	CHIP C	1500PF	K	
C432-436			CC73GCH1H102J	CHIP C	1000PF	J	
C437			CK73GB1C224K	CHIP C	0.22UF	K	
C438-445			CK73GB1H332K	CHIP C	3300PF	K	
C446			CK73EB1E106K	CHIP C	10UF	K	
C447-454			CC73GCH1H221J	CHIP C	220PF	J	
C455,456			CC73GCH1H471J	CHIP C	470PF	J	
C457			CK73GB1A105K	CHIP C	1.0UF	K	
C458,459			CC73GCH1H101J	CHIP C	100PF	J	
C460			CC73GCH1H150J	CHIP C	15PF	J	
C461-464			CC73GCH1H100D	CHIP C	10PF	D	

E1: KAC-X5D (Europe) **K**: XR-5S (North America)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8960-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C465			CC73GCH1H102J	CHIP C	1000PF	J	
C466			CK73EB1E106K	CHIP C	10UF	K	
C601,602			CK73GB1H103K	CHIP C	0.010UF	K	
C603			CC73GCH1H820J	CHIP C	82PF	J	
C604			CC73GCH1H271J	CHIP C	270PF	J	
C609			CK73GB1H103K	CHIP C	0.010UF	K	
C610			CK73EB1C106K	CHIP C	10UF	K	
C611,612			CK73GB1H103K	CHIP C	0.010UF	K	
C613			CC73GCH1H221J	CHIP C	220PF	J	
C614			CK73GB1H103K	CHIP C	0.010UF	K	
C615			CC73GCH1H101J	CHIP C	100PF	J	
C616-621			CK73GB1H103K	CHIP C	0.010UF	K	
C622			CK73GB1A105K	CHIP C	1.0UF	K	
C623			CK73GB1H103K	CHIP C	0.010UF	K	
C624			CK73GB1H104K	CHIP C	0.10UF	K	
C625			CK73GB1H103K	CHIP C	0.010UF	K	
C626			CK73EB1E106K	CHIP C	10UF	K	
C627,628			CK73GB1H103K	CHIP C	0.010UF	K	
C629			CC73GCH1H221J	CHIP C	220PF	J	
C630			CK73GB1H103K	CHIP C	0.010UF	K	
C631			CC73GCH1H101J	CHIP C	100PF	J	
C632-637			CK73GB1H103K	CHIP C	0.010UF	K	
C638,639			CK73GB1H104K	CHIP C	0.10UF	K	
C640-642			CK73GB1H103K	CHIP C	0.010UF	K	
C643			CK73GB1H104K	CHIP C	0.10UF	K	
C644			CK73GB1H472K	CHIP C	4700PF	K	
C645-648			CK73GB1H103K	CHIP C	0.010UF	K	
C649			CC73GCH1H102J	CHIP C	1000PF	J	
C650			CK73GB1H103K	CHIP C	0.010UF	K	
C651			CK73GB1C225K	CHIP C	2.2UF	K	
C652,653			CK73GB1H104K	CHIP C	0.10UF	K	
C654,655			CC73GCH1H820J	CHIP C	82PF	J	
C656			CC73GCH1H181J	CHIP C	180PF	J	
C657,658			CK73GB1H103K	CHIP C	0.010UF	K	
C659,660			CK73EB1E106K	CHIP C	10UF	K	
C661,662			CK73GB1H103K	CHIP C	0.010UF	K	
C663			CK73FB1C684K	CHIP C	0.68UF	K	
C664,665			CC73GCH1H151J	CHIP C	150PF	J	
C666			CC73GCH1H102J	CHIP C	1000PF	J	
C667			CK73GB1C224K	CHIP C	0.22UF	K	
C668			CK73GB1H103K	CHIP C	0.010UF	K	
C669			CC73GCH1H101J	CHIP C	100PF	J	
C670			CC73GCH1H471J	CHIP C	470PF	J	
C671			CC73GCH1H101J	CHIP C	100PF	J	
C672			CC73GCH1H471J	CHIP C	470PF	J	
C673-675			CK73GB1A105K	CHIP C	1.0UF	K	
C677-681			CC73GCH1H151J	CHIP C	150PF	J	
C682,683			CC73GCH1H101J	CHIP C	100PF	J	
C684,685			CC73GCH1H181J	CHIP C	180PF	J	
C686,687			CK73GB1H103K	CHIP C	0.010UF	K	
C688-694			CK73GB1H104K	CHIP C	0.10UF	K	
C695,696			CC73GCH1H101J	CHIP C	100PF	J	
C697,698			CC73GCH1H470J	CHIP C	47PF	J	
C751-754			CC73GCH1H102J	CHIP C	1000PF	J	
C755-758			CE32CL1V100M	CHIP EL	10UF	35WV	

Ref. No.	Add	New	Parts No.	Description			Destination
C759-766			CC73GCH1H330J	CHIP C	33PF	J	
C767-774			CK73GB1H103K	CHIP C	0.010UF	K	
C775-778			CC73GCH1H560J	CHIP C	56PF	J	
C779-782			CC73GCH1H330J	CHIP C	33PF	J	
C783-786			CC73GCH1H560J	CHIP C	56PF	J	
C787-790			CE32CL1V100M	CHIP EL	10UF	35WV	
C791-794			CK73GB1H103K	CHIP C	0.010UF	K	
C795,796			CK73GB1H333K	CHIP C	0.033UF	K	
C797,798			CE32CL1V100M	CHIP EL	10UF	35WV	
C799,800			CC73GCH1H330J	CHIP C	33PF	J	
C801,802			CK73GB1H103K	CHIP C	0.010UF	K	
C803			CC73GCH1H560J	CHIP C	56PF	J	
C804			CC73GCH1H330J	CHIP C	33PF	J	
C805			CC73GCH1H560J	CHIP C	56PF	J	
C806			CE32CL1V100M	CHIP EL	10UF	35WV	
C807,808			CK73GB1H103K	CHIP C	0.010UF	K	
C809			CK73GB1H472K	CHIP C	4700PF	K	
C810			CC73GCH1H102J	CHIP C	1000PF	J	
C811,812			CC73GCH1H330J	CHIP C	33PF	J	
C813,814			CE32CL1V100M	CHIP EL	10UF	35WV	
C815,816			CK73GB1H103K	CHIP C	0.010UF	K	
C817,818			CC73GCH1H330J	CHIP C	33PF	J	
C819-822			CK73GB1H103K	CHIP C	0.010UF	K	
C823,824			CK73GB1H333K	CHIP C	0.033UF	K	
C825,826			CK73GB1C224K	CHIP C	0.22UF	K	
C827,828			CC73GCH1H330J	CHIP C	33PF	J	
C829-832			CE32CL1V100M	CHIP EL	10UF	35WV	
C833,834			CK73GB1H103K	CHIP C	0.010UF	K	
C835			CK73GB1H104K	CHIP C	0.10UF	K	
C836			CE32CL1V100M	CHIP EL	10UF	35WV	
C837,838			CC73GCH1H102J	CHIP C	1000PF	J	
C839,840			CC73GCH1H221J	CHIP C	220PF	J	
C841,842			CE32CL1V100M	CHIP EL	10UF	35WV	
C843,844			CC73GCH1H330J	CHIP C	33PF	J	
C845,846			CK73GB1H103K	CHIP C	0.010UF	K	
C847,848			CE32CL1V100M	CHIP EL	10UF	35WV	
C849,850			CC73GCH1H330J	CHIP C	33PF	J	
C851,852			CK73GB1H103K	CHIP C	0.010UF	K	
C853,854			CK73GB1H333K	CHIP C	0.033UF	K	
C855,856			CK73GB1C224K	CHIP C	0.22UF	K	
C857-860			CK73GB1H103K	CHIP C	0.010UF	K	
C861,862			CC73GCH1H330J	CHIP C	33PF	J	
C863-866			CE32CL1V100M	CHIP EL	10UF	35WV	
C867			CC73GCH1H221J	CHIP C	220PF	J	
C868			CE32CL1V100M	CHIP EL	10UF	35WV	
C869,870			CC73GCH1H102J	CHIP C	1000PF	J	
C871,872			CC73GCH1H221J	CHIP C	220PF	J	
C873,874			CK73GB1H103K	CHIP C	0.010UF	K	
C875,876			CE32CL1V100M	CHIP EL	10UF	35WV	
C877			CC73GCH1H330J	CHIP C	33PF	J	
C878			CE32CL1V100M	CHIP EL	10UF	35WV	
C879			CK73GB1H683K	CHIP C	0.068UF	K	
C880			CK73GB1A334K	CHIP C	0.33UF	K	
C881			CK73GB1H683K	CHIP C	0.068UF	K	
C882			CK73GB1C224K	CHIP C	0.22UF	K	

E1: KAC-X5D (Europe) **K**: XR-5S (North America)

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8960-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C883			CK73GB1H104K	CHIP C	0.10UF	K	
C884			CE32CL1HR47M	CHIP EL	0.47UF	50WV	
C885,886			CK73GB1H103K	CHIP C	0.010UF	K	
C887,888			CK73GB1H472K	CHIP C	4700PF	K	
C889-892			CK73GB1H103K	CHIP C	0.010UF	K	
C893,894			CE32CL1V100M	CHIP EL	10UF	35WV	
C895			CC73GCH1H560J	CHIP C	56PF	J	
C903,904			CK73GB1H103K	CHIP C	0.010UF	K	
C905,906			CC73GCH1H050C	CHIP C	5.0PF	C	
C907			CK73GB1H472K	CHIP C	4700PF	K	
CN1 ,2			E41-1682-05	PIN ASSY			
CN3		✻	E41-2187-05	FLAT CABLE CONNECTOR			
CN751		✻	E41-2187-05	FLAT CABLE CONNECTOR			
J1		✻	E70-0867-05	SCREW TERMINAL BOARD			
J751		✻	E63-0978-05	PIN JACK			
F3 -6		✻	F53-0463-05	FUSE (UL,CSA) 15A			
F9 -12		✻	F53-0463-05	FUSE (UL,CSA) 15A			
CN4			J13-0611-05	FUSE HOLDER			
L1		✻	L19-0839-05	TRANSFORMER FOR CONVERTER			
L2		✻	L33-2612-05	CHOKE COIL			
L3 ,4			L33-2495-05	CHOKE COIL			
L5 -8		✻	L33-2568-05	CHOKE COIL			
L9 ,10		✻	L33-2636-05	CHOKE COIL			
E	2A		N89-3008-43	BINDING HEAD TAPTITE SCREW			
H	3A		N09-6217-05	TAPTITE SCREW (3X14)			
R1			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R2 ,3			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R4			RK73GB2A103J	CHIP R	10K	J 1/10W	
R5			RK73GB2A153J	CHIP R	15K	J 1/10W	
R6			RK73GB2A103J	CHIP R	10K	J 1/10W	
R7			RK73GB2A153J	CHIP R	15K	J 1/10W	
R8			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R9			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R10			RK73GB2A821J	CHIP R	820	J 1/10W	
R11			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R12			RK73GB2A100J	CHIP R	10	J 1/10W	
R13			RK73GB2A821J	CHIP R	820	J 1/10W	
R14			RK73PB2H4R7J	CHIP R	4.7	J 1/2W	
R15			RK73GB2A101J	CHIP R	100	J 1/10W	
R16			RK73GB2A153J	CHIP R	15K	J 1/10W	
R17 ,18			RK73EB2E473J	CHIP R	47K	J 1/4W	
R19			RK73GB2A681J	CHIP R	680	J 1/10W	
R20			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R21			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R22			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R23			RK73EB2E152J	CHIP R	1.5K	J 1/4W	
R24			RK73GB2A473J	CHIP R	47K	J 1/10W	
R25			RK73GB2A100J	CHIP R	10	J 1/10W	
R26 -31			RK73GB2A470J	CHIP R	47	J 1/10W	
R32 ,33			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R34 ,35			RK73GB2A470J	CHIP R	47	J 1/10W	
R36 ,37			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R38 ,39			RK73GB2A334J	CHIP R	330K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R40 ,41			RK73GB2A163J	CHIP R	16K	J 1/10W	
R42 -45			RK73GB2A473J	CHIP R	47K	J 1/10W	
R46			RK73GB2A223J	CHIP R	22K	J 1/10W	
R47			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R48			RK73GB2A104J	CHIP R	100K	J 1/10W	
R49 -52			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R53			RK73GB2A103J	CHIP R	10K	J 1/10W	
R54			RK73GB2A243J	CHIP R	24K	J 1/10W	
R55			RK73GB2A393J	CHIP R	39K	J 1/10W	
R56			RK73GB2A101J	CHIP R	100	J 1/10W	
R57 -60			RK73GB2A103J	CHIP R	10K	J 1/10W	
R61			RK73GB2A101J	CHIP R	100	J 1/10W	
R62 ,63			RK73GB2A103J	CHIP R	10K	J 1/10W	
R64			RK73GB2A183J	CHIP R	18K	J 1/10W	
R65			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R66			RK73GB2A154J	CHIP R	150K	J 1/10W	
R67			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R68 -71			RK73GB2A104J	CHIP R	100K	J 1/10W	
R72			RK73GB2A183J	CHIP R	18K	J 1/10W	
R73 -76			RK73GB2A512J	CHIP R	5.1K	J 1/10W	
R77			RK73GB2A334J	CHIP R	330K	J 1/10W	
R78 ,79			RK73GB2A474J	CHIP R	470K	J 1/10W	
R80 ,81			RK73GB2A224J	CHIP R	220K	J 1/10W	
R82 ,83			RK73GB2A474J	CHIP R	470K	J 1/10W	
R84			RK73GB2A224J	CHIP R	220K	J 1/10W	
R85			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R86			RK73GB2A202J	CHIP R	2.0K	J 1/10W	
R87			RK73GB2A122J	CHIP R	1.2K	J 1/10W	
R88			RK73GB2A162J	CHIP R	1.6K	J 1/10W	
R89			RK73GB2A473J	CHIP R	47K	J 1/10W	
R90 ,91			RK73GB2A103J	CHIP R	10K	J 1/10W	
R92			RK73GB2A224J	CHIP R	220K	J 1/10W	
R96 -100			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R101-104			RK73GB2A242J	CHIP R	2.4K	J 1/10W	
R105,106			RK73GB2A103J	CHIP R	10K	J 1/10W	
R109			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R110			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R111-114			RK73GB2A431J	CHIP R	430	J 1/10W	
R115			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R116			RK73GB2A104J	CHIP R	100K	J 1/10W	
R117-119			RK73GB2A473J	CHIP R	47K	J 1/10W	
R120-123			RK73GB2A431J	CHIP R	430	J 1/10W	
R124-126			RK73GB2A224J	CHIP R	220K	J 1/10W	
R127		✻	RK73PB2H621J	CHIP R	620	J 1/2W	
R128			RK73GB2A202J	CHIP R	2.0K	J 1/10W	
R129			RK73GB2A101J	CHIP R	100	J 1/10W	
R130			RK73GB2A224J	CHIP R	220K	J 1/10W	
R131			RK73GB2A303J	CHIP R	30K	J 1/10W	
R132			RK73GB2A753J	CHIP R	75K	J 1/10W	
R133			RK73GB2A103J	CHIP R	10K	J 1/10W	
R134			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R136			RK73GB2A333J	CHIP R	33K	J 1/10W	
R138			RK73GB2A103J	CHIP R	10K	J 1/10W	
R140-147			RK73GB2A151J	CHIP R	150	J 1/10W	
R148			RK73GB2A472J	CHIP R	4.7K	J 1/10W	

E1: KAC-X5D (Europe) **K**: XR-5S (North America)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8960-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R153			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R154			RK73GB2A103J	CHIP R 10K J 1/10W	
R156			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R157			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R159			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R160-167			RK73EB2E470J	CHIP R 47 J 1/4W	
R172-175			RK73EB2E911J	CHIP R 910 J 1/4W	
R176,177			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R178			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R179			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R180			RK73GB2A103J	CHIP R 10K J 1/10W	
R181			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R182,183			RK73GB2A273J	CHIP R 27K J 1/10W	
R184,185			RK73GB2A103J	CHIP R 10K J 1/10W	
R186,187			RK73GB2A391J	CHIP R 390 J 1/10W	
R188			RK73GB2A101J	CHIP R 100 J 1/10W	
R189			RK73PB2H4R7J	CHIP R 4.7 J 1/2W	
R190			RK73GB2A101J	CHIP R 100 J 1/10W	
R193			RK73GB2A101J	CHIP R 100 J 1/10W	
R194			RK73GB2A561J	CHIP R 560 J 1/10W	
R195			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R196,197			RK73GB2A103J	CHIP R 10K J 1/10W	
R199			RK73EB2E103J	CHIP R 10K J 1/4W	
R200			RK73GB2A561J	CHIP R 560 J 1/10W	
R201			RK73GB2A103J	CHIP R 10K J 1/10W	
R202,203			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R204			RK73GB2A103J	CHIP R 10K J 1/10W	
R205			RK73GB2A473J	CHIP R 47K J 1/10W	
R206,207			RK73GB2A104J	CHIP R 100K J 1/10W	
R208			RK73GB2A101J	CHIP R 100 J 1/10W	
R209			RK73GB2A473J	CHIP R 47K J 1/10W	
R210			RK73GB2A103J	CHIP R 10K J 1/10W	
R211			RK73EB2E103J	CHIP R 10K J 1/4W	
R212			RK73GB2A101J	CHIP R 100 J 1/10W	
R213,214			RK73GB2A473J	CHIP R 47K J 1/10W	
R215			RK73GB2A223J	CHIP R 22K J 1/10W	
R216,217			RK73GB2A123J	CHIP R 12K J 1/10W	
R218,219			RK73GB2A473J	CHIP R 47K J 1/10W	
R221			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R222,223			RK73GB2A273J	CHIP R 27K J 1/10W	
R224			RK73GB2A473J	CHIP R 47K J 1/10W	
R225			RK73GB2A103J	CHIP R 10K J 1/10W	
R226			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R227			RK73GB2A103J	CHIP R 10K J 1/10W	
R228			RK73PB2H100J	CHIP R 10 J 1/2W	
R230			RK73PB2H100J	CHIP R 10 J 1/2W	
R232			RK73GB2A103J	CHIP R 10K J 1/10W	
R233			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R234			RK73GB2A104J	CHIP R 100K J 1/10W	
R235			RK73GB2A103J	CHIP R 10K J 1/10W	
R236			RK73GB2A331J	CHIP R 330 J 1/10W	
R237			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R238			RK73GB2A223J	CHIP R 22K J 1/10W	
R239			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R240,241			RK73GB2A103J	CHIP R 10K J 1/10W	
R242			RK73GB2A331J	CHIP R 330 J 1/10W	
R243,244			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R245			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R246			RK73EB2E152J	CHIP R 1.5K J 1/4W	
R247-249			RK73PB2H100J	CHIP R 10 J 1/2W	
R250,251			RK73GB2A470J	CHIP R 47 J 1/10W	
R252			RK73GB2A103J	CHIP R 10K J 1/10W	
R253			RK73GB2A473J	CHIP R 47K J 1/10W	
R254,255			RK73GB2A103J	CHIP R 10K J 1/10W	
R256,257			RK73GB2A473J	CHIP R 47K J 1/10W	
R258			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R261			RK73GB2A104J	CHIP R 100K J 1/10W	
R262,263			RK73GB2A103J	CHIP R 10K J 1/10W	
R264			RK73GB2A393J	CHIP R 39K J 1/10W	
R265			RK73GB2A303J	CHIP R 30K J 1/10W	
R266-271			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R272,273			RK73GB2A473J	CHIP R 47K J 1/10W	
R274			RK73GB2A203J	CHIP R 20K J 1/10W	
R275			RK73GB2A683J	CHIP R 68K J 1/10W	
R276			RK73GB2A203J	CHIP R 20K J 1/10W	
R277			RK73GB2A683J	CHIP R 68K J 1/10W	
R278,279			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R280			RK73EB2E203J	CHIP R 20K J 1/4W	
R281			RK73GB2A683J	CHIP R 68K J 1/10W	
R282			RK73GB2A113J	CHIP R 11K J 1/10W	
R283			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R284			RK73GB2A331J	CHIP R 330 J 1/10W	
R285-292			RK73GB2A103J	CHIP R 10K J 1/10W	
R293			RK73EB2E203J	CHIP R 20K J 1/4W	
R294			RK73GB2A683J	CHIP R 68K J 1/10W	
R295,296			RK73GB2A104J	CHIP R 100K J 1/10W	
R298,299			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R301			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
R302			RK73GB2A203J	CHIP R 20K J 1/10W	
R303			RK73GB2A224J	CHIP R 220K J 1/10W	
R304,305			RK73GB2A474J	CHIP R 470K J 1/10W	
R306			RK73GB2A224J	CHIP R 220K J 1/10W	
R307			RK73GB2A683J	CHIP R 68K J 1/10W	
R308			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R309			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R310			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
R311-313			RK73GB2A100J	CHIP R 10 J 1/10W	
R314			RK73GB2A473J	CHIP R 47K J 1/10W	
R315-317			RK73GB2A100J	CHIP R 10 J 1/10W	
R318,319			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R320			RK73GB2A224J	CHIP R 220K J 1/10W	
R321-323			RK73GB2A100J	CHIP R 10 J 1/10W	
R325-329			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R330,331			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R332			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R333,334			RK73GB2A431J	CHIP R 430 J 1/10W	
R335			RK73GB2A511J	CHIP R 510 J 1/10W	
R336			RK73GB2A473J	CHIP R 47K J 1/10W	
R337			RK73GB2A273J	CHIP R 27K J 1/10W	
R338,339			RK73GB2A431J	CHIP R 430 J 1/10W	

E1: KAC-X5D (Europe) **K**: XR-5S (North America)

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8960-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R340			RK73GB2A224J	CHIP R 220K J 1/10W	
R341			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R343			RK73GB2A183J	CHIP R 18K J 1/10W	
R344			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R345			RK73GB2A103J	CHIP R 10K J 1/10W	
R354			RK73GB2A103J	CHIP R 10K J 1/10W	
R359			RK73EB2E151J	CHIP R 150 J 1/4W	
R360-362			RK73GB2A151J	CHIP R 150 J 1/10W	
R363			RK73GB2A273J	CHIP R 27K J 1/10W	
R368			RK73GB2A100J	CHIP R 10 J 1/10W	
R372-374			RK73EB2E100J	CHIP R 10 J 1/4W	
R380-382			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R384			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R385			RK73EB2E100J	CHIP R 10 J 1/4W	
R386			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R387			RK73EB2E100J	CHIP R 10 J 1/4W	
R388			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R389			RK73EB2E100J	CHIP R 10 J 1/4W	
R390			RK73GB2A473J	CHIP R 47K J 1/10W	
R391			RK73GB2A103J	CHIP R 10K J 1/10W	
R394-399			RK73GB2A433J	CHIP R 43K J 1/10W	
R400-403			RK73EB2E220J	CHIP R 22 J 1/4W	
R404			RK73GB2A223J	CHIP R 22K J 1/10W	
R405			RK73GB2A471J	CHIP R 470 J 1/10W	
R406			RK73PB2H100J	CHIP R 10 J 1/2W	
R409-416			RK73PB2H101J	CHIP R 100 J 1/2W	
R417-420			RK73EB2E220J	CHIP R 22 J 1/4W	
R421			RK73EB2E332J	CHIP R 3.3K J 1/4W	
R424,425			RK73EB2E911J	CHIP R 910 J 1/4W	
R426-429			RK73EB2E100J	CHIP R 10 J 1/4W	
R430-435			RK73EB2E911J	CHIP R 910 J 1/4W	
R441-444			RK73GB2A473J	CHIP R 47K J 1/10W	
R445			RK73GB2A101J	CHIP R 100 J 1/10W	
R446			RK73GB2A223J	CHIP R 22K J 1/10W	
R447			RK73GB2A104J	CHIP R 100K J 1/10W	
R448			RK73GB2A103J	CHIP R 10K J 1/10W	
R449			RK73GB2A101J	CHIP R 100 J 1/10W	
R450			RK73GH2A332D	CHIP R 3.3K D 1/10W	
R451			RK73GH2A184D	CHIP R 180K D 1/10W	
R452,453			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R454			R92-5161-05	METAL PLATE RESISTOR	
R455			RK73GH2A332D	CHIP R 3.3K D 1/10W	
R456			RK73GH2A184D	CHIP R 180K D 1/10W	
R457			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R458			RK73GB2A164J	CHIP R 160K J 1/10W	
R459			RK73GB2A204J	CHIP R 200K J 1/10W	
R460			RK73GB2A224J	CHIP R 220K J 1/10W	
R461			RK73GB2A274J	CHIP R 270K J 1/10W	
R462			RK73GB2A304J	CHIP R 300K J 1/10W	
R463			RK73GB2A364J	CHIP R 360K J 1/10W	
R464			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R469			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R470-472			RK73GB2A100J	CHIP R 10 J 1/10W	
R473-484			RK73EB2E911J	CHIP R 910 J 1/4W	
R485			RK73GB2A223J	CHIP R 22K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R515,516			R92-5162-05	METAL GLAZE RESISTOR	
R520,521			R92-5162-05	METAL GLAZE RESISTOR	
R526,527			R92-5162-05	METAL GLAZE RESISTOR	
R528			RK73GB2A473J	CHIP R 47K J 1/10W	
R535			RK73GB2A243J	CHIP R 24K J 1/10W	
R536			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R543-550			RK73PB2H101J	CHIP R 100 J 1/2W	
R551			RK73GB2A101J	CHIP R 100 J 1/10W	
R554-561			RK73GB2A220J	CHIP R 22 J 1/10W	
R571-574			R92-5017-05	METAL PLATE RESISTOR	
R575-578			RK73GH2A332D	CHIP R 3.3K D 1/10W	
R579-582			RK73GH2A162D	CHIP R 1.6K D 1/10W	
R583-586			RK73GH2A364D	CHIP R 360K D 1/10W	
R587-590			R92-5017-05	METAL PLATE RESISTOR	
R591-594			RK73GH2A332D	CHIP R 3.3K D 1/10W	
R595-598			RK73GH2A162D	CHIP R 1.6K D 1/10W	
R599			R92-5161-05	METAL PLATE RESISTOR	
R601			RK73GB2A153J	CHIP R 15K J 1/10W	
R602			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R603			RK73GB2A153J	CHIP R 15K J 1/10W	
R604			RK73GB2A123J	CHIP R 12K J 1/10W	
R605			RK73GB2A103J	CHIP R 10K J 1/10W	
R606			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R607,608			RK73GB2A223J	CHIP R 22K J 1/10W	
R609-612			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R613			RK73GB2A103J	CHIP R 10K J 1/10W	
R614			RK73GB2A104J	CHIP R 100K J 1/10W	
R615			RK73GB2A223J	CHIP R 22K J 1/10W	
R616			RK73GB2A101J	CHIP R 100 J 1/10W	
R617			RK73GB2A104J	CHIP R 100K J 1/10W	
R618			RK73GB2A223J	CHIP R 22K J 1/10W	
R619			RK73GB2A103J	CHIP R 10K J 1/10W	
R620			RK73GB2A101J	CHIP R 100 J 1/10W	
R621			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R622			RK73GB2A471J	CHIP R 470 J 1/10W	
R623			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R624			RK73GB2A133J	CHIP R 13K J 1/10W	
R625			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R626			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R627			RK73GB2A473J	CHIP R 47K J 1/10W	
R628,629			RK73GB2A103J	CHIP R 10K J 1/10W	
R630			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R631-633			RK73GB2A103J	CHIP R 10K J 1/10W	
R634,635			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R636			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R637-639			RK73GB2A103J	CHIP R 10K J 1/10W	
R640			RK73GB2A183J	CHIP R 18K J 1/10W	
R641			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R644			RK73GB2A473J	CHIP R 47K J 1/10W	
R645			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R646			RK73GB2A471J	CHIP R 470 J 1/10W	
R647			RK73GB2A473J	CHIP R 47K J 1/10W	
R648			RK73GB2A104J	CHIP R 100K J 1/10W	
R649			RK73GB2A101J	CHIP R 100 J 1/10W	
R650			RK73GB2A103J	CHIP R 10K J 1/10W	

E1: KAC-X5D (Europe) **K**: XR-5S (North America)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8960-10)

Ref. No.	Add	New	Parts No.	Description				Destination
R651			RK73GB2A101J	CHIP R	100	J	1/10W	
R652			RK73GB2A153J	CHIP R	15K	J	1/10W	
R653			RK73GB2A471J	CHIP R	470	J	1/10W	
R654			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R655			RK73GB2A113J	CHIP R	11K	J	1/10W	
R656			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R657			RK73GB2A162J	CHIP R	1.6K	J	1/10W	
R658			RK73GB2A473J	CHIP R	47K	J	1/10W	
R659,660			RK73GB2A103J	CHIP R	10K	J	1/10W	
R661			RK73GB2A512J	CHIP R	5.1K	J	1/10W	
R662-664			RK73GB2A103J	CHIP R	10K	J	1/10W	
R665,666			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R667			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R668,669			RK73GB2A103J	CHIP R	10K	J	1/10W	
R670,671			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R672			RK73GB2A303J	CHIP R	30K	J	1/10W	
R673			RK73GB2A512J	CHIP R	5.1K	J	1/10W	
R674,675			RK73GB2A223J	CHIP R	22K	J	1/10W	
R676			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R677			RK73GB2A132J	CHIP R	1.3K	J	1/10W	
R678			RK73GB2A103J	CHIP R	10K	J	1/10W	
R679			RK73GB2A203J	CHIP R	20K	J	1/10W	
R680			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R681			RK73GB2A474J	CHIP R	470K	J	1/10W	
R682			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R683			RK73GB2A752J	CHIP R	7.5K	J	1/10W	
R684			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R685			RK73GB2A474J	CHIP R	470K	J	1/10W	
R686			RK73GB2A513J	CHIP R	51K	J	1/10W	
R687			RK73GB2A333J	CHIP R	33K	J	1/10W	
R688			RK73GB2A473J	CHIP R	47K	J	1/10W	
R689			RK73GB2A103J	CHIP R	10K	J	1/10W	
R690			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R691			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R692			RK73GB2A101J	CHIP R	100	J	1/10W	
R693-696			RK73GB2A103J	CHIP R	10K	J	1/10W	
R697			RK73GB2A623J	CHIP R	62K	J	1/10W	
R698,699			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R700			RK73GB2A471J	CHIP R	470	J	1/10W	
R701,702			RK73GB2A203J	CHIP R	20K	J	1/10W	
R703			RK73GB2A302J	CHIP R	3.0K	J	1/10W	
R704			RK73GB2A203J	CHIP R	20K	J	1/10W	
R705			RK73GB2A103J	CHIP R	10K	J	1/10W	
R706			RK73GB2A123J	CHIP R	12K	J	1/10W	
R707			RK73GB2A203J	CHIP R	20K	J	1/10W	
R708			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R709			RK73GB2A103J	CHIP R	10K	J	1/10W	
R710			RK73GB2A224J	CHIP R	220K	J	1/10W	
R711			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R712			RK73GB2A393J	CHIP R	39K	J	1/10W	
R713			RK73GB2A684J	CHIP R	680K	J	1/10W	
R714			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R715			RK73GB2A103J	CHIP R	10K	J	1/10W	
R717			RK73GB2A103J	CHIP R	10K	J	1/10W	
R718			RK73GB2A153J	CHIP R	15K	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R719			RK73GB2A823J	CHIP R	82K	J	1/10W	
R720			RK73GB2A103J	CHIP R	10K	J	1/10W	
R721			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R722,723			RK73GB2A103J	CHIP R	10K	J	1/10W	
R724			RK73GB2A203J	CHIP R	20K	J	1/10W	
R725,726			RK73GB2A153J	CHIP R	15K	J	1/10W	
R727			RK73GB2A103J	CHIP R	10K	J	1/10W	
R728,729			RK73GB2A473J	CHIP R	47K	J	1/10W	
R730			RK73GB2A563J	CHIP R	56K	J	1/10W	
R731			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R732			RK73GB2A362J	CHIP R	3.6K	J	1/10W	
R733			RK73GB2A473J	CHIP R	47K	J	1/10W	
R734			RK73GB2A163J	CHIP R	16K	J	1/10W	
R735-738			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R739-742			RK73GB2A223J	CHIP R	22K	J	1/10W	
R743,744			RK73GB2A103J	CHIP R	10K	J	1/10W	
R745			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R746-750			RK73GB2A103J	CHIP R	10K	J	1/10W	
R751-754			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R755-758			RK73GB2A103J	CHIP R	10K	J	1/10W	
R759-766			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R767-774			RK73GH2A103D	CHIP R	10K	D	1/10W	
R775-782			RK73GH2A203D	CHIP R	20K	D	1/10W	
R783-786			RK73GB2A473J	CHIP R	47K	J	1/10W	
R787,788			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R789,790			RK73GB2A103J	CHIP R	10K	J	1/10W	
R791,792			RK73GB2A273J	CHIP R	27K	J	1/10W	
R793			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R794			RK73GB2A153J	CHIP R	15K	J	1/10W	
R795,796			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R797,798			RK73GH2A103D	CHIP R	10K	D	1/10W	
R799,800			RK73GH2A203D	CHIP R	20K	D	1/10W	
R801			RK73GB2A473J	CHIP R	47K	J	1/10W	
R802			RK73EB2E474J	CHIP R	470K	J	1/4W	
R803,804			RK73GB2A100J	CHIP R	10	J	1/10W	
R805,806			RK73GB2A113J	CHIP R	11K	J	1/10W	
R807,808			RK73GB2A473J	CHIP R	47K	J	1/10W	
R809,810			RK73GB2A100J	CHIP R	10	J	1/10W	
R811-814			RK73GB2A103J	CHIP R	10K	J	1/10W	
R815-818			RK73GB2A243J	CHIP R	24K	J	1/10W	
R819,820			RK73GB2A302J	CHIP R	3.0K	J	1/10W	
R821,822			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R823,824			RK73GB2A303J	CHIP R	30K	J	1/10W	
R825-838			RK73GB2A473J	CHIP R	47K	J	1/10W	
R839,840			RK73GB2A113J	CHIP R	11K	J	1/10W	
R841,842			RK73GB2A103J	CHIP R	10K	J	1/10W	
R843,844			RK73GB2A563J	CHIP R	56K	J	1/10W	
R845,846			RK73GB2A103J	CHIP R	10K	J	1/10W	
R847,848			RK73GB2A473J	CHIP R	47K	J	1/10W	
R849,850			RK73GB2A113J	CHIP R	11K	J	1/10W	
R851,852			RK73GB2A431J	CHIP R	430	J	1/10W	
R853,854			RK73GB2A113J	CHIP R	11K	J	1/10W	
R855,856			RK73GB2A473J	CHIP R	47K	J	1/10W	
R857-860			RK73GB2A103J	CHIP R	10K	J	1/10W	
R861-864			RK73GB2A243J	CHIP R	24K	J	1/10W	

E1: KAC-X5D (Europe) **K**: XR-5S (North America)

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8960-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R865,866			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R867,868			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R869,870			RK73GB2A303J	CHIP R 30K J 1/10W	
R871-878			RK73GB2A473J	CHIP R 47K J 1/10W	
R879			RK73GB2A431J	CHIP R 430 J 1/10W	
R880			RK73GB2A103J	CHIP R 10K J 1/10W	
R881			RK73GB2A913J	CHIP R 91K J 1/10W	
R882			RK73GB2A473J	CHIP R 47K J 1/10W	
R883			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R884			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R885,886			RK73GB2A113J	CHIP R 11K J 1/10W	
R887,888			RK73GB2A103J	CHIP R 10K J 1/10W	
R889,890			RK73GB2A563J	CHIP R 56K J 1/10W	
R891,892			RK73GB2A103J	CHIP R 10K J 1/10W	
R893,894			RK73GB2A473J	CHIP R 47K J 1/10W	
R895,896			RK73GB2A113J	CHIP R 11K J 1/10W	
R897,898			RK73GB2A431J	CHIP R 430 J 1/10W	
R899,900			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R901			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R902			RK73GB2A473J	CHIP R 47K J 1/10W	
R903			RK73GB2A113J	CHIP R 11K J 1/10W	
R904			RK73GB2A103J	CHIP R 10K J 1/10W	
R905			RK73GB2A563J	CHIP R 56K J 1/10W	
R906			RK73GB2A103J	CHIP R 10K J 1/10W	
R907			RK73GB2A473J	CHIP R 47K J 1/10W	
R909,910			RK73GB2A103J	CHIP R 10K J 1/10W	
R916-922			RK73GB2A100J	CHIP R 10 J 1/10W	
R924,925			RK73GB2A100J	CHIP R 10 J 1/10W	
R926			RK73GB2A273J	CHIP R 27K J 1/10W	
R927,928			RK73GB2A100J	CHIP R 10 J 1/10W	
R929			RK73GB2A223J	CHIP R 22K J 1/10W	
R930			RK73GB2A153J	CHIP R 15K J 1/10W	
R931			RK73GB2A223J	CHIP R 22K J 1/10W	
R932,933			RK73GB2A103J	CHIP R 10K J 1/10W	
VR751		✻	R31-0264-05	VARIABLE RESISTOR 10K(A)	
VR752		✻	R31-0265-05	VARIABLE RESISTOR 50K(C)	
VR753		✻	R31-0264-05	VARIABLE RESISTOR 10K(A)	
VR754		✻	R31-0265-05	VARIABLE RESISTOR 50K(C)	
VR755		✻	R31-0264-05	VARIABLE RESISTOR 10K(A)	
VR756		✻	R31-0265-05	VARIABLE RESISTOR 50K(C)	
W3 ,4			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W6 -12			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W14			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W51 ,52			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W58 -61			RK73EB2E000J	CHIP R 0.0 J 1/4W	
W601,602			RK73GB2A000J	CHIP R 0.0 J 1/10W	
S751,752			S31-2630-05	SLIDE SWITCH	
D1 ,2			HSU119TRF-E	DIODE	
D3			FCH20A15	DIODE	
D4			FRH20A15	DIODE	
D5 -8			EP05Q06	DIODE	
D9			LM1MA142WK-G	DIODE	
D10			HSU119TRF-E	DIODE	

Ref. No.	Add	New	Parts No.	Description	Destination
D11			LM1MA142WK-G	DIODE	
D12 -24			HSU119TRF-E	DIODE	
D35			LM1MA142WA-G	DIODE	
D36			HSU119TRF-E	DIODE	
D37			RKZ5.6KG(B2)	ZENER DIODE	
D38			RKZ6.8KG(B2)	ZENER DIODE	
D39			RKZ5.1KG(B2)	ZENER DIODE	
D40			HSU119TRF-E	DIODE	
D41			RKZ6.8KG(B2)	ZENER DIODE	
D42			RKZ5.1KG(B2)	ZENER DIODE	
D43			HSU119TRF-E	DIODE	
D44			EP05Q06	DIODE	
D45 ,46			RKZ15KG(B2)	ZENER DIODE	
D47			EP05Q06	DIODE	
D48			RKZ13KG(B2)	ZENER DIODE	
D49 ,50			RKZ5.1KG(B2)	ZENER DIODE	
D51			RKZ15KG(B2)	ZENER DIODE	
D52			LM1MA142WK-G	DIODE	
D53 ,54			EP05Q06	DIODE	
D55 -57			LM1MA142WA-G	DIODE	
D58 ,59			EP05Q06	DIODE	
D60			RKZ5.1KG(B2)	ZENER DIODE	
D61			HSU119TRF-E	DIODE	
D63			RKZ10KG(B2)	ZENER DIODE	
D65			HSU119TRF-E	DIODE	
D66			LM1MA142WA-G	DIODE	
D67 -69			HSU119TRF-E	DIODE	
D70			LM1MA142WK-G	DIODE	
D71 ,72			HSU119TRF-E	DIODE	
D73			LM1MA142WK-G	DIODE	
D74			HSU119TRF-E	DIODE	
D78 ,79			HSU119TRF-E	DIODE	
D83 -86			HSU119TRF-E	DIODE	
D88			LM1MA142WK-G	DIODE	
D90			LM1MA142WA-G	DIODE	
D95 -101			RKZ15KG(B2)	ZENER DIODE	
D102-104			1SR159-200	DIODE	
D108-110			1SR159-200	DIODE	
D116			RKZ6.8KG(B2)	ZENER DIODE	
D117-124			1SR154-400	DIODE	
D129-132			1SR154-400	DIODE	
D148			HSU119TRF-E	DIODE	
D150,151		✻	PTZ43A	ZENER DIODE	
D152			RKZ5.1KG(B2)	ZENER DIODE	
D601			LM1MA142WK-G	DIODE	
D603-605			HSU119TRF-E	DIODE	
D608			RKZ10KG(B2)	ZENER DIODE	
D610-615			HSU119TRF-E	DIODE	
D617		✻	RKZ2.7KG(B2)	ZENER DIODE	
D618			RKZ5.1KG(B2)	ZENER DIODE	
D619			DA204U	DIODE	
D621,622			HSU119TRF-E	DIODE	
D624-638			HSU119TRF-E	DIODE	
D751-762			DA204U	DIODE	
D765,766			DA204U	DIODE	

E1: KAC-X5D (Europe) **K**: XR-5S (North America)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8960-10)

Ref. No.	Add	New	Parts No.	Description	Destination
D769			DA204U	DIODE	
D771,772			RKZ6.8KG(B2)	ZENER DIODE	
IC1 ,2			BA2903F	ANALOGUE IC	
IC3			BA10358F	ANALOGUE IC	
IC4			TL494IDR	ANALOGUE IC	
IC5			BA4560RF	ANALOGUE IC	
IC6			RC4580IDR	ANALOGUE IC	
IC7			NJM319V-ZB	ANALOGUE IC	
IC8 ,9			TC74VHC00FT	MOS-IC	
IC10			SN74HC02APWR	MOS-IC	
IC11,12			IRS2011SPBF	MOS-IC	
IC13			BA4560RF	ANALOGUE IC	
IC14			RC4580IDR	ANALOGUE IC	
IC15			NJM319V-ZB	ANALOGUE IC	
IC16,17			TC74VHC00FT	MOS-IC	
IC18			SN74HC02APWR	MOS-IC	
IC19,20			IRS2011SPBF	MOS-IC	
IC22			RC4580IDR	ANALOGUE IC	
IC23			NJM319V-ZB	ANALOGUE IC	
IC24,25			TC74VHC00FT	MOS-IC	
IC26			SN74HC02APWR	MOS-IC	
IC27,28			IRS2011SPBF	MOS-IC	
IC601-603		✻	BA2901SFV	ANALOGUE IC	
IC606			BA4560RF	ANALOGUE IC	
IC607			BA2903F	ANALOGUE IC	
IC608-611			BA4560RF	ANALOGUE IC	
IC612			BA2903F	ANALOGUE IC	
IC613,614			BA4560RF	ANALOGUE IC	
IC616,617			BA4560RF	ANALOGUE IC	
IC751-769			BA4560RF	ANALOGUE IC	
IC771,772			BA4560RF	ANALOGUE IC	
Q1			2SC4154(F)	TRANSISTOR	
Q2 ,3			RT1P141M-T111	TRANSISTOR	
Q4			2SC6120	TRANSISTOR	
Q5 ,6			2SA1577	TRANSISTOR	
Q7			2SC6120	TRANSISTOR	
Q8 -15		✻	IRF6648TRPBF	FET	
Q16			2SC4154(F)	TRANSISTOR	
Q17			RT1N141M-T111	TRANSISTOR	
Q18		✻	2SD2199-E	TRANSISTOR	
Q19 ,20			2SC4154(F)	TRANSISTOR	
Q21			2SK879-F(GR)	FET	
Q22			2SB1450-E	TRANSISTOR	
Q23 ,24			ISA1602AM1(F)	TRANSISTOR	
Q25			2SK879-F(GR)	FET	
Q26 ,27			ISA1602AM1(F)	TRANSISTOR	
Q28			2SC5824	TRANSISTOR	
Q29			2SC4154(F)	TRANSISTOR	
Q30			2SC2713-F	TRANSISTOR	
Q31			2SB1184	TRANSISTOR	
Q32			ISA1602AM1(F)	TRANSISTOR	
Q33			2SA1163-F	TRANSISTOR	
Q34			2SD1760	TRANSISTOR	
Q35		✻	2SD2199-E	TRANSISTOR	
Q36 ,37			2SC4154(F)	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q38			ISA1602AM1(F)	TRANSISTOR	
Q39 ,40			2SC4154(F)	TRANSISTOR	
Q41 ,42			RT1P141M-T111	TRANSISTOR	
Q43 ,44			ISA1602AM1(F)	TRANSISTOR	
Q45			2SC4154(F)	TRANSISTOR	
Q46			2SC2713-F	TRANSISTOR	
Q47			ISA1602AM1(F)	TRANSISTOR	
Q48 -50			2SC4154(F)	TRANSISTOR	
Q51			RT1N141M-T111	TRANSISTOR	
Q52 ,53			2SD2114K	TRANSISTOR	
Q54 ,55			2SA1163-F	TRANSISTOR	
Q56 -59		✻	IRF6665TRPBF	FET	
Q60 ,61			2SD2114K	TRANSISTOR	
Q62 ,63			2SA1163-F	TRANSISTOR	
Q64 -67		✻	IRF6665TRPBF	FET	
Q68 ,69			2SD2114K	TRANSISTOR	
Q70 ,71			2SA1163-F	TRANSISTOR	
Q72 -79		✻	IRF6662TRPBF	FET	
Q80			RT1P141M-T111	TRANSISTOR	
Q85			2SC4154(F)	TRANSISTOR	
Q86			2SA1163-F	TRANSISTOR	
Q87			2SC4154(F)	TRANSISTOR	
Q90			2SB1189	TRANSISTOR	
Q91 ,92			2SC4154(F)	TRANSISTOR	
Q93 ,94			ISA1602AM1(F)	TRANSISTOR	
Q95			2SC4154(F)	TRANSISTOR	
Q96			RT1P141M-T111	TRANSISTOR	
Q97			RT1N141M-T111	TRANSISTOR	
Q101			ISA1602AM1(F)	TRANSISTOR	
Q102,103			2SC4154(F)	TRANSISTOR	
Q118			RT1N141M-T111	TRANSISTOR	
Q119			RT1P141M-T111	TRANSISTOR	
Q120			RT1N141M-T111	TRANSISTOR	
Q121,122			2SC5824	TRANSISTOR	
Q123			RT1P141M-T111	TRANSISTOR	
Q125-128			2SC2713-F	TRANSISTOR	
Q129-136			2SA1163-F	TRANSISTOR	
Q137-141			2SC2713-F	TRANSISTOR	
Q142,143			2SA1163-F	TRANSISTOR	
Q144			2SC2713-F	TRANSISTOR	
Q145			2SA1163-F	TRANSISTOR	
Q601			ISA1602AM1(F)	TRANSISTOR	
Q602			2SC4154(F)	TRANSISTOR	
Q603			RT1P141M-T111	TRANSISTOR	
Q604			RT1N141M-T111	TRANSISTOR	
Q605			2SC4154(F)	TRANSISTOR	
Q607-609			RT1N141M-T111	TRANSISTOR	
Q610			2SC4154(F)	TRANSISTOR	
Q611			RT1P141M-T111	TRANSISTOR	
Q612			RT1N141M-T111	TRANSISTOR	
Q613			2SC4154(F)	TRANSISTOR	
Q614			ISA1602AM1(F)	TRANSISTOR	
Q615			RT1N141M-T111	TRANSISTOR	
Q616			ISA1602AM1(F)	TRANSISTOR	
Q617-621			2SC4154(F)	TRANSISTOR	

E1: KAC-X5D (Europe) **K**: XR-5S (North America)

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8960-10)

Ref. No.	Add	New	Parts No.	Description	Destination
Q622			ISA1602AM1(F)	TRANSISTOR	
Q624			RT1N141M-T111	TRANSISTOR	
Q625			2SC4154(F)	TRANSISTOR	
Q626-628			RT1N141M-T111	TRANSISTOR	
Q751-760			2SC4154(F)	TRANSISTOR	
TH1 -9			NCP18WB473J0S	THERMISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination

E1: KAC-X5D (Europe) **K**: XR-5S (North America)

⚠Indicates safety critical compo nents.