EXPLODED VIEW

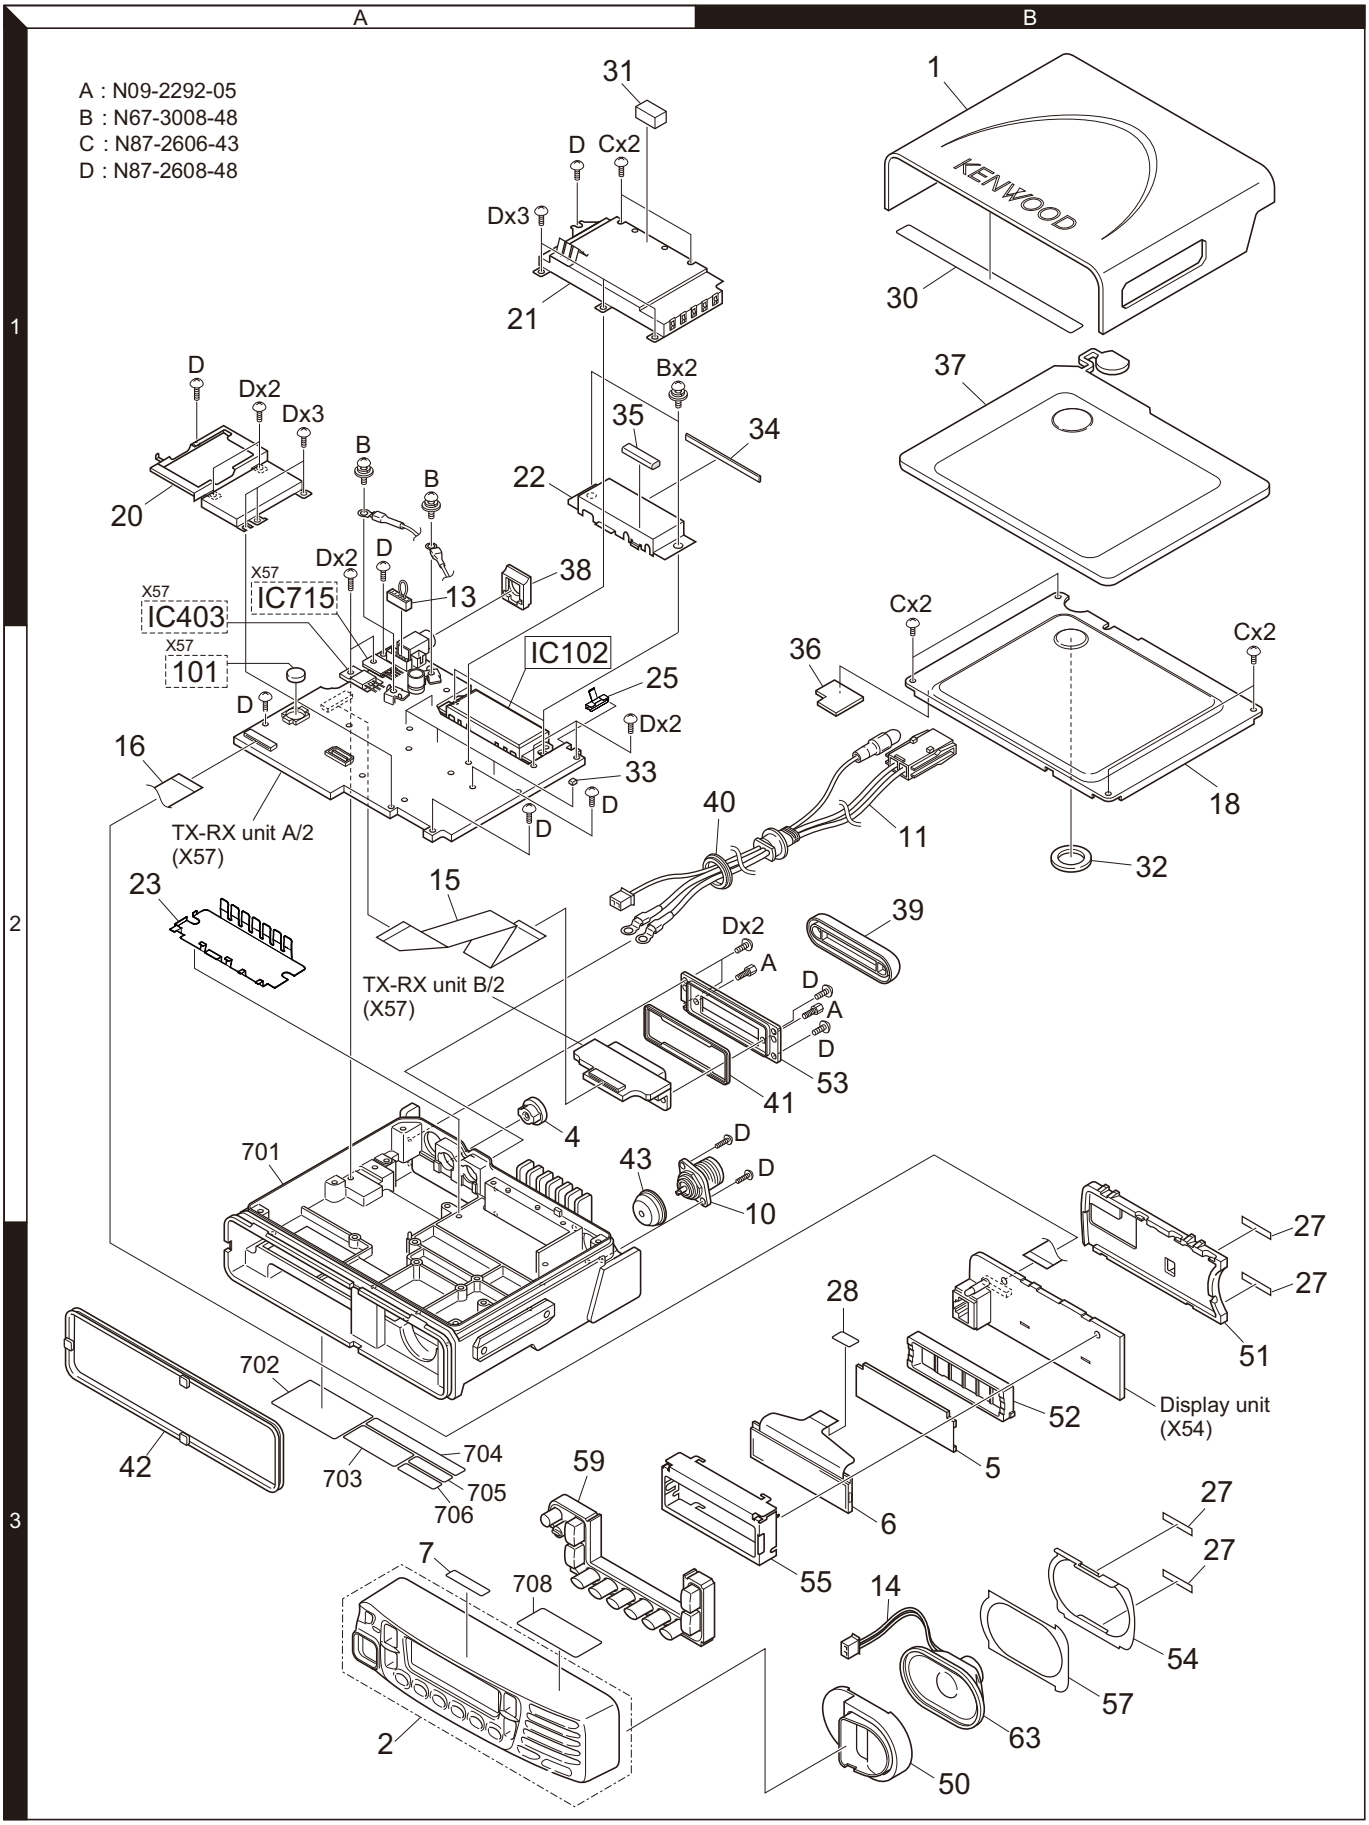

Parts with the exploded numbers larger than 700 are not supplied.
If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB.
These parts must be ordered separately.

PACKING

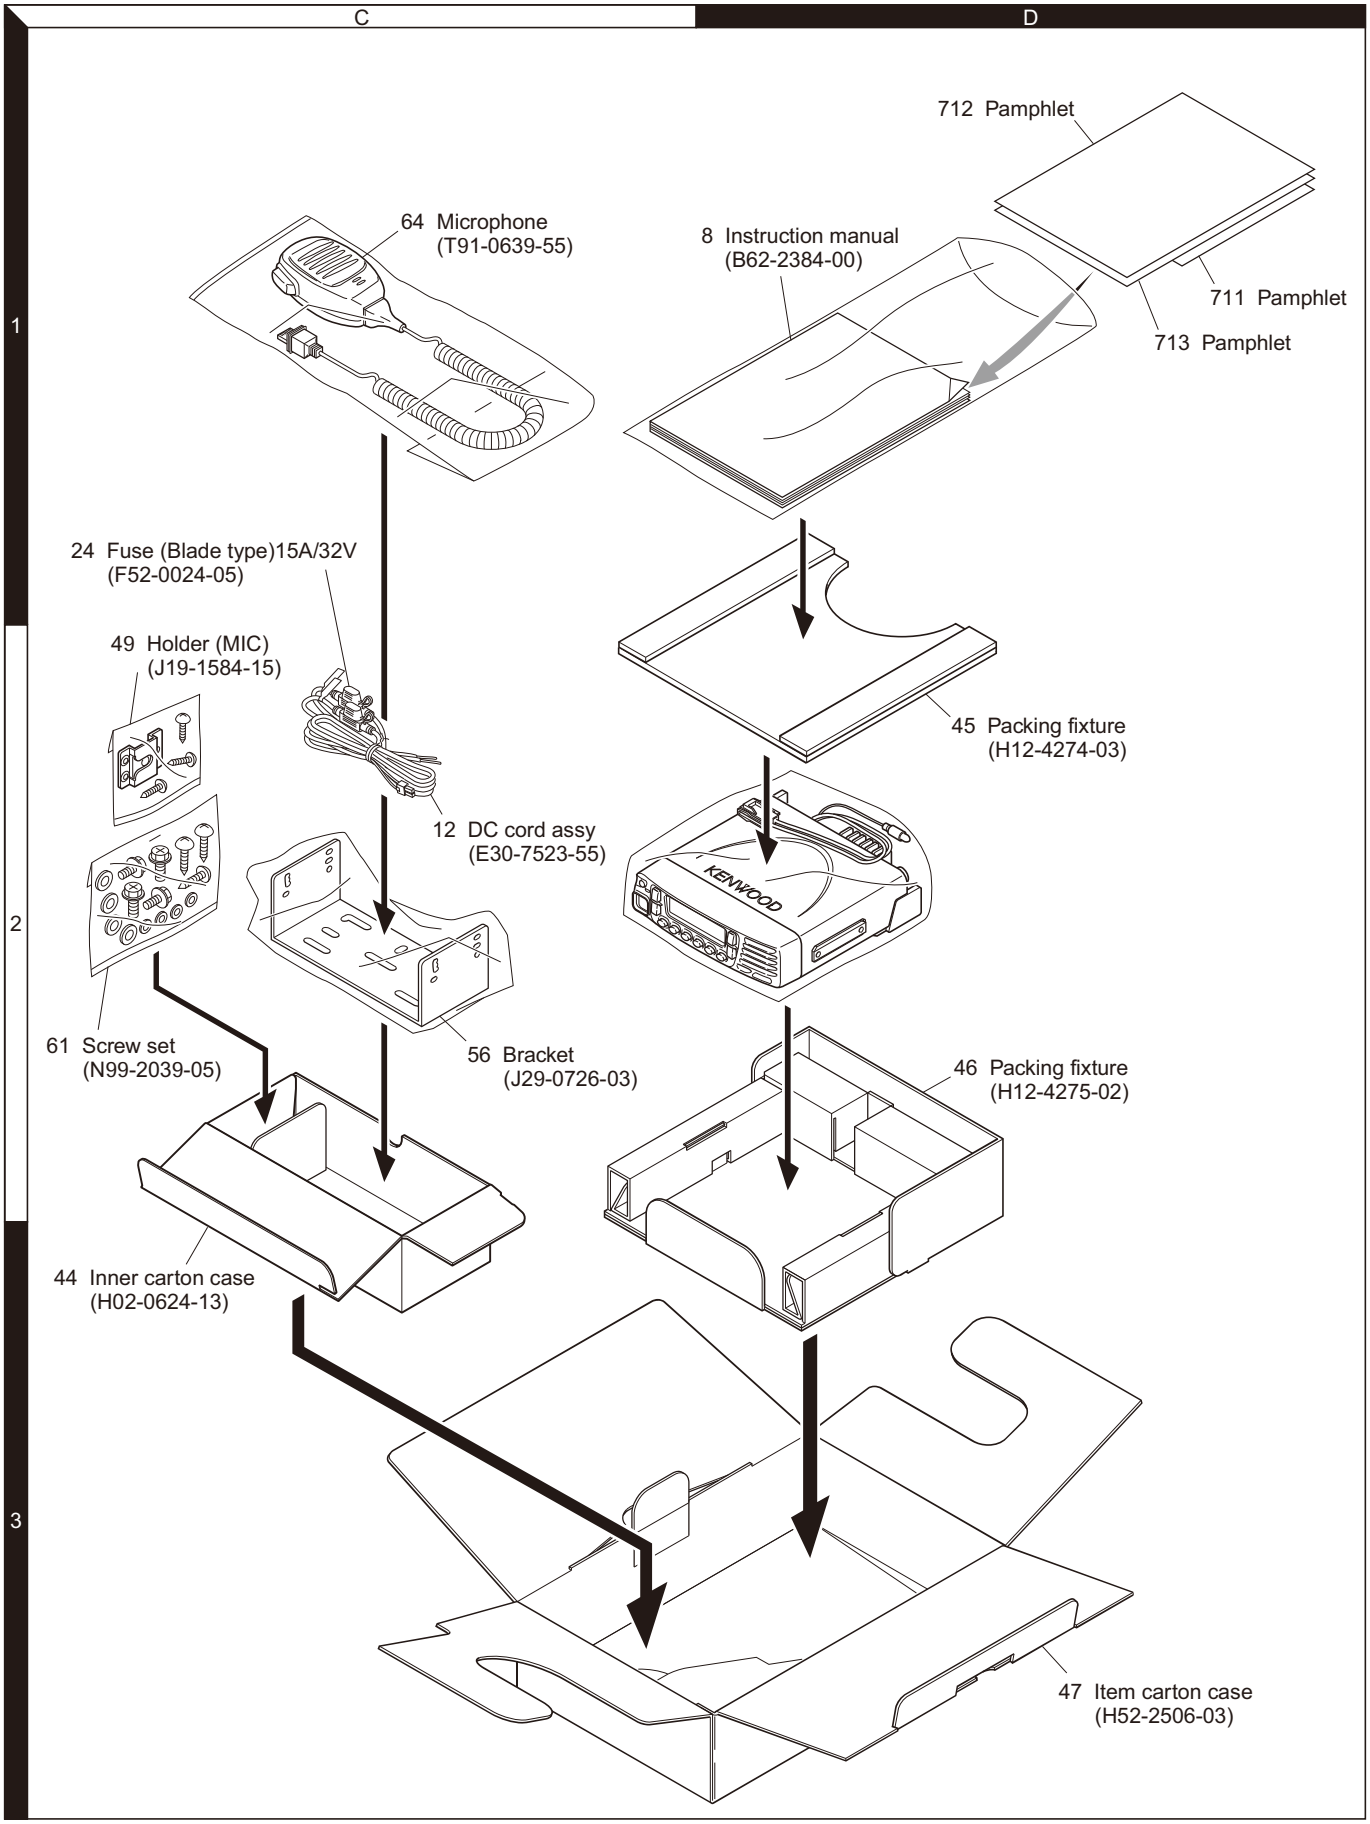

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

NX-901

Ref. No.	Address	New parts	Parts No.	Description	Destination
NX-901					
1	1B		A01-2194-11	METALLIC CABINET	
2	3A		A62-1162-12	PANEL ASSY	
4	2A		B09-0681-03	CAP(KAP-2)	
5	3B		B11-1871-04	FILTER(LCD)	
6	3B	✻	B38-0922-25	LCD ASSY	
7	3A		B42-7417-04	STICKER(NEXEDGE)	
8	1D	✻	B62-2384-00	INSTRUCTION MANUAL	
10	2B		E04-0170-15	RF COAXIAL RECEPTACLE(N)	
11	2B		E30-7520-25	DC CORD(PIG TAIL)	
12	2C		E30-7523-55	DC CORD ASSY ACCESSORY	
13	1A		E37-1118-05	SHORT PLUG	
14	3B		E37-1124-05	LEAD WIRE WITH CONNECTOR(SP)	
15	2A		E37-1448-05	FLAT CABLE(30P/D-SUB)	
16	2A		E37-1449-05	FLAT CABLE(30P/PANEL)	
18	2B		F10-2488-12	SHIELDING PLATE(CHASSIS)	
20	1A		F10-2490-13	SHIELDING CASE(VCO)	
21	1A		F10-3032-14	SHIELDING CASE ASSY(FINAL)	
22	1A		F10-3112-03	SHIELDING CASE(POWER MODULE)	
23	2A	✻	F10-3164-04	SHIELDING PLATE(POWER MODULE)	
24	2C		F52-0024-05	FUSE(BLADE TYPE) 15A 32V	
25	2A	✻	G02-1868-04	EARTH SPRING(ANT SIDE)	
-			G10-1322-04	FIBROUS SHEET(PANEL-SP)	
27	3B		G10-1342-04	FIBROUS SHEET(SP MOUNT)	
28	3B		G10-1802-04	FIBROUS SHEET(LCD)	
-			G11-4336-04	SHEET(PANEL-FG)	
30	1B		G11-4343-04	SHEET(STEP)	
31	1A		G13-2018-04	CUSHION(FINAL CASE)	
32	2B		G13-2047-04	CUSHION(DC SCREW)	
33	2A		G13-2071-14	CONDUCTIVE CUSHION(FINAL CASE)	
34	1B		G13-2101-04	CONDUCTIVE CUSHION(PM BOTTOM)	
35	1A		G13-2102-04	CONDUCTIVE CUSHION(PM TOP)	
36	2B		G13-2279-04	CUSHION(FFC)	
37	1B		G53-1613-11	PACKING(SHIELD PLATE)	
38	1A		G53-1616-03	PACKING(PHONE JACK)	
39	2B		G53-1626-03	PACKING(D-SUB OUTER)	
40	2B		G53-1643-04	PACKING(DC CORD)	
41	2B		G53-1645-03	PACKING(D-SUB INNER)	
42	3A		G53-1676-03	PACKING(CHASSIS)	
43	2A		G53-1789-04	PACKING(ANT)	
44	2C		H02-0624-13	INNER CARTON CASE	
45	2D		H12-4274-03	PACKING FIXTURE(UPPER)	
46	2D		H12-4275-02	PACKING FIXTURE(LOWER)	
47	3D	✻	H52-2506-03	ITEM CARTON CASE	
49	2C		J19-1584-15	HOLDER(MIC) ACCESSORY	
50	3B		J19-5464-13	HOLDER(SPEAKER)	
51	3B		J19-5485-12	HOLDER(PANEL)	
52	3B		J19-5502-13	HOLDER(LCD)	
53	2B		J21-8479-02	MOUNTING HARDWARE(D-SUB)	
54	3B		J21-8481-03	MOUNTING HARDWARE(SPEAKER)	
55	3B		J21-8569-03	MOUNTING HARDWARE(LCD)	
56	2C		J29-0726-03	BRACKET ACCESSORY	
57	3B		J30-1289-04	SPACER(SP-SHEET)	

NX-901
DISPLAY UNIT (X54-3680-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
59	3A		K29-9401-03	KEY TOP	
A	2B		N09-2292-05	HEXAGON HEAD SCREW	
B	1A		N67-3008-48	PAN HEAD SEMS SCREW	
C	2B		N87-2606-43	BRAZIER HEAD TAPTITE SCREW	
D	1A,2A,2B		N87-2608-48	BRAZIER HEAD TAPTITE SCREW	
61	2C		N99-2039-05	SCREW SET ACCESSORY	
63	3B		T07-0757-25	SPEAKER	
64	1C		T91-0639-55	MICROPHONE ACCESSORY	
-		✻	X57-8060-13	SERVICE TX-RX UNIT	
DISPLAY UNIT (X54-3680-10)					
D914			B30-2304-05	LED(RED/GREEN)	
D915-926			B30-2281-05	LED(Y)	
D927-936			B30-2282-05	LED(Y)	
C903			CK73HB1E103K	CHIP C 0.010UF K	
C905			CK73HB1A104K	CHIP C 0.10UF K	
C906			CK73HB1H222K	CHIP C 2200PF K	
C907-909			CK73HB1H102K	CHIP C 1000PF K	
C910-912			CC73HCH1H101J	CHIP C 100PF J	
C913			CK73HB1A104K	CHIP C 0.10UF K	
C914			CK73HB1H102K	CHIP C 1000PF K	
C915			CK73FB1E475K	CHIP C 4.7UF K	
C916			CK73GB1E105K	CHIP C 1.0UF K	
C917,918			CK73HB1A104K	CHIP C 0.10UF K	
C919			CK73HB1H102K	CHIP C 1000PF K	
C920			CC73HCH1H121J	CHIP C 120PF J	
C921			CK73HB1A104K	CHIP C 0.10UF K	
C922-925			CK73HB1H102K	CHIP C 1000PF K	
C926-929			CK73HB1A104K	CHIP C 0.10UF K	
C930			CK73GB1E105K	CHIP C 1.0UF K	
C931,932			CK73HB1H102K	CHIP C 1000PF K	
C933			CK73GB1E105K	CHIP C 1.0UF K	
C934			CK73HB1H102K	CHIP C 1000PF K	
C935			CS77BA1E4R7M	CHIP TNTL 4.7UF 25WV	
C936			CC73HCH1H100D	CHIP C 10PF D	
C938			CC73HCH1H100D	CHIP C 10PF D	
C939			CK73GB1C104K	CHIP C 0.10UF K	
C940			CK73FB1A106K	CHIP C 10UF K	
C941,942			CK73HB1H102K	CHIP C 1000PF K	
C943,944			CS77BA1E4R7M	CHIP TNTL 4.7UF 25WV	
C945			CK73GB1H103K	CHIP C 0.010UF K	
C946			CC73HCH1H101J	CHIP C 100PF J	
C947			CK73HB1A104K	CHIP C 0.10UF K	
C948			CC73HCH1H101J	CHIP C 100PF J	
C949-954			CK73GB1E105K	CHIP C 1.0UF K	
C955			CC73HCH1H101J	CHIP C 100PF J	
C956,957			CK73HB1E103K	CHIP C 0.010UF K	
C958			CK73HB1H102K	CHIP C 1000PF K	
C959,960			CK73HB1E103K	CHIP C 0.010UF K	
C961			CK73HB0J105K	CHIP C 1.0UF K	
C962			CK73HB1A104K	CHIP C 0.10UF K	
C963			CC73HCH1H101J	CHIP C 100PF J	
C964			CK73GB1E105K	CHIP C 1.0UF K	

PARTS LIST

DISPLAY UNIT (X54-3680-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C965			CK73HB1A104K	CHIP C 0.10UF K	
C966,967			CK73HB1H102K	CHIP C 1000PF K	
CN901			E40-6559-05	FLAT CABLE CONNECTOR(30P)	
CN902			E41-2671-05	PIN ASSY(2P)	
CN905			E40-6556-05	FLAT CABLE CONNECTOR(20P)	
J901			E58-0522-05	MODULAR JACK(MIC)	
-			J31-0551-05	COLLAR	
L901,902			L41-1095-39	SMALL FIXED INDUCTOR(1.0UH)	
L903-905			L92-0140-05	CHIP FERRITE	
L906			L92-0163-05	BEADS CORE	
L907			L92-0140-05	CHIP FERRITE	
L908			L92-0163-05	BEADS CORE	
X901			L77-1950-05	CRYSTAL RESONATOR(11.0592MHZ)	
CP907,908			RK75HA1JR00J	CHIP-COM 0 J 1/16W	
CP909			RK74HA1J104J	CHIP-COM 100K J 1/16W	
CP910			RK74HA1J101J	CHIP-COM 100 J 1/16W	
CP912			RK74HA1J101J	CHIP-COM 100 J 1/16W	
CP917			RK74HA1J104J	CHIP-COM 100K J 1/16W	
R900			RK73HB1J000J	CHIP R 0 J 1/16W	
R901			RK73GB2A000J	CHIP R 0 J 1/10W	
R902			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R904			RK73HB1J101J	CHIP R 100 J 1/16W	
R905			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R906			RK73HB1J331J	CHIP R 330 J 1/16W	
R907			RK73HB1J104J	CHIP R 100K J 1/16W	
R908			RK73HB1J473J	CHIP R 47K J 1/16W	
R909			RK73HB1J104J	CHIP R 100K J 1/16W	
R911			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R912			RK73HB1J333J	CHIP R 33K J 1/16W	
R913			RK73HB1J823J	CHIP R 82K J 1/16W	
R914			RK73HB1J104J	CHIP R 100K J 1/16W	
R915			RK73HB1J473J	CHIP R 47K J 1/16W	
R916,917			RK73HB1J103J	CHIP R 10K J 1/16W	
R918			RK73GB2A100J	CHIP R 10 J 1/10W	
R919			RK73HB1J103J	CHIP R 10K J 1/16W	
R920,921			RK73HB1J101J	CHIP R 100 J 1/16W	
R922-925			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R926			RK73HB1J103J	CHIP R 10K J 1/16W	
R927			RK73HB1J473J	CHIP R 47K J 1/16W	
R928			RK73HB1J103J	CHIP R 10K J 1/16W	
R929			RK73HB1J474J	CHIP R 470K J 1/16W	
R930			RK73HB1J103J	CHIP R 10K J 1/16W	
R931			RK73FB2B561J	CHIP R 560 J 1/8W	
R932			RK73FB2B471J	CHIP R 470 J 1/8W	
R933			RK73HB1J101J	CHIP R 100 J 1/16W	
R934-937			RK73HB1J473J	CHIP R 47K J 1/16W	
R938,939			RK73HB1J103J	CHIP R 10K J 1/16W	
R940			RK73HB1J274J	CHIP R 270K J 1/16W	
R941			RK73HB1J124J	CHIP R 120K J 1/16W	
R942			RK73HB1J000J	CHIP R 0 J 1/16W	
R943			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R944			RK73HB1J104J	CHIP R 100K J 1/16W	
R945,946			RK73HB1J000J	CHIP R 0 J 1/16W	
R947			RK73HB1J474J	CHIP R 470K J 1/16W	
R948			RK73HB1J103J	CHIP R 10K J 1/16W	
R949			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R950			RK73HB1J473J	CHIP R 47K J 1/16W	
R952			RK73HB1J000J	CHIP R 0 J 1/16W	
R953			RK73GB2A271J	CHIP R 270 J 1/10W	
R954			RK73GB2A470J	CHIP R 47 J 1/10W	
R955			RK73GB2A271J	CHIP R 270 J 1/10W	
R956			RK73GB2A101J	CHIP R 100 J 1/10W	
R957,958			RK73GB2A271J	CHIP R 270 J 1/10W	
R960			RK73HB1J000J	CHIP R 0 J 1/16W	
R962			RK73HB1J000J	CHIP R 0 J 1/16W	
R963,964			RK73GB2A391J	CHIP R 390 J 1/10W	
R965,966			RK73GB2A821J	CHIP R 820 J 1/10W	
R967-974			RK73HB1J103J	CHIP R 10K J 1/16W	
R976			RK73HB1J000J	CHIP R 0 J 1/16W	
R977-979			RK73HB1J473J	CHIP R 47K J 1/16W	
R981,982			RK73HB1J103J	CHIP R 10K J 1/16W	
R986			RK73HB1J103J	CHIP R 10K J 1/16W	
R988			RK73HB1J473J	CHIP R 47K J 1/16W	
R989			RK73HB1J474J	CHIP R 470K J 1/16W	
R990			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R991			RK73HB1J474J	CHIP R 470K J 1/16W	
R992			RK73HB1J000J	CHIP R 0 J 1/16W	
R996			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R997			RK73GB2A000J	CHIP R 0 J 1/10W	
R998			RK73HB1J000J	CHIP R 0 J 1/16W	
R999			RK73HB1J101J	CHIP R 100 J 1/16W	
D901,902			AVRM16080MAAB	VARISTOR	
D903			02DZ18F-X	ZENER DIODE	
D904			AVRM16080MAAB	VARISTOR	
D906			MINISMDC020F	VARISTOR	
D907			02DZ18F-X	ZENER DIODE	
D908			HSC119	DIODE	
D910			1SS416	DIODE	
D911,912			HSC119	DIODE	
D913			DA204U	DIODE	
D937			1SS416	DIODE	
IC901			TC7W66FK-F	MOS-IC	
IC902			TC75S51FE(F)	MOS-IC	
IC903			XC6209B502P-G	MOS-IC	
IC904			XC6204B332M-G	MOS-IC	
IC905			TC7SH126FU-F	MOS-IC	
IC906			LM2682MMX	MOS-IC	
IC907			TC7WH126FU-F	MOS-IC	
IC908			TC7SH08FU-F	MOS-IC	
IC909			LMC7101BIM5	MOS-IC	
IC910			TC74LCX245FK	MOS-IC	
IC911			30620MCP497GU	MICROCONTROLLER IC	
IC912			TC7WZ245FK-F	MOS-IC	
IC913			29LV16BT7KDDA	ROM IC	
Q901			SSM3K15TE(F)	FET	
Q902			RT1N441U-T111	TRANSISTOR	
Q904			RT1N441U-T111	TRANSISTOR	
Q905,906			RT1N141U-T111	TRANSISTOR	
Q908,909			RT1N141U-T111	TRANSISTOR	
Q910			12A02CH	TRANSISTOR	
Q911			SSM3K15TE(F)	FET	
Q913			UPA672T-A	FET	
TH901			ERTJ0EV104H	THERMISTOR	

PARTS LIST

Ref. No.	Address	New parts	Parts No.	Description			Destination
TX-RX UNIT (X57-8060-12)							
C1			CK73HB0J105K	CHIP C	1.0UF	K	
C2 ,3			CC73HCH1H101J	CHIP C	100PF	J	
C4			CK73HB1A104K	CHIP C	0.10UF	K	
C5			CK73HB1H103K	CHIP C	0.010UF	K	
C6			CC73HCH1H101J	CHIP C	100PF	J	
C7			CC73HCH1H180J	CHIP C	18PF	J	
C9			CK73HB1H103K	CHIP C	0.010UF	K	
C10			CC73HCH1H390J	CHIP C	39PF	J	
C13			CK73HB1H103K	CHIP C	0.010UF	K	
C14			CK73GB1E105K	CHIP C	1.0UF	K	
C16 ,17			CK73HB1H103K	CHIP C	0.010UF	K	
C19 -23			CC73HCH1H101J	CHIP C	100PF	J	
C24			CK73HB1A104K	CHIP C	0.10UF	K	
C25 ,26			CC73HCH1H101J	CHIP C	100PF	J	
C27			CK73HB1A104K	CHIP C	0.10UF	K	
C28			CC73HCH1H101J	CHIP C	100PF	J	
C29			CK73HB1H103K	CHIP C	0.010UF	K	
C31			CC73HCH1H101J	CHIP C	100PF	J	
C32			CS77CA1VR15M	CHIP TNTL	0.15UF	35WV	
C33			CC73HCH1H680J	CHIP C	68PF	J	
C35			CS77BA1D100M	CHIP TNTL	10UF	20WV	
C37			C92-0863-05	CHIP TNTL	0.047UF	35WV	
C38			C93-0787-05	CHIP C	0.1UF	J	
C39			CC73HCH1H101J	CHIP C	100PF	J	
C41			CK73HB1H471K	CHIP C	470PF	K	
C43			CK73HB1H471K	CHIP C	470PF	K	
C44 ,45			CC73HCH1H101J	CHIP C	100PF	J	
C46			CC73GCH1H030B	CHIP C	3.0PF	B	
C48			CK73HB0J105K	CHIP C	1.0UF	K	
C50 ,51			CC73HCH1H151J	CHIP C	150PF	J	
C52			CC73HCH1H101J	CHIP C	100PF	J	
C53			CK73HB1H103K	CHIP C	0.010UF	K	
C54			CK73HB1A104K	CHIP C	0.10UF	K	
C55			CK73HB0J105K	CHIP C	1.0UF	K	
C56			CK73HB1H471K	CHIP C	470PF	K	
C58			CC73HCH1H120G	CHIP C	12PF	G	
C59			CC73HCH1H040B	CHIP C	4.0PF	B	
C60 ,61			CC73HCH1H3R5B	CHIP C	3.5PF	B	
C63			CC73HCH1HR75B	CHIP C	0.75PF	B	
C64			CC73HCH1H080B	CHIP C	8.0PF	B	
C65			CK73FB1A106K	CHIP C	10UF	K	
C66			CC73HCH1H090B	CHIP C	9.0PF	B	
C67			CC73HCH1H070B	CHIP C	7.0PF	B	
C68			CC73HCH1H090B	CHIP C	9.0PF	B	
C69			CC73HCH1H060B	CHIP C	6.0PF	B	
C70			CC73HCH1H471J	CHIP C	470PF	J	
C71			CK73GB1E105K	CHIP C	1.0UF	K	
C72			CC73HCH1H060B	CHIP C	6.0PF	B	
C73			CC73HCH1H101J	CHIP C	100PF	J	
C74			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C75			CK73HB1H471K	CHIP C	470PF	K	
C76			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C77 ,78			CC73HCH1H101J	CHIP C	100PF	J	
C79			CC73HCH1H050B	CHIP C	5.0PF	B	
C80			CC73HCH1H101J	CHIP C	100PF	J	
C82			CC73HCH1H330J	CHIP C	33PF	J	
C83 ,84			CC73HCH1H101J	CHIP C	100PF	J	
C85			CK73HB1A104K	CHIP C	0.10UF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C86			CC73HCH1H030B	CHIP C	3.0PF	B	
C87			CC73HCH1H050B	CHIP C	5.0PF	B	
C88 -92			CK73HB1H103K	CHIP C	0.010UF	K	
C93			CK73HB1H471K	CHIP C	470PF	K	
C94			CC73GCH1H040B	CHIP C	4.0PF	B	
C95			CC73HCH1H180J	CHIP C	18PF	J	
C96			CC73HCH1H040B	CHIP C	4.0PF	B	
C97			CC73HCH1H050B	CHIP C	5.0PF	B	
C98			CC73HCH1H101J	CHIP C	100PF	J	
C99			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C102			CC73HCH1H101J	CHIP C	100PF	J	
C103			CK73HB1H103K	CHIP C	0.010UF	K	
C107			CC73HCH1H050B	CHIP C	5.0PF	B	
C108			CK73FB1E475K	CHIP C	4.7UF	K	
C109			CC73HCH1H470J	CHIP C	47PF	J	
C110			CK73GB1H104K	CHIP C	0.10UF	K	
C111			CC73HCH1H040B	CHIP C	4.0PF	B	
C112			CC73HCH1H030B	CHIP C	3.0PF	B	
C113			CC73HCH1H090B	CHIP C	9.0PF	B	
C114			CC73HCH1H680J	CHIP C	68PF	J	
C115			CK73HB1H103K	CHIP C	0.010UF	K	
C116			CC73HCH1H040B	CHIP C	4.0PF	B	
C117			CC73HCH1H470J	CHIP C	47PF	J	
C118			CC73HCH1H101J	CHIP C	100PF	J	
C119			CC73HCH1H040B	CHIP C	4.0PF	B	
C120			CC73HCH1H470J	CHIP C	47PF	J	
C121			CC73FCH1H060B	CHIP C	6.0PF	B	
C123			CC73HCH1H220J	CHIP C	22PF	J	
C124,125			CC73HCH1H470J	CHIP C	47PF	J	
C126			CC73HCH1H101J	CHIP C	100PF	J	
C127-130			CC73HCH1H470J	CHIP C	47PF	J	
C131			CC73HCH1H101J	CHIP C	100PF	J	
C132			CK73HB1H471K	CHIP C	470PF	K	
C133			CC73HCH1H220J	CHIP C	22PF	J	
C134			CK73HB1H471K	CHIP C	470PF	K	
C135			CC73HCH1H101J	CHIP C	100PF	J	
C136			CE32BM1E101M	CHIP EL	100UF	25WV	
C137			CK73HB1H103K	CHIP C	0.010UF	K	
C139			CK73HB1H103K	CHIP C	0.010UF	K	
C140			CC73HCH1H101J	CHIP C	100PF	J	
C143			CC73GCH1H470J	CHIP C	47PF	J	
C144			CC73HCH1H101J	CHIP C	100PF	J	
C146			CC73HCH1H030B	CHIP C	3.0PF	B	
C148			CC73HCH1H101J	CHIP C	100PF	J	
C149			CK73HB1H472K	CHIP C	4700PF	K	
C150			CC73HCH1H050B	CHIP C	5.0PF	B	
C151			CC73HCH1H101J	CHIP C	100PF	J	
C152			CC73HCH1H060B	CHIP C	6.0PF	B	
C153			CC73HCH1H030B	CHIP C	3.0PF	B	
C154			CK73HB1A104K	CHIP C	0.10UF	K	
C155			CC73HCH1H020B	CHIP C	2.0PF	B	
C156			CC73HCH1H101J	CHIP C	100PF	J	
C157			CC73HCH1H100B	CHIP C	10PF	B	
C158			CC73HCH1H101J	CHIP C	100PF	J	
C159			CC73HCH1H080B	CHIP C	8.0PF	B	
C160			CC73HCH1H020B	CHIP C	2.0PF	B	
C161			CC73HCH1H100B	CHIP C	10PF	B	
C162			CE32BM1E101M	CHIP EL	100UF	25WV	
C163			CC73HCH1H040B	CHIP C	4.0PF	B	
C164			CC73HCH1H470J	CHIP C	47PF	J	

PARTS LIST

TX-RX UNIT (X57-8060-12)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C165			CC73HCH1H101J	CHIP C	100PF	J	
C166,167			CC73HCH1H470J	CHIP C	47PF	J	
C168			CC73HCH1H030B	CHIP C	3.0PF	B	
C169			CC73HCH1H100B	CHIP C	10PF	B	
C170			CC73HCH1H030B	CHIP C	3.0PF	B	
C171			CC73HCH1H050B	CHIP C	5.0PF	B	
C172			CC73HCH1H030B	CHIP C	3.0PF	B	
C173			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C174			CK73GB1H104K	CHIP C	0.10UF	K	
C176			CK73GB1H104K	CHIP C	0.10UF	K	
C177			CC73HCH1H010B	CHIP C	1.0PF	B	
C182			CC73HCH1H050B	CHIP C	5.0PF	B	
C185			C93-1847-05	CHIP C	4.3PF	B	
C186		✻	C93-1864-05	CHIP C	18PF	G	
C188		✻	C93-1849-05	CHIP C	5.0PF	B	
C194,195			CC73HCH1H470J	CHIP C	47PF	J	
C201			CK73HB1H103K	CHIP C	0.010UF	K	
C202-205			CK73HB1A104K	CHIP C	0.10UF	K	
C206			CC73HCH1H100B	CHIP C	10PF	B	
C207,208			CK73HB1H103K	CHIP C	0.010UF	K	
C210			CK73HB1A104K	CHIP C	0.10UF	K	
C211			CC73HCH1H100B	CHIP C	10PF	B	
C212,213			CK73HB1A104K	CHIP C	0.10UF	K	
C214			CC73HCH1H680J	CHIP C	68PF	J	
C215			CC73HCH1H101J	CHIP C	100PF	J	
C216			CC73HCH1H680J	CHIP C	68PF	J	
C217			CK73HB1A104K	CHIP C	0.10UF	K	
C218,219			CK73GB0J475K	CHIP C	4.7UF	K	
C220			CC73HCH1H470J	CHIP C	47PF	J	
C221			CK73FB1A106K	CHIP C	10UF	K	
C222,223			CK73HB1H103K	CHIP C	0.010UF	K	
C225			CK73HB1A104K	CHIP C	0.10UF	K	
C226			CK73FB1A106K	CHIP C	10UF	K	
C227			CC73HCH1H820J	CHIP C	82PF	J	
C228-230			CK73HB1A104K	CHIP C	0.10UF	K	
C231			CK73HB1H103K	CHIP C	0.010UF	K	
C232			CK73HB1A104K	CHIP C	0.10UF	K	
C233			CK73HB0J105K	CHIP C	1.0UF	K	
C234			CK73HB1H103K	CHIP C	0.010UF	K	
C235			CC73HCH1H100B	CHIP C	10PF	B	
C236			CC73HCH1H470J	CHIP C	47PF	J	
C237			CC73HCH1H101J	CHIP C	100PF	J	
C238-240			CK73HB1H103K	CHIP C	0.010UF	K	
C242			CC73HCH1H101J	CHIP C	100PF	J	
C243			CK73HB1H103K	CHIP C	0.010UF	K	
C244			CC73HCH1H470J	CHIP C	47PF	J	
C245			CC73FCH1H470J	CHIP C	47PF	J	
C246			CK73HB1H103K	CHIP C	0.010UF	K	
C247			CC73FCH1H020B	CHIP C	2.0PF	B	
C248			CC73HCH1H101J	CHIP C	100PF	J	
C249			CC73HCH1H470J	CHIP C	47PF	J	
C251			CC73HCH1H030B	CHIP C	3.0PF	B	
C253			CC73HCH1H030B	CHIP C	3.0PF	B	
C254			CC73HCH1H030C	CHIP C	3.0PF	C	
C255			CC73FCH1H030B	CHIP C	3.0PF	B	
C256			CC73HCH1H030B	CHIP C	3.0PF	B	
C257			CC73HCH1H101J	CHIP C	100PF	J	
C258,259			CC73HCH1H470J	CHIP C	47PF	J	
C260			CK73HB1H103K	CHIP C	0.010UF	K	
C261			CC73HCH1H060B	CHIP C	6.0PF	B	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C263			CC73HCH1H470J	CHIP C	47PF	J	
C264			CC73HCH1H101J	CHIP C	100PF	J	
C266			CC73HCH1H101J	CHIP C	100PF	J	
C267			CC73HCH1H2R5B	CHIP C	2.5PF	B	
C269			CC73HCH1H101J	CHIP C	100PF	J	
C330-334			CK73HB1A104K	CHIP C	0.10UF	K	
C335			CC73HCH1H121J	CHIP C	120PF	J	
C336			CK73HB1H103K	CHIP C	0.010UF	K	
C337,338			CK73HB1A104K	CHIP C	0.10UF	K	
C339			CK73HB1H103K	CHIP C	0.010UF	K	
C341			CK73HB0J105K	CHIP C	1.0UF	K	
C342			CK73FB1A106K	CHIP C	10UF	K	
C343			CK73HB1A104K	CHIP C	0.10UF	K	
C344			CC73HCH1H101J	CHIP C	100PF	J	
C348			CK73HB1H103K	CHIP C	0.010UF	K	
C358			CK73HB1H102K	CHIP C	1000PF	K	
C361			CC73HCH1H101J	CHIP C	100PF	J	
C364-366			CC73HCH1H101J	CHIP C	100PF	J	
C375,376			CC73HCH1H470J	CHIP C	47PF	J	
C401			C92-0777-05	ELECTRO	1000UF	25WV	
C403			CK73HB1H471K	CHIP C	470PF	K	
C405,406			CC73HCH1H101J	CHIP C	100PF	J	
C409			CK73HB1H103K	CHIP C	0.010UF	K	
C410			CK73GB1H103K	CHIP C	0.010UF	K	
C411			CC73HCH1H101J	CHIP C	100PF	J	
C412			CC73HCH1H050C	CHIP C	5.0PF	C	
C413			CK73GB1E105K	CHIP C	1.0UF	K	
C414			CC73HCH1H040C	CHIP C	4.0PF	C	
C415			CC73HCH1H101J	CHIP C	100PF	J	
C416			CC73HCH1H050C	CHIP C	5.0PF	C	
C417			CC73HCH1H101J	CHIP C	100PF	J	
C418			CC73HCH1H040C	CHIP C	4.0PF	C	
C419			CK73HB1H102K	CHIP C	1000PF	K	
C420			CK73HB1A104K	CHIP C	0.10UF	K	
C421			CK73GB1H473K	CHIP C	0.047UF	K	
C422			CK73FB1E475K	CHIP C	4.7UF	K	
C424			CK73GB1E105K	CHIP C	1.0UF	K	
C425			CK73GB1H104K	CHIP C	0.10UF	K	
C426			CK73HB1H103K	CHIP C	0.010UF	K	
C427			CK73HB1H471K	CHIP C	470PF	K	
C428			CC73HCH1H101J	CHIP C	100PF	J	
C429			CK73GB1H104K	CHIP C	0.10UF	K	
C430,431			CK73FB1E475K	CHIP C	4.7UF	K	
C432			C92-0875-05	ELECTRO	47UF	25WV	
C433			CK73GB1H104K	CHIP C	0.10UF	K	
C434			CC73HCH1H101J	CHIP C	100PF	J	
C435,436			CK73FB1A106K	CHIP C	10UF	K	
C437			CK73HB1A224K	CHIP C	0.22UF	K	
C438			CK73FB1A106K	CHIP C	10UF	K	
C439			CK73HB1H103K	CHIP C	0.010UF	K	
C440			CK73GB1E105K	CHIP C	1.0UF	K	
C441,442			CK73HB1H103K	CHIP C	0.010UF	K	
C443,444			CK73GB1E105K	CHIP C	1.0UF	K	
C445			CK73FB1A106K	CHIP C	10UF	K	
C446			CS77BA1C4R7M	CHIP TNTL	4.7UF	16WV	
C447			CK73HB1A224K	CHIP C	0.22UF	K	
C448			CK73HB1H103K	CHIP C	0.010UF	K	
C449			CK73GB1C225K	CHIP C	2.2UF	K	
C450			CK73HB1H103K	CHIP C	0.010UF	K	
C451			CK73GB1C225K	CHIP C	2.2UF	K	

PARTS LIST

TX-RX UNIT (X57-8060-12)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C452			CK73HB0J105K	CHIP C 1.0UF K	
C453			CK73GB1E105K	CHIP C 1.0UF K	
C454			CC73HCH1H101J	CHIP C 100PF J	
C455,456			CK73HB1H103K	CHIP C 0.010UF K	
C463			CK73HB0J105K	CHIP C 1.0UF K	
C468			CK73HB1H103K	CHIP C 0.010UF K	
C471			CK73HB0J105K	CHIP C 1.0UF K	
C473			CK73FB1E475K	CHIP C 4.7UF K	
C474			CK73HB1H103K	CHIP C 0.010UF K	
C475			CK73FB1A106K	CHIP C 10UF K	
C476-483			CC73HCH1H101J	CHIP C 100PF J	
C485,486			CC73HCH1H050C	CHIP C 5.0PF C	
C487,488			CK73GB0J106K	CHIP C 10UF K	
C501,502			CK73HB0J105K	CHIP C 1.0UF K	
C503-507			CK73HB1A104K	CHIP C 0.10UF K	
C508			CC73HCH1H101J	CHIP C 100PF J	
C509			CK73HB1A104K	CHIP C 0.10UF K	
C511-514			CK73HB1A104K	CHIP C 0.10UF K	
C515			CK73HB0J105K	CHIP C 1.0UF K	
C516,517			CK73HB1A104K	CHIP C 0.10UF K	
C518			CK73GB0J106K	CHIP C 10UF K	
C520,521			CK73HB1H103K	CHIP C 0.010UF K	
C522			CK73GB0J106K	CHIP C 10UF K	
C523			CK73HB1H103K	CHIP C 0.010UF K	
C527			CK73HB1H103K	CHIP C 0.010UF K	
C528			CK73HB1A104K	CHIP C 0.10UF K	
C529,530			CK73HB1H103K	CHIP C 0.010UF K	
C531			CK73HB1A104K	CHIP C 0.10UF K	
C532			CK73HB1H103K	CHIP C 0.010UF K	
C533			CK73HB1A104K	CHIP C 0.10UF K	
C534			CC73HCH1H101J	CHIP C 100PF J	
C535			CK73FB1A106K	CHIP C 10UF K	
C536			CK73HB1H103K	CHIP C 0.010UF K	
C537,538			CK73HB1A104K	CHIP C 0.10UF K	
C539			CK73HB1H103K	CHIP C 0.010UF K	
C540			CK73HB0J105K	CHIP C 1.0UF K	
C541			CK73HB1A104K	CHIP C 0.10UF K	
C542			CK73FB1A106K	CHIP C 10UF K	
C543-546			CC73HCH1H101J	CHIP C 100PF J	
C547-550			CK73HB1A104K	CHIP C 0.10UF K	
C551			CK73HB1H103K	CHIP C 0.010UF K	
C552			CK73HB0J105K	CHIP C 1.0UF K	
C553			CC73HCH1H101J	CHIP C 100PF J	
C554-558			CK73HB1A104K	CHIP C 0.10UF K	
C559			CK73HB1H103K	CHIP C 0.010UF K	
C560			CK73HB0J105K	CHIP C 1.0UF K	
C561-563			CC73HCH1H101J	CHIP C 100PF J	
C564			CC73HCH1H020B	CHIP C 2.0PF B	
C565-585			CC73HCH1H101J	CHIP C 100PF J	
C586			CK73HB1H103K	CHIP C 0.010UF K	
C587-589			CC73HCH1H101J	CHIP C 100PF J	
C590,591			CK73HB1H103K	CHIP C 0.010UF K	
C592,593			CC73HCH1H101J	CHIP C 100PF J	
C594,595			CK73HB1H103K	CHIP C 0.010UF K	
C596			CK73HB1A104K	CHIP C 0.10UF K	
C597-611			CC73HCH1H101J	CHIP C 100PF J	
C612			CK73GB1H103K	CHIP C 0.010UF K	
C613-616			CK73GB1E105K	CHIP C 1.0UF K	
C618			CK73HB1H103K	CHIP C 0.010UF K	
C620,621			CK73HB1H103K	CHIP C 0.010UF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C622			CC73HCH1H101J	CHIP C 100PF J	
C623-629			CK73HB1H103K	CHIP C 0.010UF K	
C630			CK73GB1H104K	CHIP C 0.10UF K	
C648			CC73HCH1H030B	CHIP C 3.0PF B	
C651			CK73GB1E105K	CHIP C 1.0UF K	
C652			CC73HCH1H470J	CHIP C 47PF J	
C653			CC73HCH1H221J	CHIP C 220PF J	
C654			CK73HB1H102K	CHIP C 1000PF K	
C702			CK73HB0J105K	CHIP C 1.0UF K	
C704			CC73HCH1H030B	CHIP C 3.0PF B	
C705			CK73HB1H122K	CHIP C 1200PF K	
C706			CC73HCH1H221J	CHIP C 220PF J	
C707			CK73HB1A104K	CHIP C 0.10UF K	
C708			CK73HB1H122K	CHIP C 1200PF K	
C709			CC73HCH1H221J	CHIP C 220PF J	
C711			CC73HCH1H181J	CHIP C 180PF J	
C712			CC73HCH1H470J	CHIP C 47PF J	
C714			CK73HB1H103K	CHIP C 0.010UF K	
C715			CK73HB1H122K	CHIP C 1200PF K	
C716			CC73HCH1H221J	CHIP C 220PF J	
C717			CK73HB1A104K	CHIP C 0.10UF K	
C718			CC73HCH1H221J	CHIP C 220PF J	
C719,720			CK73HB1A104K	CHIP C 0.10UF K	
C721			CC73HCH1H221J	CHIP C 220PF J	
C722			CC73HCH1H470J	CHIP C 47PF J	
C723,724			CK73HB1A104K	CHIP C 0.10UF K	
C726			CK73HB1A104K	CHIP C 0.10UF K	
C727			CC73HCH1H820J	CHIP C 82PF J	
C729			CK73HB1A104K	CHIP C 0.10UF K	
C730			CK73HB1H561K	CHIP C 560PF K	
C731			CK73HB1A104K	CHIP C 0.10UF K	
C734			CK73HB1H103K	CHIP C 0.010UF K	
C735			CK73FB1E475K	CHIP C 4.7UF K	
C736			CC73HCH1H101J	CHIP C 100PF J	
C737			CK73HB1A104K	CHIP C 0.10UF K	
C738			CK73HB1H102K	CHIP C 1000PF K	
C740			CK73HB1H472K	CHIP C 4700PF K	
C741			CK73HB1A154K	CHIP C 0.15UF K	
C742			CK73HB1A104K	CHIP C 0.10UF K	
C743			CK73HB1H103K	CHIP C 0.010UF K	
C744			CK73HB1A104K	CHIP C 0.10UF K	
C745-747			CK73HB1H103K	CHIP C 0.010UF K	
C748-751			CK73HB1A104K	CHIP C 0.10UF K	
C752,753			CK73HB1H103K	CHIP C 0.010UF K	
C754			CC73HCH1H101J	CHIP C 100PF J	
C761			CK73HB1H103K	CHIP C 0.010UF K	
C762,763			CK73HB1A104K	CHIP C 0.10UF K	
C764			CC73HCH1H220J	CHIP C 22PF J	
C765,766			CK73GB1E105K	CHIP C 1.0UF K	
C767			CK73HB1A104K	CHIP C 0.10UF K	
C768,769			CK73HB1H103K	CHIP C 0.010UF K	
C770			CK73HB1A104K	CHIP C 0.10UF K	
C773			CK73HB1A104K	CHIP C 0.10UF K	
C774			CC73HCH1H101J	CHIP C 100PF J	
C775			CK73HB1A104K	CHIP C 0.10UF K	
C776			CK73HB0J105K	CHIP C 1.0UF K	
C777			CC73HCH1H101J	CHIP C 100PF J	
C778			CK73HB1A104K	CHIP C 0.10UF K	
C779			CC73HCH1H680J	CHIP C 68PF J	
C781			CK73GB1E105K	CHIP C 1.0UF K	

PARTS LIST

TX-RX UNIT (X57-8060-12)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C782-786			CK73HB1A104K	CHIP C	0.10UF	K	
C787			CK73FB1A106K	CHIP C	10UF	K	
C788			CK73HB1A104K	CHIP C	0.10UF	K	
C789			CK73FB1E475K	CHIP C	4.7UF	K	
C790			CK73FB1A106K	CHIP C	10UF	K	
C791			CC73HCH1H101J	CHIP C	100PF	J	
C792			CC73HCH1H470J	CHIP C	47PF	J	
C793			CC73HCH1H101J	CHIP C	100PF	J	
C794,795			CK73FB1A106K	CHIP C	10UF	K	
C796-799			CK73HB1A104K	CHIP C	0.10UF	K	
C801,802			CK73GB1E105K	CHIP C	1.0UF	K	
C803			CC73HCH1H101J	CHIP C	100PF	J	
C804,805			CK73HB1H102K	CHIP C	1000PF	K	
C806			C92-0906-05	ELECTRO	330UF	16WV	
C807			C92-0875-05	ELECTRO	47UF	25WV	
C809			CC73HCH1H101J	CHIP C	100PF	J	
C810			CK73HB1H471K	CHIP C	470PF	K	
C811			CC73HCH1H101J	CHIP C	100PF	J	
C813			CK73FB1A106K	CHIP C	10UF	K	
C814			CC73HCH1H101J	CHIP C	100PF	J	
C817			CK73HB1H103K	CHIP C	0.010UF	K	
C818			CK73HB0J105K	CHIP C	1.0UF	K	
C819			CK73HB1A104K	CHIP C	0.10UF	K	
C820			CK73GB1E105K	CHIP C	1.0UF	K	
C821			CK73HB1H102K	CHIP C	1000PF	K	
C825			CC73HCH1H101J	CHIP C	100PF	J	
C826			CK73HB1H102K	CHIP C	1000PF	K	
C828			CC73HCH1H101J	CHIP C	100PF	J	
C846			CC73GCH1H470J	CHIP C	47PF	J	
C848			CC73GCH1H030C	CHIP C	3.0PF	C	
C852			CC73HCH1H020B	CHIP C	2.0PF	B	
C858			CK73HB1E103K	CHIP C	0.010UF	K	
C861			CC73GCH1H220J	CHIP C	22PF	J	
C868,869			CC73GCH1H470J	CHIP C	47PF	J	
C901			CC73HCH1H101J	CHIP C	100PF	J	
C902			CK73HB1H102K	CHIP C	1000PF	K	
C903-906			CC73HCH1H101J	CHIP C	100PF	J	
C907			CK73HB1H102K	CHIP C	1000PF	K	
C908-921			CC73HCH1H101J	CHIP C	100PF	J	
C922,923			CK73HB1H102K	CHIP C	1000PF	K	
C928			CK73HB1H103K	CHIP C	0.010UF	K	
C929			CC73HCH1H100B	CHIP C	10PF	B	
C932			CC73HCH1H101J	CHIP C	100PF	J	
C934			CC73HCH1H101J	CHIP C	100PF	J	
C938			CC73HCH1H030B	CHIP C	3.0PF	B	
C939			CK73HB1H103K	CHIP C	0.010UF	K	
C941			C93-1871-05	CHIP C	100PF	J	
C943,944			CC73FCH1H470J	CHIP C	47PF	J	
C945		✻	C93-1841-05	CHIP C	2.7PF	B	
C946		✻	C93-1843-05	CHIP C	3.3PF	B	
C947			C93-1852-05	CHIP C	6.0PF	B	
C949-951			CC73HCH1H470J	CHIP C	47PF	J	
C952			CK73GB1C683K	CHIP C	0.068UF	K	
C953-963			CK73HB1A104K	CHIP C	0.10UF	K	
C964			CK73HB1H103K	CHIP C	0.010UF	K	
C966			CC73HCH1H050B	CHIP C	5.0PF	B	
C967			CC73HCH1H010B	CHIP C	1.0PF	B	
C968			CC73HCH1H070B	CHIP C	7.0PF	B	
C971			CC73HCH1H030B	CHIP C	3.0PF	B	
C972,973			CC73HCH1H020B	CHIP C	2.0PF	B	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C974			CC73HCH1H050B	CHIP C	5.0PF	B	
C975			CC73HCH1H020B	CHIP C	2.0PF	B	
C976			CC73HCH1H010B	CHIP C	1.0PF	B	
C977			CC73HCH1H030B	CHIP C	3.0PF	B	
C979			CC73HCH1H010C	CHIP C	1.0PF	C	
C980			CC73GCH1H470J	CHIP C	47PF	J	
C981			CC73HCH1H040B	CHIP C	4.0PF	B	
C982,983			CC73HCH1H020B	CHIP C	2.0PF	B	
CN401,402			E23-1260-04	TERMINAL			
CN403			E41-1682-05	PIN ASSY(20P)			
CN502-513			E23-1278-05	TERMINAL			
CN516,517			E23-1278-05	TERMINAL			
CN520			E23-1278-05	TERMINAL			
CN527			E23-1278-05	TERMINAL			
CN540			E23-1278-05	TERMINAL			
CN542,543			E23-1278-05	TERMINAL			
CN549			E40-6720-05	SOCKET FOR PIN ASSY(20P)			
CN595			E40-6361-05	PIN ASSY(26P)			
CN597			E40-6558-05	FLAT CABLE CONNECTOR(30P)			
CN600			E40-6560-05	FLAT CABLE CONNECTOR(30P)			
CN611,612			E23-1278-05	TERMINAL			
CN614			E23-1278-05	TERMINAL			
CN705			E40-6582-05	PIN ASSY			
CN901			E40-6560-05	FLAT CABLE CONNECTOR(30P)			
J701			E11-0425-05	3.5D PHONE JACK(EXT SP)			
J901			E58-0521-05	SUB SOCKET(D)			
F401			F53-0328-15	FUSE(5A)			
F501			F53-0352-05	FUSE(2A)			
CN405			J19-5386-05	HOLDER(LITHIUM CELL)			
CD201			L79-1850-05	TUNING COIL			
CF201			L72-1027-05	CERAMIC FILTER(450KHZ)			
CF202			L72-1041-05	CERAMIC FILTER(450KHZ)			
CF203			L72-1040-05	CERAMIC FILTER(450KHZ)			
L1			L41-4795-39	SMALL FIXED INDUCTOR(4.7UH)			
L3			L92-0163-05	BEADS CORE			
L5			L41-2278-14	SMALL FIXED INDUCTOR(22NH)			
L6 ,7			L40-1001-86	SMALL FIXED INDUCTOR(10UH)			
L8			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH)			
L9			L41-8268-08	SMALL FIXED INDUCTOR(8.2NH)			
L10			L92-0163-05	BEADS CORE			
L11			L40-2285-92	SMALL FIXED INDUCTOR(220NH)			
L12			L40-2785-92	SMALL FIXED INDUCTOR(270NH)			
L13			L40-2285-92	SMALL FIXED INDUCTOR(220NH)			
L14			L41-2785-45	SMALL FIXED INDUCTOR(270NH)			
L15			L40-2285-92	SMALL FIXED INDUCTOR(220NH)			
L16			L41-2785-45	SMALL FIXED INDUCTOR(270NH)			
L17 ,18			L34-4607-15	AIR-CORE COIL(6T)			
L19			L41-2785-45	SMALL FIXED INDUCTOR(270NH)			
L20			L92-0446-05	BEADS CORE			
L21 -23			L41-2785-45	SMALL FIXED INDUCTOR(270NH)			
L24			L92-0140-05	CHIP FERRITE			
L25			L40-1575-71	SMALL FIXED INDUCTOR(15NH)			
L26			L40-5663-92	SMALL FIXED INDUCTOR(5.6NH)			
L27			L41-3963-14	SMALL FIXED INDUCTOR(3.9NH)			
L28			L41-4763-14	SMALL FIXED INDUCTOR(4.7NH)			
L32 -36			L92-0163-05	BEADS CORE			
L40 ,41			L92-0163-05	BEADS CORE			
L106			L92-0140-05	CHIP FERRITE			

PARTS LIST

TX-RX UNIT (X57-8060-12)

Ref. No.	Addres s	New parts	Parts No.	Description	Desti-nation
L107-109			L92-0179-05	CHIP FERRITE	
L110			L34-4613-05	AIR-CORE COIL(7T)	
L111			L34-4602-15	AIR-CORE COIL(1T)	
L112-114			L34-4604-15	AIR-CORE COIL(3T)	
L118,119			L92-0163-05	BEADS CORE	
L150			L40-8265-92	SMALL FIXED INDUCTOR(8.2NH)	
L151			L40-3363-92	SMALL FIXED INDUCTOR(3.3NH)	
L152			L40-6865-92	SMALL FIXED INDUCTOR(6.8NH)	
L153			L40-3363-92	SMALL FIXED INDUCTOR(3.3NH)	
L156			L40-6865-92	SMALL FIXED INDUCTOR(6.8NH)	
L157			L40-4763-92	SMALL FIXED INDUCTOR(4.7NH)	
L158			L40-3363-92	SMALL FIXED INDUCTOR(3.3NH)	
L159			L40-1263-92	SMALL FIXED INDUCTOR(1.2NH)	
L160,161			L40-8265-92	SMALL FIXED INDUCTOR(8.2NH)	
L201			L40-1085-71	SMALL FIXED INDUCTOR(100NH)	
L202			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
L204			L41-4778-45	SMALL FIXED INDUCTOR(47NH)	
L205			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
L206			L92-0138-05	CHIP FERRITE	
L207			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
L208			L92-0138-05	CHIP FERRITE	
L209			L40-8265-92	SMALL FIXED INDUCTOR(8.2NH)	
L215			L41-1878-14	SMALL FIXED INDUCTOR(18NH)	
L217			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH)	
L218			L41-6868-14	SMALL FIXED INDUCTOR(6.8NH)	
L220,221			L41-1078-14	SMALL FIXED INDUCTOR(10NH)	
L401-403			L92-0179-05	CHIP FERRITE	
L404			L92-0639-05	CHIP FERRITE	
L405			L33-1496-05	SMALL FIXED INDUCTOR(22UH)	
L444			L40-5663-92	SMALL FIXED INDUCTOR(5.6NH)	
L447,448			L41-1575-45	SMALL FIXED INDUCTOR(15NH)	
L450,451			L41-5165-45	SMALL FIXED INDUCTOR(5.1NH)	
L501-503			L92-0138-05	CHIP FERRITE	
L506-511			L92-0138-05	CHIP FERRITE	
L512			L92-0140-05	CHIP FERRITE	
L517,518			L92-0138-05	CHIP FERRITE	
L521-523			L92-0162-05	BEADS CORE	
L901,902			L92-0140-05	CHIP FERRITE	
L903,904			L92-0162-05	BEADS CORE	
L905			L40-1085-71	SMALL FIXED INDUCTOR(100NH)	
L906,907		*	L79-1953-05	FILTER(938MHZ)	
L910			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	
L911			L41-2278-14	SMALL FIXED INDUCTOR(22NH)	
L912			L41-5678-14	SMALL FIXED INDUCTOR(56NH)	
L913			L41-1585-08	SMALL FIXED INDUCTOR(150NH)	
L914,915			L40-4763-71	SMALL FIXED INDUCTOR(4.7NH)	
L916,917			L40-1575-71	SMALL FIXED INDUCTOR(15NH)	
L919			L92-0163-05	BEADS CORE	
L920,921			L40-8265-71	SMALL FIXED INDUCTOR(8.2NH)	
X1			L77-3016-05	TCXO(19.2MHZ)	
X501			L77-1802-05	CRYSTAL RESONATOR(32.768KHZ)	
X502			L77-3015-05	TCXO(18.432MHZ)	
XF202			L71-0649-05	MCF(58.05MHZ)	
R1 ,2			RK73HH1J223D	CHIP R 22K D 1/16W	
R4			RK73HB1J101J	CHIP R 100 J 1/16W	
R6			RK73HB1J000J	CHIP R 0 J 1/16W	
R7			RK73HB1J103J	CHIP R 10K J 1/16W	
R8			RK73HB1J103J	CHIP R 10K J 1/16W	
R10			RK73HB1J000J	CHIP R 0 J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R13			RK73HB1J473J	CHIP R 47K J 1/16W	
R15 -19			RK73HB1J100J	CHIP R 10 J 1/16W	
R20			RK73HB1J220J	CHIP R 22 J 1/16W	
R21			RK73HB1J100J	CHIP R 10 J 1/16W	
R22 ,23			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R24			RK73HB1J221J	CHIP R 220 J 1/16W	
R25			RK73HB1J000J	CHIP R 0 J 1/16W	
R26			RK73HB1J104J	CHIP R 100K J 1/16W	
R27			RK73HB1J473J	CHIP R 47K J 1/16W	
R28			RK73HB1J683J	CHIP R 68K J 1/16W	
R29			RK73HB1J000J	CHIP R 0 J 1/16W	
R30			RK73HB1J823J	CHIP R 82K J 1/16W	
R31			RK73HB1J473J	CHIP R 47K J 1/16W	
R32			RK73HB1J151J	CHIP R 150 J 1/16W	
R34			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R35			RK73HB1J391J	CHIP R 390 J 1/16W	
R36			RK73HB1J106J	CHIP R 10M J 1/16W	
R37			RK73HB1J103J	CHIP R 10K J 1/16W	
R38			RK73HB1J000J	CHIP R 0 J 1/16W	
R40 ,41			RK73HB1J000J	CHIP R 0 J 1/16W	
R42			RK73HB1J104J	CHIP R 100K J 1/16W	
R44			RK73HB1J000J	CHIP R 0 J 1/16W	
R45			RK73HB1J104J	CHIP R 100K J 1/16W	
R48			RK73HB1J330J	CHIP R 33 J 1/16W	
R49			RK73HB1J154J	CHIP R 150K J 1/16W	
R50			RK73HB1J104J	CHIP R 100K J 1/16W	
R51			RK73HB1J154J	CHIP R 150K J 1/16W	
R52			RK73HB1J470J	CHIP R 47 J 1/16W	
R53 ,54			RK73HB1J473J	CHIP R 47K J 1/16W	
R55			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R56			RK73HB1J474J	CHIP R 470K J 1/16W	
R57			RN73HH1J121D	CHIP R 120 D 1/16W	
R58			RN73HH1J100D	CHIP R 10 D 1/16W	
R59			RN73HH1J181D	CHIP R 180 D 1/16W	
R60			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R61			RK73HB1J473J	CHIP R 47K J 1/16W	
R62			RK73HB1J154J	CHIP R 150K J 1/16W	
R63			RK73HB1J101J	CHIP R 100 J 1/16W	
R64			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R65			RK73HB1J103J	CHIP R 10K J 1/16W	
R66			RK73HB1J101J	CHIP R 100 J 1/16W	
R67			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R68			RK73HB1J330J	CHIP R 33 J 1/16W	
R70			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R71			RK73HB1J474J	CHIP R 470K J 1/16W	
R72			RK73HB1J183J	CHIP R 18K J 1/16W	
R73			RK73HB1J104J	CHIP R 100K J 1/16W	
R74			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R75			RK73HB1J221J	CHIP R 220 J 1/16W	
R76			RK73HB1J474J	CHIP R 470K J 1/16W	
R77			RK73HB1J101J	CHIP R 100 J 1/16W	
R78			RK73HB1J333J	CHIP R 33K J 1/16W	
R80 ,81			RK73HB1J000J	CHIP R 0 J 1/16W	
R82			RK73GB2A000J	CHIP R 0 J 1/10W	
R83			RK73HB1J000J	CHIP R 0 J 1/16W	
R84 ,85			RK73GB2A000J	CHIP R 0 J 1/10W	
R86			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R87			RK73HB1J000J	CHIP R 0 J 1/16W	
R88			RK73HB1J103J	CHIP R 10K J 1/16W	
R89			RK73HB1J330J	CHIP R 33 J 1/16W	

PARTS LIST

TX-RX UNIT (X57-8060-12)

Ref. No.	Address	New parts	Parts No.	Description			Destination
R90			RK73HB1J331J	CHIP R	330	J 1/16W	
R91			RK73HB1J101J	CHIP R	100	J 1/16W	
R92			RK73HB1J000J	CHIP R	0	J 1/16W	
R93			RK73HB1J473J	CHIP R	47K	J 1/16W	
R96			RK73HB1J000J	CHIP R	0	J 1/16W	
R98			RK73HB1J181J	CHIP R	180	J 1/16W	
R99			RK73HB1J182J	CHIP R	1.8K	J 1/16W	
R100			RK73FB2B221J	CHIP R	220	J 1/8W	
R101			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R102,103			RK73FB2B470J	CHIP R	47	J 1/8W	
R104			RK73FB2B221J	CHIP R	220	J 1/8W	
R106			RK73PB2H470J	CHIP R	47	J 1/2W	
R109			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R111			RK73HB1J104J	CHIP R	100K	J 1/16W	
R112			RK73PB2H470J	CHIP R	47	J 1/2W	
R114,115			RK73HB1J000J	CHIP R	0	J 1/16W	
R117			RK73HB1J103J	CHIP R	10K	J 1/16W	
R131			RK73HB1J000J	CHIP R	0	J 1/16W	
R136			RK73HB1J273J	CHIP R	27K	J 1/16W	
R137			RK73HB1J153J	CHIP R	15K	J 1/16W	
R141			RK73HB1J394J	CHIP R	390K	J 1/16W	
R142			RK73HB1J182J	CHIP R	1.8K	J 1/16W	
R145			RK73HB1J000J	CHIP R	0	J 1/16W	
R147			RK73HB1J104J	CHIP R	100K	J 1/16W	
R148			RK73HB1J183J	CHIP R	18K	J 1/16W	
R152			RK73HB1J330J	CHIP R	33	J 1/16W	
R153		✻	RN73HH1J330D	CHIP R	33	D 1/16W	
R154			RK73HB1J331J	CHIP R	330	J 1/16W	
R156			RK73HB1J391J	CHIP R	390	J 1/16W	
R157			RK73HB1J331J	CHIP R	330	J 1/16W	
R158			RK73FB2B331J	CHIP R	330	J 1/8W	
R159			RK73HB1J120J	CHIP R	12	J 1/16W	
R160			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R161			RK73HB1J331J	CHIP R	330	J 1/16W	
R163			RK73HB1J391J	CHIP R	390	J 1/16W	
R164			RK73HB1J331J	CHIP R	330	J 1/16W	
R165			RK73FB2B8R2J	CHIP R	8.2	J 1/8W	
R166,167			RK73GB2A391J	CHIP R	390	J 1/10W	
R168			RK73GB2A120J	CHIP R	12	J 1/10W	
R170			RK73FB2B331J	CHIP R	330	J 1/8W	
R171			RK73HB1J103J	CHIP R	10K	J 1/16W	
R174			RK73HB1J103J	CHIP R	10K	J 1/16W	
R201			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R202,203			RK73HB1J223J	CHIP R	22K	J 1/16W	
R204			RK73HB1J470J	CHIP R	47	J 1/16W	
R205,206			RK73HB1J223J	CHIP R	22K	J 1/16W	
R207			RK73HB1J334J	CHIP R	330K	J 1/16W	
R208			RK73HB1J153J	CHIP R	15K	J 1/16W	
R209,210			RK73HB1J100J	CHIP R	10	J 1/16W	
R212			RK73HB1J000J	CHIP R	0	J 1/16W	
R213			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R215			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R216			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R219			RK73HB1J103J	CHIP R	10K	J 1/16W	
R222			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R223			RK73HB1J274J	CHIP R	270K	J 1/16W	
R224			RK73HB1J103J	CHIP R	10K	J 1/16W	
R225			RK73HB1J153J	CHIP R	15K	J 1/16W	
R226			RK73HB1J473J	CHIP R	47K	J 1/16W	
R227			RK73HB1J104J	CHIP R	100K	J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description			Destination
R228			RK73HB1J223J	CHIP R	22K	J 1/16W	
R229,230			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R231			RK73HB1J221J	CHIP R	220	J 1/16W	
R232			RK73HB1J101J	CHIP R	100	J 1/16W	
R233			RK73HB1J221J	CHIP R	220	J 1/16W	
R234			RK73HB1J103J	CHIP R	10K	J 1/16W	
R235			RK73HB1J000J	CHIP R	0	J 1/16W	
R237			RK73HB1J104J	CHIP R	100K	J 1/16W	
R238			RK73HB1J103J	CHIP R	10K	J 1/16W	
R239			RK73HB1J104J	CHIP R	100K	J 1/16W	
R242			RK73HB1J221J	CHIP R	220	J 1/16W	
R243			RK73HB1J101J	CHIP R	100	J 1/16W	
R244			RK73HB1J000J	CHIP R	0	J 1/16W	
R245,246			RK73HB1J104J	CHIP R	100K	J 1/16W	
R248			RK73HB1J474J	CHIP R	470K	J 1/16W	
R250			RK73HB1J000J	CHIP R	0	J 1/16W	
R256			RK73HB1J181J	CHIP R	180	J 1/16W	
R257,258			RK73HB1J000J	CHIP R	0	J 1/16W	
R261			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R262			RK73HB1J682J	CHIP R	6.8K	J 1/16W	
R263			RK73HB1J000J	CHIP R	0	J 1/16W	
R265			RK73HB1J103J	CHIP R	10K	J 1/16W	
R266			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R267			RK73HB1J271J	CHIP R	270	J 1/16W	
R269			RK73HB1J121J	CHIP R	120	J 1/16W	
R320			RK73HB1J000J	CHIP R	0	J 1/16W	
R324			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R326			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R328			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R329			RK73HB1J682J	CHIP R	6.8K	J 1/16W	
R330			RK73GB2A100J	CHIP R	10	J 1/10W	
R331			RK73HB1J473J	CHIP R	47K	J 1/16W	
R332			RK73HB1J000J	CHIP R	0	J 1/16W	
R333			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R334			RK73HB1J000J	CHIP R	0	J 1/16W	
R338			RK73HB1J000J	CHIP R	0	J 1/16W	
R339			RK73HB1J470J	CHIP R	47	J 1/16W	
R340,341			RK73HB1J121J	CHIP R	120	J 1/16W	
R343-345			RK73HB1J000J	CHIP R	0	J 1/16W	
R346			RK73HB1J223J	CHIP R	22K	J 1/16W	
R352,353			RK73HB1J000J	CHIP R	0	J 1/16W	
R401			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R402			RK73HB1J471J	CHIP R	470	J 1/16W	
R403			RK73HB1J104J	CHIP R	100K	J 1/16W	
R404			RK73HB1J103J	CHIP R	10K	J 1/16W	
R405			RK73HH1J274D	CHIP R	270K	D 1/16W	
R406			RK73HH1J104D	CHIP R	100K	D 1/16W	
R407			RK73HB1J473J	CHIP R	47K	J 1/16W	
R408			RK73HB1J103J	CHIP R	10K	J 1/16W	
R409			RK73HB1J683J	CHIP R	68K	J 1/16W	
R410			RK73HB1J684J	CHIP R	680K	J 1/16W	
R411			RK73HB1J104J	CHIP R	100K	J 1/16W	
R413			RK73HB1J474J	CHIP R	470K	J 1/16W	
R415			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R417			RK73HB1J473J	CHIP R	47K	J 1/16W	
R418,419			RK73HB1J103J	CHIP R	10K	J 1/16W	
R420			RK73HB1J473J	CHIP R	47K	J 1/16W	
R421			RK73HB1J474J	CHIP R	470K	J 1/16W	
R422			RK73HB1J103J	CHIP R	10K	J 1/16W	
R423-425			RK73HB1J472J	CHIP R	4.7K	J 1/16W	

PARTS LIST

TX-RX UNIT (X57-8060-12)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R426			RK73HB1J474J	CHIP R	470K	J	1/16W	
R428,429			RK73HB1J103J	CHIP R	10K	J	1/16W	
R430			RK73HH1J124D	CHIP R	120K	D	1/16W	
R431			RK73HH1J183D	CHIP R	18K	D	1/16W	
R432			RK73HH1J223D	CHIP R	22K	D	1/16W	
R433			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R437			RK73HB1J474J	CHIP R	470K	J	1/16W	
R440			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R444			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R445			RK73HB1J473J	CHIP R	47K	J	1/16W	
R446			RK73GB2A100J	CHIP R	10	J	1/10W	
R447			RK73HB1J473J	CHIP R	47K	J	1/16W	
R448			RK73HB1J000J	CHIP R	0	J	1/16W	
R449			RK73GB2A100J	CHIP R	10	J	1/10W	
R451			RK73HB1J104J	CHIP R	100K	J	1/16W	
R452			RK73HB1J000J	CHIP R	0	J	1/16W	
R455			RK73HB1J000J	CHIP R	0	J	1/16W	
R456			RK73GB2A100J	CHIP R	10	J	1/10W	
R503			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R504			RK73HB1J104J	CHIP R	100K	J	1/16W	
R506			RK73HB1J474J	CHIP R	470K	J	1/16W	
R508			RK73HB1J104J	CHIP R	100K	J	1/16W	
R509			RK73HB1J000J	CHIP R	0	J	1/16W	
R510			RK73HB1J104J	CHIP R	100K	J	1/16W	
R511			RK73HB1J220J	CHIP R	22	J	1/16W	
R512			RK73HB1J104J	CHIP R	100K	J	1/16W	
R515			RK73HB1J104J	CHIP R	100K	J	1/16W	
R520,521			RK73HB1J473J	CHIP R	47K	J	1/16W	
R522			RK73HB1J474J	CHIP R	470K	J	1/16W	
R523			RK73HB1J103J	CHIP R	10K	J	1/16W	
R525			RK73HB1J104J	CHIP R	100K	J	1/16W	
R528			RK73HB1J104J	CHIP R	100K	J	1/16W	
R532			RK73HB1J101J	CHIP R	100	J	1/16W	
R533,534			RK73HB1J000J	CHIP R	0	J	1/16W	
R536			RK73HB1J000J	CHIP R	0	J	1/16W	
R538			RK73HB1J101J	CHIP R	100	J	1/16W	
R540,541			RK73HB1J101J	CHIP R	100	J	1/16W	
R543			RK73HB1J000J	CHIP R	0	J	1/16W	
R545			RK73HB1J000J	CHIP R	0	J	1/16W	
R546			RK73GB2A000J	CHIP R	0	J	1/10W	
R548			RK73GB2A000J	CHIP R	0	J	1/10W	
R550			RK73GB2A000J	CHIP R	0	J	1/10W	
R551			RK73HB1J101J	CHIP R	100	J	1/16W	
R552			RK73HB1J103J	CHIP R	10K	J	1/16W	
R553,554			RK73HB1J104J	CHIP R	100K	J	1/16W	
R556-558			RK73HB1J104J	CHIP R	100K	J	1/16W	
R561			RK73HB1J473J	CHIP R	47K	J	1/16W	
R562			RK73GB2A000J	CHIP R	0	J	1/10W	
R565			RK73GB2A000J	CHIP R	0	J	1/10W	
R568			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R569			RK73HB1J220J	CHIP R	22	J	1/16W	
R572			RK73HB1J220J	CHIP R	22	J	1/16W	
R574			RK73GB2A000J	CHIP R	0	J	1/10W	
R575			RK73HB1J103J	CHIP R	10K	J	1/16W	
R576			RK73HB1J000J	CHIP R	0	J	1/16W	
R577			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R578-580			RK73HB1J000J	CHIP R	0	J	1/16W	
R581			RK73HB1J474J	CHIP R	470K	J	1/16W	
R582,583			RK73HB1J000J	CHIP R	0	J	1/16W	
R585,586			RK73HB1J000J	CHIP R	0	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R587			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R588-590			RK73HB1J000J	CHIP R	0	J	1/16W	
R591			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R592,593			RK73HB1J000J	CHIP R	0	J	1/16W	
R594			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R595			RK73HB1J000J	CHIP R	0	J	1/16W	
R596			RK73HB1J103J	CHIP R	10K	J	1/16W	
R597			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R598-601			RK73FB2B102J	CHIP R	1.0K	J	1/8W	
R602			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R603,604			RK73HB1J000J	CHIP R	0	J	1/16W	
R605			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R606			RK73HB1J103J	CHIP R	10K	J	1/16W	
R607,608			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R610			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R611,612			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R613			RK73HB1J181J	CHIP R	180	J	1/16W	
R614			RK73HB1J474J	CHIP R	470K	J	1/16W	
R615,616			RK73HB1J000J	CHIP R	0	J	1/16W	
R617-620			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R621			RK73HB1J000J	CHIP R	0	J	1/16W	
R622			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R623-625			RK73HB1J104J	CHIP R	100K	J	1/16W	
R627,628			RK73HB1J104J	CHIP R	100K	J	1/16W	
R629			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R630			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R632			RK73HB1J103J	CHIP R	10K	J	1/16W	
R633			RK73HB1J000J	CHIP R	0	J	1/16W	
R634			RK73HB1J103J	CHIP R	10K	J	1/16W	
R636			RK73HB1J000J	CHIP R	0	J	1/16W	
R637			RK73HB1J103J	CHIP R	10K	J	1/16W	
R638			RK73HB1J104J	CHIP R	100K	J	1/16W	
R639			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R640			RK73HB1J103J	CHIP R	10K	J	1/16W	
R641,642			RK73HB1J104J	CHIP R	100K	J	1/16W	
R644			RK73GB2A000J	CHIP R	0	J	1/10W	
R646			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R648			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R650			RK73GB2A000J	CHIP R	0	J	1/10W	
R651			RK73FB2B102J	CHIP R	1.0K	J	1/8W	
R652			RK73HB1J104J	CHIP R	100K	J	1/16W	
R654			RK73GB2A000J	CHIP R	0	J	1/10W	
R656			RK73HB1J471J	CHIP R	470	J	1/16W	
R658			RK73GB2A000J	CHIP R	0	J	1/10W	
R659-661			RK73HB1J104J	CHIP R	100K	J	1/16W	
R662,663			RK73HB1J474J	CHIP R	470K	J	1/16W	
R664-674			RK73HB1J104J	CHIP R	100K	J	1/16W	
R676			RK73HB1J104J	CHIP R	100K	J	1/16W	
R677			RK73HB1J474J	CHIP R	470K	J	1/16W	
R678			RK73HB1J104J	CHIP R	100K	J	1/16W	
R680-683			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R684			RK73HB1J104J	CHIP R	100K	J	1/16W	
R686			RK73HB1J104J	CHIP R	100K	J	1/16W	
R687,688			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R689,690			RK73HB1J474J	CHIP R	470K	J	1/16W	
R691-698			RK73HB1J104J	CHIP R	100K	J	1/16W	
R700-702			RK73HB1J104J	CHIP R	100K	J	1/16W	
R703			RK73HB1J103J	CHIP R	10K	J	1/16W	
R704			RK73HB1J563J	CHIP R	56K	J	1/16W	
R705			RK73HB1J104J	CHIP R	100K	J	1/16W	

PARTS LIST

TX-RX UNIT (X57-8060-12)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R706			RK73HB1J683J	CHIP R 68K J 1/16W	
R707			RK73HB1J153J	CHIP R 15K J 1/16W	
R708			RK73HB1J683J	CHIP R 68K J 1/16W	
R709			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R710			RK73HB1J104J	CHIP R 100K J 1/16W	
R712			RK73HB1J683J	CHIP R 68K J 1/16W	
R713			RK73HB1J563J	CHIP R 56K J 1/16W	
R714			RK73HB1J104J	CHIP R 100K J 1/16W	
R715			RK73HB1J473J	CHIP R 47K J 1/16W	
R716			RK73HB1J000J	CHIP R 0 J 1/16W	
R718			RK73HB1J000J	CHIP R 0 J 1/16W	
R720			RK73HB1J104J	CHIP R 100K J 1/16W	
R721			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R722			RK73HB1J683J	CHIP R 68K J 1/16W	
R723			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R724			RK73HB1J563J	CHIP R 56K J 1/16W	
R725			RK73HB1J683J	CHIP R 68K J 1/16W	
R726			RK73HB1J100J	CHIP R 10 J 1/16W	
R727			RK73HB1J274J	CHIP R 270K J 1/16W	
R728			RK73HB1J000J	CHIP R 0 J 1/16W	
R729			RK73HB1J104J	CHIP R 100K J 1/16W	
R731			RK73HB1J000J	CHIP R 0 J 1/16W	
R732			RK73HB1J473J	CHIP R 47K J 1/16W	
R737			RK73HB1J473J	CHIP R 47K J 1/16W	
R738			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R739			RK73HB1J000J	CHIP R 0 J 1/16W	
R740,741			RK73HB1J104J	CHIP R 100K J 1/16W	
R744			RK73HB1J473J	CHIP R 47K J 1/16W	
R745			RK73HB1J104J	CHIP R 100K J 1/16W	
R746			RK73HB1J103J	CHIP R 10K J 1/16W	
R747			RK73HB1J334J	CHIP R 330K J 1/16W	
R748			RK73HB1J000J	CHIP R 0 J 1/16W	
R749			RK73HB1J823J	CHIP R 82K J 1/16W	
R750			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R751			RK73HB1J271J	CHIP R 270 J 1/16W	
R752			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R753			RK73HB1J563J	CHIP R 56K J 1/16W	
R755			RK73HB1J103J	CHIP R 10K J 1/16W	
R756			RK73HB1J153J	CHIP R 15K J 1/16W	
R758			RK73HB1J103J	CHIP R 10K J 1/16W	
R759			RK73HB1J104J	CHIP R 100K J 1/16W	
R760			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R761			RK73HB1J683J	CHIP R 68K J 1/16W	
R762			RK73HB1J334J	CHIP R 330K J 1/16W	
R763			RK73HB1J183J	CHIP R 18K J 1/16W	
R764			RK73HB1J124J	CHIP R 120K J 1/16W	
R765			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R766			RK73HB1J104J	CHIP R 100K J 1/16W	
R767,768			RK73HB1J473J	CHIP R 47K J 1/16W	
R769			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R770			RK73HB1J563J	CHIP R 56K J 1/16W	
R771			RK73HB1J104J	CHIP R 100K J 1/16W	
R772			RK73HB1J123J	CHIP R 12K J 1/16W	
R773			RK73HB1J684J	CHIP R 680K J 1/16W	
R774			RK73HB1J474J	CHIP R 470K J 1/16W	
R776			RK73HB1J334J	CHIP R 330K J 1/16W	
R777			RK73HB1J154J	CHIP R 150K J 1/16W	
R778			RK73HB1J394J	CHIP R 390K J 1/16W	
R779			RK73HB1J474J	CHIP R 470K J 1/16W	
R782			RK73HB1J153J	CHIP R 15K J 1/16W	
R783			RK73HB1J000J	CHIP R 0 J 1/16W	
R784			RK73HB1J154J	CHIP R 150K J 1/16W	
R785			RK73HB1J103J	CHIP R 10K J 1/16W	
R786			RK73HB1J393J	CHIP R 39K J 1/16W	
R787			RK73HB1J274J	CHIP R 270K J 1/16W	
R788			RK73HB1J223J	CHIP R 22K J 1/16W	
R789			RK73HB1J000J	CHIP R 0 J 1/16W	
R790			RK73HB1J224J	CHIP R 220K J 1/16W	
R791			RK73HB1J564J	CHIP R 560K J 1/16W	
R792			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R793,794			RK73HB1J000J	CHIP R 0 J 1/16W	
R795			RK73HB1J224J	CHIP R 220K J 1/16W	
R796			RK73HB1J103J	CHIP R 10K J 1/16W	
R797			RK73HB1J334J	CHIP R 330K J 1/16W	
R798			RK73HB1J684J	CHIP R 680K J 1/16W	
R799			RK73HB1J563J	CHIP R 56K J 1/16W	
R800			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R801			RK73HB1J104J	CHIP R 100K J 1/16W	
R802			RK73HB1J273J	CHIP R 27K J 1/16W	
R803			RK73HB1J153J	CHIP R 15K J 1/16W	
R804			RK73HB1J681J	CHIP R 680 J 1/16W	
R805			RK73HB1J823J	CHIP R 82K J 1/16W	
R806			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R807,808			RK73HB1J103J	CHIP R 10K J 1/16W	
R809			RK73HB1J104J	CHIP R 100K J 1/16W	
R810			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R812,813			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R814-816			RK73HB1J104J	CHIP R 100K J 1/16W	
R817			RK73HB1J473J	CHIP R 47K J 1/16W	
R818			RK73HB1J333J	CHIP R 33K J 1/16W	
R819			RK73HB1J000J	CHIP R 0 J 1/16W	
R820			RK73HB1J474J	CHIP R 470K J 1/16W	
R821			RK73HB1J000J	CHIP R 0 J 1/16W	
R822			RK73HB1J101J	CHIP R 100 J 1/16W	
R823			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R825,826			RK73HB1J103J	CHIP R 10K J 1/16W	
R827			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R828			RK73HB1J000J	CHIP R 0 J 1/16W	
R831			RK73HB1J000J	CHIP R 0 J 1/16W	
R833-835			RK73HB1J101J	CHIP R 100 J 1/16W	
R836			RK73HB1J000J	CHIP R 0 J 1/16W	
R837			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R838			RK73HB1J000J	CHIP R 0 J 1/16W	
R841			RK73HB1J000J	CHIP R 0 J 1/16W	
R842			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R843			RK73HB1J471J	CHIP R 470 J 1/16W	
R845			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R846			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R847			RK73HB1J000J	CHIP R 0 J 1/16W	
R849,850			RK73GB2A000J	CHIP R 0 J 1/10W	
R882			RK73HB1J000J	CHIP R 0 J 1/16W	
R890			R92-1061-05	JUMPER REST 0 OHM	
R901			RK73GB2A471J	CHIP R 470 J 1/10W	
R902,903			RK73HB1J101J	CHIP R 100 J 1/16W	
R904-913			RK73HB1J471J	CHIP R 470 J 1/16W	
R914			RK73GB2A471J	CHIP R 470 J 1/10W	
R915-917			RK73HB1J000J	CHIP R 0 J 1/16W	
R918,919			RK73HB1J101J	CHIP R 100 J 1/16W	
R920			RK73HB1J000J	CHIP R 0 J 1/16W	
R923			RK73HB1J473J	CHIP R 47K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-8060-12)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R933			RK73HB1J000J	CHIP R 0 J 1/16W	
R934-936			RK73HB1J474J	CHIP R 470K J 1/16W	
R938			RK73HB1J101J	CHIP R 100 J 1/16W	
R939			RK73FB2B000J	CHIP R 0 J 1/8W	
R940,941			RK73HB1J474J	CHIP R 470K J 1/16W	
R943			RK73HB1J103J	CHIP R 10K J 1/16W	
R944			RK73HB1J471J	CHIP R 470 J 1/16W	
R951			RK73HB1J000J	CHIP R 0 J 1/16W	
R952-954			RK73HB1J104J	CHIP R 100K J 1/16W	
R962			RK73HB1J101J	CHIP R 100 J 1/16W	
R963			RK73HB1J270J	CHIP R 27 J 1/16W	
R964			RK73HB1J330J	CHIP R 33 J 1/16W	
R965			RK73HB1J270J	CHIP R 27 J 1/16W	
R967			RK73HB1J100J	CHIP R 10 J 1/16W	
R968			RK73HB1J101J	CHIP R 100 J 1/16W	
R969,970			RK73FB2B121J	CHIP R 120 J 1/8W	
R971			RK73GB2A221J	CHIP R 220 J 1/10W	
R972			RK73GB2A000J	CHIP R 0 J 1/10W	
R973			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R975			RK73GB2A104J	CHIP R 100K J 1/10W	
R976,977			RK73HB1J000J	CHIP R 0 J 1/16W	
R978			RK73HB1J470J	CHIP R 47 J 1/16W	
R979,980			RK73HB1J000J	CHIP R 0 J 1/16W	
R981			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R982			RK73HB1J103J	CHIP R 10K J 1/16W	
R983			RK73HB1J333J	CHIP R 33K J 1/16W	
R984			RK73HB1J101J	CHIP R 100 J 1/16W	
R988,989			RK73HB1J000J	CHIP R 0 J 1/16W	
R990			RK73HB1J101J	CHIP R 100 J 1/16W	
R992			RK73HB1J101J	CHIP R 100 J 1/16W	
R993,994			RK73HB1J104J	CHIP R 100K J 1/16W	
R997			RK73HB1J000J	CHIP R 0 J 1/16W	
R998			RK73HB1J474J	CHIP R 470K J 1/16W	
D1			CSA30-201N	SURGE ABSORBER	
D2			DA221	DIODE	
D3 ,4			1SV325F	VARIABLE CAPACITANCE DIODE	
D7 ,8			1SV305F	VARIABLE CAPACITANCE DIODE	
D10 -12			1SV305F	VARIABLE CAPACITANCE DIODE	
D14			1SV278F	VARIABLE CAPACITANCE DIODE	
D21			RN142S	DIODE	
D101			HVC131	DIODE	
D103		*	L8104	DIODE	
D108,109			HSB88AS-E	DIODE	
D201,202			DAN235E	DIODE	
D205			HVC131	DIODE	
D401			UDZW18(B)	ZENER DIODE	
D403			1SS416	DIODE	
D404			22ZR-10D	SURGE ABSORBER	
D405			DSA3A1	DIODE	
D406			HSC119	DIODE	
D407			CRS02-Q	DIODE	
D408			MC2848-T111	DIODE	
D409-412			1SS388F	DIODE	
D501,502			1SS388F	DIODE	
D504			1SS416	DIODE	
D506,507			1SS416	DIODE	
D508			MC2850	DIODE	
D509,510			1SS416	DIODE	
D511,512			MC2850	DIODE	

Ref. No.	Address	New parts	Parts No.	Description	Destination
D702			HSC119	DIODE	
D703-705			RB706F-40	DIODE	
D706,707			EMZ6.8N	ZENER DIODE	
D901-904			MC2850	DIODE	
D905,906			UDZW18(B)	ZENER DIODE	
D907,908			MC2850	DIODE	
D909			1SS355	DIODE	
D910			UDZW18(B)	ZENER DIODE	
D911,912			MC2850	DIODE	
D913			1SS355	DIODE	
D914			UDZW18(B)	ZENER DIODE	
D915			UDZW5.6(B)	ZENER DIODE	
D920,921			RN142S	DIODE	
D922			DA2J101	DIODE	
D923,924			RN142S	DIODE	
D925,926			JDP2S12CR	DIODE	
IC1			LM73CIMKX-0	MOS-IC	
IC3			SKY72310-362	MOS-IC	
IC4			XC221A1200MRG	MOS-IC	
IC5			TC75W51FK(F)	MOS-IC	
IC102	2A		RA20H8994M101	MOS-IC(POWER MODULE)	
IC103			NJM12904RB1	MOS-IC	
IC202			TK10931VTL-G	ANALOGUE IC	
IC203			TC75W51FK(F)	MOS-IC	
IC401			XC6118C23CMR	MOS-IC	
IC402			XC6204B332P-G	MOS-IC	
IC403	2A		NJM78M08FA-ZB	ANALOGUE IC	
IC404			TA7805F-NQ	MOS-IC	
IC405			LT1616ES6-PBF	ANALOGUE IC	
IC406			TK71733S	BI-POLAR IC	
IC407,408			XC6204B332M-G	MOS-IC	
IC409			XC6205B152P-G	MOS-IC	
IC501			**Note 1 (BGA)**	ROM IC	
IC503			**Note 1 (BGA)**	SRAM IC	
IC504			RV5C386A	MOS-IC	
IC506			XC6119C29ANR	MOS-IC	
IC507			TC7SH126FU-F	MOS-IC	
IC508			SM5023CNDH-G	MOS-IC	
IC509			TC7WT125FUF	MOS-IC	
IC510			**Note 1 (BGA)**	MOS-IC	
IC511			TC7SH08FU-F	MOS-IC	
IC512,513			TC7SET08FU-F	MOS-IC	
IC514			TC7WBD125AFK	MOS-IC	
IC515			TC7WT126FU-F	MOS-IC	
IC516			TC7WH126FU-F	MOS-IC	
IC517			PCA9535BS	MOS-IC	
IC518			ADM202EARNZ	MOS-IC	
IC701			TC75S51FE(F)	MOS-IC	
IC702,703			TC75W51FK(F)	MOS-IC	
IC705,706			TC75W51FK(F)	MOS-IC	
IC707,708			TC7W53FK(F)	MOS-IC	
IC709			TC75W51FK(F)	MOS-IC	
IC710			TC7W53FK(F)	MOS-IC	
IC711			TC75W51FK(F)	MOS-IC	
IC713			TC7W53FK(F)	MOS-IC	
IC714			TC75S51FE(F)	MOS-IC	
IC715	2A		LA4425A	MOS-IC	
IC716			CMY210	MOS-IC	
IC717			**Note 1 (BGA)**	MICROPROCESSOR IC	
IC718			TC7SH08FU-F	MOS-IC	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.
If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

TX-RX UNIT (X57-8060-12)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
IC719			R2A20178NP	MICROCONTROLLER IC	
IC720			TC75S51FE(F)	MOS-IC	
Q1			2SC5383-T111	TRANSISTOR	
Q2			3SK293-F	FET	
Q4			2SC5383-T111	TRANSISTOR	
Q5 ,6			MCH3914(8)-H	FET	
Q7			SSM6L05FU-F	FET	
Q8			SSM3J05FU-F	FET	
Q9 ,10			2SC5636	TRANSISTOR	
Q11			2SK3737-5	FET	
Q150			2SK3077F	FET	
Q151			RD01MUS1-T113	FET	
Q201			RT1P141U-T111	TRANSISTOR	
Q202			RT1N441U-T111	TRANSISTOR	
Q203			2SC5636	TRANSISTOR	
Q204,205			2SC3356(R23)	TRANSISTOR	
Q208			2SC5636	TRANSISTOR	
Q212			EMD9	TRANSISTOR	
Q401,402			RT1N141U-T111	TRANSISTOR	
Q403			RT1N140U-T111	TRANSISTOR	
Q404			2SJ645	FET	
Q405			2SA1955A-F	TRANSISTOR	
Q406			SSM6N17FU	FET	
Q407-409			12A02CH	TRANSISTOR	
Q410			SSM3K15TE(F)	FET	
Q411,412			2SA1955A-F	TRANSISTOR	
Q413-415			RT1N141U-T111	TRANSISTOR	
Q416			SSM6L05FU-F	FET	
Q420			2SC5108(Y)F	TRANSISTOR	
Q501			SSM6N17FU	FET	
Q701			SSM3K15TE(F)	FET	
Q702			2SC5383-T111	TRANSISTOR	
Q703			SSM3K15TE(F)	FET	
Q704			2SC4738(GR)F	TRANSISTOR	
Q705			2SA1832(GR)F	TRANSISTOR	
Q706,707			2SJ243-A	FET	
Q708			2SA1832(GR)F	TRANSISTOR	
Q709			RT1N141U-T111	TRANSISTOR	
Q710			DTC363EU	DIGITAL TRANSISTOR	
Q901,902			QSX6	TRANSISTOR	
Q903			SSM3K15TE(F)	FET	
TH101,102			ERTJ0EV104H	THERMISTOR	
TH701			ERTJ0EV104H	THERMISTOR	
101	2A		W09-0971-05	LITHIUM CELL	

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation