EXPLODED VIEW (CD MECHANISM)

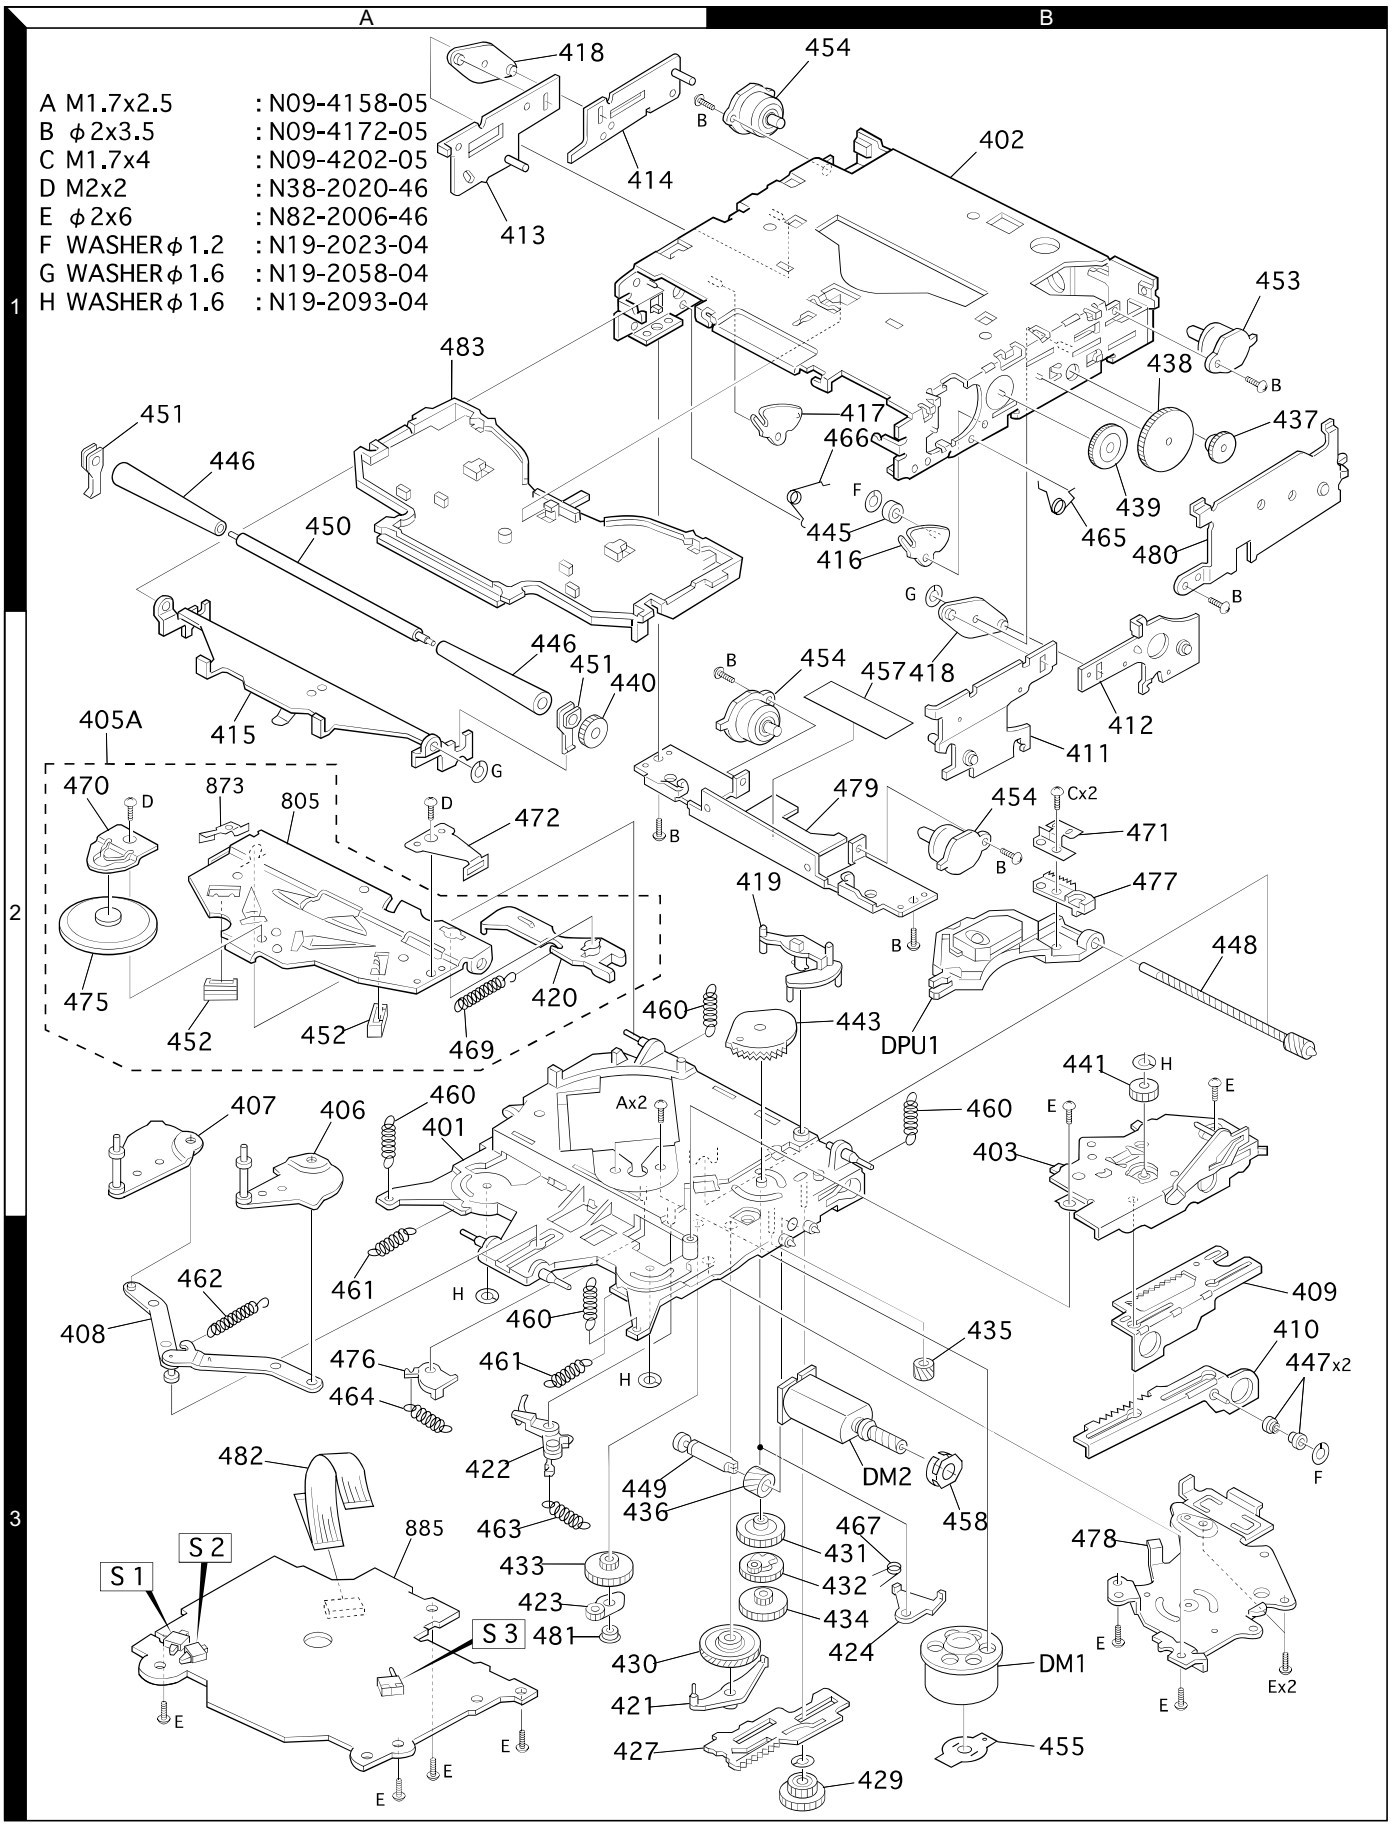

Parts with exploded numbers larger than 700 are not suppied.

EXPLODED VIEW (UNIT)

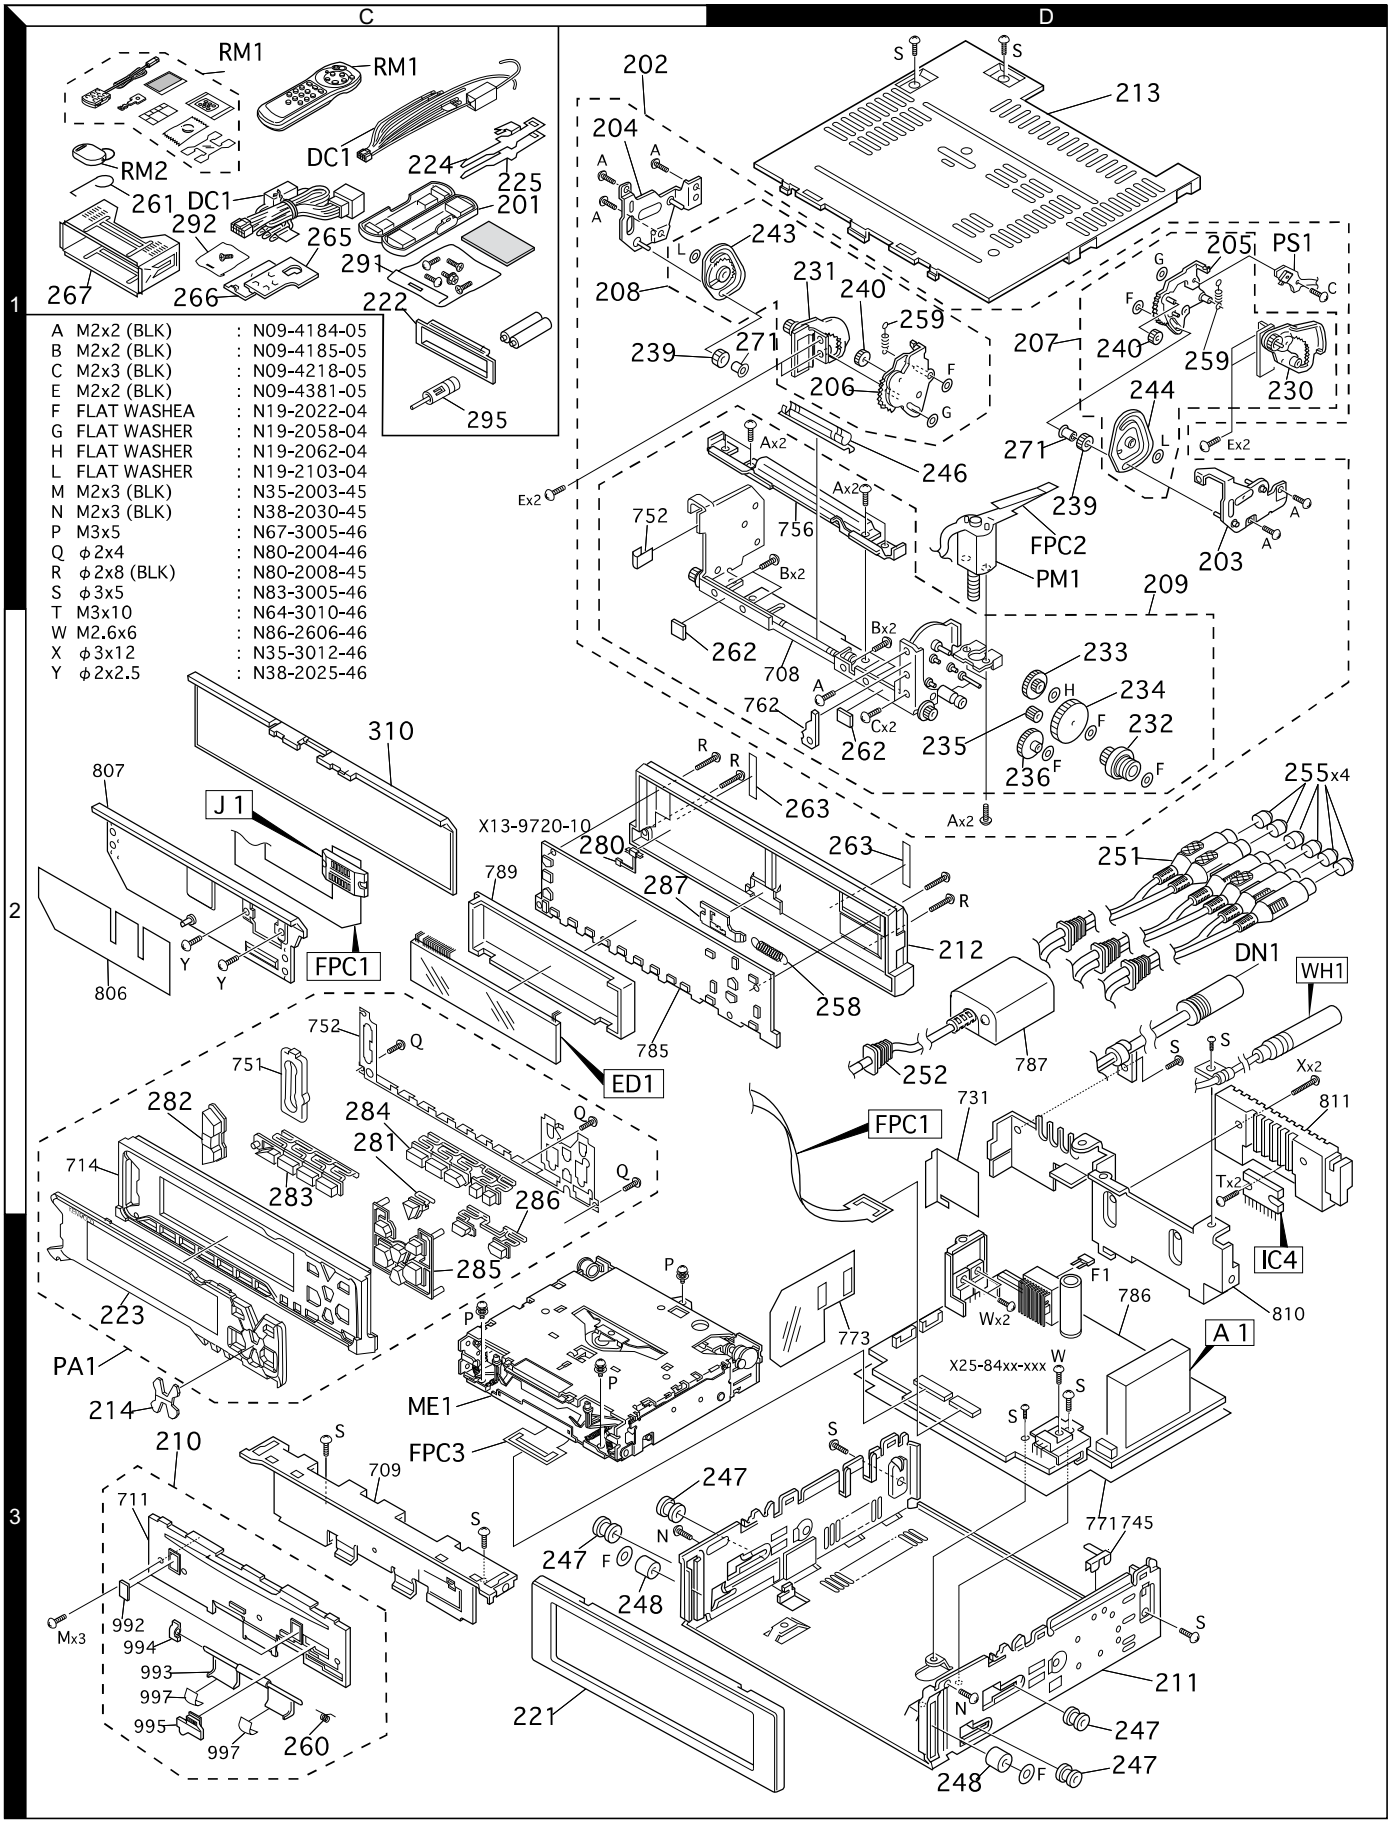

Parts with exploded numbers larger than 700 are not suppied.

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

Ref.No.	Add	New	Parts No.	Description		Destination
KDC-9015/8080R						
201	1C		A02-1489-03	PLASTIC CABINET ASSY		
202	1C		A10-4671-02	CHASSIS ASSY		
203	1D		A10-4315-04	CHASSIS CALKING ASSY		
204	1C		A10-4317-04	CHASSIS CALKING ASSY		
205	1D		A10-4319-04	CHASSIS CALKING ASSY		
206	1D		A10-4321-04	CHASSIS CALKING ASSY		
207	1D		A10-4674-02	CHASSIS ASSY		
208	1D		A10-4676-02	CHASSIS ASSY		
209	1D		A10-4534-23	CHASSIS ASSY		
210	3C		A22-2296-43	SUB PANEL ASSY		
211	3D		A10-4666-03	CHASSIS ASSY		K
211	3D		A10-4667-03	CHASSIS ASSY		E
212	2D		A46-1652-01	REAR COVER		
213	1D		A52-0742-12	TOP PLATE		
214	3C		A21-4010-03	DRESSING PANEL		
PA1	2C	*	A64-1865-02	PANEL ASSY		E
PA1	2C	*	A64-1869-02	PANEL ASSY		K
RM1	1C		A70-0874-05	REMOTE CONTROLLER ASSY		E
RM1	1C		A70-0883-05	REMOTE CONTROLLER ASSY		K
RM2	1C		A70-0886-15	REMOTE CONTROLLER ASSY		E
221	3C		B07-2139-03	ESCUTCHEON ASSY		
222	1C		B07-2183-02	ESCUTCHEON		K
223	2C	*	B10-3104-01	FRONT GLASS		E
223	2C	*	B10-3109-01	FRONT GLASS		K
-			B46-0100-50	WARRANTY CARD		
-			B46-0606-04	ID CARD		K
-			B46-0632-04	ID CARD		E
-			B58-1278-04	CAUTION CARD		
-			B58-1309-04	CAUTION CARD		
-			B58-1321-14	CAUTION CARD		
-			B59-0742-00	SUB-INSTRUCTION MANUAL		
-			B64-1601-00	INSTRUCTION MANUAL	E	K
-			B64-1602-00	INSTRUCTION MANUAL	F,S	K
-			B64-1605-00	INSTRUCTION MANUAL	E	E
-			B64-1606-00	INSTRUCTION MANUAL	F,G,D	E
-			B64-1607-00	INSTRUCTION MANUAL	I,S,P	E
224	1C		D10-4301-14	LEVER		
225	1C		D10-4302-14	LEVER		
230	1D		D10-4448-03	ARM ASSY		
231	1D		D10-4449-04	ARM ASSY		
232	2D		D13-1302-64	GEAR ASSY		
233	2D		D13-1306-24	GEAR		
234	2D		D13-1403-03	GEAR		
235	2D		D13-1404-04	GEAR		
236	2D		D13-1453-14	GEAR ASSY		
239	1D		D13-1312-34	GEAR		
240	1D		D13-1313-04	GEAR		
243	1D		D13-1456-13	GEAR ASSY		
244	1D		D13-1455-13	GEAR ASSY		
246	1D		D14-0678-04	ROLLER ASSY		
247	3D		D14-0723-04	ROLLER		
248	3D		D14-0716-14	ROLLER		

Ref.No.	Add	New	Parts No.	Description		Destination
251	2D		E30-4797-05	CORD WITH PINPULUG		K
251	2D		E30-4799-05	CORD WITH PINPLUG		E
252	2D		E30-4706-05	CORD WITH CONNECTOR		
⚠ DC1	1C		E30-4780-05	DC CORD		K
⚠ DC1	1C		E30-4788-05	DC CORD		E
DN1	2D		E30-4802-05	CORD WITH DIN CONNECTOR		
255	2D		F29-0049-05	INSULATING COVER		
⚠ F1	2D		F52-0006-05	FUSE(MINI BLADE TYPE)		
258	2D		G01-2984-04	EXTENSION SPRING		
259	1D		G01-2818-24	EXTENSION SPRING		
260	3C		G01-2920-14	TORSION COIL SPRING		
261	1C		G01-2924-04	TORSION COIL SPRING		
262	1D		G11-1850-04	CUSHION		
263	2D		G16-1147-04	SHEET		
-			H10-4704-02	POLYSTYRENE FOAMED FIXTURE		
-			H21-1123-04	PROTECTION SHEET		
-			H25-0337-04	PROTECTION BAG (180X300X0.03)		
-			H25-1108-04	PROTECTION BAG (100X300X0.03)		
-			H25-1111-04	PROTECTION BAG (280X450X0.03)		
-		*	H54-1654-03	ITEM CARTON CASE		K
-		*	H54-1663-03	ITEM CARTON CASE		E
265	1C		J19-4875-04	BRACKET		K
266	1C		J19-4876-04	BRACKET		K
267	1C		J21-9491-03	MOUNTING HARDWARE ASSY		
271	1D		J31-1035-24	COLLAR		
FPC2	1D		J84-0062-23	FLEXIBLE PRINTED WIRING BOARD		
FPC3	3C		J84-0066-13	FLEXIBLE PRINTED WIRING BOARD		
280	2C		K24-3540-03	KNOB	OPEN	
281	2C		K24-3541-04	KNOB	SRC	
282	2C		K25-1095-03	KNOB	VOL	
283	2C		K25-1096-03	KNOB	1-3	
284	2C		K25-1097-03	KNOB	4-6	
285	2C		K25-1098-03	KNOB	FM/AM	
286	2C		K25-1099-03	KNOB	CLK	
287	2D		K29-7010-04	KNOB ASSY	LOCK	
291	1C		N99-1652-05	SCREW SET		K
292	1C		N99-1683-05	SCREW SET		
A	1D		N09-4184-05	MACHINE SCREW (M2X2)		
B	1D		N09-4185-05	MACHINE SCREW (M2X2)		
C	1D		N09-4218-05	MACHINE SCREW (M2X3)		
D	1D		N09-4340-05	MACHINE SCREW (M2X2.)		
E	1D		N09-4381-05	MACHINE SCREW (M2X2)		
F	2D		N19-2022-04	FLAT WASHER		
G	2D		N19-2058-04	FLAT WASHER		
H	1D		N19-2062-04	FLAT WASHER		
J	1D		N19-2085-04	FLAT WASHER		
K	1D		N19-2095-04	FLAT WASHER		
L	1D		N19-2103-04	FLAT WASHER		
M	3C		N35-2003-45	BINDING HEAD MACHINE SCREW		
N	3C		N38-2030-45	PAN HEAD MACHIN SCREW		
P	3C		N67-3005-46	PAN HEAD SEMS SCREW		

K: KDC-9015 **E:** KDC-8080R

⚠ indicates safety critical components.

PARTS LIST

∗ New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

KDC-9015/8080R
SWITCH UNIT (X13-971X-XX)
SUB CIRCUIT (X13-978X-XX)
ELECTRIC UNIT (X25-84XX-XX)

Ref.No.	Add	New	Parts No.	Description				Destination
Q	2C		N80-2004-46	PAN HEAD TAPTITE SCREW				
R	2C		N80-2008-45	PAN HEAD TAPTITE SCREW				
S	1D		N83-3005-46	PAN HEAD TAPTITE SCREW				
PS1	1D		S68-0829-05	PUSH SWITCH				
295	1C		T90-0523-05	ANTENNA ADAPTOR				E
PM1	1D		T42-0752-34	MOTOR ASSY				
ME1	3C		X92-3700-00	MECHANISM ASSY				
SWITCH UNIT (X13-971X-XX)								
D7 ,8			B30-1562-05	LED				
C1			CK73FB1H103K	CHIP C	0.010UF	K		
C2			C92-0628-05	CHIP-TAN	10UF	10WV		
C3 ,4			CK73EB1C225K	CHIP C	2.2UF	K		
C5			CK73FB1H103K	CHIP C	0.010UF	K		
C6			CK73EB1C225K	CHIP C	2.2UF	K		
C8			CK73FB1H103K	CHIP C	0.010UF	K		
CN1			E59-0833-05	RECTANGULAR PLUG				
L1			L92-0302-05	CHIP FERRITE				
L2			L40-1015-34	SMALL FIXED INDUCTOR				
L3 ,4			L33-0385-05	SMALL FIXED INDUCTOR				
X1			L78-0683-05	RESONATOR				
CP1			R90-0714-05	MULTI-COMP	10K	X4		
CP2 ,3			R90-0724-05	MULTI-COMP	1K	X4		
CP4			R90-1022-05	MULTI-COMP	470	X2		
R1 ,2			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R3 -5			RK73FB2A103J	CHIP R	10K	J	1/10W	
R6 ,7			RK73FB2A274J	CHIP R	270K	J	1/10W	
R8			RK73FB2A153J	CHIP R	15K	J	1/10W	
R9			RK73FB2A101J	CHIP R	100	J	1/10W	
R10			RK73FB2A100J	CHIP R	10	J	1/10W	
R11			RK73FB2A823J	CHIP R	82K	J	1/10W	
R12			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R13 ,14			RK73FB2A472J	CHIP R	4.7K	J	1/10W	
R15 ,16			RK73FB2A473J	CHIP R	47K	J	1/10W	
R17			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R18			R92-1215-05	CHIP R	470	J	1/2W	
R19			R92-2023-05	CHIP R	820	J	1/2W	
R20			RK73FB2A222J	CHIP R	2.2K	J	1/10W	
R21			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R22			RK73FB2A473J	CHIP R	47K	J	1/10W	
R23			RK73EB2B330J	CHIP R	33	J	1/8W	
R24			RK73FB2A222J	CHIP R	2.2K	J	1/10W	
R25			RK73FB2A512J	CHIP R	5.1K	J	1/10W	
R30			RK73FB2A102J	CHIP R	1.0K	J	1/10W	
R31			RK73FB2A103J	CHIP R	10K	J	1/10W	
R33			RK73FB2A223J	CHIP R	22K	J	1/10W	
R34			RK73FB2A222J	CHIP R	2.2K	J	1/10W	
R35			RK73FB2A2R2J	CHIP R	2.2	J	1/10W	
S1 -13			S70-0856-05	TACT SWITCH				
S14			S70-0857-05	TACT SWITCH				
S15 -18			S70-0860-05	TACT SWITCH				

Ref.No.	Add	New	Parts No.	Description				Destination
S19 -21			S70-0851-05	TACT SWITCH				
S22			S68-0822-05	PUSH SWITCH				
S23			S70-0864-05	TACT SWITCH				
D1 ,2			DA227	DIODE				
D3			MA3056-M	ZENER DIODE				
D4 ,5			MA3062WA	ZENER DIODE				
ED1	2C		CN1914M	FLUORESCENT INDICATOR TUBE				
IC1			UPD784215GC155	MI-COM IC				
IC2			BA3830F	ANALOGUE IC				
IC3			RS-171	ANALOGUE IC				
Q1			DTA114YK	DIGITAL TRANSISTOR				
Q2			DTA144EK	DIGITAL TRANSISTOR				
Q3			DTC114EK	DIGITAL TRANSISTOR				
Q5			DTC114EK	DIGITAL TRANSISTOR				
Q6 ,7			2SC2412K	TRANSISTOR				
Q8			DTA124EK	DIGITAL TRANSISTOR				
SUB CIRCUIT (X13-978X-XX)								
310	2C		B03-3057-02	DRESSING PLATE				
J1			E58-0895-05	RECTANGULAR RECEPTACLE				
FPC1	2C		J84-0106-02	FLEXIBLE PRINTED WIRING BOARD				
Y	2C		N38-2025-46	PAN HEAD MACHIN SCREW				
ELECTRIC UNIT (X25-84XX-XX)								
C1			C90-2822-05	ELECTRO	3900UF	16WV		
C2 ,4,12			CK73FB1H103K	CHIP C	0.010UF	K		
C3			C90-2926-05	ELECTRO	220UF	16WV		
C5			C90-2594-05	ELECTRO	10UF	10WV		
C6			CE04CW0J101M	ELECTRO	100UF	6.3WV		
C7 ,37			CK73EB1C105K	CHIP C	1.0UF	K		
C8			CE04CW1A221M	ELECTRO	220UF	10WV		
C10			CE04CW1A101M	ELECTRO	100UF	10WV		
C13 ,22			CK73FB1H223K	CHIP C	0.022UF	K		
C14			C90-2608-05	ELECTRO	1.0UF	50WV		
C15 ,24			C90-2595-05	ELECTRO	4.7UF	16WV		K
C16,17,19,20			CK73FB1C225K	CHIP C	2.2UF	K		K
C18			C90-2962-05	ELECTRO	100UF	16WV		K
C21			CE04CW1C220M	ELECTRO	22UF	16WV		K
C22			CK73FB1H103K	CHIP C	0.010UF	K		K
C25 ,26			CK73FB1E473K	CHIP C	0.047UF	K		
C27			C90-2598-05	ELECTRO	3.3UF	25WV		
C28			CK73FB1E683K	CHIP C	0.068UF	K		
C29			C90-2602-05	ELECTRO	0.10UF	50WV		
C30 ,38			CK73FB1H102K	CHIP C	1000PF	K		
C31 ,32			CK73FB1H103K	CHIP C	0.010UF	K		
C33			CE04CW0J470M	ELECTRO	47UF	6.3WV		
C34 ,39			CK73FB1H103K	CHIP C	0.010UF	K		
C35			CC73FCH1H240J	CHIP C	24PF	J		
C36			CC73FCH1H270J	CHIP C	27PF	J		
C42 -46			C90-2595-05	ELECTRO	4.7UF	16WV		
C48 ,49			C90-2597-05	ELECTRO	10UF	16WV		
C50			CK73FB1C104K	CHIP C	0.10UF	K		
C51			CK73FB1H103K	CHIP C	0.010UF	K		
C52 ,53			C90-2597-05	ELECTRO	10UF	16WV		

K: KDC-9015 **E:** KDC-8080R

⚠ indicates safety critical components.

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-84XX-XX)

Ref.No.	Add	New	Parts No.	Description	Destination
C54			CC73FCH1H121J	CHIP C 120PF J	
C55			CK73FB1C823K	CHIP C 0.082UF K	
C56			CK73FB1C104K	CHIP C 0.10UF K	
C57			CK73EB1C474K	CHIP C 0.47UF K	
C58			CK73GB1E183K	CHIP C 0.018UF K	
C59			CK73FB1H103K	CHIP C 0.010UF K	
C60			CE04CW1A101M	ELECTRO 100UF 10WV	
C61			C90-2610-05	ELECTRO 2.2UF 50WV	
C62			CK73FB1H103K	CHIP C 0.010UF K	
C63			C93-1054-05	CHIP C 0.012UF K	
C64			C90-2608-05	ELECTRO 1.0UF 50WV	
C65 ,66			C90-2610-05	ELECTRO 2.2UF 50WV	
C69 -76			CK73FB1C274K	CHIP C 0.27UF K	
C77 -80			CK73FB1C104K	CHIP C 0.10UF K	
C81 ,82			C90-2597-05	ELECTRO 10UF 16WV	
C85 ,86			C90-2597-05	ELECTRO 10UF 16WV	
C89 -92			C90-2597-05	ELECTRO 10UF 16WV	
C95 -98			C90-5296-05	ELECTRO 0.22UF 50WV	
C99			C90-2935-05	ELECTRO 1.0UF 50WV	
C100			C90-2608-05	ELECTRO 1.0UF 50WV	
C101			CE04CW1A101M	ELECTRO 100UF 10WV	
C102			C90-2608-05	ELECTRO 1.0UF 50WV	
C111			CE04CW0J470M	ELECTRO 47UF 6.3WV	
C112,113			C90-2606-05	ELECTRO 0.47UF 50WV	
C115,116			CK73FB1C224K	CHIP C 0.22UF K	
C117			C90-2594-05	ELECTRO 10UF 10WV	
C118			CK73FB1H103K	CHIP C 0.010UF K	
C119			C90-2594-05	ELECTRO 10UF 10WV	
C120,121			CC73FCH1H100D	CHIP C 10PF D	
C122			CC73FCH1H271J	CHIP C 270PF J	
C123-126			CC73FSL1H102J	CHIP C 1000PF J	
C130			C90-2594-05	ELECTRO 10UF 10WV	
C131			CK73GB1H471K	CHIP C 470PF K	
C132			CC73FCH1H121J	CHIP C 120PF J	
C133			CC73FCH1H060D	CHIP C 6.0PF D	
C134			CC73FSL1H122J	CHIP C 1200PF J	
C135			CK73GB1H122K	CHIP C 1200PF K	
C136			CC73FCH1H180J	CHIP C 18PF J	
C137			CC73FCH1H471J	CHIP C 470PF J	
C138			CC73FCH1H820J	CHIP C 82PF J	
C139			CC73FSL1H102J	CHIP C 1000PF J	
C140			CK73FB1H223K	CHIP C 0.022UF K	
C141			CC73FSL1H222J	CHIP C 2200PF J	
C142			CK73FB1H822K	CHIP C 8200PF K	
C144			CK73FB1H103K	CHIP C 0.010UF K	
C145			CC73FCH1H471J	CHIP C 470PF J	
C146			CK73FB1H103K	CHIP C 0.010UF K	
C147			CE04CW1A101M	ELECTRO 100UF 10WV	
C148			CK73FB1E273K	CHIP C 0.027UF K	
C149			CK73EB1C105K	CHIP C 1.0UF K	
C150,151			CK73FB1H103K	CHIP C 0.010UF K	
C153			CK73FB1H103K	CHIP C 0.010UF K	
C157			CK73EB1C474K	CHIP C 0.47UF K	
C159			CK73FB1H103K	CHIP C 0.010UF K	
C161			C90-2608-05	ELECTRO 1.0UF 50WV	

Ref.No.	Add	New	Parts No.	Description	Destination
CN1			E40-3241-05	PIN ASSY	
CN2			E40-3299-05	PIN ASSY	
CN3			E40-3252-05	PIN ASSY	
CN4			E40-3261-05	PIN ASSY	
CN5			E40-9550-05	FLAT CABLE CONNECTOR	
CN6			E40-9557-05	FLAT CABLE CONNECTOR	
CN7			E40-5029-05	FLAT CABLE CONNECTOR	
CN8			E40-3250-05	PIN ASSY	
J1			E58-0836-05	RECTANGULAR RECEPTACLE	
WH1	2D		E30-4440-05	CORD WITH PLUG	
L1			L40-4795-34	SMALL FIXED INDUCTOR	
L2 -7			L40-4795-34	SMALL FIXED INDUCTOR	
L8			L33-1039-05	LINE FILTER COIL	
L9			L39-1004-05	TRAP COIL	
L10			L40-4795-34	SMALL FIXED INDUCTOR	
L11			L92-0075-05	CHIP FERRITE	
X1			L78-0683-05	RESONATOR	
X2			L77-2738-05	CRYSTAL RESONATOR	
X3			L77-2002-05	CRYSTAL RESONATOR	
S	3D		N83-3005-46	PAN HEAD TAPTITE SCREW	
T	3D		N35-3010-46	BINDING HEAD MACHINE SCREW	
W	3D		N86-2606-46	BINDING HEAD TAPTITE SCREW	
X	3D		N83-3012-46	PAN HEAD TAPTITE SCREW	
CP2			R90-0724-05	MULTI-COMP 1K X4	
CP3			R90-1022-05	MULTI-COMP 470 X2	
CP4 -7			R90-0725-05	MULTI-COMP 1K X2	
CP9			R90-0725-05	MULTI-COMP 1K X2	
R1 ,3			RK73FB2A223J	CHIP R 22K J 1/10W	
R2			RK73FB2A101J	CHIP R 100 J 1/10W	
R4			RK73FB2A222J	CHIP R 2.2K J 1/10W	
R5			RK73EB2B221J	CHIP R 220 J 1/8W	
R6			RK73FB2A153J	CHIP R 15K J 1/10W	
R7			R92-3032-05	CHIP R 4.3K D 1/10W	
R8 ,9			R92-3052-05	METAL GLAZE RESISTOR	
R11			RK73FB2A152J	CHIP R 1.5K J 1/10W	
R13			RK73FB2A471J	CHIP R 470 J 1/10W	
R14			RK73GB1J104J	CHIP R 100K J 1/16W	
R15			RK73EB2B752J	CHIP R 7.5K J 1/8W	
R16			RK73EB2B103J	CHIP R 10K J 1/8W	
R17 ,36,39			RK73FB2A223J	CHIP R 22K J 1/10W	
R18			RK73FB2A473J	CHIP R 47K J 1/10W	
R19 ,21			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R20 ,22			RK73EB2B104J	CHIP R 100K J 1/8W	
R23			RK73FB2A750J	CHIP R 75 J 1/10W	
R24			RK73FB2A272J	CHIP R 2.7K J 1/10W	
R26			RK73EB2B102J	CHIP R 1.0K J 1/8W	
R27			RK73GB1J752J	CHIP R 7.5K J 1/16W	
R28			RK73GB1J563J	CHIP R 56K J 1/16W	
R29 ,32			RK73GB1J913J	CHIP R 91K J 1/16W	
R31			RK73FB2A103J	CHIP R 10K J 1/10W	
R33			RK73FB2A913J	CHIP R 91K J 1/10W	
R34 ,37			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R35			R92-0366-05	CHIP R 560 J 1W	K
R38 ,40			R92-0365-05	CHIP R 1.0K J 1/2W	

K: KDC-9015 **E:** KDC-8080R

⚠ indicates safety critical components.

PARTS LIST

∗ New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-84XX-XX)

Ref.No.	Add	New	Parts No.	Description			Destination
R41			RK73EB2B472J	CHIP R	4.7K	J 1/8W	
R42 ,46			RK73EB2B222J	CHIP R	2.2K	J 1/8W	
R43 -45			RK73EB2B470J	CHIP R	47	J 1/8W	
R47 ,48			RK73EB2B472J	CHIP R	4.7K	J 1/8W	
R50 ,51			RK73FB2A123J	CHIP R	12K	J 1/10W	
R52			RK73FB2A562J	CHIP R	5.6K	J 1/10W	
R53 ,74			RK73GB1J223J	CHIP R	22K	J 1/16W	
R54			RD14DB2H332J	SMALL-RD	3.3K	J 1/2W	
R56 ,57			RK73EB2B104J	CHIP R	100K	J 1/8W	
R58			RK73FB2A183J	CHIP R	18K	J 1/10W	
R59			RK73GB1J104J	CHIP R	100K	J 1/16W	
R60 ,65,77			RK73FB2A104J	CHIP R	100K	J 1/10W	
R63 ,64			RK73FB2A104J	CHIP R	100K	J 1/10W	
R66			RK73FB2A222J	CHIP R	2.2K	J 1/10W	
R67 ,71			RK73GB1J472J	CHIP R	4.7K	J 1/16W	
R70			RK73FB2A102J	CHIP R	1.0K	J 1/10W	
R72 ,73			RK73FB2A562J	CHIP R	5.6K	J 1/10W	
R76			RK73GB1J470J	CHIP R	47	J 1/16W	
R78 ,25,30			RK73FB2A470J	CHIP R	47	J 1/10W	
R79 ,80			RK73FB2A222J	CHIP R	2.2K	J 1/10W	
R83			RK73GB1J104J	CHIP R	100K	J 1/16W	
R84			RK73FB2A102J	CHIP R	1.0K	J 1/10W	
R86			RK73FB2A561J	CHIP R	560	J 1/10W	
R89			RK73FB2A104J	CHIP R	100K	J 1/10W	
R90			RK73GB1J222J	CHIP R	2.2K	J 1/16W	
R92			RK73GB1J102J	CHIP R	1.0K	J 1/16W	
R93			RK73FB2A222J	CHIP R	2.2K	J 1/10W	
R94			RK73GB1J273J	CHIP R	27K	J 1/16W	
R95 ,96			RK73GB1J472J	CHIP R	4.7K	J 1/16W	
R97			RK73FB2A102J	CHIP R	1.0K	J 1/10W	
R99			RK73GB1J102J	CHIP R	1.0K	J 1/16W	
R100			RK73FB2A102J	CHIP R	1.0K	J 1/10W	
R101			RK73GB1J104J	CHIP R	100K	J 1/16W	
R102,103			RK73FB2A470J	CHIP R	47	J 1/10W	
R104			RK73FB2A104J	CHIP R	100K	J 1/10W	
R105-107			RK73FB2A222J	CHIP R	2.2K	J 1/10W	
R108			RK73GB1J222J	CHIP R	2.2K	J 1/16W	
R112,113			RK73GB1J222J	CHIP R	2.2K	J 1/16W	
R114			RK73GB1J124J	CHIP R	120K	J 1/16W	
R115			RK73FB2A102J	CHIP R	1.0K	J 1/10W	
R118			RK73GB1J102J	CHIP R	1.0K	J 1/16W	
R120			RK73GB1J102J	CHIP R	1.0K	J 1/16W	
R121			RK73GB1J103J	CHIP R	10K	J 1/16W	
R122,167,168			RK73FB2A103J	CHIP R	10K	J 1/10W	
R123			RK73FB2A102J	CHIP R	1.0K	J 1/10W	
R124			RK73GB1J473J	CHIP R	47K	J 1/16W	
R125			RK73FB2A333J	CHIP R	33K	J 1/10W	
R126,127			RK73FB2A473J	CHIP R	47K	J 1/10W	
R128			RK73FB2A821J	CHIP R	820	J 1/10W	
R129			RK73GB1J153J	CHIP R	15K	J 1/16W	
R130			RK73FB2A473J	CHIP R	47K	J 1/10W	
R131			RK73FB2A472J	CHIP R	4.7K	J 1/10W	
R132-136			RK73EB2B471J	CHIP R	470	J 1/8W	
R137-139			RK73FB2A222J	CHIP R	2.2K	J 1/10W	
R140			RK73EB2B472J	CHIP R	4.7K	J 1/8W	

Ref.No.	Add	New	Parts No.	Description			Destination
R141,142			RK73GB1J104J	CHIP R	100K	J 1/16W	
R143,144			RK73FB2A104J	CHIP R	100K	J 1/10W	
R145,147			RK73FB2A472J	CHIP R	4.7K	J 1/10W	
R148,149			RK73GB1J334J	CHIP R	330K	J 1/16W	
R153,154			RK73EB2B361J	CHIP R	360	J 1/8W	
R155,156			RK73FB2A472J	CHIP R	4.7K	J 1/10W	
R157,158			RK73FB2A223J	CHIP R	22K	J 1/10W	
R159,160			RK73EB2B361J	CHIP R	360	J 1/8W	
R161,162			RK73FB2A472J	CHIP R	4.7K	J 1/10W	
R163,164			RK73FB2A223J	CHIP R	22K	J 1/10W	
R169,170			RK73FB2A223J	CHIP R	22K	J 1/10W	
R171,172			RK73FB2A820J	CHIP R	82	J 1/10W	
R173			RK73EB2B472J	CHIP R	4.7K	J 1/8W	
R175,176			RK73FB2A103J	CHIP R	10K	J 1/10W	
R179,180			RK73FB2A820J	CHIP R	82	J 1/10W	
R181-184			RK73FB2A472J	CHIP R	4.7K	J 1/10W	
R185			RK73GB1J184J	CHIP R	180K	J 1/16W	
R186			RK73FB2A431J	CHIP R	430	J 1/10W	
R187			RK73FB2A751J	CHIP R	750	J 1/10W	
R188			RK73FB2A243J	CHIP R	24K	J 1/10W	
R189			RK73FB2A102J	CHIP R	1.0K	J 1/10W	
R190			RK73FB2A101J	CHIP R	100	J 1/10W	
R191,177,178			RK73FB2A223J	CHIP R	22K	J 1/10W	
R192			RK73GB1J333J	CHIP R	33K	J 1/16W	
R193,194			RK73EB2B100J	CHIP R	10	J 1/8W	
R195			RK73EB2B4R7J	CHIP R	4.7	J 1/8W	
R196			RK73EB2B104J	CHIP R	100K	J 1/8W	
R198			RK73FB2A105J	CHIP R	1.0M	J 1/10W	
R199			RK73GB1J104J	CHIP R	100K	J 1/16W	
R200			RK73EB2B222J	CHIP R	2.2K	J 1/8W	
R215,224			RK73FB2A153J	CHIP R	15K	J 1/10W	
R216			RK73EB2B220J	CHIP R	22	J 1/8W	
R217-219			RK73GB1J103J	CHIP R	10K	J 1/16W	
R220,225			RK73FB2A103J	CHIP R	10K	J 1/10W	
R221			RK73FB2A823J	CHIP R	82K	J 1/10W	
R222			RK73FB2A272J	CHIP R	2.7K	J 1/10W	
R223			RK73FB2A333J	CHIP R	33K	J 1/10W	
R224			RK73FB2A153J	CHIP R	15K	J 1/10W	
R226			RK73GB1J562J	CHIP R	5.6K	J 1/16W	
R227			RK73GB1J103J	CHIP R	10K	J 1/16W	
R228			RK73FB2A104J	CHIP R	100K	J 1/10W	
R229			RK73FB2A103J	CHIP R	10K	J 1/10W	
R230			RK73FB2A222J	CHIP R	2.2K	J 1/10W	
R231			RK73GB1J562J	CHIP R	5.6K	J 1/16W	
R232			RK73FB2A272J	CHIP R	2.7K	J 1/10W	
R233			RK73FB2A223J	CHIP R	22K	J 1/10W	
R234			RK73EB2B102J	CHIP R	1.0K	J 1/8W	
R235			RK73FB2A223J	CHIP R	22K	J 1/10W	
R236			RK73EB2B102J	CHIP R	1.0K	J 1/8W	
R237			RK73FB2A105J	CHIP R	1.0M	J 1/10W	
R241			RK73FB2A101J	CHIP R	100	J 1/10W	
R242			RK73GB1J101J	CHIP R	100	J 1/16W	
R243,244			RK73FB2A102J	CHIP R	1.0K	J 1/10W	
R245			RK73FB2A122J	CHIP R	1.2K	J 1/10W	
R246			RK73FB2A473J	CHIP R	47K	J 1/10W	

K: KDC-9015 **E:** KDC-8080R

⚠ indicates safety critical components.

PARTS LIST

* New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-84XX-XX)

Ref.No.	Add	New	Parts No.	Description	Destination
R247			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R248			RK73FB2A104J	CHIP R 100K J 1/10W	
VR1			R32-0229-05	SEMI FIXED VARIABLE RESISTOR	E
W8 -15			R92-2052-05	CHIP R 0 J 1/10W	
W18 ,19			R92-2052-05	CHIP R 0 J 1/10W	
W26			R92-2052-05	CHIP R 0 J 1/10W	
PH1			T95-0231-05	OPTO ISOLATOR	
D1			RM10ZLF	DIODE	
D2			AM01Z	DIODE	
D3			MA4056(N)-M	ZENER DIODE	
D4			MA4082(N)-L	ZENER DIODE	
D6			HZM4.7N(B2)	ZENER DIODE	
D7			MA4110(N)-M	ZENER DIODE	
D8			MA4056(N)-M	ZENER DIODE	
D11 ,12			ERA15-01	DIODE	
D13			DAP202K	DIODE	
D16			MA3062WA	ZENER DIODE	
D18			MA3062WA	ZENER DIODE	
D19			MA4056(N)-M	ZENER DIODE	
D20			MA4062(N)-M	ZENER DIODE	
D21			DAN202K	DIODE	
D22			DA204K	DIODE	
D23 ,24			RD6.8M(B2)	ZENER DIODE	
D27			DAP202K	DIODE	
D28 ,29			RD6.8MW	ZENER DIODE	
D31			DAN202K	DIODE	
D32			MA3056-M	ZENER DIODE	
D33			SA-C2012-101TB	SURGE ABSORBER	
D34			DAN202K	DIODE	
D35 -43			1SR154-400	DIODE	
D47 ,48			DAP202K	DIODE	
D50			MA3220-H	ZENER DIODE	
D51			DA204K	DIODE	
D55 -59			DA204K	DIODE	
D60			MA3062WA	ZENER DIODE	
IC1			UPD784217GC104	MI-COM IC	
IC2			TDA7400	ANALOGUE IC	
IC3			M5237ML	IC(VOLTAGE REGULATOR)	
IC4			TDA7386	ANALOGUE IC	
IC5			TDA7401	ANALOGUE IC	
IC6			ICL7660SIBA	ANALOGUE IC	
IC7 ,8			NJM4565M-TE2	ANALOGUE IC	
IC10			TC74HC02AF	IC	
IC11			TDA7479D	ANALOGUE IC	
IC12 ,16			NJM4565M-TE2	ANALOGUE IC	
IC13			LB1930M	ANALOGUE IC	
IC14			BR24C01AF	MEMORY IC	
IC14			M24C01-WMN6T	MEMORY IC	
IC15			S-80830ANNP	MOS-IC	
Q1 ,4			2SB1565(E,F)	TRANSISTOR	
Q2			2SC2412K	TRANSISTOR	
Q3			2SA1037K	TRANSISTOR	
Q5			DTA124EK	DIGITAL TRANSISTOR	
Q6 ,9			DTC124EK	DIGITAL TRANSISTOR	
Q7			2SD2396F40	TRANSISTOR	
Q11			DTA123JK	DIGITAL TRANSISTOR	
Q12			DTC144EK	DIGITAL TRANSISTOR	
Q13			2SB1443	TRANSISTOR	
Q15 ,17,19			2SB709A	TRANSISTOR	
Q18 ,20,32			2SC2412K	TRANSISTOR	
Q21 ,23			2SB1277(Q,R)	TRANSISTOR	
Q22 ,26			DTC114EK	DIGITAL TRANSISTOR	
Q24			2SA1037K	TRANSISTOR	
Q25			DTA124EK	DIGITAL TRANSISTOR	
Q28 ,29			2SC2412K	TRANSISTOR	
Q30 ,31			DTA124EK	DIGITAL TRANSISTOR	
Q33			DTC124EK	DIGITAL TRANSISTOR	
Q34 -37			2SC2412K	TRANSISTOR	
Q38			DTC114YK	DIGITAL TRANSISTOR	
Q41			2SA1037K	TRANSISTOR	
Q42			2SC2412K	TRANSISTOR	
Q43			DTC114TK	DIGITAL TRANSISTOR	
Q44			DTA124EK	DIGITAL TRANSISTOR	
Q45			DTC124EK	DIGITAL TRANSISTOR	
Q48			2SB1188(Q,R)	TRANSISTOR	
Q49			DTC124EK	DIGITAL TRANSISTOR	
Q50			2SB1188(Q,R)	TRANSISTOR	
Q51			DTC124EK	DIGITAL TRANSISTOR	
Q52			DTC144EK	DIGITAL TRANSISTOR	
Q53 ,54			DTA124EK	DIGITAL TRANSISTOR	
Q55			2SC2412K	TRANSISTOR	
Q56			2SB1443	TRANSISTOR	
TH1			PTH9C42BD471Q	POSITIVE RESISTOR	
A1	3D		X86-3082-70	TUNER UNIT	

CD PLAYER UNIT (X32-473X-XX)

C1 ,2			CK73FB1A105K	CHIP C	1.0UF	K
C3			C92-1359-05	CHIP-TAN	10UF	16WV
C4			C92-0566-05	CHIP-TAN	10UF	6.3WV
C5			CC73FCH1H330J	CHIP C	33PF	J
C6			CC73FCH1H030C	CHIP C	3.0PF	C
C7			CK73FB1C104K	CHIP C	0.10UF	K
C8			CK73FB1A105K	CHIP C	1.0UF	K
C9			CC73FCH1H101J	CHIP C	100PF	J
C10			CK73FB1H472K	CHIP C	4700PF	K
C11			CK73FB1H682K	CHIP C	6800PF	K
C12			CK73FB1H222K	CHIP C	2200PF	K
C13			CK73FB1H273K	CHIP C	0.027UF	K
C14			CK73FB1H472K	CHIP C	4700PF	K
C15			CK73FB1E473K	CHIP C	0.047UF	K
C16			CC73FCH1H101J	CHIP C	100PF	J
C17			CK73FB1H472K	CHIP C	4700PF	K
C18			CK73FB1H471K	CHIP C	470PF	K
C19 ,20			CK73FB1C104K	CHIP C	0.10UF	K
C21			C92-1359-05	CHIP-TAN	10UF	16WV
C22			CK73FB1C104K	CHIP C	0.10UF	K
C23			CK73FB1H102K	CHIP C	1000PF	K

K: KDC-9015 **E:** KDC-8080R

⚠ indicates safety critical components.

PARTS LIST

∗ New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

ELECTRIC UNIT (X25-84XX-XX)
DAUGTER UNIT (X89-241X-XX)

Ref.No.	Add	New	Parts No.	Description	Destination
C24			CK73FB1H223K	CHIP C 0.022UF K	
C25			CK73FB1H123K	CHIP C 0.012UF K	
C26			CK73FB1A105K	CHIP C 1.0UF K	
C28			CK73FB1A105K	CHIP C 1.0UF K	
C29			CK73FB1C104K	CHIP C 0.10UF K	
C31 ,32			CK73FB1H103K	CHIP C 0.010UF K	
C33			CK73FB1C104K	CHIP C 0.10UF K	
C34			CK73EB1A335K	CHIP C 3.3UF K	
C35			CK73FB1C104K	CHIP C 0.10UF K	
C41			CK73EB1C225K	CHIP C 2.2UF K	
C43			CK73FB1H123K	CHIP C 0.012UF K	
C44			CK73FB1C104K	CHIP C 0.10UF K	
C45			CK73FB1H123K	CHIP C 0.012UF K	
C46			CK73FB1E473K	CHIP C 0.047UF K	
C51			CK73EB1A335K	CHIP C 3.3UF K	
C55			CK73FB1C104K	CHIP C 0.10UF K	
C63			C92-1359-05	CHIP-TAN 10UF 16WV	
C67 ,68			CK73FB1A105K	CHIP C 1.0UF K	
C71 ,72			CK73FB1H471K	CHIP C 470PF K	
C77 ,78			CC73FCH1H680J	CHIP C 68PF J	
C79 ,80			C93-1044-05	CERAMIC 2200PF K	
C85			CK73FB1C104K	CHIP C 0.10UF K	
CN1			E40-9536-05	FLAT CABLE CONNECTOR	
CN2			E40-9339-05	FLAT CABLE CONNECTOR	
L1			L40-1001-78	SMALL FIXED INDUCTOR(10UH)	
L2			L92-0308-05	FERRITE CORE	
X1			L78-0572-05	RESONATOR (16.93MHZ)	
CP1 -3			R90-1019-05	MULTI-COMP 100 X2	
R1 ,2			RK73FB2A333J	CHIP R 33K J 1/10W	
R3			RK73FB2A823J	CHIP R 82K J 1/10W	
R5			RK73FB2A910J	CHIP R 91 J 1/10W	
R6			RK73FB2A823J	CHIP R 82K J 1/10W	
R8			RK73EB2B4R7J	CHIP R 4.7 J 1/8W	
R9			RK73EB2B100J	CHIP R 10 J 1/8W	
R10 ,11			RK73FB2A682J	CHIP R 6.8K J 1/10W	
R12			RK73FB2A432J	CHIP R 4.3K J 1/10W	
R13			RK73FB2A363J	CHIP R 36K J 1/10W	
R14 ,15			RK73FB2A824J	CHIP R 820K J 1/10W	
R16			RK73FB2A223J	CHIP R 22K J 1/10W	
R17			RK73FB2A363J	CHIP R 36K J 1/10W	
R18			RK73FB2A392J	CHIP R 3.9K J 1/10W	
R19			RK73FB2A273J	CHIP R 27K J 1/10W	
R20			RK73FB2A104J	CHIP R 100K J 1/10W	
R21			RK73FB2A224J	CHIP R 220K J 1/10W	
R22 ,23			RK73FB2A333J	CHIP R 33K J 1/10W	
R31			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R32			RK73FB2A104J	CHIP R 100K J 1/10W	
R34			RK73FB2A683J	CHIP R 68K J 1/10W	
R35			RK73FB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2A151J	CHIP R 150 J 1/10W	
R37			RK73FB2A471J	CHIP R 470 J 1/10W	
R38			RK73FB2A224J	CHIP R 220K J 1/10W	
R44			RK73FB2A512J	CHIP R 5.1K J 1/10W	

Ref.No.	Add	New	Parts No.	Description	Destination
R45			RK73FB2A103J	CHIP R 10K J 1/10W	
R46			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R47			RK73FB2A103J	CHIP R 10K J 1/10W	
R49			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R50			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R52			RK73FB2A104J	CHIP R 100K J 1/10W	
R54			RK73FB2A104J	CHIP R 100K J 1/10W	
R71			RK73FB2A103J	CHIP R 10K J 1/10W	
R72			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R73			RK73FB2A473J	CHIP R 47K J 1/10W	
R74			RK73FB2A103J	CHIP R 10K J 1/10W	
R75			RK73FB2A333J	CHIP R 33K J 1/10W	
R76			RK73FB2A622J	CHIP R 6.2K J 1/10W	
R77			RK73FB2A563J	CHIP R 56K J 1/10W	
R78			RK73FB2A243J	CHIP R 24K J 1/10W	
R79			RK73FB2A242J	CHIP R 2.4K J 1/10W	
R80			RK73FB2A202J	CHIP R 2.0K J 1/10W	
R81			RK73FB2A333J	CHIP R 33K J 1/10W	
R82			RK73FB2A103J	CHIP R 10K J 1/10W	
R83			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R101,102			RK73FB2A332J	CHIP R 3.3K J 1/10W	
R103,104			RK73FB2A562J	CHIP R 5.6K J 1/10W	
R107,108			RK73FB2A331J	CHIP R 330 J 1/10W	
R117,118			RK73FB2A203J	CHIP R 20K J 1/10W	
R121,122			RK73FB2A203J	CHIP R 20K J 1/10W	
R125,126			RK73FB2A203J	CHIP R 20K J 1/10W	
R202			RK73FB2A102J	CHIP R 1.0K J 1/10W	
R216,217			RK73FB2A155J	CHIP R 1.5M J 1/10W	
R218			RK73FB2A473J	CHIP R 47K J 1/10W	
R219			RK73FB2A472J	CHIP R 4.7K J 1/10W	
R220			RK73FB2A103J	CHIP R 10K J 1/10W	
W4			R92-2052-05	CHIP R 0 J 1/10W	
W8			R92-2052-05	CHIP R 0 J 1/10W	
S1 ,2			S68-0838-05	PUSH SWITCH	
S3			S68-0823-05	PUSH SWITCH	
D1 ,2			DAN202U	DIODE	
D3			DA204K	DIODE	
D4			DAN202U	DIODE	
IC1			AN8806SB	ANALOGUE IC	
IC2			MN662773KB3	MOS-IC	
IC4			BA5917AFP	ANALOGUE IC	
IC5			TA78L05F	IC(VOLTAGE REGULATOR/ +5V)	
IC6			NJM4565MD	IC(OP AMP X2)	
Q1			2SB1188	TRANSISTOR	
Q2			DTC124EUA	DIGITAL TRANSISTOR	
Q3 ,4			2SA1362(Y)	TRANSISTOR	
Q5			DTC124EUA	DIGITAL TRANSISTOR	
Q8			DTC124EUA	DIGITAL TRANSISTOR	

DAUGTER UNIT (X89-241X-XX)

C1			C90-2966-05	ELECTRO 100UF 16WV	
C2			CK73FB1H103K	CHIP C 0.010UF K	
C3			C90-2966-05	ELECTRO 100UF 16WV	
C4			CK73FB1H103K	CHIP C 0.010UF K	

K: KDC-9015 **E:** KDC-8080R

⚠ indicates safety critical components.

PARTS LIST

∗ New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohane Parts No. werden nicht geliefert.

Ref.No.	Add	New	Parts No.	Description	Destination
C5			C90-2984-05	ELECTRO 47UF 50WV	
C6			CK73FB1H103K	CHIP C 0.010UF K	
C7			CK73EB1C225K	CHIP C 2.2UF K	
CN1			E40-3250-05	PIN ASSY	
			J74-1053-02	RIGID PRINTED WIRING BOARD	
L1			L33-1029-05	SMALL FIXED INDUCTOR	
R1			RK73EB2B473J	CHIP R 47K J 1/8W	
R2			RK73FB2A152J	CHIP R 1.5K J 1/10W	
R3			RK73EB2B103J	CHIP R 10K J 1/8W	
R4			R92-2104-05	CHIP R 2.2 J 1W	
D1			MA4100-L	ZENER DIODE	
D2			MA4051(N)-M	ZENER DIODE	
D3			DA204K	DIODE	
Q1			2SB1184	TRANSISTOR	
Q2			2SC2412K	TRANSISTOR	
A1		∗	W02-3232-05	ELECTRIC CIRCUIT MODULE	
MECHANISM ASSY (X92-37XX-XX)					
401	2A		A10-4482-01	CHASSIS	
402	2A		A10-4225-33	CHASSIS CALKING ASSY	
403	2B		A11-0915-43	SUB CHASSIS CALKING ASSY	
405A	2A		D10-4038-23	ARM ASSY	
406	2A		D10-4306-04	ARM ASSY	
407	2A		D10-4305-04	ARM ASSY	
408	3A		D10-3087-44	ARM ASSY	
409	3B		D10-3092-03	SLIDER	
410	3B		D10-3093-04	SLIDER ASSY	
411	2B		D10-3095-04	SLIDER ASSY	
412	2B		D10-3096-04	SLIDER ASSY	
413	1A		D10-3099-24	SLIDER ASSY	
414	1A		D10-3100-04	SLIDER ASSY	
415	2A		D10-4123-24	LEVER ASSY	
416	1B		D10-4004-04	LEVER ASSY	
417	1B		D10-4006-04	LEVER	
418	1A		D10-4007-04	LEVER	
419	2B		D10-4008-14	LEVER	
420	2A		D10-4009-23	ARM	
421	3B		D10-4010-04	LEVER	
422	3A		D10-4011-34	LEVER ASSY	
423	3A		D10-4013-14	ARM ASSY	
424	3B		D10-4050-04	ARM	
427	3B		D13-1340-13	RACK (GEAR)	
429	3B		D13-1231-04	GEAR	
430	3B		D13-1232-04	GEAR	
431	3B		D13-1233-04	GEAR	
432	3B		D13-1234-14	GEAR ASSY	
433	3A		D13-1238-03	GEAR	
434	3B		D13-1240-04	GEAR	
435	3B		D13-1241-04	GEAR	
436	3B		D13-1242-04	GEAR	
437	1B		D13-1243-04	GEAR	
438	1B		D13-1244-04	GEAR	

DAUGTER UNIT (X89-241X-XX)
MECHANISM ASSY (X92-37XX-XX)

Ref.No.	Add	New	Parts No.	Description	Destination
439	1B		D13-1245-14	GEAR	
440	2A		D13-1246-04	GEAR	
441	2B		D13-1247-04	GEAR	
443	2B		D13-1249-04	GEAR ASSY	
445	1B		D14-0668-04	ROLLER	
446	2A		D14-0670-04	ROLLER	
447	3B		D14-0674-04	ROLLER	
448	2B		D13-1341-04	GEAR ASSY	
449	3A		D21-2228-14	SHAFT	
450	1A		D21-2229-04	SHAFT	
451	1A		D23-0925-24	RETAINER	
452	2A		D32-0614-04	STOPPER	
453	1B		D39-0223-05	DAMPER	
454	2B		D39-0224-05	DAMPER	
455	3B		F09-1246-04	SHEET	
458	3B		F09-1266-14	SHEET	
460	2B		G01-2770-04	EXTENSION SPRING	
461	3A		G01-2771-04	EXTENSION SPRING	
462	3A		G01-2772-24	EXTENSION SPRING	
463	3A		G01-2773-14	EXTENSION SPRING	
464	3A		G01-2774-34	EXTENSION SPRING	
465	1B		G01-2775-04	TORSION COIL SPRING	
466	1B		G01-2776-14	TORSION COIL SPRING	
467	3B		G01-2777-24	TORSION COIL SPRING	
469	2A		G01-2844-04	EXTENSION SPRING	
470	2A		G02-1231-04	FLAT SPRING	
471	2B		G02-1232-24	FLAT SPRING	
472	2A		G02-1241-24	FLAT SPRING	
475	2A		J11-0613-13	CLAMPER	
476	3A		J19-4678-13	HOLDER	
477	2B		J19-4679-24	HOLDER	
478	3B		J21-7684-13	MOUNTING HARDWARE	
479	2B		J21-7686-13	MOUNTING HARDWARE	
480	1B		J21-7690-03	MOUNTING HARDWARE	
481	3A		J31-1032-04	COLLAR	
482	3A		J84-0107-05	FLEXIBLE PRINTED WIRING BOARD	
483	1A		J90-0757-22	GUIDE	
A	2A		N09-4249-05	MACHINE SCREW (M1.7X2.5,LOCK)	
B	1D		N09-4172-05	TAPPING SCREW (2X3.5)	
C	2B		N09-4202-05	STEPPED SCREW	
D	2A		N38-2020-46	PAN HEAD MACHIN SCREW	
F	3B		N19-2023-04	FLAT WASHER	
G	2A		N19-2058-04	FLAT WASHER	
H	3A		N19-2093-04	FLAT WASHER	
DM1	3B		T42-0764-04	DC MOTOR ASSY	
DM2	3B		T42-0763-04	DC MOTOR ASSY	
DPU1	2B		T25-0215-05	OPTICAL PICKUP HEAD	

K: KDC-9015 **E:** KDC-8080R

⚠ indicates safety critical components.