9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

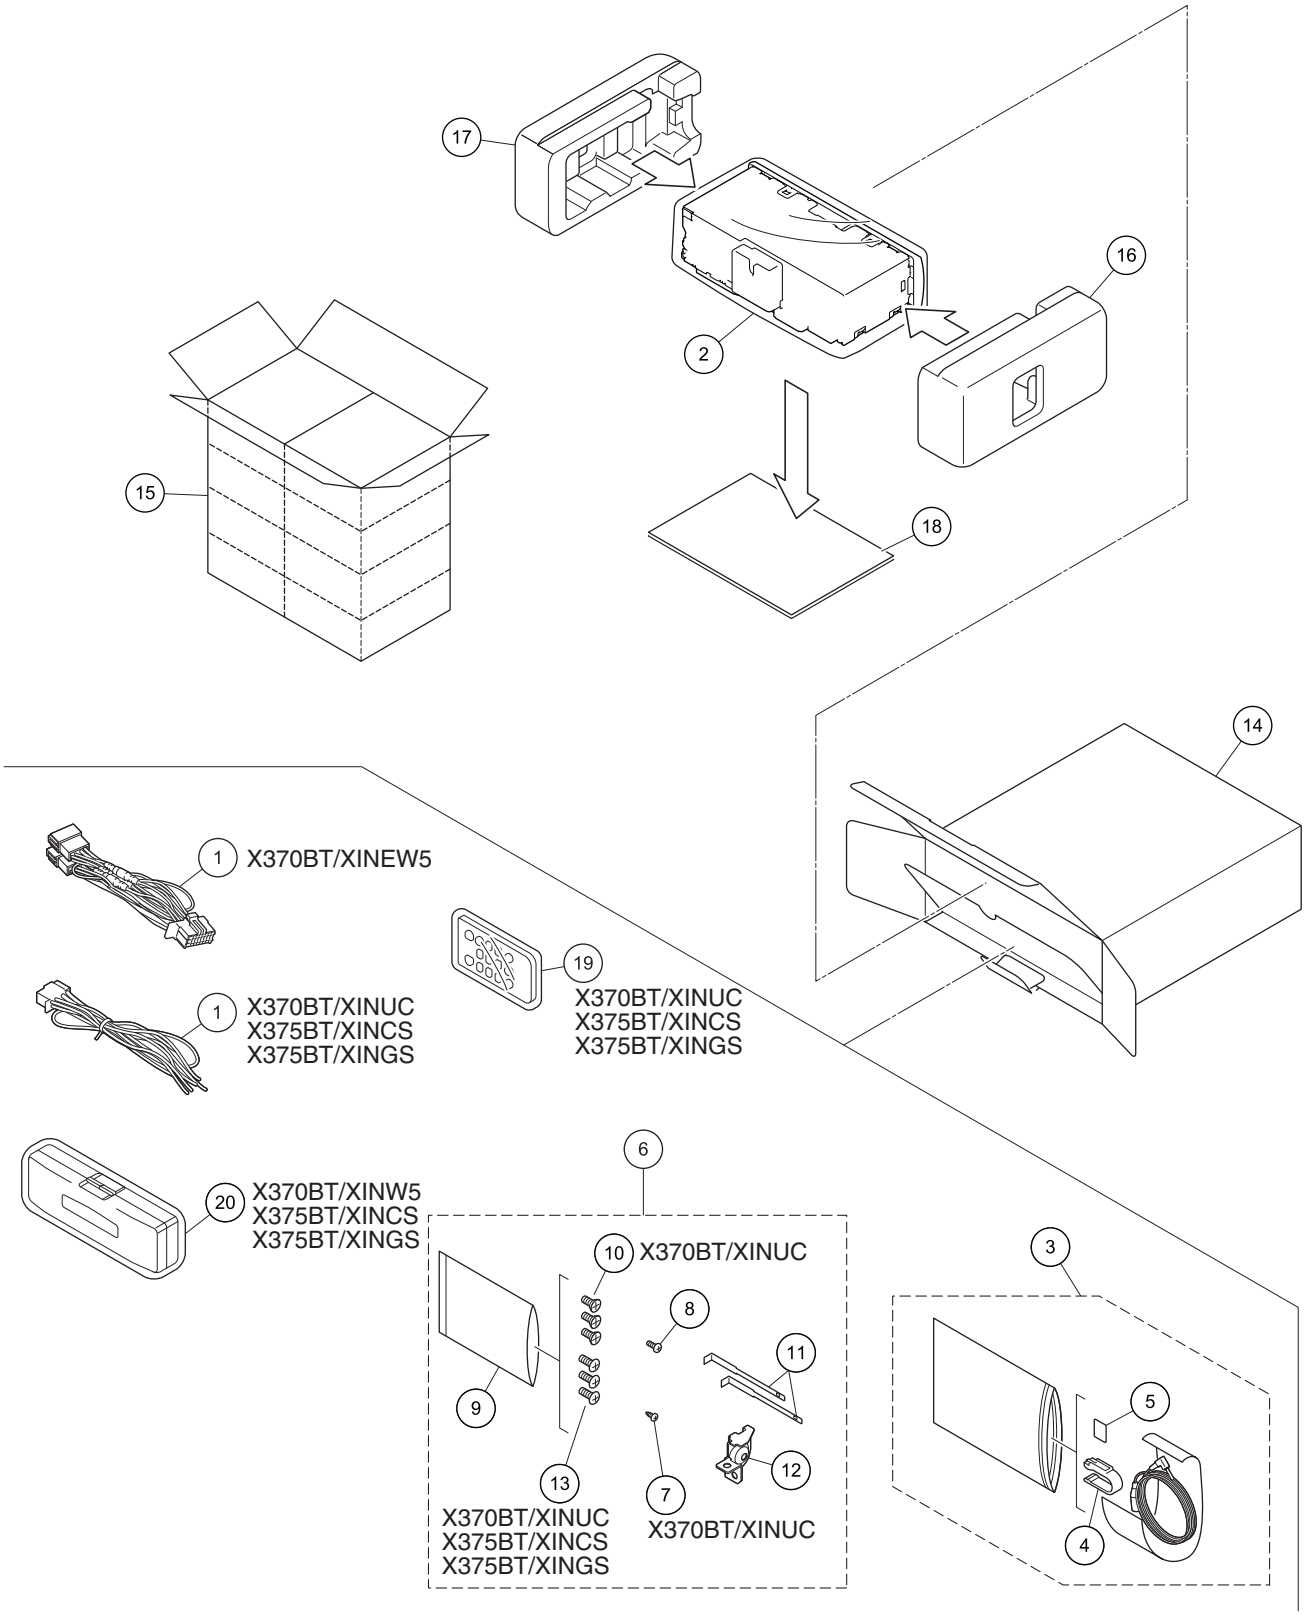

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	See Contrast table (2)
	2	Polyethylene Bag	CEG1260
	3	Microphone Assy	CPM1083
	4	Holder	CZN7192
	5	Cushion	CZN7193
*	6	Accessory Assy	See Contrast table (2)
	7	Screw	See Contrast table (2)
	8	Screw	BSZ26P060FTC
	9	Polyethylene Bag	CEG1160
	10	Screw	See Contrast table (2)
	11	Handle	QNC3021
	12	Bracket	QNC3086
	13	Screw	See Contrast table (2)
	14	Unit Box	See Contrast table (2)
	15	Contain Box	See Contrast table (2)
	16	Protector	QHP3037
	17	Protector	QHP3038
	18-1	Owner's Manual	See Contrast table (2)
*	18-2	Warranty Card	See Contrast table (2)
	19	Card Remote Control Unit	See Contrast table (2)
	20	Case Assy	See Contrast table (2)

(2) CONTRAST TABLE

MVH-X370BT/XINUC, MVH-X370BT/XINEW5, MVH-X375BT/XINCS, and MVH-X375BT/XINGS are constructed the same except for the following:

Mark	No.	Description	MVH-X370BT /XINUC	MVH-X370BT /XINEW5	MVH-X375BT /XINCS	MVH-X375BT /XINGS
	1	Cord Assy	CDP1480	QDP3071	CDP1480	CDP1480
*	6	Accessory Assy	QEA3163	QEA3164	QEA3165	QEA3165
	7	Screw	BPZ20P060FTC	Not used	Not used	Not used
	10	Screw	CRZ50P090FTC	Not used	Not used	Not used
	13	Screw	TRZ50P080FTC	Not used	TRZ50P080FTC	TRZ50P080FTC
	14	Unit Box	QHG3715	QHG3712	QHG3713	QHG3714
	15	Contain Box	QHL3715	QHL3712	QHL3713	QHL3714
	18-1	Owner's Manual	QRD3284	QRD3283	QRD3285	QRD3286
*	18-2	Warranty Card	QRY3001	CRY1376	Not used	Not used
	19	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044
	20	Case Assy	Not used	QXA3129	QXA3129	QXA3129

Owner's Manual,Installation Manual

Part No.	Language
QRD3283	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3284	English, French, Spanish(Espanol)
QRD3285	English, Spanish(Espanol), Portuguese(B)
QRD3286	English, Traditional Chinese, Arabic, Persian

9.2 EXTERIOR

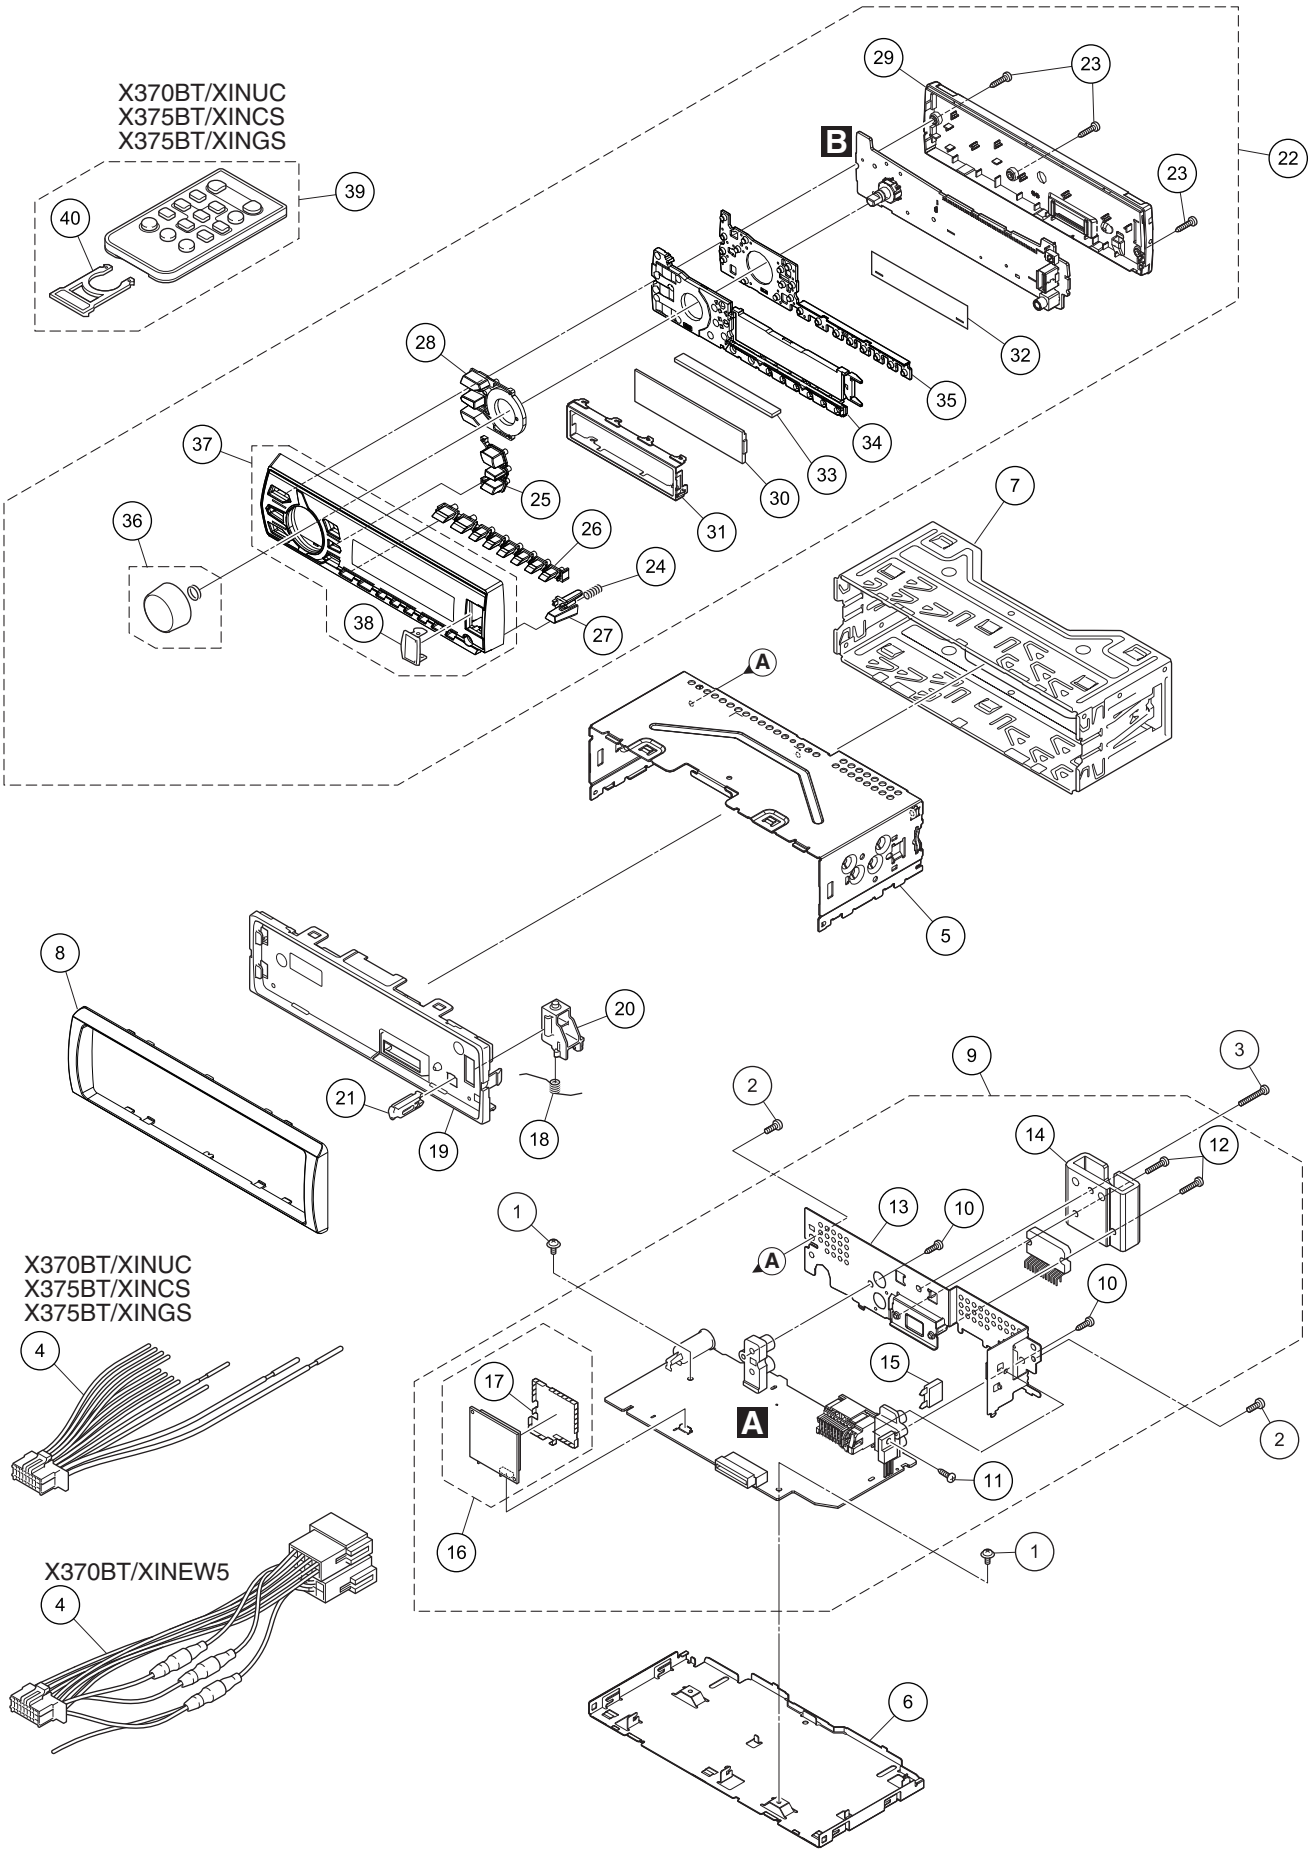
X370BT/XINUC
X375BT/XINCS
X375BT/XINGS
X370BT/XINUC
X375BT/XINCS
X375BT/XINGS
X370BT/XINEW5

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ26P160FTC
	4	Cord Assy	See Contrast table (2)
	5	Chassis	QNA3024
	6	Case	QNB3030
	7	Holder	QNC3020
	8	Panel	QNS3568
	9	Tuner Amp Unit	See Contrast table (2)
	10	Screw	BPZ26P080FTC
	11	Screw	BSZ26P060FTC
	12	Screw	BSZ26P160FTC
	13	Holder	See Contrast table (2)
	14	Heat Sink	QNR3012
⚠	15	Fuse (10 A)	YEK5001
	16	BT Module	YWX5056
	17	Shield Case	YNC5123
	18	Spring	QBH3001
	19	Panel	QNS3289
	20	Arm	QNV3025
	21	Button	QNV3026
	22	Datachable Grille Assy	See Contrast table (2)
	23	Screw	BPZ20P100FTC
	24	Spring	CBH2210
	25	Button (DISP)	QAC3179
	26	Button (< > 1-6)	QAC3180
	27	Button (DETACH)	QAC3181
	28	Button (SRC, BAND)	QAC3184
	29	Cover	QNS3767
	30	LCD (V1801)	CAW2055
	31	Holder	QNC3067
	32	Sheet	QNM3128
	33	Rubber Connector	QNV3071
	34	Lighting Conductor	QNV3098
	35	Contact Rubber	QNV3102
	36	Knob Unit	QXA3670
	37	Grille Unit	See Contrast table (2)
	38	Door	QAT3014
	39	Card Remote Control Unit	See Contrast table (2)
	40	Cover	See Contrast table (2)

(2) CONTRAST TABLE

MVH-X370BT/XINUC, MVH-X370BT/XINEW5, MVH-X375BT/XINCS, and MVH-X375BT/XINGS are constructed the same except for the following:

Mark	No.	Description	MVH-X370BT /XINUC	MVH-X370BT /XINEW5	MVH-X375BT /XINCS	MVH-X375BT /XINGS
	4	Cord Assy	CDP1480	QDP3071	CDP1480	CDP1480
	9	Tuner Amp Unit	QWM3931	QWM3930	QWM3932	QWM3933
	13	Holder	QNC3100	QNC3091	QNC3100	QNC3100
	22	Datachable Grille Assy	QXA4185	QXA4182	QXA4183	QXA4184
	37	Grille Unit	QXA4200	QXA4197	QXA4199	QXA4198
	39	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044
	40	Cover	CNS7068	Not used	CNS7068	CNS7068

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:MVH-X370BT/XINUC

B:MVH-X370BT/XINEW5

C:MVH-X375BT/XINCS

D:MVH-X375BT/XINGS

Unit Number : QWM3931(A)

Unit Number : QWM3930(B)

Unit Number : QWM3932(C)

Unit Number : QWM3933(D)

Unit Name : Tuner Amp Unit

Unit Number : (A,C,D)

Unit Number : (B)

Unit Name : Keyboard Unit

A

Unit Number : QWM3931(A)

Unit Number : QWM3930(B)

Unit Number : QWM3932(C)

Unit Number : QWM3933(D)

Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 201	(A,54,41) E-VOL IC	PM9013A
IC 301	(A,82,70) Power AMP IC	PA2032A
IC 401	(A,15,22) Tuner IC	TEF6686HN
IC 451	(A,30,14) Regulator IC	MM3571A33P
IC 501	(A,50,28) IC	337S3959
IC 531	(A,137,25) DC/DC CONV IC	KBD9876EFJ
IC 532	(A,104,15) Power Supply IC	BD2232G-G
IC 601	(A,70,24) IC	R5S726A0D216FP
IC 671	(A,87,17) IC	S-80827CNMC-B8M
IC 681	(A,69,41) Flash Memory IC(A)	PEB153A8 *(NSP)
	(A,69,41) Flash Memory IC(B,C,D)	PEB154A8 *(NSP)
IC 801	(A,94,23) L-MOS And Gate	TC7SET08FUS1
IC 821	(A,105,26) IC	S-1200B53-M5
IC 881	(A,101,35) Regulator IC	S-1170B33UC-OTS
IC 882	(A,97,29) Regulator IC	S-1155B12-U5
IC 941	(A,68,6) Regulator IC	MM3479A18P
IC 951	(A,78,8) Regulator IC	MM3411A33N
IC 991	(A,92,46) Regulator IC	BD00GA3EEFJ
Q 251	(A,34,59) Transistor(B)	EMH53
Q 252	(A,46,59) Transistor	EMH53
Q 301	(A,72,50) Transistor	EMD52
Q 501	(A,44,31) Transistor	LSAR523UB
Q 691	(A,102,45) Transistor	HN1C01FU
Q 851	(A,119,33) Transistor	2SCR514PGZE
Q 853	(A,114,35) Transistor	EMD52
Q 861	(A,161,60) Transistor	KTD2092
Q 862	(A,154,55) Transistor	EMD52
Q 876	(A,120,26) Transistor	2SAR502UB
Q 877	(A,117,24) Transistor	LTC143EUB
Q 911	(A,92,51) Transistor(D)	RN4982
D 531	(A,137,30) Diode	RB056L-40
D 532	(A,145,35) Diode	CMS30I30A
D 601	(A,84,36) Diode(A,B)	RB751SM-40
D 602	(A,88,36) Diode(A,B)	RB751SM-40
D 691	(A,100,50) Diode	DZ2J075M0
D 692	(A,107,56) Diode(A,C,D)	DZ2J068M0
	(A,107,56) Diode(B)	DZ2J075M0
D 802	(A,93,11) Diode	DZ2S068C
D 803	(A,111,11) Diode	DZ2S068C
D 807	(A,113,11) Diode	DZ2S068C
D 808	(A,117,11) Diode	DZ2S068C
D 809	(A,114,11) Diode	DZ2S068C
D 810	(A,116,11) Diode	DZ2S068C
D 851	(A,116,31) Diode	DZ2J100M0
D 861	(A,145,38) Diode	D1F60-5053
D 862	(A,155,60) Diode	DZ2J068M0
D 863	(A,115,39) Diode	CRG03
D 901	(A,141,59) Diode	D1F60-5053
D 902	(A,141,63) Diode	D1F60-5053
D 982	(A,93,59) Diode	CRG03

Circuit Symbol and No.		Part No.
L 202	(A,57,34) Inductor	CTF1793
L 402	(A,10,27) Inductor(A,B,C)	LCTAW150J2520
	(A,10,27) Chip Coil(D)	LCTAW3R3J2520
L 403	(A,7,29) Chip Coil(D)	LCTAWR27J2520
L 404	(A,6,34) Inductor(A,B,C)	CTF1389
L 408	(A,18,40) Inductor	LCMAR27J1608
L 410	(A,9,34) Inductor(D)	ATL7033
L 531	(A,129,32) Inductor	CTH1584
L 801	(A,112,15) Inductor	CTF1713
L 901	(A,138,50) Choke Coil 600 uH	CTH1221
T 401	(A,16,34) Variable Coil	CTC1215
X 401	(A,27,22) Crystal Resonator 9.216 MHz	CSS1864
X 601	(A,85,23) Crystal Resonator 12.0 MHz	CSS1847
X 603	(A,77,37) Resonator 16.93 MHz	CSS1794
⚠ P251	(A,59,64) Fuse 3.0 A	CEK1386
P 402	(A,9,42) Absorber	HSPC16701B02
VA801	(A,110,13) Varistor	MLV0402ES012V0010N
VA802	(A,101,11) Varistor	MLV0402ES012V0010N
CN801	(A,105,2) Connector	CKS6452
CN961	(A,53,10) Connector	CKS6346
JA251	(A,44,68) Pin Jack(A,C,D)	YKB5010
	(A,44,68) Jack(B)	CKB1109
JA401	(A,7,60) Antenna Jack	YKS5041
JA901	(A,119,70) Plug	CKM1624
JA912	(A,145,77) Jack	CKN1103
	BT Module	YWX5056
⚠	Fuse (10 A)	YEK5001

RESISTORS

R 251	(A,38,57) (B)	RS1/16SS821J
R 252	(A,29,57) (B)	RS1/16SS821J
R 253	(A,38,58) (B)	RS1/16SS223J
R 254	(A,29,58) (B)	RS1/16SS223J
R 255	(A,50,57)	RS1/16SS821J
R 256	(A,42,57)	RS1/16SS821J
R 257	(A,50,58)	RS1/16SS223J
R 258	(A,42,58)	RS1/16SS223J
R 305	(A,73,49)	RS1/16SS103J
R 306	(A,75,53)	RS1/16SS221J
R 307	(A,74,51)	RS1/16SS223J
R 308	(A,67,64)	RS1/16SS103J
R 401	(A,16,30)	RS1/16SS0R0J
R 402	(A,15,30)	RS1/16SS0R0J
R 403	(A,8,27) (A,B,C)	RS1/16SS391J
	(A,8,27) (D)	RS1/16SS101J
R 404	(A,8,36)	RS1/16SS105J
R 405	(A,8,39)	RS1/16SS105J
R 406	(A,17,18)	RS1/16SS101J
R 407	(A,18,18)	RS1/16SS101J
R 408	(A,22,18)	RS1/16SS103J
R 410	(A,21,18)	RS1/16SS103J
R 417	(A,13,30)	RS1/16SS0R0J
R 420	(A,23,28)	RS1/16SS0R0J
R 422	(A,14,15)	RS1/16SS0R0J
R 430	(A,13,13)	RS1/10SR0R0J
R 437	(A,20,15)	RS1/16SS472J
R 438	(A,16,15)	RS1/16SS472J
R 439	(A,24,22)	RS1/16SS0R0J
R 451	(A,32,23)	RS1/16SS0R0J
R 501	(A,46,30)	RS1/16SS473J
R 502	(A,49,32)	RS1/16SS222J

Circuit Symbol and No.		Part No.
R 503	(A,50,25)	RS1/16SS222J
R 504	(A,46,27)	RS1/16SS272J
R 505	(A,46,28)	RS1/16SS472J
R 506	(A,44,33)	RS1/16SS472J
R 507	(A,53,29)	RS1/16SS101J
R 508	(A,53,27)	RS1/16SS101J
R 531	(A,129,24)	RS1/16SS0R0J
R 532	(A,130,23)	RS1/16SS1803D
R 533	(A,130,25)	RS1/16SS4302D
R 534	(A,134,18)	RS1/10SR471J
R 535	(A,131,25)	RS1/16SS682J
R 603	(A,69,12)	RS1/16SS473J
R 604	(A,96,16)	RS1/16SS473J
R 605	(A,85,33)	RS1/16SS473J
R 607	(A,83,24)	RS1/16SS152J
R 608	(A,85,46)	RS1/16SS473J
R 609	(A,87,30)	RS1/16SS473J
R 610	(A,87,34) (A,B,C)	RS1/16SS103J
	(A,87,34) (D)	RS1/16SS1002F
R 611	(A,84,34)	RS1/16SS103J
R 612	(A,82,36) (B)	RS1/16SS473J
	(A,82,36) (D)	RS1/16SS103J
R 613	(A,82,35) (A,C,D)	RS1/16SS473J
R 614	(A,82,42)	RS1/16SS473J
R 615	(A,85,44)	RAB4CQ473J
R 616	(A,73,36)	RS1/16SS221J
R 617	(A,72,35)	RS1/16SS221J
R 618	(A,71,36)	RS1/16SS221J
R 619	(A,70,36)	RS1/16SS221J
R 620	(A,65,38)	RS1/16SS221J
R 621	(A,68,35)	RS1/16SS221J
R 622	(A,66,36)	RS1/16SS473J
R 623	(A,64,44)	RS1/16SS473J
R 624	(A,63,37)	RS1/16SS101J
R 625	(A,58,32)	RS1/16SS102J
R 627	(A,81,45)	RS1/16SS473J
R 628	(A,80,45)	RS1/16SS473J
R 629	(A,56,31)	RS1/16SS473J
R 631	(A,55,25)	RS1/16SS104J
R 632	(A,58,26)	RS1/16SS101J
R 633	(A,59,24)	RS1/16SS101J
R 635	(A,59,23)	RS1/16SS101J
R 636	(A,55,23)	RS1/16SS102J
R 637	(A,57,21)	RS1/16SS102J
R 638	(A,55,20)	RS1/16SS102J
R 639	(A,48,21)	RS1/16SS473J
R 640	(A,59,17)	RS1/16SS222J
R 641	(A,59,15)	RS1/16SS103J
R 642	(A,55,19)	RS1/16SS473J
R 643	(A,80,14)	RS1/16SS473J
R 644	(A,81,14)	RS1/16SS473J
R 645	(A,82,14)	RS1/16SS473J
R 646	(A,86,32)	RS1/16SS473J
R 647	(A,83,31)	RS1/16SS473J
R 648	(A,64,35)	RS1/16SS473J
R 650	(A,91,15)	RS1/16SS473J
R 651	(A,89,26)	RS1/16SS153J
R 652	(A,89,28)	RS1/16SS153J
R 653	(A,56,27)	RS1/16SS473J
R 661	(A,76,34)	RS1/16SS222J
R 664	(A,46,22)	RS1/16SS473J

Circuit Symbol and No.		Part No.
R 665	(A,57,18)	RS1/16SS222J
R 667	(A,72,12)	RS1/16SS103J
R 668	(A,93,15)	RS1/16SS473J
R 670	(A,80,12) (B,C,D)	RS1/16SS473J
R 671	(A,83,19)	RS1/16SS104J
R 681	(A,70,45)	RS1/16SS473J
R 682	(A,70,37)	RS1/16SS473J
R 683	(A,75,42)	RS1/16SS473J
R 684	(A,64,41)	RS1/16SS473J
R 685	(A,67,45)	RS1/16SS473J
R 691	(A,102,47)	RS1/16SS103J
R 692	(A,107,44)	RS1/16SS104J
R 693	(A,104,47)	RS1/16SS473J
R 694	(A,105,47)	RS1/16SS473J
R 695	(A,105,56) (A)	RS1/10SR682J
	(A,105,56) (B)	RS1/10SR333J
R 696	(A,111,57) (A)	RS1/4SA102J
	(A,111,57) (B)	RS1/4SA122J
R 801	(A,120,20)	RS1/10SR222J
R 803	(A,120,16)	RS1/10SR222J
R 805	(A,91,19)	RS1/10SR222J
R 806	(A,98,22)	RS1/10SR222J
R 807	(A,89,13)	RS1/10SR222J
R 808	(A,86,12)	RS1/16SS822J
R 809	(A,99,14)	RS1/10SR222J
R 810	(A,97,14)	RS1/10SR222J
R 811	(A,117,17)	RS1/10SR223J
R 812	(A,114,17)	RS1/10SR223J
R 813	(A,117,20)	RS1/10SR101J
R 814	(A,114,20)	RS1/10SR101J
R 815	(A,115,20)	RS1/10SR101J
R 816	(A,111,20)	RS1/10SR220J
R 817	(A,113,20)	RS1/10SR220J
R 852	(A,118,37)	RS1/10SR102J
R 854	(A,120,23)	RS1/10SR473J
R 861	(A,154,51)	RS1/10SR122J
R 862	(A,155,51)	RS1/10SR223J
R 880	(A,117,27)	RS1/16SS103J
R 881	(A,116,27)	RS1/16SS272J
R 882	(A,118,28)	RS1/16SS473J
R 883	(A,101,31)	RS1/16SS473J
R 911	(A,149,59) (A,B,C)	RS1/10SR102J
	(A,149,59) (D)	RS1/10SR1001F
R 912	(A,146,59)	RS1/10SR102J
R 915	(A,146,60) (D)	RS1/16SS471J
R 961	(A,65,11)	RS1/16SS221J
R 962	(A,60,12)	RS1/16SS221J
R 963	(A,67,12)	RS1/16SS221J
R 964	(A,59,3)	RS1/16SS102J
R 965	(A,58,3)	RS1/16SS102J
R 966	(A,56,4)	RS1/16SS222J
R 967	(A,70,10)	RS1/16SS101J
R 968	(A,71,12)	RS1/16SS101J
R 969	(A,57,15)	RS1/16SS102J
R 970	(A,60,3)	RS1/16SS222J
R 991	(A,88,46)	RS1/16SS2702D
R 992	(A,88,45)	RS1/16SS4301D

CAPACITORS

Circuit Symbol and No.		Part No.
C 201	(A,54,47)	CCSSCH151J50
C 202	(A,52,50) 10 uF	DCH1201
C 203	(A,55,47)	CKSSYB104K10
C 204	(A,56,47)	CKSSYB104K10
C 205	(A,57,47)	CKSSYB104K10
C 206	(A,58,52)	CEVW470M16
C 207	(A,65,53) 10 uF	DCH1201
C 210	(A,64,49)	CKSSYB104K16
C 215	(A,44,45)	CKSRYB105K10
C 216	(A,46,45)	CKSRYB105K10
C 217	(A,45,41)	CKSRYB105K10
C 218	(A,45,42)	CKSRYB105K10
C 220	(A,60,33) 10 uF	DCH1201
C 221	(A,59,35)	CKSSYB104K10
C 222	(A,62,45) 10 uF	DCH1201
C 229	(A,45,37)	CKSRYB105K10
C 230	(A,45,40)	CKSRYB105K10
C 232	(A,51,35)	CKSSYB104K10
C 233	(A,51,34)	CKSSYB104K10
C 234	(A,54,33) 10 uF	DCH1201
C 235	(A,53,35)	CCSSCH151J50
C 239	(A,62,49) 1 uF	DCH1246
C 251	(A,38,56) 10 uF(B)	DCH1201
C 252	(A,30,56) 10 uF(B)	DCH1201
C 253	(A,38,59) (B)	CCSSCH101J50
C 254	(A,29,59) (B)	CCSSCH101J50
C 255	(A,49,56) 10 uF	DCH1201
C 256	(A,42,56) 10 uF	DCH1201
C 257	(A,50,59)	CCSSCH101J50
C 258	(A,42,59)	CCSSCH101J50
C 259	(A,28,62)	CCSRCH102J50
C 260	(A,28,63)	CKSSYB104K10
C 261	(A,28,64)	CKSSYB103K16
C 301	(A,77,59)	CKSRYB474K10
C 302	(A,88,59)	CKSRYB474K10
C 303	(A,80,59)	CKSRYB474K10
C 304	(A,84,59)	CKSRYB474K10
C 309	(A,64,64) 2.2 uF	CCG1205
C 312	(A,68,59) 10 uF/16 V	DCH1263
C 316	(A,78,53)	CKSRYB105K10
C 324	(A,90,57)	CKSRYB104K16
C 325	(A,113,50) 2 200 uF/16 V	CCH2040
C 405	(A,23,27)	CKSSYB102K50
C 409	(A,18,28)	CKSSYB224K6R3
C 410	(A,17,39)	CCSSCH220J50
C 411	(A,15,39)	CCSSCH331J50
C 414	(A,10,24)	CKSSYB102K50
C 416	(A,6,27) (D)	CCSSCH120J50
C 417	(A,5,27) (D)	CCSSCK1R0C50
C 418	(A,10,34) (D)	CCSSCK2R0C50
C 419	(A,7,34) (D)	CCSSCK1R0C50
C 420	(A,8,38)	CCSSCH471J50
C 422	(A,10,23)	CKSSYB152K50
C 425	(A,21,24)	CCSSCH390J50
C 428	(A,14,27)	CKSSYB104K10
C 430	(A,17,28)	CKSSYB102K50
C 434	(A,13,41)	CCSSCH100D50
C 442	(A,13,17) 10 uF	DCH1201
C 452	(A,24,14)	CKSRYB104K16
C 453	(A,35,13)	CKSRYB105K10
C 458	(A,8,18)	CCSSCH102J50
C 459	(A,24,31)	CKSRYB105K10

Circuit Symbol and No.		Part No.
C 501	(A,47,30)	CKSSYB104K10
C 502	(A,47,28)	CKSSYB104K10
C 531	(A,142,25)	CKSSYB103K16
C 532	(A,127,19)	CEVQW221M6R3
C 534	(A,125,27)	CKSRYB105K10
C 535	(A,135,20) 10 uF	DCH1201
C 536	(A,132,24)	CKSSYB682K25
C 539	(A,142,28) 4.7 uF	CCG1222
C 540	(A,144,27)	CKSRYB105K16
C 541	(A,150,26)	CEVW471M16
C 542	(A,107,17)	CKSRYB105K10
C 545	(A,107,12)	CKSRYB105K10
C 601	(A,59,14)	CKSSYB104K10
C 602	(A,68,12)	CKSSYB102K50
C 603	(A,72,11)	CKSSYB104K10
C 604	(A,81,9)	CKSSYB102K50
C 605	(A,81,13)	CKSSYB104K10
C 606	(A,85,21)	CCSSCH120J50
C 607	(A,84,25)	CCSSCH120J50
C 608	(A,81,21)	CKSSYB104K10
C 609	(A,81,22)	CKSSYB104K10
C 610	(A,81,24)	CKSSYB104K10
C 611	(A,81,33)	CKSSYB104K10
C 612	(A,81,32)	CKSSYB104K10
C 613	(A,73,35)	CKSSYB104K10
C 614	(A,67,35)	CKSSYB104K10
C 615	(A,61,37)	CCSSCH220J50
C 616	(A,62,36)	CKSSYB104K10
C 617	(A,63,34)	CKSSYB104K10
C 618	(A,57,32)	CKSSYB104K10
C 619	(A,60,27)	CKSSYB104K10
C 620	(A,56,22)	CKSSYB104K10
C 621	(A,57,19)	CKSSYB104K10
C 628	(A,82,18)	CKSSYB104K10
C 629	(A,59,29)	CCSSCH220J50
C 630	(A,57,26)	CCSSCH220J50
C 631	(A,57,23)	CCSSCH220J50
C 632	(A,79,37)	CCSSCH120J50
C 633	(A,75,37)	CCSSCH120J50
C 638	(A,62,40)	CKSSYB104K10
C 639	(A,39,24)	CCSRCH101J50
C 641	(A,44,26)	CCSSCH330J50
C 672	(A,87,19)	CKSRYB105K10
C 681	(A,77,43)	CKSSYB104K10
C 683	(A,75,40)	CCSSCJ3R0C50
C 691	(A,105,57)	CKSRYB104K16
C 693	(A,76,49)	CCSSCH101J50
C 801	(A,122,13)	CCSRCH102J50
C 805	(A,120,12)	CKSRYB104K16
C 806	(A,98,11)	CCSRCH221J50
C 807	(A,97,11)	CCSRCH221J50
C 808	(A,100,18)	CKSRYB104K16
C 810	(A,107,11)	CKSRYB104K16
C 811	(A,116,15)	CKSRYB105K10
C 813	(A,98,24)	CKSSYB104K10
C 841	(A,109,25) 10 uF	DCH1201
C 842	(A,101,25) 10 uF	DCH1201
C 852	(A,120,22)	CCSRCH101J50
C 853	(A,114,29)	CKSSYB104K16
C 861	(A,155,38)	XCEAT102M16
C 862	(A,156,59)	CKSSYB104K16
C 864	(A,155,64) 10 uF	DCH1201
C 883	(A,105,36) 10 uF	DCH1201
C 884	(A,93,28) 10 uF	DCH1201
C 885	(A,96,32) 10 uF	DCH1201
C 886	(A,97,36) 10 uF	DCH1201
C 914	(A,151,66)	CKSSYB102K50
C 942	(A,65,8) 4.7 uF	CCG1212
C 943	(A,72,7) 4.7 uF	CCG1212
C 946	(A,71,4)	CKSSYB104K10
C 951	(A,76,5) 4.7 uF	CCG1212
C 954	(A,80,5) 4.7 uF	CCG1212
C 961	(A,42,17)	CEVW221M4
C 962	(A,46,13) 1 uF	DCH1246
C 963	(A,57,3) 1 uF	DCH1246
C 966	(A,64,8) 4.7 uF	CCG1212
C 968	(A,59,13)	CCSSCH270J50
C 970	(A,24,4)	CKSSYB104K10
C 971	(A,28,46)	CKSRYB103K50
C 991	(A,97,47)	CKSRYB105K16
C 992	(A,85,49)	CKSRYB105K16

B

Unit Number : (A,C,D)
Unit Number : (B)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,83,20) IC	PD6586A8
IC 1941	(A,156,37) Remote IC(A,C,D)	SIR8440B5
Q 1951	(B,15,13) Transistor(A,C,D)	LTC014EEB
Q 1952	(B,15,17) Transistor(B)	LTC014EEB
D 1951	(A,63,20) White LED	SWBA05(FI231719)
D 1953	(A,54,15) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1954	(A,50,7) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1955	(A,53,25) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1956	(A,58,3) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1957	(A,72,3) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1958	(A,86,3) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1959	(A,96,3) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1960	(A,107,3) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1961	(A,117,3) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1962	(A,127,3) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1963	(A,138,3) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1964	(A,12,31) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1965	(A,12,6) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1966	(A,10,18) Blue LED(A,C,D)	FC-F1608BK-470H5
D 1968	(A,10,17) Red LED(B)	SML-D12V8W(PQ)
D 1969	(A,52,7) Red LED(B)	SML-D12V8W(PQ)
D 1970	(A,51,30) Red LED(B)	SML-D12V8W(PQ)
D 1971	(A,12,29) Red LED(B)	SML-D12V8W(PQ)
D 1972	(A,12,5) Red LED(B)	SML-D12V8W(PQ)
D 1973	(A,73,3) Red LED(B)	SML-D12V8W(PQ)
D 1974	(A,59,3) Red LED(B)	SML-D12V8W(PQ)
D 1975	(A,108,3) Red LED(B)	SML-D12V8W(PQ)
D 1976	(A,98,3) Red LED(B)	SML-D12V8W(PQ)
D 1977	(A,87,3) Red LED(B)	SML-D12V8W(PQ)
D 1978	(A,139,3) Red LED(B)	SML-D12V8W(PQ)

Circuit Symbol and No.		Part No.
D 1979	(A,129,3) Red LED(B)	SML-D12V8W(PQ)
D 1980	(A,118,3) Red LED(B)	SML-D12V8W(PQ)
D 1981	(A,53,20) Red LED(B)	SML-D12V8W(PQ)
X 1801	(B,68,23) Ceramic Resonator 5.00 MHz	CSS1547
S 1839	(A,32,18) Encoder(MULTI-CONTROL)	CSD1193
CN1931	(B,107,7) Connector	CKS6451
JA1911	(A,157,23) Connector	CKS6488
JA1921	(A,153,7) Jack	CKN1090
V 1801	(A,140,30) LCD	CAW2055

RESISTORS

R 1801	(B,88,11)	RS1/10SR473J
R 1802	(B,63,19)	RS1/10SR473J
R 1803	(B,73,22)	RS1/10SR222J
R 1805	(B,46,25)	RS1/10SR473J
R 1806	(B,48,26)	RS1/10SR473J
R 1807	(B,46,29)	RS1/10SR473J
R 1808	(B,45,29)	RS1/10SR473J
R 1823	(B,44,25)	RS1/10SR273J
R 1921	(B,130,7)	RS1/10SR0R0J
R 1922	(B,127,10)	RS1/10SR0R0J
R 1923	(B,128,4)	RS1/10SR0R0J
R 1931	(B,45,16)	RS1/10SR222J
R 1932	(B,39,8)	RS1/10SR222J
R 1941	(B,127,23) (B)	RS1/10SR473J
R 1944	(B,131,25) (A,C,D)	RS1/10SR101J
R 1951	(B,57,19)	RS1/4SA151J
R 1952	(B,57,21)	RS1/4SA151J
R 1956	(B,50,20) (A,C,D)	RS1/10SR102J
R 1958	(B,25,8) (A,C,D)	RS1/10SR102J
R 1960	(B,16,20) (A,C,D)	RS1/10SR821J
R 1962	(B,86,7) (A,C,D)	RS1/10SR681J
R 1964	(B,51,13) (A,C,D)	RS1/10SR681J
R 1966	(B,139,17) (A,C,D)	RS1/10SR681J
R 1968	(B,22,30) (A,C,D)	RS1/10SR222J
R 1969	(B,20,8) (A,C,D)	RS1/10SR682J
R 1972	(B,20,11) (A,C,D)	RS1/10SR0R0J
R 1973	(B,18,16) (B)	RS1/10SR0R0J
R 1975	(B,10,17) (B)	RS1/10SR222J
R 1977	(B,48,13) (B)	RS1/8SQ561J
R 1980	(B,14,25) (B)	RS1/10SR182J
R 1981	(B,80,7) (B)	RS1/8SQ821J
R 1983	(B,57,10) (B)	RS1/8SQ331J
R 1985	(B,141,17) (B)	RS1/8SQ331J
R 1987	(B,54,20) (B)	RS1/4SA681J
R 1991	(B,47,7) (A,C,D)	RS1/10SR0R0J
R 1996	(B,60,7) (B)	RS1/10SR0R0J

CAPACITORS

C 1806	(B,66,22)	CKSRYB104K16
C 1807	(B,64,22)	CKSRYB105K10
C 1912	(B,142,20)	CKSRYB102K50
C 1941	(B,135,28) 10 uF(A,C,D)	DCH1201