TK-5810H(B)

PARTS LIST

∗ New Parts. ⚠ indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L: Scandinavia **K**: USA **P**: Canada
Y: PX (Far East, Hawaii) **T**: England **E**: Europe
Y: AAFES (Europe) **X**: Australia **M**: Other Areas

TK-5810H(B) (Y51-5120-XX)
FINAL UNIT (X45-3800-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-5810H(B) -10:K -11:K2					
3	3A		A01-2163-21	METALLIC CABINET(UPPER)	
4	1B	∗	A01-2164-31	METALLIC CABINET(LOWER)	
7	2A	∗	A10-4115-01	CHASSIS	
10	2C		B62-1938-00	INSTRUCTION MANUAL	
14	2B		E04-0167-15	RF COAXIAL RECEPTACLE(M)	
15	1A		E37-0179-05	LEAD WIRE WITH MINIPIN PLUG(X45-X57)	
16	1C		E37-0733-05	SHORT PLUG(SP) ACCESSORY	
17	2B		E37-0773-35	LEAD WIRE WITH CONNECTOR(D-SUB)	
18	2A,3A	∗	E37-1147-15	FLAT CABLE(X53:CN782-X57:CN600)	
20	2B	∗	E37-1150-25	LEAD WIRE WITH CONNECTOR(DC4P/ACC9P)	
22	1A,2A		E37-1156-05	FLAT CABLE(X45:CN2-X57:CN601)	
26	1B		F10-1488-02	SHIELDING PLATE(FINAL:X45)	
27	1A		F10-2265-13	SHIELDING COVER(VCO,TX-RX:X57)	
28	3A		F10-3012-04	SHIELDING PLATE(CONTROL:X53)	
29	1A		F10-3015-04	SHIELDING PLATE(X45 LPF)	
30	1A		F10-3039-04	SHIELDING PLATE(X45 DC)	
31	2A		F10-3040-04	SHIELDING PLATE(X45 ACC)	
32	1B	∗	F10-3069-12	SHIELDING PLATE(X57:TX-RX)	
33	3A		G02-0599-04	FLAT SPRING(AVR)	
34	3A		G02-0709-04	FLAT SPRING(AUDIO AMP)	
35	1A	∗	G02-1834-04	EARTH SPRING(FINAL AMP)	
36	2B		G10-1327-04	FIBROUS SHEET	
38	2A,1C		G11-4379-04	SHEET ACCESSORY	
39	2B		G13-2182-04	CUSHION(X57 SHELDING PLATE)	
40	1B		G13-2195-14	CUSHION(BOTTOM CABINET)	
41	2B		G53-1626-03	PACKING(D-SUB CAP)	
42	2B		G53-1657-04	PACKING(ANT)	
44	2B		G53-1659-04	PACKING(DC/ACC)	
47	3A		G53-1667-11	PACKING(TOP)	
48	1B		G53-1668-11	PACKING(BOTTOM)	
49	2B		G53-1687-04	PACKING(D-SUB)	
50	1C		H02-0626-04	INNER CARTON CASE	
51	2C		H12-3176-02	PACKING FIXTURE(HEAD-SPACE)	
53	2C,3C		H12-3185-02	PACKING FIXTURE(TOP,BOTTOM)	
58	3C	∗	H52-2129-02	ITEM CARTON CASE	
62	1B,3A,3B	∗	J39-0651-15	SPACER(TOP,BOTTOM,CABINET)	
A	2B		N09-2292-05	HEXAGON HEAD SCREW(D-SUB)	
B	1B,3A,3B		N32-3008-43	FLAT HEAD MACHINE SCREW(CABNET)	
E	1A		N67-3008-48	PAN HEAD SEMS SCREW(POWER MODULE)	
G	2B		N68-4006-48	PAN HEAD SEMS SCREW(DC TERMINAL)	
H	1A,1B,2A 3A,3B		N87-2606-48	BRAZIER HEAD TAPTITE SCREW(PCB)	
I	1A		N87-2612-48	BRAZIER HEAD TAPTITE SCREW(SHIELD)	
J	2B		N87-3008-48	BRAZIER HEAD TAPTITE SCREW(DC/ACC,ANT)	
63	1C		N99-2051-05	SCREW SET ACCESSORY	
65	3A		W09-0971-05	LITHIUM CELL(X53)	
FINAL UNIT (X45-3800-XX) -10:K -11:K2					
C1 -4			CK73GB1H471K	CHIP C 470PF	K
C7			CK73GB1H471K	CHIP C 470PF	K
C8			CK73FB1H471K	CHIP C 470PF	K
C10 ,11			CK73FB1H471K	CHIP C 470PF	K
C12			CK73GB1H471K	CHIP C 470PF	K
C14			CK73GB1H471K	CHIP C 470PF	K
C15			C93-0599-05	CHIP C 470PF	K
C16			CK73GB1H471K	CHIP C 470PF	K
C18			C93-0553-05	CHIP C 3.0PF C	K
C18			C93-0554-05	CHIP C 4.0PF C	K2
C19			C93-0552-05	CHIP C 2.0PF C	
C20 ,21			C93-0567-05	CHIP C 39PF J	
C24 ,25			C93-0599-05	CHIP C 470PF K	
C27			CK73GB1H471K	CHIP C 470PF K	
C29 ,30			C93-0555-05	CHIP C 5.0PF C	K
C29 ,30			C93-0560-05	CHIP C 10PF D	K2
C31			CK73GB1H471K	CHIP C 470PF K	
C32			CK73GB1C104K	CHIP C 0.10UF K	
C33 ,34			C93-0553-05	CHIP C 3.0PF C	K
C33 ,34			C93-0556-05	CHIP C 6.0PF D	K2
C35		∗	CM73F2H300F	CHIP C 30PF F	K
C35		∗	CM73F2H390F	CHIP C 39PF F	K2
C36			CM73F2H070D	CHIP C 7.0PF D	K
C36			CM73F2H120J	CHIP C 12PF J	K2
C37			CK73GB1H471K	CHIP C 470PF K	
C38 ,39		∗	CM73F2H300F	CHIP C 30PF F	K
C38 ,39		∗	CM73F2H390F	CHIP C 39PF F	K2
C40			CM73F2H070D	CHIP C 7.0PF D	K
C40			CM73F2H120J	CHIP C 12PF J	K2
C41		∗	CM73F2H300F	CHIP C 30PF F	K
C41		∗	CM73F2H390F	CHIP C 39PF F	K2
C42			C93-0599-05	CHIP C 470PF K	
C43			CM73F2H270F	CHIP C 27PF F	K
C43		∗	CM73F2H300F	CHIP C 30PF F	K2
C44			C93-0599-05	CHIP C 470PF K	
C45		∗	CM73F2H300F	CHIP C 30PF F	K2
C45 -47			CM73F2H270F	CHIP C 27PF F	K
C46 ,47			CM73F2H270F	CHIP C 27PF F	K2
C48 ,49			CM73F2H080C	CHIP C 8.0PF C	K
C48 ,49		∗	CM73F2H200C	CHIP C 20PF C	K2
C51 ,52			CK73FB1H471K	CHIP C 470PF K	
C53 ,54			CM73F2H020C	CHIP C 2.0PF C	K
C55 ,56			CK73FB1H103K	CHIP C 0.010UF K	
C57 ,58			CM73F2H020C	CHIP C 2.0PF C	K
C57 ,58		∗	CM73F2H100C	CHIP C 10PF C	K2
C59 ,60			CK73FB1E104K	CHIP C 0.10UF K	
C61 ,62			CM73F2H101J	CHIP C 100PF J	K2
C61 ,62			CM73F2H391J	CHIP C 390PF J	K
C63			CM73F2H020C	CHIP C 2.0PF C	K2
C63			CM73F2H1R5C	CHIP C 1.5PF C	K
C67			CM73F2H010C	CHIP C 1.0PF C	K
C67			CM73F2H040C	CHIP C 4.0PF C	K2
C68 ,69			CM73F2H020C	CHIP C 2.0PF C	K
C71			CK73GB1H471K	CHIP C 470PF K	
C73			CM73F2H330J	CHIP C 33PF J	K2
C73			CM73F2H470J	CHIP C 47PF J	K
C74 ,75			CK73FB1H471K	CHIP C 470PF K	
C77			CM73F2H270J	CHIP C 27PF J	K

PARTS LIST

FINAL UNIT (X45-3800-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C77			CM73F2H330J	CHIP C 33PF J	K2
C78			CK73GB1H471K	CHIP C 470PF K	
C80			C93-0599-05	CHIP C 470PF K	
C81			CK73FB1H471K	CHIP C 470PF K	
C82			CM73F2H040C	CHIP C 4.0PF C	K
C82		*	CM73F2H090C	CHIP C 9.0PF C	K2
C83			CM73F2H101J	CHIP C 100PF J	K2
C83			CM73F2H391J	CHIP C 390PF J	K
C84			CM73F2H040C	CHIP C 4.0PF C	
C85			CC73FCH1H101J	CHIP C 100PF J	
C87		*	CM73F2H070C	CHIP C 7.0PF C	
C88			CC73FCH1H080D	CHIP C 8.0PF D	
C89		*	CM73F2H070C	CHIP C 7.0PF C	K
C89			CM73F2H080C	CHIP C 8.0PF C	K2
C90			CK73FB1H471K	CHIP C 470PF K	
C93			CC73FCH1H020C	CHIP C 2.0PF C	K2
C94		*	CM73F2H070C	CHIP C 7.0PF C	K
C94			CM73F2H080C	CHIP C 8.0PF C	K2
C95			CK73FB1H471K	CHIP C 470PF K	
C96		*	CM73F2H070C	CHIP C 7.0PF C	
C98			CM73F2H050C	CHIP C 5.0PF C	K
C98		*	CM73F2H070C	CHIP C 7.0PF C	K2
C101			CK73FB1H471K	CHIP C 470PF K	
C102,103			CK73GB1H471K	CHIP C 470PF K	
C104			CK73GB1H103K	CHIP C 0.010UF K	
C105,106		*	CM73F2H100C	CHIP C 10PF C	K
C105,106		*	CM73F2H180C	CHIP C 18PF C	K2
C107,108			CM73F2H030C	CHIP C 3.0PF C	K
C109			CC73FCH1H470J	CHIP C 47PF J	K
C109			CC73FCH1H560J	CHIP C 56PF J	K2
C110			CK73FB1H471K	CHIP C 470PF K	
C116,117			CK73GB1H471K	CHIP C 470PF K	
C119,120			CK73GB1H471K	CHIP C 470PF K	
C122,123			CK73GB1H471K	CHIP C 470PF K	
C124			CC73GCH1H270J	CHIP C 27PF J	
C125,126			CK73GB1H471K	CHIP C 470PF K	
C131,132			CC73GCH1H270J	CHIP C 27PF J	
C133,134			CK73GB1H471K	CHIP C 470PF K	
C135			CK73GB1C104K	CHIP C 0.10UF K	
C136			CK73GB1H103K	CHIP C 0.010UF K	
C138			CC73GCH1H270J	CHIP C 27PF J	
C139,140			C92-0777-05	ELECTRO 1000UF 25WV	
C141,142			C90-4126-05	ELECTRO 680UF 25WV	
C143			C90-4126-05	ELECTRO 680UF 25WV	
CN1 ,4			E04-0154-05	PIN SOCKET	
CN5 ,6			E23-1116-05	RELAY TERMINAL	
CN3			E23-1118-05	TERMINAL	
W1		*	E37-1218-05	LEAD WIRE WITH CONNECTOR	
CN2			E40-6429-05	FLAT CABLE CONNECTOR	
L1 ,2			L92-0179-05	CHIP FERRITE	
L3 ,4			L34-4518-05	AIR-CORE COIL	
L5 ,6			L92-0179-05	CHIP FERRITE	
L7 ,8			L34-4520-05	AIR-CORE COIL	
L9 ,10			L92-0179-05	CHIP FERRITE	
L11 ,12			L34-4518-05	AIR-CORE COIL	
L13			L34-4523-05	AIR-CORE COIL	
L14 ,15		*	L34-4875-05	AIR-CORE COIL	

Ref. No.	Address	New parts	Parts No.	Description	Destination
L16 ,17		*	L34-4875-05	AIR-CORE COIL	
L18			L41-8275-33	SMALL FIXED INDUCTOR(0.082UH)	K
L18 ,19			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)	K2
L19			L41-1085-33	SMALL FIXED INDUCTOR(0.1UH)	K
R1			RK73FB2B821J	CHIP R 820 J 1/8W	K
R2			RK73FB2B000J	CHIP R 0.0 J 1/8W	K2
R2 ,3			RK73FB2B100J	CHIP R 10 J 1/8W	K
R4			RK73FB2B821J	CHIP R 820 J 1/8W	K
R5			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R6			RK73GB2A183J	CHIP R 18K J 1/10W	
R7			RK73GB2A821J	CHIP R 820 J 1/10W	K2
R7 -9			RK73GB2A000J	CHIP R 0.0 J 1/10W	K
R8 ,9			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2
R10			RK73GB2A103J	CHIP R 10K J 1/10W	
R11			RK73GB2A123J	CHIP R 12K J 1/10W	
R12			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R13 -15		*	RK73PB2H150J	CHIP R 15 J 1/2W	K2
R13 ,14		*	RK73PB2H150J	CHIP R 15 J 1/2W	K
R15 -18			RK73PB2H180J	CHIP R 18 J 1/2W	K
R16 ,17			RK73PB2H180J	CHIP R 18 J 1/2W	K2
R18		*	RK73PB2H150J	CHIP R 15 J 1/2W	K2
R19			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R20			RK73GB2A224J	CHIP R 220K J 1/10W	K2
R20			RK73GB2A274J	CHIP R 270K J 1/10W	K
R21			RK73GB2A101J	CHIP R 100 J 1/10W	
R22 ,23		*	RK73PB2H471J	CHIP R 470 J 1/2W	
R24			RK73GB2A224J	CHIP R 220K J 1/10W	K
R24			RK73GB2A274J	CHIP R 270K J 1/10W	K2
R25			RK73GB2A124J	CHIP R 120K J 1/10W	K
R25			RK73GB2A334J	CHIP R 330K J 1/10W	K2
R26			RK73GB2A332J	CHIP R 3.3K J 1/10W	K2
R26			RK73GB2A472J	CHIP R 4.7K J 1/10W	K
R27			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R28			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R29			RK73GB2A104J	CHIP R 100K J 1/10W	
R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2
R31			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R36			RK73GB2A104J	CHIP R 100K J 1/10W	
R39			RK73GB2A103J	CHIP R 10K J 1/10W	K2
R39			RK73GB2A224J	CHIP R 220K J 1/10W	K
R40			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R42			RK73FB2B560J	CHIP R 56 J 1/8W	K
R42			RK73FB2B820J	CHIP R 82 J 1/8W	K2
R45			RK73GB2A224J	CHIP R 220K J 1/10W	K2
R45			RK73GB2A563J	CHIP R 56K J 1/10W	K
R46			RK73FB2B221J	CHIP R 220 J 1/8W	K
R46			RK73FB2B331J	CHIP R 330 J 1/8W	K2
R47			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2
R47			RK73GB2A103J	CHIP R 10K J 1/10W	K
R49			RK73FB2B181J	CHIP R 180 J 1/8W	K2
R49			RK73FB2B391J	CHIP R 390 J 1/8W	K
R50			RK73FB2B680J	CHIP R 68 J 1/8W	K
R50			RK73FB2B820J	CHIP R 82 J 1/8W	K2
R54			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R55 ,56			RK73PB2H101J	CHIP R 100 J 1/2W	
R57			RK73FB2B224J	CHIP R 220K J 1/8W	
R59			RS14DB3F101J	FL-PROOF RS 100 J 3W	
VR1			R12-6431-05	TRIMMING POT.(220K)	

If a part reference number is listed in a shaded box, that part does not come with the PCB.

TK-5810H(B)

PARTS LIST

FINAL UNIT (X45-3800-XX)
TX-RX UNIT (X57-7270-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
D1			UDZS5.6B	ZENER DIODE	
D2 ,3			HSM88AS-E	DIODE	
D4			MA2S111-F	DIODE	
D5 ,6			MA4P4002F	DIODE	
D7 ,8			MA4PH633	DIODE	
D10			ZSH5MA27	SURGE ABSORBER	
D13			DF25V60	DIODE	
D14		*	CSA70-401L	SURGE ABSORBER	
D15 ,16			HVC131	DIODE	
IC1		*	RA13H4047M123	MOS-IC	K2
IC1		*	RA13H4452M123	MOS-IC	K
IC2			TA75W01FUF	MOS-IC	
Q1 ,2			RD60HUF1-101	FET	
TH1			S1R104J475H	THERMISTOR	
TH3			S1R104J475H	THERMISTOR	
TX-RX UNIT (X57-7270-XX) -10: K -11:K2					
C151			CK73GB1H471K	CHIP C 470PF K	
C152			CC73GCH1H100C	CHIP C 10PF C	
C153			CC73GCH1H220J	CHIP C 22PF J	
C155			CC73GCH1H181J	CHIP C 180PF J	
C156			CK73GB1H471K	CHIP C 470PF K	
C157			CC73GCH1H010B	CHIP C 1.0PF B	K
C157			CC73GCH1H080B	CHIP C 8.0PF B	K2
C158			CC73GCH1H120J	CHIP C 12PF J	K
C158			CC73GCH1H180J	CHIP C 18PF J	K2
C160			CC73GCH1H101J	CHIP C 100PF J	
C161			CK73GB1H471K	CHIP C 470PF K	
C162			C92-0865-05	ELECTRO 47UF 20WV	
C163			CC73GCH1H050B	CHIP C 5.0PF B	
C164			CK73GB1H471K	CHIP C 470PF K	
C165			CC73GCH1H060B	CHIP C 6.0PF B	K
C165			CC73GCH1H070B	CHIP C 7.0PF B	K2
C166			CK73GB1H471K	CHIP C 470PF K	
C167			CC73GCH1H050B	CHIP C 5.0PF B	
C168			CK73GB1H103K	CHIP C 0.010UF K	
C169,170			CK73GB1H471K	CHIP C 470PF K	
C200			CK73GB1H471K	CHIP C 470PF K	
C201			CC73GCH1H030B	CHIP C 3.0PF B	K
C201			CC73GCH1H040B	CHIP C 4.0PF B	K2
C202			CK73GB1H471K	CHIP C 470PF K	
C203			CC73GCH1H020B	CHIP C 2.0PF B	K2
C203			CC73GCH1H1R5B	CHIP C 1.5PF B	K
C204			CC73GCH1H030B	CHIP C 3.0PF B	K
C204			CC73GCH1H040B	CHIP C 4.0PF B	K2
C205			CC73GCH1H0R5B	CHIP C 0.5PF B	K
C205			CC73GCH1H010B	CHIP C 1.0PF B	K2
C206			CK73GB1H471K	CHIP C 470PF K	
C207			CC73GCH1H030B	CHIP C 3.0PF B	
C208			CC73GCH1H0R5B	CHIP C 0.5PF B	K
C208			CC73GCH1H010B	CHIP C 1.0PF B	K2
C209,210			CK73GB1H471K	CHIP C 470PF K	
C211			CC73GCH1H030B	CHIP C 3.0PF B	K
C211			CC73GCH1H040B	CHIP C 4.0PF B	K2
C212			CC73GCH1H020B	CHIP C 2.0PF B	K2
C212			CC73GCH1H1R5B	CHIP C 1.5PF B	K
C213			CK73GB1H471K	CHIP C 470PF K	
C214			CC73GCH1H120J	CHIP C 12PF J	K2

Ref. No.	Address	New parts	Parts No.	Description	Destination
C214			CC73GCH1H150J	CHIP C 15PF J	K
C216			CK73GB1H471K	CHIP C 470PF K	
C218			CC73GCH1H080B	CHIP C 8.0PF B	K2
C218			CC73GCH1H100C	CHIP C 10PF C	K
C220-223			CK73GB1H471K	CHIP C 470PF K	
C224			CC73GCH1H180J	CHIP C 18PF J	K2
C224			CC73GCH1H220J	CHIP C 22PF J	K
C225			CC73GCH1H090B	CHIP C 9.0PF B	K
C225			CC73GCH1H100C	CHIP C 10PF C	K2
C226			CC73GCH1H030B	CHIP C 3.0PF B	K
C226			CC73GCH1H050B	CHIP C 5.0PF B	K2
C227			CC73GCH1H150J	CHIP C 15PF J	K2
C227			CC73GCH1H180J	CHIP C 18PF J	K
C228			CC73GCH1H070B	CHIP C 7.0PF B	K
C228			CC73GCH1H090B	CHIP C 9.0PF B	K2
C229			CC73GCH1H040B	CHIP C 4.0PF B	K
C229			CC73GCH1H060B	CHIP C 6.0PF B	K2
C230			CC73GCH1H150J	CHIP C 15PF J	K2
C230			CC73GCH1H180J	CHIP C 18PF J	K
C231			CC73GCH1H070B	CHIP C 7.0PF B	K
C231			CC73GCH1H090B	CHIP C 9.0PF B	K2
C232			CC73GCH1H050B	CHIP C 5.0PF B	
C233			CC73GCH1H220J	CHIP C 22PF J	K
C233			CC73GCH1H270J	CHIP C 27PF J	K2
C234			CK73GB1H471K	CHIP C 470PF K	
C235			CC73GCH1H080B	CHIP C 8.0PF B	K
C235			CC73GCH1H100C	CHIP C 10PF C	K2
C236			CK73GB1H471K	CHIP C 470PF K	
C238,239			CC73GCH1H680J	CHIP C 68PF J	
C240			CK73GB1H103K	CHIP C 0.010UF K	
C241,242			CK73GB1H471K	CHIP C 470PF K	
C243			CK73GB1H103K	CHIP C 0.010UF K	
C244,245			CC73GCH1H080B	CHIP C 8.0PF B	
C246			CC73GCH1H050B	CHIP C 5.0PF B	
C247			CC73GCH1H040B	CHIP C 4.0PF B	
C248			CC73GCH1H090B	CHIP C 9.0PF B	
C249,250			CK73GB1H103K	CHIP C 0.010UF K	
C251			CC73GCH1H050B	CHIP C 5.0PF B	K
C251			CC73GCH1H080B	CHIP C 8.0PF B	K2
C252			CC73GCH1H100C	CHIP C 10PF C	K
C252			CC73GCH1H120J	CHIP C 12PF J	K2
C253			CC73GCH1H050B	CHIP C 5.0PF B	K
C253			CC73GCH1H080B	CHIP C 8.0PF B	K2
C254			CK73GB1H103K	CHIP C 0.010UF K	
C255			CC73GCH1H100C	CHIP C 10PF C	
C256			CC73GCH1H090B	CHIP C 9.0PF B	
C257			CC73GCH1H070B	CHIP C 7.0PF B	
C260			CC73GCH1H040B	CHIP C 4.0PF B	K2
C260			CC73GCH1H050B	CHIP C 5.0PF B	K
C261			CK73GB1H471K	CHIP C 470PF K	K
C262			CK73GB1H103K	CHIP C 0.010UF K	
C263			CC73GCH1H101J	CHIP C 100PF J	K2
C263			CC73GCH1H120J	CHIP C 12PF J	K
C264			CK73GB1H103K	CHIP C 0.010UF K	
C265			CK73GB1H471K	CHIP C 470PF K	K2
C265,266			CK73GB1H471K	CHIP C 470PF K	K
C266			CC73GCH1H101J	CHIP C 100PF J	K2
C267			CK73GB1H103K	CHIP C 0.010UF K	
C268			CC73GCH1H101J	CHIP C 100PF J	

If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

TX-RX UNIT (X57-7270-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C269			CC73GCH1H120J	CHIP C 12PF J	
C270			CK73GB1E103K	CHIP C 0.010UF K	
C271			CK73GB1H102K	CHIP C 1000PF K	
C272			CK73GB1H103K	CHIP C 0.010UF K	
C273			CC73GCH1H090B	CHIP C 9.0PF B	
C274			CC73GCH1H080B	CHIP C 8.0PF B	
C275,276			CC73GCH1H040B	CHIP C 4.0PF B	
C277			CC73GCH1H090B	CHIP C 9.0PF B	
C278			CC73GCH1H100C	CHIP C 10PF C	
C279,280			CK73GB1H103K	CHIP C 0.010UF K	
C281			CC73GCH1H090B	CHIP C 9.0PF B	
C282			CC73GCH1H080B	CHIP C 8.0PF B	
C285,286			CK73GB1H102K	CHIP C 1000PF K	
C287			CK73GB1H103K	CHIP C 0.010UF K	
C288-290			CK73GB1C104K	CHIP C 0.10UF K	
C291			CC73GCH1H470J	CHIP C 47PF J	
C292			CC73GCH1H101J	CHIP C 100PF J	
C296			CK73GB1H103K	CHIP C 0.010UF K	
C298-300			CK73GB1C104K	CHIP C 0.10UF K	
C302			CK73GB1E103K	CHIP C 0.010UF K	
C304			CC73GCH1H470J	CHIP C 47PF J	
C305			CK73GB1E103K	CHIP C 0.010UF K	
C306			CC73GCH1H101J	CHIP C 100PF J	
C309-315			CK73GB1C104K	CHIP C 0.10UF K	
C316			CK73FB0J106K	CHIP C 10UF K	
C317			CC73GCH1H150J	CHIP C 15PF J	
C319			CC73GCH1H150J	CHIP C 15PF J	
C320			CK73GB1C104K	CHIP C 0.10UF K	
C321,322			CK73GB1E103K	CHIP C 0.010UF K	
C323			CC73GCH1H030B	CHIP C 3.0PF B	
C324			CK73GB1C104K	CHIP C 0.10UF K	
C325			CK73GB1E103K	CHIP C 0.010UF K	
C326			CS77AA0J100M	CHIP TNTL 10UF 6.3WV	
C327			CC73GCH1H181J	CHIP C 180PF J	
C328			CC73GCH1H270J	CHIP C 27PF J	
C329			CK73GB1C104K	CHIP C 0.10UF K	
C330			CC73GCH1H181J	CHIP C 180PF J	
C331			CK73GB1H152J	CHIP C 1500PF J	
C332			CK73GB1H102K	CHIP C 1000PF K	
C333			CK73GB1C333K	CHIP C 0.033UF K	
C334			CK73GB1C104K	CHIP C 0.10UF K	
C335			CS77AA0J220M	CHIP TNTL 22UF 6.3WV	
C336			CK73GB1H102K	CHIP C 1000PF K	
C337,338			CK73GB1C104K	CHIP C 0.10UF K	
C340			CK73GB1H102K	CHIP C 1000PF K	
C341			CK73GB1C104K	CHIP C 0.10UF K	
C342			CK73GB1A224K	CHIP C 0.22UF K	
C400			CK73GB1H471K	CHIP C 470PF K	
C401			CK73GB1E103K	CHIP C 0.010UF K	
C402,403			CC73GCH1H101J	CHIP C 100PF J	
C404			CK73GB1C104K	CHIP C 0.10UF K	
C406			CK73GB1E103K	CHIP C 0.010UF K	
C407			CC73GCH1H101J	CHIP C 100PF J	
C408-410			CK73GB1H471K	CHIP C 470PF K	
C412			CC73GCH1H101J	CHIP C 100PF J	K
C412,413			CC73GCH1H101J	CHIP C 100PF J	K2
C413,414			CC73GCH1H470J	CHIP C 47PF J	K
C414			CC73GCH1H470J	CHIP C 47PF J	K2
C415			C92-0863-05	CHIP TNTL 0.047UF 35WV	
C416			CS77AA1E010M	CHIP TNTL 1.0UF 25WV	K

Ref. No.	Address	New parts	Parts No.	Description	Destination
C416			CS77CA1ER47M	CHIP TNTL 0.47UF 25WV	K2
C417			C92-0863-05	CHIP TNTL 0.047UF 35WV	
C418			CK73GB1C104K	CHIP C 0.10UF K	
C419			CC73GCH1H470J	CHIP C 47PF J	
C420			CK73GB1H471K	CHIP C 470PF K	
C423			CK73GB1H103K	CHIP C 0.010UF K	
C424			CK73GB1C104K	CHIP C 0.10UF K	
C425			CC73GCH1H101J	CHIP C 100PF J	
C427			CK73GB1H102K	CHIP C 1000PF K	
C430			CK73GB1H471K	CHIP C 470PF K	
C431			CK73GB1H103K	CHIP C 0.010UF K	
C432			CK73FB1C334K	CHIP C 0.33UF K	
C433			CK73GB1C104K	CHIP C 0.10UF K	
C434			CK73GB1H471K	CHIP C 470PF K	
C435			CC73GCH1H080B	CHIP C 8.0PF B	K2
C436			CC73GCH1H060B	CHIP C 6.0PF B	K2
C436			CC73GCH1H270J	CHIP C 27PF J	K
C437			CC73GCH1H470J	CHIP C 47PF J	
C438			CC73GCH1H050B	CHIP C 5.0PF B	K2
C438,439			CC73GCH1H2R5B	CHIP C 2.5PF B	K
C439			CC73GCH1H470J	CHIP C 47PF J	K2
C441			CC73GCH1H020B	CHIP C 2.0PF B	K
C441			CC73GCH1H1R5B	CHIP C 1.5PF B	K2
C442			CC73GCH1H020B	CHIP C 2.0PF B	K2
C442			CC73GCH1H030B	CHIP C 3.0PF B	K
C443			CC73GCH1H030B	CHIP C 3.0PF B	K2
C443			CC73GCH1H050B	CHIP C 5.0PF B	K
C444,445			CK73GB1E105K	CHIP C 1.0UF K	
C446			CS77AB21C4R7M	CHIP TNTL 4.7UF 16WV	
C447			CC73GCH1H101J	CHIP C 100PF J	
C448,449			CK73GB1C104K	CHIP C 0.10UF K	
C450			CK73GF1A105Z	CHIP C 1.0UF Z	
C451-456			CK73GB1H471K	CHIP C 470PF K	
C457			CC73GCH1H020B	CHIP C 2.0PF B	K2
C457			CC73GCH1H3R5B	CHIP C 3.5PF B	K
C458			CC73GCH1H010B	CHIP C 1.0PF B	K
C458			CC73GCH1H1R5B	CHIP C 1.5PF B	K2
C459			CC73GCH1H101J	CHIP C 100PF J	K
C459			CC73GCH1H470J	CHIP C 47PF J	K2
C460			CK73GB1E105K	CHIP C 1.0UF K	
C461			CC73GCH1H181J	CHIP C 180PF J	
C463			CK73GB1H471K	CHIP C 470PF K	
C464			CC73GCH1H101J	CHIP C 100PF J	
C465			CC73GCH1H220J	CHIP C 22PF J	
C466-468			CK73GB1E105K	CHIP C 1.0UF K	
C470-472			CK73GB1H471K	CHIP C 470PF K	
C474			CK73GB1H103K	CHIP C 0.010UF K	
C475			C93-0787-05	CERAMIC 0.1UF 50WV	
C477			CK73GB1H103K	CHIP C 0.010UF K	
C478			CS77AC1D220M	CHIP TNTL 22UF 20WV	
C479			CK73GB1H471K	CHIP C 470PF K	
C480			CS77AC1D220M	CHIP TNTL 22UF 20WV	
C482,483			CK73GB1H103K	CHIP C 0.010UF K	
C484			CK73GB1H471K	CHIP C 470PF K	
C485			CC73GCH1H101J	CHIP C 100PF J	K
C485			CC73GCH1H270G	CHIP C 27PF G	K2
C487			CK73GB1H471K	CHIP C 470PF K	
C488			CC73GCH1H120G	CHIP C 12PF G	K
C488			CC73GCH1H150G	CHIP C 15PF G	K2
C489			CC73GCH1H330G	CHIP C 33PF G	

TK-5810H(B)

PARTS LIST

TX-RX UNIT (X57-7270-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C490			CS77AA1A100M	CHIP TNTL 10UF 10WV	
C491			CC73GCH1H0R5B	CHIP C 0.5PF B	K2
C491			CC73GCH1H010B	CHIP C 1.0PF B	K
C492			CK73GB1H471K	CHIP C 470PF K	K
C492			CK73GB1H681K	CHIP C 680PF K	K2
C494			CC73GCH1H070B	CHIP C 7.0PF B	
C495			CC73GCH1H1R5B	CHIP C 1.5PF B	
C496			CC73GCH1H101J	CHIP C 100PF J	K
C496			CC73GCH1H390J	CHIP C 39PF J	K2
C497			CC73GCH1H0R5B	CHIP C 0.5PF B	K2
C497			CC73GCH1H1R5B	CHIP C 1.5PF B	K
C499			CC73GCH1H090B	CHIP C 9.0PF B	K2
C499			CC73GCH1H100C	CHIP C 10PF C	K
C500,501			CK73GB1H471K	CHIP C 470PF K	
C502			CC73GCH1H020B	CHIP C 2.0PF B	K
C502			CC73GCH1H2R5B	CHIP C 2.5PF B	K2
C503			CS77AB21A220M	CHIP TNTL 22UF 10WV	
C504			CS77AC1A470M	CHIP TNTL 47UF 10WV	
C505			CK73GB1H103K	CHIP C 0.010UF K	
C506			CK73GB1H471K	CHIP C 470PF K	
C508			CK73GB1H471K	CHIP C 470PF K	
C509			CC73GCH1H050B	CHIP C 5.0PF B	
C510			CC73GCH1H040B	CHIP C 4.0PF B	
C511			CC73GCH1H030B	CHIP C 3.0PF B	
C512			CC73GCH1H0R5B	CHIP C 0.5PF B	
C513			CK73GB1H471K	CHIP C 470PF K	
C514			CC73GCH1H060B	CHIP C 6.0PF B	K
C514			CC73GCH1H070B	CHIP C 7.0PF B	K2
C515			CC73GCH1H0R5B	CHIP C 0.5PF B	
C516			CC73GCH1H060B	CHIP C 6.0PF B	
C517			CC73GCH1H050B	CHIP C 5.0PF B	
C518			CC73GCH1H0R5B	CHIP C 0.5PF B	
C519,520			CK73GB1H471K	CHIP C 470PF K	
C521			CC73GCH1H070B	CHIP C 7.0PF B	K
C521			CC73GCH1H090B	CHIP C 9.0PF B	K2
C522			CC73GCH1H070B	CHIP C 7.0PF B	K2
C522,523			CC73GCH1H060B	CHIP C 6.0PF B	K
C523			CC73GCH1H050B	CHIP C 5.0PF B	K2
C524			CC73GCH1H0R5B	CHIP C 0.5PF B	
C525			CK73GB1H471K	CHIP C 470PF K	
C527			CC73GCH1H050B	CHIP C 5.0PF B	K2
C527			CC73GCH1H060B	CHIP C 6.0PF B	K
C529			CK73GB1H471K	CHIP C 470PF K	
C530			CC73GCH1H040B	CHIP C 4.0PF B	K
C530			CC73GCH1H050B	CHIP C 5.0PF B	K2
C531-534			CK73GB1H471K	CHIP C 470PF K	
C535			CC73GCH1H060B	CHIP C 6.0PF B	
C536			CK73GB1H471K	CHIP C 470PF K	
C537			CC73GCH1H050B	CHIP C 5.0PF B	K
C537			CC73GCH1H060B	CHIP C 6.0PF B	K2
C538,539			CK73GB1H471K	CHIP C 470PF K	
C540			CC73GCH1H101J	CHIP C 100PF J	
C541,542			CK73GB1H471K	CHIP C 470PF K	
C600			CK73GB1H471K	CHIP C 470PF K	
C601			C92-0881-05	ELECTRO 47UF 10WV	
C602,603			CK73GB1H471K	CHIP C 470PF K	
C604			CS77CA1C010M	CHIP TNTL 1.0UF 16WV	
C605			CK73GB1H103K	CHIP C 0.010UF K	
C606			C92-0887-05	ELECTRO 1.0UF 50WV	
C607,608			CK73GB1C104K	CHIP C 0.10UF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C609			C92-0870-05	CHIP TNTL 4.7UF 16WV	
C610-620			CK73GB1H471K	CHIP C 470PF K	
C621			CK73GB1H102K	CHIP C 1000PF K	
C622-630			CK73GB1H471K	CHIP C 470PF K	
C631,632			CK73GB1H102K	CHIP C 1000PF K	
C634			CC73GCH1H1R5B	CHIP C 1.5PF B	K2
C634			CC73GCH1H470J	CHIP C 47PF J	K
C635			CC73GCH1H020B	CHIP C 2.0PF B	
C636,637			CK73GB1C393K	CHIP C 0.039UF K	K
C638			CK73GB1C683K	CHIP C 0.068UF K	K
C640			CC73GCH1H050B	CHIP C 5.0PF B	K
C640			CC73GCH1H120J	CHIP C 12PF J	K2
C641			CK73GB1H471K	CHIP C 470PF K	
C642			CC73GCH1H050B	CHIP C 5.0PF B	K
C642			CC73GCH1H120J	CHIP C 12PF J	K2
C644-647			CK73GB1H471K	CHIP C 470PF K	
CN150			E04-0154-05	PIN SOCKET	
CN151			E04-0154-05	PIN SOCKET	
CN200			E04-0154-05	PIN SOCKET	
CN202			E41-2735-05	PIN ASSY	
CN207			E41-2735-05	PIN ASSY	
CN600			E40-6438-05	FLAT CABLE CONNECTOR	
CN601			E40-6429-05	FLAT CABLE CONNECTOR	
W400			E37-1235-05	JUMPER WIRE	
CF200			L72-1018-05	CERAMIC FILTER	
CF201,202			L72-1016-05	CERAMIC FILTER	
CF203			L72-1009-05	CERAMIC FILTER	
CF204			L72-1018-05	CERAMIC FILTER	
L150,151			L40-3975-92	SMALL FIXED INDUCTOR(39NH)	
L152			L40-5663-92	SMALL FIXED INDUCTOR(5.6NH)	
L153			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	K2
L153,154			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	K
L154			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	K2
L200-204			L34-4604-05	AIR-CORE COIL	
L205			L41-1878-08	SMALL FIXED INDUCTOR(18NH)	
L206			L92-0140-05	CHIP FERRITE	
L207-210			L34-4565-05	AIR-CORE COIL	K
L207-210			L34-4566-05	AIR-CORE COIL	K2
L211,212			L41-1588-08	SMALL FIXED INDUCTOR(150NH)	
L214,215			L39-1498-05	TOROIDAL COIL	
L216			L92-0140-05	CHIP FERRITE	
L217,218			L34-4748-05	COIL	
L219			L39-1498-05	TOROIDAL COIL	
L220,221			L41-1578-08	SMALL FIXED INDUCTOR(15NH)	K
L220,221			L41-2278-08	SMALL FIXED INDUCTOR(22NH)	K2
L222,223			L34-4749-05	COIL	
L224			L41-1878-08	SMALL FIXED INDUCTOR(18NH)	K
L224			L41-3378-08	SMALL FIXED INDUCTOR(33NH)	K2
L225			L40-6881-37	SMALL FIXED INDUCTOR(0.680UH)	
L226			L41-1008-08	SMALL FIXED INDUCTOR(10UH)	
L227,228			L34-4748-05	COIL	
L229,230			L34-4749-05	COIL	
L231			L41-1008-08	SMALL FIXED INDUCTOR(10UH)	
L232			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
L234			L34-4725-05	COIL	
L401			L40-8265-92	SMALL FIXED INDUCTOR(8.2NH)	
L402,403			L41-1578-14	SMALL FIXED INDUCTOR(15NH)	K2
L403,404			L41-4763-14	SMALL FIXED INDUCTOR(4.7NH)	K

If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

TX-RX UNIT (X57-7270-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
L405			L41-3363-14	SMALL FIXED INDUCTOR(3.3NH)	K
L405			L41-6868-14	SMALL FIXED INDUCTOR(6.8NH)	K2
L406			L33-1462-05	SMALL FIXED INDUCTOR	
L407			L41-3363-14	SMALL FIXED INDUCTOR(3.3NH)	K
L407			L41-6868-14	SMALL FIXED INDUCTOR(6.8NH)	K2
L408-417			L92-0140-05	CHIP FERRITE	
L418-423			L41-1098-08	SMALL FIXED INDUCTOR(1.0UH)	
L424			L92-0140-05	CHIP FERRITE	
L425-430			L41-1098-08	SMALL FIXED INDUCTOR(1.0UH)	
L431			L34-4607-05	AIR-CORE COIL	K
L431			L34-4608-05	AIR-CORE COIL	K2
L432,433			L41-1098-08	SMALL FIXED INDUCTOR(1.0UH)	
L434			L34-4608-05	AIR-CORE COIL	K
L434			L34-4609-05	AIR-CORE COIL	K2
L435,436			L41-1098-08	SMALL FIXED INDUCTOR(1.0UH)	
L437			L34-4608-05	AIR-CORE COIL	K
L437			L34-4609-05	AIR-CORE COIL	K2
L438,439			L41-1098-08	SMALL FIXED INDUCTOR(1.0UH)	
L441			L40-2775-92	SMALL FIXED INDUCTOR(27NH)	K2
L441-444			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	K
L442,443			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	K2
L444			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	K2
X200			L77-1961-05	VCXO (16.8MHZ)	
X400			L77-3013-05	TCXO (16.8MHZ)	
XF200			L71-0625-05	CRYSTAL FILTER (49.95MHZ WIDE)	
XF201			L71-0626-05	CRYSTAL FILTER (49.95MHZ NARROW)	
R150,151			RK73GB2A821J	CHIP R 820 J 1/10W	
R152			RK73GB2A5R6J	CHIP R 5.6 J 1/10W	
R154			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R155			RK73GB2A123J	CHIP R 12K J 1/10W	
R156			RK73FB2B470J	CHIP R 47 J 1/8W	
R158			RK73FB2B101J	CHIP R 100 J 1/8W	
R159			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R160			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R161			RK73GB2A101J	CHIP R 100 J 1/10W	
R162			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R163			RK73FB2B100J	CHIP R 10 J 1/8W	
R165			RK73FB2B100J	CHIP R 10 J 1/8W	
R166,167			RK73FB2B271J	CHIP R 270 J 1/8W	
R168			RK73FB2B180J	CHIP R 18 J 1/8W	K2
R168			RK73FB2B220J	CHIP R 22 J 1/8W	K
R201-204			RK73GB2A104J	CHIP R 100K J 1/10W	
R205,206			RK73GB2A183J	CHIP R 18K J 1/10W	
R208			RK73GB2A221J	CHIP R 220 J 1/10W	
R209,210			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R211-215			RK73GB2A104J	CHIP R 100K J 1/10W	
R216			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R219			RK73GB2A821J	CHIP R 820 J 1/10W	K2
R220			RK73GB2A000J	CHIP R 0.0 J 1/10W	K
R220			RK73GB2A5R6J	CHIP R 5.6 J 1/10W	K2
R221			RK73GB2A821J	CHIP R 820 J 1/10W	K2
R222			RK73GB2A470J	CHIP R 47 J 1/10W	
R223			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R225			RK73GB2A390J	CHIP R 39 J 1/10W	
R226			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R227			RK73GB2A470J	CHIP R 47 J 1/10W	
R228			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R229,230			RK73GB2A102J	CHIP R 1.0K J 1/10W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R231			RK73FB2B181J	CHIP R 180 J 1/8W	K
R231			RK73FB2B271J	CHIP R 270 J 1/8W	K2
R232			RK73FB2B180J	CHIP R 18 J 1/8W	K2
R232			RK73FB2B330J	CHIP R 33 J 1/8W	K
R233			RK73FB2B181J	CHIP R 180 J 1/8W	K
R233			RK73FB2B271J	CHIP R 270 J 1/8W	K2
R234			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R235			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R236			RK73GB2A221J	CHIP R 220 J 1/10W	K
R236			RK73GB2A680J	CHIP R 68 J 1/10W	K2
R237			RK73GB2A103J	CHIP R 10K J 1/10W	K
R237			RK73GB2A561J	CHIP R 560 J 1/10W	K2
R238			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R239			RK73GB2A181J	CHIP R 180 J 1/10W	K
R239			RK73GB2A271J	CHIP R 270 J 1/10W	K2
R240			RK73GB2A180J	CHIP R 18 J 1/10W	K2
R240			RK73GB2A330J	CHIP R 33 J 1/10W	K
R241			RK73GB2A181J	CHIP R 180 J 1/10W	K
R241			RK73GB2A271J	CHIP R 270 J 1/10W	K2
R242			RK73GB2A330J	CHIP R 33 J 1/10W	K2
R242			RK73GB2A331J	CHIP R 330 J 1/10W	K
R243			RK73GB2A183J	CHIP R 18K J 1/10W	K
R243			RK73GB2A392J	CHIP R 3.9K J 1/10W	K2
R244			RK73GB2A560J	CHIP R 56 J 1/10W	
R245			RK73GB2A270J	CHIP R 27 J 1/10W	
R246			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R247,248			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R249			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R250			RK73GB2A153J	CHIP R 15K J 1/10W	
R251			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R252			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R253			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R254			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R255			RK73GB2A473J	CHIP R 47K J 1/10W	
R256			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R258			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R261			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R264			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R265			RK73GB2A104J	CHIP R 100K J 1/10W	
R266			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R268,269			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R271			RK73GB2A104J	CHIP R 100K J 1/10W	
R272			RK73GB2A473J	CHIP R 47K J 1/10W	
R274			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R275			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R276			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R277			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R284			RK73GB2A103J	CHIP R 10K J 1/10W	
R287,288			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R293,294			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R296			RK73GB2A331J	CHIP R 330 J 1/10W	
R297			RK73GB2A470J	CHIP R 47 J 1/10W	
R298			RK73GB2A681J	CHIP R 680 J 1/10W	
R299			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R300			RK73GB2A470J	CHIP R 47 J 1/10W	
R301			RK73GB2A684J	CHIP R 680K J 1/10W	
R304-311			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R312			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R313,314			RK73GB2A220J	CHIP R 22 J 1/10W	

If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

TX-RX UNIT (X57-7270-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R315			RK73GB2A104J	CHIP R 100K J 1/10W	
R316			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R317			RK73GB2A273J	CHIP R 27K J 1/10W	
R318			RK73GB2A470J	CHIP R 47 J 1/10W	
R319			RK73GB2A681J	CHIP R 680 J 1/10W	
R320			RK73GB2A331J	CHIP R 330 J 1/10W	
R321			RK73GB2A274J	CHIP R 270K J 1/10W	
R323			RK73GB2A333J	CHIP R 33K J 1/10W	
R324,325			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R326			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R327,328			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R329			RK73GB2A273J	CHIP R 27K J 1/10W	
R330			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R333			RK73GB2A224J	CHIP R 220K J 1/10W	
R334			RK73GB2A471J	CHIP R 470 J 1/10W	
R335			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R336			RK73GB2A224J	CHIP R 220K J 1/10W	
R337			RK73GB2A683J	CHIP R 68K J 1/10W	
R338			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R339			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R340			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R341			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R342			RK73GB2A104J	CHIP R 100K J 1/10W	
R344			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R345			RK73GB2A473J	CHIP R 47K J 1/10W	
R400			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R401			RK73GB2A104J	CHIP R 100K J 1/10W	
R402			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R403			RK73GB2A563J	CHIP R 56K J 1/10W	
R404			RK73GB2A101J	CHIP R 100 J 1/10W	
R405			RK73GB2A103J	CHIP R 10K J 1/10W	
R406			RK73GB2A104J	CHIP R 100K J 1/10W	
R407-410			RK73GB2A101J	CHIP R 100 J 1/10W	
R411			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R412-414			RK73GB2A101J	CHIP R 100 J 1/10W	
R415			RK73GB2A103J	CHIP R 10K J 1/10W	
R416			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R417			RK73GB2A103J	CHIP R 10K J 1/10W	
R418			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R419			RK73GB2A103J	CHIP R 10K J 1/10W	K2
R419			RK73GB2A472J	CHIP R 4.7K J 1/10W	K
R420			RK73GB2A101J	CHIP R 100 J 1/10W	K2
R420			RK73GB2A151J	CHIP R 150 J 1/10W	K
R422			RK73GB2A122J	CHIP R 1.2K J 1/10W	K
R422			RK73GB2A392J	CHIP R 3.9K J 1/10W	K2
R423			RK73GB2A103J	CHIP R 10K J 1/10W	K2
R423			RK73GB2A472J	CHIP R 4.7K J 1/10W	K
R424			RK73GB2A330J	CHIP R 33 J 1/10W	
R425			RK73GB2A221J	CHIP R 220 J 1/10W	K
R426			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R427			RK73GB2A470J	CHIP R 47 J 1/10W	
R428			RK73GB2A101J	CHIP R 100 J 1/10W	K
R428			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2
R429			RN73GH1J470D	CHIP R 47 D 1/16W	
R430			RN73GH1J681D	CHIP R 680 D 1/16W	
R431			RK73GB2A000J	CHIP R 0.0 J 1/10W	K
R431			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2
R432			RK73GB2A561J	CHIP R 560 J 1/10W	
R433			RK73GB2A101J	CHIP R 100 J 1/10W	K

Ref. No.	Address	New parts	Parts No.	Description	Destination
R433			RK73GB2A222J	CHIP R 2.2K J 1/10W	K2
R434			RN73GH1J331D	CHIP R 330 D 1/16W	
R436,437			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R439			RK73GB2A151J	CHIP R 150 J 1/10W	
R440			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R441			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R444			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R445-447			RK73GB2A101J	CHIP R 100 J 1/10W	
R448			RK73GB2A154J	CHIP R 150K J 1/10W	
R450			RK73GB2A330J	CHIP R 33 J 1/10W	
R451			RK73GB2A473J	CHIP R 47K J 1/10W	
R452			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R453			RK73GB2A100J	CHIP R 10 J 1/10W	
R454			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R455			RK73GB2A104J	CHIP R 100K J 1/10W	
R456			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R457			RK73GB2A104J	CHIP R 100K J 1/10W	
R458			RN73GH1J104D	CHIP R 100K D 1/16W	
R459			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R460			RK73GB2A123J	CHIP R 12K J 1/10W	
R461			RN73GH1J222D	CHIP R 2.2K D 1/16W	
R462			RK73GB2A224J	CHIP R 220K J 1/10W	
R463			RK73GB2A124J	CHIP R 120K J 1/10W	
R464			RN73GH1J334D	CHIP R 330K D 1/16W	
R465			RK73GB2A100J	CHIP R 10 J 1/10W	
R466,467			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R468,469			RK73GB2A104J	CHIP R 100K J 1/10W	
R470			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R471			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R472			RK73GB2A106J	CHIP R 10M J 1/10W	
R473			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R474			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R475			RK73GB2A473J	CHIP R 47K J 1/10W	
R476,477			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R478			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R479			RN73GH1J391D	CHIP R 390 D 1/16W	K
R479			RN73GH1J471D	CHIP R 470 D 1/16W	K2
R480			RK73GB2A274J	CHIP R 270K J 1/10W	
R481			RN73GH1J391D	CHIP R 390 D 1/16W	K
R481			RN73GH1J561D	CHIP R 560 D 1/16W	K2
R482			RN73GH1J271D	CHIP R 270 D 1/16W	K2
R482			RN73GH1J471D	CHIP R 470 D 1/16W	K
R483			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R484			RK73GB2A100J	CHIP R 10 J 1/10W	
R485			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R486			RN73GH1J151D	CHIP R 150 D 1/16W	K
R486			RN73GH1J181D	CHIP R 180 D 1/16W	K2
R487			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2
R487			RN73GH1J101D	CHIP R 100 D 1/16W	K
R488			RK73GB2A104J	CHIP R 100K J 1/10W	
R489			RN73GH1J221D	CHIP R 220 D 1/16W	K
R489			RN73GH1J271D	CHIP R 270 D 1/16W	K2
R490			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2
R490			RN73GH1J101D	CHIP R 100 D 1/16W	K
R491			RK73GB2A224J	CHIP R 220K J 1/10W	
R493			RN73GH1J221D	CHIP R 220 D 1/16W	K
R493			RN73GH1J331D	CHIP R 330 D 1/16W	K2
R494			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2
R494			RN73GH1J101D	CHIP R 100 D 1/16W	K
R495			RK73GB2A471J	CHIP R 470 J 1/10W	K

PARTS LIST

TX-RX UNIT (X57-7270-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R496			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2
R496			RK73GB2A120J	CHIP R 12 J 1/10W	K
R497			RK73GB2A471J	CHIP R 470 J 1/10W	K
R498			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R499			RK73GB2A223J	CHIP R 22K J 1/10W	K2
R499			RK73GB2A273J	CHIP R 27K J 1/10W	K
R500			RK73GB2A223J	CHIP R 22K J 1/10W	K
R500,501			RK73GB2A103J	CHIP R 10K J 1/10W	K2
R501			RK73GB2A153J	CHIP R 15K J 1/10W	K
R502			RK73GB2A330J	CHIP R 33 J 1/10W	
R504			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R505			RK73GB2A151J	CHIP R 150 J 1/10W	K
R505			RK73GB2A471J	CHIP R 470 J 1/10W	K2
R506			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R507			RK73GB2A101J	CHIP R 100 J 1/10W	K2
R507			RK73GB2A151J	CHIP R 150 J 1/10W	K
R508			RK73GB2A331J	CHIP R 330 J 1/10W	
R509			RK73GB2A330J	CHIP R 33 J 1/10W	
R510			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R511			RK73GB2A101J	CHIP R 100 J 1/10W	
R512			RK73GB2A221J	CHIP R 220 J 1/10W	K
R513,514			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R600			RK73GB2A473J	CHIP R 47K J 1/10W	
R601			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R602			RK73GB2A473J	CHIP R 47K J 1/10W	
R603			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R604,605			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R606			RK73GB2A273J	CHIP R 27K J 1/10W	
R607,608			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2
R607,608			RK73GB2A391J	CHIP R 390 J 1/10W	K
R609			RK73GB2A181J	CHIP R 180 J 1/10W	K
R610			RN73GH1J183D	CHIP R 18K D 1/16W	
R611			RK73GB2A000J	CHIP R 0.0 J 1/10W	
D200-203			1SV291F	VARIABLE CAPACITANCE DIODE	
D204-207			1SV286F	VARIABLE CAPACITANCE DIODE	
D208-215			HVC131	DIODE	
D216			RB706F-40	DIODE	
D217			1SS388F	DIODE	
D400			MA2S111-F	DIODE	
D401			DA221	DIODE	
D402			1SV282-F	VARIABLE CAPACITANCE DIODE	K2
D402			1SV305F	VARIABLE CAPACITANCE DIODE	K
D403			HVC376B	VARIABLE CAPACITANCE DIODE	K
D405			BB664	VARIABLE CAPACITANCE DIODE	K
D405-408			1SV282-F	VARIABLE CAPACITANCE DIODE	K2
D406,407			1SV282-F	VARIABLE CAPACITANCE DIODE	K
D408			1SV305F	VARIABLE CAPACITANCE DIODE	K
D409			HVC376B	VARIABLE CAPACITANCE DIODE	K
D411-413			1SV282-F	VARIABLE CAPACITANCE DIODE	K2
D411,412			1SV282-F	VARIABLE CAPACITANCE DIODE	K
D413			1SV305F	VARIABLE CAPACITANCE DIODE	K
D414			HVC376B	VARIABLE CAPACITANCE DIODE	K
D416,417			1SV282-F	VARIABLE CAPACITANCE DIODE	
D418			1SV278F	VARIABLE CAPACITANCE DIODE	
D419,420			HVC131	DIODE	
D421,422			1SV282-F	VARIABLE CAPACITANCE DIODE	
IC200			SPM5001	MOS-IC	
IC201-203			TC7W53FK(F)	MOS-IC	
IC204			TC75S51F-F	MOS-IC	

Ref. No.	Address	New parts	Parts No.	Description	Destination
IC205-207			TC7W53FK(F)	MOS-IC	
IC209			TA31137FNG	MOS-IC	
IC210			TC7WU04FK-F	MOS-IC	
IC211			TC7S66FUF	MOS-IC	
IC400			LMX2352TMX/NP	ANALOGUE IC	
IC401			MCP41100T	ANALOGUE IC	
IC402			XC9101D09AKR	ANALOGUE IC	
IC403			LMC7101BIM5	MOS-IC	
IC600			BU4094BCFV	MOS-IC	
IC601			TA7805FQ	MOS-IC	
Q150,151			2SC3357-A(RF)	TRANSISTOR	
Q200			2SC3357-A(RF)	TRANSISTOR	
Q201			DTC114EE	DIGITAL TRANSISTOR	
Q202			DTA114EE	DIGITAL TRANSISTOR	
Q203,204			2SC3357-A(RF)	TRANSISTOR	
Q205			2SC4215-F(Y)	TRANSISTOR	
Q207			2SC5108(Y)F	TRANSISTOR	
Q208			DTC114EE	DIGITAL TRANSISTOR	
Q209			DTA144EE	DIGITAL TRANSISTOR	
Q210			SSM3K15TE(F)	FET	
Q211			2SC4617(S)	TRANSISTOR	
Q400			2SK879(Y)F	FET	
Q401			DTC144EE	DIGITAL TRANSISTOR	
Q402			2SA1832(GR)F	TRANSISTOR	
Q403			2SC5108(Y)F	TRANSISTOR	
Q404			RN47A4-F	TRANSISTOR	
Q405			2SJ347F	FET	
Q406			SSM5H01TU	FET	
Q407			RN47A4-F	TRANSISTOR	
Q408			2SJ347F	FET	
Q409,410			RN47A4-F	TRANSISTOR	
Q411,412			2SC4116(GR)F	TRANSISTOR	
Q413-415			2SK508NV(52K)	FET	
Q416-418			2SC5108(Y)F	TRANSISTOR	
Q600			DTC114EE	DIGITAL TRANSISTOR	
Q601			2SB1132(Q,R)	TRANSISTOR	
Q602			DTC114EE	DIGITAL TRANSISTOR	
Q603			2SB1132(Q,R)	TRANSISTOR	

TK-5810H(B)

EXPLODED VIEW (TK-5810H(B))

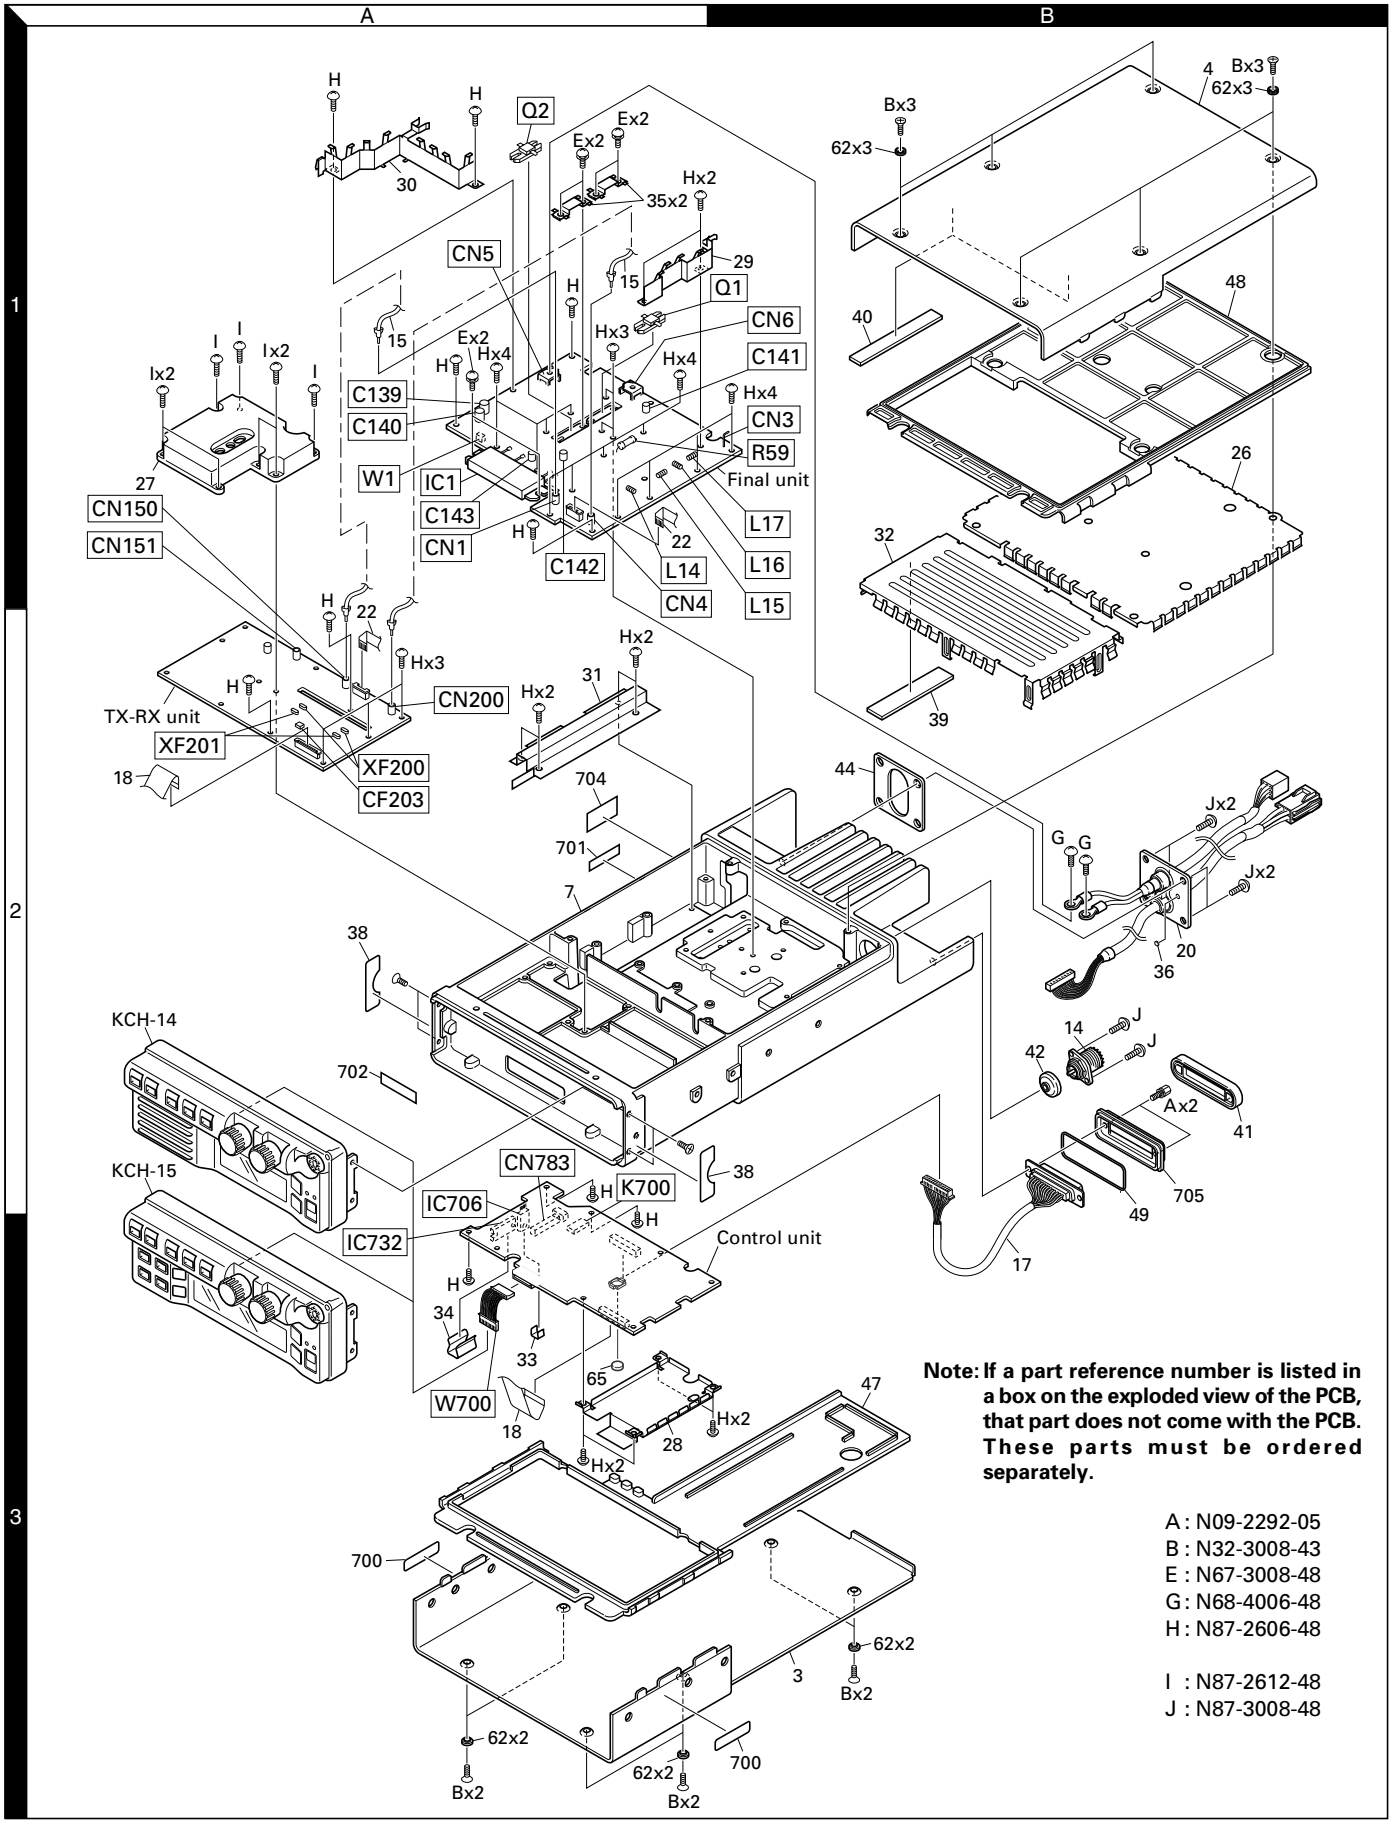

Note: If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB. These parts must be ordered separately.

A : N09-2292-05
B : N32-3008-43
E : N67-3008-48
G : N68-4006-48
H : N87-2606-48

I : N87-2612-48
J : N87-3008-48

Parts with the exploded numbers larger than 700 are not supplied.

PACKING (TK-5810H(B))

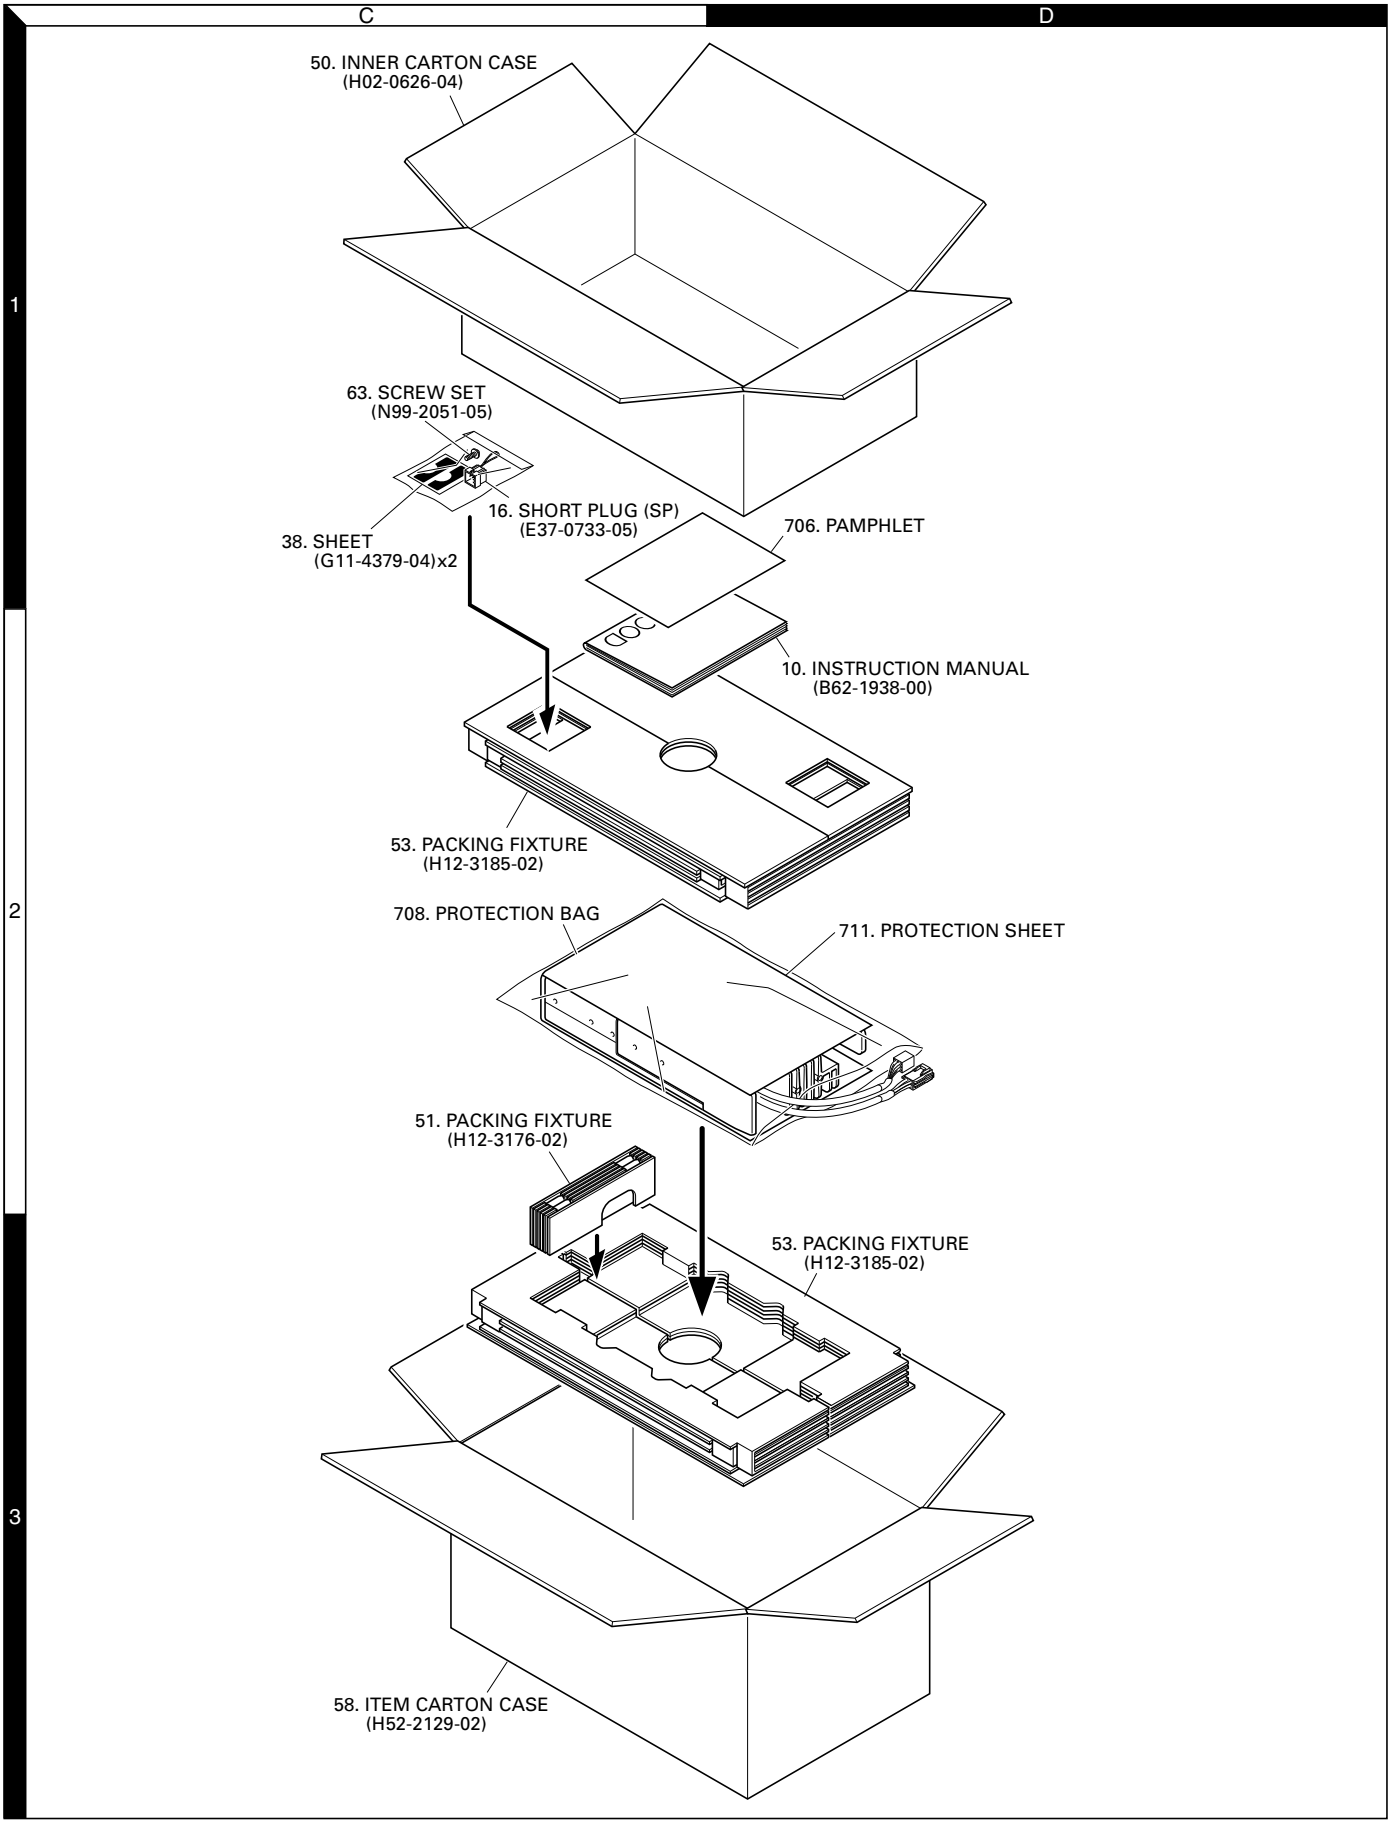

Parts with the exploded numbers larger than 700 are not supplied.