EXPLODED VIEW

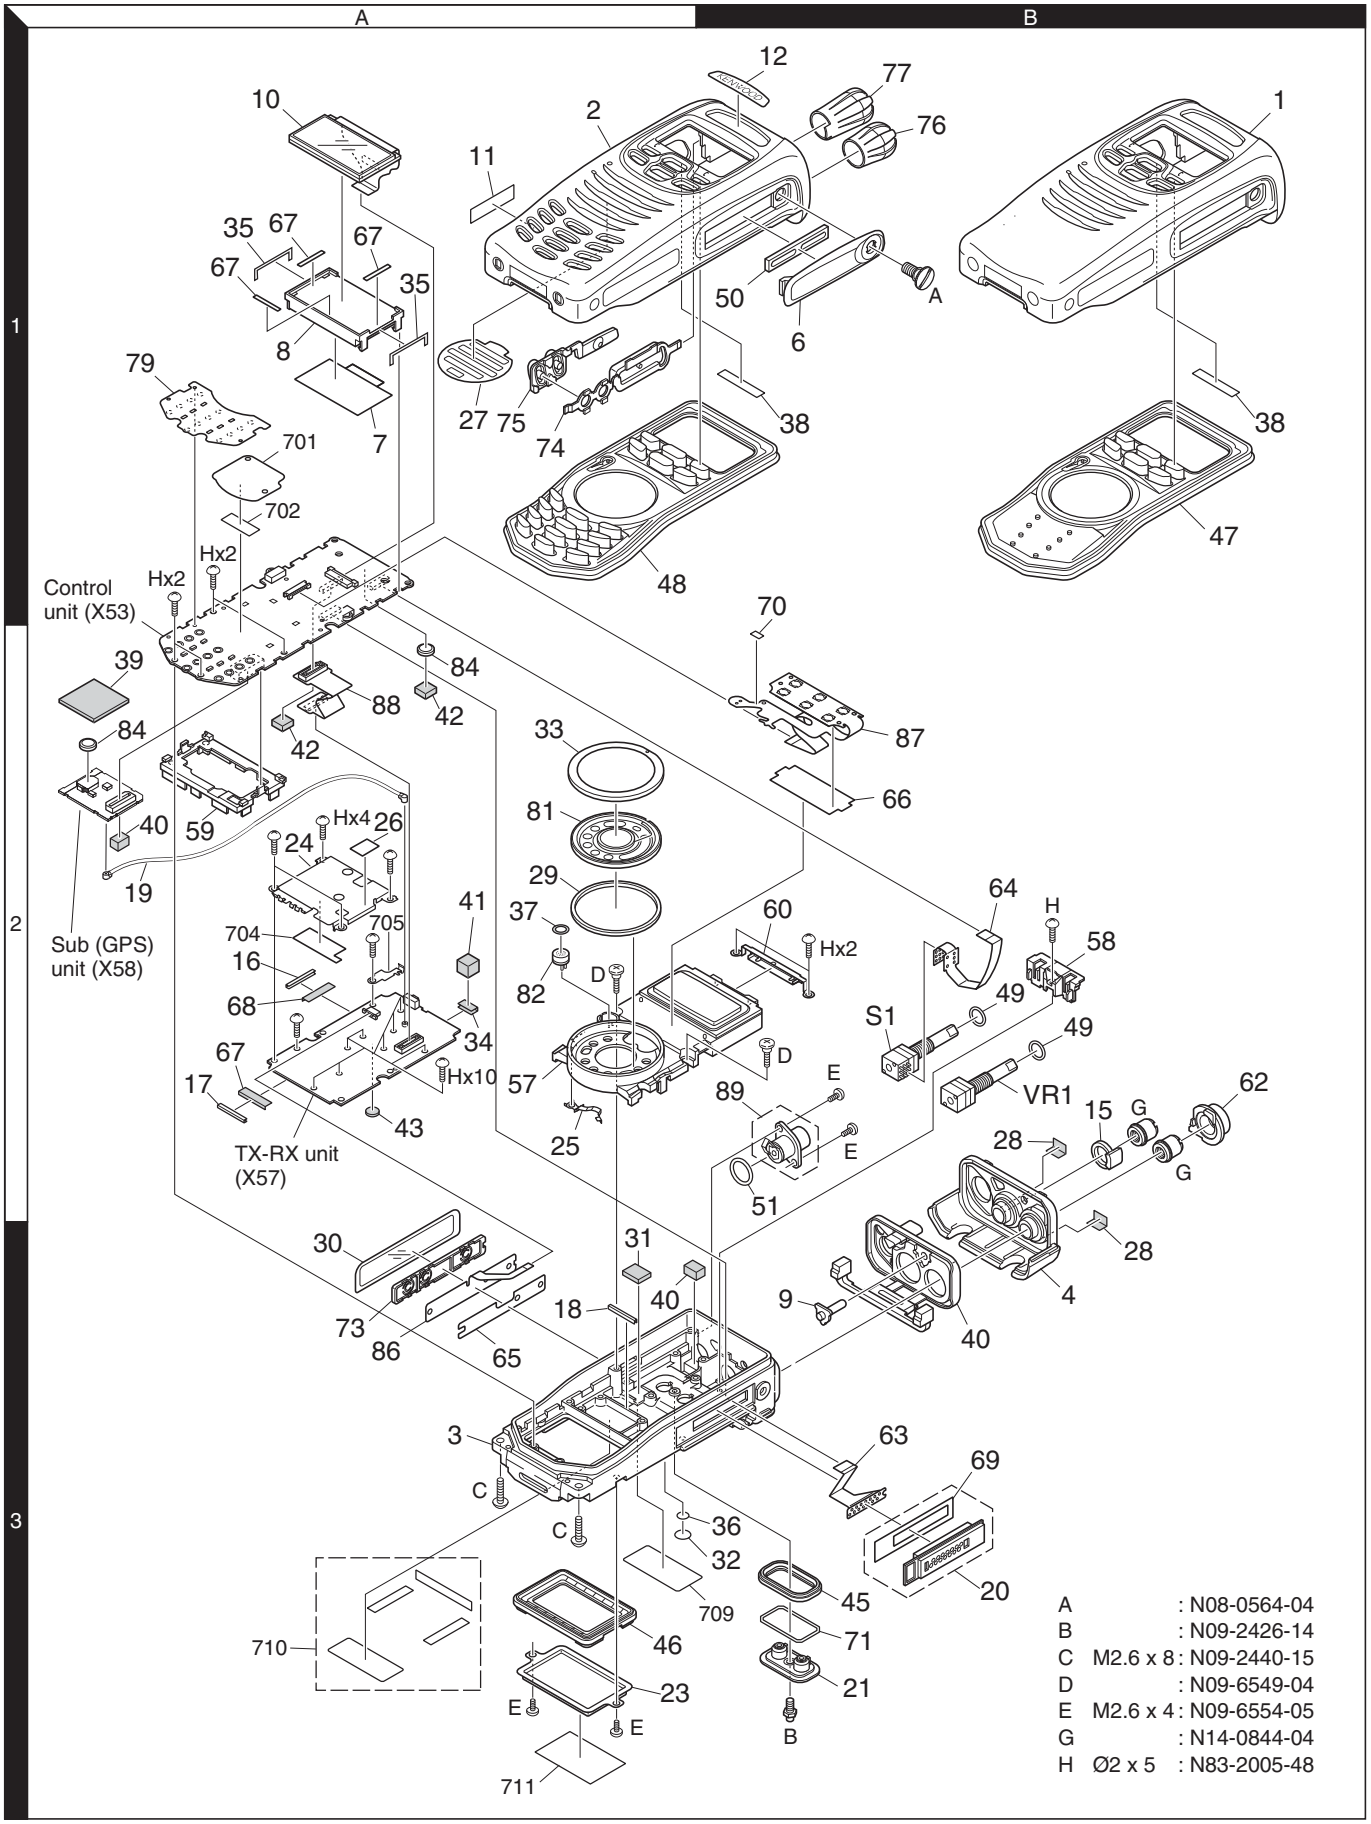

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

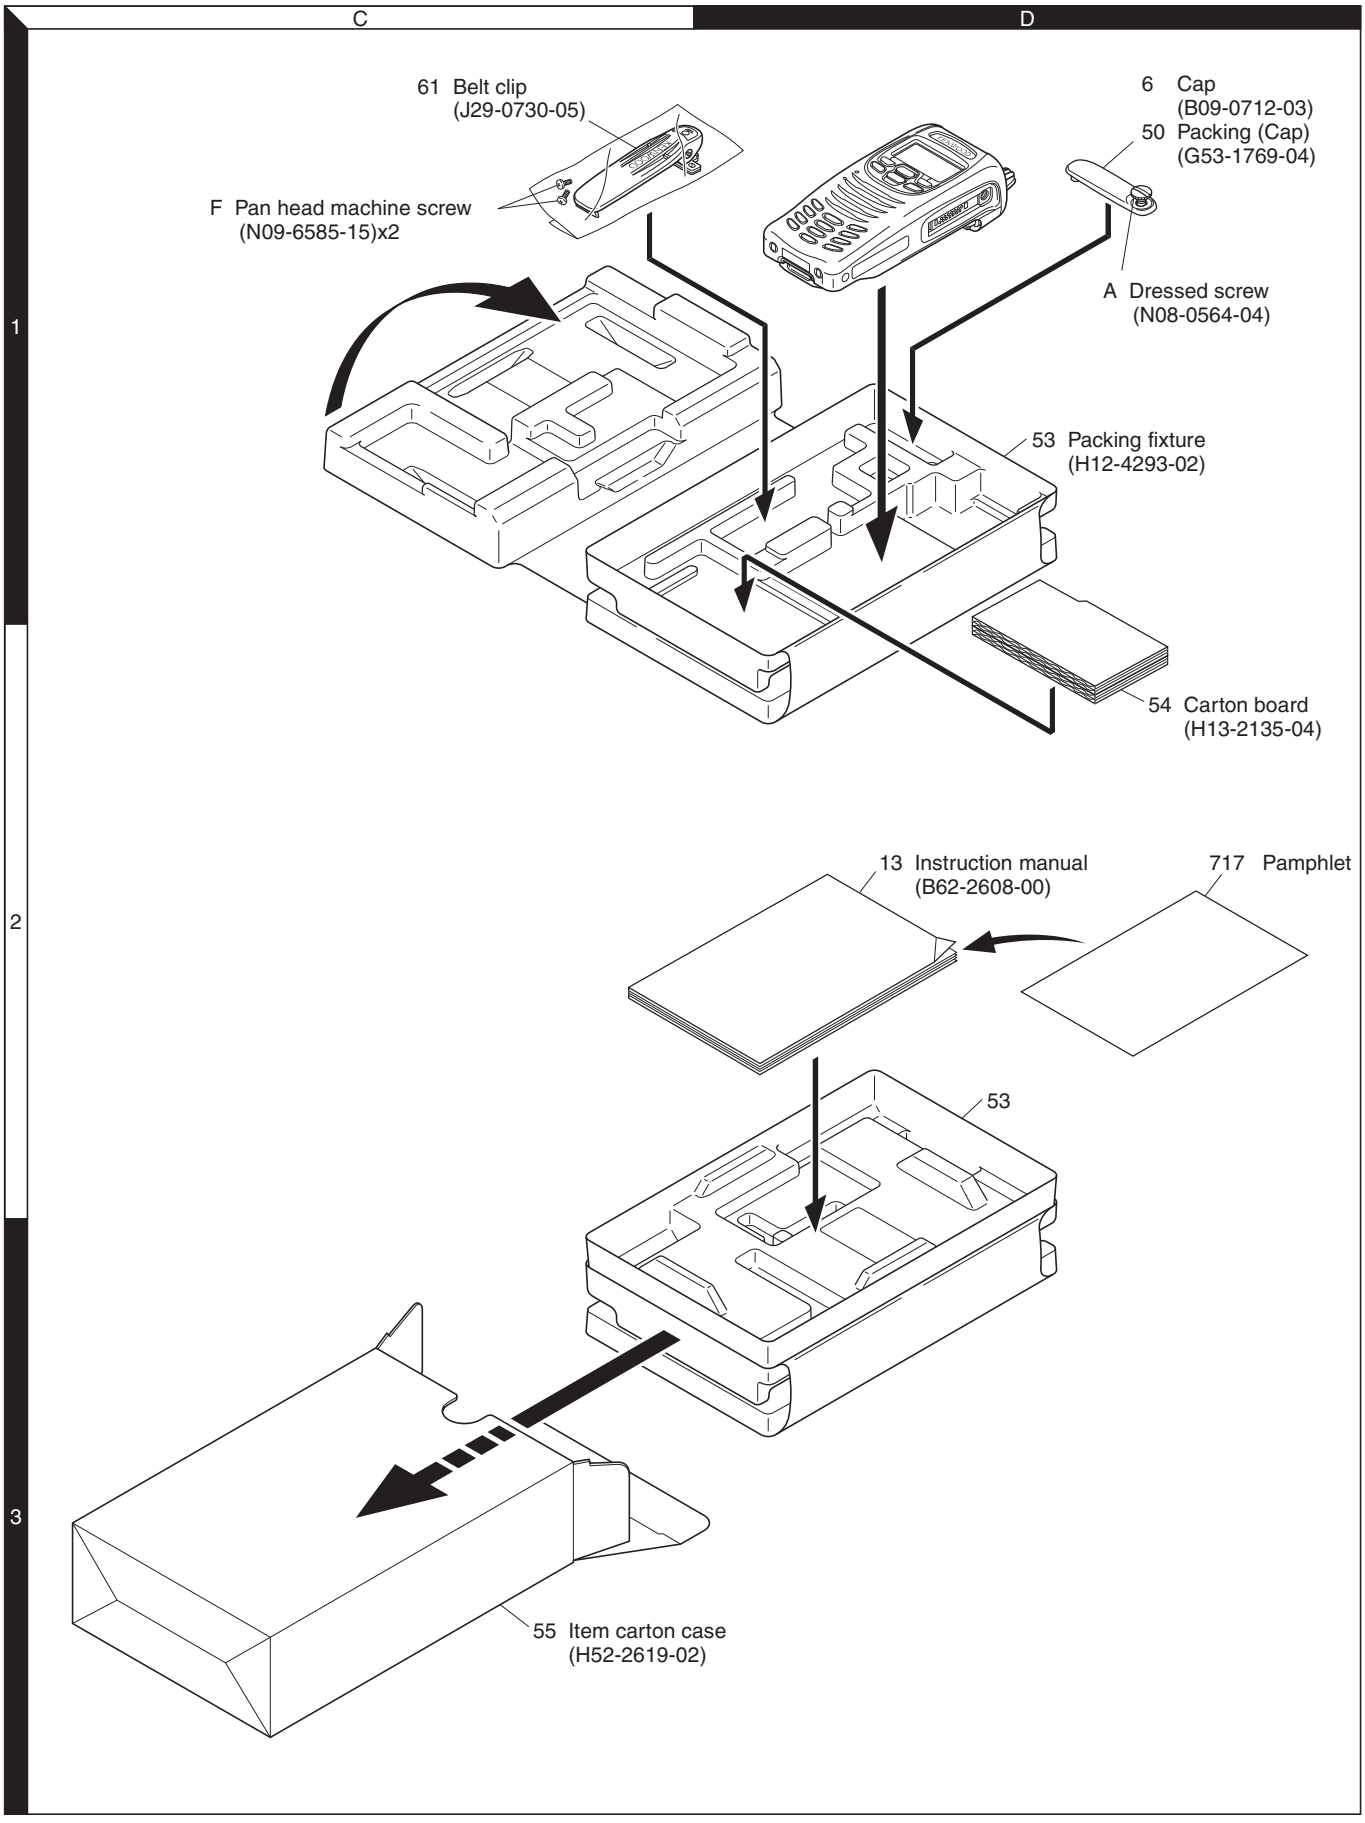

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

NX-300(G)
CONTROL UNIT (X53-4590-XX)

Ref. No.	Address	Parts No.	Description	Destination
NX-300(G)				
1	1B	A02-4002-23	PLASTIC CABINET (6KEY)	K,K2
2	1A	A02-4003-23	PLASTIC CABINET (18KEY)	K3,K4
3	3A	A10-4186-04	CHASSIS	
4	2B	A62-1156-02	PANEL (TOP)	
6	1B,1D	B09-0712-03	CAP ACCESSORY	
7	1A	B11-1853-34	FILTER (LCD)	
8	1A	B11-1854-02	ILLUMINATION GUIDE (LCD)	
9	3B	B11-1855-04	ILLUMINATION GUIDE (TX/BUSY)	
10	1A	B38-0923-05	LCD ASSY	
11	1A	B42-7417-04	STICKER (NEXEDGE)	
12	1B	B43-1606-14	BADGE (KENWOOD)	
13	2D	B62-2608-00	INSTRUCTION MANUAL	
15	2B	D32-0446-14	STOPPER (16CH)	
16	2A	E29-1241-04	RELAY HARDWARE (X57 PCB)	K2,K4
17	2A	E29-1241-04	RELAY HARDWARE (VCO-PCB)	
18	3A	E29-1242-04	RELAY HARDWARE (VCO-CHASSIS)	
19	2A	E37-1718-05	LEAD WIRE WITH CONNECTOR (GPS)	
20	3B	E58-0532-05	RECTANGULAR RECEPTACLE (SP/MIC)	
21	3B	E72-0425-03	TERMINAL BLOCK	
23	3A	F07-1959-04	COVER (OP BOARD)	
24	2A	F10-3162-03	SHIELDING CASE ASSY	
25	2A	G02-1865-03	EARTH SPRING (SP)	
26	2A	G10-1362-04	FIBROUS SHEET (GPS)	
27	1A	G10-1373-04	FIBROUS SHEET (SP)	
28	2B	G10-1807-04	FIBROUS SHEET (TOP PANEL)	
29	2A	G11-4272-14	RUBBER CUSHION (SP)	
30	3A	G11-4428-04	SHEET (PTT)	
31	3A	G11-4429-04	RUBBER SHEET (FET)	
32	3A	G11-4440-04	SHEET (AIR)	
33	2A	G11-4458-14	SHEET (SP)	
34	2A	G11-4459-04	SHEET (TX-RX PCB)	
35	1A	G11-4497-04	SHEET (LCD-HOLDER)	
36	3A	G11-4500-04	SHEET (AIR)	
37	2A	G11-4501-04	SHEET (MIC ELEMENT)	
38	1B	G11-4540-04	SHEET (CABINET)	
39	2A	G13-1856-04	CUSHION (GPS)	
40	2A,3A	G13-2220-04	CUSHION (ANT/GPS)	
41	2A	G13-2292-04	CUSHION (TX-RX PCB)	
42	2A	G13-2293-04	CUSHION (50PIN FPC)	
43	2A	G13-2294-04	CUSHION (BATT-)	
44	3B	G53-1762-02	PACKING (TOP)	
45	3B	G53-1763-03	PACKING (TERMINAL BLOCK)	
46	3A	G53-1764-03	PACKING (OP BOARD)	
47	1B	G53-1765-11	PACKING (6KEY)	K,K2
48	1A	G53-1766-11	PACKING (18KEY)	K3,K4
49	2B	G53-1768-04	PACKING (VOL,SELECTOR O-RING)	
50	1B,1D	G53-1769-04	PACKING (CAP)	
51	2B	G53-1792-04	PACKING (SMA O-RING)	
53	1D,2D	H12-4293-02	PACKING FIXTURE	
54	2D	H13-2135-04	CARTON BOARD	
55	3C	H52-2619-02	ITEM CARTON CASE	

Ref. No.	Address	Parts No.	Description	Destination
57	2A	J19-5505-11	HOLDER (FG-SP)	
58	2B	J19-5506-03	HOLDER (VOL,SELECTOR)	
59	2A	J19-5507-02	HOLDER (OP BOARD)	
60	2B	J21-8638-04	MOUNTING HARDWARE (FG-SP HOLDER)	
61	1C	J29-0730-05	BELT CLIP ACCESSORY	
62	2B	J30-1296-04	SPACER (VOL)	
63	3B	J87-0007-25	FPC (UNIVERSAL)	
64	2B	J87-0028-05	FPC (VOL,SELECTOR)	
65	3A	J99-0711-04	ADHESIVE SHEET (PTT FPC)	
66	2B	J99-0712-14	ADHESIVE SHEET (6KEY FPC)	
67	1A,2A	J99-0714-04	ADHESIVE SHEET (LCD)	
68	2A	J99-0714-04	ADHESIVE SHEET (X57 PCB)	K2,K4
69	3B	J99-0715-08	ADHESIVE SHEET (UNIVERSAL)	
70	2B	J99-0745-04	ADHESIVE SHEET (6KEY FPC)	
71	3B	J99-0747-04	ADHESIVE SHEET (TERMINAL BLOCK)	
73	3A	K25-2001-03	PUSH KNOB (PTT)	
74	1A	K29-9405-03	KNOB (PTT)	
75	1A	K29-9406-03	BUTTON KNOB (SIDE KEY)	
76	1B	K29-9407-03	KNOB (VOL)	
77	1B	K29-9408-13	KNOB (SELECTOR)	
A	1B,1D	N08-0564-04	DRESSED SCREW ACCESSORY	
B	3B	N09-2426-14	HEXAGON HEAD SCREW (BATT-)	
C	3A	N09-2440-15	SPECIAL SCREW (CASE)	
D	2A,2B	N09-6549-04	STEPPED SCREW (FG-SP HOLDER)	
E	2B,3A	N09-6554-05	PAN HEAD SCREW (ANT/OP BOARD)	
F	1C	N09-6585-15	CIRCULAR NUT (VOL,SELECTOR)	
G	2B	N14-0844-04	PAN HEAD MACHINE SCREW (BELT CLIP)	
H	1A,2A,2B	N83-2005-48	PAN HEAD TAPTITE SCREW (PCB)	
S1	2B	S60-0437-05	SPEAKER	
79	1A	S79-0472-05	KEYBOARD ASSY (12KEY)	K3,K4
81	2A	T07-0755-25	SPEAKER	
82	2A	T91-0575-05	MIC ELEMENT	
84	2A	W09-0971-05	LITHIUM CELL	
VR1	2B	R31-0666-05	VARIABLE RESISTOR (VOL)	
86	3A	X41-3830-10	SWITCH UNIT (PTT FPC)	
87	2B	X41-3840-10	SWITCH UNIT (6KEY FPC)	
88	2A	X42-3510-10	CORD ASSY (50PIN FPC)	
89	2B	X60-4080-10	TERMINAL ASSY (SMA)	
-		X53-4590-12	SERVICE CONTROL UNIT (6KEY)	K,K2
-		X53-4590-13	SERVICE CONTROL UNIT (18KEY)	K3,K4
CONTROL UNIT (X53-4590-XX) -10: K,K2 -11: K3,K4				
D1-10		B30-2337-05	LED	K3,K4
D3,4		B30-2337-05	LED	K,K2
D7,8		B30-2337-05	LED	K,K2
C1		CK73HB1A104K	CHIP C 0.10UF K	
C2-6		CK73GB1E105K	CHIP C 1.0UF K	
C7,8		CK73HB1A104K	CHIP C 0.10UF K	
C10		CK73HB1A104K	CHIP C 0.10UF K	
C11		CK73HB0J105K	CHIP C 1.0UF K	
C12-15		CK73HB1H471K	CHIP C 470PF K	
C16,17		CC73HCH1H101J	CHIP C 100PF J	
C23		CK73HB1H102K	CHIP C 1000PF K	

PARTS LIST

CONTROL UNIT (X53-4590-XX)

Ref. No.	Address	Parts No.	Description			Destination
C24		CC73HCH1H470J	CHIP C	47PF	J	
C25-27		CK73HB1H102K	CHIP C	1000PF	K	
C28-34		CC73HCH1H101J	CHIP C	100PF	J	
C35		CK73HB1H102K	CHIP C	1000PF	K	
C36		CK73HB1E682K	CHIP C	6800PF	K	
C37		CK73HB1H102K	CHIP C	1000PF	K	
C38		CC73HCH1H101J	CHIP C	100PF	J	
C40		CC73HCH1H221J	CHIP C	220PF	J	
C41		CC73HCH1H101J	CHIP C	100PF	J	
C101-104		CK73HB1A104K	CHIP C	0.10UF	K	
C105		CK73HB0J105K	CHIP C	1.0UF	K	
C106		CK73HB1E103K	CHIP C	0.010UF	K	
C107		CK73HB1A104K	CHIP C	0.10UF	K	K,K2
C107,108		CK73HB1A104K	CHIP C	0.10UF	K	K3,K4
C109,110		CK73HB1H102K	CHIP C	1000PF	K	
C111-113		CK73HB1A104K	CHIP C	0.10UF	K	
C114		CK73HB0J105K	CHIP C	1.0UF	K	K3,K4
C115		CK73HB1H471K	CHIP C	470PF	K	K3,K4
C116,117		CK73HB1A104K	CHIP C	0.10UF	K	
C118,119		CK73HB0J105K	CHIP C	1.0UF	K	
C120,121		CK73HB1A104K	CHIP C	0.10UF	K	
C122-124		CK73HB1E103K	CHIP C	0.010UF	K	
C130		CK73HB1E103K	CHIP C	0.010UF	K	
C131		CK73HB1A104K	CHIP C	0.10UF	K	
C133		CS77MP0J100M	CHIP TNTL	10UF	6.3WV	
C134		CK73HB1E103K	CHIP C	0.010UF	K	
C135		CK73HB1H102K	CHIP C	1000PF	K	
C136		CK73HB1E103K	CHIP C	0.010UF	K	
C137		CK73GB1E105K	CHIP C	1.0UF	K	
C138-140		CK73HB1A104K	CHIP C	0.10UF	K	
C141		CC73HCH1H101J	CHIP C	100PF	J	
C142		CS77MP0J100M	CHIP TNTL	10UF	6.3WV	
C143		CK73HB1E103K	CHIP C	0.010UF	K	
C144		CK73GB1E105K	CHIP C	1.0UF	K	
C145-148		CK73HB1A104K	CHIP C	0.10UF	K	
C149		CK73HB1E103K	CHIP C	0.010UF	K	
C150		CK73GB1E105K	CHIP C	1.0UF	K	
C151-155		CK73HB1A104K	CHIP C	0.10UF	K	
C156,157		CK73HB1H102K	CHIP C	1000PF	K	
C158		CK73HB1E103K	CHIP C	0.010UF	K	
C159		CK73HB1A104K	CHIP C	0.10UF	K	
C160,161		CK73HB1E682K	CHIP C	6800PF	K	
C401,402		CK73HB1A104K	CHIP C	0.10UF	K	
C403-405		CS77MP1C2R2M	CHIP TNTL	2.2UF	16WV	
C406		CK73HB0J105K	CHIP C	1.0UF	K	
C407,408		CK73HB1H102K	CHIP C	1000PF	K	
C409		CK73HB0J105K	CHIP C	1.0UF	K	
C411,412		CK73HB0J105K	CHIP C	1.0UF	K	
C414		CK73HB0J105K	CHIP C	1.0UF	K	
C415		CS77BP1A100M	CHIP TNTL	10UF	10WV	
C416		CK73FB1A106K	CHIP C	10UF	K	
C417		CC73HCH1H221J	CHIP C	220PF	J	
C418		CK73HB1E103K	CHIP C	0.010UF	K	
C419		CK73FB1E475K	CHIP C	4.7UF	K	
C420		CK73HB1E103K	CHIP C	0.010UF	K	
C421		CK73HB1E682K	CHIP C	6800PF	K	
C422		CC73HCH1H100C	CHIP C	10PF	C	
C424,425		CK73HB1A104K	CHIP C	0.10UF	K	
C427		CK73HB1E103K	CHIP C	0.010UF	K	
C428		CC73HCH1H030C	CHIP C	3.0PF	C	

Ref. No.	Address	Parts No.	Description			Destination
C429,430		CK73HB1A104K	CHIP C	0.10UF	K	
C431		CK73FB1A106K	CHIP C	10UF	K	
C433		CK73FB1A106K	CHIP C	10UF	K	
C435-438		CK73HB1A563K	CHIP C	0.056UF	K	
C439,440		CK73HB1A104K	CHIP C	0.10UF	K	
C441		CK73GB1E105K	CHIP C	1.0UF	K	
C442		CK73HB1H471K	CHIP C	470PF	K	
C443		CK73HB1E103K	CHIP C	0.010UF	K	
C445		CK73HB1H102K	CHIP C	1000PF	K	
C446		CK73GB1E105K	CHIP C	1.0UF	K	
C447		CK73HB1H102K	CHIP C	1000PF	K	
C448-450		CK73HB0J105K	CHIP C	1.0UF	K	
C452,453		CK73HB1E103K	CHIP C	0.010UF	K	
C454		CK73GB1E105K	CHIP C	1.0UF	K	
C455-457		CK73HB1H471K	CHIP C	470PF	K	
C459		CK73HB1H471K	CHIP C	470PF	K	
C460		CK73HB1E682K	CHIP C	6800PF	K	
C461-463		CK73HB1H471K	CHIP C	470PF	K	
C464		CK73HB1E103K	CHIP C	0.010UF	K	
C465		CK73HB1H102K	CHIP C	1000PF	K	
C466		CK73HB1E682K	CHIP C	6800PF	K	
C467,468		CK73HB1A104K	CHIP C	0.10UF	K	
C469,470		CK73HB1H102K	CHIP C	1000PF	K	
C471		CK73HB1C473K	CHIP C	0.047UF	K	
C480		CK73HB1E103K	CHIP C	0.010UF	K	
C701		CK73HB1A104K	CHIP C	0.10UF	K	
C703		CK73GB0J475K	CHIP C	4.7UF	K	
C704,705		CK73HB1A104K	CHIP C	0.10UF	K	
C706		CC73HCH1H680J	CHIP C	68PF	J	
C707		CC73HCH1H270J	CHIP C	27PF	J	
C708		CK73HB1A104K	CHIP C	0.10UF	K	
C709		CK73HB0J105K	CHIP C	1.0UF	K	
C710		CK73HB1E103K	CHIP C	0.010UF	K	
C711		CK73HB1A104K	CHIP C	0.10UF	K	
C712		CK73HB1E103K	CHIP C	0.010UF	K	
C713		CK73HB1H332K	CHIP C	3300PF	K	
C714		CK73HB1H122K	CHIP C	1200PF	K	
C715		CK73HB1A104K	CHIP C	0.10UF	K	
C716		CK73HB1H681K	CHIP C	680PF	K	
C717		CK73HB1E103K	CHIP C	0.010UF	K	
C718		CK73HB1H152K	CHIP C	1500PF	K	
C720		CK73HB1E103K	CHIP C	0.010UF	K	
C721		CK73HB1A104K	CHIP C	0.10UF	K	
C722		CK73HB1E103K	CHIP C	0.010UF	K	
C723		CK73HB1A104K	CHIP C	0.10UF	K	
C724		CK73HB1E103K	CHIP C	0.010UF	K	
C725		CC73HCH1E181J	CHIP C	180PF	J	
C726,727		CK73HB1A104K	CHIP C	0.10UF	K	
C728		CK73HB1H331K	CHIP C	330PF	K	
C730		CK73HB1H331K	CHIP C	330PF	K	
C731,732		CK73HB1E103K	CHIP C	0.010UF	K	
C734		CK73HB1H102K	CHIP C	1000PF	K	
C735		CK73HB1H122K	CHIP C	1200PF	K	
C736,737		CK73HB1A104K	CHIP C	0.10UF	K	
C738		CK73HB1H102K	CHIP C	1000PF	K	
C739		CK73HB1E682K	CHIP C	6800PF	K	
C740		CK73HB1H102K	CHIP C	1000PF	K	
C742		CK73GB1E105K	CHIP C	1.0UF	K	
C743		CK73HB0J105K	CHIP C	1.0UF	K	
C744-746		CK73HB1E103K	CHIP C	0.010UF	K	

PARTS LIST

CONTROL UNIT (X53-4590-XX)

Ref. No.	Address	Parts No.	Description	Destination
C747,748		CK73HB1A104K	CHIP C 0.10UF K	
C749,750		CC73HCH1H470J	CHIP C 47PF J	
C751		CK73GB1E105K	CHIP C 1.0UF K	
C752,753		CC73HCH1H101J	CHIP C 100PF J	
C755		CC73HCH1H470J	CHIP C 47PF J	
C756		CK73HB1A104K	CHIP C 0.10UF K	
C757,758		CK73GB0J475K	CHIP C 4.7UF K	
C759,760		CK73HB1E103K	CHIP C 0.010UF K	
C761		CC73HCH1H100D	CHIP C 10PF D	
C762		CK73HB1A104K	CHIP C 0.10UF K	
C763		CK73HB1E103K	CHIP C 0.010UF K	
C764		CK73HB1H102K	CHIP C 1000PF K	
C765-767		CK73HB1A104K	CHIP C 0.10UF K	
C768		CK73HB1H102K	CHIP C 1000PF K	
C771		CK73HB1A224K	CHIP C 0.22UF K	
C772		CK73HB1E103K	CHIP C 0.010UF K	
C775		CC73HCH1H470J	CHIP C 47PF J	
C777		CK73HB1H102K	CHIP C 1000PF K	
C778		CK73HB0J105K	CHIP C 1.0UF K	
C779		CK73HB1E103K	CHIP C 0.010UF K	
C780		CK73HB1A224K	CHIP C 0.22UF K	
C781,782		CK73HB0J105K	CHIP C 1.0UF K	
C785		CK73HB1A224K	CHIP C 0.22UF K	
C786		CK73HB1E103K	CHIP C 0.010UF K	
C787		CK73HB0J105K	CHIP C 1.0UF K	
C788		CC73HCH1H150J	CHIP C 15PF J	
C789		CC73HCH1H680J	CHIP C 68PF J	
C790		CK73HB1A104K	CHIP C 0.10UF K	
C791		CK73HB1A393K	CHIP C 0.039UF K	
C792		CK73HB0J105K	CHIP C 1.0UF K	
C793,794		CK73HB1A104K	CHIP C 0.10UF K	
C795		CK73HB1E103K	CHIP C 0.010UF K	
C796		CK73HB1A104K	CHIP C 0.10UF K	
C797		CK73HB0J105K	CHIP C 1.0UF K	
C798		CS77BP1A100M	CHIP TNTL 10UF 10WV	
C799		CK73HB1A104K	CHIP C 0.10UF K	
C800		CK73HB1H152K	CHIP C 1500PF K	
C801		CK73HB1C223K	CHIP C 0.022UF K	
C802		CK73HB1E103K	CHIP C 0.010UF K	
C803		CK73HB1H102K	CHIP C 1000PF K	
C804		CC73HCH1H470J	CHIP C 47PF J	
C805,806		CK73HB1H471K	CHIP C 470PF K	
C808		CK73GB0J475K	CHIP C 4.7UF K	
C809		CK73FB1A106K	CHIP C 10UF K	
C812		CK73HB0J105K	CHIP C 1.0UF K	
CN1		E40-6755-05	FLAT CABLE CONNECTOR	
CN22		E23-1325-05	TERMINAL	
CN23		E40-6758-05	PIN ASSY	
CN24		E23-1325-05	TERMINAL	
CN403		E40-6813-05	PIN ASSY	
CN404		E40-6421-15	PIN ASSY	
CN405		E40-6754-05	FLAT CABLE CONNECTOR	
CN701		E40-6586-05	SOCKET FOR PIN ASSY	
CN710		E40-6757-05	PIN ASSY	
F701		F53-0360-05	FUSE (0.25A)	
CN401		J19-5386-05	HOLDER (LITHIUM CELL)	
L1,2		L92-0408-05	CHIP FERRITE	
L3		L92-0140-05	CHIP FERRITE	

Ref. No.	Address	Parts No.	Description	Destination
L4-7		L92-0408-05	CHIP FERRITE	
L8		L92-0140-05	CHIP FERRITE	
L101,102		L92-0408-05	CHIP FERRITE	
L401		L33-1496-05	SMALL FIXED INDUCTOR (22UH)	
L402		L92-0467-05	CHIP FERRITE	
L403		L92-0466-05	CHIP FERRITE	
L409-411		L92-0467-05	CHIP FERRITE	
L701		L92-0140-05	CHIP FERRITE	
L702		L92-0162-05	BEADS CORE	
L704-709		L92-0162-05	BEADS CORE	
L710-712		L92-0444-05	CHIP FERRITE	
L713		L92-0163-05	BEADS CORE	
L714-717		L92-0444-05	CHIP FERRITE	
L718		L92-0408-05	CHIP FERRITE	
L719		L33-1494-05	SMALL FIXED INDUCTOR (4.7UH)	
X101		L77-1802-05	CRYSTAL RESONATOR (32768HZ)	
X102		L77-3015-05	TCXO (18.432MHZ)	
R1		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R2		RK73HB1J104J	CHIP R 100K J 1/16W	
R3		RK73HB1J123J	CHIP R 12K J 1/16W	
R4-10		RK73HB1J103J	CHIP R 10K J 1/16W	
R11		RK73HB1J104J	CHIP R 100K J 1/16W	
R12		RK73HB1J103J	CHIP R 10K J 1/16W	
R14		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R15		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R16		RK73HB1J331J	CHIP R 330 J 1/16W	
R17		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R18		RK73HB1J822J	CHIP R 8.2K J 1/16W	
R19		RK73HB1J471J	CHIP R 470 J 1/16W	
R20		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R21		RK73HB1J122J	CHIP R 1.2K J 1/16W	
R22-24		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R25		RK73HB1J122J	CHIP R 1.2K J 1/16W	
R26		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R27		RK73HB1J104J	CHIP R 100K J 1/16W	
R28,29		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R30		RK73HB1J101J	CHIP R 100 J 1/16W	
R31		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R32-35		RK73HB1J101J	CHIP R 100 J 1/16W	
R40		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R101,102		RK73HB1J474J	CHIP R 470K J 1/16W	
R103		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R105		RK73HB1J104J	CHIP R 100K J 1/16W	
R106		RK73HB1J472J	CHIP R 4.7K J 1/16W	K3,K4
R107		RK73HB1J104J	CHIP R 100K J 1/16W	
R108		RK73HB1J474J	CHIP R 470K J 1/16W	K3,K4
R110,111		RK73HB1J104J	CHIP R 100K J 1/16W	
R112		RK73HB1J000J	CHIP R 0.0 J 1/16W	K3,K4
R113		RK73HB1J104J	CHIP R 100K J 1/16W	
R114		RK73HB1J331J	CHIP R 330 J 1/16W	K3,K4
R115		RK73HB1J104J	CHIP R 100K J 1/16W	
R116		RK73HB1J473J	CHIP R 47K J 1/16W	
R117		RK73HB1J000J	CHIP R 0.0 J 1/16W	K3,K4
R118		RK73HB1J473J	CHIP R 47K J 1/16W	
R119		RK73HB1J104J	CHIP R 100K J 1/16W	
R120		RK73HB1J474J	CHIP R 470K J 1/16W	
R121-123		RK73HB1J104J	CHIP R 100K J 1/16W	
R126		RK73HB1J101J	CHIP R 100 J 1/16W	
R127,128		RK73HB1J000J	CHIP R 0.0 J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4590-XX)

Ref. No.	Address	Parts No.	Description				Destination
R129-131		RK73HB1J101J	CHIP R	100	J	1/16W	
R132,133		RK73HB1J104J	CHIP R	100K	J	1/16W	
R135-137		RK73HB1J104J	CHIP R	100K	J	1/16W	
R138		RK73HB1J473J	CHIP R	47K	J	1/16W	
R139		RK73HB1J104J	CHIP R	100K	J	1/16W	
R140		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R141-143		RK73HB1J104J	CHIP R	100K	J	1/16W	
R144		RK73HB1J471J	CHIP R	470	J	1/16W	
R145-147		RK73HB1J104J	CHIP R	100K	J	1/16W	
R148		RK73HB1J151J	CHIP R	150	J	1/16W	
R149		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R150		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R153,154		RK73HB1J104J	CHIP R	100K	J	1/16W	
R155		RK73HB1J473J	CHIP R	47K	J	1/16W	
R156,157		RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R158,159		RK73HB1J220J	CHIP R	22	J	1/16W	
R160,161		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R162		RK73HB1J474J	CHIP R	470K	J	1/16W	
R163		RK73HH1J104D	CHIP R	100K	D	1/16W	
R165		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R166		RK73HB1J104J	CHIP R	100K	J	1/16W	
R167		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R168		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R170		RK73HH1J103D	CHIP R	10K	D	1/16W	
R171-173		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R174-178		RK73HB1J104J	CHIP R	100K	J	1/16W	
R180,181		RK73HB1J104J	CHIP R	100K	J	1/16W	
R182		RK73HB1J474J	CHIP R	470K	J	1/16W	
R183		RK73HB1J104J	CHIP R	100K	J	1/16W	
R184		RK73HB1J473J	CHIP R	47K	J	1/16W	
R185		RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R186		RK73HB1J473J	CHIP R	47K	J	1/16W	
R187		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R188		RK73HB1J473J	CHIP R	47K	J	1/16W	
R189		RK73HB1J104J	CHIP R	100K	J	1/16W	
R190		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R191		RK73HB1J474J	CHIP R	470K	J	1/16W	
R192		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R193,194		RK73HB1J104J	CHIP R	100K	J	1/16W	
R401		RK73HB1J152J	CHIP R	1.5K	J	1/16W	K3,K4
R402		RK73HB1J151J	CHIP R	150	J	1/16W	
R403		RK73HB1J152J	CHIP R	1.5K	J	1/16W	K3,K4
R404		RK73HB1J151J	CHIP R	150	J	1/16W	
R405		RK73HB1J152J	CHIP R	1.5K	J	1/16W	K3,K4
R406		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R407,408		RK73HB1J103J	CHIP R	10K	J	1/16W	
R409		RK73HB1J470J	CHIP R	47	J	1/16W	
R410-416		RK73HB1J471J	CHIP R	470	J	1/16W	
R417		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R418		RK73HB1J471J	CHIP R	470	J	1/16W	
R419,420		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R424		RK73HH1J683D	CHIP R	68K	D	1/16W	
R425		RK73HH1J333D	CHIP R	33K	D	1/16W	
R426-429		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R431		RK73HB1J474J	CHIP R	470K	J	1/16W	
R432,433		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R434		RK73HB1J393J	CHIP R	39K	J	1/16W	
R435,436		RK73HB1J104J	CHIP R	100K	J	1/16W	
R437		RK73HB1J471J	CHIP R	470	J	1/16W	
R438,439		RK73HB1J104J	CHIP R	100K	J	1/16W	

Ref. No.	Address	Parts No.	Description				Destination
R440		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R441		RK73HB1J153J	CHIP R	15K	J	1/16W	
R442		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R443		RK73HB1J474J	CHIP R	470K	J	1/16W	
R444		RK73HB1J564J	CHIP R	560K	J	1/16W	
R445		RK73HB1J154J	CHIP R	150K	J	1/16W	
R446		RK73HB1J274J	CHIP R	270K	J	1/16W	
R447		RK73HB1J104J	CHIP R	100K	J	1/16W	
R448		RK73HB1J103J	CHIP R	10K	J	1/16W	
R449-452		RK73HB1J474J	CHIP R	470K	J	1/16W	
R453		RK73HB1J104J	CHIP R	100K	J	1/16W	
R454		RK73HB1J474J	CHIP R	470K	J	1/16W	
R455		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R456		RK73HB1J474J	CHIP R	470K	J	1/16W	
R457,458		RK73HB1J104J	CHIP R	100K	J	1/16W	
R459,460		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R461		RK73HB1J103J	CHIP R	10K	J	1/16W	
R462		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R463		RK73HB1J104J	CHIP R	100K	J	1/16W	
R465		RK73HB1J103J	CHIP R	10K	J	1/16W	
R466,467		RK73HB1J104J	CHIP R	100K	J	1/16W	
R468		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R469		RK73HB1J474J	CHIP R	470K	J	1/16W	
R470		RK73HB1J183J	CHIP R	18K	J	1/16W	
R471		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R472		RK73HB1J223J	CHIP R	22K	J	1/16W	
R473		RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R474,475		RK73HB1J333J	CHIP R	33K	J	1/16W	
R477,478		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R479		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R481		RK73HB1J474J	CHIP R	470K	J	1/16W	
R483		RK73HB1J473J	CHIP R	47K	J	1/16W	
R484		RK73HB1J223J	CHIP R	22K	J	1/16W	
R485		RK73HB1J103J	CHIP R	10K	J	1/16W	
R487-490		RK73HH1J223D	CHIP R	22K	D	1/16W	
R491		RK73HB1J104J	CHIP R	100K	J	1/16W	
R492		RK73HB1J474J	CHIP R	470K	J	1/16W	
R493		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R494-497		RK73HH1J104D	CHIP R	100K	D	1/16W	
R500		RK73HB1J473J	CHIP R	47K	J	1/16W	
R501		RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R502,503		RK73HB1J103J	CHIP R	10K	J	1/16W	
R504		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R506		RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R507-511		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R512		RK73HB1J101J	CHIP R	100	J	1/16W	
R513-515		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R516		RK73HB1J101J	CHIP R	100	J	1/16W	
R517		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R518		RK73HB1J101J	CHIP R	100	J	1/16W	
R519-528		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R529-531		RK73HB1J101J	CHIP R	100	J	1/16W	
R532		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R533-535		RK73HB1J101J	CHIP R	100	J	1/16W	
R536-540		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R541		RK73HB1J101J	CHIP R	100	J	1/16W	
R543		RK73HB1J101J	CHIP R	100	J	1/16W	
R544		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R545		RK73HB1J101J	CHIP R	100	J	1/16W	
R546,547		RK73HB1J102J	CHIP R	1.0K	J	1/16W	

PARTS LIST

CONTROL UNIT (X53-4590-XX)

Ref. No.	Address	Parts No.	Description	Destination
R548,549		RK73HB1J473J	CHIP R 47K J 1/16W	
R550		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R701-707		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R709-715		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R716		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R717-722		RK73HB1J104J	CHIP R 100K J 1/16W	
R723		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R724		RK73HB1J104J	CHIP R 100K J 1/16W	
R725		RK73HB1J100J	CHIP R 10 J 1/16W	
R726		RK73HB1J104J	CHIP R 100K J 1/16W	
R727-729		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R730		RK73HB1J471J	CHIP R 470 J 1/16W	
R731,732		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R733		RK73HB1J473J	CHIP R 47K J 1/16W	
R735		RK73HB1J473J	CHIP R 47K J 1/16W	
R736		RK73HB1J823J	CHIP R 82K J 1/16W	
R737		RK73HB1J153J	CHIP R 15K J 1/16W	
R738		RK73HB1J563J	CHIP R 56K J 1/16W	
R739		RK73HB1J823J	CHIP R 82K J 1/16W	
R740		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R741		RK73HB1J474J	CHIP R 470K J 1/16W	
R742,743		RK73HB1J103J	CHIP R 10K J 1/16W	
R744		RK73HB1J223J	CHIP R 22K J 1/16W	
R745		RK73HB1J682J	CHIP R 6.8K J 1/16W	
R746		RK73HB1J563J	CHIP R 56K J 1/16W	
R748		RK73HB1J103J	CHIP R 10K J 1/16W	
R749		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R750		RK73HB1J103J	CHIP R 10K J 1/16W	
R752		RK73HB1J101J	CHIP R 100 J 1/16W	
R753		RK73HB1J683J	CHIP R 68K J 1/16W	
R754		RK73HB1J564J	CHIP R 560K J 1/16W	
R755		RK73HB1J104J	CHIP R 100K J 1/16W	
R756		RK73HB1J101J	CHIP R 100 J 1/16W	
R757		RK73HB1J223J	CHIP R 22K J 1/16W	
R758		RK73HB1J103J	CHIP R 10K J 1/16W	
R759		RK73HB1J101J	CHIP R 100 J 1/16W	
R761-764		RK73HB1J223J	CHIP R 22K J 1/16W	
R765		RK73HB1J334J	CHIP R 330K J 1/16W	
R766		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R767		RK73HB1J103J	CHIP R 10K J 1/16W	
R768		RK73HB1J224J	CHIP R 220K J 1/16W	
R769,770		RK73HB1J334J	CHIP R 330K J 1/16W	
R771		RK73HB1J153J	CHIP R 15K J 1/16W	
R775		RK73HB1J183J	CHIP R 18K J 1/16W	
R777		RK73HB1J473J	CHIP R 47K J 1/16W	
R778		RK73HB1J333J	CHIP R 33K J 1/16W	
R779		RK73HB1J473J	CHIP R 47K J 1/16W	
R780		RK73HB1J104J	CHIP R 100K J 1/16W	
R782		RK73HB1J104J	CHIP R 100K J 1/16W	
R783		RK73HB1J183J	CHIP R 18K J 1/16W	
R784		RK73HB1J104J	CHIP R 100K J 1/16W	
R785		RK73HB1J682J	CHIP R 6.8K J 1/16W	
R786		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R787		RK73HB1J124J	CHIP R 120K J 1/16W	
R788		RK73HB1J473J	CHIP R 47K J 1/16W	
R789		RK73HB1J154J	CHIP R 150K J 1/16W	
R790		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R791		RK73HB1J474J	CHIP R 470K J 1/16W	
R793		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R794		RK73HB1J104J	CHIP R 100K J 1/16W	
R795		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R796		RK73HB1J333J	CHIP R 33K J 1/16W	
R797		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R798		RK73HB1J104J	CHIP R 100K J 1/16W	
R799		RK73HB1J334J	CHIP R 330K J 1/16W	
R800		RK73HB1J474J	CHIP R 470K J 1/16W	
R801		RK73HB1J473J	CHIP R 47K J 1/16W	
R802		RK73HB1J474J	CHIP R 470K J 1/16W	
R803		RK73HB1J103J	CHIP R 10K J 1/16W	
R804		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R805,806		RK73HB1J473J	CHIP R 47K J 1/16W	
R807		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R808		RK73HB1J471J	CHIP R 470 J 1/16W	
R809		RK73HB1J334J	CHIP R 330K J 1/16W	
R810		RK73HB1J332J	CHIP R 3.3K J 1/16W	
R811		RK73HB1J823J	CHIP R 82K J 1/16W	
R812		RK73HB1J562J	CHIP R 5.6K J 1/16W	
R813		RK73HB1J273J	CHIP R 27K J 1/16W	
R814		RK73HB1J564J	CHIP R 560K J 1/16W	
R815		RK73HB1J104J	CHIP R 100K J 1/16W	
R816		RK73HB1J683J	CHIP R 68K J 1/16W	
R818		RK73HB1J104J	CHIP R 100K J 1/16W	
R819,820		RK73HB1J103J	CHIP R 10K J 1/16W	
R821		RK73HB1J104J	CHIP R 100K J 1/16W	
R822,823		RK73HB1J103J	CHIP R 10K J 1/16W	
R824		RK73HB1J393J	CHIP R 39K J 1/16W	
R825		RK73HB1J104J	CHIP R 100K J 1/16W	
R826		RK73HB1J334J	CHIP R 330K J 1/16W	
R827		RK73HB1J184J	CHIP R 180K J 1/16W	
R828,829		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R830		RK73HB1J105J	CHIP R 1.0M J 1/16W	
R831		RK73HB1J474J	CHIP R 470K J 1/16W	
R832		RK73HB1J473J	CHIP R 47K J 1/16W	
R833		RK73HB1J684J	CHIP R 680K J 1/16W	
R834		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R835		RK73HB1J153J	CHIP R 15K J 1/16W	
R836		RK73HB1J473J	CHIP R 47K J 1/16W	
R837		RK73HB1J683J	CHIP R 68K J 1/16W	
R838		RK73HB1J564J	CHIP R 560K J 1/16W	
R839		RK73HB1J333J	CHIP R 33K J 1/16W	
R840		RK73HB1J123J	CHIP R 12K J 1/16W	
R841		RK73HB1J564J	CHIP R 560K J 1/16W	
R842		RK73HB1J104J	CHIP R 100K J 1/16W	
R843		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R844		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R845		RK73HB1J104J	CHIP R 100K J 1/16W	
R846		RK73HB1J471J	CHIP R 470 J 1/16W	
R847		RK73HB1J182J	CHIP R 1.8K J 1/16W	
R848		RK73HB1J000J	CHIP R 0.0 J 1/16W	K,K2
R849,850		RK73HB1J000J	CHIP R 0.0 J 1/16W	K3,K4
R850		RK73HB1J000J	CHIP R 0.0 J 1/16W	K,K2
R851,852		RK73HB1J683J	CHIP R 68K J 1/16W	
D11		DA2S101	DIODE	
D12-16		KDR720F-P	DIODE	
D17		EMZ6.8N	ZENER DIODE	
D18,19		HZC6.8-E	ZENER DIODE	
D20,21		NNCD6.8G-A	ZENER DIODE	
D22,23		KDS123E-P	DIODE	
D101		DA2S101	DIODE	K3,K4

PARTS LIST

CONTROL UNIT (X53-4590-XX)
TX-RX UNIT (X57-8960-XX)

Ref. No.	Address	Parts No.	Description	Destination
D102		KDR720F-P	DIODE	
D401-405		1SS388F	DIODE	
D406		HRB0502A	DIODE	
D407		DA2S101	DIODE	
D408		KDS121-P	DIODE	
D409,410		DA2S101	DIODE	
D411		KDR720F-P	DIODE	
D412		KDS121-P	DIODE	
D413		1SS388F	DIODE	
D414,415		KDR720F-P	DIODE	
D416,417		1SS388F	DIODE	
D701		KDS121-P	DIODE	
D702		DA2S101	DIODE	
D703-706		KDR731	DIODE	
D707		KDS123E-P	DIODE	
IC1		NJM2130F3-ZB	BI-POLAR IC	
IC101		**Note 1**	ROM IC	
IC102		**Note 1**	MICROPROCESSOR IC	
IC103		**Note 1**	SRAM IC	
IC104		TC7SH08FU-F	MOS-IC	
IC105		XC6109C29AN-G	ANALOGUE IC	
IC106		RV5C386A	MOS-IC	
IC107		SM5023CNDH-G	MOS-IC	
IC108		**Note 1**	MOS-IC	
IC109		TC7SH08FU-F	MOS-IC	
IC401		TC74LCX245FK	MOS-IC	
IC402		TC7WZ245FK-F	MOS-IC	
IC403		LM2682MMX	MOS-IC	
IC404		XC6204B332D-G	MOS-IC	
IC406		XC6204B332M-G	MOS-IC	
IC407		LT1616ES6-PBF	ANALOGUE IC	
IC408		TC75S51FE(F)	MOS-IC	
IC409		TC7W66FK-F	MOS-IC	
IC411		NJM2880U105ZB	ANALOGUE IC	
IC412,413		TPA6201A1DRBR	ANALOGUE IC	
IC414		XC61CC5602N-G	MOS-IC	
IC415		TC7SET08FU-F	MOS-IC	
IC416		S-812C31BPI-G	ANALOGUE IC	
IC417		TC7WH126FK	MOS-IC	
IC418		TC7WT125FUF	MOS-IC	
IC701		PCA9535BS	MOS-IC	
IC702		TC75W51FK(F)	MOS-IC	
IC703		M62364FP-F	MOS-IC	
IC704		TC75S51FE(F)	MOS-IC	
IC705		TC75W51FK(F)	MOS-IC	
IC706		TC75S51FE(F)	MOS-IC	
IC707		TC7W53FK(F)	MOS-IC	
IC708		XC6209B502P-G	MOS-IC	
IC709		TC7W53FK(F)	MOS-IC	
IC710,711		TC75W51FK(F)	MOS-IC	
IC712		TC7S66FUF	MOS-IC	
IC713		TC75W51FK(F)	MOS-IC	
IC714		TC7W53FK(F)	MOS-IC	
IC715		TC75S51FE(F)	MOS-IC	
IC716		TC75W51FK(F)	MOS-IC	
IC717		XC9235A15CM-G	MOS-IC	
Q1		2SA1362-F(GR)	TRANSISTOR	
Q2		KTC4075E(Y,GR)	TRANSISTOR	
Q3,4		SSM3K15TE(F)	FET	

Ref. No.	Address	Parts No.	Description	Destination
Q5		2SJ347F	FET	
Q101		2SA1832(GR)F	TRANSISTOR	K3,K4
Q102		KTC4075E(Y,GR)	TRANSISTOR	K3,K4
Q103		SSM3K15TE(F)	FET	K3,K4
Q401,402		SSM6N16FE-F	FET	
Q403		2SJ648-A	FET	
Q404		SSM3K15TE(F)	FET	
Q405		SSM6N16FE-F	FET	
Q406		2SB798AZ(DLDK	TRANSISTOR	
Q407		KRC660U-P	TRANSISTOR	
Q408		EMD12	TRANSISTOR	
Q409		2SA1955A-F	TRANSISTOR	
Q410		SSM3K15TE(F)	FET	
Q411		SSM6N16FE-F	FET	
Q412		SSM3K15TE(F)	FET	
Q413		2SA1955A-F	TRANSISTOR	
Q414,415		EMD12	TRANSISTOR	
Q702,703		SSM3K15TE(F)	FET	
Q704		KTC4075E(Y,GR)	TRANSISTOR	
Q705		2SC4738(GR)F	TRANSISTOR	
Q706		2SA1832(GR)F	TRANSISTOR	
Q707		2SJ243-A	FET	
TH1		ERTJ0EV104H	THERMISTOR	
TH701		ERTJ0EV104H	THERMISTOR	

TX-RX UNIT (X57-8960-XX) -14: K,K3 -15: K2,K4

D900		B30-2278-05	LED (RED/YELLOW)			
C500		CK73HB1A104K	CHIP C	0.10UF	K	
C501		CC73HCH1H101J	CHIP C	100PF	J	
C502		CK73HB1H471K	CHIP C	470PF	K	
C503		CK73HB1A104K	CHIP C	0.10UF	K	
C504		CK73HB1C103K	CHIP C	0.010UF	K	
C505		CC73HCH1H101J	CHIP C	100PF	J	
C506		CC73HCH1H100C	CHIP C	10PF	C	
C508		CK73HB1C103K	CHIP C	0.010UF	K	
C509		CC73HCH1H100C	CHIP C	10PF	C	
C511		CK73FB0J106K	CHIP C	10UF	K	
C512		CK73HB1C103K	CHIP C	0.010UF	K	
C513		CC73HCH1H101J	CHIP C	100PF	J	
C514-516		CK73HB1C103K	CHIP C	0.010UF	K	K,K3
C514,515		CK73HB1C103K	CHIP C	0.010UF	K	K2,K4
C517-519		CC73HCH1H101J	CHIP C	100PF	J	
C520		CK73GB1E105K	CHIP C	1.0UF	K	
C521		CC73HCH1H101J	CHIP C	100PF	J	
C522		CK73HB1A104K	CHIP C	0.10UF	K	
C523,524		CC73HCH1H101J	CHIP C	100PF	J	
C525		CC73HCH1H470J	CHIP C	47PF	J	
C526		CK73HB1A104K	CHIP C	0.10UF	K	
C527-529		CC73HCH1H101J	CHIP C	100PF	J	K,K3
C527,528		CC73HCH1H101J	CHIP C	100PF	J	K2,K4
C533		CK73HB1H471K	CHIP C	470PF	K	
C534		CC73HCH1H101J	CHIP C	100PF	J	
C535		CS77MA1VR15M	CHIP TNTL	0.15UF	35WV	
C536		CC73HCH1H470J	CHIP C	47PF	J	
C537		CC73HCH1H050B	CHIP C	5.0PF	B	K,K3
C539		CS77BA1D100M	CHIP TNTL	10UF	20WV	
C541		C93-1906-05	CHIP FILM	0.047UF	35WV	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

TX-RX UNIT (X57-8960-XX)

Ref. No.	Address	Parts No.	Description			Destination
C542		C93-0787-05	CHIP C	0.1UF	J	
C543		CC73HCH1H030B	CHIP C	3.0PF	B	K,K3
C543		CC73HCH1H040B	CHIP C	4.0PF	B	K2,K4
C545		CK73HB1H471K	CHIP C	470PF	K	K2,K4
C546		CK73HB1H472K	CHIP C	4700PF	K	
C547		CK73HB1H471K	CHIP C	470PF	K	K2,K4
C547,548		CC73HCH1H101J	CHIP C	100PF	J	K,K3
C548		CC73HCH1H101J	CHIP C	100PF	J	K2,K4
C550		CC73HCH1H050B	CHIP C	5.0PF	B	
C553		CC73HCH1H100B	CHIP C	10PF	B	K2,K4
C553		CC73HCH1H050B	CHIP C	5.0PF	B	K,K3
C554		CC73HCH1H470J	CHIP C	47PF	J	
C555		CK73HB0J105K	CHIP C	1.0UF	K	
C556		CK73HB1H471K	CHIP C	470PF	K	
C557		CC73HCH1H101J	CHIP C	100PF	J	K,K3
C557		CK73HB1H471K	CHIP C	470PF	K	K2,K4
C561		CK73HB1C103K	CHIP C	0.010UF	K	K2,K4
C562		CK73HB0J105K	CHIP C	1.0UF	K	
C563		CC73HCH1H101J	CHIP C	100PF	J	K2,K4
C565		CC73HCH1H330J	CHIP C	33PF	J	
C566		CC73HCH1H680J	CHIP C	68PF	J	K,K3
C566		CC73HCH1H820J	CHIP C	82PF	J	K2,K4
C567		CC73HCH1H0R5B	CHIP C	0.5PF	B	K2,K4
C568		CC73HCH1H1R5B	CHIP C	1.5PF	B	K2,K4
C570		CC73HCH1HR75B	CHIP C	0.75PF	B	
C571		CC73HCH1H030B	CHIP C	3.0PF	B	
C572		CK73FB0J106K	CHIP C	10UF	K	
C573		CC73HCH1H040B	CHIP C	4.0PF	B	K,K3
C573		CC73HCH1H060B	CHIP C	6.0PF	B	K2,K4
C574		CC73HCH1H020B	CHIP C	2.0PF	B	K2,K4
C574		CC73HCH1H010B	CHIP C	1.0PF	B	K,K3
C575		CC73HCH1H060B	CHIP C	6.0PF	B	K2,K4
C575		CC73HCH1H030B	CHIP C	3.0PF	B	K,K3
C576		CC73HCH1H050B	CHIP C	5.0PF	B	
C577		CK73HB1H471K	CHIP C	470PF	K	
C578		CK73GB0J475K	CHIP C	4.7UF	K	
C579		CC73HCH1H050B	CHIP C	5.0PF	B	
C580		CK73HB1H471K	CHIP C	470PF	K	
C581		CC73HCH1H0R5B	CHIP C	0.5PF	B	
C582		CK73HB1H471K	CHIP C	470PF	K	
C583		CC73HCH1H0R5B	CHIP C	0.5PF	B	
C584,585		CK73HB1H471K	CHIP C	470PF	K	
C586		CC73HCH1H070B	CHIP C	7.0PF	B	K,K3
C586		CC73HCH1H100B	CHIP C	10PF	B	K2,K4
C587		CK73HB1H471K	CHIP C	470PF	K	
C588		CC73HCH1H100B	CHIP C	10PF	B	
C600		CK73HB1A104K	CHIP C	0.10UF	K	
C601		CC73HCH1H101J	CHIP C	100PF	J	
C602		CK73HB1A104K	CHIP C	0.10UF	K	
C603		CC73HCH1H100B	CHIP C	10PF	B	
C604,605		CK73HB1H471K	CHIP C	470PF	K	
C607		CC73HCH1H070B	CHIP C	7.0PF	B	
C609		CC73GCH1H010B	CHIP C	1.0PF	B	K2,K4
C610-612		CK73HB1H471K	CHIP C	470PF	K	
C613		CC73HCH1H040B	CHIP C	4.0PF	B	K2,K4
C613		CC73HCH1H070B	CHIP C	7.0PF	B	K,K3
C614,615		CK73HB1H471K	CHIP C	470PF	K	
C617,618		CK73HB1H471K	CHIP C	470PF	K	
C619		CK73HB1A104K	CHIP C	0.10UF	K	
C621		CC73HCH1H040B	CHIP C	4.0PF	B	K2,K4

Ref. No.	Address	Parts No.	Description			Destination
C621		CC73HCH1H150J	CHIP C	15PF	J	K,K3
C622		CK73HB1H471K	CHIP C	470PF	K	
C623		CC73HCH1H120J	CHIP C	12PF	J	K2,K4
C623		CC73HCH1H150J	CHIP C	15PF	J	K,K3
C625		CK73HB1H471K	CHIP C	470PF	K	
C626		CK73HB1A104K	CHIP C	0.10UF	K	
C627		CC73HCH1H080B	CHIP C	8.0PF	B	
C628		CC73HCH1H100C	CHIP C	10PF	C	
C629		CK73HB1H471K	CHIP C	470PF	K	
C630		CK73GB1E105K	CHIP C	1.0UF	K	
C631		CS77CA1A6R8M	CHIP TNTL	6.8UF	10WV	
C632		CK73HB1H471K	CHIP C	470PF	K	
C634-637		CK73HB1H471K	CHIP C	470PF	K	
C639		CC73HCH1H330J	CHIP C	33PF	J	K2,K4
C639		CC73HCH1H390J	CHIP C	39PF	J	K,K3
C640		CC73HCH1H470J	CHIP C	47PF	J	
C641		CC73HCH1H100C	CHIP C	10PF	C	
C642,643		CC73HCH1H151J	CHIP C	150PF	J	
C645		CK73GB1C104K	CHIP C	0.10UF	K	
C646		CK73GB1E105K	CHIP C	1.0UF	K	
C647		C93-0943-05	CHIP C	22PF	G	K,K3
C648,649		CK73HB1C103K	CHIP C	0.010UF	K	
C651		CK73HB1H471K	CHIP C	470PF	K	
C653		CK73HB1H471K	CHIP C	470PF	K	
C660		CC73GCH1H101J	CHIP C	100PF	J	K2,K4
C660		CC73GCH1H470J	CHIP C	47PF	J	K,K3
C661		CK73HB1H471K	CHIP C	470PF	K	
C662		CC73GCH1H010B	CHIP C	1.0PF	B	K,K3
C662		CC73GCH1H040B	CHIP C	4.0PF	B	K2,K4
C663		CC73GCH1H101J	CHIP C	100PF	J	
C664		CC73GCH1H040B	CHIP C	4.0PF	B	K,K3
C664		CC73GCH1H2R5B	CHIP C	2.5PF	B	K2,K4
C665		CC73GCH1H020B	CHIP C	2.0PF	B	K,K3
C665		CC73GCH1H030B	CHIP C	3.0PF	B	K2,K4
C666		CC73GCH1H050B	CHIP C	5.0PF	B	K,K3
C666		CC73GCH1H080B	CHIP C	8.0PF	B	K2,K4
C667		CC73GCH1H020B	CHIP C	2.0PF	B	K,K3
C667		CC73GCH1H2R5B	CHIP C	2.5PF	B	K2,K4
C668		CC73GCH1H080B	CHIP C	8.0PF	B	K,K3
C668		CC73GCH1H100C	CHIP C	10PF	C	K2,K4
C669		CC73GCH1HR75B	CHIP C	0.75PF	B	K,K3
C670		CK73HB1H471K	CHIP C	470PF	K	
C671		CC73HCH1H070B	CHIP C	7.0PF	B	K,K3
C671		CC73HCH1H100B	CHIP C	10PF	B	K2,K4
C672		CK73HB1H471K	CHIP C	470PF	K	
C689-691		CK73HB1A104K	CHIP C	0.10UF	K	
C692		C93-0949-05	CHIP C	39PF	G	K,K3
C692		C93-0951-05	CHIP C	47PF	G	K2,K4
C693		CK73GB1C224K	CHIP C	0.22UF	K	
C700		CC73HCH1H070B	CHIP C	7.0PF	B	
C701		CK73HB1C103K	CHIP C	0.010UF	K	
C702		CC73HCH1H820J	CHIP C	82PF	J	K2,K4
C703		CK73HB1A104K	CHIP C	0.10UF	K	
C704		CC73HCH1H100B	CHIP C	10PF	B	K2,K4
C704		CC73HCH1H470J	CHIP C	47PF	J	K,K3
C705		CK73FB1E475K	CHIP C	4.7UF	K	
C706		CC73HCH1H100B	CHIP C	10PF	B	
C707		CC73HCH1H680J	CHIP C	68PF	J	
C708		CC73HCH1H101J	CHIP C	100PF	J	

PARTS LIST

TX-RX UNIT (X57-8960-XX)

Ref. No.	Address	Parts No.	Description	Destination
C709-711		CK73HB1A104K	CHIP C 0.10UF K	
C712		CC73HCH1H680J	CHIP C 68PF J	
C713		CK73FB1A106K	CHIP C 10UF K	
C714		CK73GB1H102K	CHIP C 1000PF K	
C715		CC73HCH1H470J	CHIP C 47PF J	K2,K4
C715		CK73HB1C103K	CHIP C 0.010UF K	K,K3
C716		CC73HCH1H820J	CHIP C 82PF J	K,K3
C717		CK73HB1C103K	CHIP C 0.010UF K	
C718		CK73HB1A104K	CHIP C 0.10UF K	
C719		CK73FB1A106K	CHIP C 10UF K	
C720		CC73HCH1H100B	CHIP C 10PF B	
C721		CK73HB1A104K	CHIP C 0.10UF K	
C722		CC73HCH1H470G	CHIP C 47PF G	
C723,724		CK73HB1A104K	CHIP C 0.10UF K	
C725		CK73HB1C103K	CHIP C 0.010UF K	
C727,728		CK73HB1A104K	CHIP C 0.10UF K	
C729		CK73FB1E474K	CHIP C 0.47UF K	
C730		CK73HB1C103K	CHIP C 0.010UF K	
C732		CK73HB1H471K	CHIP C 470PF K	
C733,734		CK73HB1C103K	CHIP C 0.010UF K	
C735		CC73HCH1H470G	CHIP C 47PF G	
C736		CK73HB1C103K	CHIP C 0.010UF K	
C737		CC73HCH1H020B	CHIP C 2.0PF B	
C738		CC73HCH1H220G	CHIP C 22PF G	
C739		CC73HCH1H060B	CHIP C 6.0PF B	
C740,741		CK73HB1C103K	CHIP C 0.010UF K	
C742		CK73FB1A475K	CHIP C 4.7UF K	
C743		CK73HB1C103K	CHIP C 0.010UF K	
C744,745		CK73HB1H471K	CHIP C 470PF K	
C746		CC73HCH1H090B	CHIP C 9.0PF B	
C747		CC73HCH1H100B	CHIP C 10PF B	
C748		CK73HB1H471K	CHIP C 470PF K	
C749		CC73HCH1H020B	CHIP C 2.0PF B	K,K3
C749		CC73HCH1H040B	CHIP C 4.0PF B	K2,K4
C750		CK73HB1C103K	CHIP C 0.010UF K	
C751		CC73HCH1H090B	CHIP C 9.0PF B	K2,K4
C751		CC73HCH1H100B	CHIP C 10PF B	K,K3
C752		CK73HB1H471K	CHIP C 470PF K	
C753		CC73HCH1H020B	CHIP C 2.0PF B	K,K3
C753		CC73HCH1H040B	CHIP C 4.0PF B	K2,K4
C754		CC73HCH1H030B	CHIP C 3.0PF B	K,K3
C754		CC73HCH1H090B	CHIP C 9.0PF B	K2,K4
C755		CC73HCH1H040B	CHIP C 4.0PF B	K,K3
C755		CC73HCH1H050B	CHIP C 5.0PF B	K2,K4
C756		CC73HCH1H090B	CHIP C 9.0PF B	K,K3
C756		CK73HB1H471K	CHIP C 470PF K	K2,K4
C758		CK73HB1H471K	CHIP C 470PF K	
C759,760		CK73HB1A104K	CHIP C 0.10UF K	
C761		CK73GB1E105K	CHIP C 1.0UF K	
C764		CC73HCH1H1R5B	CHIP C 1.5PF B	
C765		CK73HB1H471K	CHIP C 470PF K	
C766		CK73GB1H104K	CHIP C 0.10UF K	
C767		CC73HCH1H090B	CHIP C 9.0PF B	K,K3
C767		CC73HCH1H120G	CHIP C 12PF G	K2,K4
C768		CC73HCH1H010B	CHIP C 1.0PF B	
C769		CK73HB1H471K	CHIP C 470PF K	
C770		CC73HCH1H030B	CHIP C 3.0PF B	K2,K4
C770		CC73HCH1H040B	CHIP C 4.0PF B	K,K3
C771		CK73HB1H471K	CHIP C 470PF K	
C772		CC73HCH1H090B	CHIP C 9.0PF B	K,K3

Ref. No.	Address	Parts No.	Description	Destination
C772		CC73HCH1H120G	CHIP C 12PF G	K2,K4
C773		CC73HCH1H010B	CHIP C 1.0PF B	K,K3
C773		CC73HCH1H1R5B	CHIP C 1.5PF B	K2,K4
C774		CC73HCH1H020B	CHIP C 2.0PF B	K2,K4
C774		CC73HCH1H030B	CHIP C 3.0PF B	K,K3
C775		CK73HB1H471K	CHIP C 470PF K	
C776		CC73HCH1H090B	CHIP C 9.0PF B	K,K3
C776		CC73HCH1H120G	CHIP C 12PF G	K2,K4
C777,778		CK73HB1H471K	CHIP C 470PF K	
C779		CK73HB1C103K	CHIP C 0.010UF K	
C780		CK73GB1H104K	CHIP C 0.10UF K	
C782		CC73HCH1H0R5B	CHIP C 0.5PF B	
C783		CK73GB1E105K	CHIP C 1.0UF K	
C784-786		CK73HB1H471K	CHIP C 470PF K	
C788		CK73GB1H104K	CHIP C 0.10UF K	
C789		CK73HB1H471K	CHIP C 470PF K	
C790		CK73HB1A104K	CHIP C 0.10UF K	
C791		CK73HB1H471K	CHIP C 470PF K	
C792		CK73HB1A104K	CHIP C 0.10UF K	
C794,795		CK73HB1H471K	CHIP C 470PF K	
C796		CC73HCH1H090B	CHIP C 9.0PF B	K,K3
C796		CC73HCH1H110G	CHIP C 11PF G	K2,K4
C798		CC73HCH1H030B	CHIP C 3.0PF B	K2,K4
C798		CC73HCH1H1R5B	CHIP C 1.5PF B	K,K3
C799		CK73HB1H471K	CHIP C 470PF K	
C800		CC73HCH1H020B	CHIP C 2.0PF B	K,K3
C800		CC73HCH1H1R5B	CHIP C 1.5PF B	K2,K4
C801		CK73HB1H471K	CHIP C 470PF K	
C802,803		CC73HCH1H040B	CHIP C 4.0PF B	
C804		CC73HCH1H090B	CHIP C 9.0PF B	K,K3
C804		CC73HCH1H110G	CHIP C 11PF G	K2,K4
C807		CC73HCH1H030B	CHIP C 3.0PF B	K2,K4
C807		CC73HCH1H050B	CHIP C 5.0PF B	K,K3
C809		CC73GCH1H180J	CHIP C 18PF J	K,K3
C810		CC73HCH1H020B	CHIP C 2.0PF B	K,K3
C810		CC73HCH1H040B	CHIP C 4.0PF B	K2,K4
C811		CC73HCH1H070B	CHIP C 7.0PF B	K2,K4
C811		CC73HCH1H090B	CHIP C 9.0PF B	K,K3
C813,814		CC73HCH1H270J	CHIP C 27PF J	K2,K4
C849		CK73HB1H471K	CHIP C 470PF K	
C850		CC73HCH1H101J	CHIP C 100PF J	
C882		CC73HCH1H020B	CHIP C 2.0PF B	
C883		CK73HB1C102K	CHIP C 1000PF K	
C884		CC73HCH1H180J	CHIP C 18PF J	
C885		CC73HCH1H1R5B	CHIP C 1.5PF B	
C886		CC73HCH1H121J	CHIP C 120PF J	
C887		CC73HCH1H010B	CHIP C 1.0PF B	K2,K4
C887		CC73HCH1H070B	CHIP C 7.0PF B	K,K3
C888		CC73HCH1H0R5B	CHIP C 0.5PF B	K2,K4
C888		CC73HCH1HR75B	CHIP C 0.75PF B	K,K3
C889		CC73HCH1H1R5B	CHIP C 1.5PF B	
C891		CC73HCH1H0R5B	CHIP C 0.5PF B	K,K3
C900		CK73GB1H102K	CHIP C 1000PF K	
C901,902		CK73HB1H471K	CHIP C 470PF K	
C903		CK73GB1H471K	CHIP C 470PF K	
C904-908		CC73HCH1H470J	CHIP C 47PF J	
C910		CC73HCH1H470J	CHIP C 47PF J	
C912-920		CC73HCH1H470J	CHIP C 47PF J	
C922,923		CC73HCH1H470J	CHIP C 47PF J	
C925-943		CC73HCH1H470J	CHIP C 47PF J	

PARTS LIST

TX-RX UNIT (X57-8960-XX)

Ref. No.	Address	Parts No.	Description	Destination
C944		CK73HB1H471K	CHIP C 470PF K	
C945,946		CC73HCH1H470J	CHIP C 47PF J	
C947		CK73HB1H471K	CHIP C 470PF K	
C948,949		CK73GB1E105K	CHIP C 1.0UF K	
C950		C92-0765-05	CHIP TNTL 4.7UF 16WV	
C951		CK73GB1C224K	CHIP C 0.22UF K	
C952		CK73HB1H102K	CHIP C 1000PF K	
C953		CK73HB1A104K	CHIP C 0.10UF K	
C954		CK73GB1C224K	CHIP C 0.22UF K	
C955,956		CK73HB1H102K	CHIP C 1000PF K	
C957,958		CK73GB1E105K	CHIP C 1.0UF K	
C961		CK73HB1H471K	CHIP C 470PF K	
C962		CC73HCH1E181J	CHIP C 180PF J	
C963		CK73GB1E105K	CHIP C 1.0UF K	
C964,965		CK73GB1C224K	CHIP C 0.22UF K	
C966		CC73HCH1H220J	CHIP C 22PF J	
C967		CK73HB1H471K	CHIP C 470PF K	
C968		CK73GB1C224K	CHIP C 0.22UF K	
C969		CK73GB1E105K	CHIP C 1.0UF K	
C970,971		CK73HB1H102K	CHIP C 1000PF K	
C972-974		CK73GB1E105K	CHIP C 1.0UF K	
C975		C93-0901-05	CHIP C 10PF G	K2,K4
C975		C93-0983-05	CHIP C 6.0PF D	K,K3
C976		CC73HCH1H470J	CHIP C 47PF J	
C977		CK73GB1C224K	CHIP C 0.22UF K	
C980		CK73GB1E105K	CHIP C 1.0UF K	
C981		CK73HB1A394K	CHIP C 0.39UF K	
C987		CC73HCH1H050B	CHIP C 5.0PF B	K2,K4
C988		C93-0939-05	CHIP C 15PF G	K,K3
C988		C93-0945-05	CHIP C 27PF G	K2,K4
C989		C93-0935-05	CHIP C 10PF G	K,K3
C989		C93-0939-05	CHIP C 15PF G	K2,K4
CN600		E23-1326-05	TERMINAL	
CN601		E23-1167-05	TERMINAL	K2,K4
CN881		E04-0496-05	PIN SOCKET	
CN900		E40-6422-15	SOCKET FOR PIN ASSY	
CN901		E40-6752-05	FLAT CABLE CONNECTOR	
CN902		E23-1326-05	TERMINAL	
F900		F53-0324-15	FUSE (2.5A)	
CF700		L72-1017-05	CERAMIC FILTER (450KHZ)	
CF701		L72-1020-05	CERAMIC FILTER (450KHZ)	
L500		L41-4795-39	SMALL FIXED INDUCTOR (4.7UH)	
L503		L92-0163-05	BEADS CORE	
L504		L40-1275-92	SMALL FIXED INDUCTOR (12NH)	
L508,509		L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L514-519		L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L520		L40-1878-67	SMALL FIXED INDUCTOR (18NH)	K,K3
L520		L40-2278-67	SMALL FIXED INDUCTOR (22NH)	K2,K4
L521		L40-2278-67	SMALL FIXED INDUCTOR (22NH)	K,K3
L521		L40-2778-67	SMALL FIXED INDUCTOR (27NH)	K2,K4
L522		L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L523		L92-0446-05	BEADS CORE	
L524-526		L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L527		L92-0446-05	BEADS CORE	
L528		L40-2775-71	SMALL FIXED INDUCTOR (27NH)	K,K3
L528		L40-3375-71	SMALL FIXED INDUCTOR (33NH)	K2,K4
L530		L40-5675-57	SMALL FIXED INDUCTOR (56.0NH)	
L598,599		L92-0163-05	BEADS CORE	

Ref. No.	Address	Parts No.	Description	Destination
L600		L40-2275-92	SMALL FIXED INDUCTOR (22NH)	
L602		L40-1875-92	SMALL FIXED INDUCTOR (18NH)	K,K3
L602		L40-2775-92	SMALL FIXED INDUCTOR (27NH)	K2,K4
L603		L40-1275-92	SMALL FIXED INDUCTOR (12NH)	K,K3
L603		L40-1875-92	SMALL FIXED INDUCTOR (18NH)	K2,K4
L604		L92-0138-05	CHIP FERRITE	
L605		L40-1275-92	SMALL FIXED INDUCTOR (12NH)	K2,K4
L605		L40-6865-92	SMALL FIXED INDUCTOR (6.8NH)	K,K3
L606		L41-1875-43	SMALL FIXED INDUCTOR (18NH)	
L607		L92-0149-05	CHIP FERRITE	
L609		L34-4575-05	AIR-CORE COIL	
L610		L92-0149-05	CHIP FERRITE	
L611		L41-2285-14	SMALL FIXED INDUCTOR (220NH)	
L612-614		L34-4564-05	AIR-CORE COIL	
L615		L40-1575-57	SMALL FIXED INDUCTOR (15.0NH)	K,K3
L615		L40-2275-57	SMALL FIXED INDUCTOR (22.0NH)	K2,K4
L701		L40-5681-86	SMALL FIXED INDUCTOR (0.56UH)	
L703		L41-4778-45	SMALL FIXED INDUCTOR (47NH)	
L704		L40-1891-86	SMALL FIXED INDUCTOR (1.8UH)	
L705,706		L92-0138-05	CHIP FERRITE	
L707		L41-2785-39	SMALL FIXED INDUCTOR (0.27UH)	
L708		L41-5685-39	SMALL FIXED INDUCTOR (0.56UH)	
L709,710		L40-1575-92	SMALL FIXED INDUCTOR (15NH)	K2,K4
L709,710		L40-1875-92	SMALL FIXED INDUCTOR (18NH)	K,K3
L711		L40-2275-92	SMALL FIXED INDUCTOR (22NH)	K,K3
L711		L40-3375-92	SMALL FIXED INDUCTOR (33NH)	K2,K4
L713-715		L41-1078-14	SMALL FIXED INDUCTOR (10NH)	K2,K4
L713-715		L41-8268-14	SMALL FIXED INDUCTOR (8.2NH)	K,K3
L716		L92-0138-05	CHIP FERRITE	
L717		L41-2285-14	SMALL FIXED INDUCTOR (220NH)	
L720		L40-1075-92	SMALL FIXED INDUCTOR (10NH)	K,K3
L721,722		L41-1078-14	SMALL FIXED INDUCTOR (10NH)	K2,K4
L721,722		L41-8268-14	SMALL FIXED INDUCTOR (8.2NH)	K,K3
L723		L34-4564-05	AIR-CORE COIL	
L725		L40-6865-92	SMALL FIXED INDUCTOR (6.8NH)	K2,K4
L725		L40-8265-92	SMALL FIXED INDUCTOR (8.2NH)	K,K3
L726		L41-3378-03	SMALL FIXED INDUCTOR (33NH)	K,K3
L726		L41-3978-03	SMALL FIXED INDUCTOR (39NH)	K2,K4
L780		L40-1085-57	SMALL FIXED INDUCTOR (100NH)	
L881		L92-0446-05	BEADS CORE	
L882		L40-8265-71	SMALL FIXED INDUCTOR (8.2NH)	
L883		**Note 1**	FILTER	
L885		L41-6865-55	SMALL FIXED INDUCTOR (6.8NH)	
L886		L41-3665-55	SMALL FIXED INDUCTOR (3.6NH)	
L887		L40-8265-71	SMALL FIXED INDUCTOR (8.2NH)	K,K3
L900		L92-0149-05	CHIP FERRITE	
L901		L33-1462-05	SMALL FIXED INDUCTOR (68UH)	
L902		L40-2702-86	SMALL FIXED INDUCTOR (27UH)	K2,K4
L903		L41-6869-16	SMALL FIXED INDUCTOR (6.8NH)	K2,K4
X500		L77-3016-05	TCXO (19.2MHZ)	
XF700		L71-0640-05	MCF (58.05MHZ)	
R430		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R431,432		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R500,501		RN73HH1J104D	CHIP R 100K D 1/16W	
R502		RK73HB1J124J	CHIP R 120K J 1/16W	K,K3
R503		RK73HB1J100J	CHIP R 10 J 1/16W	
R504		RK73HB1J104J	CHIP R 100K J 1/16W	
R505		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R506		RK73HB1J473J	CHIP R 47K J 1/16W	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

TX-RX UNIT (X57-8960-XX)

Ref. No.	Address	Parts No.	Description				Destination
R511-514		RK73HB1J100J	CHIP R	10	J	1/16W	
R515		RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R519		RK73HB1J100J	CHIP R	10	J	1/16W	
R520		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R522		RK73HB1J100J	CHIP R	10	J	1/16W	
R523		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R527		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R529		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R530		RK73HB1J473J	CHIP R	47K	J	1/16W	
R531		RK73HB1J683J	CHIP R	68K	J	1/16W	
R532		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R533		RK73HH1J184D	CHIP R	180K	D	1/16W	K,K3
R533		RK73HH1J224D	CHIP R	220K	D	1/16W	K2,K4
R534		RK73HH1J473D	CHIP R	47K	D	1/16W	
R535		RK73HB1J151J	CHIP R	150	J	1/16W	
R536		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R537		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R538		RK73HH1J391D	CHIP R	390	D	1/16W	
R539		RK73HB1J106J	CHIP R	10M	J	1/16W	
R541		RK73HB1J103J	CHIP R	10K	J	1/16W	
R546		RK73HB1J104J	CHIP R	100K	J	1/16W	
R547		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R548		RK73HB1J104J	CHIP R	100K	J	1/16W	
R550		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R552		RK73HB1J104J	CHIP R	100K	J	1/16W	K2,K4
R552		RK73HB1J124J	CHIP R	120K	J	1/16W	K,K3
R554,555		RK73HB1J473J	CHIP R	47K	J	1/16W	
R557		RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R558		RK73HB1J474J	CHIP R	470K	J	1/16W	
R559		RK73HH1J181D	CHIP R	180	D	1/16W	K,K3
R559		RK73HH1J221D	CHIP R	220	D	1/16W	K2,K4
R560		RK73HB1J220J	CHIP R	22	J	1/16W	
R561		RK73HH1J181D	CHIP R	180	D	1/16W	K,K3
R561		RK73HH1J221D	CHIP R	220	D	1/16W	K2,K4
R562		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R563		RK73HB1J473J	CHIP R	47K	J	1/16W	
R564		RK73HB1J154J	CHIP R	150K	J	1/16W	
R565		RK73HB1J101J	CHIP R	100	J	1/16W	
R566		RK73HH1J474D	CHIP R	470K	D	1/16W	
R567		RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R570		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R571		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R572		RK73HB1J100J	CHIP R	10	J	1/16W	
R573		RK73HB1J124J	CHIP R	120K	J	1/16W	K2,K4
R574-576		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R577		RK73GB2A000J	CHIP R	0.0	J	1/10W	
R580,581		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R583		RK73HB1J000J	CHIP R	0.0	J	1/16W	K2,K4
R586		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R589,590		RK73HB1J103J	CHIP R	10K	J	1/16W	
R599		RK73HB1J104J	CHIP R	100K	J	1/16W	
R600		RK73HB1J103J	CHIP R	10K	J	1/16W	
R601		RK73HB1J183J	CHIP R	18K	J	1/16W	
R602		RK73HB1J124J	CHIP R	120K	J	1/16W	
R603		RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R604		RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R605		RK73HB1J103J	CHIP R	10K	J	1/16W	
R606		RK73HB1J331J	CHIP R	330	J	1/16W	
R607		RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R608		RK73HB1J470J	CHIP R	47	J	1/16W	

Ref. No.	Address	Parts No.	Description				Destination
R610		RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R612		RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R613		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R616		RK73HB1J181J	CHIP R	180	J	1/16W	
R617		RK73HB1J331J	CHIP R	330	J	1/16W	
R618		RK73HB1J220J	CHIP R	22	J	1/16W	
R619		RK73HB1J821J	CHIP R	820	J	1/16W	K2,K4
R620		RK73HB1J000J	CHIP R	0.0	J	1/16W	K,K3
R620		RK73HB1J5R6J	CHIP R	5.6	J	1/16W	K2,K4
R621		RK73HB1J821J	CHIP R	820	J	1/16W	K2,K4
R622		RK73HB1J101J	CHIP R	100	J	1/16W	
R623		RK73HB1J103J	CHIP R	10K	J	1/16W	K,K3
R623		RK73HB1J123J	CHIP R	12K	J	1/16W	K2,K4
R624		RK73HB1J333J	CHIP R	33K	J	1/16W	K2,K4
R624		RK73HB1J473J	CHIP R	47K	J	1/16W	K,K3
R626		RK73HB1J331J	CHIP R	330	J	1/16W	K,K3
R626		RK73HB1J221J	CHIP R	220	J	1/16W	K2,K4
R627,628		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R629		RK73HB1J273J	CHIP R	27K	J	1/16W	
R630		RK73HB1J103J	CHIP R	10K	J	1/16W	
R631		RK73HB1J470J	CHIP R	47	J	1/16W	
R632		RK73HB1J562J	CHIP R	5.6K	J	1/16W	
R633		RK73HB1J101J	CHIP R	100	J	1/16W	
R634		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R635		RK73HB1J561J	CHIP R	560	J	1/16W	
R636		RK73HB1J221J	CHIP R	220	J	1/16W	
R639		RK73HB1J103J	CHIP R	10K	J	1/16W	
R641		RK73HB1J103J	CHIP R	10K	J	1/16W	
R642		RK73EB2ER39K	CHIP R	0.39	K	1/4W	
R644		RK73HB1J220J	CHIP R	22	J	1/16W	K2,K4
R644		RK73HB1J270J	CHIP R	27	J	1/16W	K,K3
R645		RK73EB2ER39K	CHIP R	0.39	K	1/4W	
R646		RK73HB1J333J	CHIP R	33K	J	1/16W	
R647		RK73EB2ER39K	CHIP R	0.39	K	1/4W	
R648,649		RK73HH1J154D	CHIP R	150K	D	1/16W	
R650		RK73GB2A000J	CHIP R	0.0	J	1/10W	
R651-654		RK73HH1J274D	CHIP R	270K	D	1/16W	
R655		RK73HB1J103J	CHIP R	10K	J	1/16W	
R656		RK73HB1J563J	CHIP R	56K	J	1/16W	
R657		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R658		RK73HB1J182J	CHIP R	1.8K	J	1/16W	K,K3
R658		RK73HB1J821J	CHIP R	820	J	1/16W	K2,K4
R659		RK73HB1J474J	CHIP R	470K	J	1/16W	
R660		RK73HB1J473J	CHIP R	47K	J	1/16W	
R661		RK73HB1J104J	CHIP R	100K	J	1/16W	
R664		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R665,666		RK73HB1J271J	CHIP R	270	J	1/16W	
R667		RK73EB2E823J	CHIP R	82K	J	1/4W	
R669		RK73HB1J471J	CHIP R	470	J	1/16W	
R670		RK73HB1J224J	CHIP R	220K	J	1/16W	
R671		RK73GB2A000J	CHIP R	0.0	J	1/10W	
R701		RK73HB1J561J	CHIP R	560	J	1/16W	
R702		RK73HB1J334J	CHIP R	330K	J	1/16W	
R703		RK73HB1J100J	CHIP R	10	J	1/16W	
R704		RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R705		RK73HB1J000J	CHIP R	0.0	J	1/16W	
R709		RK73HB1J103J	CHIP R	10K	J	1/16W	
R710		RK73GB2A000J	CHIP R	0.0	J	1/10W	K,K3
R712		RK73HB1J103J	CHIP R	10K	J	1/16W	
R714		RK73HB1J100J	CHIP R	10	J	1/16W	

PARTS LIST

TX-RX UNIT (X57-8960-XX)

Ref. No.	Address	Parts No.	Description	Destination
R717		RK73HB1J473J	CHIP R 47K J 1/16W	
R718		RK73HB1J183J	CHIP R 18K J 1/16W	
R719		RK73HB1J274J	CHIP R 270K J 1/16W	
R720		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R721		RK73HB1J103J	CHIP R 10K J 1/16W	
R722		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R724		RK73HB1J104J	CHIP R 100K J 1/16W	
R725		RK73HB1J223J	CHIP R 22K J 1/16W	
R726		RK73HB1J183J	CHIP R 18K J 1/16W	
R727		RK73HB1J222J	CHIP R 2.2K J 1/16W	
R728		RK73HB1J221J	CHIP R 220 J 1/16W	
R730		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R731		RK73HB1J103J	CHIP R 10K J 1/16W	
R733		RK73HB1J564J	CHIP R 560K J 1/16W	
R735		RK73HB1J101J	CHIP R 100 J 1/16W	
R736		RK73HB1J104J	CHIP R 100K J 1/16W	
R737		RK73HB1J221J	CHIP R 220 J 1/16W	
R738		RK73HB1J272J	CHIP R 2.7K J 1/16W	
R739		RK73HB1J221J	CHIP R 220 J 1/16W	
R740		RK73HB1J470J	CHIP R 47 J 1/16W	
R742		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R743		RK73HB1J681J	CHIP R 680 J 1/16W	
R744		RK73HB1J221J	CHIP R 220 J 1/16W	
R745		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R746		RK73HB1J104J	CHIP R 100K J 1/16W	
R747		RK73HB1J154J	CHIP R 150K J 1/16W	
R748		RK73HB1J104J	CHIP R 100K J 1/16W	
R749		RK73HB1J184J	CHIP R 180K J 1/16W	K,K3
R749		RK73HB1J224J	CHIP R 220K J 1/16W	K2,K4
R750		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R752,753		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R755		RK73HB1J472J	CHIP R 4.7K J 1/16W	
R757		RK73HB1J104J	CHIP R 100K J 1/16W	K,K3
R757		RK73HB1J105J	CHIP R 1.0M J 1/16W	K2,K4
R758		RK73HB1J103J	CHIP R 10K J 1/16W	
R759,760		RK73HB1J104J	CHIP R 100K J 1/16W	K,K3
R759,760		RK73HB1J105J	CHIP R 1.0M J 1/16W	K2,K4
R761		RK73HB1J101J	CHIP R 100 J 1/16W	
R762		RK73HB1J103J	CHIP R 10K J 1/16W	
R763		RK73HB1J824J	CHIP R 820K J 1/16W	
R764		RK73HB1J104J	CHIP R 100K J 1/16W	
R765		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R768		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R769		RK73HB1J103J	CHIP R 10K J 1/16W	
R770		RK73HB1J680J	CHIP R 68 J 1/16W	
R771		RK73HB1J151J	CHIP R 150 J 1/16W	K2,K4
R771		RK73HB1J181J	CHIP R 180 J 1/16W	K,K3
R772		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R773		RK73HB1J824J	CHIP R 820K J 1/16W	
R774,775		RK73HB1J104J	CHIP R 100K J 1/16W	
R777		RK73HB1J103J	CHIP R 10K J 1/16W	
R778		RK73HB1J104J	CHIP R 100K J 1/16W	
R779		RK73HB1J683J	CHIP R 68K J 1/16W	
R780		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R781		RK73HB1J182J	CHIP R 1.8K J 1/16W	
R783		RK73HB1J224J	CHIP R 220K J 1/16W	
R784		RK73HB1J474J	CHIP R 470K J 1/16W	
R785		RK73HB1J104J	CHIP R 100K J 1/16W	K,K3
R785		RK73HB1J105J	CHIP R 1.0M J 1/16W	K2,K4
R786		RK73HB1J000J	CHIP R 0.0 J 1/16W	

Ref. No.	Address	Parts No.	Description	Destination
R788		RK73HB1J104J	CHIP R 100K J 1/16W	K,K3
R788		RK73HB1J105J	CHIP R 1.0M J 1/16W	K2,K4
R790		RK73HB1J104J	CHIP R 100K J 1/16W	K,K3
R790		RK73HB1J105J	CHIP R 1.0M J 1/16W	K2,K4
R791		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R792		RK73HB1J104J	CHIP R 100K J 1/16W	
R794,795		RK73HB1J103J	CHIP R 10K J 1/16W	
R796		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R797		RK73HB1J473J	CHIP R 47K J 1/16W	
R798		RK73HB1J470J	CHIP R 47 J 1/16W	
R799		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R800		RK73GB2A000J	CHIP R 0.0 J 1/10W	K2,K4
R881		RK73HB1J471J	CHIP R 470 J 1/16W	
R882		RK73HB1J120J	CHIP R 12 J 1/16W	
R883		RK73HB1J471J	CHIP R 470 J 1/16W	
R884		RK73HB1J391J	CHIP R 390 J 1/16W	
R885		RK73HB1J000J	CHIP R 0.0 J 1/16W	K2,K4
R900		RK73HB1J391J	CHIP R 390 J 1/16W	
R901		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R902		RK73HB1J100J	CHIP R 10 J 1/16W	
R903		RK73HB1J821J	CHIP R 820 J 1/16W	
R904		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R905		RK73HB1J330J	CHIP R 33 J 1/16W	
R906		RK73HB1J474J	CHIP R 470K J 1/16W	
R907		RK73GB2A100J	CHIP R 10 J 1/10W	
R908		RK73HB1J473J	CHIP R 47K J 1/16W	
R909		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R910-912		RK73HB1J474J	CHIP R 470K J 1/16W	
R913		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R914		RK73HB1J154J	CHIP R 150K J 1/16W	
R915-917		RK73HB1J474J	CHIP R 470K J 1/16W	
R918		RK73HB1J223J	CHIP R 22K J 1/16W	
R920,921		RK73HB1J473J	CHIP R 47K J 1/16W	
R922		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R923		RK73HB1J123J	CHIP R 12K J 1/16W	
R925		RK73HH1J334D	CHIP R 330K D 1/16W	
R926		RK73HH1J223D	CHIP R 22K D 1/16W	
R927		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R928		RK73HB1J000J	CHIP R 0.0 J 1/16W	
R929		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R931		RK73GB2A000J	CHIP R 0.0 J 1/10W	
R933		RK73HB1J392J	CHIP R 3.9K J 1/16W	
R934		RK73HB1J273J	CHIP R 27K J 1/16W	
R935		RK73HB1J153J	CHIP R 15K J 1/16W	K2,K4
R936		RK73HB1J473J	CHIP R 47K J 1/16W	
R937		RK73HB1J474J	CHIP R 470K J 1/16W	
R950		RK73HB1J000J	CHIP R 0.0 J 1/16W	K,K3
R954		RK73GB2A000J	CHIP R 0.0 J 1/10W	K2,K4
R955-958		RK73HB1J000J	CHIP R 0.0 J 1/16W	K2,K4
R959		RK73HB1J104J	CHIP R 100K J 1/16W	
R961		RK73HB1J000J	CHIP R 0.0 J 1/16W	
S1		S70-0483-05	TACT SWITCH	
D501		1SS400	DIODE	
D505		KDS123E-P	DIODE	
D506,507		1SV325F	VARIABLE CAPACITANCE DIODE	
D510		1SV290B-F	VARIABLE CAPACITANCE DIODE	K2,K4
D510,511		1SV282-F	VARIABLE CAPACITANCE DIODE	K,K3
D511		1SV282-F	VARIABLE CAPACITANCE DIODE	K2,K4

PARTS LIST

TX-RX UNIT (X57-8960-XX)
SUB (GPS) UNIT (X58-5240-10)

Ref. No.	Address	Parts No.	Description	Destination
D514-517		1SV282-F	VARIABLE CAPACITANCE DIODE	K,K3
D514,515		1SV290B-F	VARIABLE CAPACITANCE DIODE	K2,K4
D516,517		1SV282-F	VARIABLE CAPACITANCE DIODE	K2,K4
D518		1SS400	DIODE	
D519		1SV278F	VARIABLE CAPACITANCE DIODE	
D600,601		HSC277	DIODE	
D604		HZU2ALL	ZENER DIODE	
D605		DZ2J051(M)	ZENER DIODE	
D606,607		RN262CS	DIODE	
D608		1SS400	DIODE	K,K3
D611		1SS400	DIODE	
D700		1SS400	DIODE	
D702-704		1SV286F	VARIABLE CAPACITANCE DIODE	
D705		1SS400	DIODE	
D706		1SV286F	VARIABLE CAPACITANCE DIODE	
D708		1SV286F	VARIABLE CAPACITANCE DIODE	
D709		RN262CS	DIODE	
D710		1SV286F	VARIABLE CAPACITANCE DIODE	
D711		RN262CS	DIODE	
D881,882		RN262CS	DIODE	
D901		1SR154-400	DIODE	
D902		1SS400	DIODE	
IC404		BU7442FVM	MOS-IC	
IC500		LM73CIMKX-0	MOS-IC	
IC501		TLV2381IDBV	MOS-IC	
IC502		SKY72310-362	MOS-IC	
IC503		TLV2381IDBV	MOS-IC	
IC504		BU7442FVM	MOS-IC	
IC600		TA75W01FUF	MOS-IC	
IC700		MCP6021-E/OT	MOS-IC	
IC701		TK10931VTL-G	ANALOGUE IC	
IC702,703		TLV2381IDBV	MOS-IC	
IC881		**Note 1**	MOS-IC	
IC900		BU7465HFV	MOS-IC	
IC901		XC9101D09AK-G	MOS-IC	
IC902		TK11250CUCB	MOS-IC	
IC903		TK71733S	BI-POLAR IC	
Q503		2SC5383-T111	TRANSISTOR	
Q504		2SK879-F(Y)	FET	
Q507		2SC5383-T111	TRANSISTOR	
Q508,509		2SK508NV(K52)	FET	
Q510		EM6M2	FET	
Q511		2SJ347F	FET	
Q512		2SC5636	TRANSISTOR	
Q600,601		2SC5636	TRANSISTOR	
Q602		2SK3077F	FET	
Q603		RD01MUS1-T113	FET	
Q604		2SC5383-T111	TRANSISTOR	
Q605		SSM3K15TE(F)	FET	
Q606		RD07MVS1BT122	FET	
Q607		LTC044EEBFS8	DIGITAL TRANSISTOR	
Q608		2SK1824-A	FET	
Q610		EMD5	TRANSISTOR	
Q700		2SC5108(Y)F	TRANSISTOR	
Q701		2SC4215-F(Y)	TRANSISTOR	
Q703		3SK318	FET	
Q704		2SC5383-T111	TRANSISTOR	
Q705		3SK318	FET	
Q706		2SK1830F	FET	
Q900		UMG9N	TRANSISTOR	
Q901-903		EM6M2	FET	
Q904		SSM5H01TU-F	FET	
Q905		2SA1955A-F	TRANSISTOR	
TH600		ERTJ0EV104H	THERMISTOR	

SUB (GPS) UNIT (X58-5240-10)

Ref. No.	Address	Parts No.	Description	Destination
C1		CC73HCH1H180J	CHIP C 18PF J	
C2		CK73HB1A104K	CHIP C 0.10UF K	
C3		CK73HB1H102K	CHIP C 1000PF K	
C4		CK73GB0J106K	CHIP C 10UF K	
C5		CK73HB1A104K	CHIP C 0.10UF K	
C8		CC73HCH1H180J	CHIP C 18PF J	
C9		CK73HB1A104K	CHIP C 0.10UF K	
C10,11		CK73HB1H102K	CHIP C 1000PF K	
C16		CC73HCH1H101J	CHIP C 100PF J	
C17		CK73HB1H102K	CHIP C 1000PF K	
C18		CC73HCH1H101J	CHIP C 100PF J	
C19		CK73HB1H102K	CHIP C 1000PF K	
C20		CK73HB1A474K	CHIP C 0.47UF K	
C21		CK73HB1H102K	CHIP C 1000PF K	
C22		CK73HB1A474K	CHIP C 0.47UF K	
CN5		E04-0496-05	PIN SOCKET	
CN10		E40-6358-05	SOCKET FOR PIN ASSY	
CN11		J19-5386-05	HOLDER (LITHIUM CELL)	
D2		1SS388F	DIODE	
IC1		W02-3768-05	ELECTRIC CIRCUIT MODULE	
IC2		TC7WH126FU-F	MOS-IC	
IC4		BU31TD3WG	MOS-IC	
L1		LR73G0AT220K	SMALL FIXED INDUCTOR (22UH)	
L2		L92-0138-05	CHIP FERRITE	
L3		L92-0163-05	BEADS CORE	
R4		RK73HB1J102J	CHIP R 1.0K J 1/16W	
R6		RK73HB1J471J	CHIP R 470 J 1/16W	
R7		RK73HB1J120J	CHIP R 12 J 1/16W	
R9,10		RK73HB1J101J	CHIP R 100 J 1/16W	
R11		RK73GB2A100J	CHIP R 10 J 1/10W	
R13		RK73HB1J471J	CHIP R 470 J 1/16W	
R17		RK73HB1J102J	CHIP R 1.0K J 1/16W	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.