# 9. EXPLODED VIEWS AND PARTS LIST

*NOTES:*
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

## 9.1 PACKING SECTION

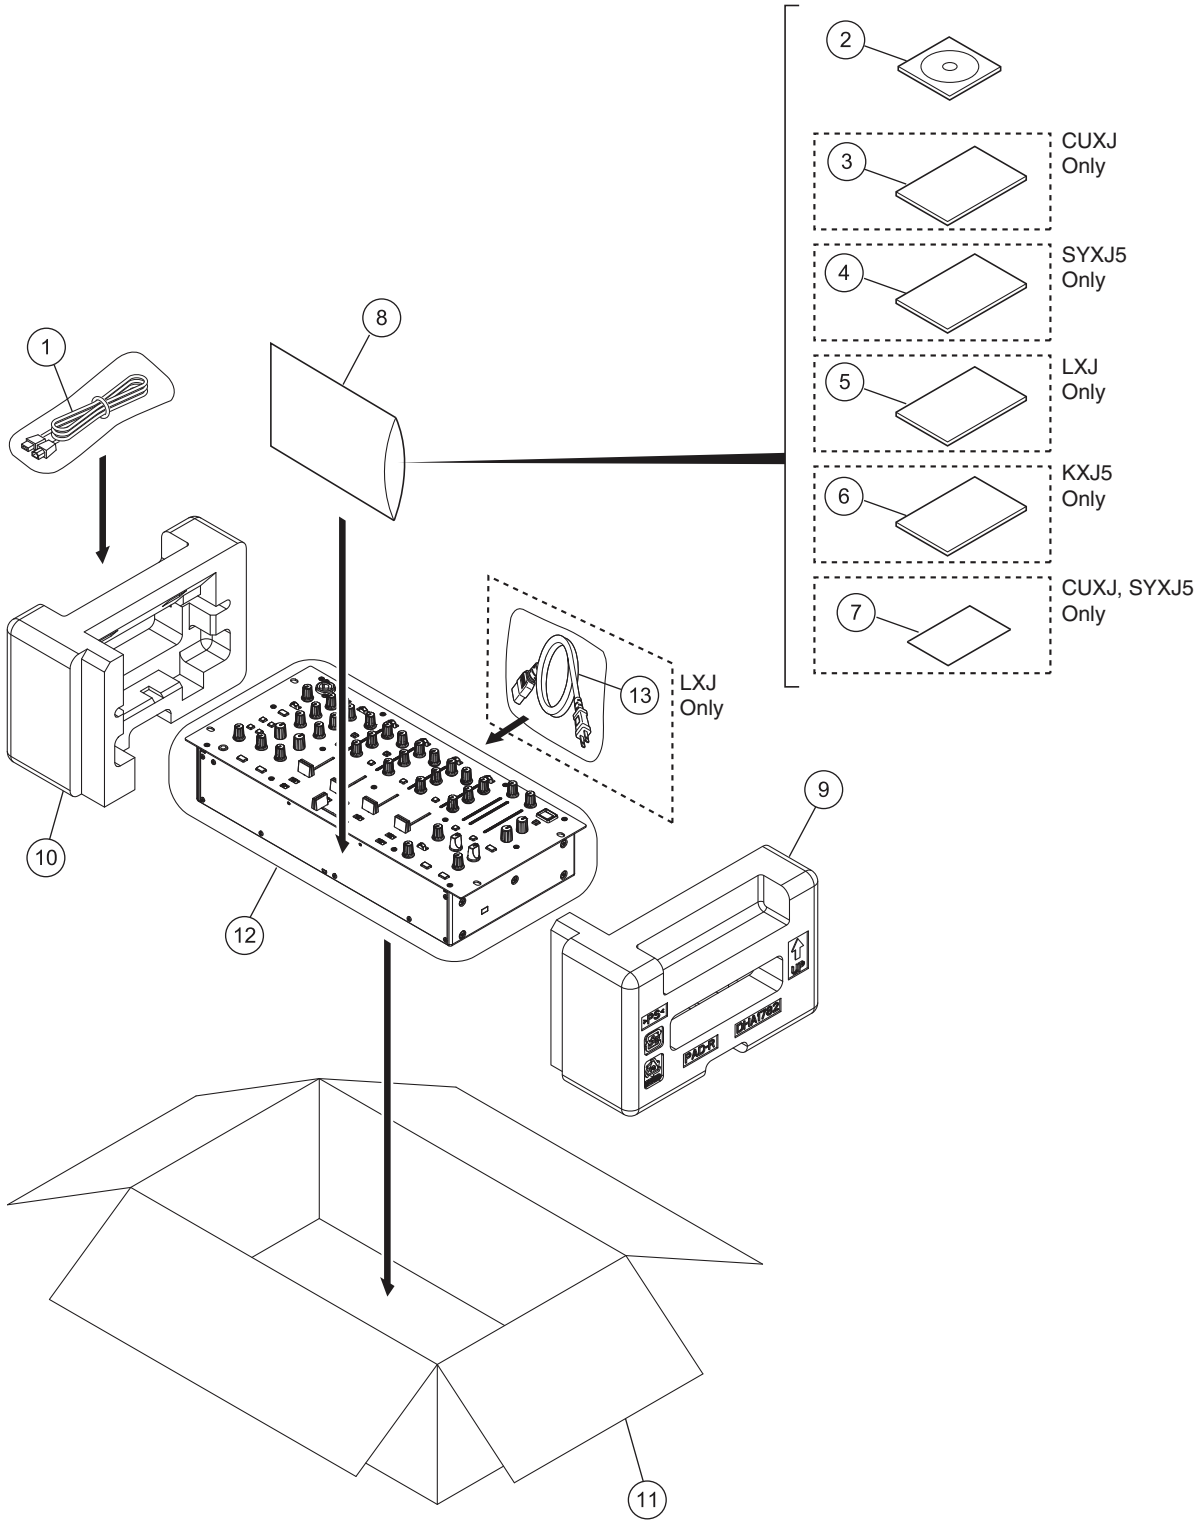

## (1) PACKING SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | USB Cable | DDE1128 |
| | 2 | CD-ROM | DXX2596 |
| | 3 | Operating Instructions | See Contrast table (2) |
| | 4 | Operating Instructions | See Contrast table (2) |
| | 5 | Operating Instructions | See Contrast table (2) |
| | 6 | Operating Instructions | See Contrast table (2) |
| NSP | 7 | Warranty Card | See Contrast table (2) |
| NSP | 8 | Polyethylene Bag (0.06 x 230 x 340) | AHG7117 |
| | 9 | Pad R | DHA1782 |
| | 10 | Pad L | DHA1783 |
| | 11 | Packing Case | See Contrast table (2) |
| | 12 | Packing Sheet | RHC1023 |
| ⚠ | 13 | Power Cable | See Contrast table (2) |

## (2) CONTRAST TABLE

DJM-5000/CUXJ, SYXJ5, LXJ and KXJ5 are constructed the same except for the following:

| Mark | No. | Symbol and Description | DJM-5000 /CUXJ | DJM-5000 /SYXJ5 | DJM-5000 /LXJ | DJM-5000 /KXJ5 |
|---|---|---|---|---|---|---|
| | 3 | Operating Instructions (En, Fr) | DRB1491 | Not used | Not used | Not used |
| | 4 | Operating Instructions (En, Fr, De, It, Nl, Es, Ru) | Not used | DRB1492 | Not used | Not used |
| | 5 | Operating Instructions (En, Es, Zhtw) | Not used | Not used | DRB1493 | Not used |
| | 6 | Operating Instructions (Ko) | Not used | Not used | Not used | DRB1495 |
| NSP | 7 | Warranty Card | ARY7043 | ARY7107 | Not used | Not used |
| | 11 | Packing Case | DHG2792 | DHG2793 | DHG2794 | DHG2797 |
| ⚠ | 13 | Power Cable | Not used | Not used | ADG7062 | Not used |

# 9.2 EXTERIOR SECTION

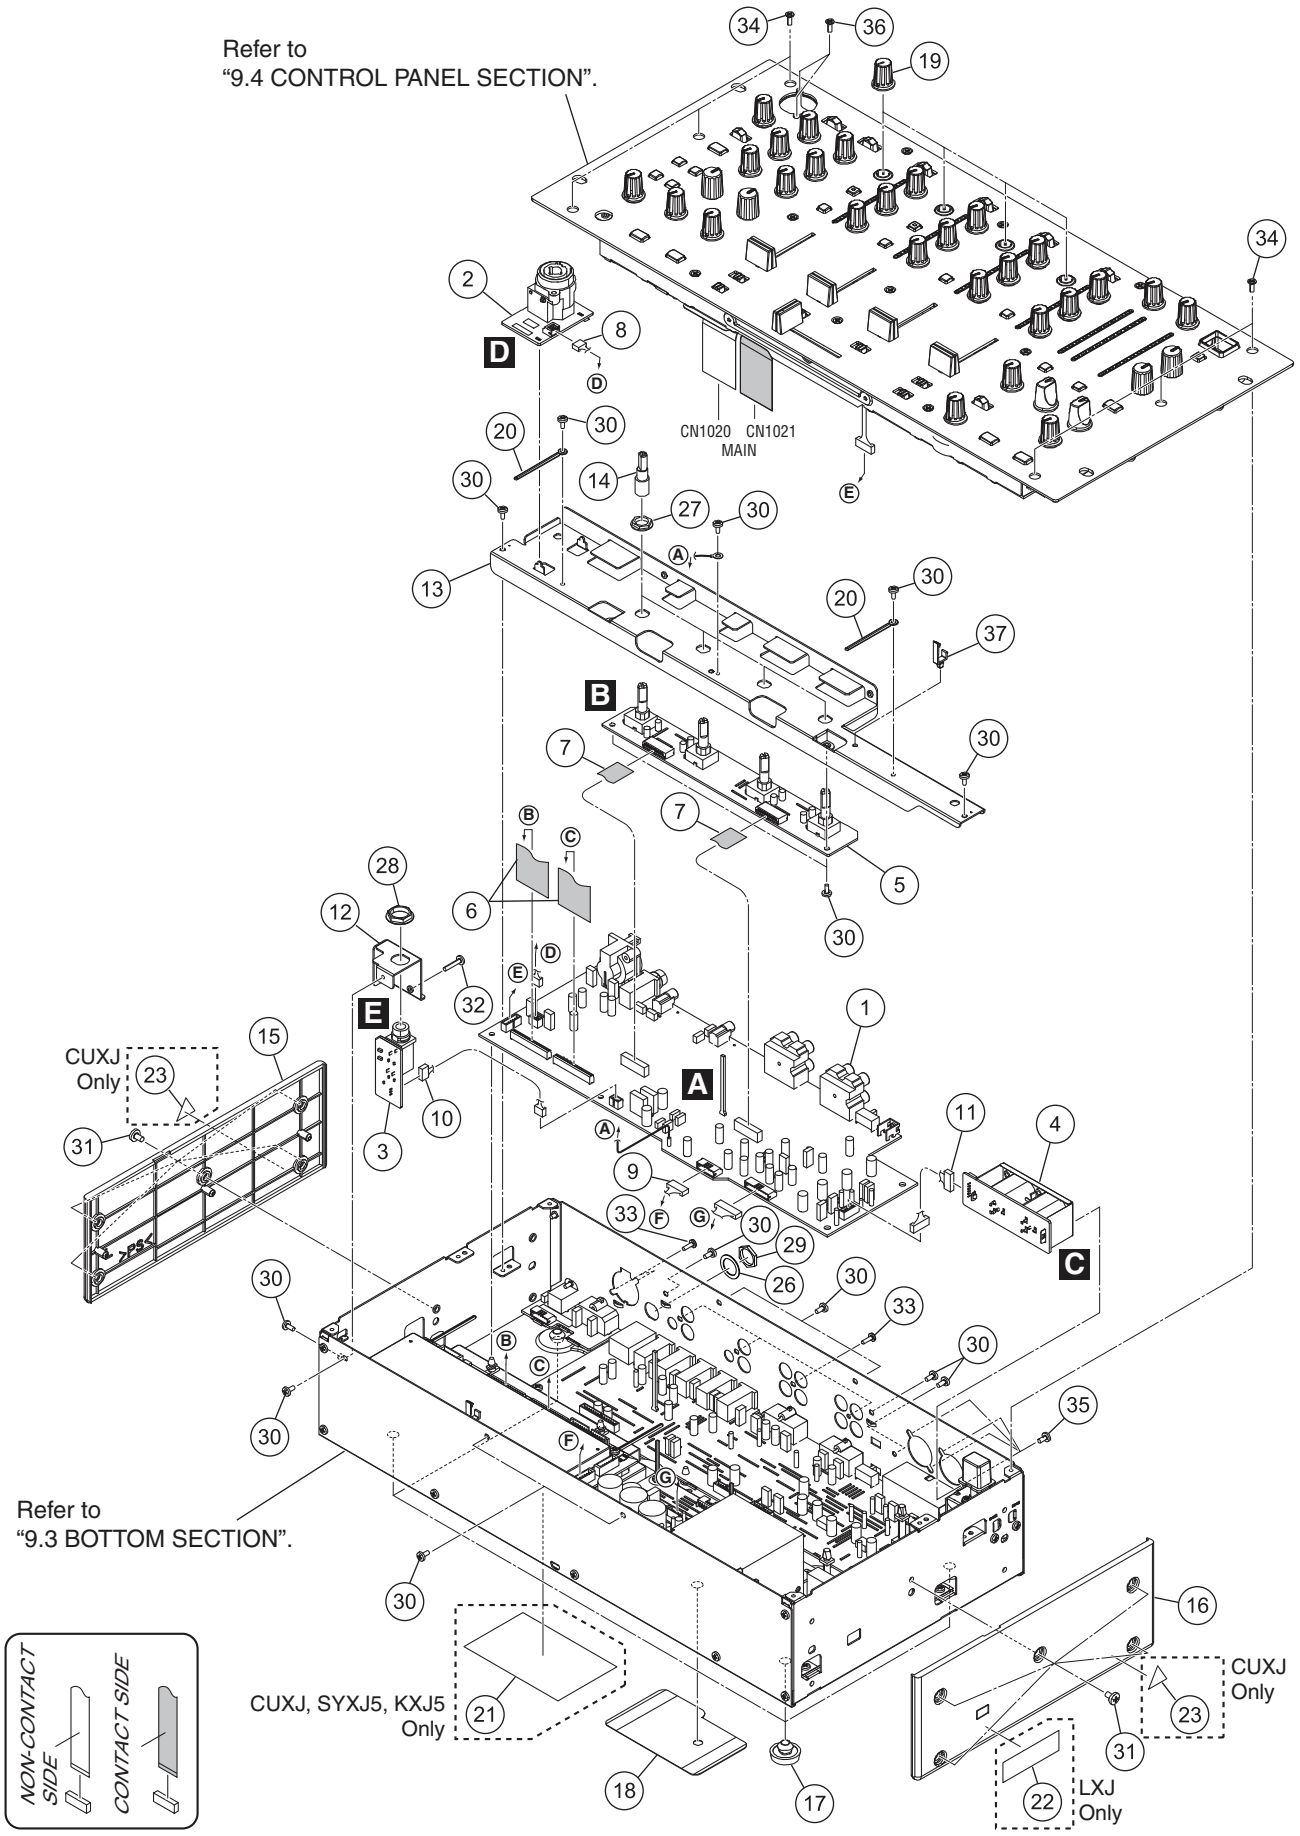

## (1) EXTERIOR SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | INPUT Assy | DWX2953 |
| | 2 | MIC 1 AMP Assy | DWX2955 |
| | 3 | HP JACK Assy | DWX2957 |
| | 4 | ZONE JACK Assy | DWX3029 |
| | 5 | CH TRIM Assy | DWX2964 |
| | 6 | 31P FFC | DDD1437 |
| | 7 | 14P FFC | DDD1486 |
| | 8 | Connector Assy 3P | DKP3841 |
| | 9 | Connector Assy 7P | DKP3848 |
| | 10 | Connector Assy | PF03PP-D30 |
| | 11 | Connector Assy 6P | PF06PP-D12 |
| | 12 | HP Stay | DNF1830 |
| | 13 | TRIM Bracket | DNF1833 |
| | 14 | Extension Shaft | DNK4948 |
| | 15 | Side Panel L | DNK5397 |
| | 16 | Side Panel R | See Contrast table (2) |
| | 17 | Foot | REC-434 |
| | 18 | Bottom Sheet A | DEC3203 |
| | 19 | Rotary Knob (Gray) | DAA1249 |
| | 20 | Cord Clamper | RNH-184 |
| NSP | 21 | Label | See Contrast table (2) |
| NSP | 22 | Label | See Contrast table (2) |
| NSP | 23 | Caution Label | See Contrast table (2) |
| NSP | 24 | V Select Label | See Contrast table (2) |
| | 25 | Recycling Label M | See Contrast table (2) |
| | 26 | Washer | DEC2920 |
| | 27 | Flange Nut M9 | DBN1008 |
| | 28 | Flange Nut M12 | DBN1012 |
| | 29 | Nut M12 | NKX2FNI |
| | 30 | Screw | BBZ30P060FTB |
| | 31 | Screw | BBZ40P060FTB |
| | 32 | Screw | BCZ30P140FTC |
| | 33 | Screw | BPZ30P080FTB |
| | 34 | Screw | CCZ30P060FTB |
| | 35 | Screw | PPZ30P080FTB |
| | 36 | Screw | BPZ30P120FTB |
| | 37 | Locking Mini Clamp | DEC2439 |

## (2) CONTRAST TABLE

DJM-5000/CUXJ, SYXJ5, LXJ and KXJ5 are constructed the same except for the following:

| Mark | No. | Symbol and Description | DJM-5000 /CUXJ | DJM-5000 /SYXJ5 | DJM-5000 /LXJ | DJM-5000 /KXJ5 |
|---|---|---|---|---|---|---|
| | 16 | Side Panel R | DNK5398 | DNK5398 | DNK5399 | DNK5398 |
| NSP | 21 | Label | DRW2392 | DRW2393 | Not used | DRW2397 |
| NSP | 22 | Label | Not used | Not used | DRW2394 | Not used |
| NSP | 23 | Caution Label | DRW1975 | Not used | Not used | Not used |
| NSP | 24 | V Select Label | Not used | Not used | DRW2400 | Not used |
| | 25 | Recycling Label M | Not used | Not used | Not used | DRW2307 |

# 9.3 BOTTOM SECTION

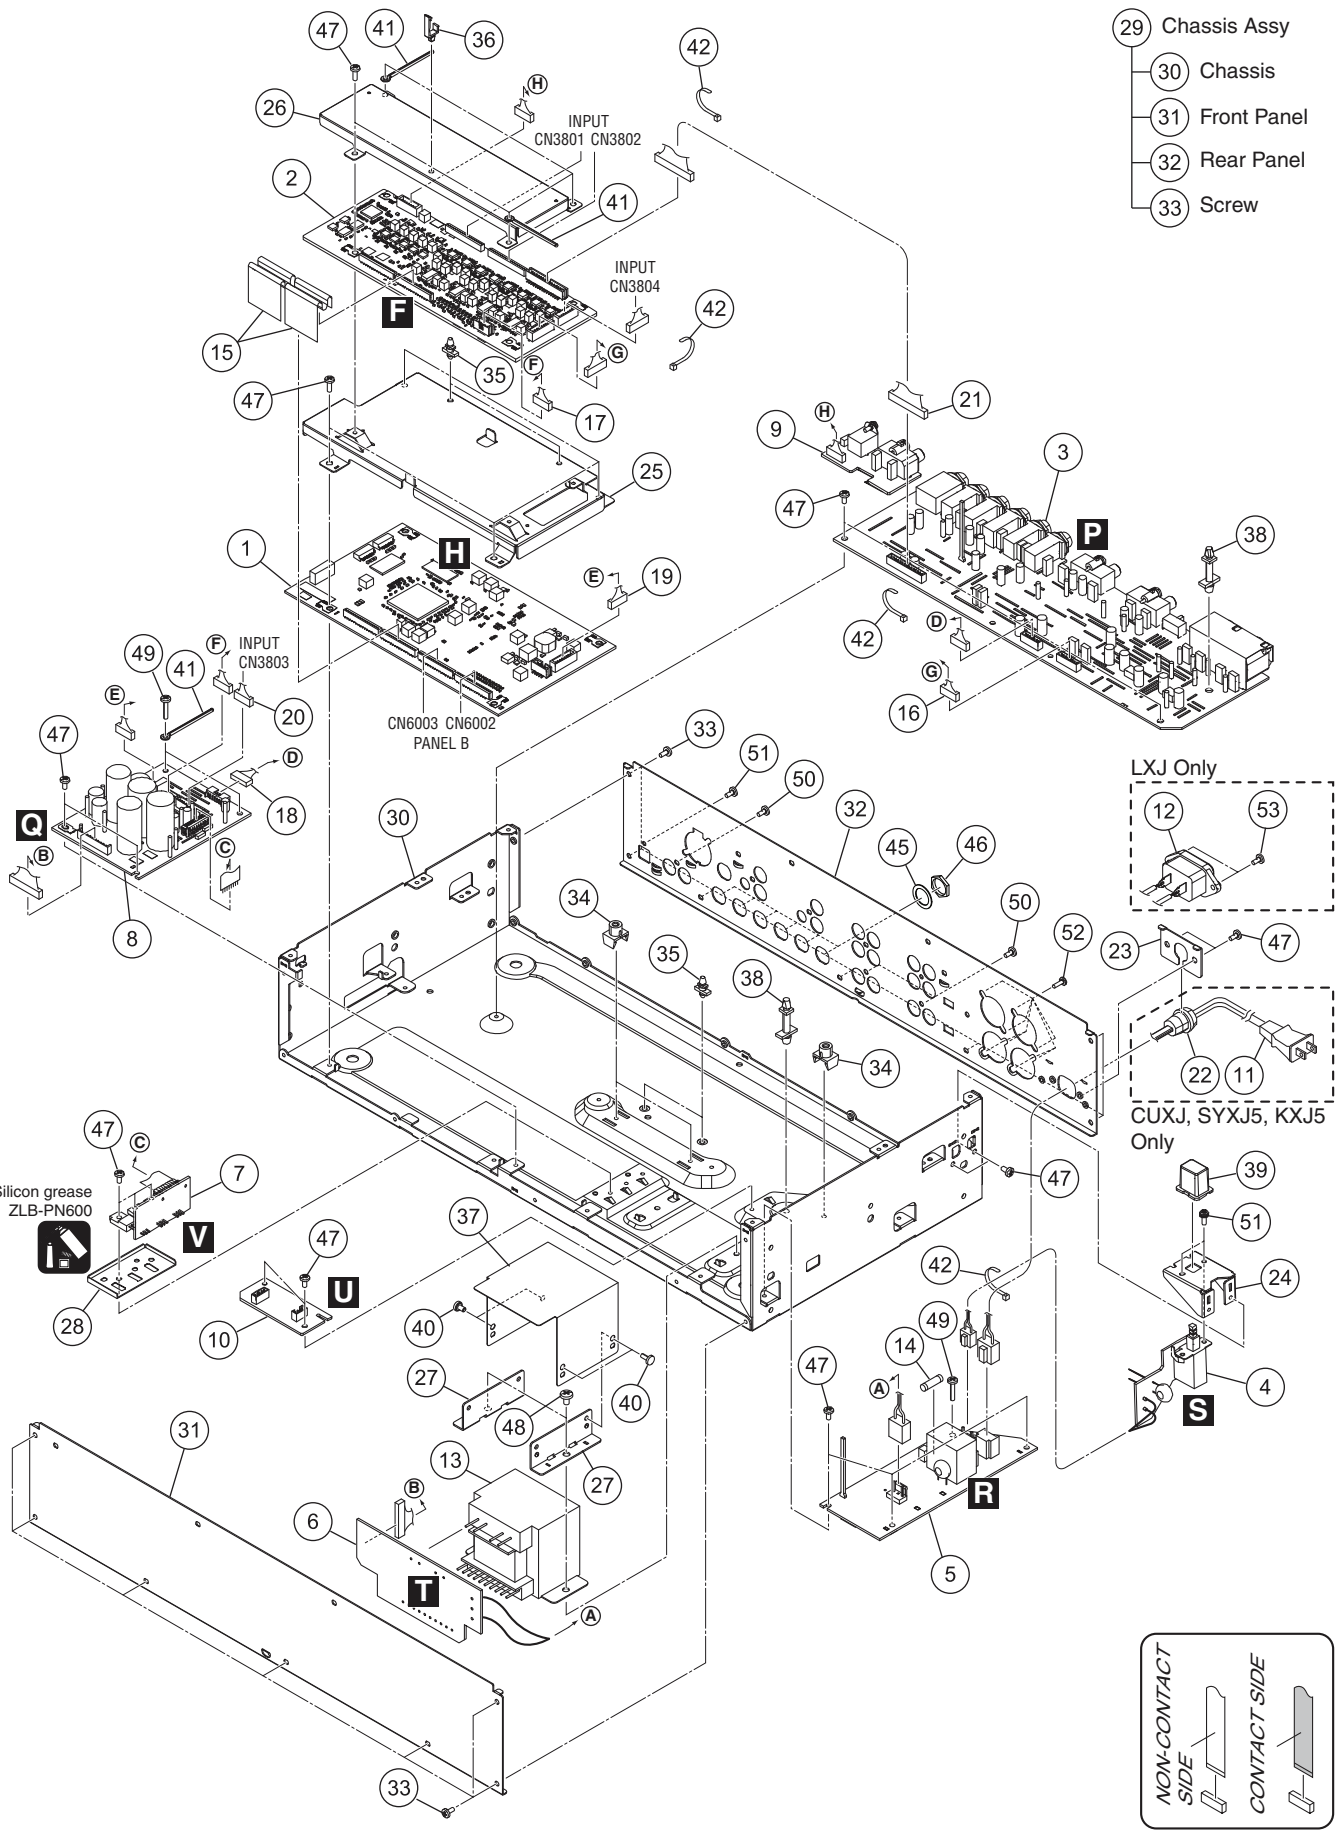

## (1) BOTTOM SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | MAIN Assy | DWX2952 |
| | 2 | DAC Assy | DWX3027 |
| | 3 | OUTPUT Assy | DWX2954 |
| | 4 | PWR SW Assy | DWR1445 |
| NSP | 5 | PRIMARY Assy | See Contrast table (2) |
| | 6 | TRANS Assy | See Contrast table (2) |
| | 7 | REG Assy | DWR1448 |
| | 8 | PWR SECONDARY Assy | DWR1449 |
| | 9 | USB/DIG JACK Assy | DWX2959 |
| | 10 | STANDBY Assy | DWX3028 |
| ⚠ | 11 | AC Power Cord | See Contrast table (2) |
| | 12 | AC Inlet Assy | See Contrast table (2) |
| ⚠ | 13 | Power Transformer | See Contrast table (2) |
| ⚠ | 14 | Fuse (T400 mA) | AEK1050 |
| | 15 | 29P FFC | DDD1468 |
| | 16 | Connector Assy 8P | DKP3840 |
| | 17 | Connector Assy | PF05PP-S12 |
| | 18 | Connector Assy | PF07PP-D07 |
| | 19 | Connector Assy | PF08PP-S07 |
| | 20 | Connector Assy | PF10PP-S10 |
| | 21 | Connector Assy | PF15PP-D20 |
| | 22 | Cord Stopper | See Contrast table (2) |
| | 23 | Power Cord Stay | DNF1857 |
| | 24 | POWER SW Stay | DNF1831 |
| | 25 | Main Shield | DNF1832 |
| | 26 | DAC Shield | DNF1835 |
| | 27 | Trans Stay | DNF1839 |
| | 28 | Heatsink | DNG1113 |
| | 29 | Chassis Assy | See Contrast table (2) |
| NSP | 30 | Chassis | DNA1364 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 31 | Front Panel | DNB1183 |
| | 32 | Rear Panel | See Contrast table (2) |
| | 33 | Screw | BBZ30P060FTB |
| | 34 | PCB Mold | AMR2534 |
| | 35 | Spacer | DEC2369 |
| | 36 | Locking Mini Clamp | DEC2439 |
| | 37 | Barrier (Trans) | DEC3183 |
| NSP | 38 | PC Support | VEC1584 |
| | 39 | POWER Knob | DAC2519 |
| | 40 | Push Rivet | XEC3034 |
| | 41 | Cord Clamper | RNH-184 |
| | 42 | Binder (SKB-90BK) | ZCA-SKB90BK |
| | 43 | ••••• | |
| | 44 | ••••• | |
| | 45 | Washer | DEC2920 |
| | 46 | Nut M12 | NKX2FNI |
| | 47 | Screw | BSZ30P060FTC |
| | 48 | Screw | BBZ40P060FTB |
| | 49 | Screw | BCZ30P140FTC |
| | 50 | Screw | BPZ30P080FTB |
| | 51 | Screw | PMH30P080FTB |
| | 52 | Screw | PPZ30P080FTB |
| | 53 | Screw | See Contrast table (2) |

## (2) CONTRAST TABLE

DJM-5000/CUXJ, SYXJ5, LXJ and KXJ5 are constructed the same except for the following:

| Mark | No. | Symbol and Description | DJM-5000 /CUXJ | DJM-5000 /SYXJ5 | DJM-5000 /LXJ | DJM-5000 /KXJ5 |
|---|---|---|---|---|---|---|
| NSP | 5 | PRIMARY Assy | DWR1446 | DWR1446 | DWR1450 | DWR1446 |
| | 6 | TRANS Assy | DWR1447 | DWR1447 | DWR1451 | DWR1447 |
| ⚠ | 11 | AC Power Cord | VDG1075 | VDG1061 | Not used | XDG3053 |
| | 12 | AC Inlet Assy | Not used | Not used | DKP3843 | Not used |
| ⚠ | 13 | Power Transformer | DTT1226 | DTT1225 | DTT1225 | DTT1225 |
| | 22 | Cord Stopper | CM-22C | CM-22B | Not used | CM-22B |
| | 29 | Chassis Assy | DXB2035 | DXB2047 | DXB2048 | DXB2051 |
| | 32 | Rear Panel | DNC1924 | DNC1925 | DNC1926 | DNC1929 |
| | 53 | Screw | Not used | Not used | IBZ30P080FTB | Not used |

# 9.4 CONTROL PANEL SECTION

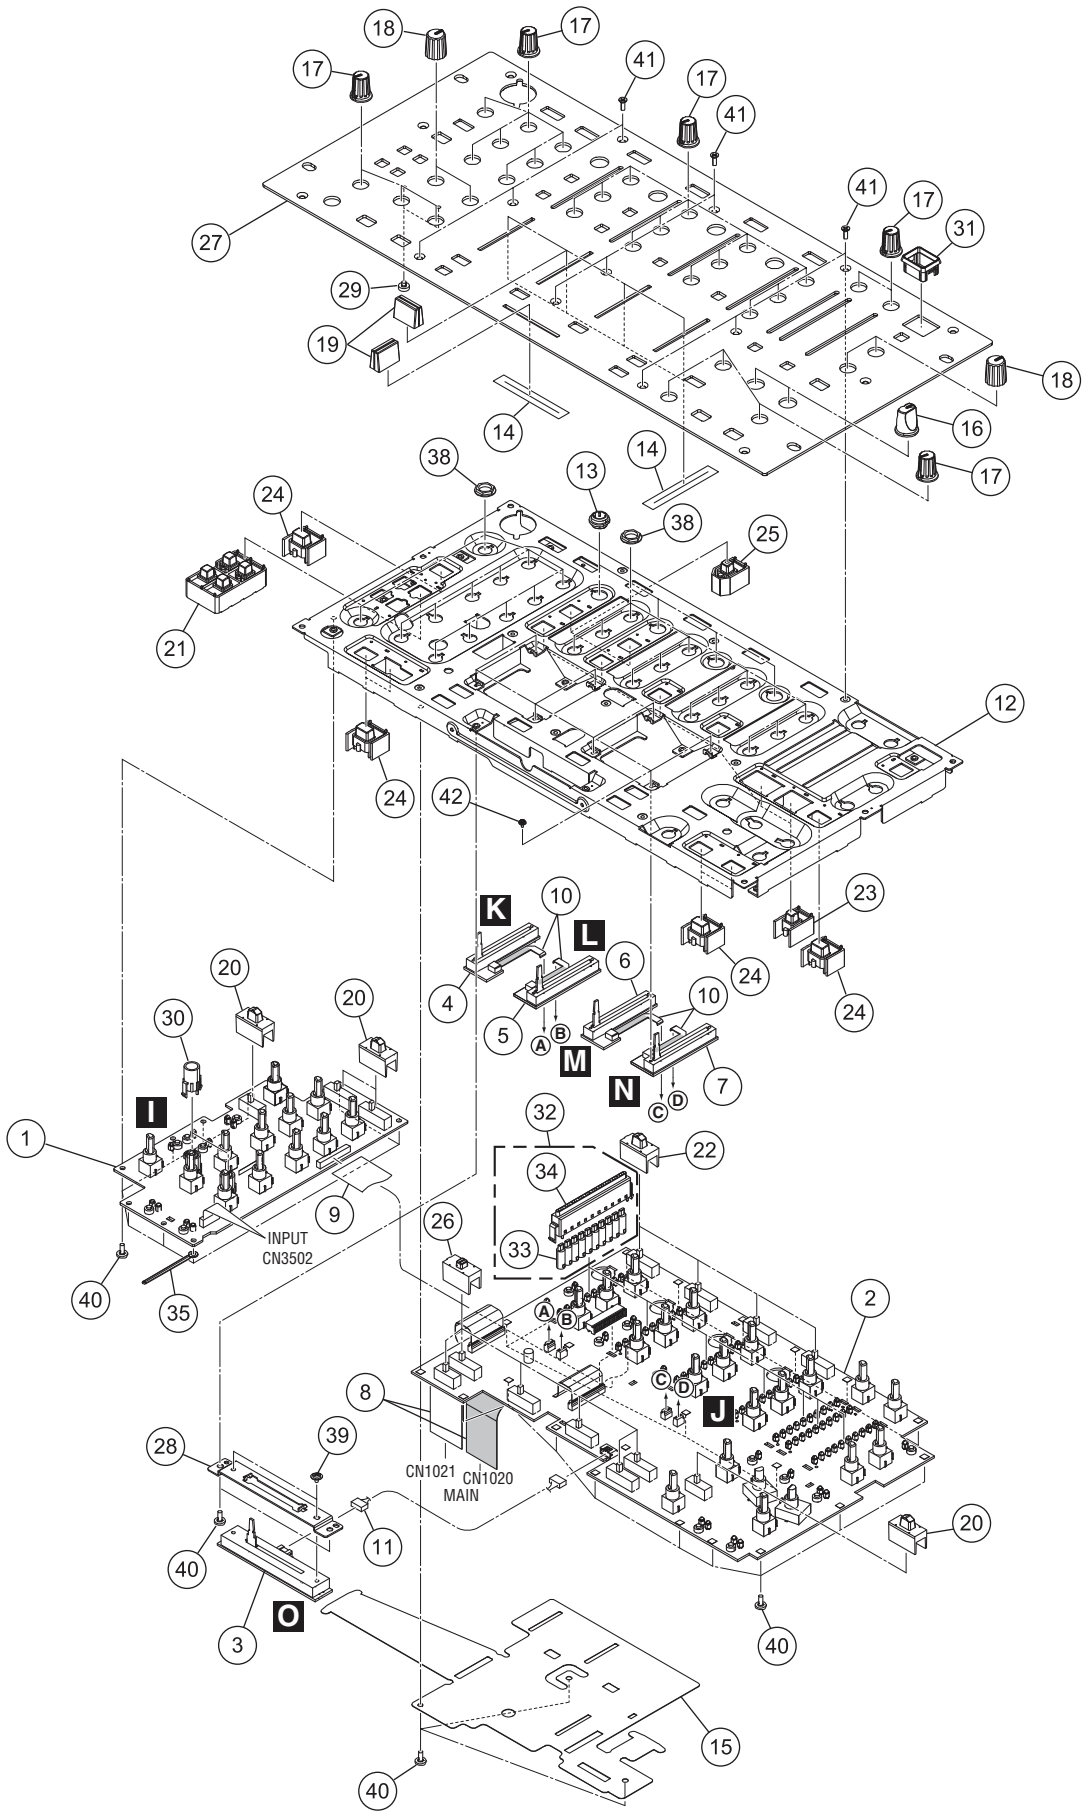

## CONTROL PANEL SECTION PARTS LIST

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | 1 | PANEL A Assy | DWX2961 |
| | 2 | PANEL B Assy | DWX2962 |
| | 3 | CRS FADER Assy | DWX2972 |
| | 4 | CH1 FADER Assy | DWX2968 |
| | 5 | CH2 FADER Assy | DWX2969 |
| | 6 | CH3 FADER Assy | DWX2970 |
| | 7 | CH4 FADER Assy | DWX2971 |
| | 8 | 29P FFC | DDD1469 |
| | 9 | 22P FFC | DDD1471 |
| | 10 | 4P FFC | DDD1472 |
| | 11 | Connector Assy | PF04PP-D10 |
| | 12 | Panel Stay | DNF1834 |
| | 13 | Bushing | DNK4996 |
| | 14 | Fader Packing | DEC2903 |
| | 15 | Barrier (Panel) | DEC3175 |
| | 16 | FX SEL Knob | DAA1213 |
| | 17 | Rotary Knob (Black) | DAA1248 |
| | 18 | Rotary SW Knob (HM) | DAA1256 |
| | 19 | Slider Knob (L2) | DAC2371 |
| | 20 | Slide SW Cap | DAC2400 |
| | 21 | SET Knob (MIC EFX) | DAC2516 |
| | 22 | Slide SW Cap (LINE) | DAC2517 |
| | 23 | CUE Knob | DAC2521 |
| | 24 | MIC Knob | DAC2522 |
| | 25 | FS Knob | DAC2524 |
| | 26 | Slide SW Cap (B) | DAC2537 |
| | 27 | Control Panel | DNB1167 |
| | 28 | CRF Bracket | DNF1828 |
| | 29 | Lens | DNK4532 |
| | 30 | Lens Holder | DNK4533 |
| | 31 | Power Knob Guard | DNK5388 |
| | 32 | Level Meter Assy | DXB2028 |
| | 33 | Level Meter Lens | DNK4530 |
| | 34 | Level Meter Cap | DNK5273 |
| | 35 | Cord Clamper | RNH-184 |
| | 36 | ••••• | |
| | 37 | ••••• | |
| | 38 | Flange Nut M9 | DBN1008 |
| | 39 | Screw | IMZ30P040FTC |
| | 40 | Screw | BBZ30P060FTB |
| | 41 | Screw | CCZ30P060FTB |
| | 42 | Screw | PMA20P040FTC |

# 12. PCB PARTS LIST

*NOTES:* ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*

● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*

● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

*Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).*

*560 Ω → 56 × 10[1] → 561 ..... RD1/4PU [5][6][1] J*
*47 kΩ → 47 × 10[3] → 473 ..... RD1/4PU [4][7][3] J*
*0.5 Ω → R50 ..... RN2H [R][5][0] K*
*1 Ω → 1R0 ..... RS1P [1][R][0] K*

*Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).*

*5.62 kΩ → 562 × 10[1] → 5621 ..... RN1/4PC [5][6][2][1] F*

● *Meaning of the figures and others in the parentheses in the parts list.*

*Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.*
*IC 301 (A, 91, 111) IC NJM2068V*

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | | **LIST OF ASSEMBLIES** | |
| NSP | 1 | MAIN ASSY | DWM2341 |
| | 2 | MAIN ASSY | DWX2952 |
| | 2 | DAC ASSY | DWX3027 |
| NSP | 1 | INOU ASSY | DWM2342 |
| | 2 | INPUT ASSY | DWX2953 |
| | 2 | OUTPUT ASSY | DWX2954 |
| NSP | 1 | SUB ASSY (CUXJ, SYXJ5, KXJ5) | DWM2343 |
| NSP | 1 | SUB ASSY (LXJ) | DWM2371 |
| | 2 | PWR SW ASSY | DWR1445 |
| NSP | 2 | PRIMARY ASSY (CUXJ, SYXJ5, KXJ5) | DWR1446 |
| NSP | 2 | PRIMARY ASSY (LXJ) | DWR1450 |
| | 2 | TRANS ASSY (CUXJ, SYXJ5, KXJ5) | DWR1447 |
| | 2 | TRANS ASSY (LXJ) | DWR1451 |
| | 2 | REG ASSY | DWR1448 |
| | 2 | PWR SECONDARY ASSY | DWR1449 |
| | 2 | MIC 1 AMP ASSY | DWX2955 |
| | 2 | HP JACK ASSY | DWX2957 |
| | 2 | USB/DIG JACK ASSY | DWX2959 |
| | 2 | PANEL A ASSY | DWX2961 |
| | 2 | CH1 FADER ASSY | DWX2968 |
| | 2 | CH2 FADER ASSY | DWX2969 |
| | 2 | CH3 FADER ASSY | DWX2970 |
| | 2 | CH4 FADER ASSY | DWX2971 |
| | 2 | STANDBY ASSY | DWX3028 |
| | 2 | ZONE JACK ASSY | DWX3029 |
| NSP | 1 | PANL ASSY | DWM2344 |
| | 2 | PANEL B ASSY | DWX2962 |
| | 2 | CH TRIM ASSY | DWX2964 |
| | 2 | CRS FADER ASSY | DWX2972 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | | **A INPUT ASSY** | |
| | | **SEMICONDUCTORS** | |
| | IC | 3101,3201,3301,3302 | NJM4565MD |
| | IC | 3102,3104,3203,3304 | NJM4580MD |
| | IC | 3103,3202,3303,3403 | TC74LVX4052F |
| | IC | 3401,3402,3601,3602 | NJM4565MD |
| | IC | 3404,3501,3702,3703 | NJM4580MD |
| | IC | 3701 | NJM4565MD |
| | Q | 3101,3102,3201,3202 | RT1N241M |
| | Q | 3501-3504,3601-3604 | 2SK209 |
| | Q | 3605,3606,3701-3708 | 2SC5938A |
| | Q | 3607,3609 | 2SD1859X |
| | Q | 3608,3610 | 2SB1238X |
| | D | 3103,3201 | UDZS5R6(B) |
| | D | 3104,3105 | HZU3R0(B1) |
| | D | 3702 | 1SS355 |
| | D | 3703-3706 | DAN217U |
| | | **MISCELLANEOUS** | |
| | L | 3101,3102 FERRITE CORE | VTF1093 |
| | L | 3201-3205 FERRITE CORE | VTF1093 |
| | L | 3206-3209 FERRITE CORE | VTF1080 |
| | JA | 3101 HP JACK | DKN1452 |
| | JA | 3102,3201 JACK | DKB1103 |
| | JA | 3103,3202 JACK | RKN1004 |
| | JA | 3301,3401 JACK | DKB1083 |
| | JA | 3501 CONNECTOR | DKN1136 |
| | KN | 3701 SCREW PLATE | VNE1948 |
| | S | 3701 SLIDE SWITCH | DSH1063 |
| | CN | 3501,3601 PLUG(3P) | KM200NA3 |
| | CN | 3502,3701 PLUG(6P) | KM200NA6 |
| | CN | 3801,3802 31P CONNECTOR | VKN1262 |
| | CN | 3803 L-PLUG(10P) | KM200NA10L |
| | CN | 3804 L-PLUG(7P) | KM200NA7L |
| | CN | 3805,3806 CONNECTOR | 9604S-14C |
| | JH | 3101 PCB BINDER | VEF1040 |
| | | **RESISTORS** | |
| | R | 3101,3102,3235,3236 | RS1/10SR1001D |
| | R | 3103 | RS1/10SR2200D |
| | R | 3104,3105,3115,3116 | RS1/10SR8201D |
| | R | 3106,3107,3245,3246 | RS1/10SR4702D |
| | R | 3109,3110,3118,3119 | RS1/10SR2201D |
| | R | 3114 | RS1/10SR6800D |
| | R | 3117 | RS1/10SR6802D |
| | R | 3125,3129,3130 | RS1/10SR8201D |
| | R | 3126,3241-3244,3251 | RS1/10SR2201D |
| | R | 3237-3240,3249,3250 | RS1/10SR8201D |
| | R | 3252,3311,3312 | RS1/10SR2201D |
| | R | 3255,3256,3305,3306 | RS1/10SR8201D |
| | R | 3301-3304,3401-3404 | RS1/10SR1001D |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | R | 3307-3310,3407-3410 | RS1/10SR4702D |
| | R | 3313-3316,3321,3322 | RS1/10SR8201D |
| | R | 3317-3320,3411,3412 | RS1/10SR2201D |
| | R | 3405,3406,3413-3416 | RS1/10SR8201D |
| | R | 3417-3420,3768 | RS1/10SR2201D |
| | R | 3421,3422,3764,3766 | RS1/10SR8201D |
| | R | 3501,3502 | RS1/10SR1000D |
| | R | 3503,3504,3609,3610 | RS1/10SR1002D |
| | R | 3505,3506,3517,3518 | RS1/10SR4701D |
| | R | 3507,3509,3513,3515 | RN1/16SE1501D |
| | R | 3508,3510,3514,3516 | RN1/16SE4701D |
| | R | 3511,3512 | RS1/10SR1800D |
| | R | 3601,3602,3701,3702 | RS1/10SR5601D |
| | R | 3603,3604 | RS1/10SR1102D |
| | R | 3611,3612 | RS1/10SR3302D |
| | R | 3625,3626 | RS2LMF150J |
| | R | 3703,3704,3707,3708 | RS1/10SR6202D |
| | R | 3705,3706 | RS1/10SR5101D |
| | R | 3710-3715,3720-3723 | RS1/10SR4701D |
| | R | 3716-3719,3726-3729 | RS1/10SR2202D |
| | R | 3724,3725,3730,3731 | RS1/10SR5600D |
| | R | 3741,3743,3745,3747 | RS1/10SR1200D |
| | R | 3753-3756 | RD1/2VM100J |
| | R | 3761,3762 | RS1/10SR4702D |
| | R | 3763,3765 | RS1/10SR3901D |
| | R | 3767 | RS1/10SR8201D |
| | | Other Resistors | RS1/10SR###J |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 3101,3102,3106-3108 | CCSRCH101J50 |
| | C | 3103,3105,3203,3206 | CFTLA103J50 |
| | C | 3104 | CCSRCH102J50 |
| | C | 3109,3118,3131,3132 | CEAT100M50 |
| | C | 3110,3111,3119-3122 | CKSRYB104K25 |
| | C | 3112,3815,3816 | CCSRCH331J50 |
| | C | 3113 | CEAT101M10 |
| | C | 3114,3125,3126,3213 | CCSRCH330J50 |
| | C | 3123,3124 | CKSRYB334K25 |
| | C | 3127-3129,3207,3208 | CKSRYB104K25 |
| | C | 3130 | CKSRYB105K16 |
| | C | 3201,3202,3204,3205 | CCSRCH101J50 |
| | C | 3211,3212,3215,3216 | CKSRYB104K25 |
| | C | 3214,3315,3316,3415 | CCSRCH330J50 |
| | C | 3301-3308,3401-3408 | CCSRCH101J50 |
| | C | 3309-3314,3317,3318 | CKSRYB104K25 |
| | C | 3409-3414,3417,3418 | CKSRYB104K25 |
| | C | 3416 | CCSRCH330J50 |
| | C | 3501,3502,3811,3812 | DCE1020 |
| | C | 3503,3504 | CCSRCH221J50 |
| | C | 3505,3506,3712-3715 | CCSRCH101J50 |
| | C | 3507-3510,3813,3814 | CCSRCH471J50 |
| | C | 3511,3512,3607,3608 | CKSRYB104K25 |
| | C | 3513,3514 | CEANP100M16 |
| | C | 3601,3602,3609,3610 | CEAT100M50 |
| | C | 3603,3604 | CKSRYB332K50 |
| | C | 3605,3606 | CCSRCH271J50 |
| | C | 3611,3612 | CCSRCH181J50 |
| | C | 3613,3614,3617-3620 | CKSRYB104K25 |
| | C | 3615,3616 | CKSRYB473K25 |
| | C | 3621,3622 | CEAT221M16 |
| | C | 3701,3702 | DCE1019 |
| | C | 3703,3704 | CCSRCH182J50 |
| | C | 3705,3706 | CCSRCH560J50 |
| | C | 3707,3708,3716,3717 | CKSRYB104K25 |
| | C | 3709,3710 | CEAT101M16 |
| | C | 3718-3721 | CCSRCH101J50 |
| | C | 3722,3723,3726,3727 | CEANP470M16 |
| | C | 3724,3725,3804-3808 | CKSRYB104K25 |
| | C | 3801-3803,3809,3810 | CEAT100M50 |

## B CH TRIM ASSY

**SEMICONDUCTORS**

| | | | |
|---|---|---|---|
| | IC | 3901-3904 | NJM4565MD |

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | VR | 3901-3904 | POTENTIOMETER DCS1098 |
| | CN | 3901,3902 | 14P CONNECTOR 52044-1445 |

**RESISTORS**

| | | | |
|---|---|---|---|
| | R | 3903-3910 | RS1/10SR3302D |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 3901-3908 | CEAL100M16 |
| | C | 3909-3916 | CKSRYB104K50 |

## C ZONE JACK ASSY

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | JA | 7501,7502 | CANON CONNECTOR DKN1550 |
| | CN | 7501 | L-PLUG(6P) KM200NA6L |
| | | 0 | CANON SHIELD DNF1836 |

**RESISTORS**

| | | | |
|---|---|---|---|
| | | All Resistors | RS1/10SR###J |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 7501-7504 | DCE1016 |

## D MIC 1 AMP ASSY

**SEMICONDUCTORS**

| | | | |
|---|---|---|---|
| | D | 9001-9004 | UDZS15(B) |

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | L | 9001,9002 | FERRITE CORE VTF1093 |
| | JA | 9001 | CANON CONNECTOR DKB1094 |
| | CN | 9001 | L-PLUG(3P) KM200NA3L |

**RESISTORS**

| | | | |
|---|---|---|---|
| | R | 9003,9004 | RN1/16SE1000D |
| | R | 9005,9006 | RN1/16SE1002D |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 9001,9002 | CCSRCH221J50 |
| | C | 9003,9004 | CCSRCH101J50 |

## E HP JACK ASSY

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | L | 9401-9403 | FERRITE CORE VTF1093 |
| | JA | 9401 | HEADPHONE JACK DKN1281 |
| | CN | 9401 | PLUG(3P) KM200NA3 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | | **CAPACITORS** | |
| | C | 9401,9402 | CKSRYB104K25 |

## F DAC ASSY

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | | **SEMICONDUCTORS** | |
| | IC | 2001-2008,2029,2030 | NJM4565MD |
| | IC | 2009-2012 | RNB4580F |
| | IC | 2013-2016 | PCM1804DB |
| | IC | 2017,2018,2021-2023 | AK4387ET |
| | IC | 2019 | AK4382AVT |
| | IC | 2020 | AK5381VT |
| | IC | 2024 | AK5358AET |
| | IC | 2025,2026 | AK4117VF |
| | IC | 2027,2028,2036,2040 | AK4387ET |
| | IC | 2031,2045-2058 | TC7SH08FUS1 |
| | IC | 2032,2033 | TC7WU04F |
| | IC | 2037 | TUSB3200ACPAH |
| | IC | 2038 | DYW1785 |
| | IC | 2039,2042,2043 | NJM4565MD |
| | IC | 2041 | AK4387ET |
| ⚠ | IC | 2044 | S-1200B33-M5 |
| | IC | 2059,2060 | TC7W53FU |
| | IC | 2138 | DYW1785 |
| | D | 2001-2016,2018,2019 | DAN217U |
| | D | 2017,2020 | UDZS3R3(B) |
| | D | 2021,2022 | DAN217U |
| | | **MISCELLANEOUS** | |
| | L | 2001 COIL | ATH7015 |
| | L | 2002-2005 CHIP SOLID INDUCTOR | QTL1013 |
| | KN | 2001-2004 EARTH METAL FITTING | VNF1109 |
| | X | 2001 CRYSTAL RESONATOR | DSS1136 |
| | CN | 2010,2011 31P CONNECTOR | VKN1435 |
| | CN | 2012 CONNECTOR | AKM1286 |
| | CN | 2013 CONNECTOR | AKM1279 |
| | CN | 2014,2015 CONNECTOR | AKM1278 |
| | CN | 2016 CONNECTOR | AKM1276 |
| | CN | 2017,2018 29P CONNECTOR | VKN1585 |
| | | **RESISTORS** | |
| | R | 2001-2016,2057-2072 | RN1/16SE1201D |
| | R | 2017-2024,2073-2080 | RN1/16SE3600D |
| | R | 2033-2040,2089-2096 | RN1/16SE3900D |
| | R | 2041,2044,2045,2048 | RN1/16SE3301D |
| | R | 2042,2043,2046,2047 | RN1/16SC30R0D |
| | R | 2049,2052,2053,2056 | RN1/16SE3301D |
| | R | 2050,2051,2054,2055 | RN1/16SC30R0D |
| | R | 2097,2100,2101,2104 | RN1/16SE3301D |
| | R | 2098,2099,2102,2103 | RN1/16SC30R0D |
| | R | 2105,2108,2109,2112 | RN1/16SE3301D |
| | R | 2106,2107,2110,2111 | RN1/16SC30R0D |
| | R | 2238-2241,2309,2310 | RS1/10SR5101D |
| | R | 2242-2245,2319,2320 | RS1/10SR1601D |
| | R | 2246-2249,2322,2323 | RS1/10SR1001D |
| | R | 2250-2253,2324,2325 | RS1/10SR1101D |
| | R | 2352-2355 | RS1/10SR5101D |
| | R | 2356-2359 | RS1/10SR1601D |
| | R | 2360-2363 | RS1/10SR1001D |
| | R | 2364-2367 | RS1/10SR1101D |
| | R | 2384,2385 | RS1/8SQ0R0J |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | | Other Resistors | RS1/10SR###J |
| | | **CAPACITORS** | |
| | C | 2001-2005,2012-2019 | CKSRYB104K25 |
| | C | 2006-2010 | CEHVW100M25 |
| | C | 2011 | CEVW100M25 |
| | C | 2020-2027,2036-2043 | DCG1049 |
| | C | 2028-2035,2044-2047 | CKSRYB104K25 |
| | C | 2048-2051,2056-2059 | CEHVW100M16 |
| | C | 2052-2055,2060,2062 | CKSRYB104K25 |
| | C | 2061,2063,2065 | CEHVW100M16 |
| | C | 2064,2066,2072-2079 | CKSRYB104K25 |
| | C | 2067-2071,2080-2083 | CEHVW100M16 |
| | C | 2084,2086,2088,2090 | CKSRYB104K25 |
| | C | 2085,2087,2089,2091 | CEHVW100M16 |
| | C | 2092-2095,2103,2104 | CKSRYB104K25 |
| | C | 2096,2097,2101,2102 | CEHVW100M16 |
| | C | 2098-2100,2105,2107 | CKSRYB103K50 |
| | C | 2106,2109,2110 | CEHVW100M16 |
| | C | 2108,2111-2115,2120 | CKSRYB104K25 |
| | C | 2116-2119,2122-2126 | CEHVW100M16 |
| | C | 2121,2130-2135,2137 | CKSRYB104K25 |
| | C | 2127,2136,2140,2163 | CKSRYB103K50 |
| | C | 2128,2129,2139,2142 | CEHVW100M16 |
| | C | 2138,2141,2144-2147 | CKSRYB104K25 |
| | C | 2143,2148-2151 | CEHVW100M16 |
| | C | 2152,2155,2156,2161 | CKSRYB104K25 |
| | C | 2157-2160,2165,2166 | CEVW100M16 |
| | C | 2162,2167-2169,2172 | CKSRYB104K25 |
| | C | 2164,2194,2195,2211 | CKSRYB103K50 |
| | C | 2170,2171,2173-2176 | CEVW100M16 |
| | C | 2177-2180,2226,2227 | DCG1049 |
| | C | 2181-2184,2229,2230 | CCSRCH222J50 |
| | C | 2185-2188,2193,2205 | CKSRYB104K25 |
| | C | 2189-2192,2216,2221 | CEVW100M16 |
| | C | 2196,2197 | CCSRCH220J50 |
| | C | 2198,2200 | CKSRYB104K16 |
| | C | 2199,2201,2204,2206 | CCSRCH470J50 |
| | C | 2203,2217,2268,2291 | CEVW101M10 |
| | C | 2207,2228,2269,2271 | CKSRYB471K50 |
| | C | 2208,2210,2218-2220 | CKSRYB104K25 |
| | C | 2212 | CCSRCH101J50 |
| | C | 2213 | CKSRYB102K16 |
| | C | 2214,2215 | CCSRCH180J50 |
| | C | 2222,2223,2231-2233 | CKSRYB104K25 |
| | C | 2224,2225,2234,2235 | CEVW100M16 |
| | C | 2236,2237,2267 | CKSRYB103K50 |
| | C | 2238,2239,2244-2249 | CEVW100M16 |
| | C | 2240-2243,2258-2261 | CKSRYB104K25 |
| | C | 2250-2253 | DCG1049 |
| | C | 2254-2257 | CCSRCH222J50 |
| | C | 2262-2265 | CEVW100M16 |
| | C | 2266,2270,2273,2275 | CKSRYB104K25 |
| | C | 2274 | CEHVW470M10 |
| | C | 2276,2278-2290,2292 | CKSRYB104K25 |
| | C | 2277 | CEHVW101M6R3 |
| | C | 2293 | CEVW101M10 |
| | C | 2294,2295,2300,2301 | CKSRYB104K25 |
| | C | 2296-2299,2310,2311 | CKSRYB103K50 |
| | C | 2302-2309 | CKSRYB272K50 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | C | 2351-2355 | CKSRYB103K50 |

## G USB/DIG JACK ASSY

**SEMICONDUCTORS**

| | | | |
|---|---|---|---|
| | D | 2501 | NNCD6.2MF |
| | D | 2502 | UDZS5R6(B) |

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | JA | 2501 | 2P JACK DKB1098 |
| | JA | 2502 | USB CONNECTOR DKN1237 |

**RESISTORS**

| | | | |
|---|---|---|---|
| | All Resistors | | RS1/10SR####F |

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | JP | 2501 | CONNECTOR ASSY 7P DKP3824 |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 2501 | CFTLA103J50 |
| | C | 2504,2505 | CCSRCH221J50 |
| | C | 2506,2507 | CCSRCH470J50 |

## H MAIN ASSY

**SEMICONDUCTORS**

| | | | |
|---|---|---|---|
| | IC | 1001 | BU4230G |
| | IC | 1006 | DYW1783 |
| | IC | 1007 | DYW1782 |
| | IC | 1008,1013 | TC7SHU04FUS1 |
| | IC | 1009,1010,1012 | TC7SH08FUS1 |
| | IC | 1011 | XC3S50-4TQG144C |
| | IC | 1014-1016 | TC7SH08FUS1 |
| | IC | 1017 | D610A003BPYPA225 |
| | IC | 1019 | K4S641632N-LC75 |
| | IC | 1020 | DYW1784 |
| ⚠ | IC | 1021 | BD9109FVM |
| ⚠ | IC | 1022 | BD9106FVM |
| ⚠ | IC | 1023 | S-1200B25-M5 |
| | IC | 1120 | DYW1784 |
| | Q | 1001 | 2SC4154 |
| | Q | 1002 | RT1P241M |
| | Q | 1003 | 2SC3052 |
| | Q | 1004 | RT1N241M |
| | D | 1013 | SML-310DT |
| | D | 1036-1041 | DAN217U |

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | L | 1001,1002 | CHIP COIL LCTAW330J2520 |
| | L | 1003 | INDUCTOR(470UH) DTL1123 |
| | L | 1004,1005 | INDUCTOR BTH1112 |
| | F | 1001 | COIL RTF1189 |
| | KN | 1001-1004 | EARTH METAL FITTING VNF1109 |
| | X | 1001 | CERAMIC RESONATOR VSS1186 |
| | X | 1002 | CRYSTAL RESONATOR ASS7025 |
| | CN | 1004,1005 | CONNECTOR VKN1945 |
| | CN | 1020,1021,1027 | 29P CONNECTOR VKN1585 |
| | CN | 1026 | CONNECTOR AKM1279 |
| | CN | 1028 | 29P CONNECTOR VKN1585 |

**RESISTORS**

| | | | |
|---|---|---|---|
| | R | 1060,1061,1136-1138 | RS1/8SQ0R0J |
| | R | 1154-1156,1172,1187 | RS1/8SQ0R0J |
| | R | 1157,1286,1287 | RS1/4SA0R0J |
| | R | 1159-1165,1191,1197 | RAB4C220J |
| | R | 1200-1205 | RAB4C220J |
| | R | 1223,1285 | RS1/8SQ0R0J |
| | R | 1271 | RS1/10SR1002D |
| | R | 1272 | RS1/10SR2002D |
| | Other Resistors | | RS1/10SR###J |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 1001,1005,1010,1012 | CKSRYB104K25 |
| | C | 1004,1007,1008,1060 | CKSRYB103K50 |
| | C | 1009,1011 | CKSRYF105Z10 |
| | C | 1013,1014,1033,1034 | CEVW101M10 |
| | C | 1015-1018,1035-1039 | CKSRYB104K25 |
| | C | 1019-1024,1534,1535 | CKSRYB102K50 |
| | C | 1025-1030 | CKSRYB471K50 |
| | C | 1040-1042,1051,1066 | CEVW101M10 |
| | C | 1043,1046,1049,1050 | CKSRYB104K25 |
| | C | 1052-1059,1061-1065 | CKSRYB104K25 |
| | C | 1067,1069-1072 | CKSRYB104K25 |
| | C | 1068 | CCSRCH180J50 |
| | C | 1073 | CCSRCH150J50 |
| | C | 1074-1082,1084,1085 | CKSRYB104K25 |
| | C | 1083,1149,1164 | CEVW100M16 |
| | C | 1086,1137,1157,1166 | CEVW101M10 |
| | C | 1087-1089,1091-1134 | CKSRYB104K25 |
| | C | 1090,1141,1551 | CKSRYB103K50 |
| | C | 1138,1151-1154,1158 | CKSRYB104K25 |
| | C | 1150 | CEVW331M6R3 |
| | C | 1155,1156,1167,1168 | CKSYB106K10 |
| | C | 1159 | CKSRYB331K50 |
| | C | 1160 | CCSRCH751J25 |
| | C | 1161-1163,1165,1169 | CKSRYB104K25 |
| | C | 1170,1555,1557 | CKSRYB104K25 |
| | C | 1554,1556 | CEVW101M10 |

## I PANEL A ASSY

**SEMICONDUCTORS**

| | | | |
|---|---|---|---|
| | IC | 5001,5002 | TC74HC4052AF |
| | Q | 5001,5002 | 2SC4154 |
| | Q | 5003,5005,5007,5009 | DTC143EK |
| | Q | 5004,5006,5008,5010 | 2SB1188 |
| | Q | 5011,5013 | DTC143EK |
| | Q | 5012,5014 | 2SB1188 |
| | D | 5001-5004,5009,5010 | 1SS355 |
| | D | 5005,5006,5024,5025 | SLI-343P8C(ABCD) |
| | D | 5007,5008,5011,5012 | SLR343BC4T(JK) |
| | D | 5013,5014 | SPR-39MVWF(MN) |
| | D | 5015,5016,5018-5021 | 1SS355 |
| | D | 5022,5023 | SLR-343VC(NPQ) |

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| | VR | 5001-5003 | VARIABLE RESISTOR DCS1100 |
| | VR | 5004 | ROTARY VR DCS1104 |
| | VR | 5005-5010 | VARIABLE RESISTOR DCS1100 |
| | VR | 5011,5012 | ROTARY VR DCS1105 |
| | S | 5001,5002 | SLIDE SWITCH DSH1058 |
| | S | 5003-5008,5010 | TACT SWITCH DSG1079 |
| | S | 5009 | SLIDE SWITCH DSH1066 |
| | CN | 5001 | CONNECTOR 22P 52492-2220 |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | JP 5001 | CONNECTOR ASSY | DKP3830 |
| **RESISTORS** | | | |
| | R | 5010,5013,5016,5019 | RS1/8SQ391J |
| | R | 5022,5025 | RS1/8SQ391J |
| | R | 5101,5103 | RS1/4SA0R0J |
| | Other Resistors | | RS1/10SR###J |
| **CAPACITORS** | | | |
| | C | 5003-5008,5010,5012 | CKSRYB104K25 |
| | C | 5009 | CEAL101M10 |
| | C | 5011 | CEAL101M16 |
| | C | 5013,5016,5017,5019 | CKSRYB104K25 |
| | C | 5014,5015,5018,5021 | CKSRYB471K50 |
| | C | 5020,5023,5025,5027 | CKSRYB104K25 |
| | C | 5022,5024,5026,5028 | CKSRYB471K50 |
| | C | 5029,5032,5041-5044 | CKSRYB471K50 |
| | C | 5030,5031,5033,5038 | CKSRYB104K25 |
| | C | 5039,5040 | CEAL100M35 |

## J PANEL B ASSY

| | | | |
|---|---|---|---|
| **SEMICONDUCTORS** | | | |
| | IC | 6001-6003 | TC74HC4052AF |
| | IC | 6005 | NJM2903M |
| | Q | 6005,6006 | 2SC4154 |
| | Q | 6007-6016 | 2SC3052 |
| | Q | 6017,6019,6021,6023 | DTC143EK |
| | Q | 6018,6020,6022,6024 | 2SB1188 |
| | Q | 6026,6027 | RT1P431M |
| | Q | 6028,6030,6032 | DTC143EK |
| | Q | 6029,6031,6033 | 2SB1188 |
| | D | 6001-6006,6011-6016 | SLR-343MC(NPQ) |
| | D | 6007-6009,6017-6019 | SLI-343Y8C(KLMN) |
| | D | 6010,6020,6030,6040 | SLR-343VC(NPQ) |
| | D | 6021-6026,6031-6036 | SLR-343MC(NPQ) |
| | D | 6027-6029,6037-6039 | SLI-343Y8C(KLMN) |
| | D | 6041-6046,6051-6056 | SLR-343MC(NPQ) |
| | D | 6047-6049,6057-6059 | SLI-343Y8C(KLMN) |
| | D | 6050,6060,6070,6077 | SLR-343VC(NPQ) |
| | D | 6061-6066 | SLR-343MC(NPQ) |
| | D | 6067-6069 | SLI-343Y8C(KLMN) |
| | D | 6075,6076 | SLR343BC4T(JK) |
| | D | 6078 | SLR-343VC(NPQ) |
| | D | 6079,6080 | SLI-343P8C(ABCD) |
| | D | 6071-6074,6081,6082,6084,6085 | SLI-343YYW(TUV) |
| | D | 6211-6241 | 1SS355 |
| | D | 6242-6246 | DAN217U |
| **MISCELLANEOUS** | | | |
| | VR | 6001-6013 VARIABLE RESISTOR | DCS1100 |
| | VR | 6014,6016,6018-6020 ROTARY VR | DCS1104 |
| | VR | 6017 VARIABLE RESISTOR | DCS1100 |
| | S | 6001,6002,6004 SLIDE SWITCH | DSH1058 |
| | S | 6003,6009,6012 TACT SWITCH | DSG1079 |
| | S | 6005,6007,6008 SLIDE SWITCH | DSH1058 |
| | S | 6006,6025 SLIDE SWITCH | DSH1066 |
| | S | 6010,6011,6013 SLIDE SWITCH | DSH1058 |
| | S | 6014-6016,6026-6030 TACT SWITCH | DSG1079 |
| | S | 6017 ROTARY SWITCH | DSG1098 |
| | S | 6018 ROTARY SWITCH | DSG1131 |
| | CN | 6001 CONNECTOR 22P | 52492-2220 |
| | CN | 6002,6003 29P CONNECTOR | VKN1260 |
| | CN | 6006-6009 4P CONNECTOR | VKN1235 |
| | CN | 6010 L-PLUG(4P) | KM200NA4L |
| **RESISTORS** | | | |
| | R | 6060,6072,6084,6096 | RS1/8SQ391J |
| | R | 6157,6159,6161 | RS1/8SQ391J |
| | Other Resistors | | RS1/10SR###J |
| **CAPACITORS** | | | |
| | C | 6002,6003,6008,6088 | CEJQ101M10 |
| | C | 6004,6005,6007,6010 | CKSRYB104K25 |
| | C | 6012-6015,6019 | CKSRYB104K25 |
| | C | 6023-6025,6028,6029 | CKSRYB104K25 |
| | C | 6026,6027,6030,6033 | CKSRYB471K50 |
| | C | 6031,6032,6034,6036 | CKSRYB104K25 |
| | C | 6035,6037,6040,6041 | CKSRYB471K50 |
| | C | 6038,6039,6042,6043 | CKSRYB104K25 |
| | C | 6044,6046,6047,6050 | CKSRYB471K50 |
| | C | 6045,6048,6049 | CKSRYB104K25 |
| | C | 6051-6053,6057-6059 | CKSRYB104K25 |
| | C | 6056,6063,6066,6069 | CKSRYB471K50 |
| | C | 6064,6065,6067,6068 | CKSRYB104K25 |
| | C | 6070,6071,6073 | CKSRYB104K25 |
| | C | 6072,6074,6075,6081 | CKSRYB471K50 |
| | C | 6076-6080,6083-6085 | CKSRYB104K25 |
| | C | 6089 | CKSRYB104K25 |
| | C | 6090-6095 | CKSRYB471K50 |

## K CH1 FADER ASSY

| | | | |
|---|---|---|---|
| **MISCELLANEOUS** | | | |
| | VR | 9901 VARIABLE RESISTOR | DCV1020 |
| | CN | 9901 4P CONNECTOR | VKN1264 |

## L CH2 FADER ASSY

| | | | |
|---|---|---|---|
| **MISCELLANEOUS** | | | |
| | VR | 9911 VARIABLE RESISTOR | DCV1020 |
| | CN | 9911 4P CONNECTOR | VKN1264 |

## M CH3 FADER ASSY

| | | | |
|---|---|---|---|
| **MISCELLANEOUS** | | | |
| | VR | 9921 VARIABLE RESISTOR | DCV1020 |
| | CN | 9921 4P CONNECTOR | VKN1264 |

## N CH4 FADER ASSY

| | | | |
|---|---|---|---|
| **MISCELLANEOUS** | | | |
| | VR | 9931 VARIABLE RESISTOR | DCV1020 |
| | CN | 9931 4P CONNECTOR | VKN1264 |

## O CRS FADER ASSY

| | | | |
|---|---|---|---|
| **MISCELLANEOUS** | | | |
| | VR | 9941 VARIABLE RESISTOR | DCV1006 |
| | CN | 9941 L-PLUG(4P) | KM200NA4L |

| Mark | No. | Description | Part No. |
|---|---|---|---|

## P OUTPUT ASSY

### SEMICONDUCTORS

| | | | |
|---|---|---|---|
| | IC | 4001,4007,4008 | NJM4580MD |
| | IC | 4002,4003 | NJM4580DD |
| | IC | 4004-4006,4009,4010 | NJM4565MD |
| | Q | 4001-4004,4018 | 2SC5938A |
| | Q | 4005-4008,4013,4014 | 2SK209 |
| | Q | 4009-4012,4015,4016 | INC2001AC1 |
| | Q | 4017,4019,4029,4030 | 2SK209 |
| | Q | 4020-4028,4031,4032 | 2SC5938A |
| | D | 4001 | 1SS355 |
| | D | 4012-4015 | DAN217U |

### MISCELLANEOUS

| | | | |
|---|---|---|---|
| | L | 4001-4004 FERRITE CORE | VTF1080 |
| | L | 4005-4010 FERRITE CORE | VTF1093 |
| | JA | 4001,4002 CANON CONNECTOR | DKB1093 |
| | JA | 4003,4006 JACK | PKB1034 |
| | JA | 4004,4005 JACK | DKN1249 |
| | JA | 4007 HEADPHONE JACK | DKB1078 |
| | JA | 4008-4010 HP JACK | DKN1452 |
| | S | 4001 SLIDE SWITCH | DSH1063 |
| | CN | 4001 PLUG(8P) | KM200NA8 |
| | CN | 4002 PLUG(15P) | KM200NA15 |
| | CN | 4003 PLUG(7P) | KM200NA7 |
| | | 0 CANON SHIELD | DNF1789 |
| | JH | 4001 PCB BINDER | VEF1040 |

### RESISTORS

| | | | |
|---|---|---|---|
| | R | 4001-4004 | RN1/16SE2701D |
| | R | 4005-4008,4013-4016 | RN1/16SE3002D |
| | R | 4009-4012 | RN1/16SE2401D |
| | R | 4017-4020 | RN1/16SE2201D |
| | R | 4032-4039 | RS1/10SR3601D |
| | R | 4045-4048 | RS1/10SR6801D |
| | R | 4049-4052,4083,4087 | RD1/2VM221J |
| | R | 4053-4056 | RD1/2VM101J |
| | R | 4057,4060,4061,4064 | RS1/10SR8200D |
| | R | 4058,4059,4062,4063 | RS1/10SR2201D |
| | R | 4065-4068 | RS1/10SR6201D |
| | R | 4073,4076,4097,4101 | RS1/10SR4701D |
| | R | 4085,4086,4091,4092 | RS1/10SR5601D |
| | R | 4090,4096,4098,4128 | RS1/10SR5101D |
| | R | 4093,4103,4129,4133 | RS1/10SR4702D |
| | R | 4094,4095,4099,4100 | RS1/10SR6202D |
| | R | 4102,4106-4109 | RS1/10SR4701D |
| | R | 4104,4134,4170,4171 | RS1/10SR4301D |
| | R | 4111,4153 | RD1/2VM331J |
| | R | 4112-4115,4124-4127 | RS1/10SR2202D |
| | R | 4117-4120,4131,4160 | RS1/10SR4701D |
| | R | 4121,4122,4130,4132 | RS1/10SR5600D |
| | R | 4145,4147,4149,4151 | RS1/10SR1200D |
| | R | 4161,4164,4165 | RS1/10SR4701D |
| | R | 4162,4163,4168,4169 | RS1/10SR4702D |
| | R | 4172,4173 | RN1/16SE3602D |
| | R | 4176,4177 | RD1/2VM821J |
| | R | 4212,4213 | RS1/10SR4702D |
| | R | 4214,4216 | RS1/10SR1601D |
| | R | 4215,4217 | RS1/10SR3301D |
| | | Other Resistors | RS1/10SR###J |

| Mark | No. | Description | Part No. |
|---|---|---|---|

### CAPACITORS

| | | | |
|---|---|---|---|
| | C | 4001,4002,4052,4053 | DCE1019 |
| | C | 4003,4004,4054,4055 | CCSRCH182J50 |
| | C | 4005-4008,4068-4071 | CCSRCH101J50 |
| | C | 4009,4010,4018,4019 | CKSRYB104K25 |
| | C | 4011,4012 | CCH1357 |
| | C | 4013-4016 | CCSRCH680J50 |
| | C | 4017,4020,4023,4024 | CEAT101M25 |
| | C | 4021,4022,4025-4028 | CKSRYB104K25 |
| | C | 4029-4032,4057,4058 | CCSRCH560J50 |
| | C | 4033-4036 | DCE1018 |
| | C | 4039,4040,4059,4060 | CKSRYB104K25 |
| | C | 4041,4042 | CCSRCH331J50 |
| | C | 4043,4044,4123,4124 | CEAT100M50 |
| | C | 4045,4046 | DCE1017 |
| | C | 4051,4083,4099,4100 | CKSRYB472K50 |
| | C | 4056,4084,4103,4104 | CKSRYB152K50 |
| | C | 4061,4088,4109,4112 | CKSRYB334K10 |
| | C | 4062,4087,4113,4115 | CCSRCH560J50 |
| | C | 4063,4065,4072,4073 | CKSRYB104K25 |
| | C | 4067,4089,4117,4118 | CKSRYB473K25 |
| | C | 4074,4079,4080,4085 | CEANP100M35 |
| | C | 4075-4078,4101,4102 | CCSRCH101J50 |
| | C | 4081,4082,4111,4114 | CKSRYB104K25 |
| | C | 4086,4090,4121,4122 | CEANP100M35 |
| | C | 4091-4096,4125,4126 | DCE1016 |
| | C | 4097,4098 | CEAL100M35 |
| | C | 4105,4106 | CCSRCH102J50 |
| | C | 4119,4120,4129,4131 | CKSRYB104K25 |
| | C | 4128,4130 | CEAT101M35 |

## Q PWR SECONDARY ASSY

### SEMICONDUCTORS

| | | | | |
|---|---|---|---|---|
| ⚠ | IC | 8301 | BD9703T-V5 |
| | Q | 8301,8302 | 2SC4154 |
| | Q | 8303,8304 | RT1N241M |
| | Q | 8305,8306 | RT1P241M |
| | Q | 8307 | 2SC1740S |
| ⚠ | D | 8301,8304-8314,8322 | 1SR154-400 |
| ⚠ | D | 8302,8303 | RB060L-40 |
| ⚠ | D | 8315 | RB160L-40 |
| | D | 8316,8317,8320 | 1SS355 |

### MISCELLANEOUS

| | | | |
|---|---|---|---|
| | JP | 8301 BOARD IN WIRE | DB009NH2 |
| | L | 8301 RADIAL LEAD INDUCTOR | DTL1168 |
| | L | 8302 CHIP COIL | LCTAW330J2520 |
| | KN | 8301 WRAPPING TERMINAL | VNF1084 |
| | CN | 8301 10P TOP POST | B10B-EH |
| | CN | 8302 L-PLUG(7P) | KM200NA7L |
| | CN | 8303 9P JUMPER CONNECTOR | 52147-0910 |
| | CN | 8304 PLUG(10P) | KM200NA10 |
| | CN | 8305 PLUG(5P) | KM200NA5 |
| | CN | 8306 PLUG(8P) | KM200NA8 |
| ⚠ | P | 8301,8306,8311 PROTECTOR (800 mA) | AEK7008 |
| ⚠ | P | 8302,8303,8307 PROTECTOR (250 mA) | AEK7002 |
| ⚠ | P | 8304,8305,8308 PROTECTOR (500 mA) | AEK7005 |
| ⚠ | P | 8309,8310 PROTECTOR (500 mA) | AEK7060 |

### RESISTORS

| | | | |
|---|---|---|---|
| | R | 8304 | RS1/10SR3301F |

| Mark | No. | Description | Part No. |
|---|---|---|---|
| | R | 8305 | RS1/10SR8200F |
| | R | 8322,8327,8329 | RS1/4SA0R0J |
| | | Other Resistors | RS1/10SR###J |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 8301,8303,8306 | CKSRYB473K50 |
| | C | 8302,8304,8305,8307 | CKSRYB473K25 |
| | C | 8308 | CKSRYB473K25 |
| | C | 8309,8310 | CEHAT472M35 |
| | C | 8311 | CEHAT332M25 |
| | C | 8312,8313 | CEHAT102M16 |
| | C | 8314 | CEHAT682M16 |
| | C | 8318 | CKSYB106K10 |
| | C | 8319 | CEHAT222M16 |
| | C | 8320 | CEJQ100M50 |
| | C | 8321,8323 | CEHAT100M50 |
| | C | 8322 | CEHANP2R2M50 |
| | C | 8325 | CKSQYB105K16 |

## R PRIMARY ASSY (DWR1446)

**MISCELLANEOUS**

| | | | | |
|---|---|---|---|---|
| ⚠ | L | 8001 | FILTER | DTL1131 |
| ⚠ | H | 8001,8002 | FUSE CLIP | AKR1004 |
| | CN | 8001 | AC CORD SOCKET | RKP1751 |
| ⚠ | CN | 8002,8005 | CONNECTOR | B2P3-VH |
| | JH | 8001,8002 | PCB BINDER | VEF1040 |

**CAPACITORS**

| | | | |
|---|---|---|---|
| ⚠ | C | 8001 | ACE7027 |
| ⚠ | C | 8002 | ACG7030 |

## R PRIMARY ASSY (DWR1450)

**MISCELLANEOUS**

| | | | | |
|---|---|---|---|---|
| ⚠ | L | 8001 | FILTER | DTL1131 |
| ⚠ | H | 8001,8002 | FUSE CLIP | AKR1004 |
| | CN | 8001 | AC CORD SOCKET | RKP1751 |
| ⚠ | CN | 8002 | CONNECTOR | B2P3-VH |
| ⚠ | CN | 8004 | CONNECTOR(VH) | B3P5-VH |
| | JH | 8001,8002 | PCB BINDER | VEF1040 |
| ⚠ | S | 8001 | VOLTAGE SELECT SW | XKX3005 |

**CAPACITORS**

| | | | |
|---|---|---|---|
| ⚠ | C | 8001 | ACE7027 |
| ⚠ | C | 8002 | ACG7030 |

## S PWR SW ASSY

**MISCELLANEOUS**

| | | | | |
|---|---|---|---|---|
| ⚠ | S | 8101 | SWITCH | DSA1035 |
| | | 0 | MASK | DEC3212 |
| ⚠ | JP | 8101 | CONNECTOR ASSY 2P | DKP3847 |

**CAPACITORS**

| | | | |
|---|---|---|---|
| ⚠ | C | 8101 | ACG7030 |

## T TRANS ASSY (DWR1447)

**MISCELLANEOUS**

| | | | | |
|---|---|---|---|---|
| | JP | 8201 | CONNECTOR ASSY | PF10EN-D07 |
| ⚠ | JP | 8202 | CONNECTOR ASSY 2P | DKP3827 |
| ⚠ | P | 8201,8204 | PROTECTOR (1.25 A) | AEK7048 |
| ⚠ | P | 8202,8203 | PROTECTOR (3.5 A) | AEK7017 |
| ⚠ | P | 8205 | PROTECTOR (2.5 A) | AEK7014 |
| ⚠ | P | 8206 | PROTECTOR (500 mA) | AEK7005 |

## T TRANS ASSY (DWR1451)

**MISCELLANEOUS**

| | | | | |
|---|---|---|---|---|
| | JP | 8201 | CONNECTOR ASSY | PF10EN-D07 |
| ⚠ | JP | 8203 | CONNECTOR ASSY 3P | DKP3826 |
| ⚠ | P | 8201,8204 | PROTECTOR (1.25 A) | AEK7048 |
| ⚠ | P | 8202,8203 | PROTECTOR (3.5 A) | AEK7017 |
| ⚠ | P | 8205 | PROTECTOR (2.5 A) | AEK7014 |
| ⚠ | P | 8206 | PROTECTOR (500 mA) | AEK7005 |

## U STANDBY ASSY

There is no service parts.

## V REG ASSY

**SEMICONDUCTORS**

| | | | |
|---|---|---|---|
| ⚠ | IC | 8501 | BA05T |
| ⚠ | IC | 8502 | KIA7815API |
| ⚠ | IC | 8503 | KIA7915PI |
| | D | 8501,8502 | RB501V-40 |

**MISCELLANEOUS**

| | | | |
|---|---|---|---|
| J | 4 | JUMPER WIRE | D20PYY0908E |
| JH | 8501 | 9P CABLE HOLDER | 51048-0900 |

**CAPACITORS**

| | | | |
|---|---|---|---|
| | C | 8501,8502 | CKSRYB104K50 |
| | C | 8503-8506 | CKSRYB104K25 |