9.1 PACKING

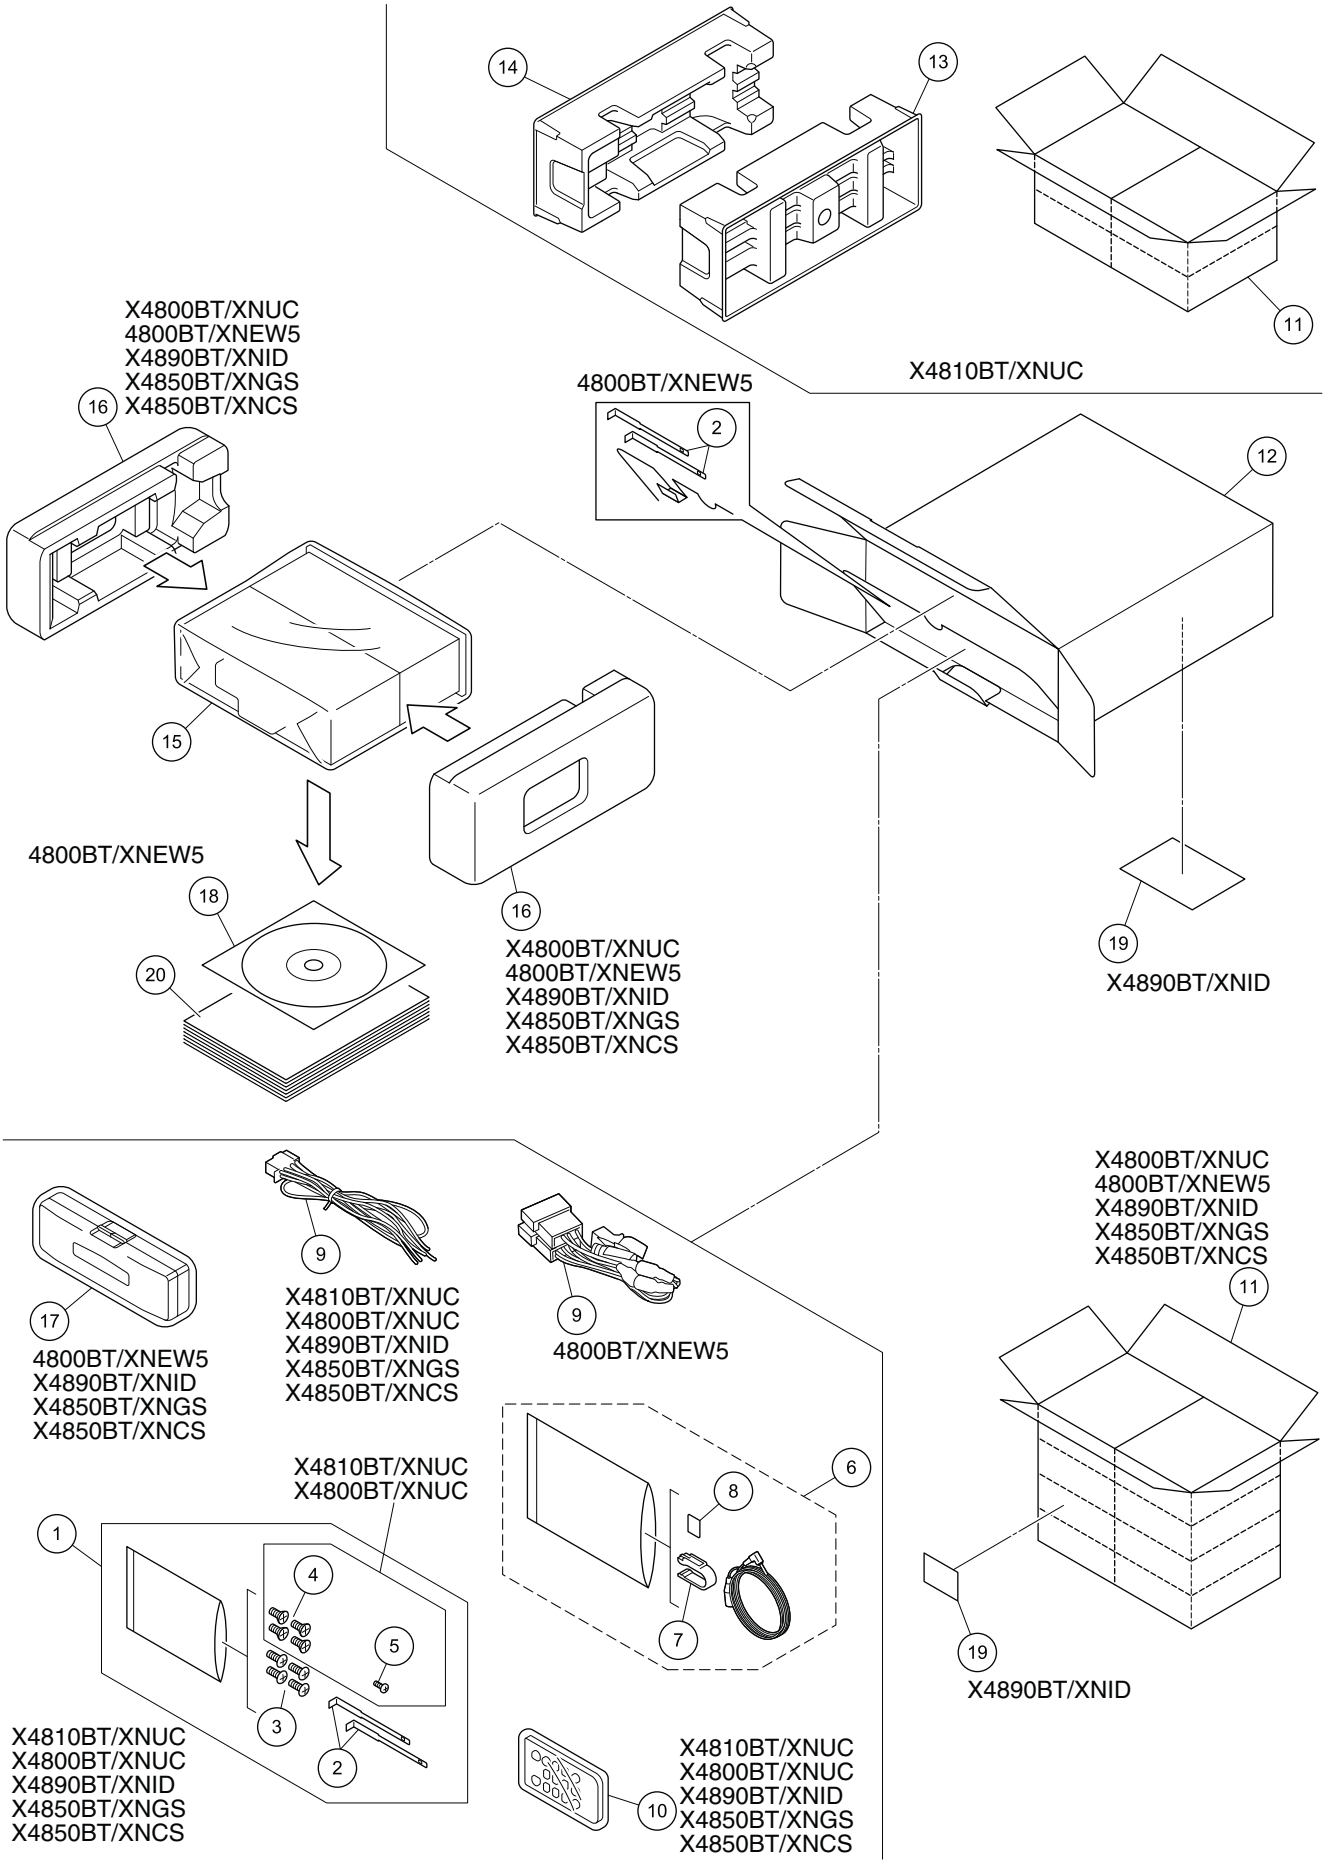
14
13
11
X4810BT/XNUC
X4800BT/XNUC
4800BT/XNEW5
X4890BT/XNID
X4850BT/XNGS
X4850BT/XNCS
16
4800BT/XNEW5
2
12
15
16
X4800BT/XNUC
4800BT/XNEW5
X4890BT/XNID
X4850BT/XNGS
X4850BT/XNCS
19
X4890BT/XNID
4800BT/XNEW5
18
20
17
4800BT/XNEW5
X4890BT/XNID
X4850BT/XNGS
X4850BT/XNCS
9
X4810BT/XNUC
X4800BT/XNUC
X4890BT/XNID
X4850BT/XNGS
X4850BT/XNCS
9
4800BT/XNEW5
X4800BT/XNUC
4800BT/XNEW5
X4890BT/XNID
X4850BT/XNGS
X4850BT/XNCS
11
6
8
7
X4810BT/XNUC
X4800BT/XNUC
1
4
5
3
2
19
X4890BT/XNID
X4810BT/XNUC
X4800BT/XNUC
X4890BT/XNID
X4850BT/XNGS
X4850BT/XNCS
10
X4810BT/XNUC
X4800BT/XNUC
X4890BT/XNID
X4850BT/XNGS
X4850BT/XNCS

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Accessory Assy	See Contrast table (2)
	2	Handle	QNC3021
	3	Screw	See Contrast table (2)
	4	Screw	See Contrast table (2)
	5	Screw	See Contrast table (2)
	6	Microphone Assy	CPM1083
	7	Holder	CZN7192
	8	Cushion	CZN7193
	9	Cord Assy	See Contrast table (2)
	10	Card Remote Control Unit	See Contrast table (2)
	11	Contain Box	See Contrast table (2)
	12	Unit Box	See Contrast table (2)
	13	Protector	See Contrast table (2)
	14	Protector	See Contrast table (2)
	15	Polyethylene Bag	See Contrast table (2)
	16	Protector	See Contrast table (2)
	17	Case Assy	See Contrast table (2)
	18	IM CD ROM	See Contrast table (2)
	19	Label	See Contrast table (2)
	20-1	Owner's Manual	See Contrast table (2)
*	20-2	Warranty Card	See Contrast table (2)
*	20-3	Caution Card	See Contrast table (2)
*	20-4	Caution Card	See Contrast table (2)
	20-5	Quick Start Guide	See Contrast table (2)
	20-6	Installation Manual	See Contrast table (2)
*	20-7	Service Network	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X4810BT/XNUC, DEH-X4800BT/XNUC, DEH-4800BT/XNEW5, DEH-X4890BT/XNID, DEH-X4850BT/XNGS and DEH-X4850BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X4810BT/XNUC	DEH-X4800BT/XNUC	DEH-4800BT/XNEW5
	1	Accessory Assy	QEA3337	QEA3337	Not used
	3	Screw	CBA2384	CBA2384	Not used
	4	Screw	CBA2383	CBA2383	Not used
	5	Screw	BPZ20P060FTC	BPZ20P060FTC	Not used
	9	Cord Assy	CDP1480	CDP1480	QDP3071
	10	Card Remote Control Unit	QXE1044	QXE1044	Not used
	11	Contain Box	QHL3809	QHL3784	QHL3783
	12	Unit Box	QHG3809	QHG3784	QHG3783
	13	Protector	CHP4103	Not used	Not used
	14	Protector	CHP4104	Not used	Not used
	15	Polyethylene Bag	CEG1173	CEG1173	QEG3001
	16	Protector	Not used	QHP3046	QHP3046
	17	Case Assy	Not used	Not used	QXA3129
	18	IM CD ROM	Not used	Not used	QPJ3032
	19	Label	Not used	Not used	Not used
	20-1	Owner's Manual	QRD3311	QRD3311	QRB3516
*	20-2	Warranty Card	QRY3001	QRY3001	CRY1376
*	20-3	Caution Card	Not used	Not used	CRP1438
*	20-4	Caution Card	Not used	Not used	CRP1441
	20-5	Quick Start Guide	Not used	Not used	QRD3309
	20-6	Installation Manual	Not used	Not used	QRD3310
*	20-7	Service Network	Not used	Not used	Not used

Mark	No.	Description	DEH-X4890BT/XNID	DEH-X4850BT/XNGS	DEH-X4850BT/XNCS
	1	Accessory Assy	QEA3338	QEA3338	QEA3338
	3	Screw	CBA2384	CBA2384	CBA2384
	4	Screw	Not used	Not used	Not used
	5	Screw	Not used	Not used	Not used
	9	Cord Assy	CDP1480	CDP1480	CDP1480
	10	Card Remote Control Unit	QXE1044	QXE1044	QXE1044
	11	Contain Box	QHL3787	QHL3785	QHL3786
	12	Unit Box	QHG3787	QHG3785	QHG3786
	13	Protector	Not used	Not used	Not used
	14	Protector	Not used	Not used	Not used
	15	Polyethylene Bag	QEG3001	QEG3001	QEG3001
	16	Protector	QHP3046	QHP3046	QHP3046
	17	Case Assy	QXA3129	QXA3129	QXA3129
	18	IM CD ROM	Not used	Not used	Not used
	19	Label	QAN3399	Not used	Not used
	20-1	Owner's Manual	QRB3524	QRD3313	QRD3312
*	20-2	Warranty Card	CRY1304	Not used	Not used
*	20-3	Caution Card	Not used	Not used	Not used
*	20-4	Caution Card	Not used	Not used	Not used
	20-5	Quick Start Guide	Not used	Not used	Not used
	20-6	Installation Manual	Not used	Not used	Not used
*	20-7	Service Network	CRY1305	Not used	Not used

Owner's Manual,Installation Manual

Part No.	Language
QRD3309	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3310	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3311	English, French, Spanish(Espanol)
QRD3312	English, Spanish(Espanol), Portuguese(B)
QRD3313	English, Traditional Chinese, Arabic, Persian
QRB3516	Russian
QRB3524	English

CONTENTS OF CD-ROM (Operation Manual), QPJ3032

Part No.	Language
* QRB3510	English
* QRB3511	French
* QRB3512	Italian
* QRB3513	Spanish(Espanol)
* QRB3514	German
* QRB3515	Dutch
* QRB3516	Russian
* QRB3517	Swedish
* QRB3518	Norwegian
* QRB3519	Finnish
* QRB3520	Danish
* QRB3521	Portuguese
* QRB3522	Greek
* QRB3523	Turkish

All operation manuals are supplied in PDF files by the CD-ROM.
Regarding the availability of paper manual, contact Pioneer Service representative in your region.

9.2 EXTERIOR

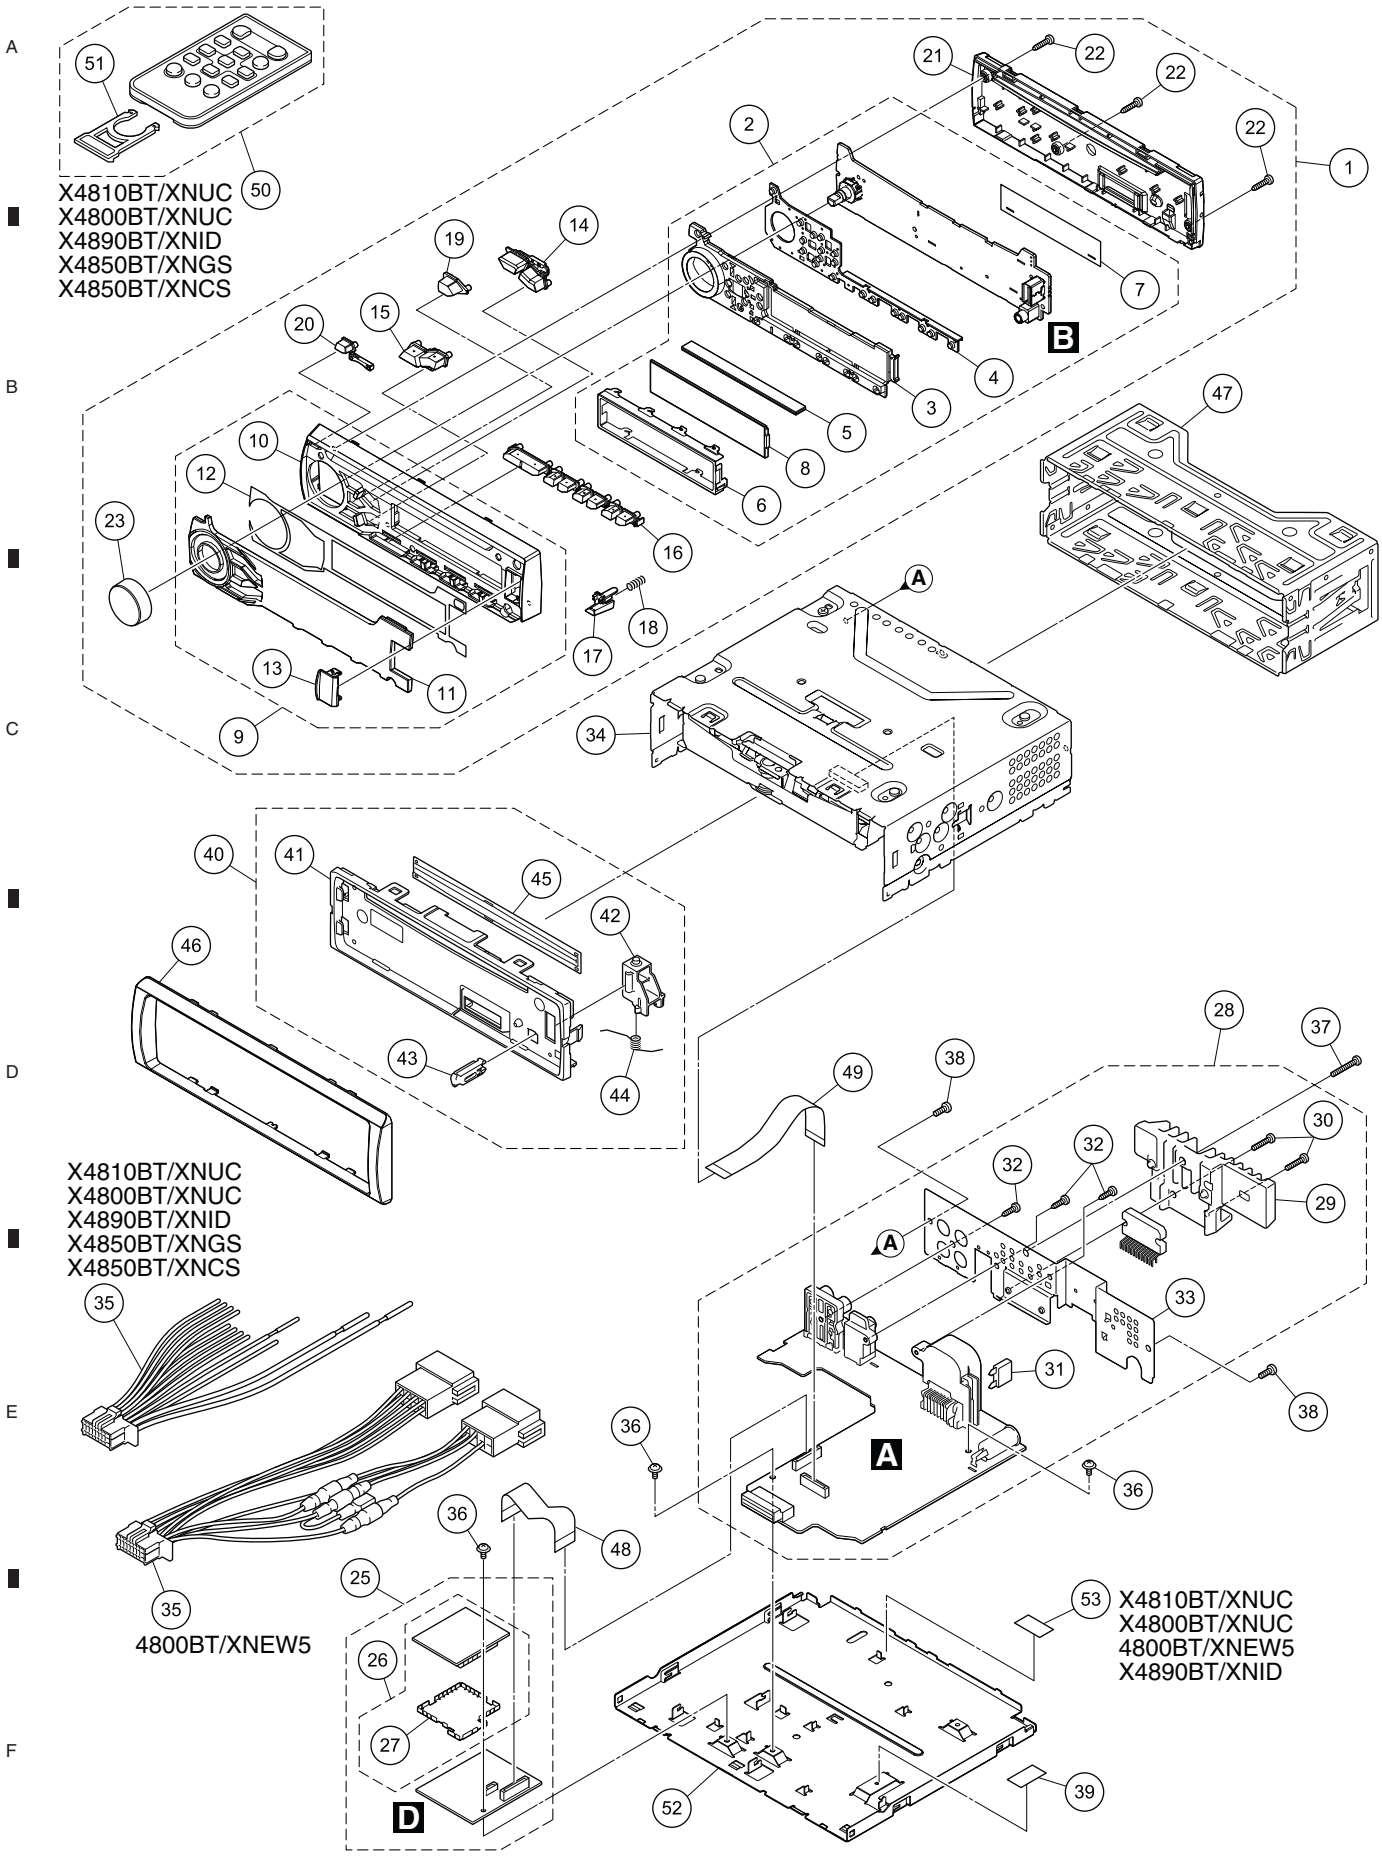
X4810BT/XNUC
X4800BT/XNUC
X4890BT/XNID
X4850BT/XNGS
X4850BT/XNCS
X4810BT/XNUC
X4800BT/XNUC
X4890BT/XNID
X4850BT/XNGS
X4850BT/XNCS
4800BT/XNEW5
X4810BT/XNUC
X4800BT/XNUC
4800BT/XNEW5
X4890BT/XNID

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Detach Grille Assy	See Contrast table (2)
	2	Keyboard Unit	See Contrast table (2)
	3	Lighting Conductor	QNV3114
	4	Contact Rubber	QNV3115
	5	Rubber Connector	QNV3071
	6	Holder	QNC3108
	7	Sheet	QNM3138
	8	LCD (V1801)	CAW2056
	9	Grille Unit	See Contrast table (2)
	10	Grille	QNS3888
	11	Plate	QNS3900
	12	Double Side Tape	QNM3132
	13	Door	QAT3018
	14	“Button (SRC, LIST)”	QAC3208
	15	“Button (DISP, BACK)”	QAC3209
	16	“Button (TRACK, 1-6)”	QAC3210
	17	Button (DETACH)	QAC3211
	18	Spring	CBH2210
	19	Button (HOT KEY)	QAC3212
	20	Button (EJECT)	QAC3207
	21	Cover	QNS3943
	22	Screw	BPZ20P100FTC
	23	Knob Unit	QXA4414
	24	.....	
	25	BT Unit	QWM4142
	26	BT Module	CWX4770
	27	Shield Case	YNC5123
	28	Tuner Amp Unit	See Contrast table (2)
	29	Heat Sink	See Contrast table (2)
	30	Screw	BSZ26P120FTC
⚠	31	Fuse (10 A)	YEK5001
	32	Screw	BPZ26P080FTC
	33	Holder	See Contrast table (2)
	34	CD Mechanism Module (11.6VA_T07)	CXK5808
	35	Cord Assy	See Contrast table (2)
	36	Screw	ASZ26P050FTC
	37	Screw	BSZ26P120FTC
	38	Screw	BSZ26P060FTC
	39	Sheet	QNM3135
	40	Panel Assy	See Contrast table (2)
	41	Panel	QNS3126
	42	Arm	QNV3025
	43	Button	QNV3026
	44	Spring	QBH3001
	45	Cover	QNM3029
	46	Panel	QNS3568
	47	Holder	QNC3020
	48	FFC	QDE3028
	49	FFC	QDE3029
	50	Card Remote Control Unit	See Contrast table (2)
	51	Cover	See Contrast table (2)
	52	Case	QNB3032
	53	Sheet	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X4810BT/XNUC, DEH-X4800BT/XNUC, DEH-4800BT/XNEW5, DEH-X4890BT/XNID, DEH-X4850BT/XNGS and DEH-X4850BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X4810BT/XNUC	DEH-X4800BT/XNUC	DEH-4800BT/XNEW5
	1	Detach Grille Assy	QXA4495	QXA4481	QXA4480
	2	Keyboard Unit	QWM4120	QWM4120	QWM4119
	9	Grille Unit	QXA4435	QXA4421	QXA4420
	28	Tuner Amp Unit	QWM4169	QWM4048	QWM4047
	29	Heat Sink	QNR3010	QNR3010	QNR3010
	33	Holder	QNC3053	QNC3053	QNC3054
	35	Cord Assy	CDP1480	CDP1480	QDP3071
	40	Panel Assy	*CXE3802	QXA3261	QXA3261
	50	Card Remote Control Unit	QXE1044	QXE1044	Not used
	51	Cover	CNS7068	CNS7068	Not used
	53	Sheet	QNM3130	QNM3130	QNM3130

Mark	No.	Description	DEH-X4890BT/XNID	DEH-X4850BT/XNGS	DEH-X4850BT/XNCS
	1	Detach Grille Assy	QXA4484	QXA4482	QXA4482
	2	Keyboard Unit	QWM4120	QWM4120	QWM4120
	9	Grille Unit	QXA4424	QXA4422	QXA4422
	28	Tuner Amp Unit	QWM4051	QWM4050	QWM4049
	29	Heat Sink	QNR3002	QNR3002	QNR3010
	33	Holder	QNC3053	QNC3053	QNC3053
	35	Cord Assy	CDP1480	CDP1480	CDP1480
	40	Panel Assy	QXA3261	QXA3261	QXA3261
	50	Card Remote Control Unit	QXE1044	QXE1044	QXE1044
	51	Cover	CNS7068	CNS7068	CNS7068
	53	Sheet	QNM3130	Not used	Not used

9.3 CD MECHANISM MODULE

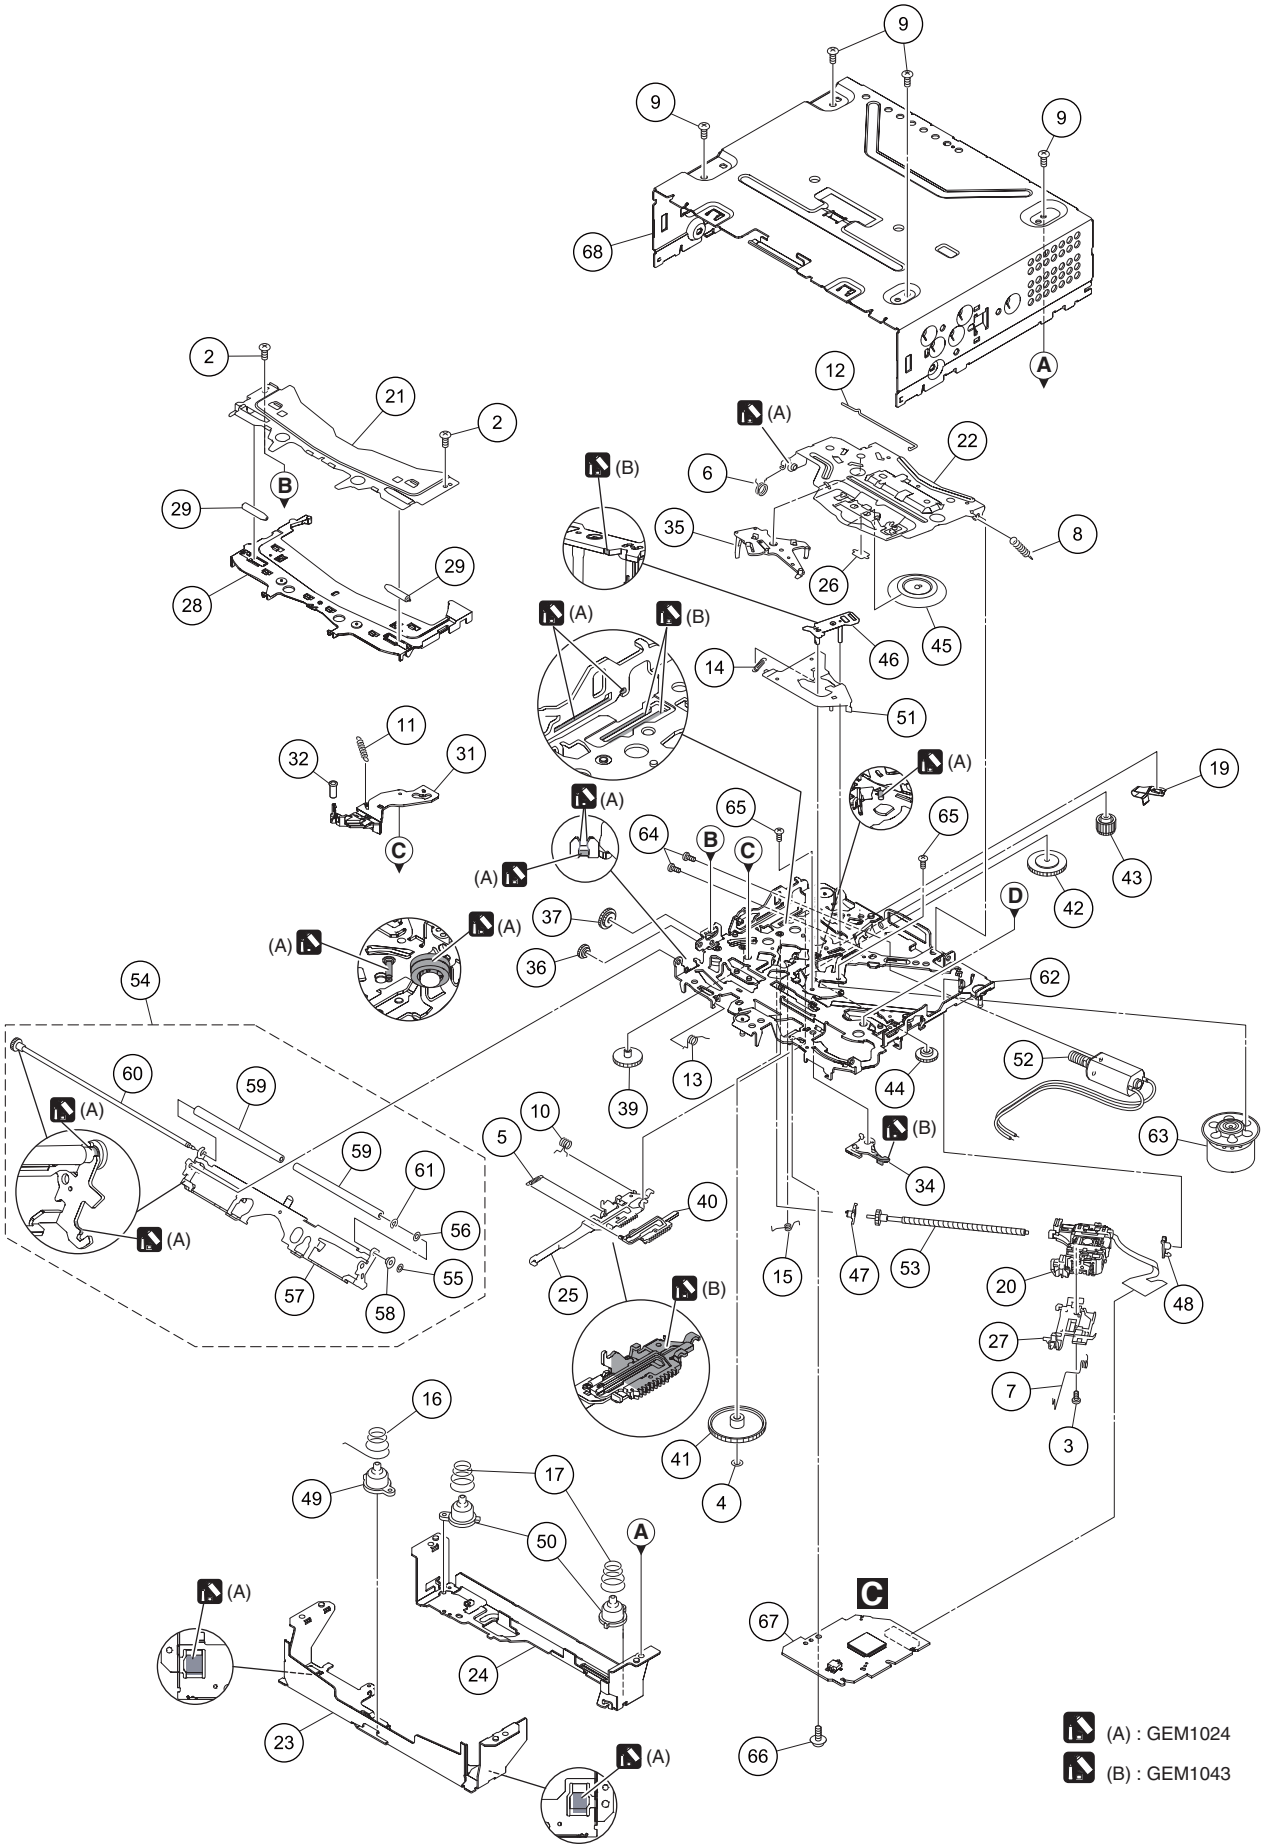

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	.....	
2	Screw	BSZ20P040FTC
3	Screw(M2 x 4)	CBA1835
4	Washer	CBF1038
5	Spring	CBH3010
6	Spring	CBH2855
7	Spring	CBH2856
8	Spring	CBH2860
9	Screw	BSZ26P060FTC
10	Spring	CBH3011
11	Coil Spring	CBH3095
12	Spring	CBH3014
13	Spring	CBH3015
14	Spring	CBH3016
15	Spring	CBH3017
16	Spring	CBH3086
17	Spring	CBH3019
18	.....	
19	Leaf Spring	CBL1824
20	PU Unit(P11)(Service)	CXX4754
21	Bracket	CND4553
22	Arm	CND6406
23	Bracket	CND6127
24	Bracket	CND5710
25	Lever	CND5398
26	Sheet	CNN3678
27	Rack	CNV8342
28	Guide	CNW2240
29	Roller	CNW1172
30	.....	
31	Arm	CNW2241
32	Roller	CNW1175
33	.....	
34	Arm	CNW1177
35	Arm	CNW1178
36	Gear	CNW1180
37	Gear	CNW1181
38	.....	
39	Gear	CNW1183
40	Rack	CNW1184
41	Gear	CNW1185
42	Gear	CNW1186
43	Gear	CNW1187
44	Gear	CNW2287
45	Clamper	CNW1190
46	Arm	CNW1192
47	Holder	CNW1193
48	Holder	CNW1194
49	Damper	CNW1197
50	Damper	CNW1198
51	Arm	CNW1726
52	Motor Unit(M2)(LOAD/CRG)	CXC4026
53	Screw Unit	CXC8894
54	Arm Assy	CXE6232
55	Washer	CBF1037
56	Washer	CBF1038
57	Arm	CND6242
58	Collar	CNW2444
59	Roller	CNW2500
60	Gear Unit	CXE6225
61	Washer	YE15FTC
62	Chassis Unit	CXE4528
63	Motor Unit(M1)(SPDL)	CXE2273
64	Screw	JFZ20P025FTC
65	Screw	JGZ17P022FTC
66	Screw	EBA1028
67	CD Core Unit (S11.6VA)	CWX4269
68	Chassis	CNA3373

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:DEH-X4810BT/XNUC
B:DEH-X4800BT/XNUC
C:DEH-4800BT/XNEW5
D:DEH-X4890BT/XNID
E:DEH-X4850BT/XNGS
F:DEH-X4850BT/XNCS

Unit Number : QWM4169(A)
Unit Number : QWM4048(B)
Unit Number : QWM4047(C)
Unit Number : QWM4051(D)
Unit Number : QWM4050(E)
Unit Number : QWM4049(F)
Unit Name : Tuner Amp Unit
Unit Number : QWM4120(A,B,D,E,F)
Unit Number : QWM4119(C)
Unit Name : Keyboard Unit
Unit Number : CWX4269
Unit Name : CD Core Unit(S11.6VA)
Unit Number : QWM4142
Unit Name : BT Unit

A

Unit Number : QWM4169(A)
Unit Number : QWM4048(B)
Unit Number : QWM4047(C)
Unit Number : QWM4051(D)
Unit Number : QWM4050(E)
Unit Number : QWM4049(F)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 151	(A,152,46) PO Supply IC	BD49101EFS
IC 351	(A,112,77) Flash Blank UC IC	R5S726A0D216FP
IC 361	(A,133,75) IC	S-80827CNMC-B8M
IC 371	(A,116,94) FlashRom Unit	QWW3786
IC 501	(A,95,85) IC	337S3959
IC 551	(A,103,107) E-VOL SYS LSI	PM9013A
IC 601	(A,147,86) Tuner IC	TEF6686HN
IC 801	(A,107,16) L-MOS And Gate	TC7SET08FUS1
IC 851	(A,80,142) Power AMP IC(A,B,C,D)	PAL013A
	(A,80,142) Power AMP IC(E,F)	PA2032A
Q 111	(A,98,122) Bipolar TR	LSCR523UB
Q 151	(A,144,33) FET	SSM3J332R
Q 301	(A,105,24) Transistor	2SAR502UB
Q 302	(A,98,33) Transistor	2SCR514PGZE
Q 303	(A,101,28) Transistor	LTC143EUB
Q 501	(A,96,93) Bipolar TR	LSAR523UB
Q 751	(A,16,129) Transistor(A,B,D,E,F)	EMH53
Q 752	(A,24,130) Transistor	EMH53
Q 781	(A,95,96) Bipolar TR(D,E)	EMD53
Q 901	(A,88,127) Transistor	EMD52
D 101	(A,143,127) Diode	D1F60-5053
D 102	(A,139,127) Diode	D1F60-5053
D 111	(A,95,125) Diode(A,B,D,E,F)	DZ2J068M0
	(A,95,125) Diode(C)	DZ2J075M0
D 152	(A,153,70) Diode	CRG03
D 153	(A,144,50) Diode	RB162M-40
D 156	(A,147,32) Diode	RB056L-40
D 157	(A,146,63) Diode	CMS30I30A
D 158	(A,162,63) Diode	CRG03
D 252	(A,102,39) Diode	CRG03
D 301	(A,108,25) Diode	DZ2J100M0
D 351	(A,132,82) Diode	RB751SM-40
D 352	(A,134,70) Diode	RB751SM-40
D 802	(A,94,17) Diode	DZ2S068C
D 803	(A,130,14) Diode	DZ2S068C
D 804	(A,121,14) Diode	DZ2S068C
D 805	(A,122,14) Diode	DZ2S068C

Circuit Symbol and No.		Part No.
D 806	(A,119,14) Diode	DZ2S068C
D 807	(A,116,14) Diode	DZ2S068C
D 911	(A,104,127) Diode	CRG03
D 912	(A,106,127) Diode(A,B,C,D)	CRG03
L 101	(A,114,141) Choke Coil	CTH1620
L 151	(A,136,47) SMD SPL Inductor	CTH1521
L 152	(A,152,27) SMD SPL Inductor	CTH1584
L 552	(A,96,102) Inductor	CTF1793
L 602	(A,143,106) Inductor(A,B,C,F)	CTF1389
L 603	(A,140,96) Chip Coil(D,E)	LCTAWR27J2520
L 604	(A,141,92) Chip Coil(D,E)	LCTAW3R3J2520
L 605	(A,139,92) Inductor(A,B,C,F)	LCYC150K1608
L 606	(A,147,78) Inductor(A,B,D,E)	CTF1786
L 610	(A,152,104) Inductor	LCMAR27J1608
L 611	(A,143,104) Inductor(D,E)	ATL7033
L 613	(A,159,81) Inductor(D,E)	CTF1786
L 701	(A,125,26) Inductor	CTF1389
L 801	(A,117,14) Inductor	CTF1713
T 601	(A,148,97) Variable Coil	CTC1215
X 351	(A,129,76) Crystal Resonator 12.0 MHz	CSS1847
X 353	(A,125,92) Resonator 16.93 MHz	CSS1794
X 601	(A,157,86) Crystal Resonator	CSS1867
P 601	(A,157,109) Surge Absorber	IMSA-6803-01Y900
⚠P753	(A,9,131) Fuse 3.0 A	CEK1404
VA801	(A,107,13) SMD Varistor	MLV0402ES012V0010N
VA802	(A,103,14) SMD Varistor	MLV0402ES012V0010N
CN251	(A,95,49) Connector	VKN1192
CN701	(A,116,32) Connector	VKN1192
CN801	(A,111,4) Connector	CKS6452
JA101	(A,115,141) Plug	CKM1624
JA601	(A,160,129) Antenna Jack	YKS5041
JA751	(A,21,141) Jack(A,B,D,E,F)	CKB1109
	(A,21,141) Jack(C)	CKB1115
JA781	(A,44,141) Jack	CKN1103
⚠	Fuse 10 A	YEK5001

RESISTORS

R 111	(A,95,122)	RS1/16SS223J
R 112	(A,96,122)	RS1/16SS473J
R 113	(A,97,125) (A,B,D,E,F)	RS1/16SS682J
	(A,97,125) (C)	RS1/16SS333J
R 114	(A,101,123) (A,B,D,E,F)	RS1/4SA102J
	(A,101,123) (C)	RS1/4SA122J
R 151	(A,146,56)	RS1/16SS8202D
R 156	(A,138,41)	RS1/16SS102J
R 158	(A,137,41)	RS1/16SS2403D
R 159	(A,139,39)	RS1/16SS7502D
R 160	(A,143,46)	RS1/16SS753J
R 161	(A,145,43)	RS1/16SS4703D
R 162	(A,143,43)	RS1/16SS4303D
R 163	(A,136,26)	RS1/16SS3903D
R 164	(A,136,24)	RS1/16SS6202D
R 165	(A,141,32) 30 ohm	CCN1401
R 167	(A,159,56)	RS1/16SS102J
R 168	(A,160,54)	RS1/16SS102J
R 169	(A,160,56)	RS1/16SS102J
R 172	(A,160,49)	RS1/16SS393J
R 173	(A,164,50)	RS1/16SS4703D
R 174	(A,163,48)	RS1/16SS1503D
R 175	(A,108,44)	RS1/16SS393J
R 176	(A,106,44)	RS1/16SS103J
R 177	(A,156,35)	RS1/16SS273J
R 178	(A,161,36)	RS1/16SS1003D
R 179	(A,162,38)	RS1/16SS7503D
R 180	(A,163,38)	RS1/16SS1603D
R 182	(A,161,40)	RS1/16SS820J
R 184	(A,161,42)	RS1/16SS682J
R 185	(A,159,34)	RS1/16SS102J
R 187	(A,157,33)	RS1/16SS1203D
R 188	(A,155,33)	RS1/16SS1802D
R 189	(A,145,57)	RS1/16SS6802D
R 190	(A,143,57)	RS1/16SS3903D
R 251	(A,100,55)	RS1/16SS101J
R 252	(A,100,54)	RS1/16SS101J
R 253	(A,100,52)	RS1/16SS101J
R 256	(A,92,62)	RS1/16SS222J
R 301	(A,107,19)	RS1/10SR473J
R 303	(A,102,25)	RS1/16SS103J
R 304	(A,104,26)	RS1/16SS272J
R 305	(A,99,27)	RS1/16SS473J
R 308	(A,113,26)	RS1/10SR102J
R 354	(A,111,62)	RS1/16SS473J
R 355	(A,133,63)	RS1/16SS103J
R 357	(A,128,69)	RS1/16SS473J
R 359	(A,115,63)	RS1/16SS0R0J
R 360	(A,116,66)	RS1/16SS0R0J
R 364	(A,129,70)	RS1/16SS104J
R 368	(A,123,69)	RS1/16SS102J
R 369	(A,124,64)	RS1/16SS473J
R 370	(A,124,66)	RS1/16SS473J
R 371	(A,127,68)	RS1/16SS473J
R 373	(A,124,76)	RS1/16SS152J
R 374	(A,125,62)	RS1/16SS153J
R 375	(A,125,61)	RS1/16SS153J
R 376	(A,124,79)	RS1/16SS473J
R 377	(A,135,72)	RS1/16SS103J
R 378	(A,127,82) (B,C,D)	RS1/16SS473J
	(A,127,82) (E)	RS1/16SS103J
R 379	(A,128,82) (A,E,F)	RS1/16SS473J
	(A,128,82) (D)	RS1/16SS103J
R 380	(A,133,82)	RS1/16SS103J
R 383	(A,122,89)	RS1/16SS222J
R 384	(A,127,87)	RS1/16SS473J
R 385	(A,132,85)	RAB4CQ473J
R 386	(A,122,93)	RS1/16SS473J
R 387	(A,122,96)	RS1/16SS473J
R 388	(A,111,94)	RS1/16SS473J
R 389	(A,112,91)	RS1/16SS473J
R 390	(A,111,97)	RS1/16SS473J
R 391	(A,115,90)	RS1/16SS221J
R 392	(A,114,90)	RS1/16SS221J
R 393	(A,114,88)	RS1/16SS221J
R 394	(A,113,91)	RS1/16SS221J
R 395	(A,111,92)	RS1/16SS221J
R 396	(A,112,89)	RS1/16SS221J
R 397	(A,110,92)	RS1/16SS473J
R 398	(A,107,91)	RS1/16SS473J
R 399	(A,109,90)	RS1/16SS101J
R 400	(A,94,65)	RS1/16SS473J
R 401	(A,105,89)	RS1/16SS102J
R 402	(A,106,92)	RS1/16SS473J

Circuit Symbol and No.		Part No.
R 403	(A,101,92)	RS1/16SS473J
R 404	(A,103,88)	RS1/16SS473J
R 409	(A,100,82)	RS1/16SS472J
R 411	(A,104,60)	RS1/16SS472J
R 412	(A,96,80)	RS1/16SS104J
R 413	(A,100,79)	RS1/16SS101J
R 414	(A,97,78)	RS1/16SS101J
R 415	(A,101,78)	RS1/16SS101J
R 416	(A,97,76)	RS1/16SS102J
R 418	(A,97,75)	RS1/16SS102J
R 419	(A,98,74)	RS1/16SS102J
R 420	(A,96,70)	RS1/16SS473J
R 421	(A,100,71)	RS1/16SS473J
R 423	(A,98,69)	RS1/16SS222J
R 424	(A,100,69)	RS1/16SS222J
R 425	(A,102,63)	RS1/16SS103J
R 428	(A,108,95)	RS1/16SS0R0J
R 501	(A,94,90)	RS1/16SS473J
R 502	(A,93,88)	RS1/16SS222J
R 503	(A,94,88)	RS1/16SS222J
R 504	(A,97,88)	RS1/16SS272J
R 505	(A,98,88)	RS1/16SS472J
R 506	(A,99,88)	RS1/16SS472J
R 507	(A,98,84)	RS1/16SS101J
R 508	(A,98,83)	RS1/16SS101J
R 603	(A,137,92) (A,B,C,F)	RS1/16SS391J
	(A,137,92) (D,E)	RS1/16SS101J
R 604	(A,146,109)	RS1/16SS105J
R 605	(A,151,109)	RS1/16SS105J
R 606	(A,149,81)	RS1/16SS101J
R 607	(A,150,81)	RS1/16SS101J
R 608	(A,153,82)	RS1/16SS103J
R 610	(A,152,82)	RS1/16SS103J
R 622	(A,148,78) (A,B,C,F)	RS1/16SS0R0J
R 637	(A,151,78)	RS1/16SS472J
R 638	(A,150,78)	RS1/16SS472J
R 652	(A,163,86)	RS1/16SS0R0J
R 653	(A,146,74) (A,B)	RS1/10SR0R0J
R 655	(A,164,89)	RS1/16SS0R0J
R 656	(A,144,75) (D,E)	RS1/16SS0R0J
R 660	(A,159,82) (A,B,C,F)	RS1/16SS0R0J
R 701	(A,110,38)	RS1/16SS473J
R 702	(A,116,38)	RS1/16SS104J
R 703	(A,121,28)	RAB4CQ472J
R 704	(A,112,40)	RS1/16SS104J
R 706	(A,110,36)	RS1/16SS221J
R 707	(A,111,38)	RS1/16SS221J
R 708	(A,112,38)	RS1/16SS101J
R 709	(A,113,38)	RS1/16SS221J
R 710	(A,114,38)	RS1/16SS101J
R 711	(A,116,39)	RS1/16SS102J
R 715	(A,119,36)	RS1/16SS331J
R 716	(A,120,36)	RS1/16SS331J
R 717	(A,121,36)	RS1/16SS331J
R 718	(A,124,36)	RS1/16SS221J
R 719	(A,123,36)	RS1/16SS104J
R 751	(A,19,123) (A,B,D,E,F)	RS1/16SS821J
R 752	(A,14,123) (A,B,D,E,F)	RS1/16SS821J
R 753	(A,17,124) (A,B,D,E,F)	RS1/16SS223J
R 754	(A,14,125) (A,B,D,E,F)	RS1/16SS223J

Circuit Symbol and No.		Part No.
R 755	(A,27,126)	RS1/16SS821J
R 756	(A,21,125)	RS1/16SS821J
R 757	(A,26,129)	RS1/16SS223J
R 758	(A,22,127)	RS1/16SS223J
R 764	(A,21,130)	RS1/16SS0R0J
R 765	(A,19,126) (A,B,D,E,F)	RS1/16SS0R0J
R 789	(A,51,132)	RS1/16SS0R0J
R 795	(A,93,94) (D,E)	RS1/16SS471J
R 796	(A,60,137)	RS1/16SS102J
R 797	(A,60,134)	RS1/16SS102J
R 799	(A,61,137) (D,E)	RS1/16SS471J
R 801	(A,131,7)	RS1/10SR222J
R 803	(A,122,18)	RS1/16SS223J
R 804	(A,119,18)	RS1/16SS223J
R 805	(A,122,20)	RS1/10SR101J
R 806	(A,118,20)	RS1/10SR101J
R 807	(A,120,20)	RS1/10SR101J
R 808	(A,130,9)	RS1/10SR222J
R 809	(A,117,19)	RS1/10SR220J
R 810	(A,115,19)	RS1/10SR220J
R 812	(A,114,19)	RS1/10SR222J
R 813	(A,109,14)	RS1/10SR222J
R 814	(A,103,18)	RS1/10SR222J
R 815	(A,102,18)	RS1/16SS822J
R 816	(A,98,19)	RS1/10SR222J
R 817	(A,97,19)	RS1/10SR222J
R 841	(A,95,20)	RS1/16SS472J
R 859	(A,91,125)	RS1/16SS103J
R 901	(A,92,127)	RS1/16SS103J
R 902	(A,92,129)	RS1/16SS221J
R 903	(A,91,128)	RS1/16SS223J

CAPACITORS

C 101	(A,135,124) 2 200 uF/16 V	CCH1405
C 111	(A,98,125)	CKSRYB104K50
C 151	(A,146,69)	XCEVW221M16
C 152	(A,142,63) 1 uF	CCG1396
C 153	(A,141,65) 10 uF	CCG1236
C 154	(A,136,53)	CKSRYB105K10
C 156	(A,160,70)	XCEAT102M16
C 157	(A,155,64) 10 uF	CCG1236
C 160	(A,141,54) 10 uF	CCG1236
C 162	(A,139,41)	CCSSCH391J50
C 163	(A,132,38)	CEVQW221M6R3
C 164	(A,145,46)	CCSSCH471J50
C 165	(A,143,45)	CCSSCH221J50
C 166	(A,138,37) 10 uF	CCG1192
C 167	(A,132,29) 10 uF	CCG1192
C 169	(A,134,24) 10 uF	CCG1192
C 171	(A,136,31) 10 uF	CCG1236
C 172	(A,138,31) 10 uF	CCG1236
C 173	(A,164,48)	CKSRYB105K10
C 174	(A,161,43)	CKSRYB105K10
C 177	(A,158,80) 10 uF	CCG1192
C 178	(A,157,36)	CCSSCH391J50
C 179	(A,157,35)	CKSSYB102K50
C 180	(A,163,34) 10 uF	CCG1192
C 181	(A,161,28)	CEVQW221M6R3
C 183	(A,162,41) 4.7 uF	CCG1212

Circuit Symbol and No.		Part No.
C 185	(A,143,24)	XCEVW221M10
C 186	(A,157,34)	CCSSCH561J50
C 187	(A,130,22)	CCSRCH101J50
C 188	(A,135,17) (A,B)	CKSRYB105K10
	(A,135,17) (C,D,E,F)	CKSRYB102K50
C 192	(A,148,20) 22 uF	CCG1254
C 194	(A,146,16) (C,D,E,F)	CKSRYB103K50
C 252	(A,100,53)	CCSSCH470J50
C 253	(A,100,42)	CKSRYB104K16
C 255	(A,92,38) 10 uF	CCG1192
C 302	(A,110,18)	CCSRCH101J50
C 303	(A,106,26)	CKSSYB104K16
C 351	(A,107,66)	CKSSYB104K10
C 352	(A,111,66)	CKSSYB104K10
C 353	(A,113,66)	CKSSYB104K10
C 354	(A,115,66)	CKSSYB104K10
C 357	(A,118,66)	CKSSYB104K10
C 359	(A,125,72) 1 uF	DCH1246
C 361	(A,125,70)	CKSSYB104K10
C 362	(A,123,74) (A,B,C,F)	CKSSYB104K10
	(A,123,74) (D,E)	CCSSCH101J50
C 363	(A,123,75) (A,B,C,F)	CKSSYB104K10
	(A,123,75) (D,E)	CCSSCH102J50
C 364	(A,128,78) (D,E)	CCSSCH120J50
C 365	(A,130,79) (A,B,C,F)	CCSSCH120J50
C 366	(A,129,73)	CCSSCH120J50
C 368	(A,123,78)	CKSSYB102K50
C 369	(A,124,83)	CKSSYB104K10
C 370	(A,125,83)	CKSSYB104K10
C 375	(A,125,95)	CCSSCH120J50
C 376	(A,125,89)	CCSSCH120J50
C 377	(A,125,97)	CKSRYB105K16
C 379	(A,122,94)	CCSSCJ3R0C50
C 381	(A,116,88)	CKSSYB104K10
C 383	(A,110,88)	CKSSYB104K10
C 384	(A,107,93)	CCSSCH220J50
C 385	(A,108,88)	CKSSYB104K10
C 386	(A,107,88)	CKSSYB104K10
C 387	(A,106,90)	CKSSYB104K10
C 388	(A,98,89)	CCSRCH330J50
C 389	(A,101,80)	CKSSYB104K10
C 390	(A,107,51)	CCSSCH100D50
C 391	(A,98,80)	CCSSCH220J50
C 392	(A,97,79)	CCSSCH220J50
C 393	(A,99,77)	CCSSCH220J50
C 394	(A,101,75)	CKSSYB104K10
C 395	(A,101,73)	CKSSYB103K16
C 398	(A,130,95) 1 uF	DCH1246
C 399	(A,121,99)	CKSRYB104K16
C 400	(A,101,83)	CCSSCH100D50
C 501	(A,94,89)	CKSSYB104K10
C 502	(A,95,88)	CKSSYB104K10
C 551	(A,103,117)	CKSRYB105K10
C 553	(A,95,116)	CKSRYB105K10
C 554	(A,94,108) 1 uF	DCH1246
C 555	(A,96,116)	CKSRYB105K10
C 560	(A,109,113)	CKSRYB105K10
C 561	(A,110,115)	CKSRYB105K10
C 562	(A,106,117)	CKSRYB105K10
C 563	(A,114,103) 10 uF	CCG1192
C 564	(A,117,109)	XCEVW470M16

Circuit Symbol and No.		Part No.
C 565	(A,117,103)	CKSSYB104K10
C 568	(A,97,108)	CKSSYB104K10
C 569	(A,96,107)	CKSSYB104K10
C 570	(A,95,104) 10 uF	CCG1192
C 572	(A,93,109) 1 uF	DCH1246
C 573	(A,112,112) 1 uF	DCH1246
C 574	(A,111,112) 1 uF(D,E)	DCH1246
C 575	(A,95,101) 10 uF	CCG1192
C 576	(A,97,100)	CKSSYB104K10
C 577	(A,108,99) 10 uF	CCG1192
C 583	(A,110,109) 10 uF	CCG1192
C 584	(A,110,106)	CKSSYB104K10
C 585	(A,110,105)	CKSSYB104K10
C 586	(A,110,103)	CKSSYB104K10
C 587	(A,98,105)	CKSSYB102K50
C 589	(A,93,102) 1 uF	DCH1246
C 590	(A,112,104)	CKSRYB105K10
C 602	(A,141,100) (D,E)	CCSSCK2R0C50
C 603	(A,141,101) (D,E)	CCSSCK1R0C50
C 604	(A,142,98) (D,E)	CCSSCK1R0C50
C 605	(A,143,99) (D,E)	CCSSCH120J50
C 607	(A,142,89)	CKSSYB102K50
C 610	(A,142,86)	CKSSYB152K50
C 611	(A,148,105)	CCSSCH331J50
C 612	(A,149,105)	CCSSCH220J50
C 613	(A,156,104)	CCSSCH100D50
C 615	(A,145,91)	CKSSYB104K10
C 617	(A,150,93)	CKSSYB102K50
C 618	(A,150,92)	CKSSYB224K6R3
C 620	(A,154,92)	CKSSYB104K10
C 621	(A,152,90)	CCSSCH390J50
C 624	(A,161,82) (A,B,C,F)	CKSRYB105K10
C 625	(A,164,82) (A,B,C,F)	CKSRYB105K10
C 626	(A,146,80) 10 uF	CCG1192
C 630	(A,146,77) 1 uF	DCH1246
C 631	(A,142,82)	CKSSYB102K50
C 632	(A,152,107)	CKSRYB104K16
C 635	(A,143,78) (C,D,E,F)	CCSSCH101J50
C 636	(A,146,76) (A,B)	CKSSYB102K50
C 637	(A,143,75) (A,B,C,F)	CKSSYB104K10
C 639	(A,149,108)	CCSSCH471J50
C 701	(A,113,40)	CKSSYB103K16
C 702	(A,127,30)	CKSSYB103K16
C 704	(A,122,39)	CCSSCH100D50
C 705	(A,120,39)	CCSSCH100D50
C 706	(A,118,40)	CCSSCH100D50
C 709	(A,107,43)	CKSRYB104K16
C 751	(A,22,123) 10 uF(A,B,D,E,F)	CCG1192
C 752	(A,17,121) 10 uF(A,B,D,E,F)	CCG1192
C 753	(A,17,125) (A,B,D,E,F)	CCSSCH101J50
C 754	(A,14,127) (A,B,D,E,F)	CCSSCH101J50
C 755	(A,30,126) 10 uF	DCH1201
C 756	(A,24,125) 10 uF	CCG1192
C 757	(A,26,130)	CCSSCH101J50
C 758	(A,22,128)	CCSSCH101J50
C 760	(A,38,131)	CKSSYB104K10
C 761	(A,9,132)	CKSSYB103K16
C 785	(A,40,129)	CKSRYB102K50
C 786	(A,54,133)	CKSRYB102K50
C 787	(A,54,137)	CKSRYB104K16

Circuit Symbol and No.		Part No.
C 788	(A,37,132)	CKSRYB104K16
C 801	(A,126,6)	CCSRCH102J50
C 803	(A,91,18)	CKSRYB105K10
C 804	(A,127,14)	CKSRYB105K10
C 806	(A,126,9)	CKSRYB104K16
C 807	(A,124,14)	CKSRYB105K10
C 808	(A,110,13)	CKSRYB104K16
C 809	(A,98,16)	CCSRCH221J50
C 810	(A,98,13)	CCSRCH221J50
C 811	(A,105,18)	CKSSYB104K10
C 812	(A,114,14)	CKSRYB104K16
C 851	(A,72,129)	CKSRYB474K10
C 853	(A,82,129)	CKSRYB474K10
C 855	(A,74,129)	CKSRYB474K10
C 857	(A,80,129)	CKSRYB474K10
C 863	(A,86,130) 2.2 uF	CCG1205
C 864	(A,140,121)	CKSRYB104K50
C 868	(A,69,130) 10 uF/16 V	DCH1263
C 901	(A,90,130)	CKSRYB105K10
C 913	(A,108,127)	CKSRYB104K50
C 915	(A,97,28)	CKSRYB104K16

B

Unit Number : QWM4120(A,B,D,E,F)
Unit Number : QWM4119(C)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,84,21) Flash Written UC IC	PD6586A8
IC 1941	(A,158,37) IR RC REC Module(A,B,D,E,F)	SIR8440B5
Q 1951	(B,34,19) RESISTOR BUILT-IN TR(A,B,D,E,F)	LTC014EEB
Q 1952	(B,38,19) RESISTOR BUILT-IN TR(C)	LTC014EEB
D 1951	(A,60,21) White LED	SWBA05(FI231719)
D 1952	(A,3,39) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1953	(A,35,9) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1954	(A,49,13) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1955	(A,49,23) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1956	(A,59,3) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1957	(A,70,4) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1958	(A,87,4) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1959	(A,94,4) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1960	(A,109,4) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1961	(A,116,4) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1962	(A,131,4) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1963	(A,138,4) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1964	(A,34,27) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1966	(A,37,18) Blue LED(A,B,D,E,F)	FC-F1608BK-470H5
D 1968	(A,38,18) Red LED(C)	FC-1608SXK630D08
D 1969	(A,49,11) Red LED(C)	FC-1608SXK630D08
D 1970	(A,49,25) Red LED(C)	FC-1608SXK630D08
D 1971	(A,34,29) Red LED(C)	FC-1608SXK630D08
D 1973	(A,71,4) Red LED(C)	FC-1608SXK630D08
D 1974	(A,57,3) Red LED(C)	FC-1608SXK630D08
D 1975	(A,111,4) Red LED(C)	FC-1608SXK630D08
D 1976	(A,93,4) Red LED(C)	FC-1608SXK630D08
D 1977	(A,89,4) Red LED(C)	FC-1608SXK630D08
D 1978	(A,137,4) Red LED(C)	FC-1608SXK630D08
D 1979	(A,133,4) Red LED(C)	FC-1608SXK630D08
D 1980	(A,115,4) Red LED(C)	FC-1608SXK630D08
D 1981	(A,35,7) Red LED(C)	FC-1608SXK630D08
D 1982	(A,3,37) Red LED(C)	FC-1608SXK630D08
X 1801	(B,68,23) Ceramic Resonator 5.00 MHz	CSS1547
S 1839	(A,15,18) Encoder (MULTI-CONTROL)	CSD1193
CN1931	(B,107,8) Connector	CKS6451
JA1911	(A,157,23) Connector	CKS6443
JA1921	(A,152,6) Jack	CKN1090
V 1801	(A,137,31) Segment LCD	CAW2056

RESISTORS

R 1801	(B,85,13)	RS1/10SR473J
R 1802	(B,63,20)	RS1/10SR473J
R 1803	(B,73,22)	RS1/10SR222J
R 1805	(B,62,21)	RS1/10SR473J
R 1806	(B,54,26)	RS1/10SR473J
R 1807	(B,55,26)	RS1/10SR473J
R 1808	(B,52,26)	RS1/10SR473J
R 1823	(B,51,26)	RS1/10SR273J
R 1921	(B,138,8)	RS1/10SR0R0J
R 1922	(B,138,14)	RS1/10SR0R0J
R 1923	(B,136,5)	RS1/10SR0R0J
R 1931	(B,35,8)	RS1/10SR222J
R 1932	(B,37,7)	RS1/10SR222J
R 1941	(B,127,23) (C)	RS1/10SR473J
R 1944	(B,131,26) (A,B,D,E,F)	RS1/10SR101J
R 1951	(B,51,21)	RS1/4SA181J
R 1952	(B,55,23)	RS1/4SA101J
R 1954	(B,11,31) (A,B,D,E,F)	RS1/10SR332J
R 1958	(B,35,11) (A,B,D,E,F)	RS1/10SR471J
R 1960	(B,41,7) (A,B,D,E,F)	RS1/10SR122J
R 1962	(B,88,10) (A,B,D,E,F)	RS1/10SR102J
R 1964	(B,54,11) (A,B,D,E,F)	RS1/10SR102J
R 1966	(B,140,18) (A,B,D,E,F)	RS1/10SR102J
R 1968	(B,28,28) (A,B,D,E,F)	RS1/10SR471J
R 1969	(B,29,28) (A,B,D,E,F)	RS1/10SR682J
R 1972	(B,32,19) (A,B,D,E,F)	RS1/10SR0R0J
R 1973	(B,38,22) (C)	RS1/10SR0R0J
R 1975	(B,31,19) (C)	RS1/10SR562J
R 1978	(B,35,13) (C)	RS1/10SR102J
R 1980	(B,31,28) (C)	RS1/10SR102J
R 1982	(B,86,10) (C)	RS1/10SR152J
R 1984	(B,63,14) (C)	RS1/10SR102J
R 1986	(B,137,18) (C)	RS1/10SR102J
R 1988	(B,49,23) (C)	RS1/10SR102J
R 1990	(B,15,31) (C)	RS1/10SR102J
R 1991	(B,49,7) (A,B,D,E,F)	RS1/10SR0R0J
R 1996	(B,59,7) (C)	RS1/10SR0R0J

CAPACITORS

C 1806	(B,66,22)	CKSRYB104K16
C 1807	(B,64,22)	CKSRYB105K10
C 1912	(B,143,21)	CKSRYB102K50
C 1941	(B,135,26) 10 uF(A,B,D,E,F)	CCG1192

C

Unit Number : CWX4269
Unit Name : CD Core Unit(S11.6VA)

Circuit Symbol and No.			Part No.
MISCELLANEOUS			
IC 201	(B,24,38)	IC	PEQ094A
IC 301	(A,37,12)	IC	BD8223EFV
Q 101	(B,12,54)	Transistor	2SA1577
Q 102	(B,16,55)	Chip Digital Transistor	LTA123JUB
X 201	(B,25,50)	Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,43,54)	Spring Switch(HOME)	CSN1080
S 903	(B,22,13)	Spring Switch(DSCSNS)	CSN1081
CN101	(A,17,58)	Connector	CKS4808
CN701	(A,26,30)	Connector	CKS6146
RESISTORS			
R 101	(B,7,59)		RS1/10SR2R4J
R 102	(B,8,59)		RS1/10SR2R4J
R 103	(B,10,59)		RS1/10SR2R7J
R 108	(B,14,58)		RS1/16SS105J
R 109	(B,15,50)		RS1/16SS152J
R 214	(B,18,28)		RS1/16SS103J
R 215	(B,17,28)		RS1/16SS393J
R 216	(B,13,36)		RS1/16SS102J
R 217	(B,10,33)		RS1/16SS562J
R 218	(B,10,36)		RS1/16SS472J
R 229	(B,13,35)		RS1/16SS471J
R 232	(A,31,55)		RS1/16SS0R0J
R 237	(B,34,45)		RS1/16SS221J
R 240	(B,35,40)		RS1/16SS473J
R 245	(A,34,46)		RS1/16SS104J
R 254	(A,37,56)		RS1/16SS104J
R 260	(B,30,27)		RS1/16SS103J
R 264	(A,22,9)		RS1/16SS102J
R 281	(B,34,38)		RS1/16SS560J
R 282	(B,34,39)		RS1/16SS560J
R 291	(B,34,35)		RS1/16SS560J
R 294	(B,28,49)		RS1/16SS471J
R 303	(A,28,12)		RS1/16SS123J
R 304	(A,29,11)		RS1/16SS123J
R 305	(A,27,9)		RS1/16SS102J
R 306	(A,27,12)		RS1/16SS472J
R 307	(A,26,9)		RS1/16SS102J
R 308	(A,26,12)		RS1/16SS472J
R 309	(A,35,7)		RS1/16SS473J
R 310	(B,31,9)		RS1/16SS472J
R 311	(B,31,10)		RS1/16SS472J
R 312	(B,31,11)		RS1/16SS472J
R 313	(B,31,12)		RS1/16SS472J
R 701	(A,22,38)		RS1/16SS101J
R 702	(A,24,38)		RS1/16SS101J
R 706	(A,33,42)		RS1/16SS221J
CAPACITORS			
C 104	(B,15,52)		CKSQYB475K6R3
C 110	(B,11,44)		CKSSYB104K10
C 111	(B,12,44)		CKSSYB103K16
C 203	(B,22,47)		CKSSYB104K10
C 205	(A,17,41)		CKSRYB105K10
C 209	(B,29,48)		CKSRYB104K16
C 210	(B,33,44)		CKSSYB104K10
C 211	(B,34,42)		CKSSYB104K10
C 212	(B,23,29)		CKSSYB104K10
C 213	(B,18,26)		CKSSYB332K50
C 214	(B,17,26)		CKSSYB473K16
C 215	(B,19,29)		CKSSYB104K10
C 216	(B,13,33)		CKSSYB152K50
C 217	(B,10,35)		CCSSCH390J50
C 218	(B,10,37)		CCSSCH5R0C50
C 219	(B,14,35)		CKSSYB104K10
C 220	(A,18,39)		CKSSYB104K10
C 221	(B,14,32)		CKSSYB104K10
C 222	(B,14,37)		CKSSYB104K10
C 223	(B,13,42)		CCSSCH680J50
C 224	(B,14,45)		CCSSCH470J50
C 225	(B,14,47)		CKSSYB103K16
C 228	(B,10,34)		CCSSCH180J50
C 229	(B,9,41)		CKSSYB104K10
C 233	(B,33,46)		CKSSYB103K16
C 236	(B,8,41)		CKSSYB104K10
C 238	(A,26,45)		CKSRYB104K16
C 299	(A,26,43)		CKSSYB104K10
C 302	(B,29,12)		CKSSYB102K50
C 303	(B,30,12)		CKSSYB102K50
C 304	(B,28,12)		CKSSYB223K16
C 305	(B,27,12)		CKSSYB104K10
C 306	(A,32,7)		CKSSYB104K10
C 307	(A,42,19)		CKSRYB105K10
C 308	(A,32,16)		CKSRYB105K10
C 710	(A,34,43)		CKSSYB102K50

D

Unit Number : QWM4142
Unit Name : BT Unit

MISCELLANEOUS			
IC 21	(A,6,46)	Regulator IC	MM3479A18P
IC 22	(A,19,45)	Regulator IC	MM3411A33N
CN21	(A,32,25)	B TO B Connector	CKS6346
CN23	(A,40,42)	Connector	CKS3857
RESISTORS			
R 28	(A,40,29)		RS1/16SS222J
R 29	(A,28,39)		RS1/16SS102J
R 30	(A,28,35)		RS1/16SS102J
R 38	(A,40,15)		RS1/16SS0R0J
R 39	(A,39,21)		RS1/16SS221J
R 40	(A,38,21)		RS1/16SS221J
R 41	(A,36,21)		RS1/16SS221J
CAPACITORS			
C 23	(A,22,38)		XCEVW221M4
C 24	(A,5,42)		CKSRYB105K10
C 26	(A,25,46)	4.7 uF	CCG1212
C 29	(A,16,44)		CKSRYB105K10
C 33	(A,8,52)	4.7 uF	CCG1212
C 34	(A,40,28)		CKSRYB105K10
C 36	(A,30,38)		CKSRYB104K16
C 38	(A,14,44)	4.7 uF	CCG1212
C 39	(A,4,40)	4.7 uF	CCG1212
C 40	(A,10,49)		CKSRYB104K16