EXPLODED VIEW (UNIT for DDX80*9)

A	φ2.6x5	: N86-2605-48
E	M2.6x4	: N35-2604-43
F	PANEL SCREW	: N09-6490-05
Q	M3x11	: N09-6498-05
R	M2.6x27	: N09-6491-05
T	M2.6x5	: N09-6493-05
U	M2.6x6	: N09-6494-05
W	M3x5	: N09-6425-15
AB	φ3x6	: N86-3006-48

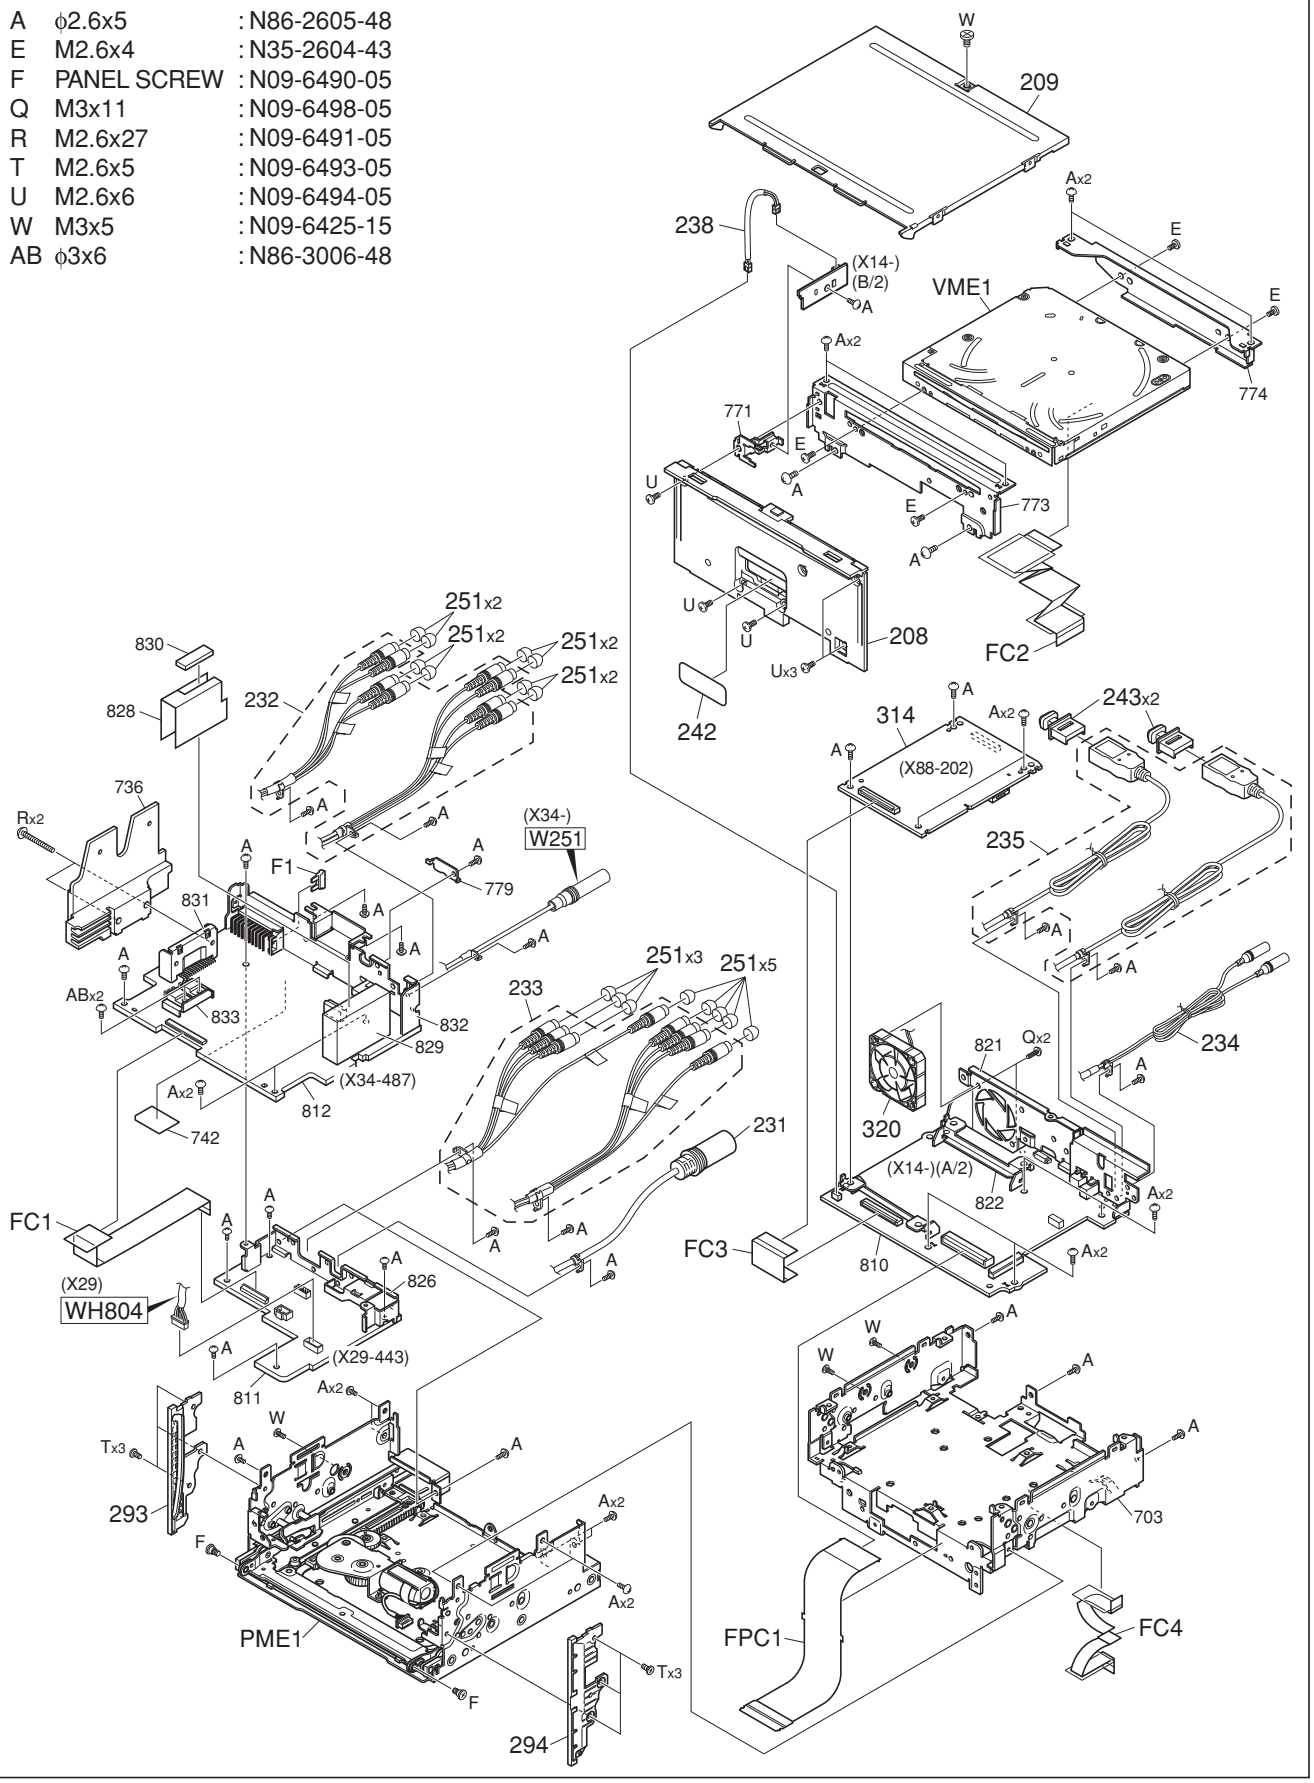

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT for DDX70∗9/DNX7∗00)

A	ϕ2.6x5	: N86-2605-48
E	M2.6x4	: N35-2604-43
F	PANEL SCREW	: N09-6490-05
Q	M3x11	: N09-6498-05
R	M2.6x27	: N09-6491-05
T	M2.6x5	: N09-6493-05
U		: N09-6494-05
W	M3x5	: N09-6425-15
AB	ϕ3x6	: N86-3006-48

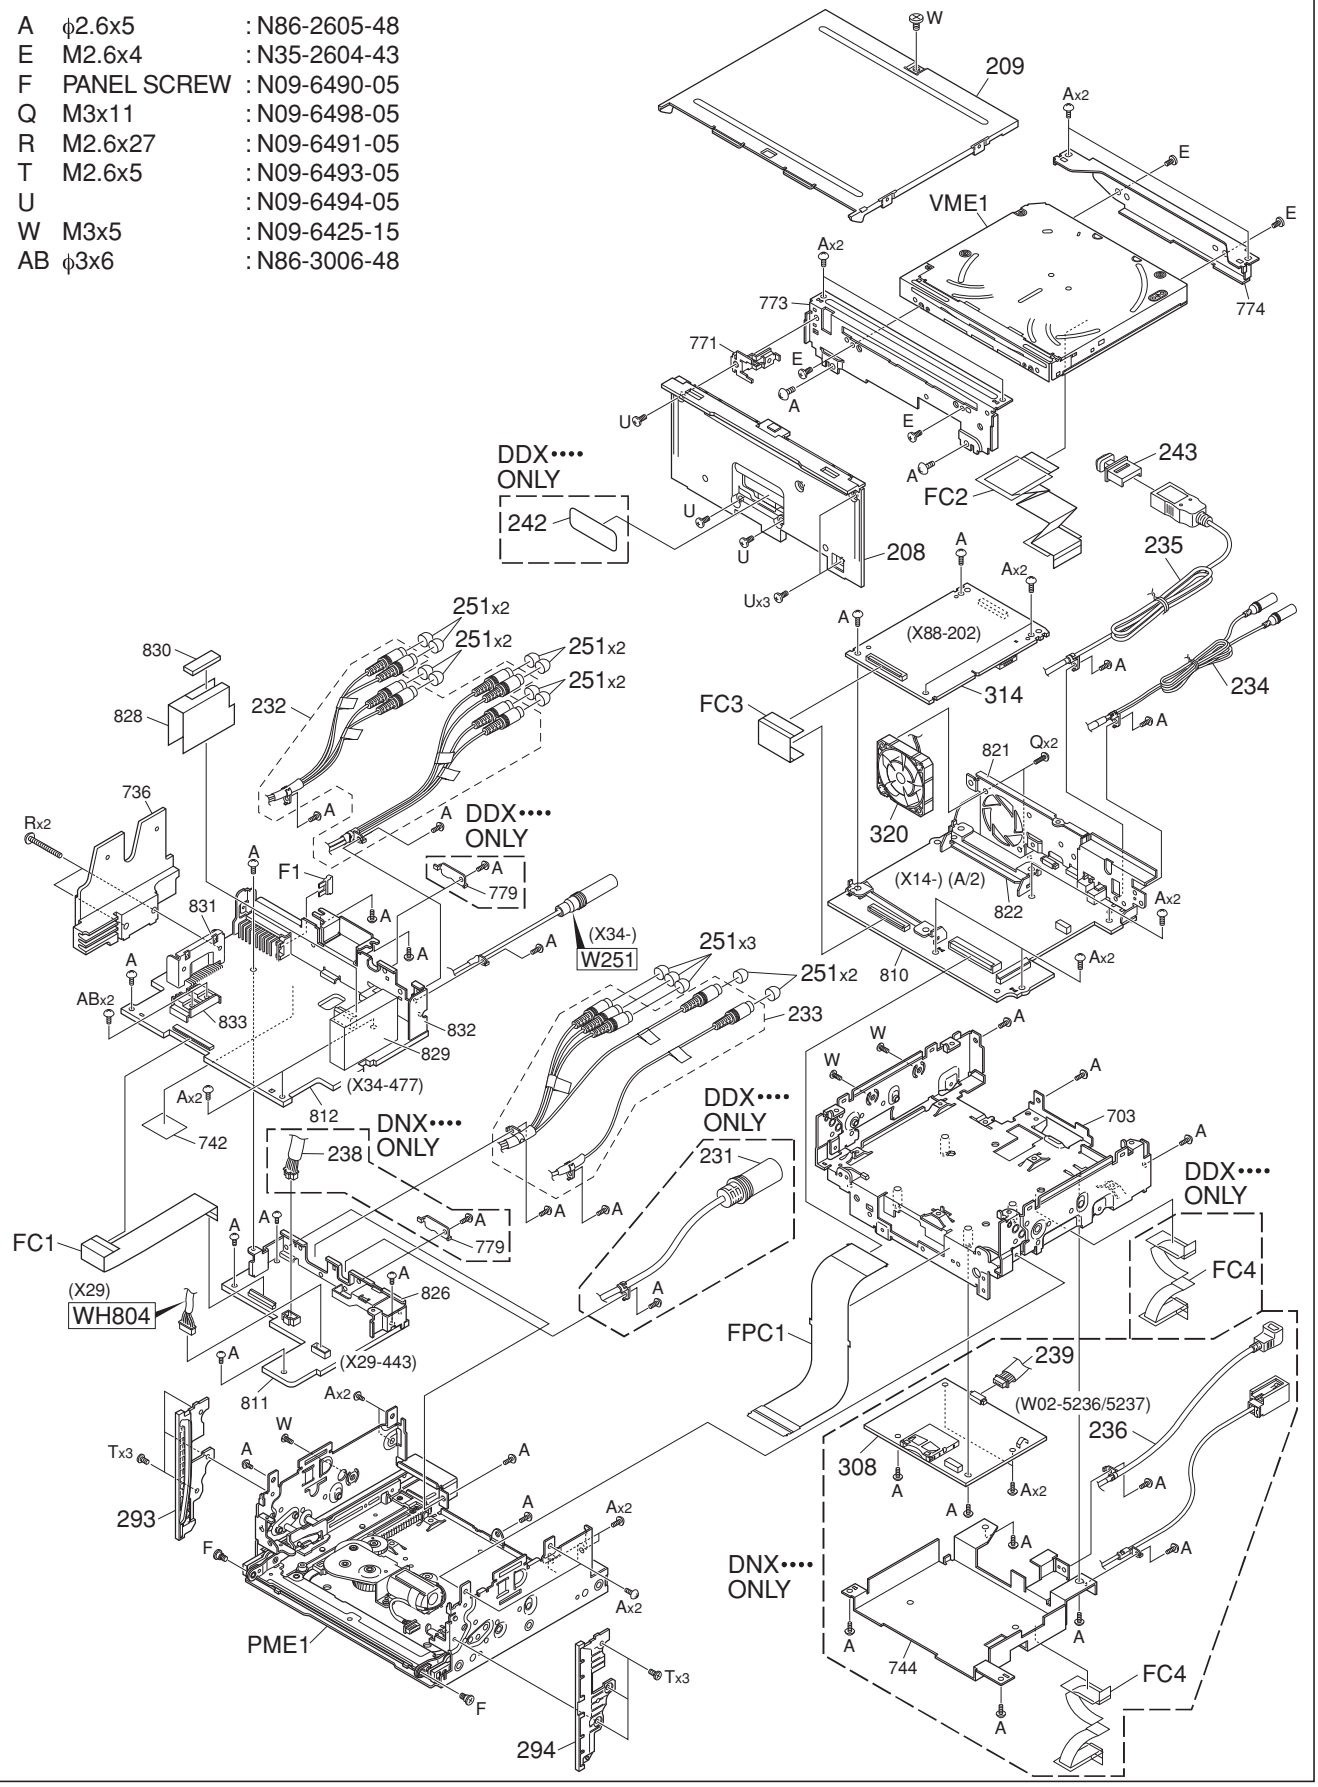

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL)

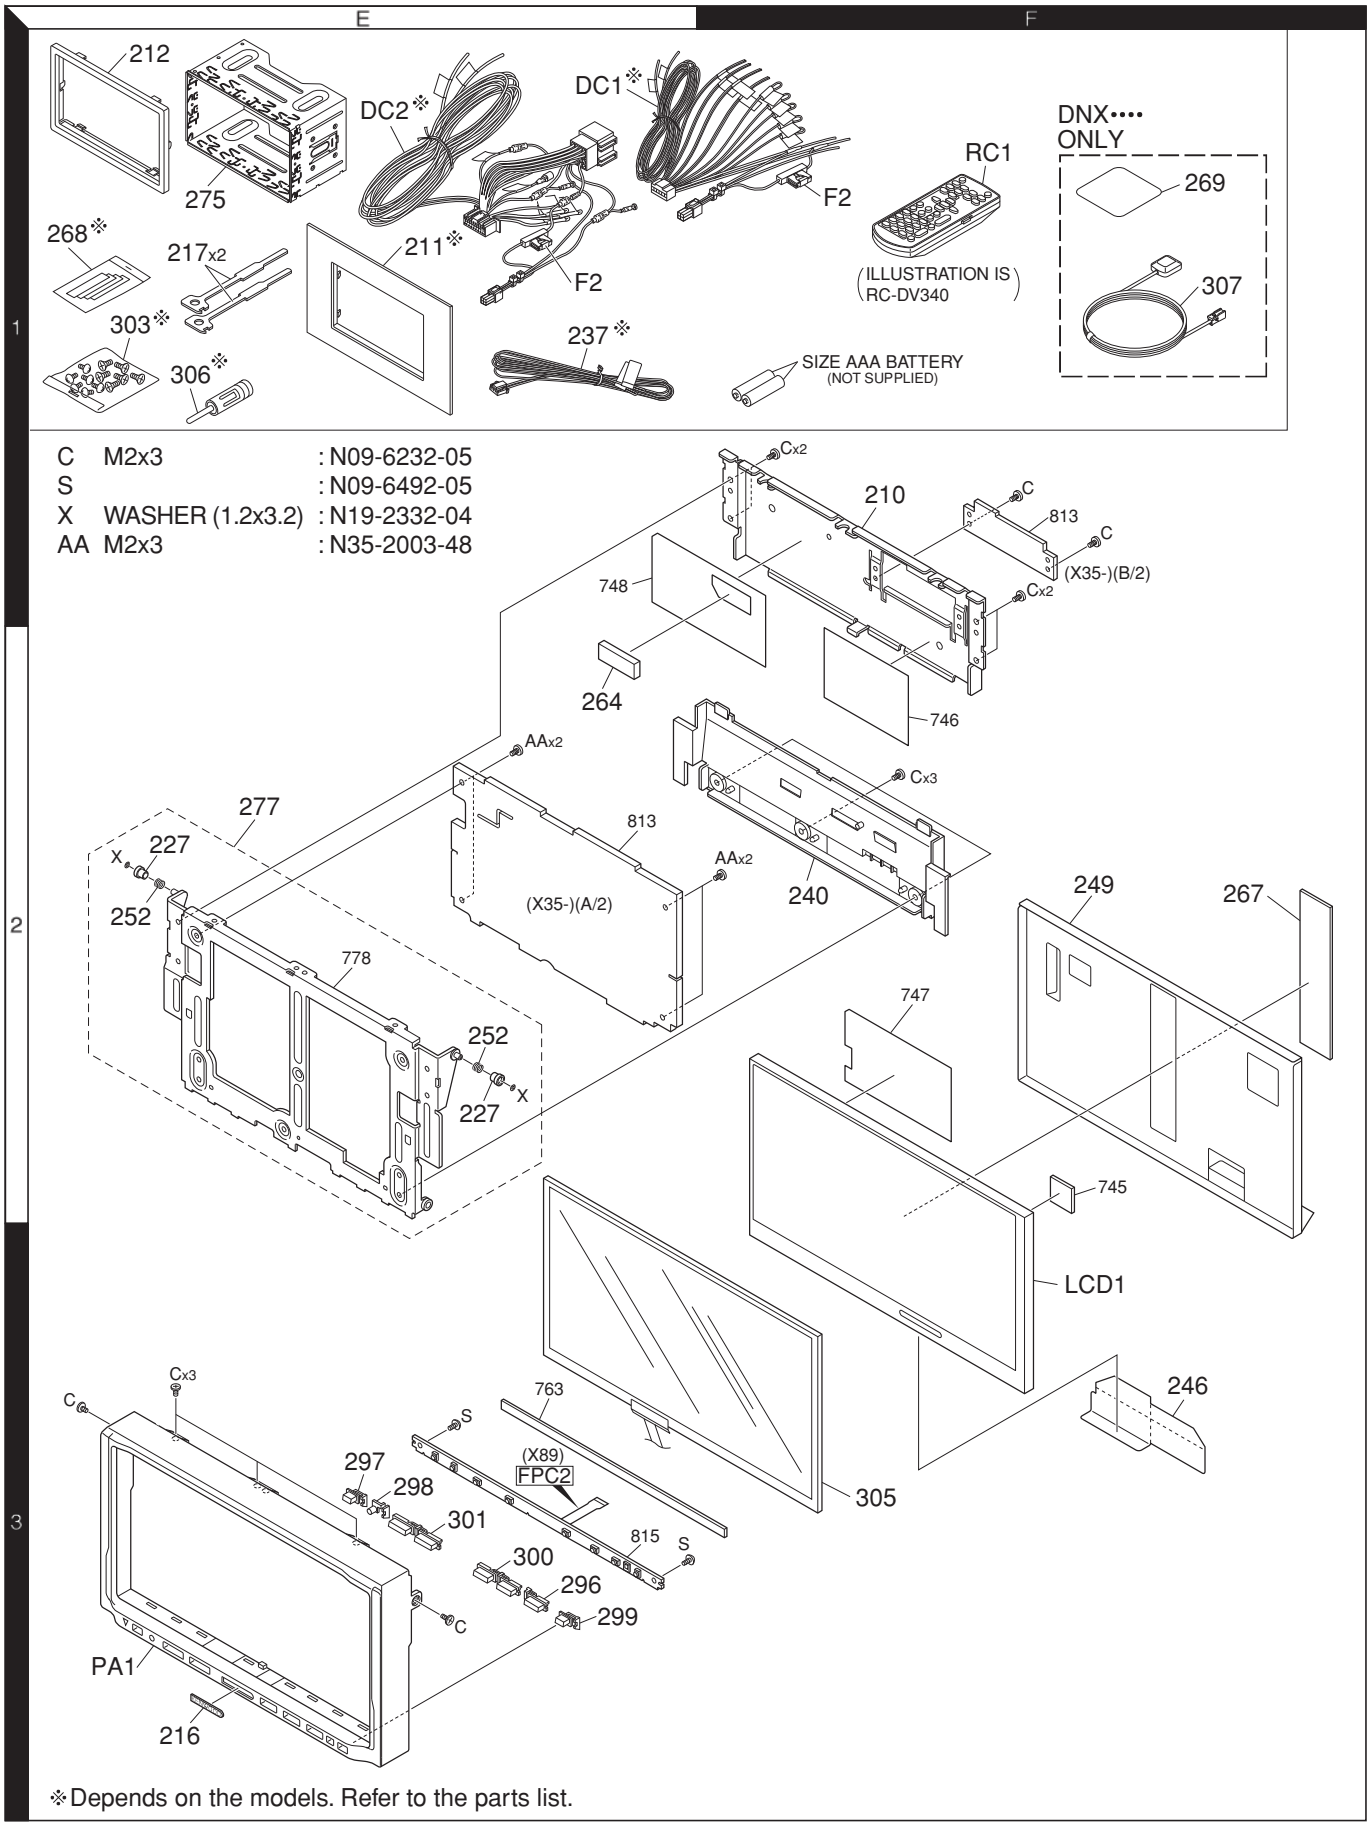

※Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (DRIVE MECHANISM)

G	M2x2.5	: N09-6361-05
H	M1.7x3.7	: N09-6363-05
J	M2x2.5	: N09-6375-05
K	M2x3.5	: N09-6376-05
L	M2x2.5	: N09-6377-05
M	ϕ2x2	: N09-6378-05
N	M2.6x4	: N09-6379-05
Y	WASHER	: N19-2321-04

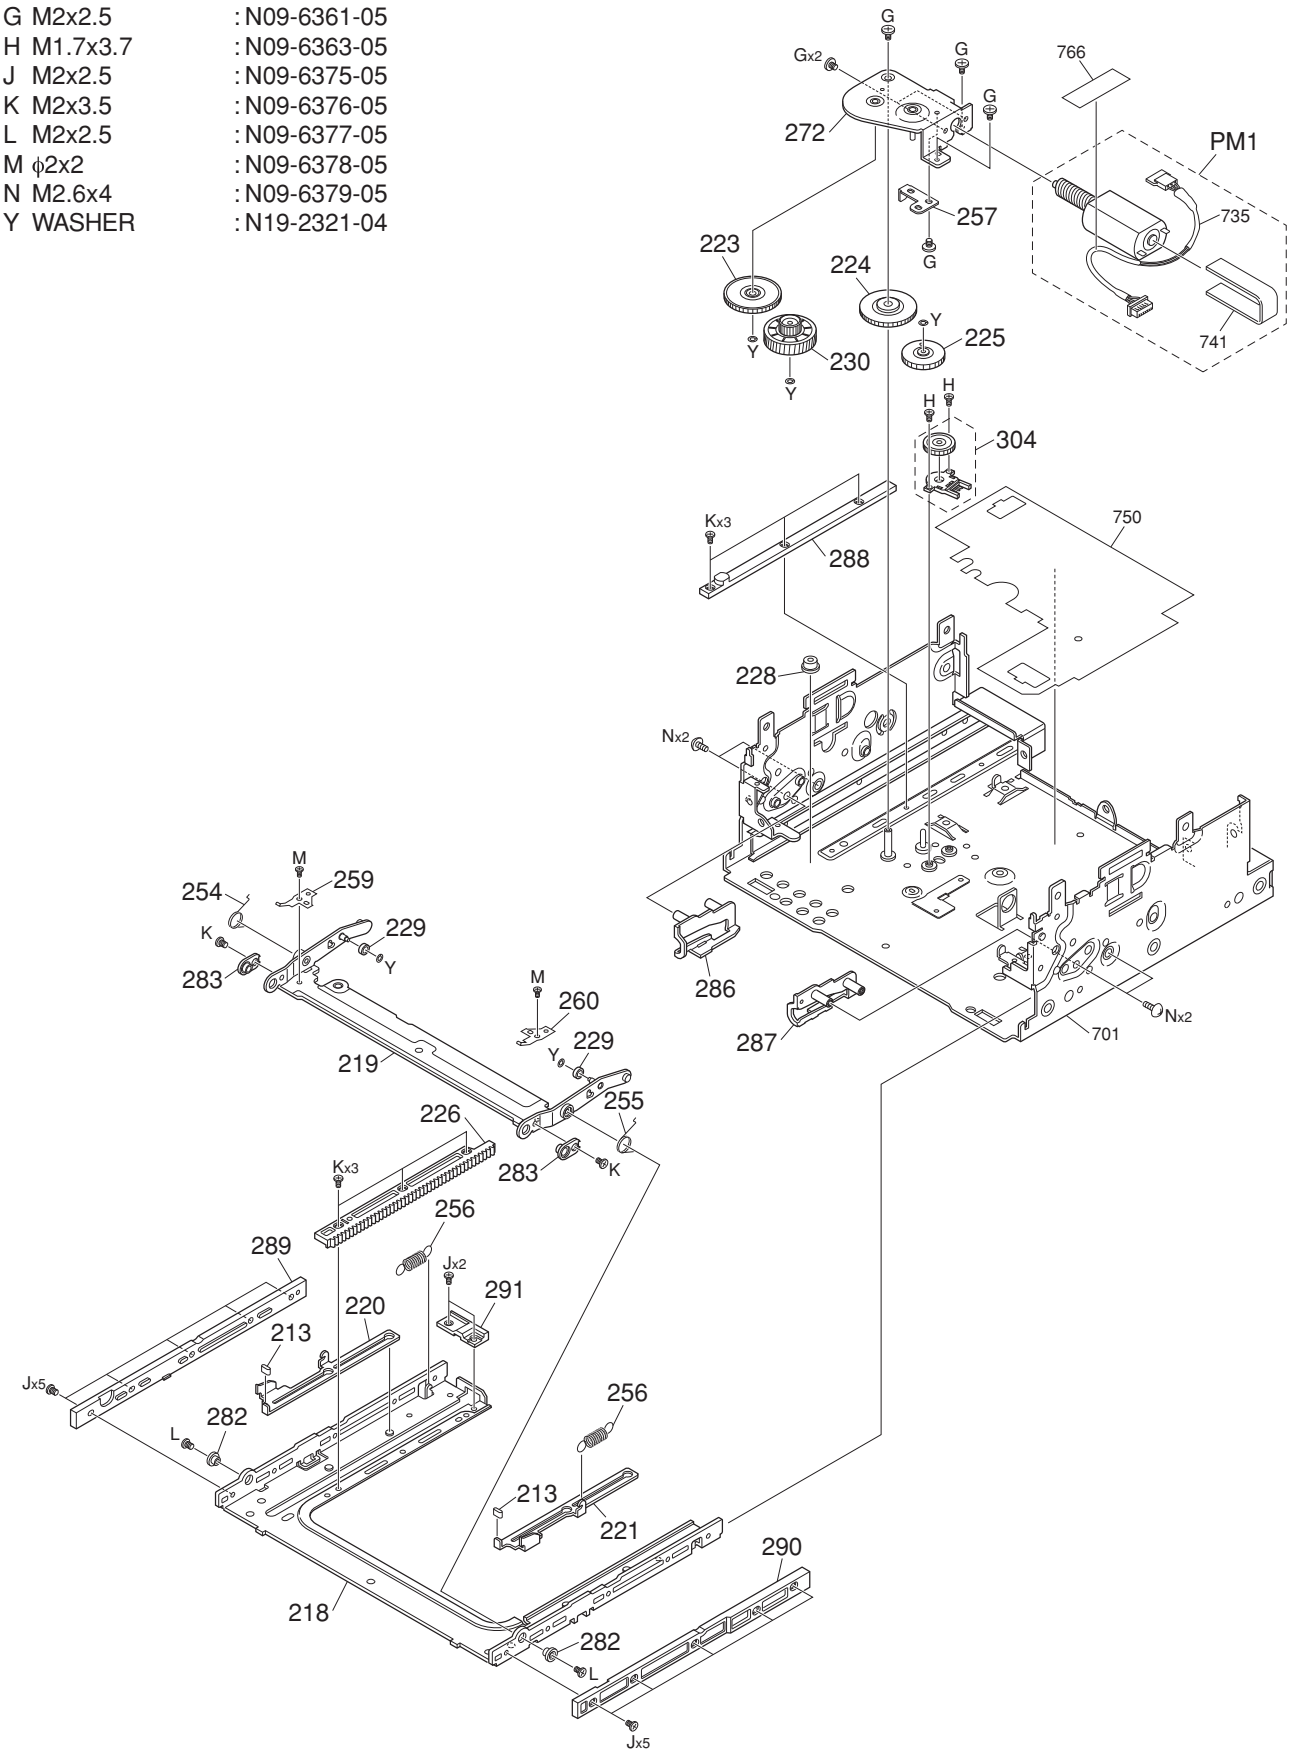

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
DDX7019/7029/7029Y/7039 DDX8019/8029/8029Y/8039_DNX7100/710EX/7200					
208	1D		A22-3151-01	SUB PANEL ASSY	E2M1X1
208	1D		A22-3151-01	SUB PANEL ASSY	KR1E1
208	1D		A22-3152-01	SUB PANEL ASSY	E4M2X2
208	1D		A22-3152-01	SUB PANEL ASSY	K1R2E3
208	1D		A22-3155-01	SUB PANEL ASSY	K3K4E5
209	1D		A52-0895-02	TOP PLATE	
210	1F	✻	A46-1862-02	REAR COVER	
PA1	3E		A64-4344-01	PANEL ASSY	K
PA1	3E		A64-4345-01	PANEL ASSY	E1E2
PA1	3E		A64-4346-01	PANEL ASSY	M1
PA1	3E		A64-4347-01	PANEL ASSY	R1X1
PA1	3E		A64-4360-01	PANEL ASSY	K3
PA1	3E		A64-4361-01	PANEL ASSY	E5
PA1	3E		A64-4362-01	PANEL ASSY	K4
PA1	3E		A64-4466-01+	PANEL ASSY	K1
PA1	3E		A64-4467-01+	PANEL ASSY	E3E4
PA1	3E		A64-4468-01+	PANEL ASSY	M2
PA1	3E		A64-4469-01+	PANEL ASSY	R2X2
PME1	3C		A10-5300-41	CHASSIS ASSY	
RC1	1F		A70-2082-15	REMOTE CONTROLLER AS (RC-DV330)	K4E5
RC1	1F		A70-2082-15	REMOTE CONTROLLER AS (RC-DV330)	M1X1K1
RC1	1F		A70-2082-15	REMOTE CONTROLLER AS (RC-DV330)	M2X2K3
RC1	1F		A70-2082-15	REMOTE CONTROLLER AS (RC-DV330)	R2E3E4
RC1	1F		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	E2
RC1	1F		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	KR1E1
-			B46-0612-14	ID CARD	E1E2M1
-			B46-0612-14	ID CARD	M2X2E5
-			B46-0612-14	ID CARD	X1E3E4
-			B54-4579-00	INSTALLATION MANUAL (ENG.SPA.)	KR1
-			B54-4580-00	INSTALLATION MANUAL (FRE.)	K
-			B54-4581-00	INSTALLATION MANUAL (POR.)	R1
-			B54-4582-00	INSTALLATION MANUAL (ENG.)	E1E2
-			B54-4583-00	INSTALLATION MANU (F.G.D.I.S.P)	E1
-			B54-4584-00	INSTALLATION MANUAL (ENG.)	M1X1
-			B54-4585-00	INSTALLATION MANUAL (S-CHI.KOR)	M1
-			B54-4586-00	INSTALLATION MANUAL (ENG.SPA.)	K1R2
-			B54-4587-00	INSTALLATION MANUAL (FRE.)	K1
-			B54-4588-00	INSTALLATION MANUAL (POR.)	R2
-			B54-4589-00	INSTALLATION MANUAL (ENG.)	E3E4
-			B54-4590-00	INSTALLATION MANU (F.G.D.I.S.P)	E3
-			B54-4591-00	INSTALLATION MANUAL (ENG.)	M2X2
-			B54-4592-00	INSTALLATION MANUAL (S-CHI.KOR)	M2
-			B54-4599-00	INSTALLATION MANU (ENG.FRE.SPA)	K3K4
-			B54-4600-00	INSTALLATION MA (E.F.G.D.I.S.P)	E5
-			B59-1880-00	SUB-INSTRUCTION MANUAL	
-			B64-3840-00	INSTRUCTION MANUAL (ENG.)	KR1
-			B64-3841-00	INSTRUCTION MANUAL (FRE.)	K
-			B64-3842-00	INSTRUCTION MANUAL (SPA.)	KR1
-			B64-3843-00	INSTRUCTION MANUAL (POR.)	R1
-			B64-3844-00	INSTRUCTION MANUAL (ENG.)	E1E2
-			B64-3845-00	INSTRUCTION MANUAL (FRE.)	E1
-			B64-3846-00	INSTRUCTION MANUAL (GER.)	E1
-			B64-3847-00	INSTRUCTION MANUAL (DUT.)	E1
-			B64-3848-00	INSTRUCTION MANUAL (ITA.)	E1
-			B64-3849-00	INSTRUCTION MANUAL (SPA.)	E1
-			B64-3850-00	INSTRUCTION MANUAL (POR.)	E1
-			B64-3851-00	INSTRUCTION MANUAL (ENG.)	M1X1
-			B64-3852-00	INSTRUCTION MANUAL (S-CHI.)	M1
-			B64-3853-00	INSTRUCTION MANUAL (KOR.)	M1
-			B64-3854-00	INSTRUCTION MANUAL (ENG.)	K1R2
-			B64-3855-00	INSTRUCTION MANUAL (FRE.)	K1
-			B64-3856-00	INSTRUCTION MANUAL (SPA.)	K1R2
-			B64-3857-00	INSTRUCTION MANUAL (POR.)	R2
-			B64-3858-00	INSTRUCTION MANUAL (ENG.)	E3E4
-			B64-3859-00	INSTRUCTION MANUAL (FRE.)	E3
-			B64-3860-00	INSTRUCTION MANUAL (GER.)	E3
-			B64-3861-00	INSTRUCTION MANUAL (DUT.)	E3
-			B64-3862-00	INSTRUCTION MANUAL (ITA.)	E3
-			B64-3863-00	INSTRUCTION MANUAL (SPA.)	E3
-			B64-3864-00	INSTRUCTION MANUAL (POR.)	E3
-			B64-3865-00	INSTRUCTION MANUAL (ENG.)	M2X2
-			B64-3866-00	INSTRUCTION MANUAL (S-CHI.)	M2
-			B64-3867-00	INSTRUCTION MANUAL (KOR.)	M2
-			B64-3869-00	INSTRUCTION MANUAL (NAVI-K)	K3K4
-			B64-3870-00	INSTRUCTION MANUAL (NAVI-E)	E5
-			B64-3871-00	INSTRUCTION MANUAL (ENG.)	K3K4
-			B64-3872-00	INSTRUCTION MANUAL (FRE.)	K3K4
-			B64-3873-00	INSTRUCTION MANUAL (SPA.)	K3K4
-			B64-3874-00	INSTRUCTION MANUAL (ENG.)	E5
-			B64-3875-00	INSTRUCTION MANUAL (FRE.)	E5
-			B64-3876-00	INSTRUCTION MANUAL (GER.)	E5
-			B64-3877-00	INSTRUCTION MANUAL (DUT.)	E5
-			B64-3878-00	INSTRUCTION MANUAL (ITA.)	E5
-			B64-3879-00	INSTRUCTION MANUAL (SPA.)	E5
-			B64-3880-00	INSTRUCTION MANUAL (POR.)	E5
211	1E		B07-3172-12	ESCUTCHEON	KR1M1
211	1E		B07-3172-12	ESCUTCHEON	K4
211	1E		B07-3172-12	ESCUTCHEON	M2X2K3
211	1E		B07-3172-12	ESCUTCHEON	X1K1R2
212	1E		B07-3224-01	ESCUTCHEON	
213	3G		B09-0541-04	CAP	
216	3E		B43-1518-04	BADGE	
LCD1	3F	✻	B38-1199-05	LCD	
217	1E		D10-4589-04	LEVER	
218	3G		D10-4895-22	SLIDER ASSY	
219	2G		D10-4897-13	ARM ASSY	
220	3G		D10-4899-03	LEVER	
221	3G		D10-4900-03	LEVER	
223	1H		D13-2394-04	GEAR	
224	1H		D13-2395-04	GEAR	
225	1H		D13-2396-04	GEAR	
226	3G		D13-2397-03	RACK (GEAR)	
227	2E		D14-1024-04	ROLLER	
228	2H		D14-1010-04	ROLLER	
229	2G		D14-1011-14	ROLLER	
230	1H		D19-0653-23	CLUTCH ASSY	
231	2D		E30-6695-15	CORD WITH PLUG	E1E2E3

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

DDX7019/7029/7029Y/7039/8019/8029/8029Y/8039_DNX7100/710EX/7200

Ref. No.	Add	New	Parts No.	Description	Destination
231	2D		E30-6695-15	CORD WITH PLUG	E4R1R2
231	2D		E30-6695-15	CORD WITH PLUG	KK1M1
231	2D		E30-6695-15	CORD WITH PLUG	M2X1X2
232	2C		E30-6685-05	CORD WITH PINPLUG	E2M1X1
232	2C		E30-6685-05	CORD WITH PINPLUG	KR1E1
232	2C		E30-6685-05	CORD WITH PINPLUG	K3K4E5
232	2C		E30-6708-05	CORD WITH PINPLUG	E4M2X2
232	2C		E30-6708-05	CORD WITH PINPLUG	K1R2E3
233	2C		E30-6686-15	CORD WITH PINPLUG	E2M1X1
233	2C		E30-6686-15	CORD WITH PINPLUG	KR1E1
233	2C		E30-6686-15	CORD WITH PINPLUG	K3K4E5
233	2C		E30-6687-15	CORD WITH PINPLUG	E4M2X2
233	2C		E30-6687-15	CORD WITH PINPLUG	K1R2E3
234	2D		E30-6689-05	CORD WITH PLUG	
235	2D		E30-6690-05	CORD WITH PLUG	E2M1X1
235	2D		E30-6690-05	CORD WITH PLUG	KR1E1
235	2D		E30-6690-05	CORD WITH PLUG	K3K4E5
235	2D		E30-6691-05	CORD WITH PLUG	E4M2X2
235	2D		E30-6691-05	CORD WITH PLUG	K1R2E3
236	3D		E30-6692-05	CORD WITH PLUG	K3K4E5
237	1F		E30-6693-05	CORD WITH PLUG	K4E5
237	1F		E30-6693-05	CORD WITH PLUG	M1X1K1
237	1F		E30-6693-05	CORD WITH PLUG	M2X2K3
237	1F		E30-6693-05	CORD WITH PLUG	R2E3E4
238	2C		E39-0904-15	WIRING HARNESS	K3K4E5
238	1D		E39-0915-05	WIRING HARNESS	E4M2X2
238	1D		E39-0915-05	WIRING HARNESS	K1R2E3
239	3D		E39-0905-05	WIRING HARNESS	K3K4E5
DC1	1F		E30-6677-05	DC CORD	KR1M1
DC1	1F		E30-6677-05	DC CORD	K4
DC1	1F		E30-6677-05	DC CORD	M2X2K3
DC1	1F		E30-6677-05	DC CORD	X1K1R2
DC2	1F		E30-6678-05	DC CORD	E1E2E3
DC2	1F		E30-6678-05	DC CORD	E4E5
FC1	3C		E39-0909-05	FLAT CABLE	
FC2	2D		E39-0910-05	FLAT CABLE	
FC3	3D		E39-0911-05	FLAT CABLE	
FC4	3D		E39-0912-05	FLAT CABLE	E1E2E3
FC4	3D		E39-0912-05	FLAT CABLE	E4R1R2
FC4	3D		E39-0912-05	FLAT CABLE	KK1M1
FC4	3D		E39-0912-05	FLAT CABLE	M2X1X2
FC4	3D		E39-0920-05	FLAT CABLE	K3K4E5
240	2F		F07-1192-02	COVER	
242	1C		F09-2932-04	SHEET	E1E2E3
242	1C		F09-2932-04	SHEET	E4R1R2
242	1C		F09-2932-04	SHEET	KK1M1
242	1C		F09-2932-04	SHEET	M2X1X2
243	2D		F09-2929-04	CAP	
246	3F		F09-2958-04	SHEET	
249	2F	✻	F20-2432-03	INSULATING SHEET	
251	2C		F29-0626-04	INSULATING COVER	
⚠ F1	2C		F52-0023-05	FUSE (MINI BLADE TYPE) 10A	
⚠ F2	1F		F52-0004-05	FUSE (MINI BLADE TYPE) 5A	

Ref. No.	Add	New	Parts No.	Description	Destination
252	2E		G01-4659-04	COMPRESSION SPRING	
254	2G		G01-3288-04	TORSION COIL SPRING	
255	2G		G01-3289-04	TORSION COIL SPRING	
256	3G		G01-3290-04	EXTENSION SPRING	
257	1H		G02-1539-04	FLAT SPRING	
259	2G		G02-1544-04	FLAT SPRING	
260	2G		G02-1545-04	FLAT SPRING	
264	2E		G16-1688-04	SHEET	
267	2F	✻	G16-1695-04	SHEET	
-			H54-4128-03	ITEM CARTON CASE	K
-			H54-4129-03	ITEM CARTON CASE	E1
-			H54-4130-03	ITEM CARTON CASE	E2
-			H54-4131-03	ITEM CARTON CASE	R1
-			H54-4132-03	ITEM CARTON CASE	M1X1
-			H54-4133-03	ITEM CARTON CASE	K1
-			H54-4134-03	ITEM CARTON CASE	E3
-			H54-4135-03	ITEM CARTON CASE	E4
-			H54-4136-03	ITEM CARTON CASE	R2
-			H54-4137-03	ITEM CARTON CASE	M2X2
-			H54-4139-03	ITEM CARTON CASE	K3
-			H54-4140-03	ITEM CARTON CASE	E5
-			H54-4141-03	ITEM CARTON CASE	K4
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	KR1M1
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	K4
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	M2X2K3
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	X1K1R2
269	1E		J21-9867-04	MOUNTING HARDWARE	K3K4E5
272	1H		J22-0444-13	MOUNTING HARDWARE ASSY	
275	1E		J22-0657-03	MOUNTING HARDWARE ASSY	
277	2E	✻	J22-0659-02	MOUNTING HARDWARE ASSY	
282	3G		J31-1075-14	COLLAR (ARM COLLAR)	
283	2G		J31-1077-04	COLLAR (PANEL COLLAR)	
286	2H		J90-1124-13	GUIDE ASSY	
287	2H		J90-1126-13	GUIDE ASSY	
288	2H		J90-1128-03	RAIL	
289	3G		J90-1129-23	RAIL	
290	3G		J90-1130-23	RAIL	
291	3G		J90-1131-03	GUIDE	
293	3C		J90-1160-01	RAIL	
294	3C		J90-1161-01	RAIL	
FPC1	3D		J86-0034-05	FPC (LEAD FREE)	
296	3E		K24-4793-03	PUSH KNOB (SRC)	E1E2E3
296	3E		K24-4793-03	PUSH KNOB (SRC)	E4R1R2
296	3E		K24-4793-03	PUSH KNOB (SRC)	KK1M1
296	3E		K24-4793-03	PUSH KNOB (SRC)	M2X1X2
296	3E		K24-4797-03	PUSH KNOB (NAV)	K3K4E5
297	3E		K24-4794-03	PUSH KNOB (ATT)	
298	3E		K24-4795-04	PUSH KNOB (RESET)	
299	3E		K24-4796-03	PUSH KNOB (EJECT)	
300	3E		K25-1915-03	PUSH KNOB (FNC/V.SEL)	
301	3E		K25-1916-03	PUSH KNOB (VOL)	
303	1E		N99-1779-15	SCREW SET	KR1M1
303	1E		N99-1779-15	SCREW SET	K4
303	1E		N99-1779-15	SCREW SET	M2X2K3

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

DDX7019/7029/7029Y/7039/8019/8029/8029Y/8039_DNX7100/710EX/7200

Ref. No.	Add	New	Parts No.	Description	Destination
303	1E		N99-1779-15	SCREW SET	X1K1R2
A	3C		N86-2605-48	BINDING HEAD TAPTITE SCREW	
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	
C	3E		N09-6232-05	MACHINE SCREW (M2.0X3.0)	
E	1D		N35-2604-43	BINDING HEAD MACHINE SCREW	
F	3C		N09-6490-05	STEPPED SCREW (PANEL SCREW)	
G	1H		N09-6361-05	MACHINE SCREW (M2X2.5)	
H	1H		N09-6363-05	MACHINE SCREW (M1.7X3.7)	
J	3G		N09-6375-05	MACHINE SCREW (M2X2.5)	
K	2G		N09-6376-05	MACHINE SCREW (M2X3.5)	
L	3G		N09-6377-05	MACHINE SCREW (M2X2.5)	
M	2G		N09-6378-05	TAPTITE SCREW (STITE 2X2)	
N	2H		N09-6379-05	MACHINE SCREW (M2.6X4 BIND)	
R	2C		N09-6491-05	MACHINE SCREW (M2.6X27)	
S	3E		N09-6492-05	TAPTITE SCREW	
T	3C		N09-6493-05	MACHINE SCREW (M2.6X5)	
U	1D		N09-6494-05	MACHINE SCREW	
W	3C		N09-6425-15	MACHINE SCREW (M3.0X5)	
X	2E		N19-2332-04	FLAT WASHER (1.2X3.2X0.25)	
Y	1H		N19-2321-04	FLAT WASHER (1.6X4X0.25)	
304	1H		R31-0248-05	VARIABLE RESISTOR	
305	3F		S79-0854-05	SWITCH ASSY	
306	1E		T90-0523-05	ANTENNA ADAPTOR	E1E2E3
306	1E		T90-0523-05	ANTENNA ADAPTOR	E4E5
PM1	1H		T42-1322-14	MOTOR ASSY	
307	1F		W02-5229-05	NAVIGATION MODULE (GPS-ANT)	K3K4E5
308	3D		W02-5236-05	NAVIGATION MODULE (NAVI-K)	K3K4
308	3D		W02-5237-05	NAVIGATION MODULE (NAVI-E)	E5
314	2D		X88-2020-18	DIGITAL I/O UNIT	E2M1X1
314	2D		X88-2020-18	DIGITAL I/O UNIT	KR1E1
314	2D		X88-2020-18	DIGITAL I/O UNIT	K3K4E5
314	2D		X88-2020-19	DIGITAL I/O UNIT	E4M2X2
314	2D		X88-2020-19	DIGITAL I/O UNIT	K1R2E3
VME1	1D		X92-5920-01	DVD MECHANISM ASSY (DVS-8531V)	
VIDEO CONTROL UNIT (X15-101x-xx/112x-xx)					
D600			B30-1767-05	LED	E4M2X2
D600			B30-1767-05	LED	K1R2E3
C1			C90-5670-05	ELECTRO 2200UF 16WV	
C2,3			CK73GB1H104K	CHIP C 0.10UF K	
C4			CK73FB1E474K	CHIP C 0.47UF K	
C5			CE32BF1C221M	CHIP EL 220UF 16WV	
C6			CE32BF0J101M	CHIP EL 100UF 6.3WV	
C7			CK73FB0J106K	CHIP C 10UF K	
C8			CK73GB1H104K	CHIP C 0.10UF K	
C9			CK73FB1A225K	CHIP C 2.2UF K	
C10			CK73EB1A106K	CHIP C 10UF K	
C11			CK73GB1H103K	CHIP C 0.010UF K	
C12			CK73EB1A106K	CHIP C 10UF K	
C13			CK73GB1H103K	CHIP C 0.010UF K	
C14			CE32BJ1C100M	CHIP EL 10UF 16WV	
C16			CK73EB1C106K	CHIP C 10UF K	
C17			CE32BF1E101M	CHIP EL 100UF 25WV	

Ref. No.	Add	New	Parts No.	Description	Destination
C19			CK73GB1H103K	CHIP C 0.010UF K	
C20			CK73GB1H104K	CHIP C 0.10UF K	
C21,22			CK73FB0J106K	CHIP C 10UF K	
C24			CK73EB1C106K	CHIP C 10UF K	
C26			CK73GB1A105K	CHIP C 1.0UF K	
C27,28			CK73GB1H104K	CHIP C 0.10UF K	
C29			CK73FB0J106K	CHIP C 10UF K	
C32			CK73FB0J106K	CHIP C 10UF K	
C34			CK73FB0J106K	CHIP C 10UF K	
C37,38			CC73GCH1H050C	CHIP C 5.0PF C	
C101			CK73GB1H473K	CHIP C 0.047UF K	
C102			CK73GB1H102K	CHIP C 1000PF K	
C104			CC73GCH1H221J	CHIP C 220PF J	
C105			CK73GB1H102K	CHIP C 1000PF K	
C106			CK73GB1H103K	CHIP C 0.010UF K	
C107,108			CC73GCH1H101J	CHIP C 100PF J	
C109			CK73GB1H223K	CHIP C 0.022UF K	
C110			CC73GCH1H470J	CHIP C 47PF J	
C111			CK73GB1H103K	CHIP C 0.010UF K	
C112			CK73GB1H102K	CHIP C 1000PF K	
C114			CC73GCH1H221J	CHIP C 220PF J	
C115			CK73GB1H473K	CHIP C 0.047UF K	
C116			CK73GB1H104K	CHIP C 0.10UF K	
C117			CK73FB0J106K	CHIP C 10UF K	
C118			CK73GB1H104K	CHIP C 0.10UF K	
C119			CK73EB1E225K	CHIP C 2.2UF K	
C120,121			CK73GB1H104K	CHIP C 0.10UF K	
C122,123			CK73GB1H103K	CHIP C 0.010UF K	
C124			C93-1367-05	CHIP C 10UF K	
C128,129			CK73GB1H102K	CHIP C 1000PF K	
C130			CE32AV0J221M	CHIP EL 220UF 6.3WV	
C131-133			CK73GB1H103K	CHIP C 0.010UF K	
C134			C93-1367-05	CHIP C 10UF K	
C136,137			CK73GB1H102K	CHIP C 1000PF K	
C140			CE32AV1A121M	CHIP EL 120UF 10WV	
C141			CK73GB1H103K	CHIP C 0.010UF K	
C142			CK73GB1H473K	CHIP C 0.047UF K	
C143			CK73GB1H102K	CHIP C 1000PF K	
C145			CC73GCH1H221J	CHIP C 220PF J	
C146			CK73GB1H102K	CHIP C 1000PF K	
C147			CK73GB1H103K	CHIP C 0.010UF K	
C148			CC73GCH1H101J	CHIP C 100PF J	
C149			CC73GCH1H470J	CHIP C 47PF J	
C150			CK73GB1H153K	CHIP C 0.015UF K	
C151			CC73GCH1H470J	CHIP C 47PF J	
C152			CK73GB1H223K	CHIP C 0.022UF K	
C153			CK73GB1H102K	CHIP C 1000PF K	
C155			CC73GCH1H221J	CHIP C 220PF J	
C156,157			CK73GB1H104K	CHIP C 0.10UF K	
C158			CK73FB0J106K	CHIP C 10UF K	
C159			CK73GB1H104K	CHIP C 0.10UF K	
C160			CK73EB1E225K	CHIP C 2.2UF K	
C161,162			CK73GB1H104K	CHIP C 0.10UF K	
C163,164			CK73GB1H103K	CHIP C 0.010UF K	
C165			C93-1367-05	CHIP C 10UF K	

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-101x-xx/112x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C166,167			CE32BM1E470M	CHIP EL	47UF	25WV	
C168			CK73GB1H103K	CHIP C	0.010UF	K	
C169,170			CK73GB1H102K	CHIP C	1000PF	K	
C171			CE32AV0J221M	CHIP EL	220UF	6.3WV	
C172-174			CK73GB1H103K	CHIP C	0.010UF	K	
C175			C93-1367-05	CHIP C	10UF	K	
C176,177			CE32BM1E470M	CHIP EL	47UF	25WV	
C178			CK73GB1H104K	CHIP C	0.10UF	K	
C179,180			CK73GB1H102K	CHIP C	1000PF	K	
C181			CE32AV0G331M	CHIP EL	330UF	4.0WV	
C182			CK73GB1H103K	CHIP C	0.010UF	K	
C183,184			CK73GB1H102K	CHIP C	1000PF	K	
C185			CK73GB1H103K	CHIP C	0.010UF	K	
C186			CK73GB1H104K	CHIP C	0.10UF	K	
C187			CK73GB1H103K	CHIP C	0.010UF	K	
C188-201			CK73GB1H104K	CHIP C	0.10UF	K	
C202			CK73GB1H103K	CHIP C	0.010UF	K	
C203			CK73GB1H104K	CHIP C	0.10UF	K	
C204			CK73FB0J475K	CHIP C	4.7UF	K	
C205			CK73GB1H104K	CHIP C	0.10UF	K	
C206			CC73GCH1H220J	CHIP C	22PF	J	
C207			CC73GCH1H180J	CHIP C	18PF	J	
C208,209			CK73GB1H104K	CHIP C	0.10UF	K	
C210			CK73GB1H103K	CHIP C	0.010UF	K	
C212			CK73FB0J106K	CHIP C	10UF	K	
C213			CK73GB1H221K	CHIP C	220PF	K	
C214			CK73GB1H103K	CHIP C	0.010UF	K	
C215-219			CK73GB1H104K	CHIP C	0.10UF	K	
C220			CC73GCH1H050C	CHIP C	5.0PF	C	
C221			CK73GB1H104K	CHIP C	0.10UF	K	
C260			CK73GB1H102K	CHIP C	1000PF	K	
C301			CK73GB1A105K	CHIP C	1.0UF	K	
C302			CE32AV0J121M	CHIP EL	120UF	6.3WV	
C303			CK73GB1H104K	CHIP C	0.10UF	K	
C304-309			CK73GB1H103K	CHIP C	0.010UF	K	
C310			CC73GCH1H821J	CHIP C	820PF	J	
C311			CK73GB1A105K	CHIP C	1.0UF	K	
C312			CK73EB1A106K	CHIP C	10UF	K	
C313			CK73GB1A105K	CHIP C	1.0UF	K	
C314			CK73GB1H682K	CHIP C	6800PF	K	
C316,317			CK73GB1H104K	CHIP C	0.10UF	K	
C318			CK73GB1H103K	CHIP C	0.010UF	K	
C319			CC73GCH1H050C	CHIP C	5.0PF	C	
C320			CK73GB1A474K	CHIP C	0.47UF	K	
C321			CK73GB1H103K	CHIP C	0.010UF	K	
C322			CC73GCH1H080D	CHIP C	8.0PF	D	
C323			CE32AV0J121M	CHIP EL	120UF	6.3WV	
C324			CK73GB1H104K	CHIP C	0.10UF	K	
C327			CK73EB1C106K	CHIP C	10UF	K	
C328			CK73GB1H104K	CHIP C	0.10UF	K	
C331			CK73GB1H103K	CHIP C	0.010UF	K	
C332			CC73GCH1H470J	CHIP C	47PF	J	
C333			CK73GB1H103K	CHIP C	0.010UF	K	
C334			CK73EB1A106K	CHIP C	10UF	K	
C335			CK73GB1H103K	CHIP C	0.010UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C339			CE32BJ0J220M	CHIP EL	22UF	6.3WV	
C343-345			CK73GB1H471K	CHIP C	470PF	K	
C346			CK73GB1H103K	CHIP C	0.010UF	K	
C350-355			CK73GB1A105K	CHIP C	1.0UF	K	
C356			CK73GB1H103K	CHIP C	0.010UF	K	
C361			CK73GB1H104K	CHIP C	0.10UF	K	
C362			CK73GB1H103K	CHIP C	0.010UF	K	
C363			CK73GB1H104K	CHIP C	0.10UF	K	
C364			CK73GB1H103K	CHIP C	0.010UF	K	
C400-403			CK73GB1A474K	CHIP C	0.47UF	K	
C404			CK73GB1H103K	CHIP C	0.010UF	K	
C405			CE32BJ0J470M	CHIP EL	47UF	6.3WV	
C406			CK73GB1H104K	CHIP C	0.10UF	K	
C407			CK73GB1H103K	CHIP C	0.010UF	K	
C408-413			CK73GB1A105K	CHIP C	1.0UF	K	
C414			CK73GB1H103K	CHIP C	0.010UF	K	
C415-420			CK73GB1A105K	CHIP C	1.0UF	K	
C421			CK73GB1H103K	CHIP C	0.010UF	K	
C422-426			CK73GB1A105K	CHIP C	1.0UF	K	
C427			CK73GB1H103K	CHIP C	0.010UF	K	
C428-430			CK73GB1A105K	CHIP C	1.0UF	K	
C431,432			CK73GB1H103K	CHIP C	0.010UF	K	
C433			CK73FB0J106K	CHIP C	10UF	K	
C435			CE32BJ1C220M	CHIP EL	22UF	16WV	
C436,437			CK73FB0J106K	CHIP C	10UF	K	
C451,452			CK73GB1H222K	CHIP C	2200PF	K	
C463,464			CK73GB0J475K	CHIP C	4.7UF	K	
C465			CK73FB0J106K	CHIP C	10UF	K	
C501-511			CK73GB1H104K	CHIP C	0.10UF	K	
C512,513			CK73FB1A225K	CHIP C	2.2UF	K	
C514			CK73GB1H103K	CHIP C	0.010UF	K	
C515			CK73GB1H104K	CHIP C	0.10UF	K	
C516			CC73GCH1H101J	CHIP C	100PF	J	
C518			CK73GB1H103K	CHIP C	0.010UF	K	
C519			CK73GB1H104K	CHIP C	0.10UF	K	
C520			CK73GB1H103K	CHIP C	0.010UF	K	
C521			CK73GB1H104K	CHIP C	0.10UF	K	
C522-529			CK73GB1H103K	CHIP C	0.010UF	K	
C530,531			CK73GB1H104K	CHIP C	0.10UF	K	
C532			CK73GB1H103K	CHIP C	0.010UF	K	
C533			CC73GCH1H050C	CHIP C	5.0PF	C	
C534,535			CK73GB1H103K	CHIP C	0.010UF	K	
C536-538			CK73FB0J106K	CHIP C	10UF	K	
C539			CE32AV0J121M	CHIP EL	120UF	6.3WV	
C600,601			CK73GB1H104K	CHIP C	0.10UF	K	
C602			CC73GCH1H331J	CHIP C	330PF	J	
C603			CK73GB1H104K	CHIP C	0.10UF	K	
C605			CK73GB1H104K	CHIP C	0.10UF	K	
C608			CK73GB1A105K	CHIP C	1.0UF	K	
C609			CE32BJ0J470M	CHIP EL	47UF	6.3WV	
C611			CK73GB1H104K	CHIP C	0.10UF	K	
C616			CK73GB1H104K	CHIP C	0.10UF	K	
C618			CK73GB1A105K	CHIP C	1.0UF	K	
C619			CK73GB1H103K	CHIP C	0.010UF	K	
C620			CK73GB1H153K	CHIP C	0.015UF	K	

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-101x-xx/112x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C621			CC73GCH1H151J	CHIP C 150PF J	
C622			CC73GCH1E102J	CHIP C 1000PF J	
C623			CK73GB0J475K	CHIP C 4.7UF K	
C624			CK73FB0J106K	CHIP C 10UF K	
C625			CK73GB1A105K	CHIP C 1.0UF K	K3K4E5
C626-628			CK73GB1H104K	CHIP C 0.10UF K	
C630			CK73GB1H104K	CHIP C 0.10UF K	
CN1			E41-2735-05	PIN ASSY	
CN301			E41-2608-05	FLAT CABLE CONNECTOR	
CN401			E41-2806-05	PIN ASSY	
CN501			E41-2237-05	FLAT CABLE CONNECTOR	
CN502			E41-2153-05	FLAT CABLE CONNECTOR	
CN503			E41-2766-05	FLAT CABLE CONNECTOR	
CN504			E41-2772-05	PIN ASSY	
CN505			E41-2546-05	PIN ASSY	K3K4E5
CN600			E41-1476-05	PIN ASSY	E4M2X2
CN600			E41-1476-05	PIN ASSY	K1R2E3
CN601			E41-1486-05	PIN ASSY	E4M2X2
CN601			E41-1486-05	PIN ASSY	K1R2E3
J1			E58-1065-05	RECTANGULAR RECEPTACLE	
J501			E11-0638-05	PHONE JACK	
320	2D		F09-2923-05	FAN	
⚠ L1			L33-2358-05	CHOKE COIL	
L3			L33-2369-05	CHOKE COIL	
L101			L33-2369-05	CHOKE COIL	
L102			L33-2370-05	CHOKE COIL	
L103			L33-2369-05	CHOKE COIL	
L104,105			L33-2370-05	CHOKE COIL	
L106			L33-2417-05	CHOKE COIL	
L107			L33-2369-05	CHOKE COIL	
L108			L33-2370-05	CHOKE COIL	
L201			L92-0319-05	CHIP FERRITE	
L301-303			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L305			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L401,402			L92-0319-05	CHIP FERRITE	
L403			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L404			L92-0319-05	CHIP FERRITE	
L501			L33-2369-05	CHOKE COIL	
L502			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L601,602			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
X201			L78-1210-05	RESONATOR (4.95MHZ)	
X202			L77-2917-15	CRYSTAL RESONATOR (32.768KHZ)	
X301			L77-2905-05	CRYSTAL RESONATOR (3.579545MHZ)	
X302			L77-2906-05	CRYSTAL RESONATOR (4.433619MHZ)	
X600			L78-0549-05	RESONATOR (15.734KHZ)	
Q	2D	✻	N09-6498-05	MACHINE SCREW (M3.0X11)	
CP401			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
CP402,403			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R1,2			RK73EB2E622J	CHIP R 6.2K J 1/4W	
R3			RK73GB2A153J	CHIP R 15K J 1/10W	
R4			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R5			RK73GB2A473J	CHIP R 47K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R6			RK73GH2A104D	CHIP R 100K D 1/10W	
R7			RK73GH2A513D	CHIP R 51K D 1/10W	
R8			RK73GH2A333D	CHIP R 33K D 1/10W	
R9,10			RK73GB2A224J	CHIP R 220K J 1/10W	
R11			RK73GH2A113D	CHIP R 11K D 1/10W	
R12			RK73GH2A104D	CHIP R 100K D 1/10W	
R13			RK73GH2A683D	CHIP R 68K D 1/10W	
R14,15			RK73GH2A334D	CHIP R 330K D 1/10W	
R16,17			RK73GB2A224J	CHIP R 220K J 1/10W	
R18			RK73GB2A100J	CHIP R 10 J 1/10W	
R19			RK73GB2A224J	CHIP R 220K J 1/10W	
R22			RK73GB2A224J	CHIP R 220K J 1/10W	
R24			RK73GB2A303J	CHIP R 30K J 1/10W	
R25			RK73GB2A224J	CHIP R 220K J 1/10W	
R26			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R27,28			RK73GB2A224J	CHIP R 220K J 1/10W	
R29			RK73GB2A114J	CHIP R 110K J 1/10W	
R34			RK73GB2A823J	CHIP R 82K J 1/10W	
R35			RK73GB2A103J	CHIP R 10K J 1/10W	
R36			RK73GB2A224J	CHIP R 220K J 1/10W	
R37			RK73GB2A333J	CHIP R 33K J 1/10W	
R38			RK73GB2A224J	CHIP R 220K J 1/10W	
R39			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R40			RK73GB2A153J	CHIP R 15K J 1/10W	
R41			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R42			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R43			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R44			RK73GB2A561J	CHIP R 560 J 1/10W	
R45			RK73GB2A223J	CHIP R 22K J 1/10W	
R46			RK73GB2A153J	CHIP R 15K J 1/10W	
R47,48			RK73GB2A221J	CHIP R 220 J 1/10W	
R50			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R51			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R52			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R53			RK73GB2A393J	CHIP R 39K J 1/10W	
R54			RK73GB2A113J	CHIP R 11K J 1/10W	
R55			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R56			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R57			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R58			RK73GB2A393J	CHIP R 39K J 1/10W	
R59			RK73GB2A113J	CHIP R 11K J 1/10W	
R63			RK73GB2A103J	CHIP R 10K J 1/10W	
R65			RK73GB2A103J	CHIP R 10K J 1/10W	
R66			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R67			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R68			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R69			RK73GB2A333J	CHIP R 33K J 1/10W	
R70			RK73GB2A203J	CHIP R 20K J 1/10W	
R71,72			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R73,74			RK73GB2A101J	CHIP R 100 J 1/10W	
R75			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R76,77			RK73GB2A101J	CHIP R 100 J 1/10W	
R79			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R81-84			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R86			RK73GB2A000J	CHIP R 0.0 J 1/10W	

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-101x-xx/112x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R102,103			RK73GH2A561D	CHIP R	560	D 1/10W	
R104			RK73GH2A333D	CHIP R	33K	D 1/10W	
R105			RK73GH2A622D	CHIP R	6.2K	D 1/10W	
R106			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R107			RK73GH2A912D	CHIP R	9.1K	D 1/10W	
R108			RK73GB2A103J	CHIP R	10K	J 1/10W	
R111			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R112			RK73GB2A333J	CHIP R	33K	J 1/10W	
R114			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R115			RK73GB2A683J	CHIP R	68K	J 1/10W	
R116			RK73GH2A333D	CHIP R	33K	D 1/10W	
R117			RK73GH2A562D	CHIP R	5.6K	D 1/10W	
R118			RK73GH2A681D	CHIP R	680	D 1/10W	
R120			RK73EB2E100J	CHIP R	10	J 1/4W	
R121			RK73GB2A220J	CHIP R	22	J 1/10W	
R122-124			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R126			RK73EB2E100J	CHIP R	10	J 1/4W	
R127			R92-5158-05	CHIP R	0.022	J 1/4W	
R129			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R130			RK73GB2A220J	CHIP R	22	J 1/10W	
R131			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R132,133			RK73GH2A561D	CHIP R	560	D 1/10W	
R134			RK73EB2E100J	CHIP R	10	J 1/4W	
R136,137			R92-5160-05	CHIP R	0.047	J 1/4W	
R138			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R143			RK73GH2A333D	CHIP R	33K	D 1/10W	
R144			RK73GH2A103D	CHIP R	10K	D 1/10W	
R145			RK73GH2A561D	CHIP R	560	D 1/10W	
R146			RK73GB2A103J	CHIP R	10K	J 1/10W	
R149			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R150			RK73GB2A683J	CHIP R	68K	J 1/10W	
R152			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R153			RK73GB2A683J	CHIP R	68K	J 1/10W	
R154			RK73GH2A333D	CHIP R	33K	D 1/10W	
R155			RK73GH2A562D	CHIP R	5.6K	D 1/10W	
R156			RK73GH2A681D	CHIP R	680	D 1/10W	
R158			RK73EB2E100J	CHIP R	10	J 1/4W	
R159			RK73GB2A220J	CHIP R	22	J 1/10W	
R160-163			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R164			RK73EB2E100J	CHIP R	10	J 1/4W	
R165,166			R92-5158-05	CHIP R	0.022	J 1/4W	
R167			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R168			RK73GB2A220J	CHIP R	22	J 1/10W	
R169-171			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R173			RK73EB2E100J	CHIP R	10	J 1/4W	
R175			R92-5159-05	CHIP R	0.033	J 1/4W	
R176			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R178-180			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R200			RK73GB2A221J	CHIP R	220	J 1/10W	
R201			RK73GB2A473J	CHIP R	47K	J 1/10W	
R202,203			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R204			RK73GB2A473J	CHIP R	47K	J 1/10W	
R205-208			RK73GB2A101J	CHIP R	100	J 1/10W	
R211			RK73GB2A103J	CHIP R	10K	J 1/10W	
R212			RK73GB2A332J	CHIP R	3.3K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R213			RK73GB2A473J	CHIP R	47K	J 1/10W	
R214-225			RK73GB2A101J	CHIP R	100	J 1/10W	
R226,227			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R228			RK73GB2A104J	CHIP R	100K	J 1/10W	
R229			RK73GB2A473J	CHIP R	47K	J 1/10W	
R230			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R231			RK73GB2A473J	CHIP R	47K	J 1/10W	
R232-234			RK73GB2A101J	CHIP R	100	J 1/10W	
R235			RK73GB2A473J	CHIP R	47K	J 1/10W	
R236-238			RK73GB2A101J	CHIP R	100	J 1/10W	
R239			RK73GB2A473J	CHIP R	47K	J 1/10W	
R240-242			RK73GB2A101J	CHIP R	100	J 1/10W	
R245-248			RK73GB2A473J	CHIP R	47K	J 1/10W	
R249			RK73GB2A123J	CHIP R	12K	J 1/10W	
R250			RK73GB2A473J	CHIP R	47K	J 1/10W	
R251			RK73GB2A101J	CHIP R	100	J 1/10W	
R252			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R253,254			RK73GB2A473J	CHIP R	47K	J 1/10W	
R255			RK73GB2A103J	CHIP R	10K	J 1/10W	E4X2E5
R255			RK73GB2A103J	CHIP R	10K	J 1/10W	R1E1E2
R255			RK73GB2A103J	CHIP R	10K	J 1/10W	X1R2E3
R255-258			RK73GB2A103J	CHIP R	10K	J 1/10W	M1M2
R256			RK73GB2A303J	CHIP R	30K	J 1/10W	X1X2
R256			RK73GB2A332J	CHIP R	3.3K	J 1/10W	E1E2E3
R256			RK73GB2A332J	CHIP R	3.3K	J 1/10W	E4E5
R256-258			RK73GB2A103J	CHIP R	10K	J 1/10W	KK1
R256,257			RK73GB2A103J	CHIP R	10K	J 1/10W	K3K4
R257			RK73GB2A103J	CHIP R	10K	J 1/10W	E5
R257,258			RK73GB2A103J	CHIP R	10K	J 1/10W	E4X2
R257,258			RK73GB2A103J	CHIP R	10K	J 1/10W	R1E1E2
R257,258			RK73GB2A103J	CHIP R	10K	J 1/10W	X1R2E3
R259			RK73GB2A103J	CHIP R	10K	J 1/10W	K3K4E5
R260			RK73GB2A104J	CHIP R	100K	J 1/10W	
R261			RK73GB2A103J	CHIP R	10K	J 1/10W	E4M2X2
R261			RK73GB2A103J	CHIP R	10K	J 1/10W	K1R2E3
R262			RK73GB2A103J	CHIP R	10K	J 1/10W	E2M1X1
R262			RK73GB2A103J	CHIP R	10K	J 1/10W	KR1E1
R262			RK73GB2A103J	CHIP R	10K	J 1/10W	K3K4E5
R263			RK73GB2A101J	CHIP R	100	J 1/10W	
R265			RK73GB2A103J	CHIP R	10K	J 1/10W	
R267			RK73GB2A473J	CHIP R	47K	J 1/10W	
R275,276			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R279,280			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R301			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R302			RK73GB2A473J	CHIP R	47K	J 1/10W	
R303			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R304			RK73GB2A681J	CHIP R	680	J 1/10W	
R305			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R306			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R307			RK73GH2A183D	CHIP R	18K	D 1/10W	
R308			RK73GB2A473J	CHIP R	47K	J 1/10W	
R310			RK73GB2A561J	CHIP R	560	J 1/10W	
R311			RK73GB2A105J	CHIP R	1.0M	J 1/10W	
R312			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R313			RK73GB2A105J	CHIP R	1.0M	J 1/10W	

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-101x-xx/112x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R316			RK73GH2A222D	CHIP R	2.2K	D	1/10W	
R317			RK73GB2A822J	CHIP R	8.2K	J	1/10W	
R318			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R319			RK73GH2A681D	CHIP R	680	D	1/10W	
R320-322			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R323,324			RK73GB2A103J	CHIP R	10K	J	1/10W	
R325			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R326			RK73GB2A103J	CHIP R	10K	J	1/10W	
R327-329			RK73GB2A101J	CHIP R	100	J	1/10W	
R331			RK73GH2A333D	CHIP R	33K	D	1/10W	
R332			RK73GB2A361J	CHIP R	360	J	1/10W	
R334			RK73GB2A361J	CHIP R	360	J	1/10W	
R335,336			RK73GB2A303J	CHIP R	30K	J	1/10W	
R337			RK73GB2A100J	CHIP R	10	J	1/10W	
R338			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R339			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R340-342			RK73GB2A101J	CHIP R	100	J	1/10W	
R347			RK73GH2A202D	CHIP R	2.0K	D	1/10W	
R348			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R349			RK73GH2A202D	CHIP R	2.0K	D	1/10W	
R350			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R351			RK73GH2A202D	CHIP R	2.0K	D	1/10W	
R352			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R353-355			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R356			RK73GH2A103D	CHIP R	10K	D	1/10W	
R357			RK73GH2A203D	CHIP R	20K	D	1/10W	
R358			RK73GH2A103D	CHIP R	10K	D	1/10W	
R359			RK73GH2A203D	CHIP R	20K	D	1/10W	
R360			RK73GH2A103D	CHIP R	10K	D	1/10W	
R361			RK73GH2A203D	CHIP R	20K	D	1/10W	
R370-386			RK73GB2A101J	CHIP R	100	J	1/10W	
R388,389			RK73GB2A101J	CHIP R	100	J	1/10W	
R400-403			RK73EB2E100J	CHIP R	10	J	1/4W	
R404			RK73GB2A100J	CHIP R	10	J	1/10W	
R405			RK73GB2A202J	CHIP R	2.0K	J	1/10W	
R410,411			RK73GB2A223J	CHIP R	22K	J	1/10W	
R412			RK73GB2A202J	CHIP R	2.0K	J	1/10W	
R413			RK73GB2A750J	CHIP R	75	J	1/10W	
R414			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R415			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R416-418			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R420			RK73GB2A103J	CHIP R	10K	J	1/10W	
R421			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R422-424			RK73GB2A101J	CHIP R	100	J	1/10W	
R425-430			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R431			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R432-435			RK73GB2A101J	CHIP R	100	J	1/10W	
R436			RK73GB2A751J	CHIP R	750	J	1/10W	
R437			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R438			RK73GB2A101J	CHIP R	100	J	1/10W	
R439			RK73GB2A751J	CHIP R	750	J	1/10W	
R440			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R441			RK73GB2A101J	CHIP R	100	J	1/10W	
R442			RK73GB2A751J	CHIP R	750	J	1/10W	
R443			RK73GB2A102J	CHIP R	1.0K	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R444			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R445-448			RK73GB2A101J	CHIP R	100	J	1/10W	
R449			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R450			RK73GB2A221J	CHIP R	220	J	1/10W	
R451			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R452-457			RK73GB2A101J	CHIP R	100	J	1/10W	
R458			RK73GB2A751J	CHIP R	750	J	1/10W	
R459			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R461,462			RK73GB2A473J	CHIP R	47K	J	1/10W	
R463			RK73FB2B101J	CHIP R	100	J	1/8W	
R464			RK73EB2E101J	CHIP R	100	J	1/4W	
R500			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R503			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R507-515			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R518,519			RK73GB2A223J	CHIP R	22K	J	1/10W	
R520,521			RK73GB2A471J	CHIP R	470	J	1/10W	
R522			RK73GB2A101J	CHIP R	100	J	1/10W	
R523,524			RK73GB2A473J	CHIP R	47K	J	1/10W	
R525-527			RK73GB2A101J	CHIP R	100	J	1/10W	
R528,529			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R532			RK73GB2A221J	CHIP R	220	J	1/10W	
R534			RK73GB2A100J	CHIP R	10	J	1/10W	
R535			RK73GB2A151J	CHIP R	150	J	1/10W	
R536			RK73EB2E750J	CHIP R	75	J	1/4W	
R537,538			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R539,540			RK73GB2A100J	CHIP R	10	J	1/10W	K3K4E5
R541			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R542			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R543			RK73GB2A103J	CHIP R	10K	J	1/10W	
R544			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R550			RK73GB2A104J	CHIP R	100K	J	1/10W	K3K4E5
R551			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R552			RK73GB2A101J	CHIP R	100	J	1/10W	
R553,554			RK73GB2A104J	CHIP R	100K	J	1/10W	K3K4E5
R555			RK73GB2A101J	CHIP R	100	J	1/10W	
R600			RK73GB2A471J	CHIP R	470	J	1/10W	E4M2X2
R600			RK73GB2A471J	CHIP R	470	J	1/10W	K1R2E3
R601			RK73GB2A101J	CHIP R	100	J	1/10W	
R602			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R603			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R604			RK73GB2A361J	CHIP R	360	J	1/10W	
R609,610			RK73GB2A471J	CHIP R	470	J	1/10W	
R611			RK73GB2A914J	CHIP R	910K	J	1/10W	
R612			RK73GB2A162J	CHIP R	1.6K	J	1/10W	
R613			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R616			RK73GH2A182D	CHIP R	1.8K	D	1/10W	
R617			RK73GH2A391D	CHIP R	390	D	1/10W	
R618			RK73GB2A302J	CHIP R	3.0K	J	1/10W	
R630			RK73GB2A473J	CHIP R	47K	J	1/10W	
R637-639			RK73GB2A000J	CHIP R	0.0	J	1/10W	E1E2E3
R637-639			RK73GB2A000J	CHIP R	0.0	J	1/10W	E4R1R2
R637-639			RK73GB2A000J	CHIP R	0.0	J	1/10W	KK1M1
R637-639			RK73GB2A000J	CHIP R	0.0	J	1/10W	M2X1X2
R638,639			RK73GB2A000J	CHIP R	0.0	J	1/10W	K3K4E5
R642			RK73GB2A000J	CHIP R	0.0	J	1/10W	

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-101x-xx/112x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R643			RK73GB2A101J	CHIP R 100 J 1/10W	
R644,645			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R646			RK73GB2A101J	CHIP R 100 J 1/10W	
R647,648			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R649			RK73GB2A101J	CHIP R 100 J 1/10W	
R650			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2E3
R650			RK73GB2A000J	CHIP R 0.0 J 1/10W	E4R1R2
R650			RK73GB2A000J	CHIP R 0.0 J 1/10W	KK1M1
R650			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1X2
R652			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R653			RK73GB2A101J	CHIP R 100 J 1/10W	
R655			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R656			RK73GH2A151D	CHIP R 150 D 1/10W	
R657			RK73GB2A202J	CHIP R 2.0K J 1/10W	K3K4E5
R658			RK73GB2A562J	CHIP R 5.6K J 1/10W	K3K4E5
D2			DAN202U	DIODE	
D3			UDZS6.2B	ZENER DIODE	
D4			EP05Q04	DIODE	
D5			1SR154-400	DIODE	
D101-104			1SS357-F	DIODE	
D312-320		✻	CVS10A120M	VARISTOR	
D322,323		✻	CVS10A120M	VARISTOR	
D324		✻	CVS10A180M	VARISTOR	
D400		✻	CVL10C270M300	VARISTOR	
D401,402		✻	CVS10A120M	VARISTOR	
D403			DAP202U	DIODE	
D404			UDZS4.7B	ZENER DIODE	
D407		✻	CVS10A120M	VARISTOR	
D408		✻	CVL10C270M300	VARISTOR	
D502		✻	CVL10C270M300	VARISTOR	
D503			DA204U	DIODE	
D506			DAP202U	DIODE	
IC1			SI-3033KMS	ANALOGUE IC	
IC10			NJM4565V-ZB	ANALOGUE IC	
IC101,102			LTC3728LEGN	ANALOGUE IC	
IC201		✻	703261YGC320A	MICROCONTROLLER IC	
IC202			S1000N30N4T1G	ANALOGUE IC	
IC203			W05-1260-00	ROM IC	KK1
IC203			W05-1260-00	ROM IC	K3K4
IC203			W05-1261-00	ROM IC	E1E2E3
IC203			W05-1261-00	ROM IC	E4E5
IC203			W05-1262-00	ROM IC	M1M2
IC203			W05-1263-00	ROM IC	X1X2
IC203			W05-1263-00	ROM IC	R1R2
IC205			TC7SET08FU-F	MOS-IC	
IC206			TC7SH08FU-F	MOS-IC	
IC301			RB5P0090M	ANALOGUE IC	
IC303			TC7WH123FU-F	MOS-IC	
IC304			TC7SH04FU-F	MOS-IC	
IC305			MM1234XFBE-E	ANALOGUE IC	
IC400			NJM2505AF-ZB	ANALOGUE IC	
IC401			NJM2794RB2ZB	ANALOGUE IC	
IC402			BU2090FS	MOS-IC	
IC403,404			MM1234XFBE-E	ANALOGUE IC	
IC405			BA7649F	ANALOGUE IC	

Ref. No.	Add	New	Parts No.	Description	Destination
IC406			MM1503-E	ANALOGUE IC	
IC407,408			TC4052BFT	MOS-IC	
IC501			LB1836M-TLM-E	ANALOGUE IC	
IC502			TC7SET04FU-F	MOS-IC	
IC600			TC7WH14FU-F	MOS-IC	
IC601			TC7W34FU-F	MOS-IC	
IC604			TC7WHU04FU-F	MOS-IC	K3K4E5
IC605			NJW1303V-ZB	ANALOGUE IC	
IC606			TC7WH74FU-F	MOS-IC	
IC607			TC7WH157FU-F	MOS-IC	
IC608			TC7SH04FU-F	MOS-IC	
IC609			TC7WH157FU-F	MOS-IC	K3K4E5
IC610			SI-3033LUSNF	ANALOGUE IC	
Q1,2			2SC4081	TRANSISTOR	
Q3			2SA1576A	TRANSISTOR	
Q4			2SC4081	TRANSISTOR	
Q5			2SA1576A	TRANSISTOR	
Q6			2SC4081	TRANSISTOR	
Q7			DTA114EUA	DIGITAL TRANSISTOR	
Q8			DTC114YUA	DIGITAL TRANSISTOR	
Q9			DTA114TUA	DIGITAL TRANSISTOR	
Q10			DTC114YUA	DIGITAL TRANSISTOR	
Q13			2SC4081	TRANSISTOR	
Q14			2SB1184	TRANSISTOR	
Q15,16			2SC4081	TRANSISTOR	
Q17			2SA1576A	TRANSISTOR	
Q19			DTC114YUA	DIGITAL TRANSISTOR	
Q20,21			2SA1576A	TRANSISTOR	
Q22			TPC8110-F	FET	
Q23			2SC4081	TRANSISTOR	
Q24			2SA1576A	TRANSISTOR	
Q25			DTC114YUA	DIGITAL TRANSISTOR	
Q26			2SB1689	TRANSISTOR	
Q31			2SB1184	TRANSISTOR	
Q32			2SC4081	TRANSISTOR	
Q33			2SA1576A	TRANSISTOR	
Q34			2SC4081	TRANSISTOR	
Q35			2SB1184	TRANSISTOR	
Q36			2SC4081	TRANSISTOR	
Q37			2SA1576A	TRANSISTOR	
Q38			2SC4081	TRANSISTOR	
Q43			2SB1184	TRANSISTOR	
Q44			2SC4081	TRANSISTOR	
Q45			2SA1576A	TRANSISTOR	
Q46			2SC4081	TRANSISTOR	
Q101			DTC114YUA	DIGITAL TRANSISTOR	
Q103			DTC144EUA	DIGITAL TRANSISTOR	
Q104,105			HAT2218R-E	DUAL FET	
Q106			DTC144EUA	DIGITAL TRANSISTOR	
Q108			DTC144EUA	DIGITAL TRANSISTOR	
Q109,110			HAT2218R-E	DUAL FET	
Q111			DTC144EUA	DIGITAL TRANSISTOR	
Q201			DTC114EUA	DIGITAL TRANSISTOR	
Q203			DTA114EUA	DIGITAL TRANSISTOR	
Q204			DTC114YUA	DIGITAL TRANSISTOR	

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-101x-xx/112x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q205			DTA114EUA	DIGITAL TRANSISTOR	
Q206			DTC114YUA	DIGITAL TRANSISTOR	
Q207			DTB123YK	DIGITAL TRANSISTOR	
Q301			2SC4081	TRANSISTOR	
Q306-308			2SA1576A	TRANSISTOR	
Q401			2SA1576A	TRANSISTOR	
Q501			DTA114EUA	DIGITAL TRANSISTOR	K3K4E5
Q502			2SA1576A	TRANSISTOR	K3K4E5
Q504			2SA1576A	TRANSISTOR	
Q505			DTC114EUA	DIGITAL TRANSISTOR	K3K4E5
Q506,507			DTC323TU	DIGITAL TRANSISTOR	
Q508			2SC3437-F(Y)	TRANSISTOR	
Q509			DTA114EUA	DIGITAL TRANSISTOR	
Q600			DTA114EUA	DIGITAL TRANSISTOR	E4M2X2
Q600			DTA114EUA	DIGITAL TRANSISTOR	K1R2E3
Q601			DTC114YUA	DIGITAL TRANSISTOR	E4M2X2
Q601			DTC114YUA	DIGITAL TRANSISTOR	K1R2E3
Q602			2SA1576A	TRANSISTOR	
Q604			DTC114YUA	DIGITAL TRANSISTOR	
Q605			DTA114YUA	DIGITAL TRANSISTOR	

VIDEO UNIT (X35-4840-10/4920-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C1,2			CK73DF1E106Z	CHIP C	10UF	Z	
C3-6			CK73GB1H103K	CHIP C	0.010UF	K	
C7,8			CK73GB0J225K	CHIP C	2.2UF	K	
C9			CK73GB1A474K	CHIP C	0.47UF	K	
C10			CK73GB1E183K	CHIP C	0.018UF	K	
C11			CK73GB1H152K	CHIP C	1500PF	K	
C12			CK73GB0J225K	CHIP C	2.2UF	K	
C13			CK73GB1H103K	CHIP C	0.010UF	K	
C14,15			CK73GB1H473K	CHIP C	0.047UF	K	
C16			C93-1383-05	CHIP C	220PF	F	
C17			CK73GB1H103K	CHIP C	0.010UF	K	
C18-20			CK73DF1E106Z	CHIP C	10UF	Z	
C21-24			C93-1283-05	CHIP C	1.0UF	K	
C25			C93-1270-05	CHIP C	3300PF	K	
C26			C93-1273-05	CHIP C	15PF	J	
C27			C93-1278-05	CHIP C	0.018UF	K	
C28			CK73EB1C106K	CHIP C	10UF	K	
C29			CK73GB1H104K	CHIP C	0.10UF	K	
C101			CK73FB0J106K	CHIP C	10UF	K	
C102			CK73GB1H103K	CHIP C	0.010UF	K	
C103			CK73GB1H104K	CHIP C	0.10UF	K	
C104			CK73GB1H103K	CHIP C	0.010UF	K	
C106			CK73FB1E154K	CHIP C	0.15UF	K	
C107			CC73GCH1H102J	CHIP C	1000PF	J	
C108			CK73GB1C224K	CHIP C	0.22UF	K	
C109			CC73GCH1H151J	CHIP C	150PF	J	
C110			CK73EB1E225K	CHIP C	2.2UF	K	
C111			CK73FB1C105K	CHIP C	1.0UF	K	
C112			CE32AU1C220M	CHIP EL	22UF	16WV	
C114			CK73GB1H103K	CHIP C	0.010UF	K	
C116			CK73EB1C106K	CHIP C	10UF	K	
C117			CK73GB1H103K	CHIP C	0.010UF	K	
C120-122			CK73GB1H104K	CHIP C	0.10UF	K	
C123			CC73GCH1H102J	CHIP C	1000PF	J	
C202			CK73DF1E106Z	CHIP C	10UF	Z	
C203			CK73GB1H103K	CHIP C	0.010UF	K	
C204			CC73GCH1H560J	CHIP C	56PF	J	
C205			CK73DF1E106Z	CHIP C	10UF	Z	
C206			CK73GB1H103K	CHIP C	0.010UF	K	
C221			CK73GB1H104K	CHIP C	0.10UF	K	
C222			CC73GCH1H102J	CHIP C	1000PF	J	
C223-225			CK73EB1C106K	CHIP C	10UF	K	
C313			CK73DF1E106Z	CHIP C	10UF	Z	
C314			CK73GB1H104K	CHIP C	0.10UF	K	
C315			CK73GB1H103K	CHIP C	0.010UF	K	
C316			CK73FB0J106K	CHIP C	10UF	K	
C329			CK73EB1C106K	CHIP C	10UF	K	
C332			CK73GB1H103K	CHIP C	0.010UF	K	
C338,339			CK73GB1H104K	CHIP C	0.10UF	K	
C343			CK73EB1E105K	CHIP C	1.0UF	K	
C344,345			CK73FB0J106K	CHIP C	10UF	K	
C346			CK73FB1C105K	CHIP C	1.0UF	K	
C350			CK73FB0J106K	CHIP C	10UF	K	
C351			CK73GB1H104K	CHIP C	0.10UF	K	
C400,401			CC73GCH1H102J	CHIP C	1000PF	J	
C402,403			CK73GB1A105K	CHIP C	1.0UF	K	
C404-412			CK73GB1H104K	CHIP C	0.10UF	K	
C413			CK73FB0J106K	CHIP C	10UF	K	
C414-419			CK73GB1H104K	CHIP C	0.10UF	K	
C421			CK73GB1H104K	CHIP C	0.10UF	K	
C422			CC73GCH1H050C	CHIP C	5.0PF	C	
C423,424			CK73GB1H104K	CHIP C	0.10UF	K	
C425			CK73GB1H103K	CHIP C	0.010UF	K	
C426			CK73FB0J106K	CHIP C	10UF	K	
C427			CK73GB1H103K	CHIP C	0.010UF	K	
C428,429			CK73GB1H104K	CHIP C	0.10UF	K	
C430			CC73GCH1H220J	CHIP C	22PF	J	
C431			CC73GCH1H270J	CHIP C	27PF	J	
C432			CK73GB1H104K	CHIP C	0.10UF	K	
C433			CK73FB1A475K	CHIP C	4.7UF	K	
C434,435			CK73GB1H103K	CHIP C	0.010UF	K	
C436			CK73FB0J106K	CHIP C	10UF	K	
C437-442			CK73GB1H104K	CHIP C	0.10UF	K	
C448			CC73GCH1H102J	CHIP C	1000PF	J	
C452			CK73GB1H104K	CHIP C	0.10UF	K	
C454			CK73GB1H104K	CHIP C	0.10UF	K	
C455			CC73GCH1H101J	CHIP C	100PF	J	
C456			CK73GB1H104K	CHIP C	0.10UF	K	
C457			CK73FB1A475K	CHIP C	4.7UF	K	
C500,501			CK73GB1H103K	CHIP C	0.010UF	K	
C502			CK73FB0J106K	CHIP C	10UF	K	
C600			CK73FB0J106K	CHIP C	10UF	K	
CN1			E41-2642-05	PIN ASSY			
CN102			E41-2359-05	PIN ASSY			
CN300			E41-2608-05	FLAT CABLE CONNECTOR			
CN301			E41-2208-05	FLAT CABLE CONNECTOR			
CN500			E41-2088-05	FLAT CABLE CONNECTOR			
CN600			E41-2613-05	FLAT CABLE CONNECTOR			

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4840-10/4920-10)

Ref. No.	Add	New	Parts No.	Description	Destination
F1			F53-0297-05	FUSE (UL,CSA) 1.6A	
F100			F53-0280-05	FUSE 0.63A	
L1			L33-2316-05	CHOKE COIL	
L2			L19-0802-05	TRANSFORMER FOR CONVERTER	
L100			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)	
L101			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L102,103			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)	
L104,105			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L106			L33-2316-05	CHOKE COIL	
L200			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L300-304			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L305-307			L92-0319-05	CHIP FERRITE	
L308			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L309-312			L92-0319-05	CHIP FERRITE	
L314			L41-8281-15	SMALL FIXED INDUCTOR (0.82U)	
L501			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L600			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
X300		✻	L77-2965-05	CRYSTAL RESONATOR (12.000MHZ)	
R1			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R2,3			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R5			RK73GB2A153J	CHIP R 15K J 1/10W	
R7			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R8			RK73GB2A220J	CHIP R 22 J 1/10W	
R9			RK73GH2A433D	CHIP R 43K D 1/10W	
R10			RK73GB2A220J	CHIP R 22 J 1/10W	
R11			RK73GB2A515J	CHIP R 5.1M J 1/10W	
R12			RK73GH2A513D	CHIP R 51K D 1/10W	
R13			RK73GB2A104J	CHIP R 100K J 1/10W	
R14			RK73GH2A164D	CHIP R 160K D 1/10W	
R15			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R16			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R17			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R18			RK73GH2A563D	CHIP R 56K D 1/10W	
R19			RK73GH2A754D	CHIP R 750K D 1/10W	
R20			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R21-24			RK73GB2A220J	CHIP R 22 J 1/10W	
R25			RK73GH2A471D	CHIP R 470 D 1/10W	
R27			RK73GH2A103D	CHIP R 10K D 1/10W	
R30			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R31			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R32			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R33			RK73GB2A103J	CHIP R 10K J 1/10W	
R34			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R101			RK73GH2A184D	CHIP R 180K D 1/10W	
R102			RK73GH2A163D	CHIP R 16K D 1/10W	
R103			RK73GH2A753D	CHIP R 75K D 1/10W	
R104			RK73GH2A103D	CHIP R 10K D 1/10W	
R105			RK73GB2A473J	CHIP R 47K J 1/10W	
R106			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R110			RK73GB2A754J	CHIP R 750K J 1/10W	
R111			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R113			RK73GB2A100J	CHIP R 10 J 1/10W	
R201			RK73GB2A473J	CHIP R 47K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R202			RK73GB2A223J	CHIP R 22K J 1/10W	
R206			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R207			RK73GH2A222D	CHIP R 2.2K D 1/10W	
R208			RK73GH2A123D	CHIP R 12K D 1/10W	
R209,210			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R212			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R214,215			RK73GB2A470J	CHIP R 47 J 1/10W	
R216			RK73GB2A101J	CHIP R 100 J 1/10W	
R220			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R221			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R222			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R223,224			RK73GB2A473J	CHIP R 47K J 1/10W	
R300-302			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R303,304			RK73EB2E101J	CHIP R 100 J 1/4W	
R305,306			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R307-309			RK73GB2A101J	CHIP R 100 J 1/10W	
R311			RK73GB2A101J	CHIP R 100 J 1/10W	
R316,317			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R356			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R389			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R390-395			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R400,401			RK73GB2A101J	CHIP R 100 J 1/10W	
R405-407			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R409			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R415			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R416			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R418-420			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R421			RK73GB2A820J	CHIP R 82 J 1/10W	
R422			RK73GB2A300J	CHIP R 30 J 1/10W	
R423-431			RK73GB2A101J	CHIP R 100 J 1/10W	
R435			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R436			RK73GB2A221J	CHIP R 220 J 1/10W	
R446			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R448			RK73GB2A473J	CHIP R 47K J 1/10W	
R449			RK73GB2A101J	CHIP R 100 J 1/10W	
R455			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R456,457			RK73GB2A330J	CHIP R 33 J 1/10W	
R459,460			RK73GB2A330J	CHIP R 33 J 1/10W	
R461			RK73GB2A103J	CHIP R 10K J 1/10W	
R462-464			RK73GB2A330J	CHIP R 33 J 1/10W	
R483			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R500,501			RK73GB2A333J	CHIP R 33K J 1/10W	
R504-507			RK73EB2E100J	CHIP R 10 J 1/4W	
R600-603			RK73EB2E101J	CHIP R 100 J 1/4W	
R604			RK73EB2E100J	CHIP R 10 J 1/4W	
R605			RK73EB2E121J	CHIP R 120 J 1/4W	
R606			RK73EB2E101J	CHIP R 100 J 1/4W	
R607			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R608			RK73GB2A512J	CHIP R 5.1K J 1/10W	
R609			RK73GB2A103J	CHIP R 10K J 1/10W	
R610			RK73GB2A303J	CHIP R 30K J 1/10W	
R611-613			RK73FB2B681J	CHIP R 680 J 1/8W	
R614			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R620			RK73GB2A101J	CHIP R 100 J 1/10W	
R621			RK73GB2A272J	CHIP R 2.7K J 1/10W	

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4840-10/4920-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R623-634			RK73GB2A000J	CHIP R 0.0 J 1/10W	
VR200			R32-0328-05	SEMI FIXED VARIABLE RESISTOR	
D1			UDZS5.6B	ZENER DIODE	
D2		✻	CVS10A120M	VARISTOR	
D3,4			1SS355	DIODE	
D5			UDZS5.6B	ZENER DIODE	
D6			MA2S784-F	DIODE	
D7			UDZS5.6B	ZENER DIODE	
D8,9			DA204U	DIODE	
D100			EP05Q06	DIODE	
D101-103			EP05Q04	DIODE	
D500-503			UDZS6.2B	ZENER DIODE	
D600-603		✻	CVS10A120M	VARISTOR	
D604		✻	CVS10A180M	VARISTOR	
D605,606		✻	CVS10A120M	VARISTOR	
IC1			OZ964ISN-C-SN	ANALOGUE IC	
IC100			LT1947-PBF	ANALOGUE IC	
IC102			TC7WH123FU-F	MOS-IC	
IC103			TC7SH04FU-F	MOS-IC	
IC200			TA75W558FU-F	ANALOGUE IC	
IC300			S-1112B25MCG	ANALOGUE IC	
IC302		✻	25L2005MI5Y2	ROM IC	
IC304		✻	MST7988LA-ALF	MOS-IC	
IC305			TC7WH34FU-F	MOS-IC	
Q1			2SC4081	TRANSISTOR	
Q2,3			SI5504DC-E3	DUAL FET	
Q4			2SC4081	TRANSISTOR	
Q5			DTC114YUA	DIGITAL TRANSISTOR	
Q6			2SA1576A	TRANSISTOR	
Q7			2SC4081	TRANSISTOR	
Q200			2SC4097	TRANSISTOR	
Q202			2SA1577	TRANSISTOR	
Q203			UMZ1N	TRANSISTOR	
Q300			DTC114YUA	DIGITAL TRANSISTOR	
Q301			DTA123JUA	DIGITAL TRANSISTOR	
Q500			DTA123JUA	DIGITAL TRANSISTOR	
Q501			DTC123JUA	DIGITAL TRANSISTOR	
Q502			DTA123JUA	DIGITAL TRANSISTOR	
Q503			DTC123JUA	DIGITAL TRANSISTOR	
Q504			DTC114YUA	DIGITAL TRANSISTOR	

DIGITAL I/O UNIT (X88-2020-18/19)

Ref. No.	Add	New	Parts No.	Description	Destination
C100			CC73HCH1H101J	CHIP C 100PF J	E2M1X1
C100			CC73HCH1H101J	CHIP C 100PF J	KR1E1
C100			CC73HCH1H101J	CHIP C 100PF J	K3K4E5
C100,101			CC73HCH1H101J	CHIP C 100PF J	E4M2X2
C100,101			CC73HCH1H101J	CHIP C 100PF J	K1R2E3
C102-105			CK73HB1A104K	CHIP C 0.10UF K	
C106			CK73GB0J106M	CHIP C 10UF M	
C107-110			CK73HB1A104K	CHIP C 0.10UF K	
C112			CK73EB0J226K	CHIP C 22UF K	
C113			C92-1983-05	ELECTRO 100UF 4WV	
C114-124			CK73HB1A104K	CHIP C 0.10UF K	
C125			CC73HCH1H220J	CHIP C 22PF J	
C126-130			CK73HB1A104K	CHIP C 0.10UF K	
C133,134			CK73GB0J106M	CHIP C 10UF M	
C135			CK73HB1A104K	CHIP C 0.10UF K	
C138,139			CC73HCH1H100D	CHIP C 10PF D	
C140			CK73HB0J105K	CHIP C 1.0UF K	E4M2X2
C140			CK73HB0J105K	CHIP C 1.0UF K	K1R2E3
C142			CE32BN0J221M	CHIP EL 220UF 6.3WV	
C143			CK73HB0J105K	CHIP C 1.0UF K	
C144			CK73HB1A104K	CHIP C 0.10UF K	
C148			CE32BN0J221M	CHIP EL 220UF 6.3WV	E4M2X2
C148			CE32BN0J221M	CHIP EL 220UF 6.3WV	K1R2E3
C149			CK73HB1A104K	CHIP C 0.10UF K	
C153			CK73HB0J105K	CHIP C 1.0UF K	
C154			CK73HB1A104K	CHIP C 0.10UF K	
C200			CC73HCH1H220J	CHIP C 22PF J	
C201			CK73HB1A104K	CHIP C 0.10UF K	
C202			CC73HCH1H220J	CHIP C 22PF J	
C203,204			CK73HB1A104K	CHIP C 0.10UF K	
C217-226			CK73HB1A104K	CHIP C 0.10UF K	
C227,228			CK73GB0J106M	CHIP C 10UF M	
C230,231			CK73HB1H102K	CHIP C 1000PF K	
C233-236			CK73HB1A104K	CHIP C 0.10UF K	
C244			CK73GB0J106M	CHIP C 10UF M	
C247			CK73HB1H102K	CHIP C 1000PF K	
C264			CK73HB1A104K	CHIP C 0.10UF K	
C275			CK73GB0J106M	CHIP C 10UF M	
C309-312			CK73HB1A104K	CHIP C 0.10UF K	
C314,315			CK73GB0J106M	CHIP C 10UF M	
C316-318			CK73HB1A104K	CHIP C 0.10UF K	
C322-324			CK73HB1A104K	CHIP C 0.10UF K	
C326,327			CK73GB0J106M	CHIP C 10UF M	
C329			CC73HCH1H270J	CHIP C 27PF J	
C331			CK73GB0J106M	CHIP C 10UF M	
C332			CK73HB1A104K	CHIP C 0.10UF K	
C336			CK73GB0J106M	CHIP C 10UF M	
C337,338			CK73HB1H152K	CHIP C 1500PF K	
C340,341			CC73HCH1H331J	CHIP C 330PF J	
C342			CK73HB1E103K	CHIP C 0.010UF K	
C456			CK73EB1A106K	CHIP C 10UF K	
C460			CK73HB1A104K	CHIP C 0.10UF K	
C464			CK73HB1C473K	CHIP C 0.047UF K	
C468			CK73GB0J106M	CHIP C 10UF M	
C482			CK73GB1H222K	CHIP C 2200PF K	
C601,602			CC73HCH1H470J	CHIP C 47PF J	
C700-713			CK73HB1H222K	CHIP C 2200PF K	
C715			CK73HB1A104K	CHIP C 0.10UF K	
C800			CK73HB1H222K	CHIP C 2200PF K	
C801,802			CK73HB1H102K	CHIP C 1000PF K	
C803,804			CK73HB1H222K	CHIP C 2200PF K	
C805			CK73HB1H102K	CHIP C 1000PF K	
CN101			E41-2839-05	PIN ASSY	
CN328			E41-2237-05	FLAT CABLE CONNECTOR	
L101,102			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L103-106			L92-0321-05	CHIP FERRITE	E4M2X2
L103-106			L92-0321-05	CHIP FERRITE	K1R2E3

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

DIGITAL I/O UNIT (X88-2020-18/19)

Ref. No.	Add	New	Parts No.	Description	Destination
L103,104			L92-0321-05	CHIP FERRITE	E2M1X1
L103,104			L92-0321-05	CHIP FERRITE	KR1E1
L103,104			L92-0321-05	CHIP FERRITE	K3K4E5
L200			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L203-205			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L212			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L301,302			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L303			L41-6805-33	SMALL FIXED INDUCTOR (68U)	
L304,305			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
X100			L77-2941-05	CRYSTAL RESONATOR (14.7456MHZ)	
X202			L77-2917-15	CRYSTAL RESONATOR (32.768KHZ)	
CP104-109			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP117-127			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP128-134			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP135-138			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP139-142			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP143-146			RK74HB1J680J	CHIP-COM 68 J 1/16W	
CP147-154			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP155-160			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP200-203			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP204-207			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R1,2			RK73HB1J473J	CHIP R 47K J 1/16W	
R3-5			RK73HB1J220J	CHIP R 22 J 1/16W	
R6			RK73HB1J473J	CHIP R 47K J 1/16W	
R7			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R8			RK73HB1J473J	CHIP R 47K J 1/16W	
R9,10			RK73HB1J220J	CHIP R 22 J 1/16W	
R12			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R13			RK73HB1J473J	CHIP R 47K J 1/16W	
R14			RK73HB1J561J	CHIP R 560 J 1/16W	
R15,16			RK73FB2B220J	CHIP R 22 J 1/8W	
R17,18			RK73HB1J153J	CHIP R 15K J 1/16W	
R24			RK73HB1J220J	CHIP R 22 J 1/16W	
R29			RK73HB1J473J	CHIP R 47K J 1/16W	
R30			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R31			RK73HB1J473J	CHIP R 47K J 1/16W	E2M1X1
R31			RK73HB1J473J	CHIP R 47K J 1/16W	KR1E1
R31			RK73HB1J473J	CHIP R 47K J 1/16W	K3K4E5
R32			RK73HB1J472J	CHIP R 4.7K J 1/16W	E4M2X2
R32			RK73HB1J472J	CHIP R 4.7K J 1/16W	K1R2E3
R33			RK73HB1J473J	CHIP R 47K J 1/16W	
R34-37			RK73FB2B270J	CHIP R 27 J 1/8W	
R104			RK73HB1J330J	CHIP R 33 J 1/16W	
R105			RK73HB1J103J	CHIP R 10K J 1/16W	
R107-109			RK73HB1J103J	CHIP R 10K J 1/16W	
R112			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R115			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R116			RK73HB1J103J	CHIP R 10K J 1/16W	
R118			RK73HB1J103J	CHIP R 10K J 1/16W	
R121			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R123			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R124			RK73HB1J473J	CHIP R 47K J 1/16W	
R126			RK73HB1J473J	CHIP R 47K J 1/16W	
R129			RK73HB1J222J	CHIP R 2.2K J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
R130-132			RK73HB1J220J	CHIP R 22 J 1/16W	
R134			RK73HB1J220J	CHIP R 22 J 1/16W	
R137			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R139			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R140			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R141,142			RK73FB2B220J	CHIP R 22 J 1/8W	
R145,146			RK73HB1J153J	CHIP R 15K J 1/16W	
R147			RK73HB1J220J	CHIP R 22 J 1/16W	
R148			RK73HB1J473J	CHIP R 47K J 1/16W	
R149			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R150			RK73HB1J220J	CHIP R 22 J 1/16W	
R153			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R157-163			RK73HB1J220J	CHIP R 22 J 1/16W	
R164,165			RK73HB1J470J	CHIP R 47 J 1/16W	
R166-169			RK73HB1J220J	CHIP R 22 J 1/16W	
R170,171			RK73HB1J330J	CHIP R 33 J 1/16W	
R172,173			RK73HB1J680J	CHIP R 68 J 1/16W	
R174,175			RK73HB1J470J	CHIP R 47 J 1/16W	
R176			RK73HB1J220J	CHIP R 22 J 1/16W	
R177-192			RK73HB1J473J	CHIP R 47K J 1/16W	
R193-198			RK73HB1J220J	CHIP R 22 J 1/16W	
R199			RK73HB1J473J	CHIP R 47K J 1/16W	
R200			RK73HB1J330J	CHIP R 33 J 1/16W	
R201			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R202			RK73HB1J106J	CHIP R 10M J 1/16W	
R203			RK73HB1J334J	CHIP R 330K J 1/16W	
R212,213			RK73HB1J100J	CHIP R 10 J 1/16W	
R219-221			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R223			RK73HB1J473J	CHIP R 47K J 1/16W	
R227			RK73HB1J100J	CHIP R 10 J 1/16W	
R248-250			RK73HB1J473J	CHIP R 47K J 1/16W	
R255			RK73HH1J104D	CHIP R 100K D 1/16W	
R258-260			RK73HB1J473J	CHIP R 47K J 1/16W	
R265-271			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R273			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R276			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R284-287			RK73HB1J473J	CHIP R 47K J 1/16W	
R291			RK73HB1J330J	CHIP R 33 J 1/16W	
R292-295			RK73HB1J473J	CHIP R 47K J 1/16W	
R296			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R297			RK73HB1J103J	CHIP R 10K J 1/16W	
R304,305			RK73HB1J103J	CHIP R 10K J 1/16W	
R308			RK73HB1J103J	CHIP R 10K J 1/16W	
R310			RK73HB1J103J	CHIP R 10K J 1/16W	
R316			RK73HB1J473J	CHIP R 47K J 1/16W	
R320-322			RK73HB1J103J	CHIP R 10K J 1/16W	
R324,325			RK73HB1J103J	CHIP R 10K J 1/16W	
R326,327			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R328,329			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R332,333			RK73HB1J151J	CHIP R 150 J 1/16W	
R438			RK73HB1J103J	CHIP R 10K J 1/16W	
R440			RK73HB1J103J	CHIP R 10K J 1/16W	
R445			RK73HB1J473J	CHIP R 47K J 1/16W	E2M1X1
R445			RK73HB1J473J	CHIP R 47K J 1/16W	KR1E1
R445			RK73HB1J473J	CHIP R 47K J 1/16W	K3K4E5

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

DIGITAL I/O UNIT (X88-2020-18/19)

Ref. No.	Add	New	Parts No.	Description				Destination
R458,459			RK73HB1J473J	CHIP R	47K	J	1/16W	
R461			RK73HB1J473J	CHIP R	47K	J	1/16W	
R467			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R481,482			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R485-487			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R502,503			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R505-507			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R509			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R522			RK73HB1J680J	CHIP R	68	J	1/16W	
R523			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R524			RK73HB1J330J	CHIP R	33	J	1/16W	
R600,601			RK73HB1J220J	CHIP R	22	J	1/16W	
R602,603			RK73HB1J153J	CHIP R	15K	J	1/16W	
R701			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R703			RK73GB2A206J	CHIP R	20M	J	1/10W	
R705			RK73HB1J331J	CHIP R	330	J	1/16W	
D102,103			AVRL1613R3FTA	VARISTOR				
D104,105			IMSA-6802-E	SURGE ABSORBER				
D106,107			AVRL1613R3FTA	VARISTOR				E4M2X2
D106,107			AVRL1613R3FTA	VARISTOR				K1R2E3
D108,109			IMSA-6802-E	SURGE ABSORBER				E4M2X2

Ref. No.	Add	New	Parts No.	Description	Destination
D108,109			IMSA-6802-E	SURGE ABSORBER	K1R2E3
D300			DA204U	DIODE	
IC100			MIC2005-05YM6	MOS-IC	E2M1X1
IC100			MIC2005-05YM6	MOS-IC	KR1E1
IC100			MIC2005-05YM6	MOS-IC	K3K4E5
IC100,101			MIC2005-05YM6	MOS-IC	E4M2X2
IC100,101			MIC2005-05YM6	MOS-IC	K1R2E3
IC104			TC7S86FU-F	MOS-IC	
IC105			SI-3018KM	ANALOGUE IC	
IC106			-	MICROPROCESSOR IC	
IC108			TC7SH04FU-F	MOS-IC	
IC200			TC7WHU04FU-F	MOS-IC	
IC201			TC74LCX245FT	MOS-IC	
IC202,203			K4S561632HUI7	DRAM IC	
IC205			TC74LCX245FT	MOS-IC	
IC207			341S2094	MICROPROCESSOR IC	
IC211		✻	DW128F70NF8Y9	ROM IC	
IC301			WM8728SEDSR	ANALOGUE IC	
IC302			BH7240AKV	MOS-IC	
IC305			NJM2100V-ZB	ANALOGUE IC	
IC332			NJM2864F05-ZB	ANALOGUE IC	

K: DDX7019 **K1**: DDX8019 **K3**: DNX7100 **K4**: DNX710EX (North America)
E1: DDX7029 **E2**: DDX7029Y **E3**: DDX8029 **E4**: DDX8029Y **E5**: DNX7200 (Europe)
R1: DDX7039 **R2**: DDX8039 (Latin America) **X1**: DDX7039 **X2**: DDX8039 (Australia)
M1: DDX7039 **M2**: DDX8039 (Other Areas)

⚠Indicates safety critical components.

DANGER:
Please do not look at the laser beam directly during repair or operation check.