1. SPECIFICATIONS

1. General

System ..... Compact disc digital audio system
Power requirements ..... AC 120 V, 60 Hz (KUCXJ type)
AC 220 V to 240V, 50/60 Hz (WYXJ5 type)
AC 110 V to 240V, 50/60 Hz (TLFXJ type)
Power consumption ..... 28 W (KUCXJ type)
27 W (WYXJ5 type)
27 W (TLFXJ type)
Operating temperature ..... +5 ºC to +35 ºC
Operating humidity ..... 5 % to 85 %
(There should be no condensation of moisture.)
Weight ..... 4.2 kg (9.26 lb)
Dimensions ..... 320 (W) x 370 (D) x 105 (H) mm
12 - 5/8 (W) x 14 - 9/16 (D) x 4 - 1/8 (H) in

2. Audio section

Frequency response ..... 4 Hz to 20 kHz
Signal-to-noise ratio ..... 115 dB or more (JEITA)
Distortion ..... 0.006 % (JEITA)

3. Accessories

- Operating instructions 1
- Power cord (KUCXJ and WYXJ5 types) 1
- Power cord (TLFXJ type) 2
- Audio cable 1
- Control cord 1
- Forced eject pin
  (housed in a groove in the bottom panel) 1
- SD memory card 1
- Limited warranty (KUCXJ only)..... 1

NOTE:
Specifications and design are subject to possible modification without notice.

Accessories

Audio Cable
(VDE1064) L=1.5m

Control Cord
(XDE3063) L=1 m

Power Cord
(KUCXJ type : ADG7021)
(WYXJ5 : ADG1154)
(TLFXJ type : ADG1154, ADG7097)



Forced Eject Pin
(DEX1013)

SD Memory Card
(DWX2622)

AC power cord for TLFXJ type

The type of cord which can be used depends on the power voltage in each region or country. Please make sure you use the correct cord due to the possibility of fire or other hazard if used incorrectly (see below).

AC power cord and converter plug use

Region	Plug type
ADG1154 For European type region **Caution** Do not use this power cord set in Taiwan.	 **European two-pin plug**
ADG7097 For Taiwan exclusively **Caution** For use in Taiwan only. In other areas, please do not use.	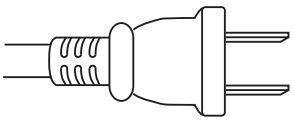 **Taiwanese two-pin flat-bladed plug**

2. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

2.1 PACKING SECTION

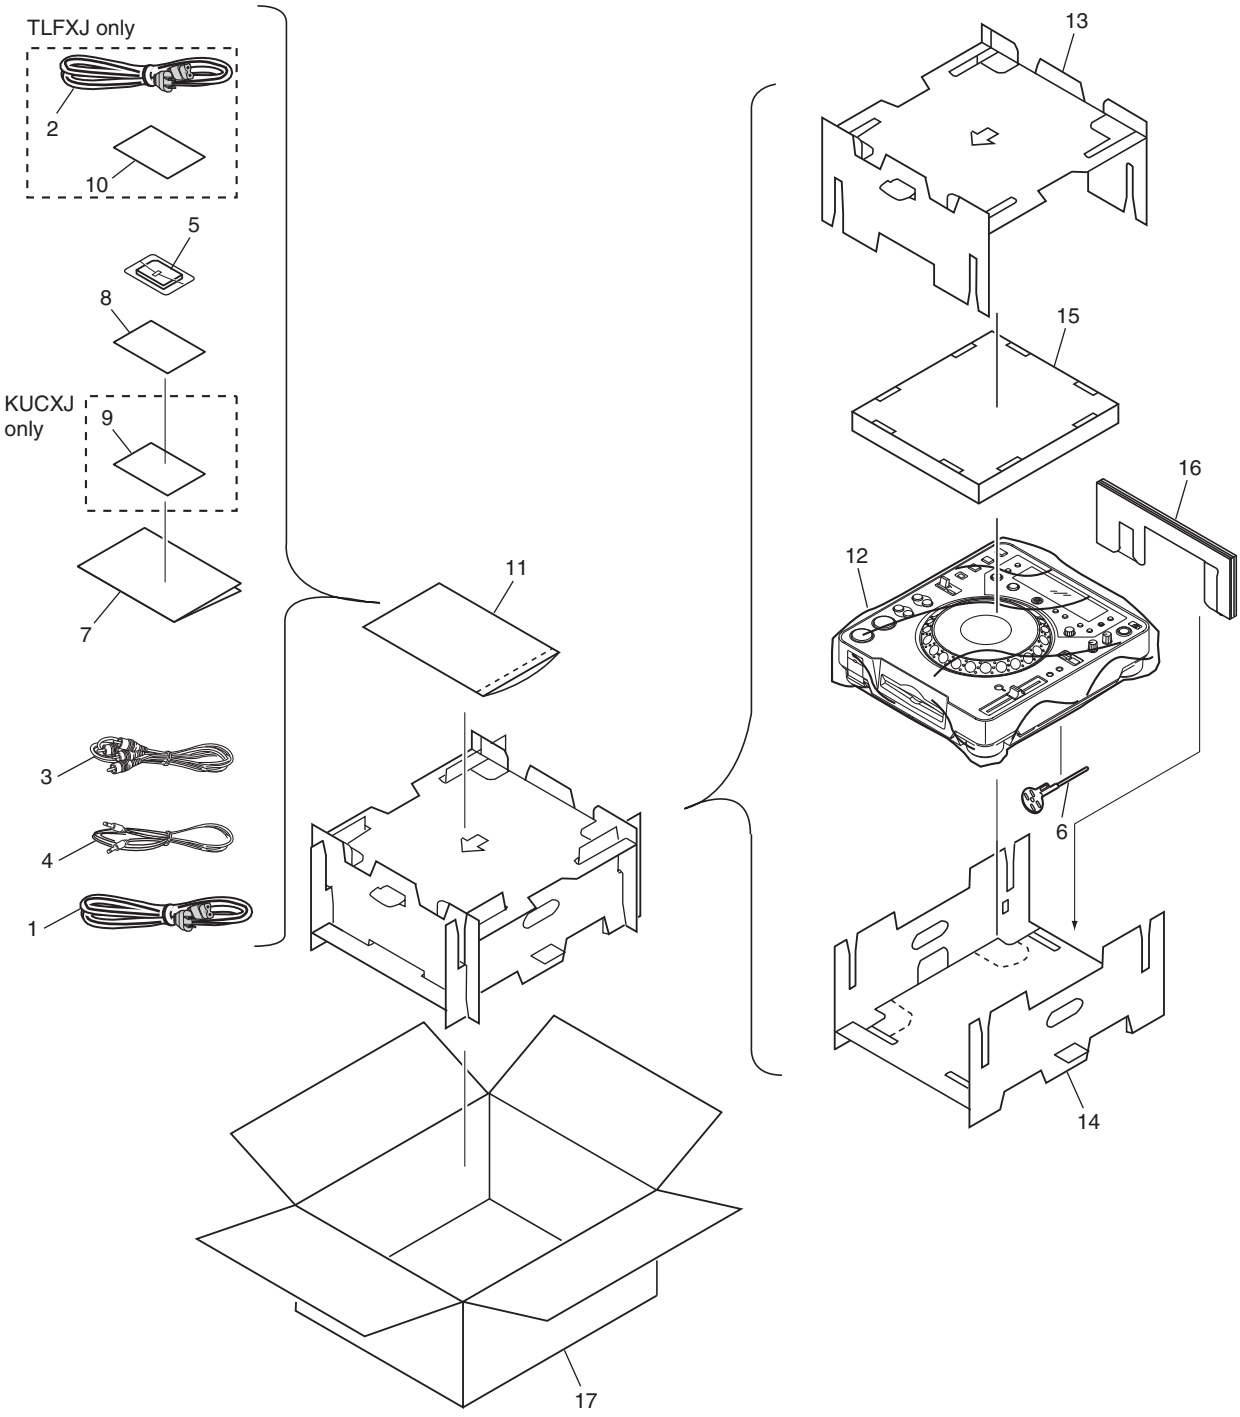

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table (2)
⚠	2	Power Cord	See Contrast table (2)
	3	Audio Cable (L = 1.5 m)	VDE1064
	4	Control Cord (L = 1 m)	XDE3063
	5	SD Memory Card	DWX2622
	6	Forced Eject Pin	DEX1013
	7	Operating Instructions	See Contrast table (2)
NSP	8	User Seat	DRM1262
NSP	9	Limited Warranty	See Contrast table (2)
	10	Caution Card SB	See Contrast table (2)
NSP	11	Polyethylene Bag (0.06 x 230 x 340)	AHG7117
	12	Packing Sheet	AHG7010
	13	Pad (A)	DHA1533
	14	Pad (B)	DHA1534
	15	Pad (C)	DHA1535
	16	Pad (D)	DHA1536
	17	Packing Case	See Contrast table (2)

(2) CONTRAST TABLE

CDJ-1000MK3/KUCXJ, WYXJ5 and TLFXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-1000MK3/KUCXJ	CDJ-1000MK3/WYXJ5	CDJ-1000MK3/TLFXJ
⚠	1	Power Cord	ADG7021	ADG1154	ADG1154
⚠	2	Power Cord	Not used	Not used	ADG7097
	7	Operating Instructions (English)	DRB1397	Not used	Not used
	7	Operating Instructions (English/French/German/Italian/Duch/Spanish)	Not used	DRB1396	Not used
	7	Operating Instructions (English/ Spanish/ Chinese)	Not used	Not used	DRB1398
NSP	9	Limited Warranty	ARY7043	Not used	Not used
	10	Caution Card SD	Not used	Not used	ARM7064
	17	Packing Case	DHG2576	DHG2575	DHG2577

2.2 EXTERIOR SECTION

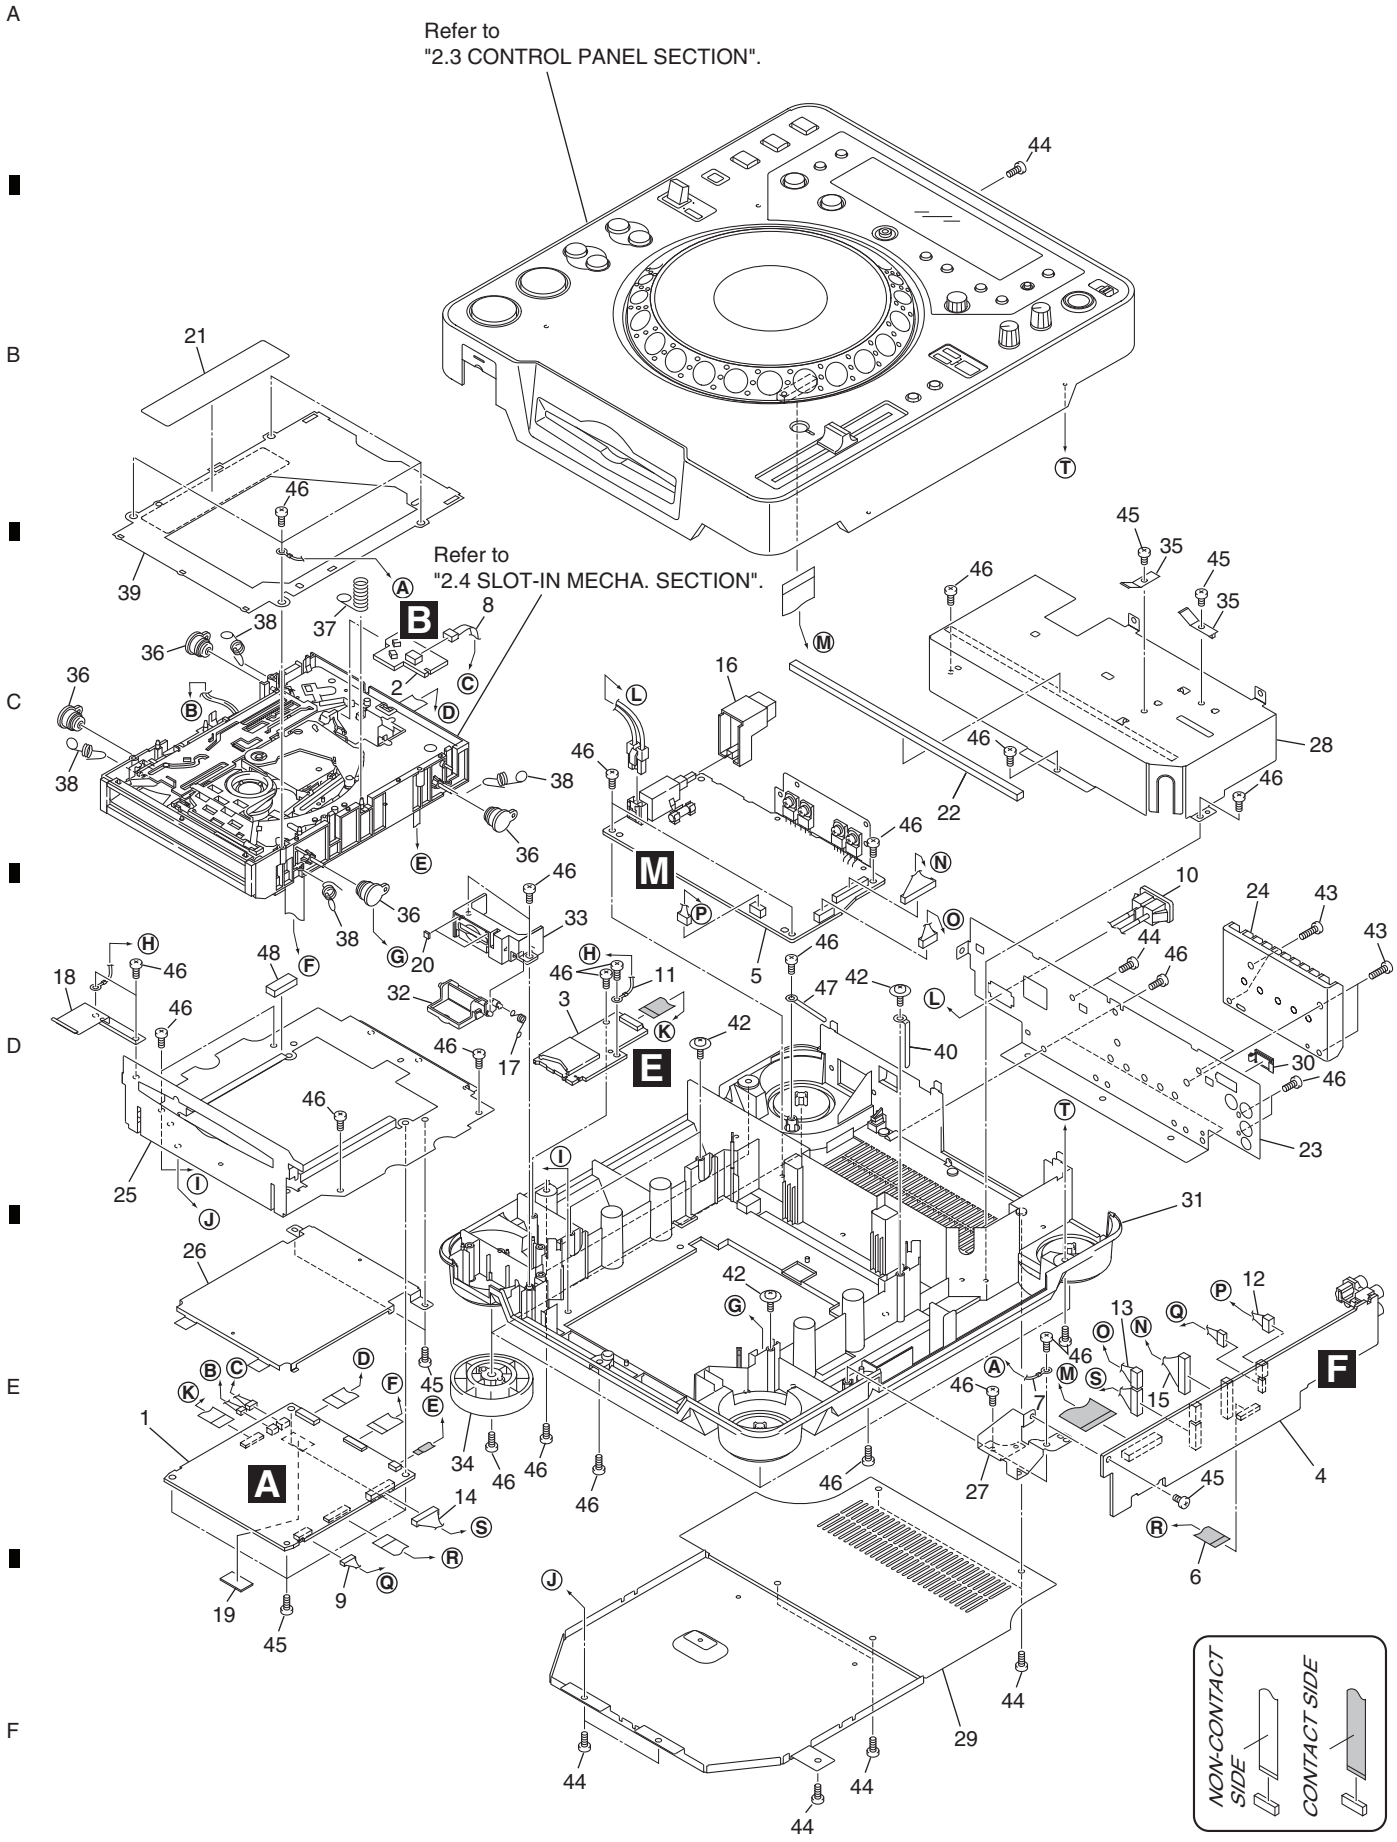

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN Assy	DWG1591
	2	SLMB Assy	DWS1366
	3	SDCB Assy	DWX2558
	4	MJCB Assy	DWG1605
⚠	5	SW POWER SUPPLY Assy	DWR1409
	6	15P Flexible Cable	DDD1301
	7	Earth Lead Unit/300V	DDF1032
	8	Connector Assy 3P	DKP3751
	9	Connector Assy 6P	DKP3752
⚠	10	Inlet Assy	See Contrast table (2)
	11	Earth Lead Unit/300V	PDF1104
	12	Connector Assy	PF04PP-Q12
	13	Connector Assy	PF06PP-Q15
	14	Connector Assy	PF09PP-B12
	15	Connector Assy	PF11EE-R15
	16	Power Button	DAC2314
	17	Door Spring	DBH1565
	18	Card Spring	DBK1295
NSP	19	Silicone Sheet D5 L	DEB1456
	20	Door Cushion	DEB1780
	21	Laser Caution	See Contrast table (2)
	22	Dust Guard	DEC2939
NSP	23	Rear Panel	See Contrast table (2)
	24	Heatsink	DNG1099
	25	PCB Stay	DNH2711
	26	Shield Case	DNH2712
	27	Earth Plate C	DNH2715
	28	Shield Box	DNH2728
	29	Bottom Plate	See Contrast table (2)
	30	Blind Cap	DNK4218
	31	Chassis	DNK4553
	32	Card Door	DNK4554
	33	Card Holder	DNK4555
	34	Insulator Assy	DXA2092
	35	Earth Plate	VBK1070
	36	Damper	CNV6011
	37	Earth Spring	DBH1398
	38	Float Spring G5	DBH1494
	39	Mecha. Plate	DNH2339
	40	Cord Clamper	RNH-184
	41	Binder (SKB-90BK)	ZCA-SKB90BK
	42	DM Screw	DBA1260
	43	Screw	BBT30P100FTB
	44	Screw	BBZ30P060FTB
	45	Screw	BBZ30P060FTC
	46	Screw	BPZ30P080FTB
NSP	47	Cord Clamper (069Z)	ZCB-069Z
	48	FFC Guard	DEC2586

(2) CONTRAST TABLE

CDJ-1000MK3/KUCXJ, WYXJ5 and TLFXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-1000MK3/KUCXJ	CDJ-1000MK3/WYXJ5	CDJ-1000MK3/TLFXJ
⚠	10	Inlet Assy	DKP3754	DKP3753	DKP3753
	21	Laser Caution (7L)	DRW2308	DRW2308	Not used
	21	Laser Caution	Not used	Not used	DRW2248
NSP	23	Rear Panel	DNC1765	DNC1758	DNC1766
	29	Bottom Plate	DNH2710	DNH2710	DNH2732

2.3 CONTROL PANEL SECTION

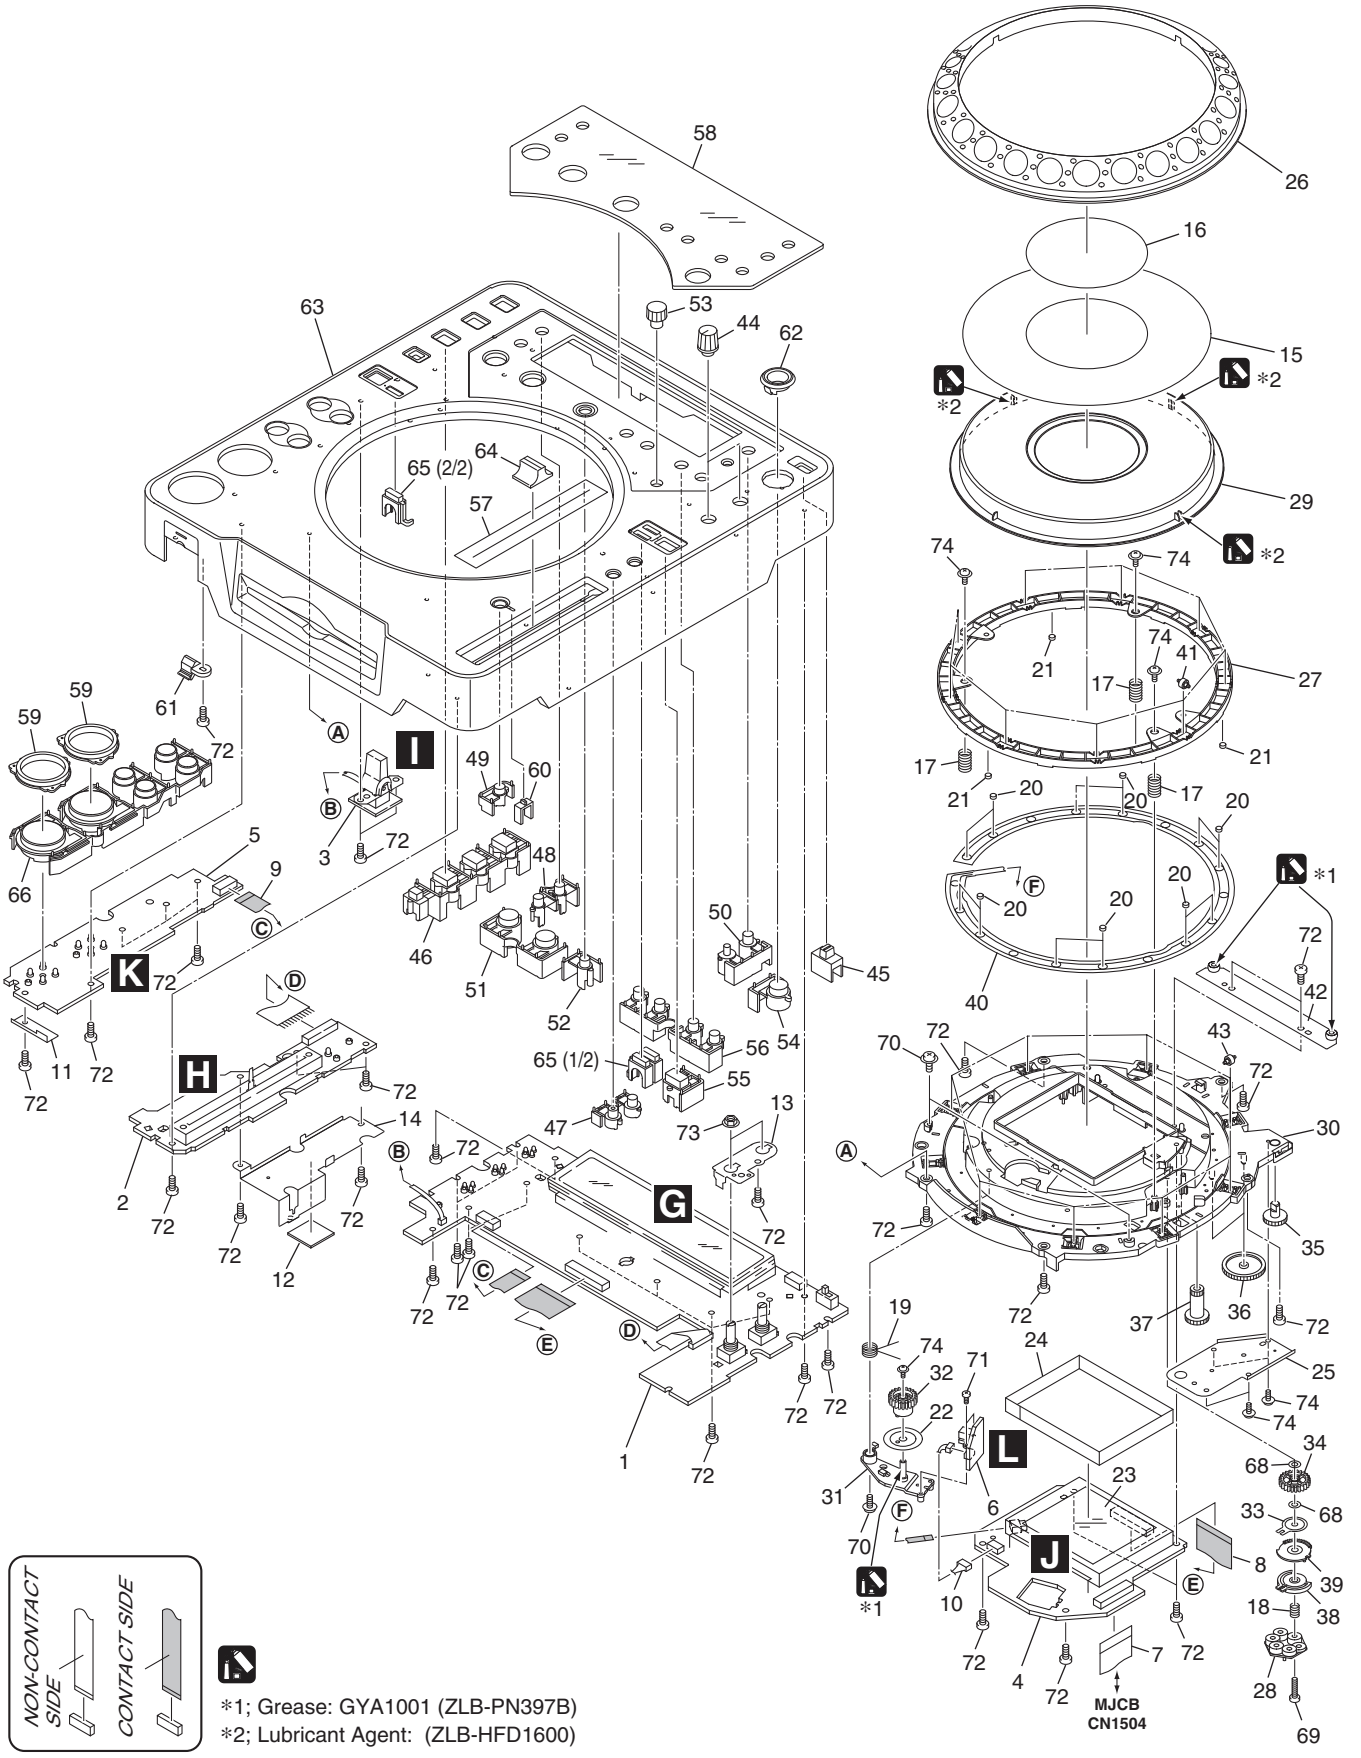

CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MFLB Assy	DWG1606
	2	SLDB Assy	DWS1367
	3	RSWB Assy	DWS1368
	4	JFLB Assy	DWG1602
	5	KSWB Assy	DWS1365
	6	JOGB Assy	DWG1603
	7	22P Flexible Cable	DDD1302
	8	25P Flexible Cable	DDD1303
	9	10P Flexible Cable	DDD1304
	10	Connector Assy	PF04PP-B07
	11	LED Guard	DEC2932
	12	Protect Cushion	DEC2938
	13	VR Stay	DNF1663
	14	Earth Plate P	DNH2714
	15	JOG Plate	DAH2052
	16	JOG Panel	DAH2182
	17	SW Spring 25	DBH1514
	18	Gear Spring 200	DBH1525
	19	Arm Spring	DBH1566
	20	SW Cushion HH48/2	DEC2538
	21	Ring Cushion L24/2.0	DEC2958
	22	Encoder Plate	DEC2889
	23	Protect Sheet	DEC2945
	24	FL Sheet	DEC2946
	25	Gear Plate	DNH2713
	26	JOG B	DNK4068
	27	SW Ring	DNK4070
	28	Adjust Plate	DNK4178
	29	JOG A	DNK4556
	30	JOG Holder 1000	DNK4558
	31	Gear Arm	DNK4559
	32	Gear	DNK4560
	33	Smoother	DNK4561
	34	Gear A	DNK4562
	35	Joint Gear 1	DNK4563
	36	Joint Gear 2	DNK4564
	37	Joint Gear 3	DNK4565
	38	Compressor Plate	DNK4566
	39	Cam Plate	DNK4567
	40	Sheet SW	DSX1065
	41	Roller A Assy	DXB1825
	42	JOG Stay Assy	DXB1876
	43	Roller B Asssy	DXB1877
	44	Rotary Knob C	DAA1194
	45	Slide SW Knob	DAC1926

Mark	No.	Description	Part No.
	46	Set Knob (HS)	DAC1986
	47	Set Knob (MT)	DAC1987
	48	Set Knob (TIME)	DAC1991
	49	Tempo Reset Knob	DAC1993
	50	Set Knob (MEMO)	DAC1994
	51	Set Knob (LOOP)	DAC1995
	52	Re-Loop Button	DAC2347
	53	Adjust Knob	DAC2350
	54	Eject Knob	DAC2365
	55	Mode Select Knob	DAC2366
	56	Set Knob (SC)	DAC2368
	57	Slide Sheet 1C	DAH2404
	58	Display Panel	DAH2435
	59	Ring Lens	DNK3880
	60	Tempo Lens	DNK3882
	61	Card Lens	DNK3885
	62	Eject Guard	DNK3958
	63	Control Panel	DNK4568
	64	Slide Knob	DNK4656
	65	Mode Lens	DNK4701
	66	Set Knob (PLAY) Assy	DXB1909
	67	•••••	
	68	Washer	WA52D120D25
	69	Screw	BPZ20P100FTC
	70	Screw	IPZ30P100FTC
	71	Screw	BPZ20P060FTC
	72	Screw	BPZ30P080FTB
	73	Flange Nut M9	DBN1008
	74	Screw	DBA1265

2.4 SLOT-IN MECHA. SECTION

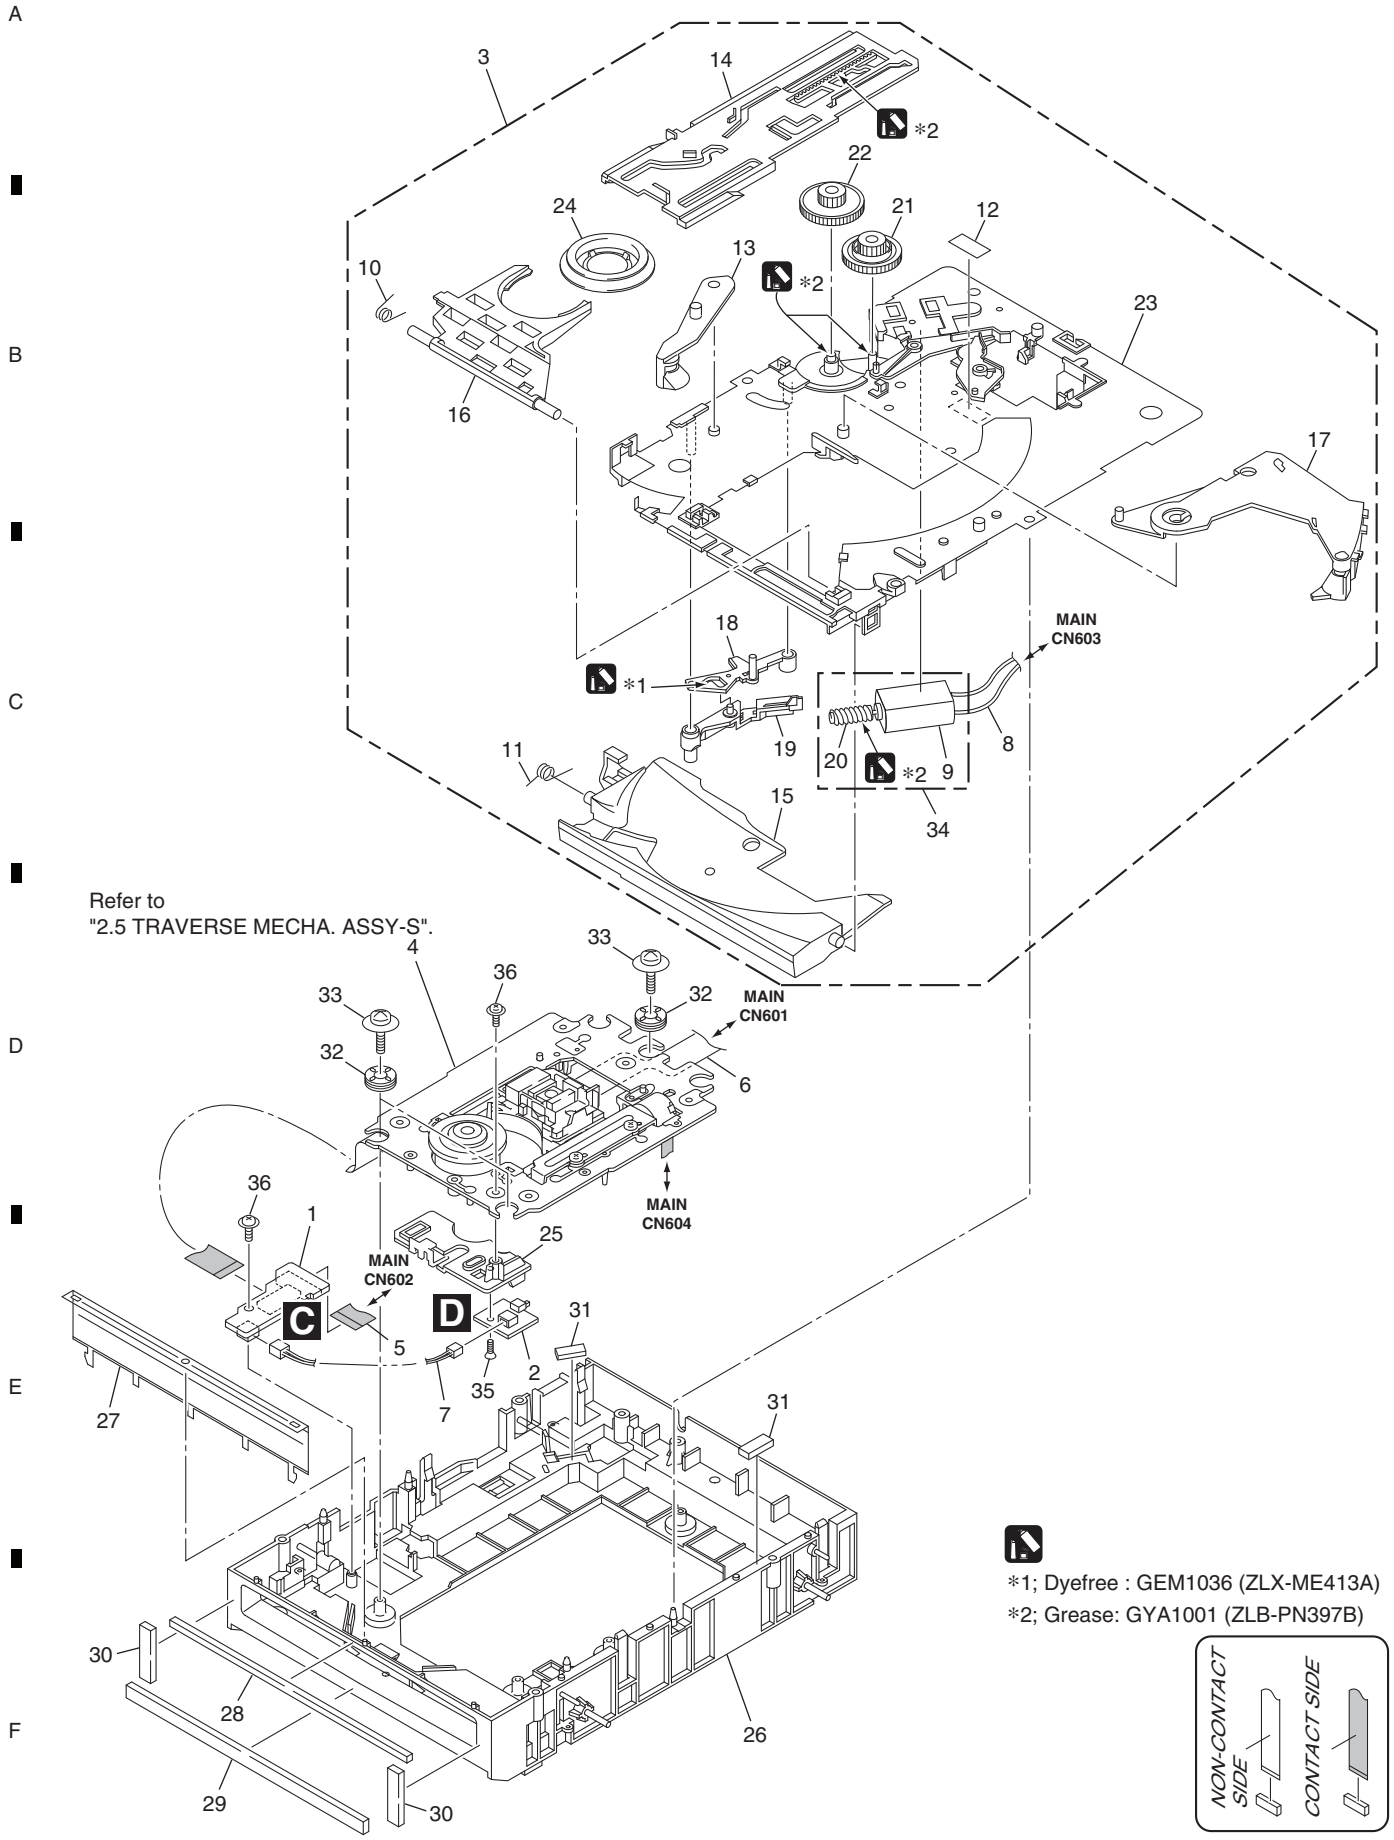

*1; Dyefree : GEM1036 (ZLX-ME413A)

*2; Grease: GYA1001 (ZLB-PN397B)

SLOT-IN MECHA. SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	SPCN Assy	DWX2559
	2	INSW Assy	DWS1369
NSP	3	Slot-in Mecha. G11 Assy	DXA2068
	4	Traverse Mecha. Assy-S	DXX2566
	5	13P Flexible Cable	DDD1299
	6	26P Flexible Cable	DDD1300
	7	Connector Assy 2P	DKP3769
	8	Connector Assy 2P	DKP3750
NSP	9	DC Motor S	DXM1230
	10	Clamp Spring	DBH1374
	11	Guide Spring	DBH1375
	12	SW Lever Spacer	DEC2420
	13	Drive Lever	DNK3406
	14	Main Cam	DNK3407
	15	Disc Guide	DNK3478
	16	Clamp Arm	DNK3576
	17	Eject Lever	DNK3684
	18	Lever AP	DNK3835
	19	Lever BP	DNK3836
NSP	20	Worm Gear	DNK3910
	21	Loading Gear	DNK3911
	22	Drive Gear	DNK3912
	23	Loading Base Assy-S	DEA1022
	24	Clamper D4 Assy	DXA2043
	25	Inside SW Base	DNK4236
	26	Float Base G11 Assy	DXB1793
	27	Front Sheet	DED1132
	28	Vessel Cushion A	DEC2852
	29	Vessel Cushion B	DEC2853
	30	Vessel Cushion C	DEC2854
	31	Spacer POR (T3)	DEB1566
	32	Float Rubber D3	DEB1404
	33	Float Screw	DBA1286
	34	Loading Motor Assy-S	DEA1008
	35	Screw 2 x 5	VBA1062
	36	Screw	IPZ20P060FTC

2.5 TRAVERSE MECHA. ASSY-S

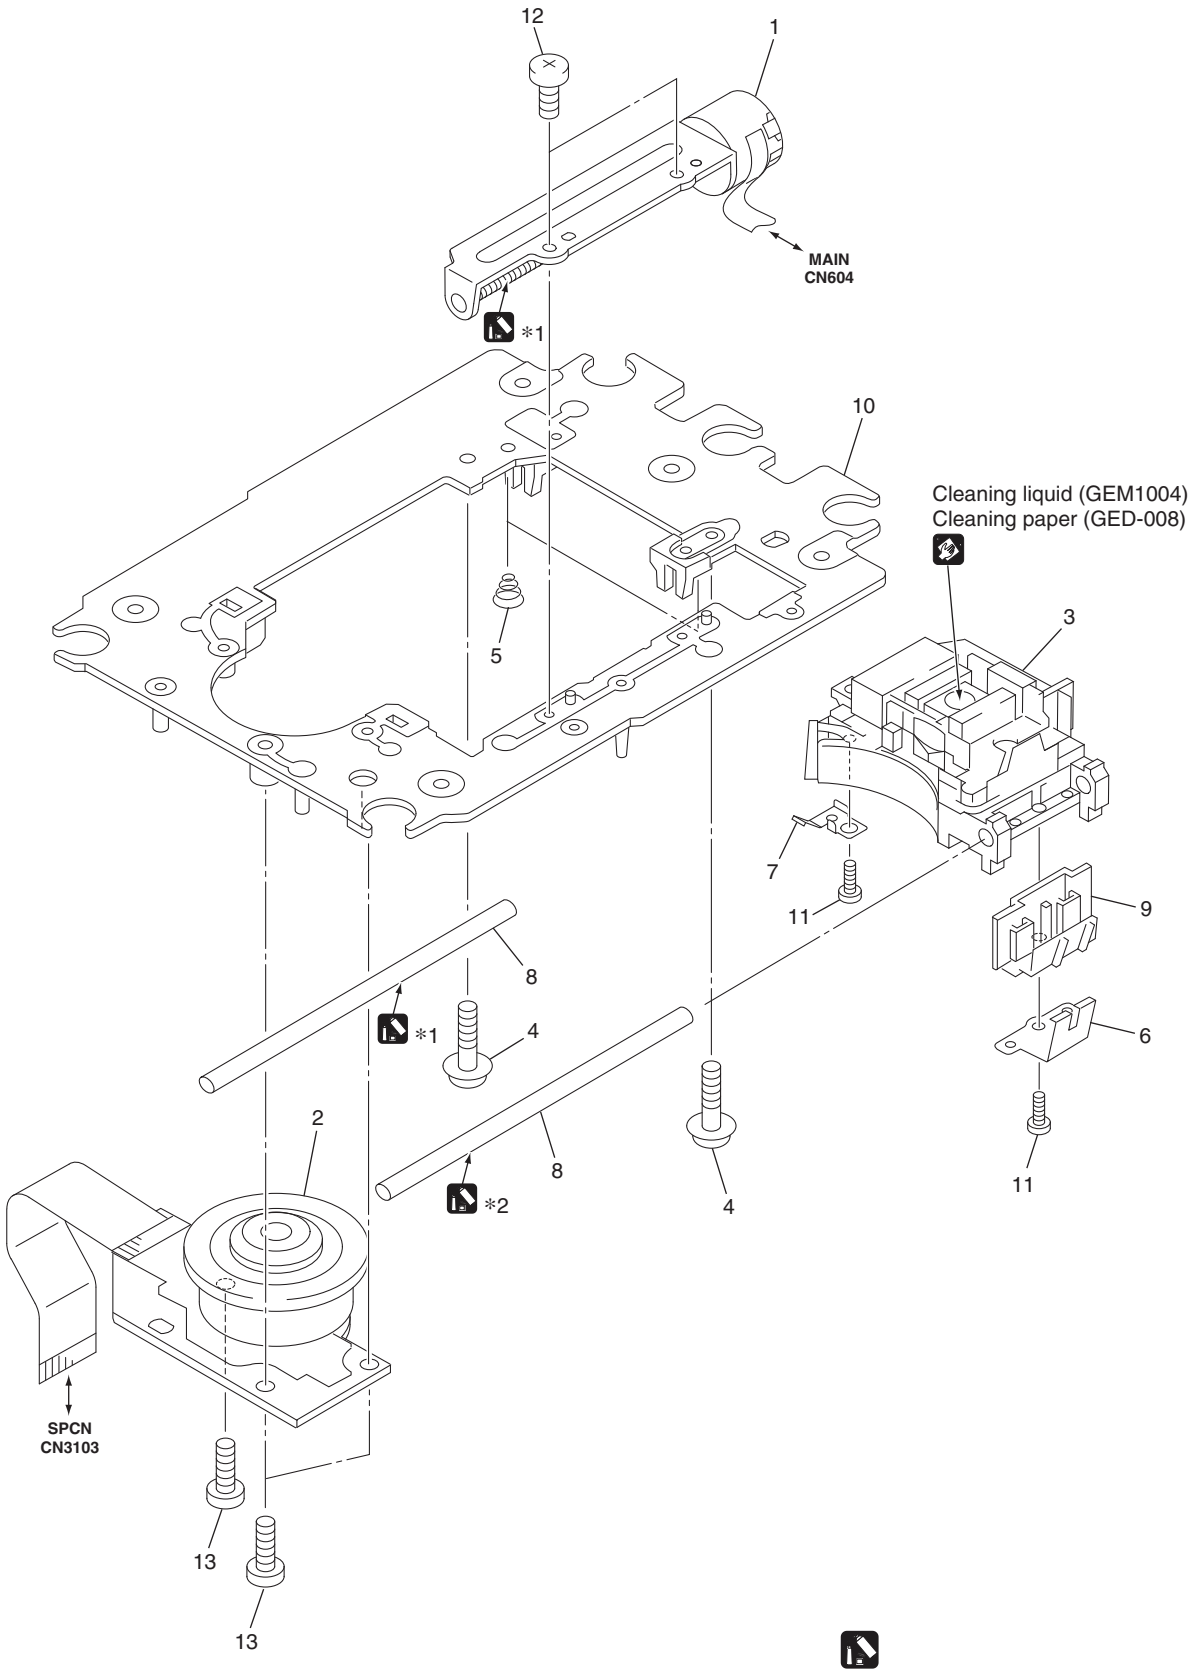

*1; Grease: GYA1001 (ZLB-PN397B)

*2; Grease: GEM1007 (ZLB-PN948P)

TRAVERSE MECHA. ASSY-S PARTS LIST

Mark	No.	Description	Part No.
NSP	1	Stepping Motor	DXM1227
NSP	2	Spindle Motor G11	DXM1231
NSP	3	04RM2 Pickup Assy R	OWY8071
NSP	4	Skew Screw	DBA1263
NSP	5	Skew Spring	DBH1437
NSP	6	Joint Spring (J)	DBK1261
NSP	7	Slider Spring G11 (J)	DBK1262
NSP	8	Guide Shaft (S)	DLA1918
	9	Joint	DNK3858
NSP	10	Mounting Plate G11 (J)	DNK4307
	11	Screw 04	VBA1092
	12	Screw	BPZ20P080FTC
	13	Screw	BPZ26P080FTC

5. PCB PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω	→ *56 x 10¹* →	*561*	*RD1/4PU 5 6 1 J*
47k Ω	→ *47 x 10³* →	*473*	*RD1/4PU 4 7 3 J*
0.5 Ω	→ *R50*		*RN2H R 5 0 K*
1 Ω	→ *1R0*		*RS1P 1 R 0 K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω	→ *562 x 10¹* →	*5621*	*RN1/4PC 5 6 2 1 F*

Mark	No.	Description	Part No.
LIST OF ASSEMBLIES			
	1	MAIN ASSY	DWG1591
NSP	1	MFLA ASSY	DWM2223
	2	MJCB ASSY	DWG1605
	2	MFLB ASSY	DWG1606
	2	SLDB ASSY	DWS1367
	3	RSWB ASSY	DWS1368
NSP	1	JFLA ASSY	DWM2224
	2	JFLB ASSY	DWG1602
	2	JOGB ASSY	DWG1603
	2	KSWB ASSY	DWS1365
	3	SLMB ASSY	DWS1366
NSP	1	SUBA ASSY	DWM2225
	2	INSW ASSY	DWS1369
	2	SDCB ASSY	DWX2558
	2	SPCN ASSY	DWX2559
⚠	1	SW POWER SUPPLY ASSY	DWR1409

Mark	No.	Description	Part No.
A MAIN ASSY			
SEMICONDUCTORS			
	IC601		AN22022A
⚠	IC303		BA00HC5FP
⚠	IC605		BA15BC0WFP
	IC602		BD7905BFS
	IC104		BU4230G
	IC402		DSPD56367PV150
	IC103		DYW1752
	IC101		HD6417709SF133B-D
	IC102		K4S281632F-UC75
⚠	IC606		MM1478DFBE
⚠	IC302		MM1592FF
⚠	IC405		MM1661GH
	IC603		MN103S71F
	IC501		PE8001A
	IC604		PEA007A8
	IC107,IC114,IC407		TC74VHC04FTS1
	IC112		TC7SH04FUS1
	IC111,IC113,IC115		TC7SH08FUS1
	IC106,IC406		TC7SZU04FU
	IC502,IC503		TC7WH34FU

Mark	No.	Description	Part No.
	IC403		TE4300PF
	IC401		TMS320DA150PGE16D
	IC301		XC3S50-4TQG144C
	Q603		2SA1577
	Q501		2SD2114K
	Q604		2SJ598-Z
	Q601,Q602		DTC114YK
	Q605		DTC124EUA
	D501		1SS355
	D301-D303,D401		RB551V-30
COILS AND FILTERS			
	L101		LCYA1R5J2520
CAPACITORS			
	C602 (22/6.3 V)		CCH1426
	C672		CCSRCH101J50
	C652		CCSRCH121J50
	C457		CCSRCH150J50
	C630,C651		CCSRCH151J50
	C458		CCSRCH180J50
	C516-C518		CCSRCH221J50
	C143,C144		CCSRCH7R0D50
	C105,C321,C413		CCSSCH471J16
	C327,C328,C461,C507,C508		CEHVW101M6R3
	C510,C603,C604,C606,C608		CEHVW101M6R3
	C611		CEHVW101M6R3
	C509,C512,C609,C610		CEHVW470M16
	C613,C614		CEHVW470M16
	C601,C615		CEHVW470M6R3
	C627,C645-C647,C666,C667		CKSRYB102K50
	C676,C679,C692		CKSRYB102K50
	C659,C682		CKSRYB103K50
	C471,C616-C619,C625,C626		CKSRYB104K16
	C628,C629,C631,C633-C636		CKSRYB104K16
	C639-C642,C644,C656,C660		CKSRYB104K16
	C680,C687		CKSRYB104K16
	C102,C103,C141,C145,C320		CKSRYB105K6R3
	C322,C323,C326,C329		CKSRYB105K6R3
	C402-C404,C406,C420,C435		CKSRYB105K6R3
	C448,C456,C632,C637,C638		CKSRYB105K6R3
	C700-C702,C708		CKSRYB105K6R3
	C671		CKSRYB122K50
	C675,C678		CKSRYB182K50
	C677		CKSRYB222K50

Mark	No.	Description	Part No.
	C621,C673		CKSRYB273K16
	C138		CKSRYB333K16
	C661,C662		CKSRYB471K50
A	C654,C655,C670		CKSRYB472K50
	C622,C707		CKSRYB473K25
	C706		CKSRYB474K10
	C620		CKSRYB561K50
	C142,C689		CKSSYB102K50
	C125,C324,C401,C441,C449		CKSSYB103K16
	C503-C506		CKSSYB103K16
	C101,C104,C106-C116		CKSSYB104K10
	C118-C124,C126-C133,C137		CKSSYB104K10
	C146,C151,C301-C319,C330		CKSSYB104K10
	C405,C407,C411,C412		CKSSYB104K10
B	C414-C419,C421-C432		CKSSYB104K10
	C436-C440,C442-C447		CKSSYB104K10
	C450-C452,C501,C502		CKSSYB104K10
	C513-C515,C663-C665		CKSSYB104K10
	C668,C669,C681,C684-C686		CKSSYB104K10
	C688,C690,C691,C695-C699		CKSSYB104K10
	C710		CKSSYB104K10
	C704,C705		CKSSYB182K50
	C433		CKSSYB333K10
	C434,C703		CKSSYB562K25
C	**RESISTORS**		
	R610,R611,R615-R617 (0.68,1/4 W)		DCN1143
	R626,R627,R633 (0.68,1/4 W)		DCN1143
	R121,R156,R159,R652		RAB4CQ103J
	R427,R428,R434		RAB4CQ223J
	R435,R437,R440,R441		RAB4CQ472J
	R191,R4452,R4457		RS1/10S0R0J
	R313		RS1/16S1001D
	R659		RS1/16S1502F
	R314		RS1/16S2001D
	R468		RS1/16S2701F
D	R609		RS1/4S0R0J
	R608		RS1/4SA240J
	R636,R637		RS1/4SA2R0J
	Other Resistors		RS1/16S###J
	OTHERS		
	X101 CRYSTAL RESONATOR (65.975 MHz)		DSS1144
	X401 CERAMIC OSCILLATOR (16.000 MHz)		CSS1616
	X402 CRYSTAL RESONATOR (16.9344 MHz)		VSS1084
E	CN502 CONNECTOR 9P		AKM1295
	CN602 13P FFC CONNECTOR		DKN1275
	CN604 4P FFC CONNECTOR		DKN1288
	CN601 26P FFC CONNECTOR		DKN1448
	CN401 13P FFC CONNECTOR		VKN1305
	CN501 15P FFC CONNECTOR		VKN1307
	CN603 CONNECTOR 2P		VKN1940
	CN605 CONNECTOR 3P		VKN1941
	CN503 CONNECTOR 6P		VKN1944
F			

Mark	No.	Description	Part No.
	B SLMB ASSY		
	SWITCHES AND RELAYS		
	S2401,S2402		DSG1017
	OTHERS		
	CN2401 CONNECTOR 3P		S3B-ZR
	C SPCN ASSY		
	OTHERS		
	CN3103 12P FFC CONNECTOR		DKN1205
	CN3102 13P FFC CONNECTOR		DKN1275
	CN3101 CONNECTOR 2P		VKN1940
	D INSW ASSY		
	SWITCHES AND RELAYS		
	S3301		CSN1031
	OTHERS		
	CN3301 CONNECTOR 2P		VKN1940
	E SDCB ASSY		
	SEMICONDUCTORS		
	D3002,D3004,D3006,D3008		DAN202K
	D3001,D3003,D3005,D3007		DAP202K
	SWITCHES AND RELAYS		
	S3001		CSN1068
	CAPACITORS		
	C3004		CEVW101M16
	C3001-C3003		CKSRYB104K16
	RESISTORS		
	All Resistors		RS1/16S###J
	OTHERS		
	CN3001 SD CARD SLOT CONNECTOR		DKP3748
	CN3002 13P CONNECTOR		VKN1305
	F MJCB ASSY		
	SEMICONDUCTORS		
	⚠IC1513 (315 mA)		AEK7003
	⚠IC1501 (800 mA)		AEK7008
	⚠IC1502,IC1503 (1.6 A)		AEK7012
	⚠IC1506,IC1514 (2 A)		AEK7013
	⚠IC1507 (4 A)		AEK7018
	⚠IC1504 (200 mA)		AEK7023
	⚠IC1509		BA50BC0FP
	IC1512		NJM4580D
	Q1510		2SC2412K
	Q1511,Q1512		2SC4081

Mark	No.	Description	Part No.
⚠	Q1507		2SD2012
	Q1505,Q1506,Q1508,Q1509		2SD2144S
	Q1504		DTA124EUA
	Q1501-Q1503		DTC124EUA
	D1504		1SR154-400
	D1505,D1506		1SS355
	D1503		NNCD6.2MF
	D1501,D1502,D1508		UDZS9R1(B)
CAPACITORS			
	C1519,C1520,C1523,C1526		CEANP101M10
	C1508,C1513		CEAT221M16
	C1527		CEAT470M16
	C1525		CEHAT101M16
	C1524		CEHAT220M63
	C1507		CEHAZL100M50
	C1515,C1517		CKSRYB103K50
	C1509-C1512,C1521		CKSRYB104K16
	C1522		CKSRYB104K25
	C1514		CKSRYB223K50
	C1528,C1529		CQMBA102J50
	C1502,C1503,C1505,C1506		CQMBA471J50
	C1501,C1504		CQMBA561J50
RESISTORS			
	R1511,R1532		RD1/2VM103J
	R1503,R1508		RD1/2VM113J
	R1505,R1506,R1514,R1521		RD1/2VM152J
	R1561,R1562		RD1/2VM220J
	R1502		RD1/2VM272J
	R1504,R1507,R1509,R1510,R1512		RD1/2VM471J
	R1519,R1563		RD1/2VM471J
	R1516,R1518,R1529,R1531		RD1/2VM473J
	R1540		RS1/16S1801F
	R1543		RS1/16S3901F
	Other Resistors		RS1/16S###J
OTHERS			
	JA1502 2P PIN JACK (AU)		AKB7164
	CN1503 CONNECTOR 11P		B11B-EH
	CN1505 CONNECTOR 4P		B4B-PH-K
	CN1507 CONNECTOR 6P		B6B-PH-K
	CN1506 CONNECTOR 6P		B6B-ZR
	CN1501 CONNECTOR 9P		B9B-PH-K
	CN1504 22P FFC CONNECTOR		HLEM22S-1
	JA1503 1P PIN JACK		PKB1036
	JA1501 REMOTE CONTROL JACK		RKN1004
	CN1502 15P FFC CONNECTOR		VKN1246

G MFLB ASSY

SEMICONDUCTORS			
	IC1003		BU4242G
⚠	IC1004		NJM78L05UA
	IC1002		PEG237B-K
	IC1001		TC7SET08FUS1
	Q1016		2SB1237X
	Q1001-Q1015		DTC124EUA
	D1010		NSPB500-0008
	D1007,D1011,D1012,D1014		SLI-343URCW
	D1001-D1006,D1009,D1013		SLI-343YCW
	D1008,D1017,D1018		SLR-343EBT
	D1015,D1016		SLR-343MC
	D1020		UDZS11(B)
SWITCHES AND RELAYS			
	S1013-S1018		DSG1079
	S1001		DSH1049
	S1002-S1012		VSG1024
CAPACITORS			
	C1002,C1003		CCSRCH101J50
	C1026,C1027		CCSRCH150J50
	C1015		CEAT101M16
	C1020		CEHAT101M16
	C1019		CEHAZL220M50
	C1016,C1021-C1024		CKSRYB102K50
	C1004,C1006-C1008,C1013,C1014		CKSRYB103K50
	C1025		CKSRYB103K50
	C1001,C1005,C1009-C1012,C1018		CKSRYB104K16
	C1017		CKSRYB104K50
RESISTORS			
	R1091-R1098		RS1/10S183J
	R1063,R1078-R1084		RS1/10S430J
	VR1001,VR1002 (10k-B)		DCS1045
	Other Resistors		RS1/16S###J
OTHERS			
	X1001 CRYSTAL RESONATOR (16.0 MHZ)		DSS1149
	1004 2P CABLE HOLDER		51048-0200
	J1006 9P CABLE HOLDER		51048-0900
	J1 JUMPER WIRE 9P		D20PYY0915E
	V1001 FL INDICATOR TUBE		DEL1057
	FL HOLDER		DNF1744
	CN1007 10P FFC CONNECTOR		HLEM10R-1
	CN1001 25P FFC CONNECTOR		HLEM25R-1
	CN1005 CONNECTOR 6P		S6B-PH-K

H SLDB ASSY

SEMICONDUCTORS			
	Q1201,Q1202		DTC124EUA
	D1201		NNCD6.2MF
	D1203		SLR-343MC
	D1202		SLR-343VC
SWITCHES AND RELAYS			
	S1201-S1203		VSG1024
CAPACITORS			
	C1201		CCSRCH101J50
	C1203		CEHAT100M50
	C1204,C1205		CKSRYB102K50
	C1202		CKSRYB104K16
RESISTORS			
	VR1202 (1 k)		DCP1105
	VR1201		DCV1013
	Other Resistors		RS1/16S###J
OTHERS			
	CN1201 9PJUMPER CONNECTOR		52151-0910

Mark	No.	Description	Part No.

I RSWB ASSY

SWITCHES AND RELAYS

	S1301	DSK1021

OTHERS

	J1301 2P CABLE HOLDER	51048-0200
	J0 JUMPER WIRE 2P	D20PYY0210E

J JFLB ASSY

SEMICONDUCTORS

⚠	IC2001	NJM78L05UA
	Q2001	2SB1237X
	Q2002,Q2003	2SC1815
	D2001	UDZS6R8(B)

CAPACITORS

	C2004,C2005,C2011	CEHAT101M16
	C2006	CEHAZL100M50
	C2001	CKSRYB104K16
	C2003	CKSRYB104K50
	C2002	CKSRYB223K25

RESISTORS

	All Resistors	RS1/16S###J

OTHERS

	CN2002 FFC CONNECTOR 22P	52492-2220
	CN2001 FFC CONNECTOR 25P	52492-2520
	CN2003 CONNECTOR	CKS1072
	V2001 FL INDICATOR TUBE	DEL1058
	FL HOLDER	DNF1735
	CN2004 CONNECTOR 4P	S4B-PH-K

K KSWB ASSY

SEMICONDUCTORS

	Q2301-Q2303	DTC124EUA
	D2305-D2308	SLI-343YCW
	D2301-D2304	SLR-343EBT
	D2309,D2310	SLR-343MC

SWITCHES AND RELAYS

	S2301,S2302	DSG1079
	S2303-S2306	VSG1024

CAPACITORS

	C2301-C2303	CCSRCH101J50

RESISTORS

	Allr Resistors	RS1/16S###J

OTHERS

	CN2301 FFC CONNECTOR 10P	HLEM10R-1

Mark	No.	Description	Part No.

L JOGB ASSY

SEMICONDUCTORS

	D2201	GP1A038RBK

CAPACITORS

	C2201,C2202	CKSRYB103K50

RESISTORS

	All Resistors	RS1/16S###J

OTHERS

	CN2201 CONNECTOR 4P	B4B-PH-K

M SW POWER SUPPLY ASSY

There is no service parts.