EXPLODED VIEW

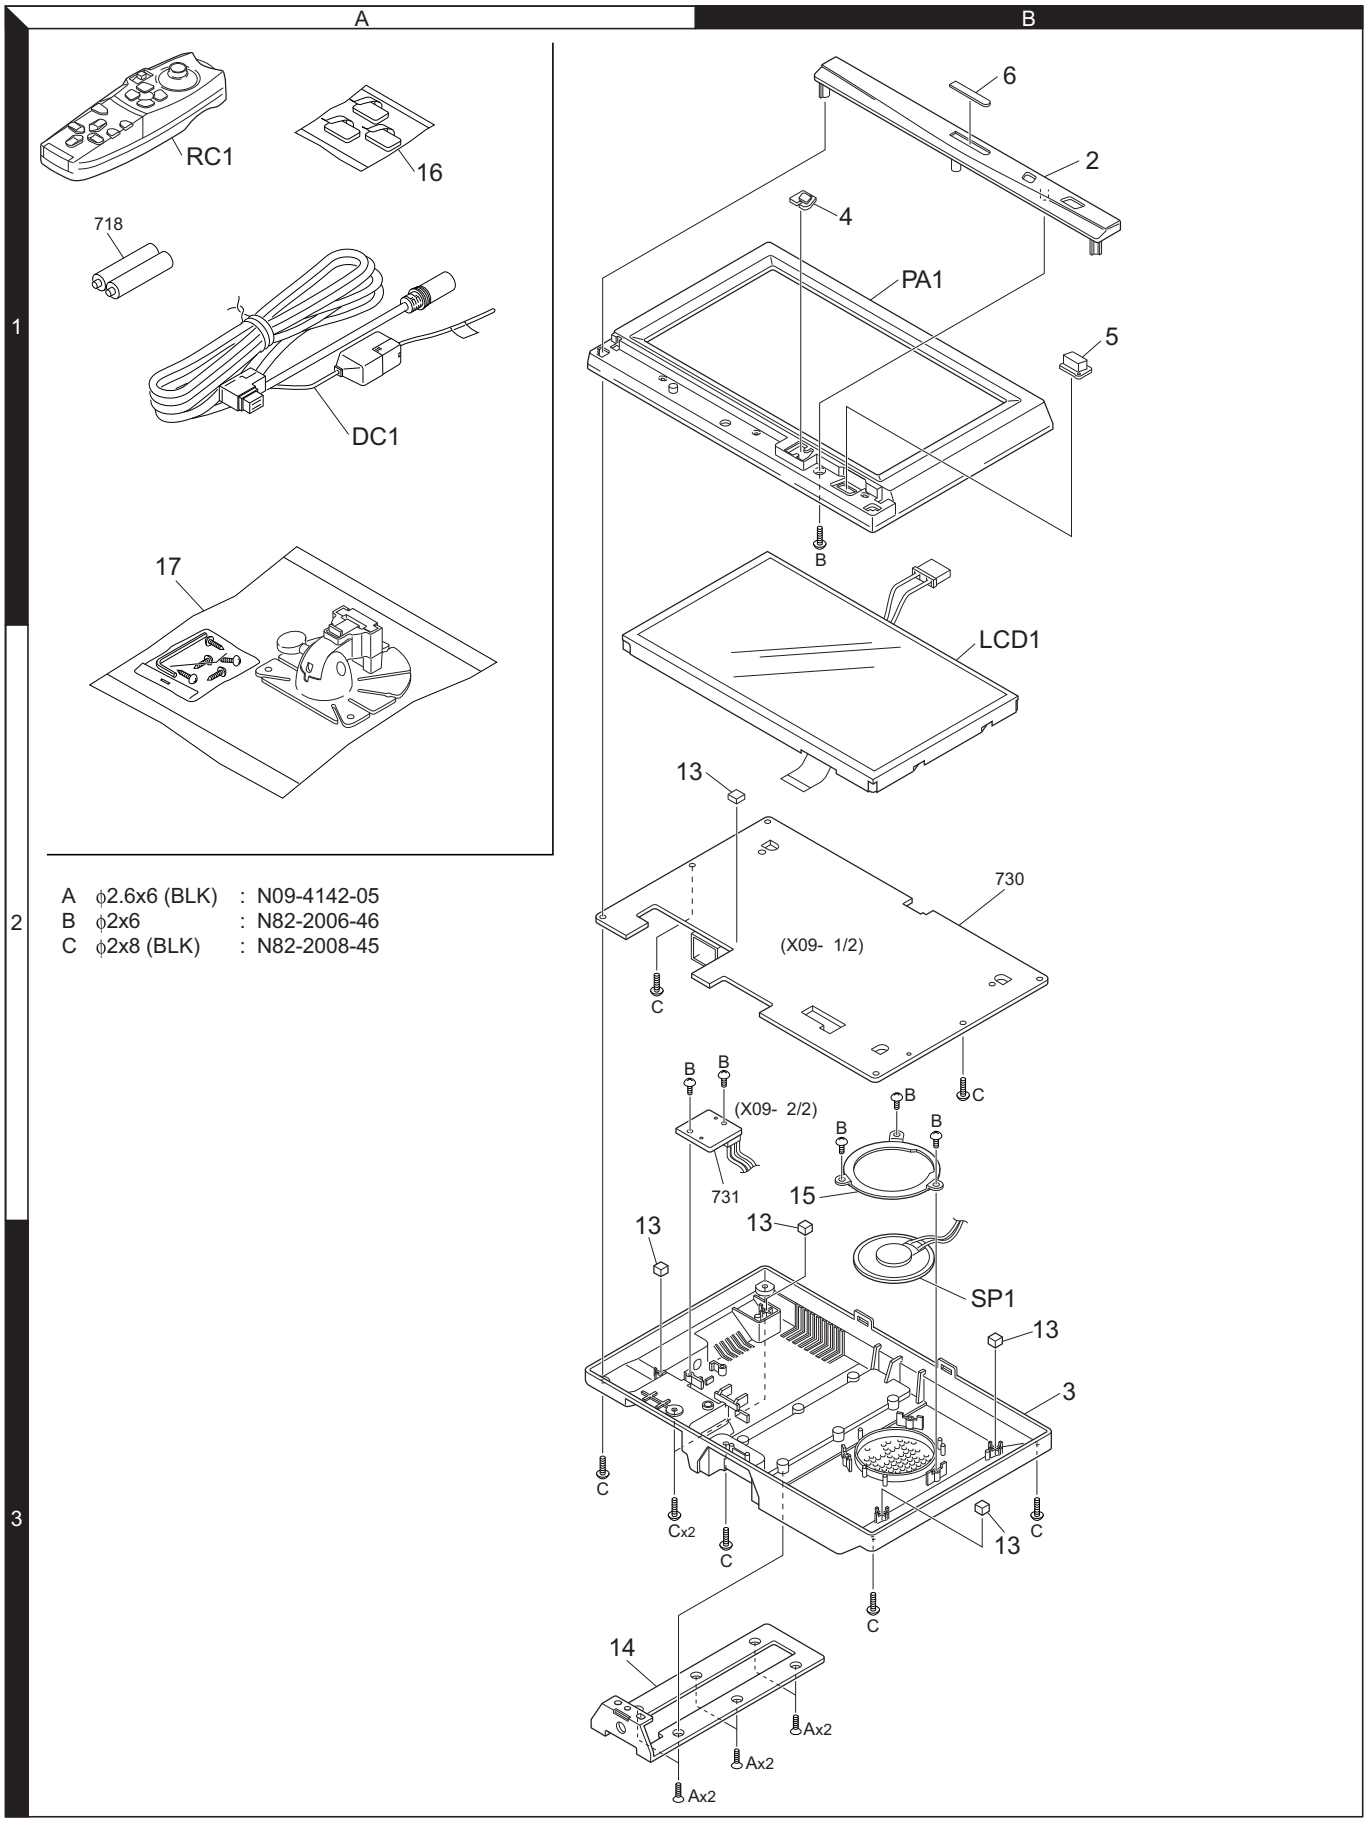

A φ2.6x6 (BLK) : N09-4142-05
B φ2x6 : N82-2006-46
C φ2x8 (BLK) : N82-2008-45

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description			Destination
LZ-651W							
2	1B	✻	A21-4313-08	DRESSING PANEL			
3	3B	✻	A46-1794-08	REAR COVER			
PA1	1B	✻	A64-3137-08	PANEL			
RC1	1A	✻	A70-2047-05	REMOCON ASSY (KNA-RC300)			
4	1B		B10-3199-04	FRONT GLASS			
5	1B		B10-3200-04	FRONT GLASS			
6	1B		B43-1270-04	KENWOOD BADGE			
-		✻	B64-2631-00	INST.MANUAL (ENG.FRE.)			K
-		✻	B64-2632-00	INST.MANUAL (GER.DUT.ITA.SPA.)			E
LCD1	2B	✻	B38-1129-05	LIQUID CRYSTAL			
⚠ DC1	1A		E30-3235-08	DC CORD			
13	2B	✻	G11-3570-08	CUSHION			
14	3B		J19-5015-14	BRACKET			
15	2B		J19-4779-14	HOLDER			
16	1A		J11-0647-05	CLAMPER ASSY			
A	3B		N09-4142-05	PAN DEAD TAPTITE SCREW			
B	2B		N82-2006-46	PAN DEAD TAPTITE SCREW			
C	3B		N82-2008-45	PAN DEAD TAPTITE SCREW			
SP1	3B	✻	T19-0264-08	SPEAKER (FULLRANGE)			
17	1A	✻	W01-1621-05	TV STAND ASSY			
MAIN UNIT (X09-7161-00/7162-00)							
C101			CK73GB1H102K	CHIP C	1000PF	K	
C103			CK73GB1H104K	CHIP C	0.10UF	K	
C104			C90-2583-05	ELECTRO	1000UF	16WV	
C105			C92-1610-05	ELECTRO	2200UF	16WV	
C109,110			CK73GB1H104K	CHIP C	0.10UF	K	
C111			CK73GB1H103K	CHIP C	0.010UF	K	
C116			CK73GB1H103K	CHIP C	0.010UF	K	
C117			C92-0671-05	ELECTRO	10UF	16WV	
C119			CK73GB1H223K	CHIP C	0.022UF	K	
C120			CK73GB1H104K	CHIP C	0.10UF	K	
C121			C92-1429-05	ELECTRO	220UF	6.3WV	
C122			CK73GB1H104K	CHIP C	0.10UF	K	
C125			C92-0678-05	ELECTRO	33UF	25WV	
C126			CK73GB1H104K	CHIP C	0.10UF	K	
C127			C92-0678-05	ELECTRO	33UF	25WV	
C128			CK73GB1H104K	CHIP C	0.10UF	K	
C129			CK73GB1H103K	CHIP C	0.010UF	K	
C130			C92-0667-05	ELECTRO	10UF	10WV	
C131			CK73GB1H103K	CHIP C	0.010UF	K	
C132			C92-0667-05	ELECTRO	10UF	10WV	
C133			CK73GB1H103K	CHIP C	0.010UF	K	
C137,138			CK73GB1H103K	CHIP C	0.010UF	K	
C140			C92-0667-05	ELECTRO	10UF	10WV	
C141			CK73GB1H103K	CHIP C	0.010UF	K	
C143			CK73GB1H103K	CHIP C	0.010UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C144			CK73FB1C105K	CHIP C	1.0UF	K	
C145			CK73GB1H103K	CHIP C	0.010UF	K	
C147			C92-0667-05	ELECTRO	10UF	10WV	
C150		✻	C93-1330-08	CHIP C	0.22UF	K	
C155			CC73GCH1H101J	CHIP C	100PF	J	
C157			CK73GB1H104K	CHIP C	0.10UF	K	
C159			C92-0676-05	ELECTRO	10UF	25WV	
C160			CK73GB1H104K	CHIP C	0.10UF	K	
C161		✻	C92-1822-08	ELECTRO	220UF	10WV	
C162			C92-1429-05	ELECTRO	220UF	6.3WV	
C163			C92-0667-05	ELECTRO	10UF	10WV	
C164			C92-1429-05	ELECTRO	220UF	6.3WV	
C201,202			CK73GB1H104K	CHIP C	0.10UF	K	
C203			C92-0093-05	CHIP C	100UF	6.3WV	
C204			CK73GB1H103K	CHIP C	0.010UF	K	
C205			CC73GCH1H101J	CHIP C	100PF	J	
C206			C92-0667-05	ELECTRO	10UF	10WV	
C207			CK73GB1H103K	CHIP C	0.010UF	K	
C209			C92-0667-05	ELECTRO	10UF	10WV	
C303-305			CK73GB1H104K	CHIP C	0.10UF	K	
C401			C92-0687-05	ELECTRO	2.2UF	50WV	
C402			C92-0090-05	CHIP C	22UF	6.3WV	
C403			C92-0687-05	ELECTRO	2.2UF	50WV	
C404			C92-0090-05	CHIP C	22UF	6.3WV	
C405			CK73GB1H102K	CHIP C	1000PF	K	
C406			CK73GB1H104K	CHIP C	0.10UF	K	
C407			C92-0671-05	ELECTRO	10UF	16WV	
C408			CK73GB1H104K	CHIP C	0.10UF	K	
C421			CK73FB1C105K	CHIP C	1.0UF	K	
C422			C92-1428-05	ELECTRO	330UF	6.3WV	
C423			CK73GB0J105K	CHIP C	1.0UF	K	
C424			CC73GCH1H102J	CHIP C	1000PF	J	
C425			CK73GB1H104K	CHIP C	0.10UF	K	
C431			C92-0687-05	ELECTRO	2.2UF	50WV	
C432,433			CK73GB1H102K	CHIP C	1000PF	K	
C434,435			CK73FB1C105K	CHIP C	1.0UF	K	
C436			CK73GB1H153K	CHIP C	0.015UF	K	
C437			CK73GB1H103K	CHIP C	0.010UF	K	
C438			CK73FB1C105K	CHIP C	1.0UF	K	
C501,502			CK73GB1C104K	CHIP C	0.10UF	K	E
C503-506			CK73GB0J105K	CHIP C	1.0UF	K	E
C507			C92-0628-05	CHIP-TAN	10UF	10WV	
C508-513			CK73FB1C105K	CHIP C	1.0UF	K	
C514,515			CK73EB1C225K	CHIP C	2.2UF	K	
C516			CK73GB1H103K	CHIP C	0.010UF	K	
C517			CK73EB1C225K	CHIP C	2.2UF	K	
C518			CK73GB1H103K	CHIP C	0.010UF	K	
C519			C92-0628-05	CHIP-TAN	10UF	10WV	
C520			CK73FB1H104K	CHIP C	0.10UF	K	
C521			C92-0628-05	CHIP-TAN	10UF	10WV	
C522			CK73FB1H104K	CHIP C	0.10UF	K	
C523			CC73GCH1H681J	CHIP C	680PF	J	
C524			C92-0628-05	CHIP-TAN	10UF	10WV	
C525			CK73GB1H223K	CHIP C	0.022UF	K	
C526			CK73FB1C474K	CHIP C	0.47UF	K	

E : Europe **K** : North America

⚠ Indicates safety critical components.

LZ-651W

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

MAIN UNIT (X09-7161-00/7162-00)

Ref. No.	Add	New	Parts No.	Description			Destination
C527			CK73GB1H223K	CHIP C	0.022UF	K	
C528			C92-1429-05	ELECTRO	220UF	6.3WV	
C530			CK73EB1C225K	CHIP C	2.2UF	K	
C531,532			CK73FB1C105K	CHIP C	1.0UF	K	
C533			CK73GB1C104K	CHIP C	0.10UF	K	
C534			CK73EB1C225K	CHIP C	2.2UF	K	
C535			CK73GB1H223K	CHIP C	0.022UF	K	
C537			CK73FB1H104K	CHIP C	0.10UF	K	
C538			CC73GCH1H180J	CHIP C	18PF	J	
C539			CC73GCH1H270J	CHIP C	27PF	J	E
C543			CK73GB1H103K	CHIP C	0.010UF	K	
C546,547			CK73GB1H102K	CHIP C	1000PF	K	
C550			CK73GB1H103K	CHIP C	0.010UF	K	
C551			C92-1755-05	ELECTRO	15UF	16WV	
C552			CK73GB1H103K	CHIP C	0.010UF	K	
C553			CC73GCH1H101J	CHIP C	100PF	J	
C554,555			CK73GB1H103K	CHIP C	0.010UF	K	
C556			CC73GCH1H080D	CHIP C	8.0PF	D	
C557			CK73GB1H102K	CHIP C	1000PF	K	
C558			CC73GCH1H080D	CHIP C	8.0PF	D	
C559,560			CK73GB1H103K	CHIP C	0.010UF	K	
C561			CC73GCH1H820J	CHIP C	82PF	J	
C562			CK73GB1A224K	CHIP C	0.22UF	K	
C564			CK73GB1C104K	CHIP C	0.10UF	K	
C565			CC73GCH1H561J	CHIP C	560PF	J	
C566			CK73GB1H103K	CHIP C	0.010UF	K	
C567			CC73GCH1H221J	CHIP C	220PF	J	
C568			CC73GCH1H102J	CHIP C	1000PF	J	
C569			CC73GCH1H101J	CHIP C	100PF	J	
C570			CK73FB1H104K	CHIP C	0.10UF	K	
C572			CC73GCH1H391J	CHIP C	390PF	J	
C574			CK73EB1A106K	CHIP C	10UF	K	
C575			CK73FB1C105K	CHIP C	1.0UF	K	
C576			C92-0686-05	ELECTRO	1UF	50WV	
C577			CK73GB1C104K	CHIP C	0.10UF	K	
C578			CK73GB0J105K	CHIP C	1.0UF	K	
C579,580			CC73GCH1H561J	CHIP C	560PF	J	
C581			C92-0543-05	CHIP-TAN	3.3UF	10WV	
C582		✻	C93-1331-08	CHIP C	3900PF	J	
C583			CK73EB1A475K	CHIP C	4.7UF	K	
C585			CC73GCH1H270J	CHIP C	27PF	J	
C586			CK73EB1A475K	CHIP C	4.7UF	K	
C588			CC73GCH1H150J	CHIP C	15PF	J	E
C589			CK73FB1C105K	CHIP C	1.0UF	K	
C590			CK73GB1H103K	CHIP C	0.010UF	K	
C591			CC73GCH1H681J	CHIP C	680PF	J	
C592			C92-0671-05	ELECTRO	10UF	16WV	
C593			CK73GB1H103K	CHIP C	0.010UF	K	
C594			C92-0671-05	ELECTRO	10UF	16WV	
C595,596			CK73GB1H103K	CHIP C	0.010UF	K	
C599		✻	C93-1332-08	ELECTRO	10UF	25WV	
C600			CK73GB1H103K	CHIP C	0.010UF	K	
C601			C92-1755-05	ELECTRO	15UF	16WV	
C603			CK73GB1H103K	CHIP C	0.010UF	K	
C604			CK73EB1A106K	CHIP C	10UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C605			CK73FB1H104K	CHIP C	0.10UF	K	
C606			C92-1452-05	ELECTRO	100UF	10WV	
C607			CK73GB1H103K	CHIP C	0.010UF	K	
C608			CC73GCH1H080D	CHIP C	8.0PF	D	
C609			CK73FB1H104K	CHIP C	0.10UF	K	
C610			C92-0678-05	ELECTRO	33UF	25WV	
C611			CK73GB1H103K	CHIP C	0.010UF	K	
C612		✻	C93-1332-08	ELECTRO	10UF	25WV	
C699		✻	C93-1332-08	ELECTRO	10UF	25WV	
C701,702			CC73GCH1H391J	CHIP C	390PF	J	
C705			CC73GCH1H391J	CHIP C	390PF	J	
C706			C92-0093-05	CHIP C	100UF	6.3WV	
C707			CK73GB1C104K	CHIP C	0.10UF	K	
C708			CC73GCH1H180J	CHIP C	18PF	J	
C709		✻	C93-1331-08	CHIP C	3900PF	J	
C710			CC73GCH1H150J	CHIP C	15PF	J	K
L105		✻	CR105-101KC	SMALL FIXED INDUCTOR			
L108		✻	CR54-101KC	SMALL FIXED INDUCTOR			
CN101			E40-9484-05	PIN ASSY (3PIN)			
⚠ CN201		✻	E58-0981-05	RECTANGULAR RECEPTACLE			
CN202			E11-0633-05	PHONE JACK			
CN203			E40-5887-05	PIN ASSY (4PIN)			
CN401			E40-9449-05	PIN ASSY (2PIN)			
CN501			E41-0363-05	FLAT CABLE CONNECTOR (32PIN)			
WH201		✻	E39-0603-08	WIRE HARNESS			
L101			L33-1124-05	CHOKE COIL			
L104		✻	L19-0750-08	TRANSFORMER			
L106		✻	L19-0749-08	TRANSFORMER			
L501,502			L40-1001-78	SMALL FIXED INDUCTOR			
L504			L40-1001-78	SMALL FIXED INDUCTOR			
L506			L40-1001-78	SMALL FIXED INDUCTOR			
L507			L40-2795-34	SMALL FIXED INDUCTOR			
L508			L40-1895-85	SMALL FIXED INDUCTOR			
L509			L40-1001-78	SMALL FIXED INDUCTOR			
L510			L40-4705-79	SMALL FIXED INDUCTOR			
L512			L40-1001-78	SMALL FIXED INDUCTOR			
L514-516			L40-1001-78	SMALL FIXED INDUCTOR			
X301		✻	L78-0890-08	CRYSTAL RESONATOR(16MHz)			
X501			L77-2806-05	CRYSTAL RESONATOR(3.579545MHz)			
X502			L77-2807-05	CRYSTAL RESONATOR(4.43691MHz)			E
R102			RK73EB2E220J	CHIP R	22	J 1/4W	
R103			RN73GH1J682D	CHIP R	6.8K	D 1/16W	
R104			RK73GB2A113J	CHIP R	11K	J 1/10W	
R105			RK73GB2A103J	CHIP R	10K	J 1/10W	
R106			RN73GH1J102D	CHIP R	1.0K	D 1/16W	
R107			RK73GB2A203J	CHIP R	20K	J 1/10W	
R108			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R111			RK73EB2E220J	CHIP R	22	J 1/4W	
R113			RK73GB2A113J	CHIP R	11K	J 1/10W	
R114			RK73GB2A103J	CHIP R	10K	J 1/10W	
R115			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R116		✻	RN73GH1J822D	CHIP R	8.2K	D 1/16W	
R117		✻	RN73GH1J202D	CHIP R	2.0K	D 1/16W	
R118			R92-3078-05	CHIP R	680	J 1/4W	

E : Europe **K** : North America

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

MAIN UNIT (X09-7161-00/7162-00)

Ref. No.	Add	New	Parts No.	Description				Destination
R119		✻	R92-3473-08	CHIP R	10K	J	1/4W	
R122			RK73GB2A820J	CHIP R	82	J	1/10W	
R124		✻	R92-3474-08	CHIP R	330	J	1/4W	
R125			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R146			RK73GB2A103J	CHIP R	10K	J	1/10W	
R148			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R150			R92-0365-05	CHIP R	1.0K	J	1/2W	
R155			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R156			R92-1213-05	CHIP R	100	J	1/2W	
R162			RK73GB2A471J	CHIP R	470	J	1/10W	
R163		✻	RN73GH1J510D	CHIP R	51	D	1/16W	
R164			RK73GB2A223J	CHIP R	22K	J	1/10W	
R165			RK73GB2A103J	CHIP R	10K	J	1/10W	
R169		✻	R92-3472-08	CHIP R	68	J	1/10W	
R170		✻	R92-3469-08	CHIP R	2K	J	1/4W	
R171		✻	R92-3471-08	CHIP R	1K	J	1/10W	
R176			RK73GB2A104J	CHIP R	100K	J	1/10W	
R177			RK73GB2A150J	CHIP R	15	J	1/10W	
R178			RK73GB2A152J	CHIP R	1.5K	J	1/10W	
R179			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R180			RK73GB2A182J	CHIP R	1.8K	J	1/10W	
R201		✻	RK73EB2E562J	CHIP R	5.6K	J	1/4W	
R202			RK73GB2A473J	CHIP R	47K	J	1/10W	
R203			RK73GB2A153J	CHIP R	15K	J	1/10W	
R204			RK73GB2A183J	CHIP R	18K	J	1/10W	
R205			RK73GB2A223J	CHIP R	22K	J	1/10W	
R206			RK73GB2A103J	CHIP R	10K	J	1/10W	
R207			RK73GB2A473J	CHIP R	47K	J	1/10W	
R208,209			RK73GB2A103J	CHIP R	10K	J	1/10W	
R211			RK73GB2A563J	CHIP R	56K	J	1/10W	
R212			RK73GB2A333J	CHIP R	33K	J	1/10W	
R213			RK73GB2A101J	CHIP R	100	J	1/10W	
R214			RK73GB2A103J	CHIP R	10K	J	1/10W	
R215			RK73GB2A473J	CHIP R	47K	J	1/10W	
R216			RK73GB2A474J	CHIP R	470K	J	1/10W	
R217			RK73GB2A331J	CHIP R	330	J	1/10W	
R301			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R302,303			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R308-310			RK73GB2A104J	CHIP R	100K	J	1/10W	
R311,312			RK73GB2A101J	CHIP R	100	J	1/10W	
R317			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R318			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R319			RK73GB2A103J	CHIP R	10K	J	1/10W	
R321,322			RK73GB2A101J	CHIP R	100	J	1/10W	
R323			RK73GB2A104J	CHIP R	100K	J	1/10W	
R324			RK73GB2A102J	CHIP R	1.0K	J	1/10W	K
R325			RK73GB2A102J	CHIP R	1.0K	J	1/10W	E
R326			RK73GB2A101J	CHIP R	100	J	1/10W	
R401			RK73EB2B102J	CHIP R	1.0K	J	1/8W	
R402			RK73EB2E101J	CHIP R	100	J	1/4W	
R403			RK73EB2B102J	CHIP R	1.0K	J	1/8W	
R404			RK73EB2E101J	CHIP R	100	J	1/4W	
R405			RK73GB2A103J	CHIP R	10K	J	1/10W	
R417			RK73GB2A563J	CHIP R	56K	J	1/10W	
R422			RK73GB2A470J	CHIP R	47	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R423			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R424			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R431			RK73EB2B102J	CHIP R	1.0K	J	1/8W	
R432			RK73GB2A103J	CHIP R	10K	J	1/10W	
R434,435			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R436			RK73GB2A303J	CHIP R	30K	J	1/10W	
R437			RK73GB2A183J	CHIP R	18K	J	1/10W	
R438			RK73GB2A104J	CHIP R	100K	J	1/10W	
R439,440			RK73EB2E100J	CHIP R	10	J	1/4W	
R504-506			RK73GB2A101J	CHIP R	100	J	1/10W	
R509			RK73GB2A101J	CHIP R	100	J	1/10W	
R510-512			RK73EB2E101J	CHIP R	100	J	1/4W	
R513-515			RK73EB2E750J	CHIP R	75	J	1/4W	
R517			RK73GB2A473J	CHIP R	47K	J	1/10W	
R518-520			RK73GB2A101J	CHIP R	100	J	1/10W	
R523			RK73GB2A101J	CHIP R	100	J	1/10W	E
R524			RK73GB2A823J	CHIP R	82K	J	1/10W	
R525			RK73GB2A513J	CHIP R	51K	J	1/10W	
R526			RK73GB2A104J	CHIP R	100K	J	1/10W	
R527			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R528			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R529			RK73GB2A103J	CHIP R	10K	J	1/10W	
R532			RK73GB2A752J	CHIP R	7.5K	J	1/10W	
R534			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R535			RK73GB2A122J	CHIP R	1.2K	J	1/10W	
R537			RK73GB2A473J	CHIP R	47K	J	1/10W	
R538			RK73GB2A303J	CHIP R	30K	J	1/10W	
R539			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R540			RK73GB2A561J	CHIP R	560	J	1/10W	
R542-546			RK73GB2A561J	CHIP R	560	J	1/10W	
R547			RK73GB2A101J	CHIP R	100	J	1/10W	
R548			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R549			RK73GB2A101J	CHIP R	100	J	1/10W	
R550			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R551			RK73GB2A224J	CHIP R	220K	J	1/10W	
R552			RK73GB2A362J	CHIP R	3.6K	J	1/10W	
R553			RK73GB2A473J	CHIP R	47K	J	1/10W	
R554			RK73GB2A683J	CHIP R	68K	J	1/10W	
R555			RK73GB2A473J	CHIP R	47K	J	1/10W	
R556			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R557			RK73GB2A683J	CHIP R	68K	J	1/10W	
R558			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R559			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R560,561			RK73GB2A103J	CHIP R	10K	J	1/10W	
R562			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R563			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R564			RK73GB2A101J	CHIP R	100	J	1/10W	
R565			RK73GB2A331J	CHIP R	330	J	1/10W	
R566			RK73EB2E750J	CHIP R	75	J	1/4W	
R567			RK73GB2A334J	CHIP R	330K	J	1/10W	
R568			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R570			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R571			RK73GB2A223J	CHIP R	22K	J	1/10W	
R572			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R573			RK73GB2A333J	CHIP R	33K	J	1/10W	

E : Europe **K** : North America

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

MAIN UNIT (X09-7161-00/7162-00)

Ref. No.	Add	New	Parts No.	Description	Destination
R574			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R575			RK73GB2A153J	CHIP R 15K J 1/10W	
R576			RK73GB2A333J	CHIP R 33K J 1/10W	
R577			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R578			RK73GB2A561J	CHIP R 560 J 1/10W	
R579			RK73GB2A331J	CHIP R 330 J 1/10W	
R581			RK73GB2A103J	CHIP R 10K J 1/10W	
R583			RK73GB2A334J	CHIP R 330K J 1/10W	
R584			RN73GH1J104D	CHIP R 100K D 1/16W	
R585		✻	RN73GH1J823D	CHIP R 82K D 1/16W	
R586			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R587			RK73GB2A472J	CHIP R 4.7K J 1/10W	E
R589			RK73GB2A472J	CHIP R 4.7K J 1/10W	E
R592			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R594			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R595,596			RK73GB2A100J	CHIP R 10 J 1/10W	
R597			RK73GB2A223J	CHIP R 22K J 1/10W	
R598			RK73GB2A563J	CHIP R 56K J 1/10W	
R599			RK73GB2A223J	CHIP R 22K J 1/10W	
R600			RK73GB2A563J	CHIP R 56K J 1/10W	
R601,602			RK73GB2A103J	CHIP R 10K J 1/10W	
R603			RK73GB2A101J	CHIP R 100 J 1/10W	
R606,607			RK73FB2B220J	CHIP R 22 J 1/8W	
R618,619			RK73GB2A564J	CHIP R 560K J 1/10W	
R701-703			RK73GB2A473J	CHIP R 47K J 1/10W	
R709			RK73EB2E750J	CHIP R 75 J 1/4W	
R710			RK73GB2A330J	CHIP R 33 J 1/10W	
R711			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R712		✻	RN73GH1J302D	CHIP R 3.0K D 1/16W	
R713			RN73GH1J512D	CHIP R 5.1K D 1/16W	
R715			RK73GB2A683J	CHIP R 68K J 1/10W	
R718			RK73EB2E101J	CHIP R 100 J 1/4W	
R719			RK73GB2A331J	CHIP R 330 J 1/10W	
R720			RK73GB2A105J	CHIP R 1.0M J 1/10W	E
RM301,302			R90-1014-05	MULTI-COMP 100 X4	
RM501			R90-1014-05	MULTI-COMP 100 X4	
RM503			R90-1014-05	MULTI-COMP 100 X4	
VR501			R32-0246-05	SEMI FIXED VARI.RESI. (100K)	
VR502			R32-0235-05	SEMI FIXED VARI.RESI. (10K)	
W101,102			R92-1252-05	CHIP R 0 OHM J 1/16W	
W112,113			R92-1252-05	CHIP R 0 OHM J 1/16W	
W118			R92-1252-05	CHIP R 0 OHM J 1/16W	
W191-197			R92-1252-05	CHIP R 0 OHM J 1/16W	
BZ401			T95-0228-05	BUZZER	
D101			AM01Z	DIODE	
D102			D3FS4A	DIODE	
D103			RD18FM (B)	ZENER DIODE	
D104,105		✻	1SS184-TE85L	DIODE	
D107			SB05-05CP	DIODE	
D108			MA8082-M	ZENER DIODE	
D109		✻	MA8030	ZENER DIODE	
D111			RD16E (B3)	ZENER DIODE	
D112			MA8130-M	ZENER DIODE	
D115			MA152K	DIODE	

Ref. No.	Add	New	Parts No.	Description	Destination
D116			SB05-05CP	DIODE	
D118			DAN202U	DIODE	
D201			RD6.8M (B2)	ZENER DIODE	
D202			DAN202U	DIODE	
D203			DA204U	DIODE	
D204			RD6.8M (B2)	ZENER DIODE	
D205,206			DA204U	DIODE	
D207			RD10M (B1)	ZENER DIODE	
D401-404			DA204U	DIODE	
D431			DA204U	DIODE	
D432			RD6.8M (B2)	ZENER DIODE	
D501-503			DA204U	DIODE	
D504			DAN202U	DIODE	
D505			MA716	DIODE	
D506			MA152K	DIODE	
D507			MA335	VARIABLE CAPACITOR	
D508,509			DA204U	DIODE	
⚠ F101			F53-0251-05	FUSE (0.6A)	
⚠ F102		✻	F53-0247-05	FUSE (1.5A)	
IC101			FA7703V	IC	
IC201		✻	TSOP1838-NK	OPTICAL RECEIVER	
IC202		✻	TC7SH08F-TE85L	IC	
IC301		✻	TMP88CP38AF-NK	U-COM	
IC302		✻	S-80845CNNB-NK	IC	
IC303		✻	S-24CS02AFB-NK	IC	
IC401			TC4053BF (N)	MOS-IC	
IC402			BA3121F	IC (ISO AMP)	
IC405			TDA7052BT	IC	
IC501			TDA4665T	IC	E
IC502			AN2546FH-A	IC	
IC503			LZ9GJ25	MOS-IC	
IC504			NJM2107F	IC (HIPASS FILTER)	
IC505			MM1108XFFE	IC	
IC506			NJM4580V	IC (OP AMP)	
Q101			2SJ377	FET	
Q105		✻	2SK3416TL-NK	FET	
Q106			2SD1766	TRANSISTOR	
Q107			2SB1203-FA	TRANSISTOR	
Q108			2SC4081	TRANSISTOR	
Q112			DTC124EUA	DIGITAL TRANSISTOR	
Q113			DTA143EUA	DIGITAL TRANSISTOR	
Q115,116		✻	2SC3518-Z-T1LK	TRANSISTOR	
Q118			2SC4081	TRANSISTOR	
Q201			2SC4081	TRANSISTOR	
Q202			DTA124EUA	DIGITAL TRANSISTOR	
Q203			DTC124EUA	DIGITAL TRANSISTOR	
Q204			2SA1576A (R,S)	TRANSISTOR	
Q205			DTC124EUA	DIGITAL TRANSISTOR	
Q401			DTC124EUA	DIGITAL TRANSISTOR	
Q403,404			DTC124EUA	DIGITAL TRANSISTOR	
Q501			2SC4081	TRANSISTOR	
Q503,504			2SC4081	TRANSISTOR	
Q506			2SC2413K	TRANSISTOR	
Q507,508			2SC4081	TRANSISTOR	
Q509			2SC4081	TRANSISTOR	E

E : Europe **K** : North America

⚠ Indicates safety critical components.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

MAIN UNIT (X09-7161-00/7162-00)

Ref. No.	Add	New	Parts No.	Description	Destination
Q510			2SC4081	TRANSISTOR	
Q511			2SA1576A (R,S)	TRANSISTOR	
Q512			2SC4081	TRANSISTOR	
Q515			2SC4097	TRANSISTOR	
Q516			2SA1577	TRANSISTOR	
Q702			DTC124EUA	DIGITAL TRANSISTOR	
S201			TPS818	IC	

Ref. No.	Add	New	Parts No.	Description	Destination

E : Europe **K** : North America

⚠ Indicates safety critical components.