EXPLODED VIEW (MECHANISM)

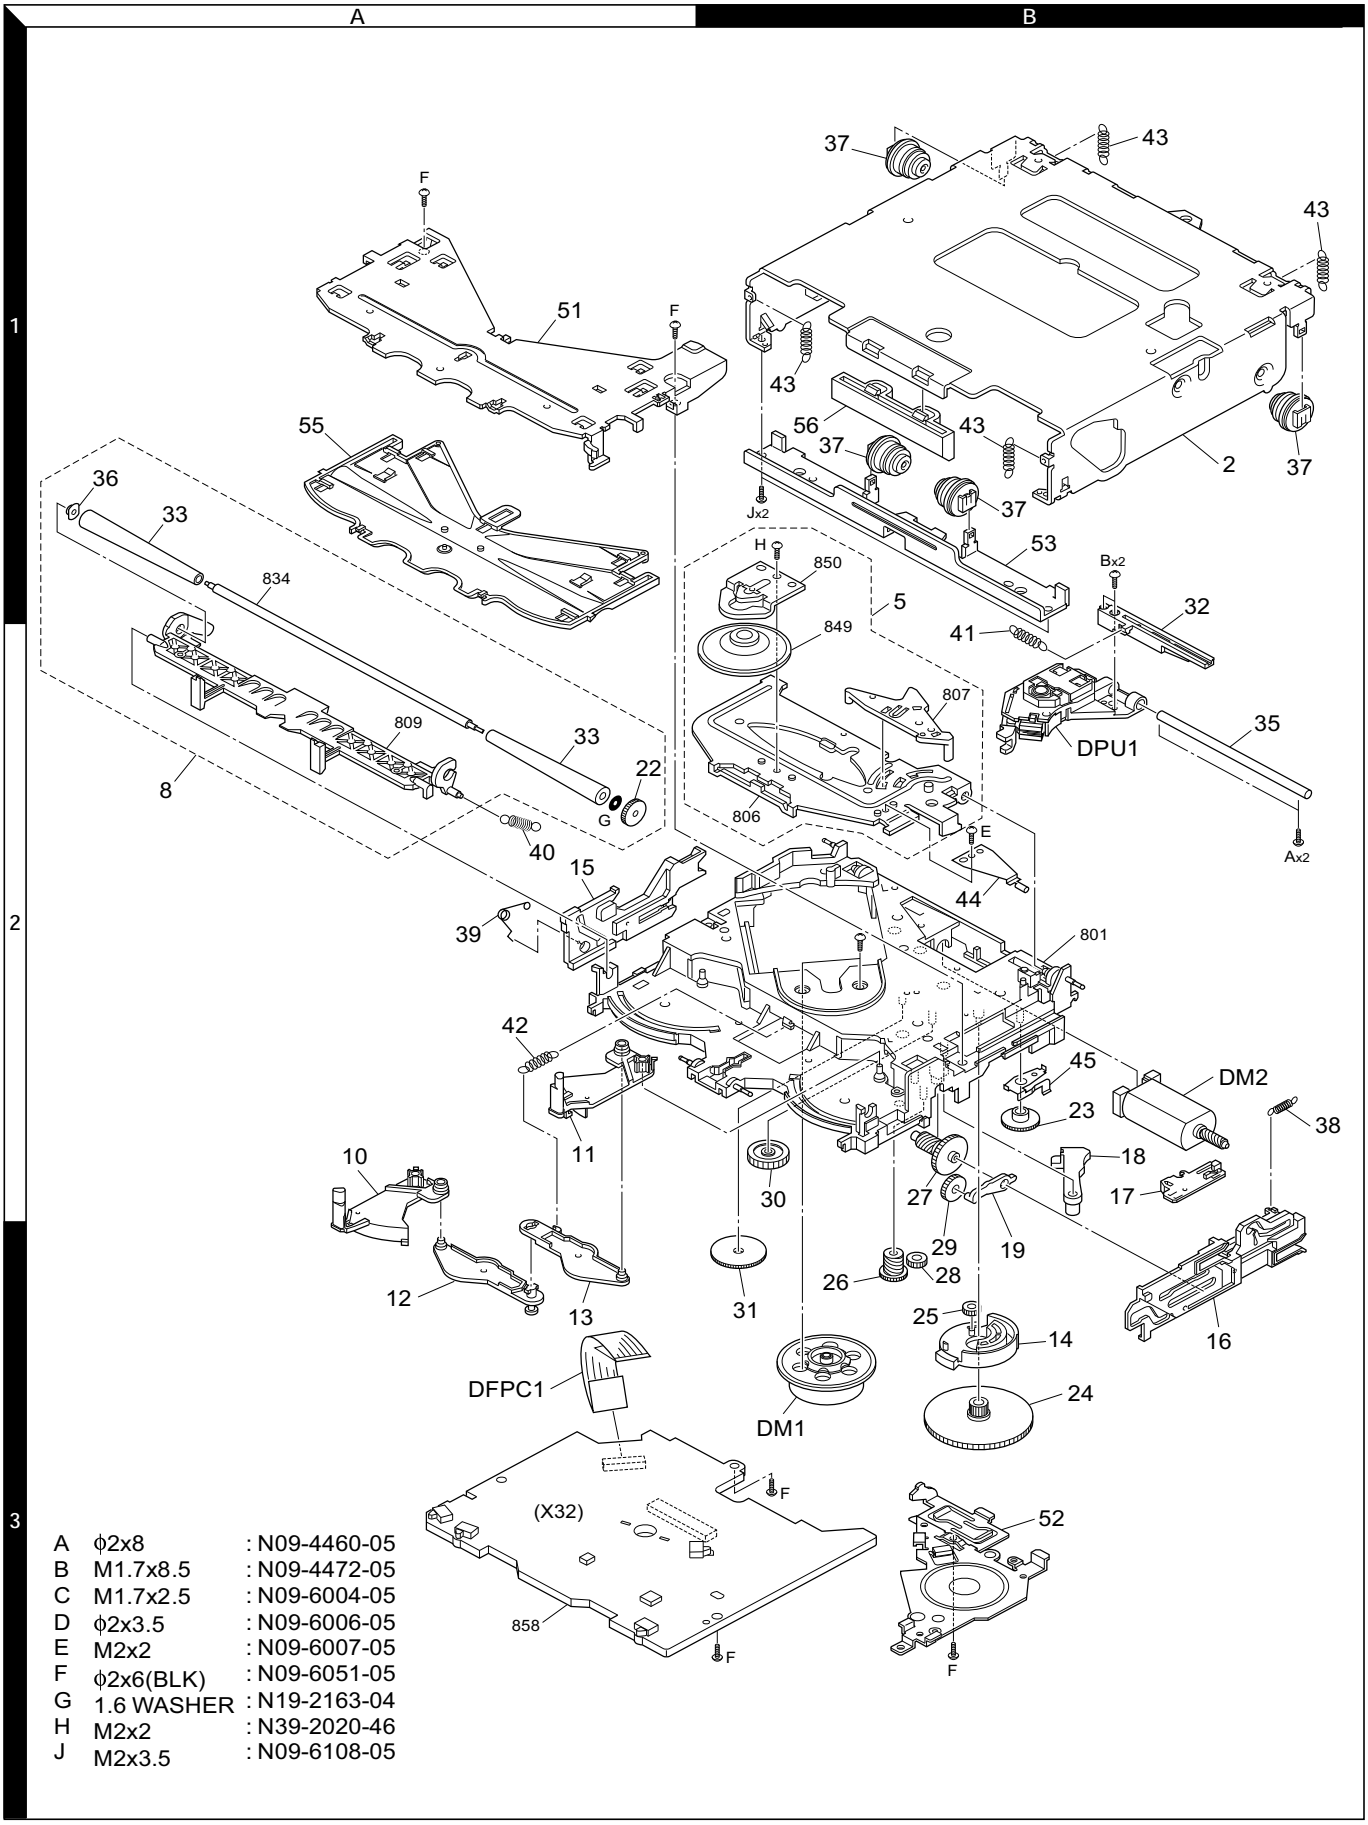

A	ϕ2x8	: N09-4460-05
B	M1.7x8.5	: N09-4472-05
C	M1.7x2.5	: N09-6004-05
D	ϕ2x3.5	: N09-6006-05
E	M2x2	: N09-6007-05
F	ϕ2x6(BLK)	: N09-6051-05
G	1.6 WASHER	: N19-2163-04
H	M2x2	: N39-2020-46
J	M2x3.5	: N09-6108-05

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

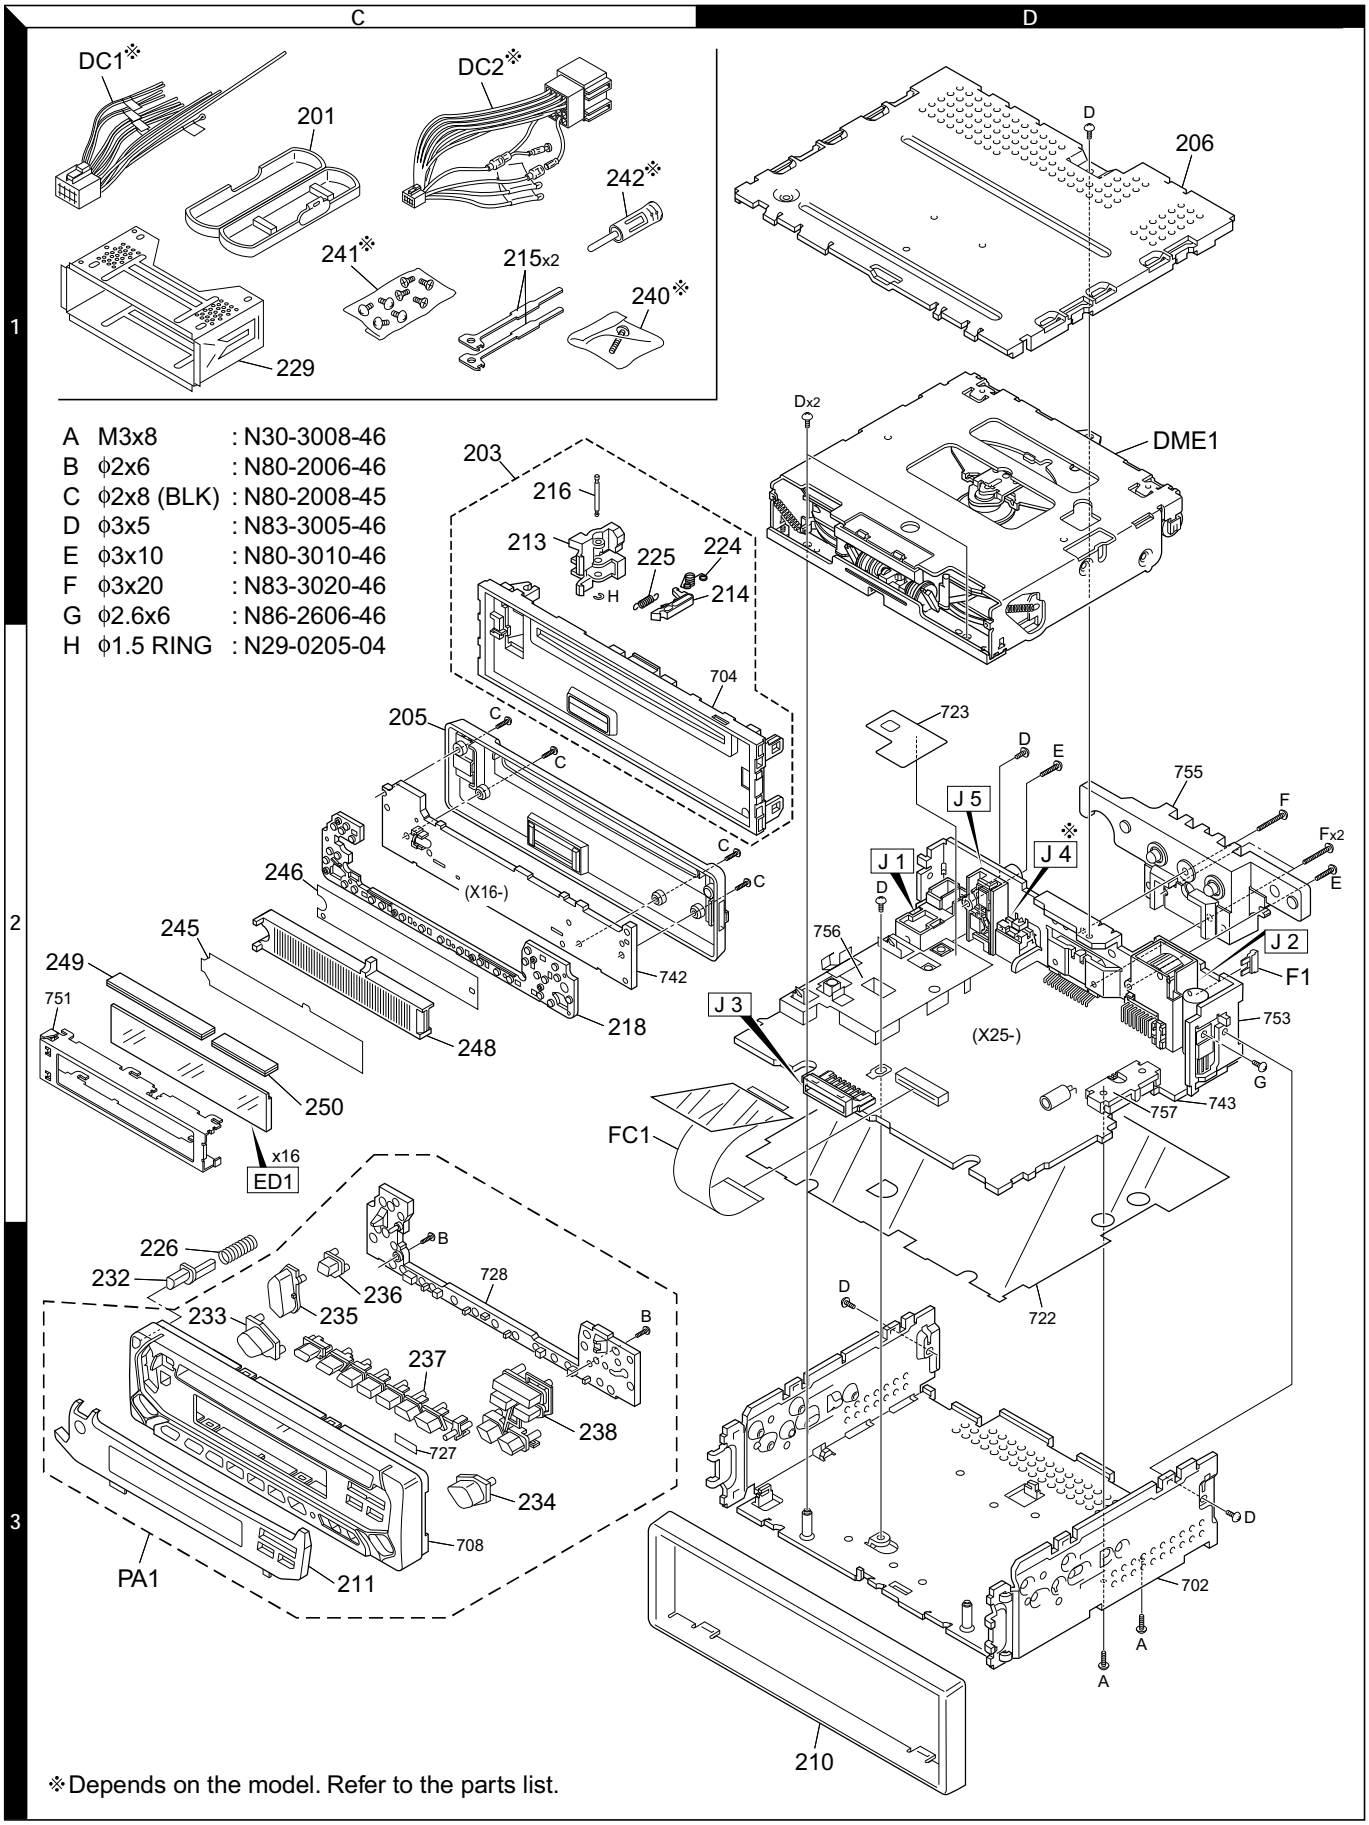

A M3x8 : N30-3008-46
B ϕ2x6 : N80-2006-46
C ϕ2x8 (BLK) : N80-2008-45
D ϕ3x5 : N83-3005-46
E ϕ3x10 : N80-3010-46
F ϕ3x20 : N83-3020-46
G ϕ2.6x6 : N86-2606-46
H ϕ1.5 RING : N29-0205-04

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

＊New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

	Ref. No.	Add	New	Parts No.	Description	Destination
	KDC-2023,2024SA/SG/SYA/SYG,2094YA/YG,222/S,3023					
	201	1C		A02-1486-13	PLASTIC CABINET ASSY	
	203	1C		A22-2863-03	SUB PANEL ASSY	
	205	2C		A46-1750-01	REAR COVER	
	206	1D		A52-0804-02	TOP PLATE	
	PA1	3C	＊	A64-2867-02	PANEL ASSY	K3
	PA1	3C	＊	A64-2868-02	PANEL ASSY	K4
	PA1	3C	＊	A64-2870-02	PANEL ASSY	M
	PA1	3C	＊	A64-2873-02	PANEL ASSY	M3
	PA1	3C	＊	A64-2878-02	PANEL ASSY	E6E7E8
	PA1	3C	＊	A64-2878-02	PANEL ASSY	E9
	PA1	3C	＊	A64-2884-02	PANEL ASSY	E4E5
	-			B46-0100-50	WARRANTY CARD	K3K4M
	-			B46-0100-50	WARRANTY CARD	M3E6E7
	-			B46-0606-04	ID CARD	
	-			B58-1365-04	CAUTION CARD	
	-		＊	B64-2475-00	INSTR.MANUAL(ENG.FRE.SPA.POR.)	K3K4
	-		＊	B64-2476-00	INSTRUCTION MANUAL(ENG.T-CHI.)	MM3
	-		＊	B64-2477-00	INSTRUCTION MANUAL(ARABIC)	MM3
	-		＊	B64-2483-00	INSTRUCTI.MANUAL(ENG.FRE.GER.)	E6E7
	-		＊	B64-2483-00	INSTR.MANUAL(DUT.ITA.SPA.POR.)	E6E7
	-		＊	B64-2487-00	INSTRUCTI.MANUAL(ENG.RUS.POL.)	E4E5
	-		＊	B64-2488-00	INSTRUCTION MANUAL(SWED.FINN.)	E4E5
	-		＊	B64-2489-00	INSTRUCTI.MANUAL(CZE.HUN.CRO.)	E4E5
	-		＊	B64-2490-00	IN.M(ENG.RUS.POL.CZE.HUN.CRO.)	E8E9
	210	3D		B07-3001-02	ESCUTCHEON	ME6E7
	210	3D		B07-3001-02	ESCUTCHEON	E4E5E8
	210	3D		B07-3001-02	ESCUTCHEON	E9
	210	3D		B07-3022-02	ESCUTCHEON	K4M3
	210	3D		B07-3060-02	ESCUTCHEON	K3
	211	3C	＊	B10-4337-01	FRONT GLASS	K3
	211	3C	＊	B10-4338-01	FRONT GLASS	K4
	211	3C	＊	B10-4339-01	FRONT GLASS	M
	211	3C	＊	B10-4342-01	FRONT GLASS	M3
	211	3C	＊	B10-4347-01	FRONT GLASS	E6E7E8
	211	3C	＊	B10-4347-01	FRONT GLASS	E9
	211	3C	＊	B10-4352-01	FRONT GLASS	E4E5
	213	1C		D10-4446-03	LEVER	
	214	2C		D10-4447-03	LEVER	
	215	1C		D10-4589-04	LEVER	
	216	1C		D21-2329-04	SHAFT	
	218	2C		E29-1872-02	CONDUCTIVE RUBBER	
⚠	DC1	1C		E30-4784-05	DC CORD	K3K4M
⚠	DC1	1C		E30-4784-05	DC CORD	M3
⚠	DC1	1C		E30-6131-05	DC CORD	K3K4M
⚠	DC1	1C		E30-6131-05	DC CORD	M3
⚠	DC2	1C		E30-4790-05	DC CORD (ISO)	E6E7E4
⚠	DC2	1C		E30-4790-05	DC CORD (ISO)	E5E8E9
⚠	DC2	1C		E30-6134-05	DC CORD (ISO)	E6E7E4
⚠	DC2	1C		E30-6134-05	DC CORD (ISO)	E5E8E9
⚠	FC1	2D		E39-0476-05	FLAT CABLE	
⚠	F1	2D		F52-0006-05	FUSE(MINI BLADE TYPE)10A	

Ref. No.	Add	New	Parts No.	Description	Destination
224	1C		G01-2987-04	TORSION COIL SPRING	
225	1C		G01-3096-04	EXTENSION SPRING	
226	3C		G01-3149-04	COMPRESSION SPRING	
-		＊	H10-4856-02	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		＊	H54-2736-03	ITEM CARTON CASE	K3
-		＊	H54-2737-03	ITEM CARTON CASE	K4
-		＊	H54-2738-03	ITEM CARTON CASE	M
-		＊	H54-2741-03	ITEM CARTON CASE	M3
-		＊	H54-2744-03	ITEM CARTON CASE	E6
-		＊	H54-2745-03	ITEM CARTON CASE	E7
-		＊	H54-2756-03	ITEM CARTON CASE	E4
-		＊	H54-2757-03	ITEM CARTON CASE	E5
-		＊	H54-2758-03	ITEM CARTON CASE	E8
-		＊	H54-2759-03	ITEM CARTON CASE	E9
229	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
232	3C		K24-3822-04	KNOB (RELEASE)	
233	3C		K24-3823-04	KNOB (SRC)	
234	3C		K24-3824-04	KNOB (AUD)	
235	3C		K24-3825-03	KNOB (VOL)	
236	3C		K24-3826-04	KNOB (EJECT)	
237	3C		K25-1396-03	KNOB (PRE1-6,ATT,RESET)	
238	3C		K25-1397-03	KNOB (AUTO,CLK,FM,AM)	
240	1C		N99-1610-15	SCREW SET	K3K4M
240	1C		N99-1610-15	SCREW SET	M3
241	1C		N99-1719-05	SCREW SET	K3K4M
241	1C		N99-1719-05	SCREW SET	M3
A	3D		N30-3008-46	PAN HEAD MACHINE SCREW	
B	3C		N80-2006-46	PAN HEAD TAPTITE SCREW	
C	2C		N80-2008-45	PAN HEAD TAPTITE SCREW	
D	1D		N83-3005-46	PAN HEAD TAPTITE SCREW	
H	1C		N29-0205-04	RETAINING RING (1.5)	
242	1C		T90-0523-05	ANTENNA ADAPTOR	E6E7E4
242	1C		T90-0523-05	ANTENNA ADAPTOR	E5E8E9
242	1C		T90-0534-05	ANTENNA ADAPTOR	E6E7E4
242	1C		T90-0534-05	ANTENNA ADAPTOR	E5E8E9
DME1	1D	＊	X92-4640-00	MECHANISM ASSY	
	SWITCH UNIT (X16-1460-xx, X16-2370-12)				
245	2C		B11-1358-04	OPTICAL DIFFUSER	E6E7E4
245	2C		B11-1358-04	OPTICAL DIFFUSER	K3K4M
245	2C		B11-1358-04	OPTICAL DIFFUSER	E5E8E9
245	2C		B11-1372-04	OPTICAL DIFFUSER	M3
246	2C		B11-1359-04	REFLECTION SHEET	
248	2C		B19-2130-03	LIGHTING BOARD	
D1 -13			B30-1533-05	LED(1608,PG)	ME7E5
D1 -13			B30-1533-05	LED(1608,PG)	E9
D1 -13			B30-1567-05	LED(1608,RED)	E6E4E8
D1 -13			B30-1567-05	LED(1608,RED)	K3K4M3
D17 ,18			B30-1533-05	LED(1608,PG)	ME7E5
D17 ,18			B30-1533-05	LED(1608,PG)	E9
D17 ,18			B30-1564-05	LED(1608,BLUE)	K3K4

K3 : KDC-222 **K4** : KDC-222S **E4** : KDC-2094YA **E5** : KDC-2094YG
E6 : KDC-2024SA **E7** : KDC-2024SG **E8** : KDC-2024SYA **E9** : KDC-2024SYG
M : KDC-2023 **M3** : KDC-3023

⚠ indicates safety critical components.

PARTS LIST

＊New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
D17 , 18			B30-1567-05	LED(1608,RED)	M3E6E4
D17 , 18			B30-1567-05	LED(1608,RED)	E8
D19			B30-1633-05	LED(WHITE)	E6E7E4
D19			B30-1633-05	LED(WHITE)	K3K4M
D19			B30-1633-05	LED(WHITE)	E5E8E9
D19			B30-1641-05	LED	M3
D20			B30-1533-05	LED(1608,PG)	ME7E5
D20			B30-1533-05	LED(1608,PG)	E9
D20			B30-1567-05	LED(1608,RED)	E6E4E8
D20			B30-1567-05	LED(1608,RED)	K3K4M3
ED1			B38-1079-05	LIQUID CRYSTAL	K3K4
ED1			B38-1080-05	LIQUID CRYSTAL	ME6E7
ED1			B38-1080-05	LIQUID CRYSTAL	E4E5E8
ED1			B38-1080-05	LIQUID CRYSTAL	E9
ED1			B38-1081-05	LIQUID CRYSTAL	M3
C1			CK73GB1H102K	CHIP C 1000PF K	
C2 , 3			CK73GB1E473K	CHIP C 0.047UF K	
C2 , 3			CK73GB1H473K	CHIP C 0.047UF K	
C4			CK73GB1H103K	CHIP C 0.010UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	
C9			CK73GB1H103K	CHIP C 0.010UF K	
249	2C		E29-1887-04	CONDUCTIVE RUBBER	
250	2C		E29-1888-04	CONDUCTIVE RUBBER	
J1			E59-0828-05	RECTANGULAR PLUG	
-			J19-5130-04	HOLDER (LED)	
R2 -4			RK73GB2A471J	CHIP R 470 J 1/10W	
R5			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R7			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R8			RK73GB2A563J	CHIP R 56K J 1/10W	
R10			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R12			RK73GB2A102J	CHIP R 1.0K J 1/10W	MM3
R13			RK73FB2B470J	CHIP R 47 J 1/8W	
R14 , 15			RK73FB2B331J	CHIP R 330 J 1/8W	
R16 -20			RK73FB2B511J	CHIP R 510 J 1/8W	
R21 , 22			RK73FB2B221J	CHIP R 220 J 1/8W	
D22			MA3062WA	ZENER DIODE	
IC1			LC75853NE	MOS-IC	
IC2			RS-171	ANALOGUE IC	MM3
Q1			DTA114EUA	DIGITAL TRANSISTOR	
Q1			UN5111	DIGITAL TRANSISTOR	

ELECTRIC UNIT (X25-9600-xx, X25-9612-7x)

Ref. No.	Add	New	Parts No.	Description	Destination
D102			B30-1567-05	LED(1608,RED)	
C1			C90-5242-05	ELECTRO 3300UF 16WV	
C21			CK73GB1H103K	CHIP C 0.010UF K	
C40			CK73GB1H103K	CHIP C 0.010UF K	
C50			CE04NW1E100M	ELECTRO 10UF 25WV	E7E4E5
C50			CE04NW1E100M	ELECTRO 10UF 25WV	K3K4E6
C50			CE04NW1E100M	ELECTRO 10UF 25WV	E8E9
C50 , 51			CE04NW1E100M	ELECTRO 10UF 25WV	MM3
C52 -54			CE04NW1C100M	ELECTRO 10UF 16WV	
C55			CE04NW1E100M	ELECTRO 10UF 25WV	
C56			CE04CW1H100M	ELECTRO 10UF 50WV	

SWITCH UNIT (X16-1460-xx, X16-2370-12)

Ref. No.	Add	New	Parts No.	Description	Destination
C57			C90-2980-05	ELECTRO 220UF 16WV	
C58			C90-2962-05	ELECTRO 100UF 16WV	
C63			CE04NW1C220M	ELECTRO 22UF 16WV	
C101			CE04NW0J101M	ELECTRO 100UF 6.3WV	
C102			CK73GB1H103K	CHIP C 0.010UF K	
C103			CK73GB1C104K	CHIP C 0.10UF K	
C104 , 105			CC73GCH1H150J	CHIP C 15PF J	
C106			CK73GB1H102K	CHIP C 1000PF K	E6E7E4
C106			CK73GB1H102K	CHIP C 1000PF K	E5E8E9
C106			CK73GB1H152K	CHIP C 1500PF K	K3K4M
C106			CK73GB1H152K	CHIP C 1500PF K	M3
C142			CK73GB1C104K	CHIP C 0.10UF K	
C204 , 205			CE04NW1H2R2M	ELECTRO 2.2UF 50WV	
C223 , 224			CE04NW1C100M	ELECTRO 10UF 16WV	
C251-254			C90-5296-05	NP-ELECT 0.22UF 50WV	
C255			CE04NW1H010M	ELECTRO 1.0UF 50WV	
C256			CE04NW1A101M	ELECTRO 100UF 10WV	E7E4E5
C256			CE04NW1A101M	ELECTRO 100UF 10WV	K3K4E6
C256			CE04NW1A101M	ELECTRO 100UF 10WV	E8E9
C256			CE04NW1A330M	ELECTRO 33UF 10WV	MM3
C257			CE04NW1H010M	ELECTRO 1.0UF 50WV	
C258			C90-2935-05	ELECTRO 1.0UF 50WV	
C401 , 402			C90-2608-05	ELECTRO 1.0UF 50WV	MM3
C403			CE04CW1A101M	ELECTRO 100UF 10WV	MM3
C404			CK73GB1H103K	CHIP C 0.010UF K	MM3
C502			CK73GB1H152K	CHIP C 1500PF K	
C503			CK73GB1C104K	CHIP C 0.10UF K	
C504			CK73GB1H103K	CHIP C 0.010UF K	
C505			C90-2595-05	ELECTRO 4.7UF 16WV	
C506			CK73GB1C104K	CHIP C 0.10UF K	
C507			CE04CW1A330M	ELECTRO 33UF 10WV	
C508			CE04CW1A220M	ELECTRO 22UF 10WV	
C509			CC73GCH1H680J	CHIP C 68PF J	
C510			CC73GCH1H101J	CHIP C 100PF J	
C511			CK73GB1H103K	CHIP C 0.010UF K	
C512			C90-2595-05	ELECTRO 4.7UF 16WV	
C513 , 514			CK73GB1H103K	CHIP C 0.010UF K	
C515			CK73FB1C105K	CHIP C 1.0UF K	
C516			CC73GCH1H100D	CHIP C 10PF D	
C521			CK73GB1C104K	CHIP C 0.10UF K	
C522			CC73GCH1H330J	CHIP C 33PF J	K3K4M
C522			CC73GCH1H330J	CHIP C 33PF J	M3E6E7
C522			CC73GCH1H330J	CHIP C 33PF J	E8E9
C522			CC73GCH1H390J	CHIP C 39PF J	E4E5
C523			CC73GCH1H150J	CHIP C 15PF J	E4E5
C523			CC73GCH1H270J	CHIP C 27PF J	K3K4M
C523			CC73GCH1H270J	CHIP C 27PF J	M3E6E7
C523			CC73GCH1H270J	CHIP C 27PF J	E8E9
C524			CC73GCH1H101J	CHIP C 100PF J	
C525			CK73GB1H103K	CHIP C 0.010UF K	
C526			CC73GCH1H050C	CHIP C 5.0PF C	K3K4M
C526			CC73GCH1H050C	CHIP C 5.0PF C	M3E6E7
C526			CC73GCH1H050C	CHIP C 5.0PF C	E8E9
C528			CC73GCH1H060D	CHIP C 6.0PF D	
C530			CC73GCH1H040C	CHIP C 4.0PF C	K3K4M

K3 : KDC-222 **K4** : KDC-222S **E4** : KDC-2094YA **E5** : KDC-2094YG
E6 : KDC-2024SA **E7** : KDC-2024SG **E8** : KDC-2024SYA **E9** : KDC-2024SYG
M : KDC-2023 **M3** : KDC-3023

⚠ indicates safety critical components.

PARTS LIST

＊New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description			Destination
C530			CC73GCH1H040C	CHIP C	4.0PF	C	M3E6E7
C530			CC73GCH1H040C	CHIP C	4.0PF	C	E8E9
C530			CC73GCH1H080D	CHIP C	8.0PF	D	E4E5
C531			CK73FB1C105K	CHIP C	1.0UF	K	
C533,534			CK73GB1H103K	CHIP C	0.010UF	K	
C535			CC73GCH1H020C	CHIP C	2.0PF	C	K3K4M
C535			CC73GCH1H020C	CHIP C	2.0PF	C	M3E6E7
C535			CC73GCH1H020C	CHIP C	2.0PF	C	E8E9
C535,536			CC73GCH1H020C	CHIP C	2.0PF	C	E4E5
C536			CC73GCH1H040C	CHIP C	4.0PF	C	K3K4M
C536			CC73GCH1H040C	CHIP C	4.0PF	C	M3E6E7
C536			CC73GCH1H040C	CHIP C	4.0PF	C	E8E9
C537,538			CC73GCH1H080D	CHIP C	8.0PF	D	K3K4M
C537,538			CC73GCH1H080D	CHIP C	8.0PF	D	M3E6E7
C537,538			CC73GCH1H080D	CHIP C	8.0PF	D	E8E9
C537,538			CC73GCH1H100D	CHIP C	10PF	D	E4E5
C541			CC73GCH1H010C	CHIP C	1.0PF	C	E4E5
C541			CC73GCH1H040C	CHIP C	4.0PF	C	K3K4M
C541			CC73GCH1H040C	CHIP C	4.0PF	C	M3E6E7
C541			CC73GCH1H040C	CHIP C	4.0PF	C	E8E9
C542			CC73GCH1H220J	CHIP C	22PF	J	
C543			CC73GCH1H680J	CHIP C	68PF	J	
C544			CC73GCH1H150J	CHIP C	15PF	J	
C545			CK73GB1H682K	CHIP C	6800PF	K	
C546			CK73GB1H103K	CHIP C	0.010UF	K	
C547			C90-2594-05	ELECTRO	10UF	10WV	
C548			CK73GB1E223K	CHIP C	0.022UF	K	
C549			CK73GB1H222K	CHIP C	2200PF	K	
C550			CK73GB1E333K	CHIP C	0.033UF	K	
C551,552			CK73GB1H103K	CHIP C	0.010UF	K	
C553,554			CK73GB1C104K	CHIP C	0.10UF	K	
C555,556			CK73GB1H102K	CHIP C	1000PF	K	
C560			CC73GCH1H101J	CHIP C	100PF	J	
C561			C90-2608-05	ELECTRO	1.0UF	50WV	
C562			C90-2594-05	ELECTRO	10UF	10WV	
C563			C90-2606-05	ELECTRO	0.47UF	50WV	
C564			CK73GB1A474K	CHIP C	0.47UF	K	
C565			CE04NW1A470M	ELECTRO	47UF	10WV	
C568			CC73GCH1H821J	CHIP C	820PF	J	
C580			CK73GB1H103K	CHIP C	0.010UF	K	
C581			CC73GCH1H020C	CHIP C	2.0PF	C	
C582,583			CK73GB1C104K	CHIP C	0.10UF	K	
C584			C90-2594-05	ELECTRO	10UF	10WV	
C585			CK73GB1H103K	CHIP C	0.010UF	K	
C586			CK73GB1C104K	CHIP C	0.10UF	K	
C587			CK73GB1H103K	CHIP C	0.010UF	K	
C588			CK73GB1A474K	CHIP C	0.47UF	K	
C589			CK73GB1C104K	CHIP C	0.10UF	K	
C591			CE04CW1A330M	ELECTRO	33UF	10WV	
C593			CK73FB1C105K	CHIP C	1.0UF	K	
C600			CE04CW1A101M	ELECTRO	100UF	10WV	
CN1			E40-9550-05	FLAT CABLE CONNECTOR			
J1			E04-0312-05	RF COAXIAL CABLE RECEPTACLE			
⚠ J2			E58-0863-15	RECTANGULAR RECEPTACLE			

ELECTRIC UNIT (X25-9600-xx, X25-9612-7x)

Ref. No.	Add	New	Parts No.	Description			Destination
J3			E58-0879-05	RECTANGULAR RECEPTACLE			
J4			E56-0834-05	CYLINDRICAL RECEPTACLE			MM3
J5			E63-0852-05	PIN JACK			
CF51			L72-0781-05	CERAMIC FILTER			E6E7E4
CF51			L72-0781-05	CERAMIC FILTER			E5E8E9
CF51-53			L72-0781-05	CERAMIC FILTER			K3K4M
CF51-53			L72-0781-05	CERAMIC FILTER			M3
CF52,53			L72-0716-05	CERAMIC FILTER			E6E7E4
CF52,53			L72-0716-05	CERAMIC FILTER			E5E8E9
CF54			L72-0743-05	CERAMIC FILTER			
L1			L33-1170-05	CHOKE COIL ASSY			
L2			L33-1807-05	CHOKE COIL			
L4			L33-1123-05	LINE FILTER COIL			
L101			L40-4795-91	SMALL FIXED INDUCTOR(4.7UH,J)			
L501			L40-6891-58	SMALL FIXED INDUCTOR			
L502		✻	L40-3301-58	SMALL FIXED INDUCTOR(33U)			
L503			L40-1021-56	SMALL FIXED INDUCTOR(1MH)			
L504			L40-1011-58	SMALL FIXED INDUCTOR			
L505		✻	L31-0967-05	FM-RF COIL			K3K4M
L505		✻	L31-0967-05	FM-RF COIL			M3E6E7
L505		✻	L31-0967-05	FM-RF COIL			E8E9
L505		✻	L31-0968-05	FM-RF COIL			E4E5
L506		✻	L31-0970-05	FM-RF COIL			K3K4M
L506		✻	L31-0970-05	FM-RF COIL			M3E6E7
L506		✻	L31-0970-05	FM-RF COIL			E8E9
L506		✻	L31-0971-05	FM-RF COIL			E4E5
L507		✻	L32-0933-05	OSCILATING COIL			K3K4M
L507		✻	L32-0933-05	OSCILATING COIL			M3E6E7
L507		✻	L32-0933-05	OSCILATING COIL			E8E9
L507		✻	L32-0934-05	OSCILATING COIL			E4E5
L508		✻	L30-0770-05	FM IFT			
L509		✻	L30-0771-05	AM IFT			
L510-517			L40-4795-91	SMALL FIXED INDUCTOR(4.7UH,J)			
X1			L77-1167-05	CRYSTAL RESONATOR(4.19M)			
X501			L77-2077-05	CRYSTAL RESONATOR			
D	2D		N83-3005-46	PAN HEAD TAPTITE SCREW			
E	2D		N80-3010-46	PAN HEAD TAPTITE SCREW			
F	2D		N83-3020-46	PAN HEAD TAPTITE SCREW			
G	2D		N86-2606-46	BINDING HEAD TAPTITE SCREW			
CP1			R90-1049-05	MULTI-COMP	10K X2		
CP2			R90-1047-05	MULTI-COMP	2.2K X2		
CP3			R90-1046-05	MULTI-COMP	1K X2		
R10			RK73FB2B303J	CHIP R	30K	J 1/8W	
R11			RK73GB2A103J	CHIP R	10K	J 1/10W	
R12			RK73GB2A104J	CHIP R	100K	J 1/10W	
R20			RD14DB2H332J	SMALL-RD	3.3K	J 1/2W	
R21			RD14BB2C333J	RD	33K	J 1/6W	
R22			RK73GB2A103J	CHIP R	10K	J 1/10W	
R23			RK73GB2A104J	CHIP R	100K	J 1/10W	
R25			RD14BB2C472J	RD	4.7K	J 1/6W	E7E4E5
R25			RD14BB2C472J	RD	4.7K	J 1/6W	MM3E6
R25			RD14BB2C472J	RD	4.7K	J 1/6W	E8E9
R28			RD14BB2C472J	RD	4.7K	J 1/6W	
R31			RK73GB2A473J	CHIP R	47K	J 1/10W	E6E7E4

K3 : KDC-222 **K4** : KDC-222S **E4** : KDC-2094YA **E5** : KDC-2094YG
E6 : KDC-2024SA **E7** : KDC-2024SG **E8** : KDC-2024SYA **E9** : KDC-2024SYG
M : KDC-2023 **M3** : KDC-3023

⚠ indicates safety critical components.

PARTS LIST

＊New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9600-xx, X25-9612-7x)

Ref. No.	Add	New	Parts No.	Description	Destination
R31			RK73GB2A473J	CHIP R 47K J 1/10W	E5E8E9
R32			RK73GB2A223J	CHIP R 22K J 1/10W	E6E7E4
R32			RK73GB2A223J	CHIP R 22K J 1/10W	E5E8E9
R50			RD14BB2C562J	RD 5.6K J 1/6W	
R51			RK73GB2A473J	CHIP R 47K J 1/10W	
R57			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R58			RK73GB2A471J	CHIP R 470 J 1/10W	
R67 -69			RK73GB2A103J	CHIP R 10K J 1/10W	MM3
R68 ,69			RK73GB2A103J	CHIP R 10K J 1/10W	E7E4E5
R68 ,69			RK73GB2A103J	CHIP R 10K J 1/10W	K3K4E6
R68 ,69			RK73GB2A103J	CHIP R 10K J 1/10W	E8E9
R71			RK73GB2A823J	CHIP R 82K J 1/10W	
R72			RK73GB2A363J	CHIP R 36K J 1/10W	
R73			RK73GB2A104J	CHIP R 100K J 1/10W	
R101			RD14BB2C241J	RD 240 J 1/6W	
R103,104			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R105			RK73GB2A471J	CHIP R 470 J 1/10W	
R106			RK73GB2A104J	CHIP R 100K J 1/10W	
R107,108			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R110			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R113,114			RK73GB2A473J	CHIP R 47K J 1/10W	
R115			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R116			RK73GB2A103J	CHIP R 10K J 1/10W	
R117			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R118			RK73GB2A103J	CHIP R 10K J 1/10W	
R119			RK73GB2A473J	CHIP R 47K J 1/10W	
R121			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R122			RK73GB2A101J	CHIP R 100 J 1/10W	
R123			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R125			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R126			RK73GB2A104J	CHIP R 100K J 1/10W	
R127			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R128			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R129,130			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R131			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R132			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R133			RK73GB2A123J	CHIP R 12K J 1/10W	
R135			RK73GB2A473J	CHIP R 47K J 1/10W	K3K4
R136			RK73GB2A473J	CHIP R 47K J 1/10W	E6E7E4
R136			RK73GB2A473J	CHIP R 47K J 1/10W	E5E8E9
R136,137			RK73GB2A473J	CHIP R 47K J 1/10W	MM3
R138			RK73GB2A473J	CHIP R 47K J 1/10W	E6E7E4
R138			RK73GB2A473J	CHIP R 47K J 1/10W	E5E8E9
R138,139			RK73GB2A473J	CHIP R 47K J 1/10W	K3K4
R139			RK73GB2A473J	CHIP R 47K J 1/10W	MM3
R140			RK73GB2A473J	CHIP R 47K J 1/10W	E6E7E4
R140			RK73GB2A473J	CHIP R 47K J 1/10W	E5E8E9
R141			RD14BB2C472J	RD 4.7K J 1/6W	
R143			RD14BB2C472J	RD 4.7K J 1/6W	
R144			RK73GB2A104J	CHIP R 100K J 1/10W	
R145			RD14BB2C222J	RD 2.2K J 1/6W	
R163			RD14BB2C100J	RD 10 J 1/6W	
R164,165			RD14BB2C471J	RD 470 J 1/6W	
R166			RD14BB2C102J	RD 1.0K J 1/6W	
R167			RD14BB2C101J	RD 100 J 1/6W	
R169			RD14BB2C102J	RD 1.0K J 1/6W	E7E4E5
R169			RD14BB2C102J	RD 1.0K J 1/6W	K3K4E6
R169			RD14BB2C102J	RD 1.0K J 1/6W	E8E9
R169,170			RD14BB2C102J	RD 1.0K J 1/6W	MM3
R171			RD14BB2C470J	RD 47 J 1/6W	MM3
R172			RD14BB2C102J	RD 1.0K J 1/6W	
R174			RK73GB2A473J	CHIP R 47K J 1/10W	
R201			RK73GB2A473J	CHIP R 47K J 1/10W	
R223,224			RK73FB2B271J	CHIP R 270 J 1/8W	
R227,228			RD14BB2C303J	RD 30K J 1/6W	
R231,232			RD14BB2C101J	RD 100 J 1/6W	
R251			RK73GB2A472J	CHIP R 4.7K J 1/10W	E7E4E5
R251			RK73GB2A472J	CHIP R 4.7K J 1/10W	K3K4E6
R251			RK73GB2A472J	CHIP R 4.7K J 1/10W	E8E9
R252,253			RD14BB2C472J	RD 4.7K J 1/6W	E7E4E5
R252,253			RD14BB2C472J	RD 4.7K J 1/6W	K3K4E6
R252,253			RD14BB2C472J	RD 4.7K J 1/6W	E8E9
R254			RK73GB2A472J	CHIP R 4.7K J 1/10W	E7E4E5
R254			RK73GB2A472J	CHIP R 4.7K J 1/10W	K3K4E6
R254			RK73GB2A472J	CHIP R 4.7K J 1/10W	E8E9
R255			RK73GB2A333J	CHIP R 33K J 1/10W	
R256			RK73FB2B102J	CHIP R 1.0K J 1/8W	E7E4E5
R256			RK73FB2B102J	CHIP R 1.0K J 1/8W	K3K4E6
R256			RK73FB2B102J	CHIP R 1.0K J 1/8W	E8E9
R257			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R258			RK73GB2A101J	CHIP R 100 J 1/10W	E7E4E5
R258			RK73GB2A101J	CHIP R 100 J 1/10W	K3K4E6
R258			RK73GB2A101J	CHIP R 100 J 1/10W	E8E9
R258			RK73GB2A221J	CHIP R 220 J 1/10W	MM3
R259			RD14BB2C223J	RD 22K J 1/6W	
R260			RK73GB2A751J	CHIP R 750 J 1/10W	E7E4E5
R260			RK73GB2A751J	CHIP R 750 J 1/10W	K3K4E6
R260			RK73GB2A751J	CHIP R 750 J 1/10W	E8E9
R261			RK73GB2A100J	CHIP R 10 J 1/10W	MM3
R261			RK73GB2A431J	CHIP R 430 J 1/10W	E7E4E5
R261			RK73GB2A431J	CHIP R 430 J 1/10W	K3K4E6
R261			RK73GB2A431J	CHIP R 430 J 1/10W	E8E9
R263			RK73GB2A184J	CHIP R 180K J 1/10W	E7E4E5
R263			RK73GB2A184J	CHIP R 180K J 1/10W	K3K4E6
R263			RK73GB2A184J	CHIP R 180K J 1/10W	E8E9
R263			RK73GB2A432J	CHIP R 4.3K J 1/10W	MM3
R264			RK73GB2A473J	CHIP R 47K J 1/10W	
R401,402			RD14BB2C100J	RD 10 J 1/6W	MM3
R403			RD14BB2C4R7J	RD 4.7 J 1/6W	MM3
R404			RD14BB2C101J	RD 100 J 1/6W	MM3
R405-409			RD14BB2C472J	RD 4.7K J 1/6W	MM3
R410,411			RD14BB2C101J	RD 100 J 1/6W	MM3
R412-415			RK73GB2A104J	CHIP R 100K J 1/10W	MM3
R415			RK73GB2A104J	CHIP R 100K J 1/10W	E7E4E5
R415			RK73GB2A104J	CHIP R 100K J 1/10W	K3K4E6
R415			RK73GB2A104J	CHIP R 100K J 1/10W	E8E9
R501			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R502			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R503			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R505			RK73GB2A102J	CHIP R 1.0K J 1/10W	

K3 : KDC-222 **K4** : KDC-222S **E4** : KDC-2094YA **E5** : KDC-2094YG
E6 : KDC-2024SA **E7** : KDC-2024SG **E8** : KDC-2024SYA **E9** : KDC-2024SYG
M : KDC-2023 **M3** : KDC-3023

⚠ indicates safety critical components.

PARTS LIST

＊New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9600-xx, X25-9612-7x)

Ref. No.	Add	New	Parts No.	Description	Destination
R506			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R507			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R521-524			RK73GB2A104J	CHIP R 100K J 1/10W	
R525			RK73GB2A331J	CHIP R 330 J 1/10W	
R526			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R527			RK73GB2A104J	CHIP R 100K J 1/10W	
R528			RD14BB2C104J	RD 100K J 1/6W	
R543			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R544			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R545			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R546			RK73GB2A333J	CHIP R 33K J 1/10W	
R547			RK73GB2A220J	CHIP R 22 J 1/10W	
R561			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R563,564			RK73GB2A103J	CHIP R 10K J 1/10W	
R565			RK73GB2A104J	CHIP R 100K J 1/10W	
R566,567			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R581			RK73GB2A102J	CHIP R 1.0K J 1/10W	
W156,157			R92-2053-05	CHIP R 0 J 1/8W	
W158			R92-1252-05	CHIP R 0 OHM J 1/16W	
W160			R92-2052-05	CHIP R 0 OHM J 1/10W	K3K4
W161,162			R92-2053-05	CHIP R 0 J 1/8W	
W165			R92-2053-05	CHIP R 0 J 1/8W	
W405,406			R92-1252-05	CHIP R 0 OHM J 1/16W	MM3
W409			R92-1252-05	CHIP R 0 OHM J 1/16W	MM3
W410			R92-1252-05	CHIP R 0 OHM J 1/16W	E6E7E4
W410			R92-1252-05	CHIP R 0 OHM J 1/16W	E5E8E9
W415			R92-2053-05	CHIP R 0 J 1/8W	
W500,501			R92-1252-05	CHIP R 0 OHM J 1/16W	
W504,505			R92-1252-05	CHIP R 0 OHM J 1/16W	
W506			R92-2053-05	CHIP R 0 J 1/8W	
W507			R92-1252-05	CHIP R 0 OHM J 1/16W	
W508			R92-2053-05	CHIP R 0 J 1/8W	
W509			R92-1252-05	CHIP R 0 OHM J 1/16W	
W510			R92-2053-05	CHIP R 0 J 1/8W	
W511			R92-1252-05	CHIP R 0 OHM J 1/16W	
W516			R92-1252-05	CHIP R 0 OHM J 1/16W	
W517			R92-2053-05	CHIP R 0 J 1/8W	
W519			R92-2053-05	CHIP R 0 J 1/8W	
W521			R92-1252-05	CHIP R 0 OHM J 1/16W	
W523,524			R92-1252-05	CHIP R 0 OHM J 1/16W	
W530			R92-2053-05	CHIP R 0 J 1/8W	
W531,532			R92-1252-05	CHIP R 0 OHM J 1/16W	
W533			R92-2053-05	CHIP R 0 J 1/8W	
W534			R92-1252-05	CHIP R 0 OHM J 1/16W	
W578			R92-1252-05	CHIP R 0 OHM J 1/16W	E6E7E4
W578			R92-1252-05	CHIP R 0 OHM J 1/16W	E5E8E9
W601			R92-1252-05	CHIP R 0 OHM J 1/16W	
D1			S2V20*A	DIODE	
D1			1N5393G-M6	DIODE	
D3			IMSA-6801	SURGE ABSORBER	
D10			MA4068(N)-M	ZENER DIODE	
D11			D1F60	DIODE	E7E4E5
D11			D1F60	DIODE	MM3E6
D11			D1F60	DIODE	E8E9

Ref. No.	Add	New	Parts No.	Description	Destination
D12			AM01Z	DIODE	E7E4E5
D12			AM01Z	DIODE	MM3E6
D12			AM01Z	DIODE	E8E9
D13			D1F60	DIODE	
D14			AM01Z	DIODE	
D20			MA4068(N)-M	ZENER DIODE	
D40			1SS133	DIODE	
D50			DAN202U	DIODE	
D51			MA4082(N)-L	ZENER DIODE	
D70			MA4068(N)-M	ZENER DIODE	
D101			1SS133	DIODE	
D103			DA204U	DIODE	
D106			MA4062-L	ZENER DIODE	
D107			MA3062WA	ZENER DIODE	
D108			MA4062-L	ZENER DIODE	MM3
D110			HZS12A2	ZENER DIODE	
D201,202			MA4068(N)-M	ZENER DIODE	
D251-253			1SS133	DIODE	
D261-263			AM01Z	DIODE	MM3
D264			D1F60	DIODE	MM3
D264			S1J	DIODE	MM3
D265,266			AM01Z	DIODE	MM3
D267,268			D1F60	DIODE	MM3
D267,268			S1J	DIODE	MM3
D401,402			MA4068(N)-M	ZENER DIODE	MM3
D403-405			MA4062-L	ZENER DIODE	MM3
D407-410			MA4062-L	ZENER DIODE	MM3
D411			MA3062WA	ZENER DIODE	MM3
D501			RN739F	DIODE	
D503			RN739F	DIODE	
D504-506		✻	KV1720S	VARIABLE CAPACITANCE DIODE	K3K4M
D504-506		✻	KV1720S	VARIABLE CAPACITANCE DIODE	M3E6E7
D504-506		✻	KV1720S	VARIABLE CAPACITANCE DIODE	E8E9
D504-506		✻	KV1735S	VARIABLE CAPACITANCE DIODE	E4E5
IC1		✻	UPD780058GC499	MI-COM IC	E7E8E9
IC1		✻	UPD780058GC499	MI-COM IC	MM3E6
IC1		✻	UPD780058GC501	MI-COM IC	K3K4
IC1		✻	UPD780058GC503	MI-COM IC	E4E5
IC4			TDA7386	ANALOGUE IC	E7E4E5
IC4			TDA7386	ANALOGUE IC	K3K4E6
IC4			TDA7386	ANALOGUE IC	E8E9
IC4			TDA7560	ANALOGUE IC	MM3
IC7			BA4911-V4	ANALOGUE IC	
IC8			HD74HC27FP	MOS-IC	
IC10		✻	TDA7513	ANALOGUE IC	
IC11		✻	PST3435UL	MOS-IC	
IC12			BR24C01AF-W	MEMORY IC	
IC12			M24C01-WMN6T	MEMORY IC	
IC12		✻	S-24CS02AFJ-TB	MEMORY IC	
Q10			2SC4081	TRANSISTOR	
Q20			2SC4081	TRANSISTOR	
Q40			DTA124EUA	DIGITAL TRANSISTOR	
Q50			2SA1036K	TRANSISTOR	
Q51			UMC2N	TRANSISTOR	
Q53			UMC2N	TRANSISTOR	MM3

K3 : KDC-222 **K4** : KDC-222S **E4** : KDC-2094YA **E5** : KDC-2094YG
E6 : KDC-2024SA **E7** : KDC-2024SG **E8** : KDC-2024SYA **E9** : KDC-2024SYG
M : KDC-2023 **M3** : KDC-3023

⚠ indicates safety critical components.

PARTS LIST

✻New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
Q55			2SD2375	TRANSISTOR	
Q70			2SC4081	TRANSISTOR	
Q101			2SC4081	TRANSISTOR	
Q102			DTA114YUA	DIGITAL TRANSISTOR	
Q223,224			DTC143TUA	DIGITAL TRANSISTOR	
Q251			DTC114YUA	DIGITAL TRANSISTOR	E7E4E5
Q251			DTC114YUA	DIGITAL TRANSISTOR	K3K4E6
Q251			DTC114YUA	DIGITAL TRANSISTOR	E8E9
Q501		✻	CPH5905	TRANSISTOR	
Q502			3SK126	FET	
TH1			PTH9C42BE471Q	POSITIVE RESISTOR	
CD PLAYER UNIT (X32-5380-00)					
C1			C92-0566-05	CHIP-TAN 10UF 6.3WV	
C2			CK73FB1A225K	CHIP C 2.2UF K	
C3			CK73GB0J105K	CHIP C 1.0UF K	
C5			CC73GCH1H020C	CHIP C 2.0PF C	
C6			CC73GCH1H390J	CHIP C 39PF J	
C7			CK73GB1C104K	CHIP C 0.10UF K	
C8			CK73GB0J105K	CHIP C 1.0UF K	
C9			CK73GB1H472K	CHIP C 4700PF K	
C10			CK73GB1C333K	CHIP C 0.033UF K	
C11			CK73GB1H682K	CHIP C 6800PF K	
C12			CK73GB1H332K	CHIP C 3300PF K	
C13			CC73GCH1H271J	CHIP C 270PF J	
C14			CK73GB1H472K	CHIP C 4700PF K	
C15			CK73GB1H222K	CHIP C 2200PF K	
C16			CC73GCH1H331J	CHIP C 330PF J	
C17 ,18			CK73GB1C104K	CHIP C 0.10UF K	
C31 -34			CK73GB1C104K	CHIP C 0.10UF K	
C36			CK73FB1A225K	CHIP C 2.2UF K	
C37 -39			CK73GB1H103K	CHIP C 0.010UF K	
C40			CK73GB1H153K	CHIP C 0.015UF K	
C41			CK73GB1H102K	CHIP C 1000PF K	
C42			CK73GB1E473K	CHIP C 0.047UF K	
C43			CK73GB1H222K	CHIP C 2200PF K	
C44			CK73GB1H102K	CHIP C 1000PF K	
C45 -47			CK73GB1C104K	CHIP C 0.10UF K	
C48			CK73GB1H682K	CHIP C 6800PF K	
C49			CK73GB1H152K	CHIP C 1500PF K	
C50			CK73GB1H682K	CHIP C 6800PF K	
C51			CK73GB1H152K	CHIP C 1500PF K	
C52			CK73GB1C104K	CHIP C 0.10UF K	
C61			CK73FB1A225K	CHIP C 2.2UF K	
C69 -72			CK73GB1H222K	CHIP C 2200PF K	
C75 ,76			CK73GB1H682K	CHIP C 6800PF K	
C100-102			CK73GB1H102K	CHIP C 1000PF K	
CN1			E40-9536-05	FLAT CABLE CONNECTOR	
CN1			E41-0193-05	FLAT CABLE CONNECTOR	
CN2			E40-9339-05	FLAT CABLE CONNECTOR	
CN2			E41-0129-05	FLAT CABLE CONNECTOR	
X1			L78-0851-05	RESONATOR (16.93MHZ)	
CP1			R90-1019-05	MULTI-COMP 100 X2	
CP2			R90-1014-05	MULTI-COMP 100 X4	

ELECTRIC UNIT (X25-9600-xx, X25-9612-7x)

Ref. No.	Add	New	Parts No.	Description	Destination
CP3 ,4			R90-0974-05	MULT R 1.8K X4	
CP5			R90-0720-05	MULTI-COMP 100K X4	
R1		✻	RK73GB2A910J	CHIP R 91 J 1/10W	
R2 ,3			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R4			RK73FB2B100J	CHIP R 10 J 1/8W	
R5 ,6			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R7			RK73GB2A362J	CHIP R 3.6K J 1/10W	
R8			RK73GB2A273J	CHIP R 27K J 1/10W	
R9			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11			RK73GB2A333J	CHIP R 33K J 1/10W	
R12			RK73GB2A244J	CHIP R 240K J 1/10W	
R13			RK73GB2A914J	CHIP R 910K J 1/10W	
R14			RK73GB2A104J	CHIP R 100K J 1/10W	
R15			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R31			RK73GB2A273J	CHIP R 27K J 1/10W	
R32			RK73GB2A103J	CHIP R 10K J 1/10W	
R33			RK73GB2A183J	CHIP R 18K J 1/10W	
R34			RK73GB2A103J	CHIP R 10K J 1/10W	
R35			RK73GB2A393J	CHIP R 39K J 1/10W	
R36			RK73GB2A103J	CHIP R 10K J 1/10W	
R37			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R38			RK73GB2A224J	CHIP R 220K J 1/10W	
R39			RK73GB2A104J	CHIP R 100K J 1/10W	
R40			RK73GB2A821J	CHIP R 820 J 1/10W	
R41			RK73GB2A473J	CHIP R 47K J 1/10W	
R42			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R43			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R44 ,45			RK73GB2A103J	CHIP R 10K J 1/10W	
R46			RK73GB2A273J	CHIP R 27K J 1/10W	
R47			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R48			RK73GB2A103J	CHIP R 10K J 1/10W	
R49			RK73GB2A393J	CHIP R 39K J 1/10W	
R50			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R51			RK73GB2A103J	CHIP R 10K J 1/10W	
R52 ,53			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R71			RK73GB2A133J	CHIP R 13K J 1/10W	
R72			RK73FB2B201J	CHIP R 200 J 1/8W	
R81 ,82			RK73FB2B331J	CHIP R 330 J 1/8W	
R85 ,86			RK73FB2B331J	CHIP R 330 J 1/8W	
R87 ,88			RK73FB2B101J	CHIP R 100 J 1/8W	
R93			RK73GB2A104J	CHIP R 100K J 1/10W	
R100			RK73GB2A100J	CHIP R 10 J 1/10W	
S1 ,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D1			DAN202U	DIODE	
D1			MA142WK	DIODE	
D2			MA8051-L	ZENER DIODE	
D3			DA204U	DIODE	
IC1			AN22002AA	ANALOGUE IC	
IC2		✻	MN6627771KP	MOS-IC	
IC3			BA5824FP	ANALOGUE IC	
Q1			MCH6101	TRANSISTOR	
Q2			2SA1362(Y)	TRANSISTOR	

K3 : KDC-222 **K4** : KDC-222S **E4** : KDC-2094YA **E5** : KDC-2094YG
E6 : KDC-2024SA **E7** : KDC-2024SG **E8** : KDC-2024SYA **E9** : KDC-2024SYG
M : KDC-2023 **M3** : KDC-3023

⚠ indicates safety critical components.

PARTS LIST

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
Q3			DTC124EUA	DIGITAL TRANSISTOR	
Q3			UN5212	DIGITAL TRANSISTOR	
Q4			DTA143XUA	DIGITAL TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q6			2SA1576A	TRANSISTOR	
CD MECHANISM ASSY (X92-4640-00)					
2	1B		A10-4827-12	CHASSIS	
5	1B		D10-4576-33	ARM ASSY	
8	2A		D10-4579-03	LEVER ASSY	
10	3A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-22	SLIDER	
17	3B		D10-4588-03	SLIDER	
18	3B		D10-4595-04	ARM	
19	3B		D10-4596-14	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	3B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	3B		D13-2158-04	GEAR	
30	3B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	2B		D13-2172-03	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-04	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-04	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
51	1A		J21-9676-22	MOUNTING HARDWARE	
52	3B		J21-9677-02	MOUNTING HARDWARE	
53	1B		J21-9678-03	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)	
B	1B		N09-4472-05	MACHINE SCREW (M1.7X8.5)	
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-05	TAPTITE SCREW (BIND P≠ 2X5)	
G	2A		N19-2163-04	FLAT WASHER	

CD PLAYER UNIT (X32-5380-00)

Ref. No.	Add	New	Parts No.	Description	Destination
H	1B		N39-2020-46	PAN HEAD MACHIN SCREW	
J	1B		N09-6108-05	MACHINE SCREW (M2*3.5TYPE3)	
DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)	
DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)	
DPU1	2D	*	X93-2010-00	OPTICAL PICKUP ASSY	

K3 : KDC-222 **K4** : KDC-222S **E4** : KDC-2094YA **E5** : KDC-2094YG
E6 : KDC-2024SA **E7** : KDC-2024SG **E8** : KDC-2024SYA **E9** : KDC-2024SYG
M : KDC-2023 **M3** : KDC-3023

⚠ indicates safety critical components.