EXPLODED VIEW

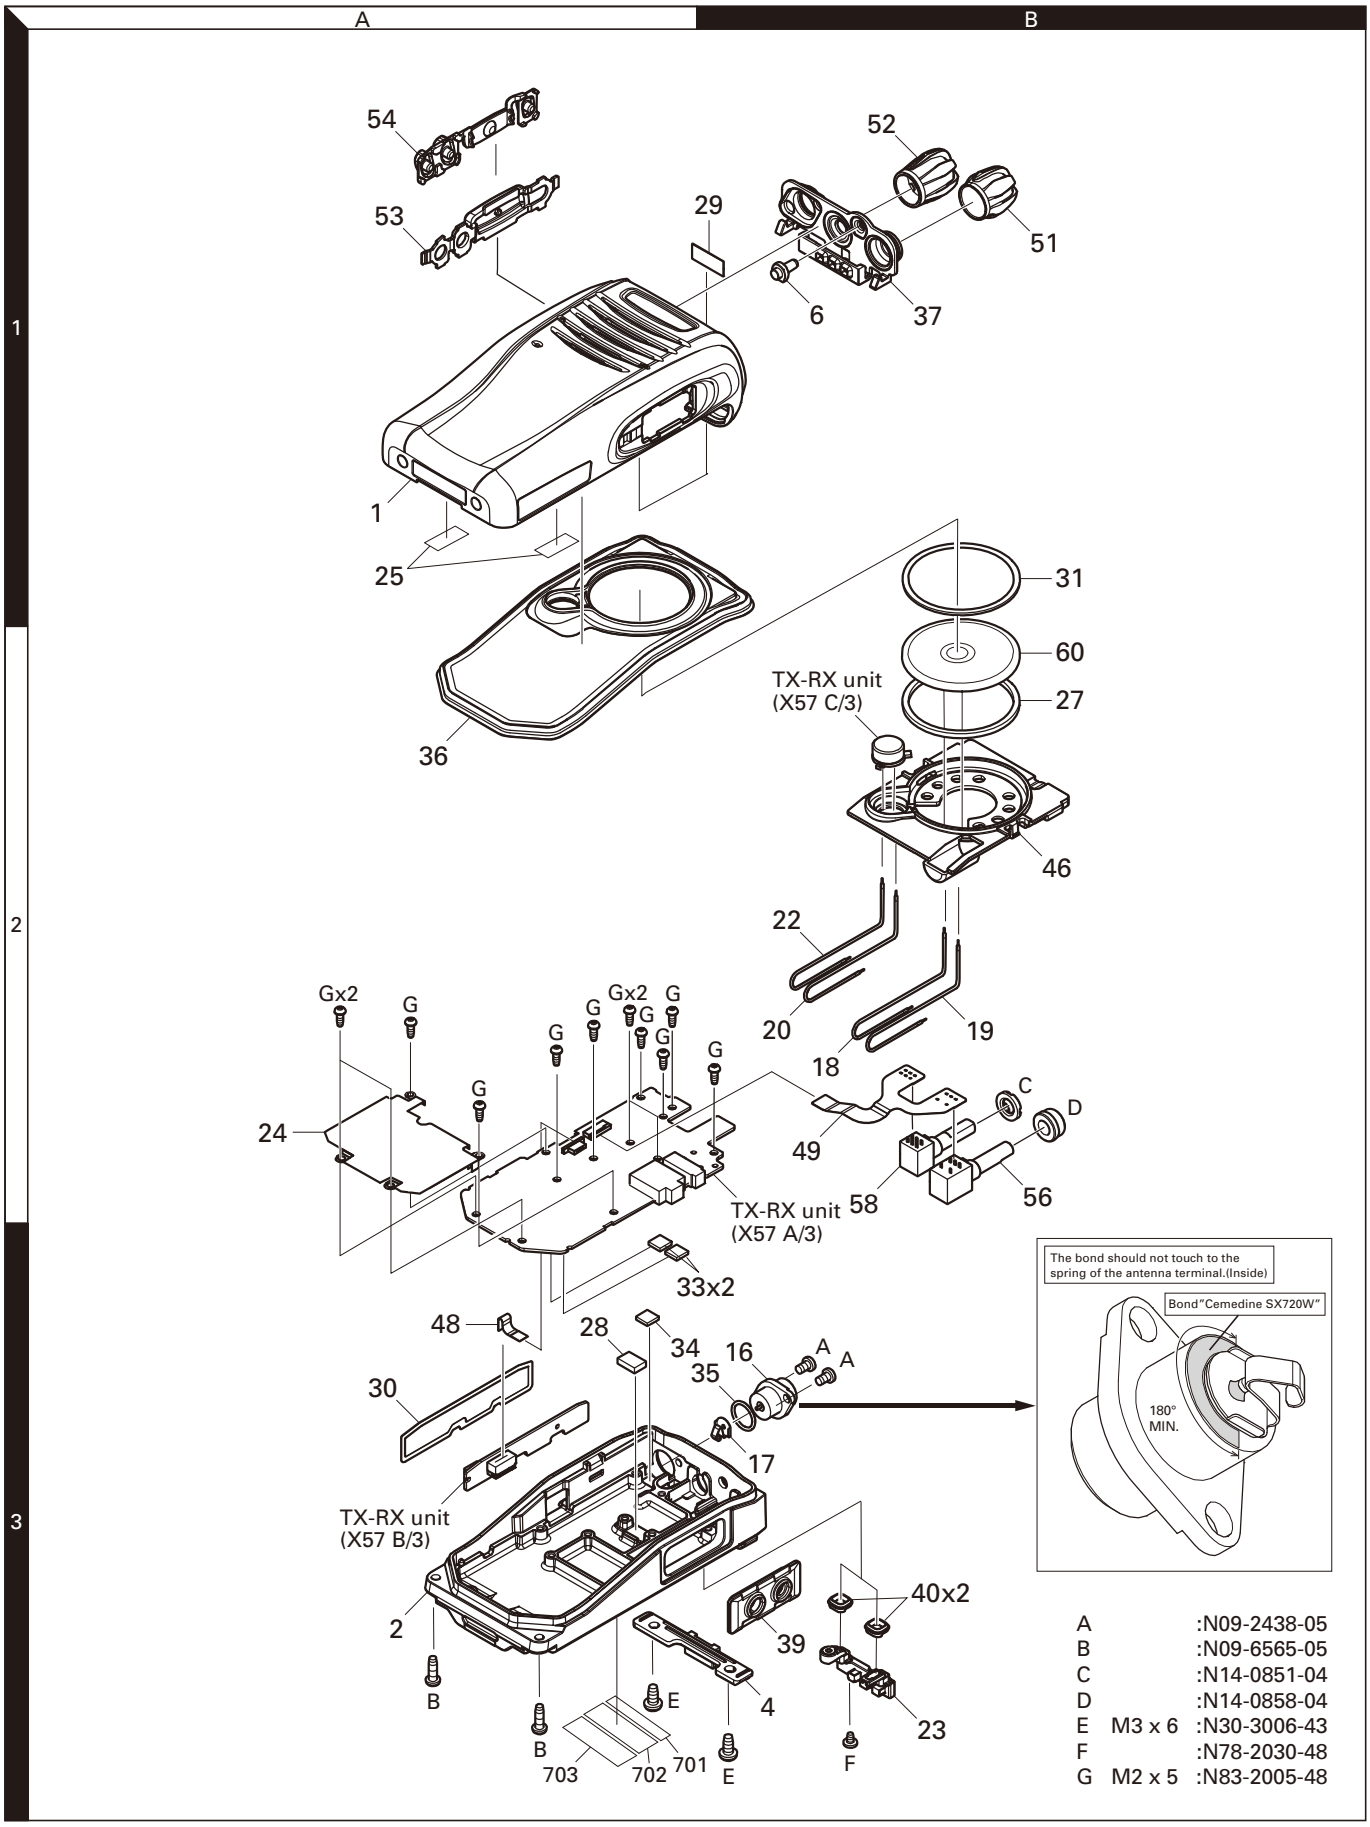

A		:N09-2438-05
B		:N09-6565-05
C		:N14-0851-04
D		:N14-0858-04
E	M3 x 6	:N30-3006-43
F		:N78-2030-48
G	M2 x 5	:N83-2005-48

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

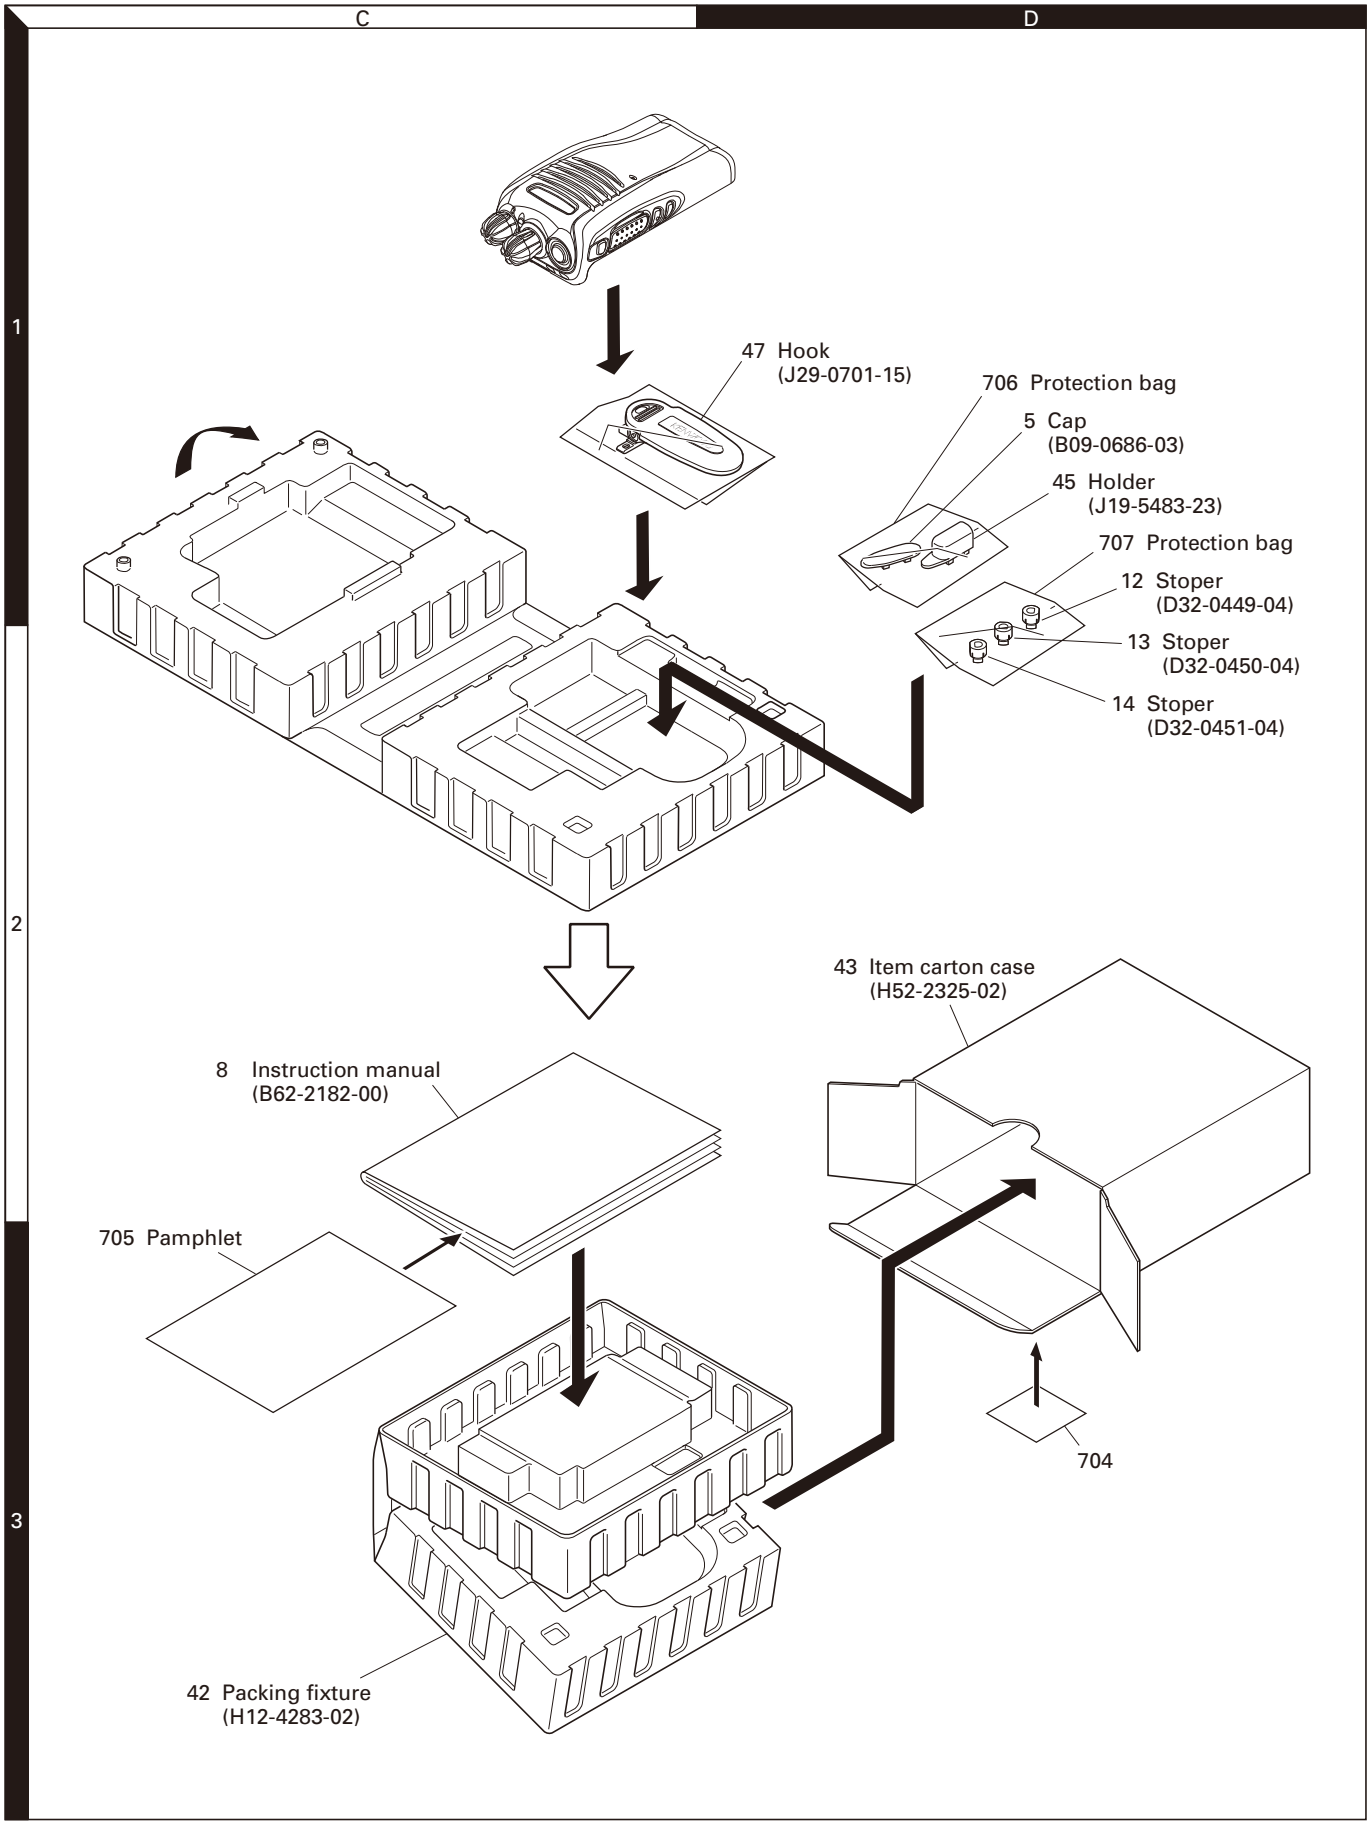

Parts with the exploded numbers larger than 700 are not supplied.

TK-3360

PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

TK-3360
TX-RX UNIT (X57-7790-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-3360					
1	1A	✻	A02-4087-03	PLASTIC CABINET ASSY	
2	3A	✻	A10-4133-01	CHASSIS	
4	3B		B01-0694-13	ESCUTCHEON	
5	1D		B09-0686-03	CAP ACCESSORY	
6	1B	✻	B11-1869-04	ILLUMINATION GUIDE (TX-RX)	
7		✻	B43-1633-04	BADGE	
8	2C	✻	B62-2182-00	INSTRUCTION MANUAL	
12	1D	✻	D32-0449-04	STOPPER (4CH.WHITE) ACCESSORY	
13	2D	✻	D32-0450-04	STOPPER (8CH.GRAY) ACCESSORY	
14	2D	✻	D32-0451-04	STOPPER (12CH.BLK) ACCESSORY	
16	3B	✻	E04-0467-15	RF COAXIAL RECEPTACLE(SMA)	
17	3B	✻	E23-1345-04	TERMINAL ASSY (ANT)	
18	2B		E37-1165-15	PROCESSED LEAD WIRE (SP RED)	
19	2B		E37-1166-15	PROCESSED LEAD WIRE (SP BLACK)	
20	2B	✻	E37-1511-05	PROCESSED LEAD WIRE (ECM GR)	
22	2B	✻	E37-1512-05	PROCESSED LEAD WIRE (ECM BR)	
23	3B	✻	E72-0433-03	TERMINAL BLOCK	
24	2A	✻	F10-3128-03	SHIELDING COVER	
25	1A		G10-1324-04	FIBROUS SHEET (CABINET)	
27	2B		G11-4272-14	RUBBER CUSHION (SP)	
28	3A		G11-4315-14	SHEET (COOLING)	
29	1B		G11-4351-04	SHEET (CABI-TOPG)	
30	3A	✻	G11-4488-04	SHEET (PTT)	
31	1B	✻	G11-4527-04	SHEET (SP)	
33	3A		G13-2038-24	CUSHION (CERAFIL)	
34	3A	✻	G13-2287-04	CUSHION (CHASS,ANT)	
35	3B		G53-1603-04	PACKING (ANT)	
36	2A	✻	G53-1830-02	PACKING (CHASSIS)	
37	1B	✻	G53-1831-02	PACKING (TOP)	
39	3B	✻	G53-1832-03	PACKING (JACK)	
40	3B	✻	G53-1833-04	PACKING (TERMINAL)	
42	3C	✻	H12-4283-02	PACKING FIXTURE (RADIO)	
43	2D	✻	H52-2357-02	ITEM CARTON CASE	
45	1D		J19-5483-23	HOLDER ACCESSORY	
46	2B	✻	J19-5533-02	HOLDER (SP)	
47	1D		J29-0701-15	HOOK ACCESSORY	
48	3A		J87-0027-05	FPC(LEAD FREE) (PTT)	
49	2B	✻	J87-0038-05	FPC(LEAD FREE) (VOL/ENC)	
51	1B	✻	K29-9450-03	KNOB (VOL)	
52	1B	✻	K29-9451-03	KNOB (SELECTOR)	
53	1A	✻	K29-9452-03	KNOB (PTT)	
54	1A	✻	K29-9453-03	BUTTON KNOB (SIDE1/SIDE2/AUX)	
A	3B		N09-2438-05	BINDING HEAD SCREW (ANT)	
B	3A		N09-6565-05	PAN HEAD SCREW (CASE)	
C	2B	✻	N14-0851-04	CIRCULAR NUT (SELECTOR)	
D	2B	✻	N14-0858-04	CIRCULAR NUT (VOL)	
E	3A,3B		N30-3006-43	PAN HEAD MACHINE SCREW (ESCUTCHE)	
F	3B		N78-2030-48	PAN HEAD TAPTITE SCREW (TERM-BL)	
G	2A,2B		N83-2005-48	PAN HEAD TAPTITE SCREW (UNIT)	
56	2B		R31-0665-05	VARIABLE RESISTOR (VOL)	
58	2B	✻	S60-0443-05	ROTARY SWITCH (SELECTOR)	
60	2B	✻	T07-0787-05	SPEAKER	
TX-RX UNIT (X57-7790-10)					
D801			B30-1790-05	LED (BLUE)	
D804			B30-2314-05	LED (GREEN)	
D805			B30-2315-05	LED (RED)	
C1			CK73HB1H471K	CHIP C 470PF K	
C3			CC73HCH1H100B	CHIP C 10PF B	
C4			CK73HB1H102K	CHIP C 1000PF K	
C5			CC73HCH1H100B	CHIP C 10PF B	
C7,8			CK73HB1E103K	CHIP C 0.010UF K	
C9-12			CC73HCH1H101J	CHIP C 100PF J	
C14			CK73HB1A473K	CHIP C 0.047UF K	
C15			CK73HB1A224K	CHIP C 0.22UF K	
C16,17			CC73HCH1H101J	CHIP C 100PF J	
C18			CK73HB1E103K	CHIP C 0.010UF K	
C20			CC73HCH1H101J	CHIP C 100PF J	
C21			CK73HB1E103K	CHIP C 0.010UF K	
C23			CS77CA1VR15M	CHIP TNTL 0.15UF 35WV	
C24		✻	CS77BA1E3R3M	CHIP TNTL 3.3UF 25WV	
C25			CS77CA1VR22M	CHIP TNTL 0.22UF 35WV	
C27			CK73HB1A224K	CHIP C 0.22UF K	
C29,30			CK73HB1A104K	CHIP C 0.10UF K	
C31			CK73HB1H471K	CHIP C 470PF K	
C32		✻	CS77CA1A220M	CHIP TNTL 22UF 10WV	
C33 -35			CC73HCH1H101J	CHIP C 100PF J	
C36			CK73HB0J105K	CHIP C 1.0UF K	
C41			CC73HCH1H101J	CHIP C 100PF J	
C44,45			CC73HCH1H820J	CHIP C 82PF J	
C46			CC73HCH1H060B	CHIP C 6.0PF B	
C47			CC73HCH1H100B	CHIP C 10PF B	
C48			CC73HCH1H010B	CHIP C 1.0PF B	
C49			CC73HCH1H060B	CHIP C 6.0PF B	
C50,51			CC73HCH1H0R5B	CHIP C 0.5PF B	
C52			CC73HCH1H050B	CHIP C 5.0PF B	
C53			CC73HCH1H020B	CHIP C 2.0PF B	
C54			CC73HCH1H050B	CHIP C 5.0PF B	
C55			CC73HCH1H040B	CHIP C 4.0PF B	
C56			CC73HCH1H020B	CHIP C 2.0PF B	
C57			CC73HCH1H040B	CHIP C 4.0PF B	
C58,59			CC73HCH1H101J	CHIP C 100PF J	
C60			CC73GCH1H0R5B	CHIP C 0.5PF B	
C61			CC73HCH1H0R3B	CHIP C 0.3PF B	
C70			CK73HB1H471K	CHIP C 470PF K	
C71			CC73HCH1H070B	CHIP C 7.0PF B	
C72,73			CC73HCH1H100B	CHIP C 10PF B	
C74,75			CK73HB1H471K	CHIP C 470PF K	
C76			CK73HB1A104K	CHIP C 0.10UF K	
C77			CC73HCH1H070B	CHIP C 7.0PF B	
C80,81			CK73HB1H471K	CHIP C 470PF K	

PARTS LIST

TX-RX UNIT (X57-7790-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C82			CC73HCH1H100B	CHIP C 10PF B	
C83			CC73HCH1H050B	CHIP C 5.0PF B	
C84			CC73HCH1H030B	CHIP C 3.0PF B	
C85			CC73HCH1H050B	CHIP C 5.0PF B	
C86			CC73HCH1H040B	CHIP C 4.0PF B	
C90			CK73HB1H471K	CHIP C 470PF K	
C201			CC73HCH1H470J	CHIP C 47PF J	
C203			CK73HB1H471K	CHIP C 470PF K	
C204			CK73HB1A104K	CHIP C 0.10UF K	
C205			CK73HB1H471K	CHIP C 470PF K	
C206			CC73HCH1H120J	CHIP C 12PF J	
C207,208			CK73HB1H471K	CHIP C 470PF K	
C209			CC73HCH1H220J	CHIP C 22PF J	
C210			CK73HB1A224K	CHIP C 0.22UF K	
C211-213			CK73HB1H471K	CHIP C 470PF K	
C214			CK73HB1A104K	CHIP C 0.10UF K	
C215			CC73HCH1H060B	CHIP C 6.0PF B	
C216,217			CK73HB1H471K	CHIP C 470PF K	
C218			CC73HCH1H050B	CHIP C 5.0PF B	
C219-221			CK73HB1H471K	CHIP C 470PF K	
C222			CC73HCH1H221J	CHIP C 220PF J	
C223-225			CK73HB1H471K	CHIP C 470PF K	
C226			CC73HCH1H080B	CHIP C 8.0PF B	
C227			CC73GCH1H040B	CHIP C 4.0PF B	
C228			CC73GCH1H080B	CHIP C 8.0PF B	
C229,230			CC73HCH1H151J	CHIP C 150PF J	
C231,232			CC73GCH1H120J	CHIP C 12PF J	
C233			CK73GB1C104K	CHIP C 0.10UF K	
C234			CK73GB1E105K	CHIP C 1.0UF K	
C235			CK73HB1E103K	CHIP C 0.010UF K	
C241			CC73GCH1H0R5B	CHIP C 0.5PF B	
C242			CC73GCH1H090B	CHIP C 9.0PF B	
C243			CC73GCH1H560J	CHIP C 56PF J	
C244			CK73HB1H471K	CHIP C 470PF K	
C245			CC73HCH1H050B	CHIP C 5.0PF B	
C246			CC73GCH1H030B	CHIP C 3.0PF B	
C247			CK73GB1H471K	CHIP C 470PF K	
C248			CC73GCH1H020B	CHIP C 2.0PF B	
C249			CC73GCH1H030B	CHIP C 3.0PF B	
C250			CC73GCH1H060B	CHIP C 6.0PF B	
C253			CC73GCH1H010B	CHIP C 1.0PF B	
C255			CC73GCH1H070B	CHIP C 7.0PF B	
C256			CC73GCH1H1R5B	CHIP C 1.5PF B	
C257			CC73GCH1H020B	CHIP C 2.0PF B	
C259			CC73GCH1H040B	CHIP C 4.0PF B	
C260			CC73GCH1H0R5B	CHIP C 0.5PF B	
C262,263			CC73GCH1H120J	CHIP C 12PF J	
C264			CC73HCH1H180J	CHIP C 18PF J	
C301			CK73HB1A104K	CHIP C 0.10UF K	
C302			CK73HB1H471K	CHIP C 470PF K	
C303			CK73FB1E475K	CHIP C 4.7UF K	
C304			CK73HB1H471K	CHIP C 470PF K	
C305,306			CC73HCH1H101J	CHIP C 100PF J	
C307			CC73HCH1H470J	CHIP C 47PF J	
C308			CC73HCH1H100C	CHIP C 10PF C	
C309			CK73HB1H471K	CHIP C 470PF K	
C311			CK73HB1H471K	CHIP C 470PF K	
C313			CC73HCH1H101J	CHIP C 100PF J	
C314			CK73HB1H471K	CHIP C 470PF K	
C315			CK73HB1H102K	CHIP C 1000PF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C402-407			CK73HB1A104K	CHIP C 0.10UF K	
C408			CC73HCH1H330J	CHIP C 33PF J	
C409			CK73HB1E103K	CHIP C 0.010UF K	
C410			CC73HCH1H220J	CHIP C 22PF J	
C411			CC73HCH1H820J	CHIP C 82PF J	
C412			CK73HB1H391K	CHIP C 390PF K	
C413,414			CK73HB1A104K	CHIP C 0.10UF K	
C415			CC73HCH1H390J	CHIP C 39PF J	
C416			CC73HCH1H820J	CHIP C 82PF J	
C417			CK73HB1H391K	CHIP C 390PF K	
C418			CK73HB1A104K	CHIP C 0.10UF K	
C419			CC73HCH1H390J	CHIP C 39PF J	
C420			CK73HB1H182K	CHIP C 1800PF K	
C421			CK73HB1H471K	CHIP C 470PF K	
C422,423			CK73FB0J106K	CHIP C 10UF K	
C424			CC73HCH1H820J	CHIP C 82PF J	
C425			CK73HB1E103K	CHIP C 0.010UF K	
C426			CK73HB1H471K	CHIP C 470PF K	
C427			CK73HB1A104K	CHIP C 0.10UF K	
C428			CK73HB1A333K	CHIP C 0.033UF K	
C429			CC73HCH1H330J	CHIP C 33PF J	
C431			CK73HB1A104K	CHIP C 0.10UF K	
C432,433			CK73HB1E103K	CHIP C 0.010UF K	
C434			CK73HB1H471K	CHIP C 470PF K	
C435			CK73HB1E103K	CHIP C 0.010UF K	
C436			CC73HCH1H020B	CHIP C 2.0PF B	
C437			CC73HCH1H220J	CHIP C 22PF J	
C438			CC73HCH1H020B	CHIP C 2.0PF B	
C439			CK73HB1E103K	CHIP C 0.010UF K	
C440,441			CK73HB1H471K	CHIP C 470PF K	
C442			CC73HCH1H060B	CHIP C 6.0PF B	
C443			CK73HB1E103K	CHIP C 0.010UF K	
C444			CC73HCH1H020B	CHIP C 2.0PF B	
C445,446			CC73HCH1H120J	CHIP C 12PF J	
C448			CC73HCH1H120J	CHIP C 12PF J	
C449			CK73HB1E103K	CHIP C 0.010UF K	
C450			CC73HCH1H010B	CHIP C 1.0PF B	
C451,452			CK73HB1H471K	CHIP C 470PF K	
C453			CC73HCH1H040B	CHIP C 4.0PF B	
C454-456			CK73HB1H471K	CHIP C 470PF K	
C457			CC73HCH1H020B	CHIP C 2.0PF B	
C458			CC73HCH1H120J	CHIP C 12PF J	
C459			CC73HCH1H010B	CHIP C 1.0PF B	
C460			CK73HB1H471K	CHIP C 470PF K	
C461			CC73HCH1H010B	CHIP C 1.0PF B	
C462			CK73HB1H471K	CHIP C 470PF K	
C463			CC73HCH1H1R5B	CHIP C 1.5PF B	
C464			CC73HCH1H120J	CHIP C 12PF J	
C465			CK73HB1H471K	CHIP C 470PF K	
C466			CC73HCH1H030B	CHIP C 3.0PF B	
C467			CC73HCH1H020B	CHIP C 2.0PF B	
C468			CC73HCH1H120J	CHIP C 12PF J	
C469			CC73HCH1H010B	CHIP C 1.0PF B	
C470			CK73HB1H471K	CHIP C 470PF K	
C474,475			CK73HB1H471K	CHIP C 470PF K	
C477			CK73HB1A104K	CHIP C 0.10UF K	
C478			CK73HB1H471K	CHIP C 470PF K	
C479			CC73HCH1H010B	CHIP C 1.0PF B	
C480			CC73HCH1H080B	CHIP C 8.0PF B	
C481			CK73HB1H471K	CHIP C 470PF K	

PARTS LIST

TX-RX UNIT (X57-7790-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C482			CC73HCH1H030B	CHIP C	3.0PF	B	
C483			CK73HB1H471K	CHIP C	470PF	K	
C484			CC73HCH1H030B	CHIP C	3.0PF	B	
C485			CC73HCH1H080B	CHIP C	8.0PF	B	
C486			CC73HCH1H010B	CHIP C	1.0PF	B	
C487			CC73HCH1H020B	CHIP C	2.0PF	B	
C488			CC73HCH1H050B	CHIP C	5.0PF	B	
C489			CC73HCH1H040B	CHIP C	4.0PF	B	
C494			CC73HCH1H020B	CHIP C	2.0PF	B	
C495			CK73HB1H471K	CHIP C	470PF	K	
C497			CK73HB1H471K	CHIP C	470PF	K	
C801-804			CK73HB1H221K	CHIP C	220PF	K	
C806			CK73HB1H221K	CHIP C	220PF	K	
C807			CK73HB1H471K	CHIP C	470PF	K	
C808,809			CK73GB1A105K	CHIP C	1.0UF	K	
C810,811			CK73HB1H471K	CHIP C	470PF	K	
C812-816			CK73GB1A105K	CHIP C	1.0UF	K	
C818,819			CK73HB1H221K	CHIP C	220PF	K	
C821			CK73HB1H471K	CHIP C	470PF	K	
C823			CK73GB1A105K	CHIP C	1.0UF	K	
C824			CK73HB1H221K	CHIP C	220PF	K	
C825			CK73GB1A105K	CHIP C	1.0UF	K	
C826			CK73HB1H102K	CHIP C	1000PF	K	
C829			CK73HB1H102K	CHIP C	1000PF	K	
C831			CK73FB0J106K	CHIP C	10UF	K	
C834			CK73HB1A104K	CHIP C	0.10UF	K	
C835			CK73FB0J106K	CHIP C	10UF	K	
C837-839			CK73HB1H471K	CHIP C	470PF	K	
C840			CK73HB1E103K	CHIP C	0.010UF	K	
C841			CK73HB1H471K	CHIP C	470PF	K	
C842			CK73HB1A104K	CHIP C	0.10UF	K	
C843			CK73HB1A473K	CHIP C	0.047UF	K	
C844			CK73HB1A104K	CHIP C	0.10UF	K	
C846			CC73HCH1H110J	CHIP C	11PF	J	
C848			CK73HB1H681K	CHIP C	680PF	K	
C849			CK73HB1A104K	CHIP C	0.10UF	K	
C850			CK73HB1H471K	CHIP C	470PF	K	
C851,852			CK73HB1E103K	CHIP C	0.010UF	K	
C854			CC73HCH1H110J	CHIP C	11PF	J	
C855			CK73HB1A104K	CHIP C	0.10UF	K	
C856			CK73HB1H471K	CHIP C	470PF	K	
C857			CK73HB1H332K	CHIP C	3300PF	K	
C858			CK73HB1E682K	CHIP C	6800PF	K	
C859			CK73GB1A105K	CHIP C	1.0UF	K	
C860,861			CK73HB1H471K	CHIP C	470PF	K	
C863			CK73HB1H221K	CHIP C	220PF	K	
C865			CK73HB1A104K	CHIP C	0.10UF	K	
C866		✻	CS77CA1A220M	CHIP TNTL	22UF	10WV	
C868			CK73HB1H471K	CHIP C	470PF	K	
C869			CK73FB0J106K	CHIP C	10UF	K	
C871			CK73HB1E103K	CHIP C	0.010UF	K	
C872			CK73HB1H471K	CHIP C	470PF	K	
C873			CK73HB1H102K	CHIP C	1000PF	K	
C874			CK73HB1A104K	CHIP C	0.10UF	K	
C876			CK73FB0J106K	CHIP C	10UF	K	
C877			CK73HB1H102K	CHIP C	1000PF	K	
C878			CK73HB1E103K	CHIP C	0.010UF	K	
C879			CK73FB0J106K	CHIP C	10UF	K	
C881			CK73HB1A104K	CHIP C	0.10UF	K	
C882			CK73HB1H471K	CHIP C	470PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C883			CK73HB1H102K	CHIP C	1000PF	K	
C884			CK73GB1A105K	CHIP C	1.0UF	K	
C885			CC73HCH1H101J	CHIP C	100PF	J	
C886			CC73HCH1H221J	CHIP C	220PF	J	
C887,888			CC73HCH1H101J	CHIP C	100PF	J	
C890			CK73HB1H821K	CHIP C	820PF	K	
C892			CK73GB1A105K	CHIP C	1.0UF	K	
C893			CK73HB0J105K	CHIP C	1.0UF	K	
C895			CK73HB1A104K	CHIP C	0.10UF	K	
C896			CK73HB1A473J	CHIP C	0.047UF	J	
C897,898			CK73HB1A474K	CHIP C	0.47UF	K	
C899,900			CK73HB1H471K	CHIP C	470PF	K	
C901			CK73HB1A474K	CHIP C	0.47UF	K	
C902,903			CK73GB0J225K	CHIP C	2.2UF	K	
C904			CK73HB1A474K	CHIP C	0.47UF	K	
C905,906			CK73HB1H471K	CHIP C	470PF	K	
C907			CC73HCH1H470J	CHIP C	47PF	J	
C908			CK73HB1H471K	CHIP C	470PF	K	
C909			CK73HB1A473J	CHIP C	0.047UF	J	
C910			CK73HB1A683K	CHIP C	0.068UF	K	
C911			CK73FB0J106K	CHIP C	10UF	K	
C912			CK73HB1H102K	CHIP C	1000PF	K	
C913			CK73HB1E103K	CHIP C	0.010UF	K	
C914			CK73HB1H682K	CHIP C	6800PF	K	
C916-919			CK73HB1H471K	CHIP C	470PF	K	
C920			CK73GB1A105K	CHIP C	1.0UF	K	
C922			CK73HB1A104K	CHIP C	0.10UF	K	
C923			CK73FB0J106K	CHIP C	10UF	K	
C924			CC73HCH1H101J	CHIP C	100PF	J	
C925			CK73HB1A473K	CHIP C	0.047UF	K	
C926			CS77CC0J101M	CHIP TNTL	100UF	6.3WV	
C928-932			CK73HB1H221K	CHIP C	220PF	K	
C934-936			CK73HB1H221K	CHIP C	220PF	K	
C940			CK73HB1H221K	CHIP C	220PF	K	
C942			CC73HCH1H101J	CHIP C	100PF	J	
C943-945			CK73HB1H221K	CHIP C	220PF	K	
C946			CK73HB1H102K	CHIP C	1000PF	K	
C947,948			CK73HB1H182K	CHIP C	1800PF	K	
C949			CK73HB1H102K	CHIP C	1000PF	K	
C950,951			CK73HB1H272K	CHIP C	2700PF	K	
C952-954			CK73HB1A104K	CHIP C	0.10UF	K	
C956			CK73HB1A104K	CHIP C	0.10UF	K	
C957			CK73GB0J225K	CHIP C	2.2UF	K	
C958			CK73GB1A105K	CHIP C	1.0UF	K	
C959			CK73HB1H221K	CHIP C	220PF	K	
C961,962			CK73HB1H682K	CHIP C	6800PF	K	
C964			CK73FB1E475K	CHIP C	4.7UF	K	
C965			CK73HB1H272K	CHIP C	2700PF	K	
CN801			E40-6573-05	FLAT CABLE CONNECTOR			
CN802,803			E40-6568-05	FLAT CABLE CONNECTOR			
CN829			E23-1326-05	TERMINAL			
J801			E11-0484-05	3.5D PHONE JACK			
J802			E11-0715-05	2.5D PHONE JACK			
F801			F53-0372-05	FUSE (3.15A)			
F802		✻	F53-0319-15	FUSE (1A)			
CD401		✻	L79-1848-05	TUNING COIL			
CF401			L72-1012-05	CERAMIC FILTER			
CF402			L72-1010-05	CERAMIC FILTER			

PARTS LIST

TX-RX UNIT (X57-7790-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
L1			L41-4795-39	SMALL FIXED INDUCTOR(4.7UH)	
L2			L92-0163-05	BEADS CORE	
L3			L40-1891-86	SMALL FIXED INDUCTOR(1.8UH)	
L4			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
L5			L40-1891-86	SMALL FIXED INDUCTOR(1.8UH)	
L6			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
L7,8			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L9			L41-2278-14	SMALL FIXED INDUCTOR(22NH)	
L10			L41-1578-14	SMALL FIXED INDUCTOR(15NH)	
L11,12			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	
L13,14			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
L15			L92-0163-05	BEADS CORE	
L20			L40-2775-57	SMALL FIXED INDUCTOR(27.0NH)	
L21			L40-2275-57	SMALL FIXED INDUCTOR(22.0NH)	
L30			L40-1875-57	SMALL FIXED INDUCTOR(18.0NH)	
L31			L40-1275-57	SMALL FIXED INDUCTOR(12.0NH)	
L202			L40-2775-71	SMALL FIXED INDUCTOR(27NH)]	
L203			L40-1575-71	SMALL FIXED INDUCTOR(15NH)	
L204			L40-1875-71	SMALL FIXED INDUCTOR(18NH)	
L205			L92-0162-05	BEADS CORE	
L206			L40-1075-71	SMALL FIXED INDUCTOR(10NH)	
L207			L34-4572-05	AIR-CORE COIL	
L208			L92-0149-05	CHIP FERRITE	
L210			L92-0149-05	CHIP FERRITE	
L211			L34-4565-05	AIR-CORE COIL	
L216			L41-2285-43	SMALL FIXED INDUCTOR(220NH)	
L217			L34-4564-05	AIR-CORE COIL	
L219			L34-4563-05	AIR-CORE COIL	
L220			L34-4565-05	AIR-CORE COIL	
L221			L34-4564-05	AIR-CORE COIL	
L401		✻	L41-1885-53	SMALL FIXED INDUCTOR(0.18UH)	
L402			L40-1085-71	SMALL FIXED INDUCTOR(100NH)	
L403			L40-1591-86	SMALL FIXED INDUCTOR(1.5U)	
L406			L92-0138-05	CHIP FERRITE	
L407			L41-6885-39	SMALL FIXED INDUCTOR(0.68U)	
L408			L40-1575-71	SMALL FIXED INDUCTOR(15NH)	
L409		✻	L41-2785-53	SMALL FIXED INDUCTOR(0.27UH)	
L410			L40-1575-71	SMALL FIXED INDUCTOR(15NH)	
L411		✻	L41-2775-53	SMALL FIXED INDUCTOR(27NH)	
L413,414			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH)	
L415			L92-0138-05	CHIP FERRITE	
L416			L41-2785-45	SMALL FIXED INDUCTOR(270NH)	
L417			L40-1085-71	SMALL FIXED INDUCTOR(100NH)	
L418,419			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH)	
L440			L41-8268-14	SMALL FIXED INDUCTOR(8.2NH)	
L443			L41-4778-14	SMALL FIXED INDUCTOR(47NH)	
L801			L92-0472-05	CHIP FERRITE	
X1		✻	L77-3050-05	TCXO (16.8MHZ)	
X802		✻	L77-3049-05	CRYSTAL RESONATOR (12MHZ)	
XF401		✻	L71-0655-05	MCF (49.95MHZ)	
CP1			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP2			RK75HA1J103J	CHIP-COM 10K J 1/16W	
CP401			RK75HA1J474J	CHIP-COM 470K J 1/16W	
CP802			RK75HA1J473J	CHIP-COM 47K J 1/16W	
CP803			RK75HA1J102J	CHIP-COM 1.0K J 1/16W	
CP804			RK75HA1J472J	CHIP-COM 4.7K J 1/16W	
CP805			RK75HA1J473J	CHIP-COM 47K J 1/16W	
CP806			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP807			RK75HA1J102J	CHIP-COM 1.0K J 1/16W	
CP808-811			RK75HA1J473J	CHIP-COM 47K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
CP816			RK75HA1J474J	CHIP-COM 470K J 1/16W	
CP817			RK75HA1J473J	CHIP-COM 47K J 1/16W	
CP818			RK75HA1J474J	CHIP-COM 470K J 1/16W	
CP819			RK75HA1J473J	CHIP-COM 47K J 1/16W	
CP820			RK75HA1J102J	CHIP-COM 1.0K J 1/16W	
R1			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R2			RK73HB1J474J	CHIP R 470K J 1/16W	
R6			RK73HB1J473J	CHIP R 47K J 1/16W	
R7			RK73HB1J103J	CHIP R 10K J 1/16W	
R8			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R9			RK73HB1J101J	CHIP R 100 J 1/16W	
R10			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R13			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R14			RK73HB1J333J	CHIP R 33K J 1/16W	
R15,16			RK73HB1J100J	CHIP R 10 J 1/16W	
R17			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R18			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R19			RK73HB1J681J	CHIP R 680 J 1/16W	
R20			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R21			RK73HB1J103J	CHIP R 10K J 1/16W	
R27,28			RK73HB1J106J	CHIP R 10M J 1/16W	
R29			RK73HB1J563J	CHIP R 56K J 1/16W	
R30			RK73HB1J183J	CHIP R 18K J 1/16W	
R31			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R32,33			RK73HB1J104J	CHIP R 100K J 1/16W	
R41			RK73HB1J181J	CHIP R 180 J 1/16W	
R42			RK73HB1J151J	CHIP R 150 J 1/16W	
R44,45			RK73HB1J100J	CHIP R 10 J 1/16W	
R46			RK73HB1J154J	CHIP R 150K J 1/16W	
R47			RK73HB1J101J	CHIP R 100 J 1/16W	
R48			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R49			RK73HB1J103J	CHIP R 10K J 1/16W	
R50			RK73HB1J470J	CHIP R 47 J 1/16W	
R51			RK73HB1J331J	CHIP R 330 J 1/16W	
R52			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R53			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R60			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R61			RK73HB1J154J	CHIP R 150K J 1/16W	
R62			RK73HB1J220J	CHIP R 22 J 1/16W	
R70			RK73HB1J560J	CHIP R 56 J 1/16W	
R201			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R203			RK73HB1J221J	CHIP R 220 J 1/16W	
R205			RK73HB1J101J	CHIP R 100 J 1/16W	
R206			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R207			RK73HB1J101J	CHIP R 100 J 1/16W	
R209			RK73HB1J181J	CHIP R 180 J 1/16W	
R210			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R211,212			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R213			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R214			RK73HB1J220J	CHIP R 22 J 1/16W	
R215,216			RK73HB1J471J	CHIP R 470 J 1/16W	
R217			RK73HB1J120J	CHIP R 12 J 1/16W	
R218			RK73HB1J471J	CHIP R 470 J 1/16W	
R219			RK73HB1J683J	CHIP R 68K J 1/16W	
R220			RK73HB1J150J	CHIP R 15 J 1/16W	
R221			RK73HB1J473J	CHIP R 47K J 1/16W	
R223			RK73HB1J470J	CHIP R 47 J 1/16W	
R224			RK73HB1J683J	CHIP R 68K J 1/16W	
R226			RK73HB1J270J	CHIP R 27 J 1/16W	
R227			RK73GB2A000J	CHIP R 0.0 J 1/10W	

PARTS LIST

TX-RX UNIT (X57-7790-10)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R228			RK73HB1J563J	CHIP R	56K	J	1/16W	
R229			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R231			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R232,233			RK73HB1J271J	CHIP R	270	J	1/16W	
R234			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R235			RK73GB2A823J	CHIP R	82K	J	1/10W	
R237			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R239,240			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R301			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R303			RK73HB1J561J	CHIP R	560	J	1/16W	
R304			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R305			RK73HB1J333J	CHIP R	33K	J	1/16W	
R306			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R307			RK73EB2ER39K	CHIP R	0.39	K	1/4W	
R308			RK73HB1J182J	CHIP R	1.8K	J	1/16W	
R309,310			RK73EB2ER39K	CHIP R	0.39	K	1/4W	
R311,312			RK73HH1J154D	CHIP R	150K	D	1/16W	
R313,314			RK73HH1J474D	CHIP R	470K	D	1/16W	
R315			RK73HB1J103J	CHIP R	10K	J	1/16W	
R316			RK73HB1J333J	CHIP R	33K	J	1/16W	
R317			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R318			RK73HB1J474J	CHIP R	470K	J	1/16W	
R319			RK73HB1J104J	CHIP R	100K	J	1/16W	
R320			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R406			RK73HB1J103J	CHIP R	10K	J	1/16W	
R408,409			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R410			RK73HB1J334J	CHIP R	330K	J	1/16W	
R411,412			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R414			RK73HB1J101J	CHIP R	100	J	1/16W	
R415			RK73HB1J103J	CHIP R	10K	J	1/16W	
R416			RK73HB1J122J	CHIP R	1.2K	J	1/16W	
R417			RK73HB1J334J	CHIP R	330K	J	1/16W	
R419			RK73HB1J394J	CHIP R	390K	J	1/16W	
R421,422			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R424			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R426			RK73HB1J100J	CHIP R	10	J	1/16W	
R427			RK73HB1J224J	CHIP R	220K	J	1/16W	
R429			RK73HB1J101J	CHIP R	100	J	1/16W	
R433			RK73HB1J474J	CHIP R	470K	J	1/16W	
R434			RK73HB1J271J	CHIP R	270	J	1/16W	
R435			RK73HB1J101J	CHIP R	100	J	1/16W	
R436			RK73HB1J470J	CHIP R	47	J	1/16W	
R437			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R438			RK73HB1J122J	CHIP R	1.2K	J	1/16W	
R439			RK73HB1J391J	CHIP R	390	J	1/16W	
R440			RK73HB1J563J	CHIP R	56K	J	1/16W	
R441			RK73HB1J104J	CHIP R	100K	J	1/16W	
R442			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R443			RK73HB1J563J	CHIP R	56K	J	1/16W	
R444			RK73HB1J104J	CHIP R	100K	J	1/16W	
R445			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R446			RK73HB1J474J	CHIP R	470K	J	1/16W	
R448			RK73GB2A220J	CHIP R	22	J	1/10W	
R449			RK73HB1J391J	CHIP R	390	J	1/16W	
R452			RK73HB1J104J	CHIP R	100K	J	1/16W	
R453			RK73HB1J824J	CHIP R	820K	J	1/16W	
R455			RK73HB1J104J	CHIP R	100K	J	1/16W	
R456			RK73HB1J154J	CHIP R	150K	J	1/16W	
R457			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R461,462			RK73HB1J474J	CHIP R	470K	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R481			RK73HB1J474J	CHIP R	470K	J	1/16W	
R482,483			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R801			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R802			RK73GB2A331J	CHIP R	330	J	1/10W	
R803			RK73HB1J473J	CHIP R	47K	J	1/16W	
R804,805			RK73HB1J104J	CHIP R	100K	J	1/16W	
R806-809			RK73HB1J101J	CHIP R	100	J	1/16W	
R810			RK73HB1J104J	CHIP R	100K	J	1/16W	
R811			RK73GB2A271J	CHIP R	270	J	1/10W	
R812			RK73HB1J104J	CHIP R	100K	J	1/16W	
R813			RK73HB1J473J	CHIP R	47K	J	1/16W	
R814-816			RK73HB1J104J	CHIP R	100K	J	1/16W	
R817			RK73HB1J223J	CHIP R	22K	J	1/16W	
R818			RK73GB2A331J	CHIP R	330	J	1/10W	
R819,820			RK73HB1J104J	CHIP R	100K	J	1/16W	
R821			RK73HB1J473J	CHIP R	47K	J	1/16W	
R822			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R823			RK73HB1J473J	CHIP R	47K	J	1/16W	
R824		*	RK73HH1J914D	CHIP R	910K	D	1/16W	
R825			RK73HB1J124J	CHIP R	120K	J	1/16W	
R826,827			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R828			RK73HH1J103D	CHIP R	10K	D	1/16W	
R829			RK73HH1J474D	CHIP R	470K	D	1/16W	
R830			RK73HB1J184J	CHIP R	180K	J	1/16W	
R833			RK73HB1J473J	CHIP R	47K	J	1/16W	
R835-838			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R839			RK73HB1J223J	CHIP R	22K	J	1/16W	
R841			RK73HB1J473J	CHIP R	47K	J	1/16W	
R842			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R843			RK73HB1J104J	CHIP R	100K	J	1/16W	
R844-846			RK73HB1J103J	CHIP R	10K	J	1/16W	
R847			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R848			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R849			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R850			RK73HB1J473J	CHIP R	47K	J	1/16W	
R851			RK73HB1J223J	CHIP R	22K	J	1/16W	
R852			RK73HB1J473J	CHIP R	47K	J	1/16W	
R853			RK73HB1J103J	CHIP R	10K	J	1/16W	
R854			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R855			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R856			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R857			RK73HB1J181J	CHIP R	180	J	1/16W	
R858			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R859			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R860			RK73HB1J684J	CHIP R	680K	J	1/16W	
R861			RK73HB1J104J	CHIP R	100K	J	1/16W	
R862			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R863			RK73HB1J223J	CHIP R	22K	J	1/16W	
R864			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R865			RK73HB1J223J	CHIP R	22K	J	1/16W	
R866			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R867			RK73HB1J103J	CHIP R	10K	J	1/16W	
R868			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R869,870			RK73HB1J473J	CHIP R	47K	J	1/16W	
R871			RK73HB1J104J	CHIP R	100K	J	1/16W	
R872			RK73HB1J121J	CHIP R	120	J	1/16W	
R874			RK73GB2A100J	CHIP R	10	J	1/10W	
R875			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R876			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R883			RK73GB2A000J	CHIP R	0.0	J	1/10W	

PARTS LIST

TX-RX UNIT (X57-7790-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R884			RK73HB1J564J	CHIP R 560K J 1/16W	
R885			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R887			RK73HB1J100J	CHIP R 10 J 1/16W	
R888,889			RK73HB1J473J	CHIP R 47K J 1/16W	
R890			RK73HB1J273J	CHIP R 27K J 1/16W	
R892,893			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R894			RK73HB1J104J	CHIP R 100K J 1/16W	
R895			RK73HB1J224J	CHIP R 220K J 1/16W	
R896			RK73HB1J104J	CHIP R 100K J 1/16W	
R897			RK73HB1J103J	CHIP R 10K J 1/16W	
R898			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R899,900			RK73HB1J474J	CHIP R 470K J 1/16W	
R901			RK73HB1J564J	CHIP R 560K J 1/16W	
R902			RK73HB1J153J	CHIP R 15K J 1/16W	
R903			RK73HB1J101J	CHIP R 100 J 1/16W	
R904			RK73HB1J474J	CHIP R 470K J 1/16W	
R905			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R906			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R907			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R908			RK73HB1J104J	CHIP R 100K J 1/16W	
R909			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R910,911			RK73HB1J103J	CHIP R 10K J 1/16W	
R912			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R913			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R914			RK73HB1J471J	CHIP R 470 J 1/16W	
R918			RK73HB1J473J	CHIP R 47K J 1/16W	
R919			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R920			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R921,922			RK73HB1J473J	CHIP R 47K J 1/16W	
R923			RK73HB1J151J	CHIP R 150 J 1/16W	
R924			RK73HB1J474J	CHIP R 470K J 1/16W	
R925			RK73HB1J334J	CHIP R 330K J 1/16W	
R926			RK73HB1J274J	CHIP R 270K J 1/16W	
R927			RK73HB1J473J	CHIP R 47K J 1/16W	
R928			RK73HB1J273J	CHIP R 27K J 1/16W	
R929			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R930			RK73HB1J101J	CHIP R 100 J 1/16W	
R931			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R936			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R937			RK73HB1J103J	CHIP R 10K J 1/16W	
R938			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R939			RK73HB1J823J	CHIP R 82K J 1/16W	
R940			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R941			RK73HB1J563J	CHIP R 56K J 1/16W	
R942			RK73HB1J221J	CHIP R 220 J 1/16W	
R945,946			RK73HB1J104J	CHIP R 100K J 1/16W	
R947			RK73HB1J103J	CHIP R 10K J 1/16W	
S801-804		✻	S70-0516-05	TACT SWITCH	
MIC801			T91-0651-15	MIC ELEMENT	
D3			1SV325F	VARIABLE CAPACITANCE DIODE	
D5			1SV325F	VARIABLE CAPACITANCE DIODE	
D7			1SV325F	VARIABLE CAPACITANCE DIODE	
D9			1SV325F	VARIABLE CAPACITANCE DIODE	
D10,11			HVC375B-E	VARIABLE CAPACITANCE DIODE	
D12			HVC350B	VARIABLE CAPACITANCE DIODE	
D13 -15			HSC119	DIODE	
D17,18			HSC277	DIODE	
D201,202			HVC131	DIODE	

Ref. No.	Address	New parts	Parts No.	Description	Destination
D203,204			RN142S	DIODE	
D301			UDZW5.1(B)	ZENER DIODE	
D401,402			KDS121E-P	DIODE	
D403-405			HVC350B	VARIABLE CAPACITANCE DIODE	
D410			HVC350B	VARIABLE CAPACITANCE DIODE	
D431,432			HVC350B	VARIABLE CAPACITANCE DIODE	
D802			HSC119	DIODE	
D803			GN1G	DIODE	
D806		✻	RKZ5.1B2KG	ZENER DIODE	
D807-809			KDR731	DIODE	
D810			MC2850	DIODE	
IC1		✻	AK1541	MOS-IC	
IC301		✻	NJM2904RB1-ZB	BI-POLAR IC	
IC401			TA31136FNG	MOS-IC	
IC801			XC6209B502PR	MOS-IC	
IC802			XC6209B502MR	MOS-IC	
IC803			XC6209B502PR	MOS-IC	
IC804			XC6209B332MR	MOS-IC	
IC805		✻	XC61CN4502MR	MOS-IC	
IC806			XC6209B332MR	MOS-IC	
IC807		✻	XC6120N302N1	MOS-IC	
IC808		✻	HA1630D03MM	MOS-IC	
IC809		✻	F3640MDFBKDKA	MCU	
IC810		✻	EX25064ASA00A	ROM IC	
IC811			TC75S51FE(F)	MOS-IC	
IC812			CD686Q3	MOS-IC	
IC814			TC75S51FE(F)	MOS-IC	
IC815			TA7368FG	MOS-IC	
IC816		✻	HA1630D03MM	MOS-IC	
IC817			AK2331	MOS-IC	
Q2			2SC5636	TRANSISTOR	
Q3			KTC4075E(Y,GR)	TRANSISTOR	
Q4,5			MCH3914(7)-H	FET	
Q6			SSM6L05FU-F	FET	
Q7			SSM3J05FU-F	FET	
Q8,9			2SC5636	TRANSISTOR	
Q201			2SC5636	TRANSISTOR	
Q203			2SC4926YD	TRANSISTOR	
Q204		✻	RFM01U7P	FET	
Q205		✻	RD07MUS2BT112	FET	
Q301		✻	RT1N140U	TRANSISTOR	
Q303			2SK1830F	FET	
Q304			RT1N141U	TRANSISTOR	
Q305			2SK1824-A	FET	
Q306			RT1P441U	TRANSISTOR	
Q403			KTC4080E-P	TRANSISTOR	
Q405			KTC4080E-P	TRANSISTOR	
Q406			3SK318	FET	
Q407			3SK293-F	FET	
Q801		✻	SSM6N17FU	FET	
Q802,803			SSM6L05FU-F	FET	
Q804			SSM3J05FU-F	FET	
Q805			2SK1830F	FET	
Q806,807			2SC4919-S	TRANSISTOR	
Q808			2SK1830F	FET	
Q809			KTC4075E(Y,GR)	TRANSISTOR	
Q810			2SC4116(GR)F	TRANSISTOR	
Q811			2SA1586(Y,GR)F	TRANSISTOR	
Q812			2SK1830F	FET	
Q813			RT1N141U	TRANSISTOR	

PARTS LIST

TX-RX UNIT (X57-7790-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q814			2SA1362-F(GR)	TRANSISTOR	
Q815,816			UPA672T-A	FET	
Q817			RT1N441U	TRANSISTOR	
Q818,819			2SK3577-A	FET	
Q820			RT1N141U	TRANSISTOR	
TH201		✻	ERTJ0EV104J	THERMISTOR	
TH401			B57331V2104J	THERMISTOR	

Ref. No.	Address	New parts	Parts No.	Description	Destination