EXPLODED VIEW (TK-7180H)

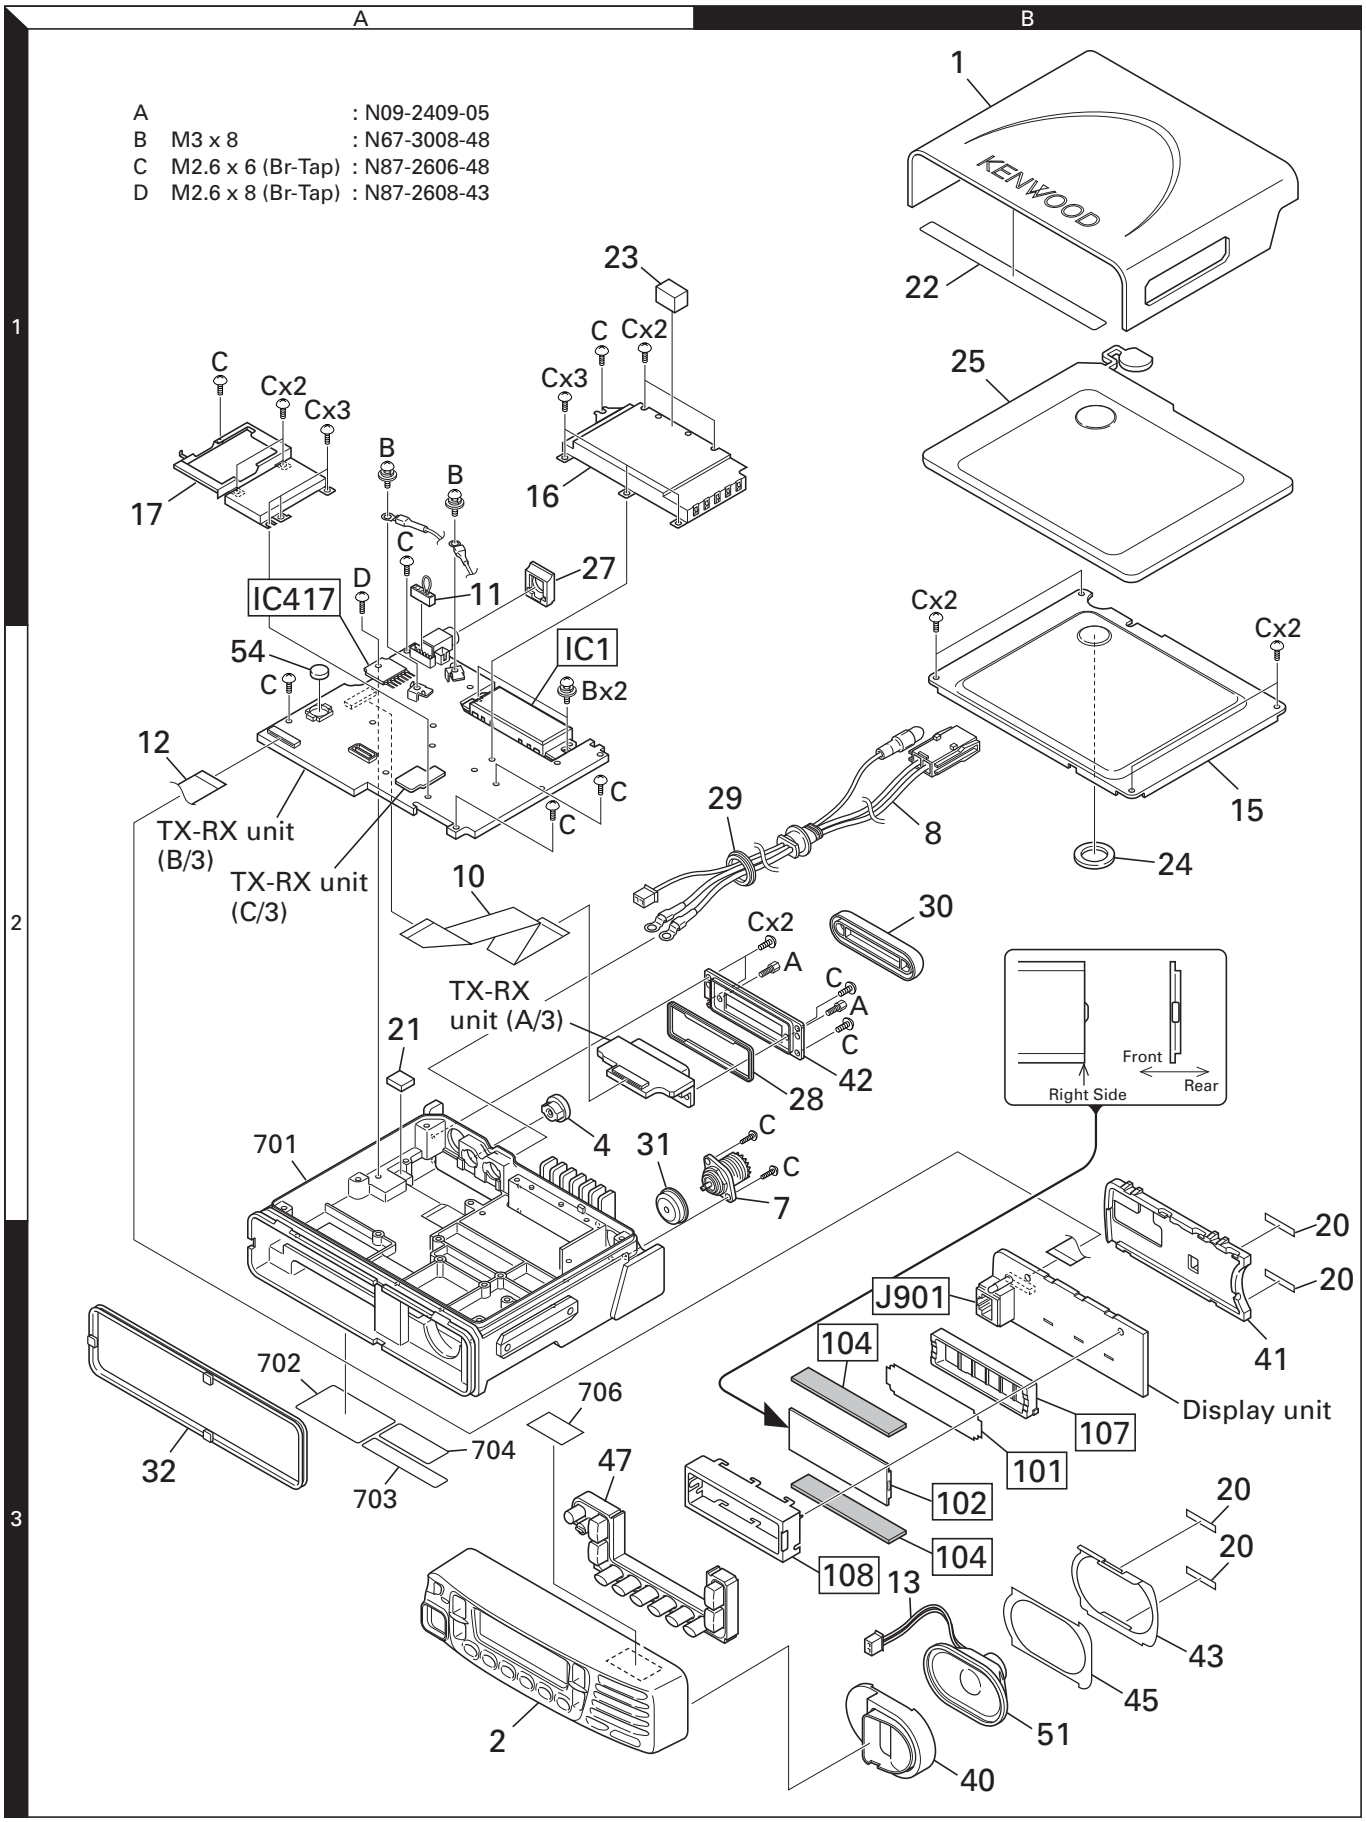

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

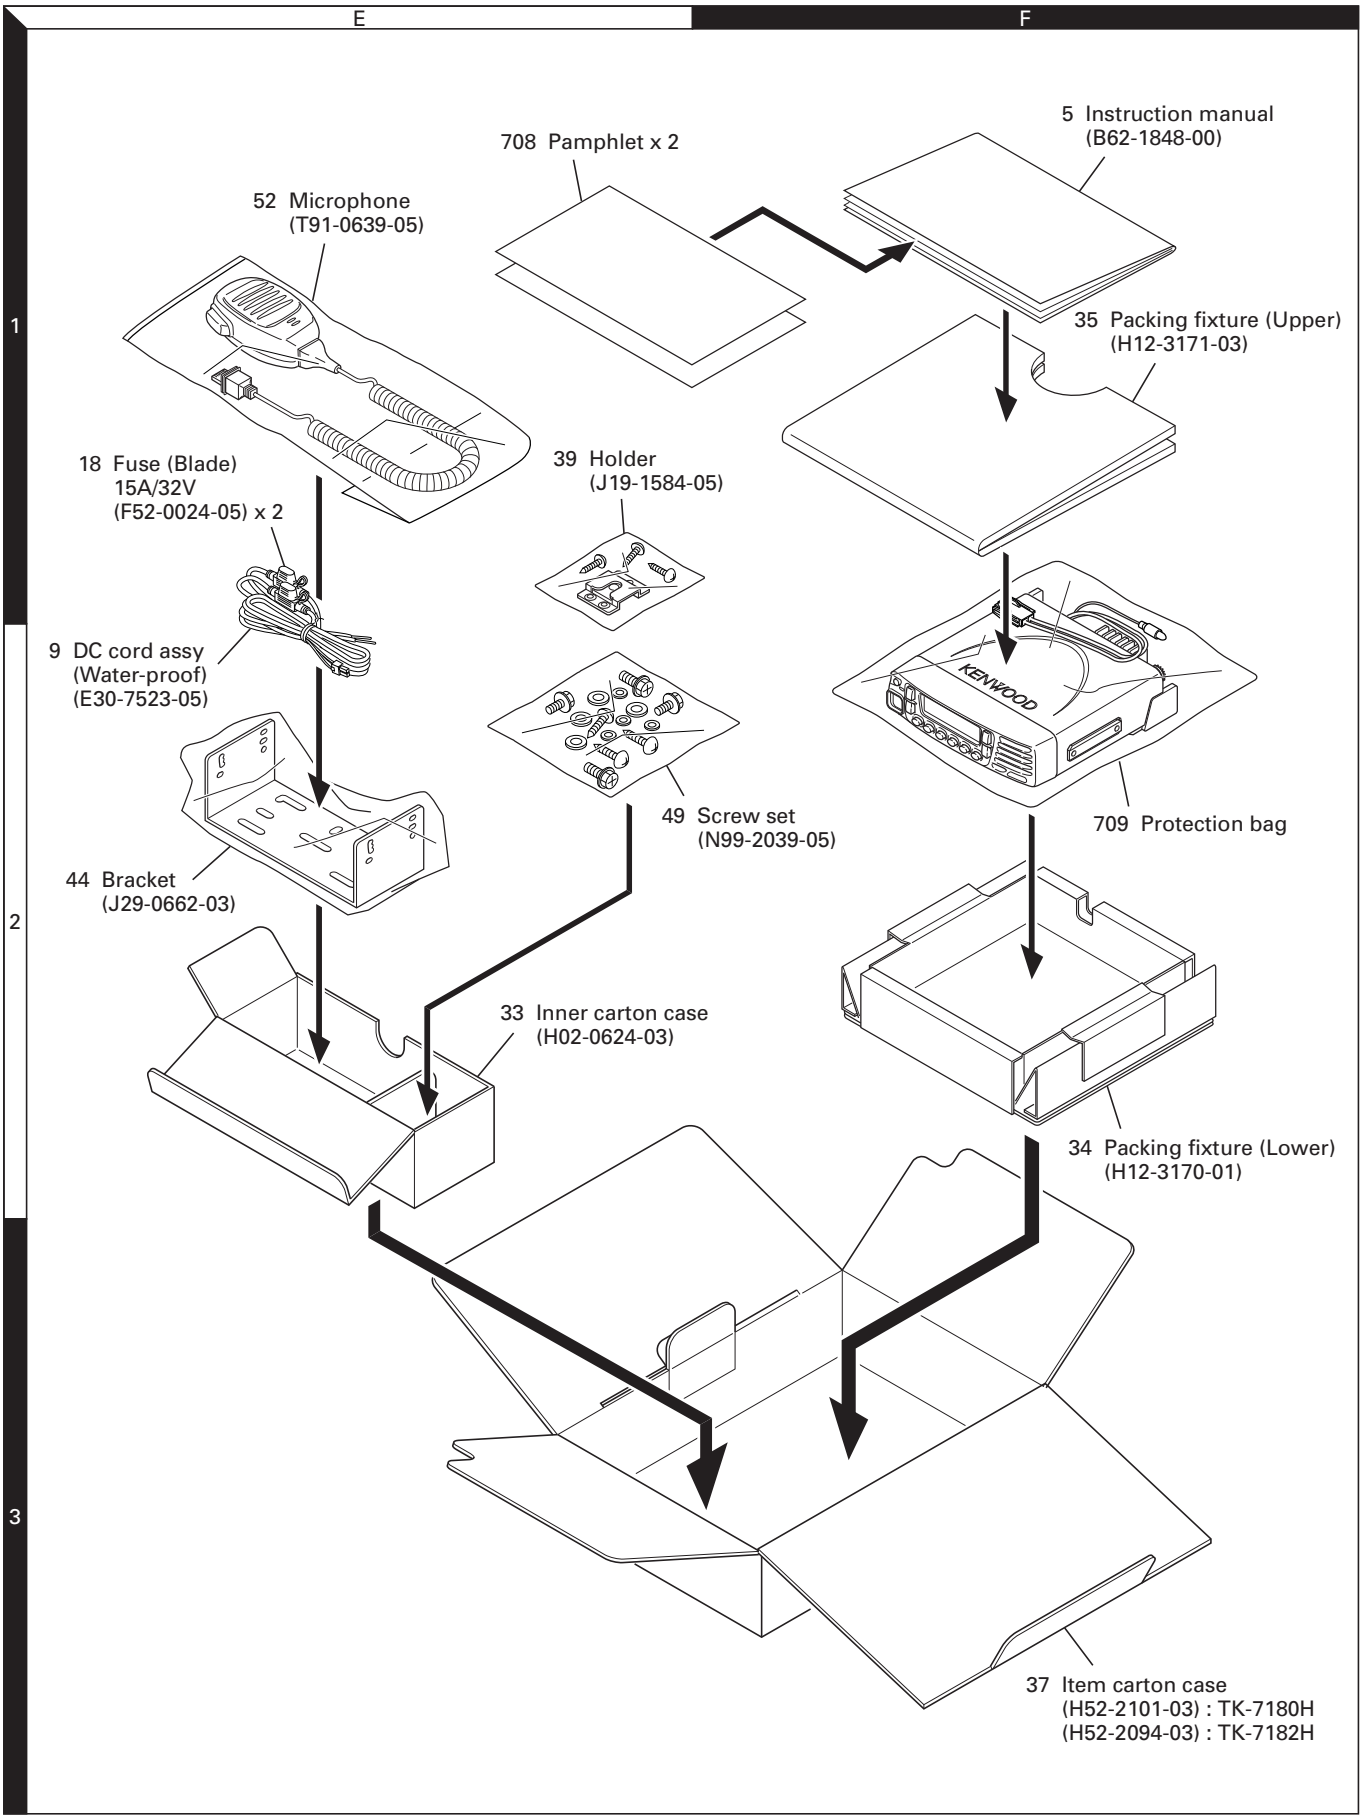

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New Parts. ⚠ indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
Y : AAFES (Europe) **X** : Australia **M** : Other Areas

TK-7180H (Y51-5020-11), TK-7182H (Y51-5080-11)
DISPLAY UNIT (X54-3480-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-7180H/7182H					
1	1B,1D		A01-2194-11	METALLIC CABINET	
2	3A,3C		A62-1094-23	PANEL ASSY	
4	2A,2C		B09-0681-03	CAP (KAP-2)	
5	1F		B62-1848-00	INSTRUCTION MANUAL	
7	2B,2D		E04-0167-05	RF COAXIAL RECEPTACLE (M)	
8	2B,2D		E30-7520-05	DC CORD (PIG TAIL)	
9	2E		E30-7523-05	DC CORD ASSY (WATER-PROOF)	
10	2A,2C		E37-1110-15	FLAT CABLE (30P/D-SUB)	
11	1A,1C		E37-1118-05	LEAD WIRE WITH CONNECTOR (SHORT CABLE)	
12	2A,2C		E37-1120-15	FLAT CABLE (30P/TX-RX)	
13	3B,3D		E37-1124-05	LEAD WIRE WITH CONNECTOR (2P/SP)	
15	2B,2D		F10-2488-02	SHIELDING PLATE (CHASSIS)	
16	1A,1C		F10-2489-03	SHIELDING CASE (FINAL)	
17	1A,1C		F10-2490-03	SHIELDING CASE (VCO)	
18	1E		F52-0024-05	FUSE (BLADE TYPE) 15A/32V	
19	3B,3D		G02-1824-04	EARTH SPRING	SK
20	3B,3D		G10-1342-04	FIBROUS SHEET (BIRITSUKI)	
21	2A,2C		G11-4290-04	RUBBER SHEET (CHASSIS)	
22	1B,1D		G11-4343-04	SHEET (CABINET)	
23	1A,1C		G13-2018-04	CUSHION	
24	2B,2D		G13-2047-04	CUSHION (DC SCREW)	
25	1B,1D		G53-1613-01	PACKING (SHIELD PLATE)	
27	1A,1C		G53-1616-03	PACKING (PHONE JACK)	
28	2B,2D		G53-1626-03	PACKING (D-SUB OUTER)	
29	2B,2D		G53-1643-04	PACKING (DC CORD)	
30	2B,2D		G53-1645-03	PACKING (D-SUB INNER)	
31	2A,2C		G53-1662-04	PACKING (ANT M TYPE)	
32	3A,3C		G53-1676-03	PACKING (CHASSIS)	
33	2E		H02-0624-03	INNER CARTON CASE	
34	2F		H12-3170-01	PACKING FIXTURE (LOWER)	
35	1F		H12-3171-03	PACKING FIXTURE (UPPER)	
37	3F	✻	H52-2094-03	ITEM CARTON CASE	SK
37	3F	✻	H52-2101-03	ITEM CARTON CASE	K
39	1E		J19-1584-05	HOLDER (ACCESSORY)	
40	3B,3D		J19-5464-13	HOLDER (SP)	
41	3B,3D		J19-5485-02	HOLDER (PANEL)	
42	2B,2D		J21-8479-02	HARDWARE FIXTURE (D-SUB)	
43	3B,3D		J21-8481-03	HARDWARE FIXTURE (SP)	
44	2E		J29-0662-03	BRACKET (ACCESSORY)	
45	3B,3D		J30-1289-04	SPACER (SP)	
47	3A,3C		K29-9349-01	KEY TOP	
A	2B,2D		N09-2409-05	HEXAGON HEAD SCREW (D-SUB)	
B	1A,1C		N67-3008-48	PAN HEAD SEMS SCREW (FINAL IC)	
C	1A,1C		N87-2606-48	BRAZIER HEAD TAPTITE SCREW (ANT, PCB)	
D	1A,1C		N87-2608-43	BRAZIER HEAD TAPTITE SCREW (AUDIO IC)	
49	2E		N99-2039-05	SCREW SET (ACCESSORY)	
51	3B,3D		T07-0757-05	SPEAKER	
52	1E		T91-0639-05	MICROPHONE (ACCESSORY)	
54	2A		W09-0971-05	LITHIUM CELL	K

Ref. No.	Address	New parts	Parts No.	Description	Destination
DISPLAY UNIT (X54-3480-10) : TK-7180H					
101	3B		B11-1825-04	FILTER (LCD)	
102	3B		B38-0888-15	LCD	
D907			B30-2151-05	LED (R/G)	
D909-920			B30-2281-05	LED (Y)	
D921-930			B30-2282-05	LED (Y)	
C907,908			CK73HB1H102K	CHIP C 1000PF K	
C909			CK73GB1H222K	CHIP C 2200PF K	
C910,911			CC73GCH1H101J	CHIP C 100PF J	
C912,913			CK73GB1H102K	CHIP C 1000PF K	
C914			CC73GCH1H101J	CHIP C 100PF J	
C916,917			CK73GB1C104K	CHIP C 0.10UF K	
C918			C92-0628-05	CHIP-TAN 10UF 10WV	
C920			CC73GCH1H101J	CHIP C 100PF J	
C921			CK73GB1H102K	CHIP C 1000PF K	
C922			CK73GB1H103K	CHIP C 0.010UF K	
C924,925			CC73GCH1H100D	CHIP C 10PF D	
C926-928			CK73GB1H102K	CHIP C 1000PF K	
C930			CK73GB1H103K	CHIP C 0.010UF K	
C931			C92-0784-05	CHIP-TAN 4.7UF 10WV	
C932-934			CK73GB1H103K	CHIP C 0.010UF K	
C935			CK73GB1H471K	CHIP C 470PF K	
C936			CK73GB1C104K	CHIP C 0.10UF K	
C937			CK73GB1H103K	CHIP C 0.010UF K	
C938			CK73GB1H102K	CHIP C 1000PF K	
104	3B		E29-1202-04	INTER CONNECTOR (LCD)	
CN901			E40-5704-05	PIN ASSY	
CN902			E40-6372-05	FLAT CABLE CONNECTOR	
J901	3B		E08-0877-05	MODULAR JACK	
107	3B		J19-5467-03	HOLDER (LCD)	
108	3B		J21-8470-03	MOUNTING HARDWARE (LCD)	
-			J31-0551-05	COLLAR	
L901,902			L40-1095-85	SMALL FIXED INDUCTOR (1.0UH)	
L903-907			L92-0140-05	CHIP FERRITE	
L908,909			L92-0163-05	BEADS CORE	
X901			L77-1956-05	CRYSTAL RESONATOR (14.7456MHZ)	
CP901-911			RK75HA1J101J	CHIP-COM 100 J 1/16W	
R901			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R903			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R904			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R905			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R907			RK73GB2A333J	CHIP R 33K J 1/10W	
R909-911			RK73GB2A473J	CHIP R 47K J 1/10W	
R913-916			RK73HB1J474J	CHIP R 470K J 1/16W	
R917			RK73FB2B471J	CHIP R 470 J 1/8W	
R918			RK73FB2B271J	CHIP R 270 J 1/8W	
R919			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R920			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R925			RK73HB1J471J	CHIP R 470 J 1/16W	
R926			RK73HB1J473J	CHIP R 47K J 1/16W	
R927-935			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R936			RK73HB1J103J	CHIP R 10K J 1/16W	
R939			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R940			RK73HB1J101J	CHIP R 100 J 1/16W	

K : TK-7180H(K) SK : TK-7182H(K)

PARTS LIST

DISPLAY UNIT (X54-3480-10)
DISPLAY UNIT (X54-3540-10)
TX-RX UNIT (X57-6980-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R941			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R942		✻	RK73EB2E470J	CHIP R 47 J 1/4W	
R943			RK73EB2E101J	CHIP R 100 J 1/4W	
R944			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R945			RK73GB2A103J	CHIP R 10K J 1/10W	
R947-950			RK73FB2B101J	CHIP R 100 J 1/8W	
R951,952			RK73FB2B391J	CHIP R 390 J 1/8W	
R953,954			RK73FB2B821J	CHIP R 820 J 1/8W	
R955-958			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R959			RK73HB1J103J	CHIP R 10K J 1/16W	
R962,963			RK73GB2A103J	CHIP R 10K J 1/10W	
R967			RK73HB1J271J	CHIP R 270 J 1/16W	
R969			RK73HB1J000JX	CHIP R 0.0 J 1/16W	
R970			RK73GB2A103J	CHIP R 10K J 1/10W	
R971			RK73HB1J102J	CHIP R 1.0K J 1/16W	
D901,902			02DZ18(X,Y)	ZENER DIODE	
D903			MINISMDC020	VARISTOR	
D905			DA204U	DIODE	
D931-933			AVRM1608080MAA	VARISTOR	
IC901			TA78L05F	MOS-IC	
IC902			30302M88Z7GU	MICROCONTROLLER IC	
IC903			LC75810T-8726	MOS-IC	
Q901,902			DTC144EE	DIGITAL TRANSISTOR	
Q904-906			DTC114EE	DIGITAL TRANSISTOR	
Q907			2SC2873(Y)	TRANSISTOR	
Q909,910			12A02CH	TRANSISTOR	
Q911			DTC114EE	DIGITAL TRANSISTOR	
Q913			DTC114EE	DIGITAL TRANSISTOR	
TH901			S1R103J440H	THERMISTOR	

DISPLAY UNIT (X54-3540-10) : TK-7182H

101	3D		B11-1825-04	FILTER (LCD)	
103	3D		B38-0915-05	LCD	
D908			B30-2151-05	LED (R/G)	
D909-920			B30-2281-05	LED (Y)	
D921-930			B30-2282-05	LED (Y)	
C901			CK73GB1H102K	CHIP C 1000PF K	
C904			CK73GB1C104K	CHIP C 0.10UF K	
C905			CC73GCH1H101J	CHIP C 100PF J	
C906			CK73GB1H102K	CHIP C 1000PF K	
C908-910			CC73GCH1H101J	CHIP C 100PF J	
C911-915			CK73GB1H102K	CHIP C 1000PF K	
C916			CK73GB1E104K	CHIP C 0.10UF K	
C917			C92-0838-05	CHIP-TAN 10UF 10WV	
C918			CK73GB1E104K	CHIP C 0.10UF K	
C919			C92-0784-05	CHIP-TAN 4.7UF 10WV	
C920-922			CK73GB1H103K	CHIP C 0.010UF K	
C923			CK73GB1H681K	CHIP C 680PF K	
C924,925			CK73GB1H102K	CHIP C 1000PF K	
105	3D		E29-1207-04	INTER CONNECTOR (LCD)	
CN901			E40-5704-05	PIN ASSY	
CN902			E40-6372-05	FLAT CABLE CONNECTOR	
J901	3D		E08-0877-05	MODULAR JACK	
107	3D		J19-5467-03	HOLDER (LCD)	
108	3D		J21-8470-03	MOUNTING HARDWARE (LCD)	
-			J31-0551-05	COLLAR	

Ref. No.	Address	New parts	Parts No.	Description	Destination
L901,902			L40-1095-85	SMALL FIXED INDUCTOR (1.0UH)	
L903-909			L92-0140-05	CHIP FERRITE	
R901			RK73GB2A471J	CHIP R 470 J 1/10W	
R902			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R903			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R904			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R905			RK73GB2A333J	CHIP R 33K J 1/10W	
R906			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R907			RK73GB2A103J	CHIP R 10K J 1/10W	
R908			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R909,910			RK73GB2A103J	CHIP R 10K J 1/10W	
R911-915			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R916			RK73GB2A563J	CHIP R 56K J 1/10W	
R917			RK73FB2B471J	CHIP R 470 J 1/8W	
R918			RK73FB2B271J	CHIP R 270 J 1/8W	
R919,920			RK73GB2A103J	CHIP R 10K J 1/10W	
R921			RK73GB2A474J	CHIP R 470K J 1/10W	
R922,923			RK73EB2E101J	CHIP R 100 J 1/4W	
R924-927			RK73FB2B101J	CHIP R 100 J 1/8W	
R928,929			RK73FB2B391J	CHIP R 390 J 1/8W	
R930,931			RK73FB2B821J	CHIP R 820 J 1/8W	
R932-936			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
D902			02DZ18(X,Y)	ZENER DIODE	
D903			MINISMDC020	VARISTOR	
D904			1SS388	DIODE	
D906			DA204U	DIODE	
D931-933			AVRM1608080MAA	VARISTOR	
IC901			XC6201P502PR	MOS-IC	
IC902			LC75854W	MOS-IC	
Q901			DTC144EE	DIGITAL TRANSISTOR	
Q902			12A02CH	TRANSISTOR	
Q903			DTC144EE	DIGITAL TRANSISTOR	
Q904-907			DTC114EE	DIGITAL TRANSISTOR	
Q908			12A02CH	TRANSISTOR	
Q909			2SK2009	FET	

TX-RX UNIT (X57-6980-XX) -12 : K -13 : SK

C1			CK73GB1H102K	CHIP C 1000PF K	
C2-5			CK73GB1H471K	CHIP C 470PF K	
C6			C92-0585-05	CHIP-TAN 4.7UF 16WV	
C7,8			CK73GB1H471K	CHIP C 470PF K	
C9			CC73GCH1H330J	CHIP C 33PF J	
C10			CK73GB1H471K	CHIP C 470PF K	
C13-15			CK73GB1H471K	CHIP C 470PF K	
C16			CC73GCH1H560J	CHIP C 56PF J	
C17			CC73GCH1H220J	CHIP C 22PF J	
C18			CK73GB1H471K	CHIP C 470PF K	
C19			CC73GCH1H470J	CHIP C 47PF J	
C20			CC73GCH1H101J	CHIP C 100PF J	
C21			CK73FB1H471K	CHIP C 470PF K	
C22			CK73GB1H471K	CHIP C 470PF K	
C24			C92-0606-05	CHIP-TAN 4.7UF 10WV	
C26			CC73GCH1H220J	CHIP C 22PF J	
C27			CC73GCH1H470J	CHIP C 47PF J	
C28			CC73GCH1H101J	CHIP C 100PF J	
C29-31			CK73GB1H471K	CHIP C 470PF K	

K : TK-7180H(K) SK : TK-7182H(K)

PARTS LIST

TX-RX UNIT (X57-6980-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C32			C92-0834-05	ELECTRO	47UF	25WV	
C33-35			CC73GCH1H101J	CHIP C	100PF	J	
C38-40			CK73GB1H471K	CHIP C	470PF	K	
C43			CC73FCH1H270J	CHIP C	27PF	J	
C44			C93-0573-05	CHIP C	120PF	J	
C45			CM73F2H390J	CHIP C	39PF	J	
C47			CC73GCH1H0R3B	CHIP C	0.3PF	B	
C48			CC73GCH1H040B	CHIP C	4.0PF	B	
C49			CK73GB1H471K	CHIP C	470PF	K	
C50			CM73F2H220J	CHIP C	22PF	J	
C51			CK73GB1H471K	CHIP C	470PF	K	
C52			CM73F2H150J	CHIP C	15PF	J	
C53			CM73F2H270J	CHIP C	27PF	J	
C55			C93-0561-05	CHIP C	12PF	J	
C56			C93-0562-05	CHIP C	15PF	J	
C57			CC73GCH1H0R3B	CHIP C	0.3PF	B	
C58			CC73GCH1H030B	CHIP C	3.0PF	B	
C59			CK73GB1H471K	CHIP C	470PF	K	
C60			C93-0562-05	CHIP C	15PF	J	
C61			CK73GB1H471K	CHIP C	470PF	K	
C63			CC73GCH1H220J	CHIP C	22PF	J	
C64			CC73GCH1H090D	CHIP C	9.0PF	D	
C65			CC73GCH1H220J	CHIP C	22PF	J	
C74			CK73GB1H471K	CHIP C	470PF	K	
C76,77			CK73GB1H471K	CHIP C	470PF	K	
C79,80			CK73GB1H471K	CHIP C	470PF	K	
C82			CC73GCH1H0R3B	CHIP C	0.3PF	B	
C83			CC73GCH1H050B	CHIP C	5.0PF	B	
C84			CK73GB1H471K	CHIP C	470PF	K	
C87,88			CC73GCH1H330J	CHIP C	33PF	J	
C102			CK73GB1H102K	CHIP C	1000PF	K	
C108			CC73GCH1H270J	CHIP C	27PF	J	
C109			CC73GCH1H160J	CHIP C	16PF	J	
C110			CC73GCH1H820J	CHIP C	82PF	J	
C111			CC73GCH1H470J	CHIP C	47PF	J	
C112			CC73GCH1H220J	CHIP C	22PF	J	
C113			CC73GCH1H100D	CHIP C	10PF	D	
C115			CC73GCH1H180J	CHIP C	18PF	J	
C116			CC73GCH1H150J	CHIP C	15PF	J	
C119,120			CK73GB1H102K	CHIP C	1000PF	K	
C123			CK73GB1C104K	CHIP C	0.10UF	K	
C124			CC73GCH1H070D	CHIP C	7.0PF	D	
C125-127			CK73GB1H102K	CHIP C	1000PF	K	
C128			CC73GCH1H120J	CHIP C	12PF	J	
C129			CK73GB1H102K	CHIP C	1000PF	K	
C130			CC73GCH1H120J	CHIP C	12PF	J	
C131,132			CK73GB1H102K	CHIP C	1000PF	K	
C133			CC73GCH1H120J	CHIP C	12PF	J	
C134			CC73GCH1H100D	CHIP C	10PF	D	
C135			CK73GB1H102K	CHIP C	1000PF	K	
C136			CC73GCH1H120J	CHIP C	12PF	J	
C137			CK73GB1H102K	CHIP C	1000PF	K	
C138			CC73GCH1H120J	CHIP C	12PF	J	
C139,140			CK73GB1H102K	CHIP C	1000PF	K	
C141			CC73GCH1H120J	CHIP C	12PF	J	
C142			CC73GCH1H330J	CHIP C	33PF	J	
C144			CK73GB1H103K	CHIP C	0.010UF	K	
C145			CK73GB1H102K	CHIP C	1000PF	K	
C146			CC73GCH1H220J	CHIP C	22PF	J	
C149			CK73GB1H102K	CHIP C	1000PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C150			CC73GCH1H090D	CHIP C	9.0PF	D	
C171			CC73GCH1H150J	CHIP C	15PF	J	
C172			CC73GCH1H2R5C	CHIP C	2.5PF	C	
C173			CC73GCH1H220J	CHIP C	22PF	J	
C174			CC73GCH1H070D	CHIP C	7.0PF	D	
C175			CC73GCH1H120J	CHIP C	12PF	J	
C176-178			CK73GB1H102K	CHIP C	1000PF	K	
C181			CK73GB1H102K	CHIP C	1000PF	K	
C182,183			CK73GB1H103K	CHIP C	0.010UF	K	
C184			CK73GB1H102K	CHIP C	1000PF	K	
C185			CK73GB1H103K	CHIP C	0.010UF	K	
C186			CC73GCH1H330J	CHIP C	33PF	J	
C187			CC73GCH1H390J	CHIP C	39PF	J	
C188,189			CC73GCH1H040B	CHIP C	4.0PF	B	
C190			CC73GCH1H390J	CHIP C	39PF	J	
C192-194			CK73GB1H103K	CHIP C	0.010UF	K	
C195			CK73GB1H102K	CHIP C	1000PF	K	
C196,197			CK73GB1H103K	CHIP C	0.010UF	K	
C198			CC73GCH1H680J	CHIP C	68PF	J	
C199			CC73GCH1H390J	CHIP C	39PF	J	
C200,201			CC73GCH1H040B	CHIP C	4.0PF	B	
C202			CC73GCH1H390J	CHIP C	39PF	J	
C204-206			CK73GB1H103K	CHIP C	0.010UF	K	
C207			CK73GB1H102K	CHIP C	1000PF	K	
C208,209			CK73GB1H103K	CHIP C	0.010UF	K	
C210			CC73GCH1H680J	CHIP C	68PF	J	
C211			CC73GCH1H100D	CHIP C	10PF	D	
C212			CK73GB1H471K	CHIP C	470PF	K	
C213			CK73GB1H103K	CHIP C	0.010UF	K	
C214			CK73GB1C104K	CHIP C	0.10UF	K	
C215			CC73GCH1H180J	CHIP C	18PF	J	
C216			CC73GCH1H150J	CHIP C	15PF	J	
C217			CK73GB1H102K	CHIP C	1000PF	K	
C218			CK73GB1H103K	CHIP C	0.010UF	K	
C219			CK73FB1C105K	CHIP C	1.0UF	K	
C220,221			CK73GB1C104K	CHIP C	0.10UF	K	
C222			CK73GB1H102K	CHIP C	1000PF	K	
C223			CK73GB1H103K	CHIP C	0.010UF	K	
C224,225			CC73GCH1H271J	CHIP C	270PF	J	
C226,227			CK73GB1H102K	CHIP C	1000PF	K	
C228			CK73GB1C104K	CHIP C	0.10UF	K	
C229			CK73GB1C333K	CHIP C	0.033UF	K	
C230			CK73GB1H103K	CHIP C	0.010UF	K	
C231			CC73GCH1H820J	CHIP C	82PF	J	
C232,233			CK73GB1H102K	CHIP C	1000PF	K	
C234			CK73FB1C224K	CHIP C	0.22UF	K	
C235			CK73GB1C104K	CHIP C	0.10UF	K	
C236			CK73GB1H103K	CHIP C	0.010UF	K	
C237			C92-0712-05	CHIP-TAN	22UF	6.3WV	
C238			CK73GB1H103K	CHIP C	0.010UF	K	
C239,240			CK73GB1C104K	CHIP C	0.10UF	K	
C241			CK73GB1H102K	CHIP C	1000PF	K	
C251,252			CK73GB1H102K	CHIP C	1000PF	K	
C253			CK73GB1H103K	CHIP C	0.010UF	K	
C255			C92-0694-05	CHIP-TAN	10UF	16WV	
C256			CK73GB1H103K	CHIP C	0.010UF	K	
C257			C92-0519-05	CHIP-TAN	1.0UF	25WV	
C258			C92-0516-05	CHIP-TAN	4.7UF	16WV	
C259			C92-0628-05	CHIP-TAN	10UF	10WV	
C299			C92-0713-05	CHIP-TAN	10UF	6.3WV	

K : TK-7180H(K) SK : TK-7182H(K)

PARTS LIST

TX-RX UNIT (X57-6980-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C301			CC73GCH1H101J	CHIP C	100PF	J	
C303			CK73GB1H102K	CHIP C	1000PF	K	
C304			CC73GCH1H220J	CHIP C	22PF	J	
C305			C92-0507-05	CHIP-TAN	4.7UF	6.3WV	
C307-309			CK73GB1H102K	CHIP C	1000PF	K	
C311			CK73GB1H102K	CHIP C	1000PF	K	
C312			C92-0001-05	CHIP-TAN	0.1UF	35WV	
C313			CK73GB1C104K	CHIP C	0.10UF	K	
C314			CK73FB1E683K	CHIP C	0.068UF	K	
C315-317			CK73GB1H102K	CHIP C	1000PF	K	
C318			C92-0657-05	CHIP-TAN	2.2UF	20WV	
C319			CK73GB1H102K	CHIP C	1000PF	K	
C320			C92-0657-05	CHIP-TAN	2.2UF	20WV	
C321			CK73GB1C104K	CHIP C	0.10UF	K	
C322			CC73GCH1H390J	CHIP C	39PF	J	
C323			CC73GCH1H330J	CHIP C	33PF	J	
C324			CC73GCH1H120J	CHIP C	12PF	J	
C325			CC73GCH1H3R5B	CHIP C	3.5PF	B	
C326			CC73GCH1H020B	CHIP C	2.0PF	B	
C327			CK73FB1E224K	CHIP C	0.22UF	K	
C331			CK73GB1H102K	CHIP C	1000PF	K	
C332,333			CC73GCH1H390J	CHIP C	39PF	J	
C334			CC73GCH1H150J	CHIP C	15PF	J	
C335			CK73GB1C223K	CHIP C	0.022UF	K	
C336			CK73GB1C104K	CHIP C	0.10UF	K	
C337			CK73GB1H102K	CHIP C	1000PF	K	
C338			C92-0001-05	CHIP-TAN	0.1UF	35WV	
C339			CK73GB1H102K	CHIP C	1000PF	K	
C340			CC73GCH1H270J	CHIP C	27PF	J	
C342			CK73GB1H102K	CHIP C	1000PF	K	
C343			C92-0628-05	CHIP-TAN	10UF	10WV	
C346			CC73GCH1H101G	CHIP C	100PF	G	
C347			CC73GCH1H680G	CHIP C	68PF	G	
C350			CC73GCH1H470G	CHIP C	47PF	G	
C352			CC73GCH1H150G	CHIP C	15PF	G	
C353			CK73GB1H102K	CHIP C	1000PF	K	
C354			CC73GCH1H560G	CHIP C	56PF	G	
C355			CC73GCH1H130G	CHIP C	13PF	G	
C356			CC73GCH1HR75B	CHIP C	0.75PF	B	
C357			CC73GCH1H150G	CHIP C	15PF	G	
C358			CC73GCH1H100C	CHIP C	10PF	C	
C359			CC73GCH1H090B	CHIP C	9.0PF	B	
C360			CC73GCH1H150G	CHIP C	15PF	G	
C361-363			CK73GB1H102K	CHIP C	1000PF	K	
C364,365			CC73GCH1H010B	CHIP C	1.0PF	B	
C367-369			CK73GB1H102K	CHIP C	1000PF	K	
C370			CK73GB1H471K	CHIP C	470PF	K	
C371			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C372			CC73GCH1H150J	CHIP C	15PF	J	
C373-378			CK73GB1H102K	CHIP C	1000PF	K	
C379			CC73GCH1H150J	CHIP C	15PF	J	
C380			CK73GB1H471K	CHIP C	470PF	K	
C381			CK73GB1H102K	CHIP C	1000PF	K	
C382			CK73GB1H103K	CHIP C	0.010UF	K	
C383			CK73GB1H102K	CHIP C	1000PF	K	
C384			CK73GB1H103K	CHIP C	0.010UF	K	
C385			CK73GB1H471K	CHIP C	470PF	K	
C387,388			CK73GB1H102K	CHIP C	1000PF	K	
C390-392			CK73GB1H102K	CHIP C	1000PF	K	
C393			CC73GCH1H270J	CHIP C	27PF	J	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C394			CC73GCH1H220J	CHIP C	22PF	J	
C395			CK73GB1C104K	CHIP C	0.10UF	K	
C396,397			CK73GB1H102K	CHIP C	1000PF	K	
C400			CK73FB1H123K	CHIP C	0.012UF	K	
C403			CK73HB1A104K	CHIP C	0.10UF	K	K
C404			CC73HCH1H050C	CHIP C	5.0PF	C	K
C406			CC73GCH1H0R3B	CHIP C	0.3PF	B	
C407			CK73GB1H103K	CHIP C	0.010UF	K	
C408,409			CC73HCH1H150G	CHIP C	15PF	G	
C410-412			CK73GB1C104K	CHIP C	0.10UF	K	
C413			CC73GCH1H102J	CHIP C	1000PF	J	
C420,421			CC73GCH1H101J	CHIP C	100PF	J	
C422			CK73GB1H102K	CHIP C	1000PF	K	
C423			CK73FF1C105Z	CHIP C	1.0UF	Z	
C424			CK73GB1H102K	CHIP C	1000PF	K	
C425-428			CC73GCH1H101J	CHIP C	100PF	J	
C429			CK73GB1A105K	CHIP C	1.0UF	K	
C430,431			CC73GCH1H101J	CHIP C	100PF	J	
C432			CK73GB1H102K	CHIP C	1000PF	K	
C433			CK73GB1C104K	CHIP C	0.10UF	K	
C434			CK73GB1H561K	CHIP C	560PF	K	
C435			CK73GB1H102K	CHIP C	1000PF	K	
C436,437			CC73GCH1H101J	CHIP C	100PF	J	
C438			CK73GB1E103K	CHIP C	0.010UF	K	
C439			CK73GB1H102K	CHIP C	1000PF	K	
C440			CK73GB1C104K	CHIP C	0.10UF	K	
C441			CK73FB0J106K	CHIP C	10UF	K	
C442			CK73GB1C104K	CHIP C	0.10UF	K	
C443			CK73GB1H103K	CHIP C	0.010UF	K	
C444			CC73GCH1H390J	CHIP C	39PF	J	
C445			CC73GCH1H150J	CHIP C	15PF	J	
C446			CK73GB1H103K	CHIP C	0.010UF	K	
C447			CK73HB1A333K	CHIP C	0.033UF	K	
C448			CC73GCH1H101J	CHIP C	100PF	J	
C450			CK73FB0J106K	CHIP C	10UF	K	
C451			CK73GB1H103K	CHIP C	0.010UF	K	
C452			CC73GCH1H101J	CHIP C	100PF	J	
C453			CK73GB1C104K	CHIP C	0.10UF	K	
C454			CK73GB1H103K	CHIP C	0.010UF	K	
C455			C92-0589-05	CHIP-TAN	47UF	6.3WV	
C457			CK73GB1H471K	CHIP C	470PF	K	
C459			C92-0628-05	CHIP-TAN	10UF	10WV	
C460-463			CK73GB1H103K	CHIP C	0.010UF	K	
C464			CK73HB1A333K	CHIP C	0.033UF	K	
C465			CC73GCH1H220J	CHIP C	22PF	J	
C467,468			CK73GB1H103K	CHIP C	0.010UF	K	
C469			CK73GB1C104K	CHIP C	0.10UF	K	
C470			CK73GB1H103K	CHIP C	0.010UF	K	
C472			CK73GB1C104K	CHIP C	0.10UF	K	
C475			CC73GCH1H101J	CHIP C	100PF	J	
C476			CK73GB1C104K	CHIP C	0.10UF	K	
C478			CC73HCH1H101J	CHIP C	100PF	J	
C479,480			CK73GB1H102K	CHIP C	1000PF	K	
C481			CK73HB1H102K	CHIP C	1000PF	K	
C482			CK73FB1A475K	CHIP C	4.7UF	K	
C483			CK73GB1H103K	CHIP C	0.010UF	K	
C484			CK73FB1A475K	CHIP C	4.7UF	K	
C485			CK73FB1H183K	CHIP C	0.018UF	K	
C487			CK73HB1H102K	CHIP C	1000PF	K	
C489			CK73GB1C104K	CHIP C	0.10UF	K	

K : TK-7180H(K) SK : TK-7182H(K)

PARTS LIST

TX-RX UNIT (X57-6980-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C490			CK73HB1H102K	CHIP C	1000PF	K	
C491,492			CK73GB1C104K	CHIP C	0.10UF	K	
C493			CK73FB1A475K	CHIP C	4.7UF	K	
C496			CK73GB1C104K	CHIP C	0.10UF	K	
C497			CK73GB1H102K	CHIP C	1000PF	K	
C498			CC73HCH1H101J	CHIP C	100PF	J	
C499			CK73GB1H821K	CHIP C	820PF	K	
C500			CC73HCH1H101J	CHIP C	100PF	J	
C501			CC73GCH1H220J	CHIP C	22PF	J	
C502			CK73HB1H102K	CHIP C	1000PF	K	
C503			CC73GCH1H680J	CHIP C	68PF	J	
C504			CK73HB1H102K	CHIP C	1000PF	K	
C505,506			CK73GB1A105K	CHIP C	1.0UF	K	
C507			CK73GB1C104K	CHIP C	0.10UF	K	
C511-513			CK73GB1C104K	CHIP C	0.10UF	K	
C514			CC73GCH1H820J	CHIP C	82PF	J	
C515,516			CK73HB1H102K	CHIP C	1000PF	K	
C517			CK73GB1H103K	CHIP C	0.010UF	K	
C518			CK73GB1C104K	CHIP C	0.10UF	K	
C519,520			CK73GB1H102K	CHIP C	1000PF	K	
C524			CK73GB1H102K	CHIP C	1000PF	K	
C525,526			CK73GB1C104K	CHIP C	0.10UF	K	
C528			CK73GB1H222K	CHIP C	2200PF	K	
C529			CC73GCH1H470J	CHIP C	47PF	J	
C530			CK73FB0J106K	CHIP C	10UF	K	
C531			CK73GB1H102K	CHIP C	1000PF	K	
C532			CK73GB1E123K	CHIP C	0.012UF	K	
C533			CK73GB1E153K	CHIP C	0.015UF	K	
C534			CK73GB1H102K	CHIP C	1000PF	K	
C535			CK73GB1C683K	CHIP C	0.068UF	K	
C536,537			CK73GB1C104K	CHIP C	0.10UF	K	
C538			CK73GB1H102K	CHIP C	1000PF	K	
C539,540			C92-0628-05	CHIP-TAN	10UF	10WV	
C541			CK73GB1C104K	CHIP C	0.10UF	K	
C542			CK73GB1H102K	CHIP C	1000PF	K	
C543,544			C92-0628-05	CHIP-TAN	10UF	10WV	
C545			CK73HB1H102K	CHIP C	1000PF	K	
C546			CK73GB1H103K	CHIP C	0.010UF	K	
C547-549			CK73HB1H102K	CHIP C	1000PF	K	
C550			CC73HCH1H101J	CHIP C	100PF	J	
C551-553			CK73HB1H102K	CHIP C	1000PF	K	
C554			CC73HCH1H101J	CHIP C	100PF	J	
C555-557			CK73HB1H102K	CHIP C	1000PF	K	
C558			CC73HCH1H101J	CHIP C	100PF	J	
C559			CK73HB1H102K	CHIP C	1000PF	K	
C560,561			CK73GB1C104K	CHIP C	0.10UF	K	
C562-565			C92-0519-05	CHIP-TAN	1.0UF	25WV	
C566			CK73FB1C105K	CHIP C	1.0UF	K	
C567			CC73HCH1H101J	CHIP C	100PF	J	
C568			CK73HB1H102K	CHIP C	1000PF	K	
C570			CK73FB1C105K	CHIP C	1.0UF	K	
C572,573			CK73GB1H102K	CHIP C	1000PF	K	
C574			C92-0672-05	ELECTRO	22UF	16WV	
C575			C92-0834-05	ELECTRO	47UF	25WV	
C576			C92-0836-05	ELECTRO	330UF	16WV	
C577			CK73GB1C104K	CHIP C	0.10UF	K	
C578			C92-0834-05	ELECTRO	47UF	25WV	
C579			CK73GB1H102K	CHIP C	1000PF	K	
C580			C92-0834-05	ELECTRO	47UF	25WV	
C581,582			CK73GB1H102K	CHIP C	1000PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C583			CK73GB1H471K	CHIP C	470PF	K	
C584			CC73GCH1H680J	CHIP C	68PF	J	
C585-587			CC73GCH1H101J	CHIP C	100PF	J	
C588			CK73GB1H102K	CHIP C	1000PF	K	
C591			CK73GB1C104K	CHIP C	0.10UF	K	
C592,593			CC73GCH1H070D	CHIP C	7.0PF	D	
C594			CK73HB1H102K	CHIP C	1000PF	K	
C595			CC73GCH1H101J	CHIP C	100PF	J	
C596			CK73GB1C104K	CHIP C	0.10UF	K	
C597,598			CK73GB1H103K	CHIP C	0.010UF	K	
C701			CK73GB1H102K	CHIP C	1000PF	K	
C702-704			CC73GCH1H101J	CHIP C	100PF	J	
C705-711			CK73GB1H102K	CHIP C	1000PF	K	
C712			CC73GCH1H101J	CHIP C	100PF	J	
C713			CK73GB1H102K	CHIP C	1000PF	K	
C714,715			CC73GCH1H101J	CHIP C	100PF	J	
C716,717			CK73GB1H102K	CHIP C	1000PF	K	
C718-720			CC73GCH1H101J	CHIP C	100PF	J	
C721			CK73GB1H102K	CHIP C	1000PF	K	
C722,723			CC73GCH1H101J	CHIP C	100PF	J	
C801			C92-0777-05	ELECTRO	1000UF	25WV	
C802			CK73GB1H102K	CHIP C	1000PF	K	
C803			CK73GB1E473J	CHIP C	0.047UF	J	
C804			CC73GCH1H471J	CHIP C	470PF	J	
C805			CK73GB1H102K	CHIP C	1000PF	K	
C806			CC73GCH1H101J	CHIP C	100PF	J	
C807			CK73GB1E473J	CHIP C	0.047UF	J	
C808			CK73GB1C104K	CHIP C	0.10UF	K	
C809			CC73GCH1H471J	CHIP C	470PF	J	
C810			CK73GB1E473J	CHIP C	0.047UF	J	
C811,812			CK73GB1C104K	CHIP C	0.10UF	K	
C813,814			CC73GCH1H471J	CHIP C	470PF	J	
C815			C92-0585-05	CHIP-TAN	4.7UF	16WV	
C816			C92-0628-05	CHIP-TAN	10UF	10WV	
C817			CC73GCH1H471J	CHIP C	470PF	J	
C818			CK73GB1H472K	CHIP C	4700PF	K	
C819,820			CK73GB1C104K	CHIP C	0.10UF	K	
C821			C92-0585-05	CHIP-TAN	4.7UF	16WV	
C822			CC73GCH1H471J	CHIP C	470PF	J	
C823			CK73HB1H102K	CHIP C	1000PF	K	
C824			CK73GB1H103K	CHIP C	0.010UF	K	
C829			CK73GB1H102K	CHIP C	1000PF	K	
C831,832			C92-0585-05	CHIP-TAN	4.7UF	16WV	
TC301,302			C05-0396-05	CERAMIC TRIMMER CAPACITOR (8PF)			
CN5			E23-1278-05	TERMINAL			
CN13			E23-1278-05	TERMINAL			
CN200-203			E23-1278-05	TERMINAL			
CN301,302			E40-6404-05	PIN ASSY			
CN326			E23-1278-05	TERMINAL			
CN328-330			E23-1278-05	TERMINAL			
CN403			E40-6361-05	PIN ASSY			
CN427			E40-6371-05	FLAT CABLE CONNECTOR			
CN428			E40-6373-05	PIN ASSY			
CN429			E40-6412-05	FLAT CABLE CONNECTOR			
CN701			E40-6371-05	FLAT CABLE CONNECTOR			
CN802,803			E23-1260-04	TERMINAL			
CN804			E40-3246-05	PIN ASSY			
CN815			E23-1278-05	TERMINAL			
J401			E11-0425-05	3.5D PHONE JACK (3P)			

K : TK-7180H(K) SK : TK-7182H(K)

PARTS LIST

TX-RX UNIT (X57-6980-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
J701			E58-0494-05	SUB SOCKET (D)	
F401			F53-0352-05	FUSE (2A)	
F801			F53-0278-05	FUSE (5A)	
CN401			J19-5386-05	HOLDER	K
CD171			L79-1701-05	TUNING COIL	
CF171			L72-0376-05	CERAMIC FILTER	
CF172			L72-0372-05	CERAMIC FILTER	
L1			L40-8275-92	SMALL FIXED INDUCTOR (82NH)	
L2			L92-0140-05	CHIP FERRITE	
L3			L40-6875-92	SMALL FIXED INDUCTOR (68NH)	
L4			L92-0140-05	CHIP FERRITE	
L5,6			L92-0179-05	CHIP FERRITE	
L7			L34-4638-05	AIR-CORE COIL	
L8			L34-4744-05	AIR-CORE COIL	
L9-12			L34-4742-05	AIR-CORE COIL	
L13			L34-4482-05	AIR-CORE COIL	
L14			L40-3375-92	SMALL FIXED INDUCTOR (33NH)	
L15			L92-0179-05	CHIP FERRITE	
L16			L40-3975-92	SMALL FIXED INDUCTOR (39NH)	
L103			L41-1085-14	SMALL FIXED INDUCTOR (100NH)	
L104			L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L105			L41-3978-14	SMALL FIXED INDUCTOR (39NH)	
L106			L41-2778-14	SMALL FIXED INDUCTOR (27NH)	
L108			L92-0140-05	CHIP FERRITE	
L109			L41-8275-14	SMALL FIXED INDUCTOR (82NH)	
L110-113			L34-4566-05	AIR-CORE COIL	
L114			L40-2275-92	SMALL FIXED INDUCTOR (22NH)	
L171			L41-2778-14	SMALL FIXED INDUCTOR (27NH)	
L172			L41-2278-14	SMALL FIXED INDUCTOR (22NH)	
L173,174			L39-1421-05	TOROIDAL COIL	
L175			L92-0140-05	CHIP FERRITE	
L176			L39-1421-05	TOROIDAL COIL	
L177			L41-2785-14	SMALL FIXED INDUCTOR (270NH)	
L178,179			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L180			L40-6875-92	SMALL FIXED INDUCTOR (68NH)	
L181			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L182			L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L183,184			L41-3988-14	SMALL FIXED INDUCTOR (390NH)	
L185			L40-6875-92	SMALL FIXED INDUCTOR (68NH)	
L186			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L187			L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L188			L40-8281-86	SMALL FIXED INDUCTOR (0.82UH)	
L189			L40-1091-86	SMALL FIXED INDUCTOR (1.0UH)	
L251			L33-1468-05	SMALL FIXED INDUCTOR	
L301			L40-5695-85	SMALL FIXED INDUCTOR (5.6UH)	
L302			L92-0140-05	CHIP FERRITE	
L303			L41-8268-14	SMALL FIXED INDUCTOR (8.2NH)	
L304			L41-6868-14	SMALL FIXED INDUCTOR (6.8NH)	
L305,306			L41-6878-14	SMALL FIXED INDUCTOR (68NH)	
L307			L41-6868-14	SMALL FIXED INDUCTOR (6.8NH)	
L308			L41-1078-14	SMALL FIXED INDUCTOR (10NH)	
L309			L40-3395-85	SMALL FIXED INDUCTOR (3.3UH)	
L310			L40-2795-85	SMALL FIXED INDUCTOR (2.7UH)	
L311			L40-3395-85	SMALL FIXED INDUCTOR (3.3UH)	
L312			L40-2795-85	SMALL FIXED INDUCTOR (2.7UH)	
L313			L34-4610-05	AIR-CORE COIL	
L314			L34-4612-05	AIR-CORE COIL	
L315			L40-2795-85	SMALL FIXED INDUCTOR (2.7UH)	

Ref. No.	Address	New parts	Parts No.	Description	Destination
L316			L40-3395-85	SMALL FIXED INDUCTOR (3.3UH)	
L317			L40-2795-85	SMALL FIXED INDUCTOR (2.7UH)	
L318,319			L40-8275-92	SMALL FIXED INDUCTOR (82NH)	
L320			L40-3975-92	SMALL FIXED INDUCTOR (39NH)	
L321			L92-0140-05	CHIP FERRITE	
L401,402			L92-0138-05	CHIP FERRITE	
L403-407			L92-0140-05	CHIP FERRITE	
L408			L92-0138-05	CHIP FERRITE	
L409			L92-0140-05	CHIP FERRITE	
L410,411			L92-0179-05	CHIP FERRITE	
L415			L92-0179-05	CHIP FERRITE	
L701,702			L92-0140-05	CHIP FERRITE	
X171			L77-1762-05	CRYSTAL RESONATOR (44.395MHZ)	
X301			L77-1952-05	TCXO (16.8MHZ)	
X401			L77-1802-05	CRYSTAL RESONATOR (32768HZ)	K
X403			L77-1965-05	CRYSTAL RESONATOR (3.6864MHZ)	
X404			L77-1950-05	CRYSTAL RESONATOR (11.0592MHZ)	
XF171			L71-0618-05	MCF (44.85M)	
CP401			R90-0740-05	MULTIPLE RESISTOR	K
CP402-417			RK75HA1J102J	CHIP-COM 1.0K J 1/16W	
R1			RK73GB2A271J	CHIP R 270 J 1/10W	
R2			RK73GB2A180J	CHIP R 18 J 1/10W	
R3			RK73GB2A271J	CHIP R 270 J 1/10W	
R4			RK73GB2A333J	CHIP R 33K J 1/10W	
R5			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R6			RK73GB2A181J	CHIP R 180 J 1/10W	
R7			RK73GB2A100J	CHIP R 10 J 1/10W	
R8			RK73GB2A471J	CHIP R 470 J 1/10W	
R9			RK73GB2A220J	CHIP R 22 J 1/10W	
R10			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R11			RK73GB2A561J	CHIP R 560 J 1/10W	
R12			RK73GB2A150J	CHIP R 15 J 1/10W	
R13			RK73GB2A331J	CHIP R 330 J 1/10W	
R14			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R15			RK73FB2B221J	CHIP R 220 J 1/8W	
R16,17			RK73FB2B470J	CHIP R 47 J 1/8W	
R18			RK73FB2B221J	CHIP R 220 J 1/8W	
R19			RK73GB2A151J	CHIP R 150 J 1/10W	
R21			RK73GB2A221J	CHIP R 220 J 1/10W	
R22			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R23			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R25			R92-1214-05	CHIP R 120 J 1/2W	
R27			RK73GB2A124J	CHIP R 120K J 1/10W	
R28			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R29			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R30			R92-1061-05	JUMPER REST 0 OHM	
R31			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R33			RK73GB2A124J	CHIP R 120K J 1/10W	
R38			RK73GB2A000JX	CHIP R 0.0 J 1/10W	
R71			RK73GB2A563J	CHIP R 56K J 1/10W	
R72			RK73GB2A333J	CHIP R 33K J 1/10W	
R75			RK73GB2A393J	CHIP R 39K J 1/10W	
R76-79			RK73GB2A104J	CHIP R 100K J 1/10W	
R81,82			RK73GB2A104J	CHIP R 100K J 1/10W	
R84			RK73GB2A124J	CHIP R 120K J 1/10W	
R85			RK73GB2A104J	CHIP R 100K J 1/10W	
R86			RK73GB2A394J	CHIP R 390K J 1/10W	
R87,88			RK73GB2A104J	CHIP R 100K J 1/10W	
R89			RK73GB2A473J	CHIP R 47K J 1/10W	

K : TK-7180H(K) SK : TK-7182H(K)

PARTS LIST

TX-RX UNIT (X57-6980-XX)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R90			RK73GB2A394J	CHIP R	390K	J	1/10W	
R109			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R111			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R115			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R116			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R117			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R119			RK73GB2A151J	CHIP R	150	J	1/10W	
R120			RK73GB2A120J	CHIP R	12	J	1/10W	
R121-124			RK73GB2A104J	CHIP R	100K	J	1/10W	
R125			RK73GB2A181J	CHIP R	180	J	1/10W	
R126			RK73GB2A330J	CHIP R	33	J	1/10W	
R127			RK73GB2A181J	CHIP R	180	J	1/10W	
R129			RK73GB2A104J	CHIP R	100K	J	1/10W	
R130,131			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R132			RK73GB2A104J	CHIP R	100K	J	1/10W	
R171			RK73GB2A821J	CHIP R	820	J	1/10W	
R172			RK73GB2A5R6J	CHIP R	5.6	J	1/10W	
R173			RK73GB2A821J	CHIP R	820	J	1/10W	
R174			RK73GB2A680J	CHIP R	68	J	1/10W	
R175			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R176			RK73GB2A470J	CHIP R	47	J	1/10W	
R177			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R178			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R179			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R180			RK73GB2A821J	CHIP R	820	J	1/10W	
R181			RK73GB2A331J	CHIP R	330	J	1/10W	
R182			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R183			RK73GB2A680J	CHIP R	68	J	1/10W	
R184			RK73GB2A100J	CHIP R	10	J	1/10W	
R185			RK73GB2A821J	CHIP R	820	J	1/10W	
R186			RK73GB2A331J	CHIP R	330	J	1/10W	
R187			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R188			RK73GB2A680J	CHIP R	68	J	1/10W	
R189			RK73GB2A100J	CHIP R	10	J	1/10W	
R190			RK73GB2A153J	CHIP R	15K	J	1/10W	
R191,192			RK73GB2A223J	CHIP R	22K	J	1/10W	
R193			RK73GB2A473J	CHIP R	47K	J	1/10W	
R194,195			RK73GB2A223J	CHIP R	22K	J	1/10W	
R196			RK73GB2A153J	CHIP R	15K	J	1/10W	
R197,198			RK73GB2A334J	CHIP R	330K	J	1/10W	
R199			RK73GB2A560J	CHIP R	56	J	1/10W	
R200			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R202			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R203			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R204			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R205			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R206			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R207			RK73GB2A473J	CHIP R	47K	J	1/10W	
R208			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R209			RK73GB2A100J	CHIP R	10	J	1/10W	
R210			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R212			RK73GB2A104J	CHIP R	100K	J	1/10W	
R217			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R221			RK73GB2A473J	CHIP R	47K	J	1/10W	
R222			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R251			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R252			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R253			RK73GB2A103J	CHIP R	10K	J	1/10W	
R254,255			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R256			RK73GB2A124J	CHIP R	120K	J	1/10W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R257			RK73GB2A153J	CHIP R	15K	J	1/10W	
R258			RK73GB2A220J	CHIP R	22	J	1/10W	
R300			RK73GB2A103J	CHIP R	10K	J	1/10W	
R301,302			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R303			RK73GB2A561J	CHIP R	560	J	1/10W	
R304			RK73GB2A470J	CHIP R	47	J	1/10W	
R305			RK73GB2A560J	CHIP R	56	J	1/10W	
R306			RK73GB2A104J	CHIP R	100K	J	1/10W	
R307			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R308			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R309			RK73GB2A181J	CHIP R	180	J	1/10W	
R310			RK73GB2A331J	CHIP R	330	J	1/10W	
R311,312			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R313			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R314,315			RK73GB2A223J	CHIP R	22K	J	1/10W	
R316			RK73GB2A474J	CHIP R	470K	J	1/10W	
R317			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R318			R92-2157-05	METAL-R	1.2K	J	1/4W	
R319			RK73GB2A220J	CHIP R	22	J	1/10W	
R320			RK73GB2A101J	CHIP R	100	J	1/10W	
R321			RK73GB2A103J	CHIP R	10K	J	1/10W	
R322			RK73GB2A473J	CHIP R	47K	J	1/10W	
R323			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R324			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R325			RK73GB2A154J	CHIP R	150K	J	1/10W	
R326			RK73GB2A152J	CHIP R	1.5K	J	1/10W	
R327			RK73GB2A101J	CHIP R	100	J	1/10W	
R328			RK73GB2A223J	CHIP R	22K	J	1/10W	
R329			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R330			RK73GB2A101J	CHIP R	100	J	1/10W	
R331			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R332			RK73GB2A101J	CHIP R	100	J	1/10W	
R333,334			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R335			RK73GB2A220J	CHIP R	22	J	1/10W	
R336			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R337,338			RK73GB2A103J	CHIP R	10K	J	1/10W	
R339			RK73GB2A104J	CHIP R	100K	J	1/10W	
R340			RK73GB2A101J	CHIP R	100	J	1/10W	
R341			RK73GB2A331J	CHIP R	330	J	1/10W	
R342			RK73GB2A181J	CHIP R	180	J	1/10W	
R343			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R344-346			RK73GB2A101J	CHIP R	100	J	1/10W	
R347			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R348			RK73GB2A103J	CHIP R	10K	J	1/10W	
R349			RK73GB2A273J	CHIP R	27K	J	1/10W	
R350			RK73GB2A223J	CHIP R	22K	J	1/10W	
R351			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R352			RK73GB2A330J	CHIP R	33	J	1/10W	
R353			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R354			RK73GB2A331J	CHIP R	330	J	1/10W	
R355			RK73GB2A271J	CHIP R	270	J	1/10W	
R356,357			RK73GB2A103J	CHIP R	10K	J	1/10W	
R358			RK73GB2A822J	CHIP R	8.2K	J	1/10W	
R359			RK73GB2A151J	CHIP R	150	J	1/10W	
R360,361			RK73GB2A331J	CHIP R	330	J	1/10W	
R362			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R365,366			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R367			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R368			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R369			RK73GB2A223J	CHIP R	22K	J	1/10W	

K : TK-7180H(K) SK : TK-7182H(K)

PARTS LIST

TX-RX UNIT (X57-6980-XX)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R370			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R375			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R376			RK73GB2A473J	CHIP R	47K	J	1/10W	
R377			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R379,380			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R401			RK73HH1J362D	CHIP R	3.6K	D	1/16W	K
R402			RK73HH1J512D	CHIP R	5.1K	D	1/16W	K
R403			RK73GB2A101J	CHIP R	100	J	1/10W	
R405,406			RK73HB1J474J	CHIP R	470K	J	1/16W	
R407			RK73HB1J103J	CHIP R	10K	J	1/16W	
R408,409			RK73HB1J471J	CHIP R	470	J	1/16W	
R410			RK73HB1J103J	CHIP R	10K	J	1/16W	
R411,412			RK73HB1J474J	CHIP R	470K	J	1/16W	
R414			RK73HB1J103J	CHIP R	10K	J	1/16W	
R418,419			RK73HB1J473J	CHIP R	47K	J	1/16W	
R420			RK73HB1J334J	CHIP R	330K	J	1/16W	
R421,422			RK73HB1J473J	CHIP R	47K	J	1/16W	
R423			RK73HB1J000JX	CHIP R	0.0	J	1/16W	
R424-427			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R428			RK73HB1J000JX	CHIP R	0.0	J	1/16W	
R429,430			RK73HB1J471J	CHIP R	470	J	1/16W	
R431			RK73HB1J000JX	CHIP R	0.0	J	1/16W	
R432			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R433			RK73HB1J471J	CHIP R	470	J	1/16W	SK
R434			RK73HB1J473J	CHIP R	47K	J	1/16W	K
R435			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R437			RK73HB1J000JX	CHIP R	0.0	J	1/16W	
R439			RK73HB1J000JX	CHIP R	0.0	J	1/16W	
R440-444			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R445,446			RK73GB2A103J	CHIP R	10K	J	1/10W	
R447			RK73HB1J474J	CHIP R	470K	J	1/16W	
R448			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R449			RK73HB1J474J	CHIP R	470K	J	1/16W	
R450			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R451			RK73HB1J474J	CHIP R	470K	J	1/16W	
R452			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R453			RK73HB1J474J	CHIP R	470K	J	1/16W	
R454			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R455,456			RK73HB1J471J	CHIP R	470	J	1/16W	
R457			RK73HB1J473J	CHIP R	47K	J	1/16W	
R458,459			RK73HB1J474J	CHIP R	470K	J	1/16W	
R460			RK73HB1J102J	CHIP R	1.0K	J	1/16W	SK
R461			RK73HB1J474J	CHIP R	470K	J	1/16W	K
R461,462			RK73HB1J474J	CHIP R	470K	J	1/16W	SK
R463,464			RK73HB1J102J	CHIP R	1.0K	J	1/16W	SK
R465			RK73GB2A473J	CHIP R	47K	J	1/10W	
R466,467			RK73HB1J000JX	CHIP R	0.0	J	1/16W	
R468			RK73HB1J473J	CHIP R	47K	J	1/16W	
R469			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R470			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R471,472			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R473			RK73HB1J473J	CHIP R	47K	J	1/16W	
R474-476			RK73HB1J474J	CHIP R	470K	J	1/16W	
R477,478			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R479-481			RK73HB1J474J	CHIP R	470K	J	1/16W	SK
R481			RK73HB1J474J	CHIP R	470K	J	1/16W	K
R482			RK73HB1J473J	CHIP R	47K	J	1/16W	
R483-486			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R487			RK73GB2A185J	CHIP R	1.8M	J	1/10W	
R488,489			RK73GB2A000JX	CHIP R	0.0	J	1/10W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R490			RK73GB2A184J	CHIP R	180K	J	1/10W	
R491			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R492			RK73GB2A684J	CHIP R	680K	J	1/10W	
R493			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R494,495			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R496			RK73GB2A104J	CHIP R	100K	J	1/10W	
R497			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R498			RK73GB2A274J	CHIP R	270K	J	1/10W	
R499			RK73GB2A104J	CHIP R	100K	J	1/10W	
R500			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R501			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R502			RK73GB2A103J	CHIP R	10K	J	1/10W	
R503			RK73GB2A104J	CHIP R	100K	J	1/10W	
R504			RK73GB2A103J	CHIP R	10K	J	1/10W	
R505			RK73GB2A683J	CHIP R	68K	J	1/10W	
R506			RK73GB2A224J	CHIP R	220K	J	1/10W	
R507			RK73GB2A154J	CHIP R	150K	J	1/10W	
R508			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R509			RK73GB2A333J	CHIP R	33K	J	1/10W	
R511			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R512			RK73GB2A153J	CHIP R	15K	J	1/10W	
R513			RK73GB2A564J	CHIP R	560K	J	1/10W	
R514			RK73GB2A183J	CHIP R	18K	J	1/10W	
R515			RK73GB2A104J	CHIP R	100K	J	1/10W	
R517			RK73GB2A563J	CHIP R	56K	J	1/10W	
R519			RK73GB2A104J	CHIP R	100K	J	1/10W	
R520			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R521			RK73GB2A473J	CHIP R	47K	J	1/10W	
R522			RK73GB2A104J	CHIP R	100K	J	1/10W	
R523			RK73GB2A154J	CHIP R	150K	J	1/10W	
R524			RK73GB2A103J	CHIP R	10K	J	1/10W	
R525			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R526			RK73GB2A274J	CHIP R	270K	J	1/10W	
R527			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R528			RK73GB2A183J	CHIP R	18K	J	1/10W	
R529			RK73GB2A684J	CHIP R	680K	J	1/10W	
R530			RK73GB2A563J	CHIP R	56K	J	1/10W	
R531			RK73GB2A103J	CHIP R	10K	J	1/10W	
R532			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R533			RK73GB2A104J	CHIP R	100K	J	1/10W	
R534			RK73GB2A103J	CHIP R	10K	J	1/10W	
R535			RK73GB2A394J	CHIP R	390K	J	1/10W	
R536			RK73GB2A153J	CHIP R	15K	J	1/10W	
R537,538			RK73GB2A104J	CHIP R	100K	J	1/10W	
R539			RK73GB2A393J	CHIP R	39K	J	1/10W	
R540			RK73GB2A473J	CHIP R	47K	J	1/10W	
R541			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R542			RK73GB2A154J	CHIP R	150K	J	1/10W	
R544			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R545			RK73GB2A103J	CHIP R	10K	J	1/10W	
R548			RK73GB2A823J	CHIP R	82K	J	1/10W	
R550			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R552			RK73GB2A103J	CHIP R	10K	J	1/10W	
R553			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R554			RK73GB2A563J	CHIP R	56K	J	1/10W	
R555			RK73GB2A123J	CHIP R	12K	J	1/10W	
R556			RK73GB2A563J	CHIP R	56K	J	1/10W	
R557			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R558			RK73GB2A224J	CHIP R	220K	J	1/10W	
R559			RK73GB2A000JX	CHIP R	0.0	J	1/10W	

K : TK-7180H(K) SK : TK-7182H(K)

PARTS LIST

TX-RX UNIT (X57-6980-XX)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R565			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R566			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R567			RK73GB2A394J	CHIP R	390K	J	1/10W	
R568			RK73GB2A124J	CHIP R	120K	J	1/10W	
R569			RK73GB2A104J	CHIP R	100K	J	1/10W	
R570			RK73GB2A154J	CHIP R	150K	J	1/10W	
R571			RK73GB2A124J	CHIP R	120K	J	1/10W	
R572			RK73HB1J000JX	CHIP R	0.0	J	1/16W	
R573			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R574,575			RK73HB1J000JX	CHIP R	0.0	J	1/16W	
R576			RK73GB2A224J	CHIP R	220K	J	1/10W	
R577,578			RK73HB1J000JX	CHIP R	0.0	J	1/16W	K
R578			RK73HB1J000JX	CHIP R	0.0	J	1/16W	SK
R579			RK73GB2A223J	CHIP R	22K	J	1/10W	
R580,581			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R582			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R583,584			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R585			RK73GB2A184J	CHIP R	180K	J	1/10W	
R586			RK73GB2A471J	CHIP R	470	J	1/10W	
R587			RK73GB2A154J	CHIP R	150K	J	1/10W	
R588			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R589,590			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R591			RK73HB1J000JX	CHIP R	0.0	J	1/16W	
R592			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R594			RK73GB2A681J	CHIP R	680	J	1/10W	
R595			RK73GB2A274J	CHIP R	270K	J	1/10W	
R596			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R597			RK73GB2A224J	CHIP R	220K	J	1/10W	
R598			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R599			RK73GB2A184J	CHIP R	180K	J	1/10W	
R600			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R601			RK73GB2A474J	CHIP R	470K	J	1/10W	
R602			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R603,604			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R606			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R607			RK73GB2A274J	CHIP R	270K	J	1/10W	
R608			RK73GB2A184J	CHIP R	180K	J	1/10W	
R609			RK73GB2A223J	CHIP R	22K	J	1/10W	
R610			RK73GB2A154J	CHIP R	150K	J	1/10W	
R611			RK73GB2A103J	CHIP R	10K	J	1/10W	
R612,613			RK73GB2A104J	CHIP R	100K	J	1/10W	
R614			RK73HB1J000JX	CHIP R	0.0	J	1/16W	
R615,616			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R617			RK73GB2A104J	CHIP R	100K	J	1/10W	
R618			RK73GB2A224J	CHIP R	220K	J	1/10W	
R619			RK73GB2A104J	CHIP R	100K	J	1/10W	
R620			RK73GB2A224J	CHIP R	220K	J	1/10W	
R621,622			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R623,624			RK73GB2A473J	CHIP R	47K	J	1/10W	
R625			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R629,630			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R632			RK73GB2A473J	CHIP R	47K	J	1/10W	
R633			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R636			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R641,642			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R643			RK73GB2A471J	CHIP R	470	J	1/10W	
R644			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R645			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R648			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R651			RK73GB2A000JX	CHIP R	0.0	J	1/10W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R652			RK73GB2A820J	CHIP R	82	J	1/10W	
R653			RK73GB2A2R2J	CHIP R	2.2	J	1/10W	
R654			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R655			RK73GB2A000JX	CHIP R	0.0	J	1/10W	
R657			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R658			RK73HB1J000JX	CHIP R	0.0	J	1/16W	SK
R658-662			RK73HB1J000JX	CHIP R	0.0	J	1/16W	K
R664			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R665			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R666			RK73GB2A104J	CHIP R	100K	J	1/10W	
R667			RK73GB2A333J	CHIP R	33K	J	1/10W	
R669-671			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R672			RK73GB2A334J	CHIP R	330K	J	1/10W	
R673			RK73GB2A183J	CHIP R	18K	J	1/10W	
R701-705			RK73GB2A473J	CHIP R	47K	J	1/10W	
R706-710			RK73GB2A471J	CHIP R	470	J	1/10W	
R711-713			RK73GB2A473J	CHIP R	47K	J	1/10W	
R714-720			RK73GB2A471J	CHIP R	470	J	1/10W	
R801			RK73GB2A224J	CHIP R	220K	J	1/10W	
R802			RK73GB2A334J	CHIP R	330K	J	1/10W	
R803			RK73GB2A103J	CHIP R	10K	J	1/10W	
R805			RK73GB2A471J	CHIP R	470	J	1/10W	
R806,807			RK73GB2A103J	CHIP R	10K	J	1/10W	
R808,809			RK73GB2A473J	CHIP R	47K	J	1/10W	
R811,812			RK73GB2A103J	CHIP R	10K	J	1/10W	
R813			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R814			RK73GB2A473J	CHIP R	47K	J	1/10W	
R815			RK73GB2A683J	CHIP R	68K	J	1/10W	
R816			RK73HB1J473J	CHIP R	47K	J	1/16W	
R819			RK73GB2A683J	CHIP R	68K	J	1/10W	
R820			RK73GB2A473J	CHIP R	47K	J	1/10W	
R821			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R822			RK73GB2A104J	CHIP R	100K	J	1/10W	
R823			RK73GB2A473J	CHIP R	47K	J	1/10W	
R824			RK73GB2A103J	CHIP R	10K	J	1/10W	
R825			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
D1			02DZ5.6(X,Y)	ZENER DIODE				
D2			XB15A709	DIODE				
D3,4			XB15A407A2GB	DIODE				
D6-8			HSM88AS	DIODE				
D11			1SV283	VARIABLE CAPACITANCE DIODE				
D103-106			1SV283	VARIABLE CAPACITANCE DIODE				
D171,172			DAN235E	DIODE				
D173			RB706F-40	DIODE				
D174			MA2S111	DIODE				
D251			1SS388	DIODE				
D301,302			MA2S077	DIODE				
D304,305			MA2S077	DIODE				
D306-313			BB664	VARIABLE CAPACITANCE DIODE				
D314			1SV278	VARIABLE CAPACITANCE DIODE				
D315,316			HVC131	DIODE				
D402-404			1SS388	DIODE				K
D405			EMZ6.8N	ZENER DIODE				
D406			02DZ5.1(Y)	ZENER DIODE				
D407			RB706F-40	DIODE				
D408,409			MA742	DIODE				
D412-414			DA204U	DIODE				
D416			DAN202U	DIODE				
D417-423			1SS388	DIODE				

K : TK-7180H(K) SK : TK-7182H(K)

PARTS LIST

TX-RX UNIT (X57-6980-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
D701			02DZ18(X,Y)	ZENER DIODE	
D702,703			1SS355	DIODE	
D704-708			DA204U	DIODE	
D709,710			02DZ18(X,Y)	ZENER DIODE	
D711-713			DA204U	DIODE	
D714			02DZ18(X,Y)	ZENER DIODE	
D801			22ZR-10D	SURGE ABSORBER	
D802			DSA3A1	DIODE	
D804			02DZ18(X,Y)	ZENER DIODE	
D805			02CZ9.1(X,Y)	ZENER DIODE	
IC1	2A,2C		RA60H1317M1-23	MOS-IC	
IC71,72			TA75W01FU	MOS-IC	
IC171			SPM5001	MOS-IC	
IC172			TA31136FN	MOS-IC	
IC251			MAX5026EUT+T	MOS-IC	
IC301			ADF4111BCP7	MOS-IC	
IC302			TC7S66FU	MOS-IC	
IC401			AT24256N10SU27	ROM IC	
IC402			RV5C386A	MOS-IC	K
IC403			BU4094BCFV	MOS-IC	
IC404			30625MGP169GU	MICROPROCESSOR IC	K
IC404			30625MGP238GU	MICROPROCESSOR IC	SK
IC405			AT29C040A-90TU	ROM IC	
IC406-409			TC75W51FU	MOS-IC	
IC410			M62364FP-F	MOS-IC	
IC411			LMC7101BIM5	MOS-IC	
IC412			TC75W51FU	MOS-IC	
IC413			TC7MZ4053FK	MOS-IC	
IC414			TC75W51FU	MOS-IC	
IC415			AQUA-L	MOS-IC	
IC416			ADM202EARN	MOS-IC	
IC417	2A,2C		TA7252AP	ANALOGUE IC	
IC801			S-80942CNNBG9C	MOS-IC	
IC802			XC61CN5002NR	MOS-IC	
IC803			TA7808F	ANALOGUE IC	
IC804			TA7805F	MOS-IC	
IC805			NJM78L05UA	BI-POLAR IC	
IC807			XC6201P502PR	MOS-IC	
Q1			2SC5108(Y)	TRANSISTOR	
Q2			2SC5192	TRANSISTOR	
Q3			DTC114EE	DIGITAL TRANSISTOR	
Q72			2SK1824	FET	
Q73			DTC114EE	DIGITAL TRANSISTOR	
Q103			2SC3357	TRANSISTOR	
Q171,172			2SC5108(Y)	TRANSISTOR	
Q173			DTA114EE	DIGITAL TRANSISTOR	
Q174			DTC144EE	DIGITAL TRANSISTOR	
Q175			2SC4617(Q)	TRANSISTOR	
Q176			2SK1824	FET	
Q177			DTC144EE	DIGITAL TRANSISTOR	
Q178			DTA144EE	DIGITAL TRANSISTOR	
Q180			DTC144EE	DIGITAL TRANSISTOR	
Q251			2SC4617(S)	TRANSISTOR	
Q301			2SC5108(Y)	TRANSISTOR	
Q302-304			2SC4116(BL)	TRANSISTOR	
Q305			DTC144EE	DIGITAL TRANSISTOR	
Q306,307			2SK508NV(K52)	FET	
Q308,309			2SC4116(GR)	TRANSISTOR	
Q310			DTC114EE	DIGITAL TRANSISTOR	
Q311			2SC5108(Y)	TRANSISTOR	

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q312			2SC4617(S)	TRANSISTOR	
Q313			2SC5108(Y)	TRANSISTOR	
Q314			DTA144EE	DIGITAL TRANSISTOR	
Q402			DTC114YE	DIGITAL TRANSISTOR	
Q405			DTA114EE	DIGITAL TRANSISTOR	
Q406			HN1J02FU	FET	
Q409			DTC363EU	DIGITAL TRANSISTOR	
Q410			2SC4116(Y)	TRANSISTOR	
Q411			2SA1586(Y,GR)	TRANSISTOR	
Q412			2SK1824	FET	
Q413,414			2SJ243	FET	
Q415			HN1L02FU	FET	
Q416,417			2SJ243	FET	
Q418			DTC114EE	DIGITAL TRANSISTOR	
Q419			DTC363EU	DIGITAL TRANSISTOR	
Q421			DTA144EE	DIGITAL TRANSISTOR	
Q701,702			2SD2114K(W)	TRANSISTOR	
Q801			2SC2873(Y)	TRANSISTOR	
Q802			DTC114EE	DIGITAL TRANSISTOR	
Q803-805			12A02CH	TRANSISTOR	
Q806-809			DTC114EE	DIGITAL TRANSISTOR	
Q810			2SJ645	FET	
Q811			DTC114EE	DIGITAL TRANSISTOR	
Q812			DTC114TE	DIGITAL TRANSISTOR	
TH3			S1R104J475H	THERMISTOR	
TH171			S1R473J475H	THERMISTOR	

K : TK-7180H(K) SK : TK-7182H(K)