# EXPLODED VIEW

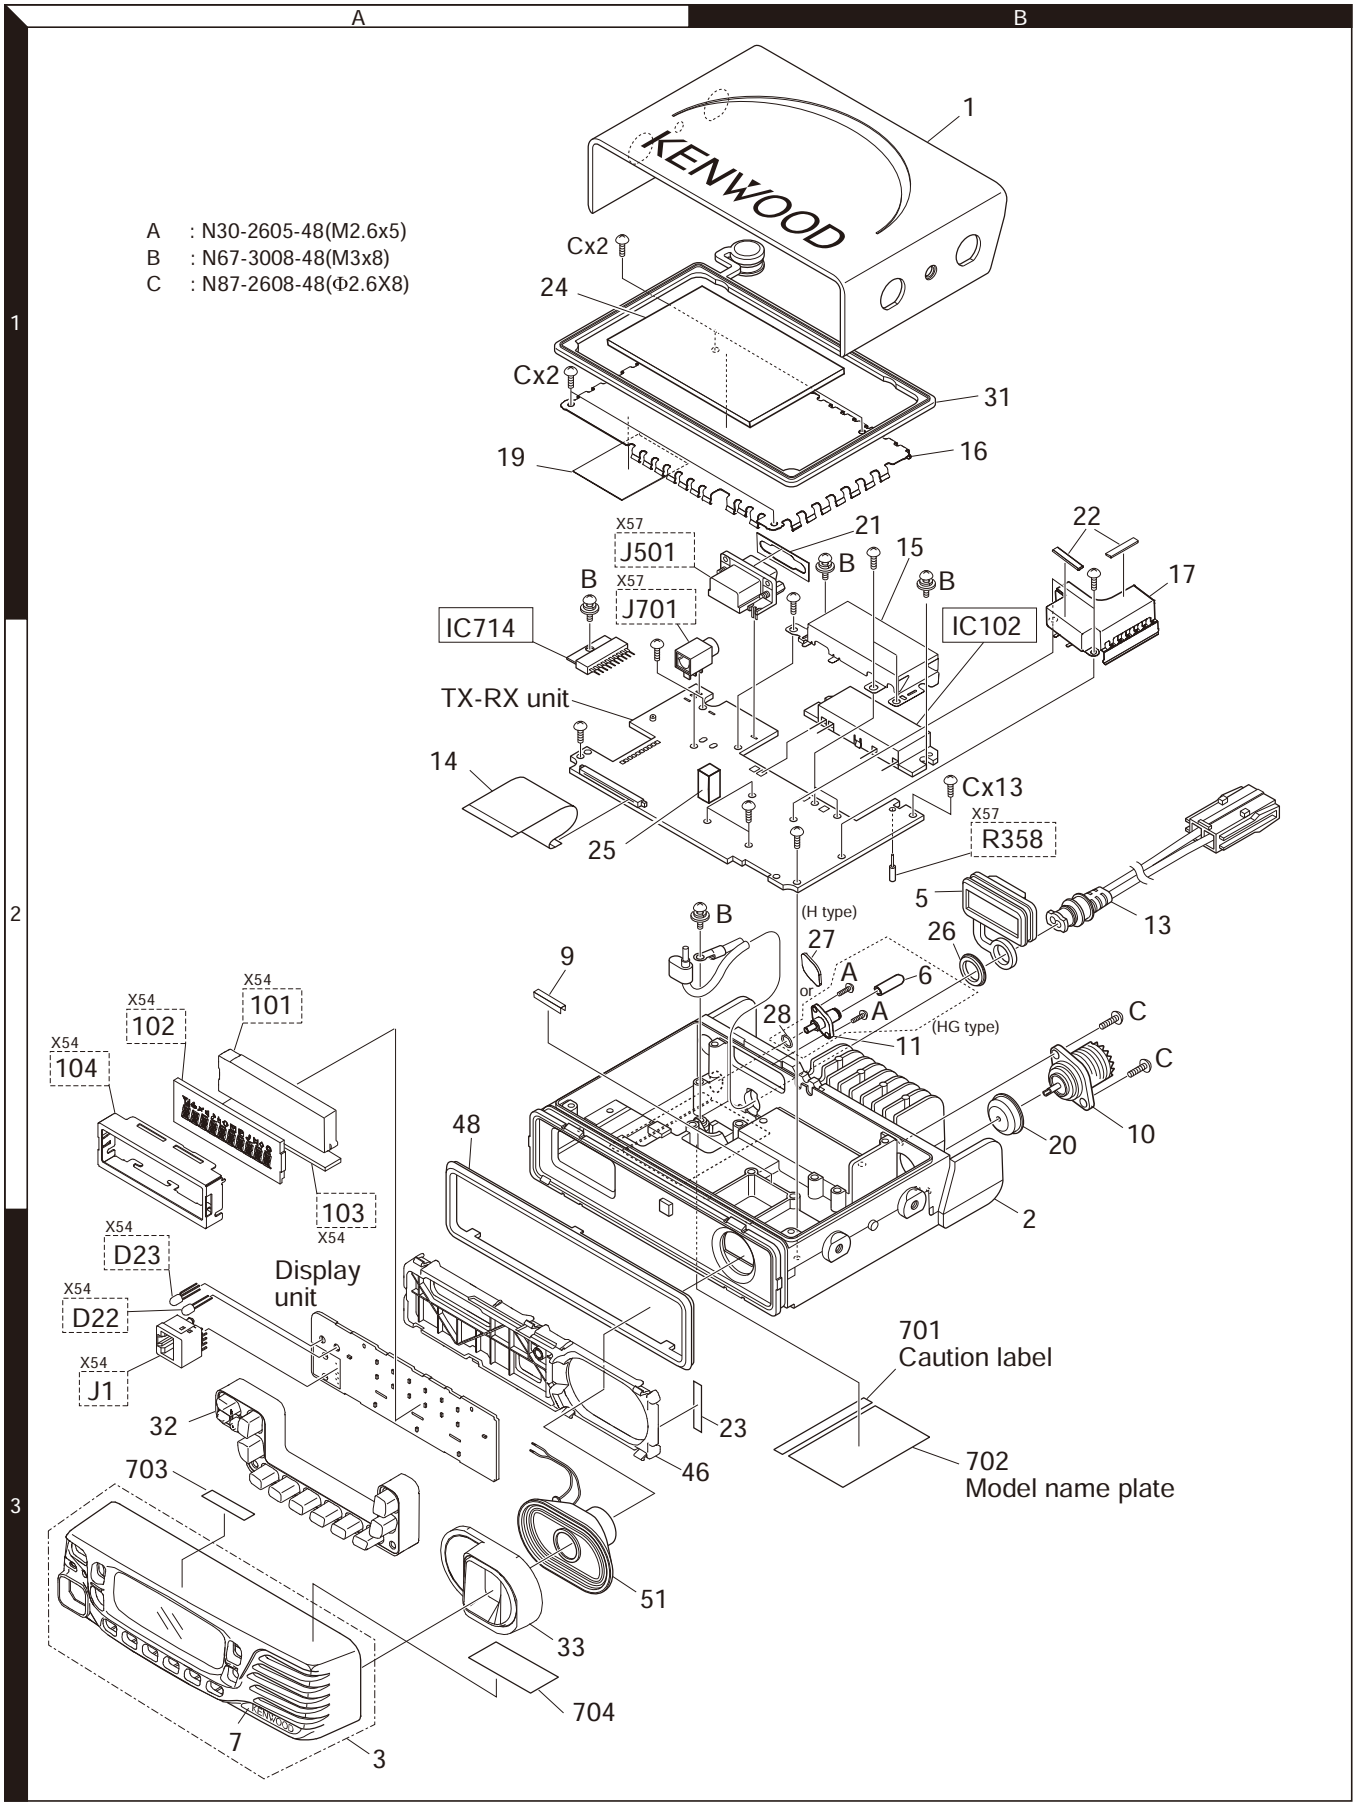


**Parts with the exploded numbers larger than 700 are not supplied.**
**If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB.**
**These parts must be ordered separately.**

# PACKING

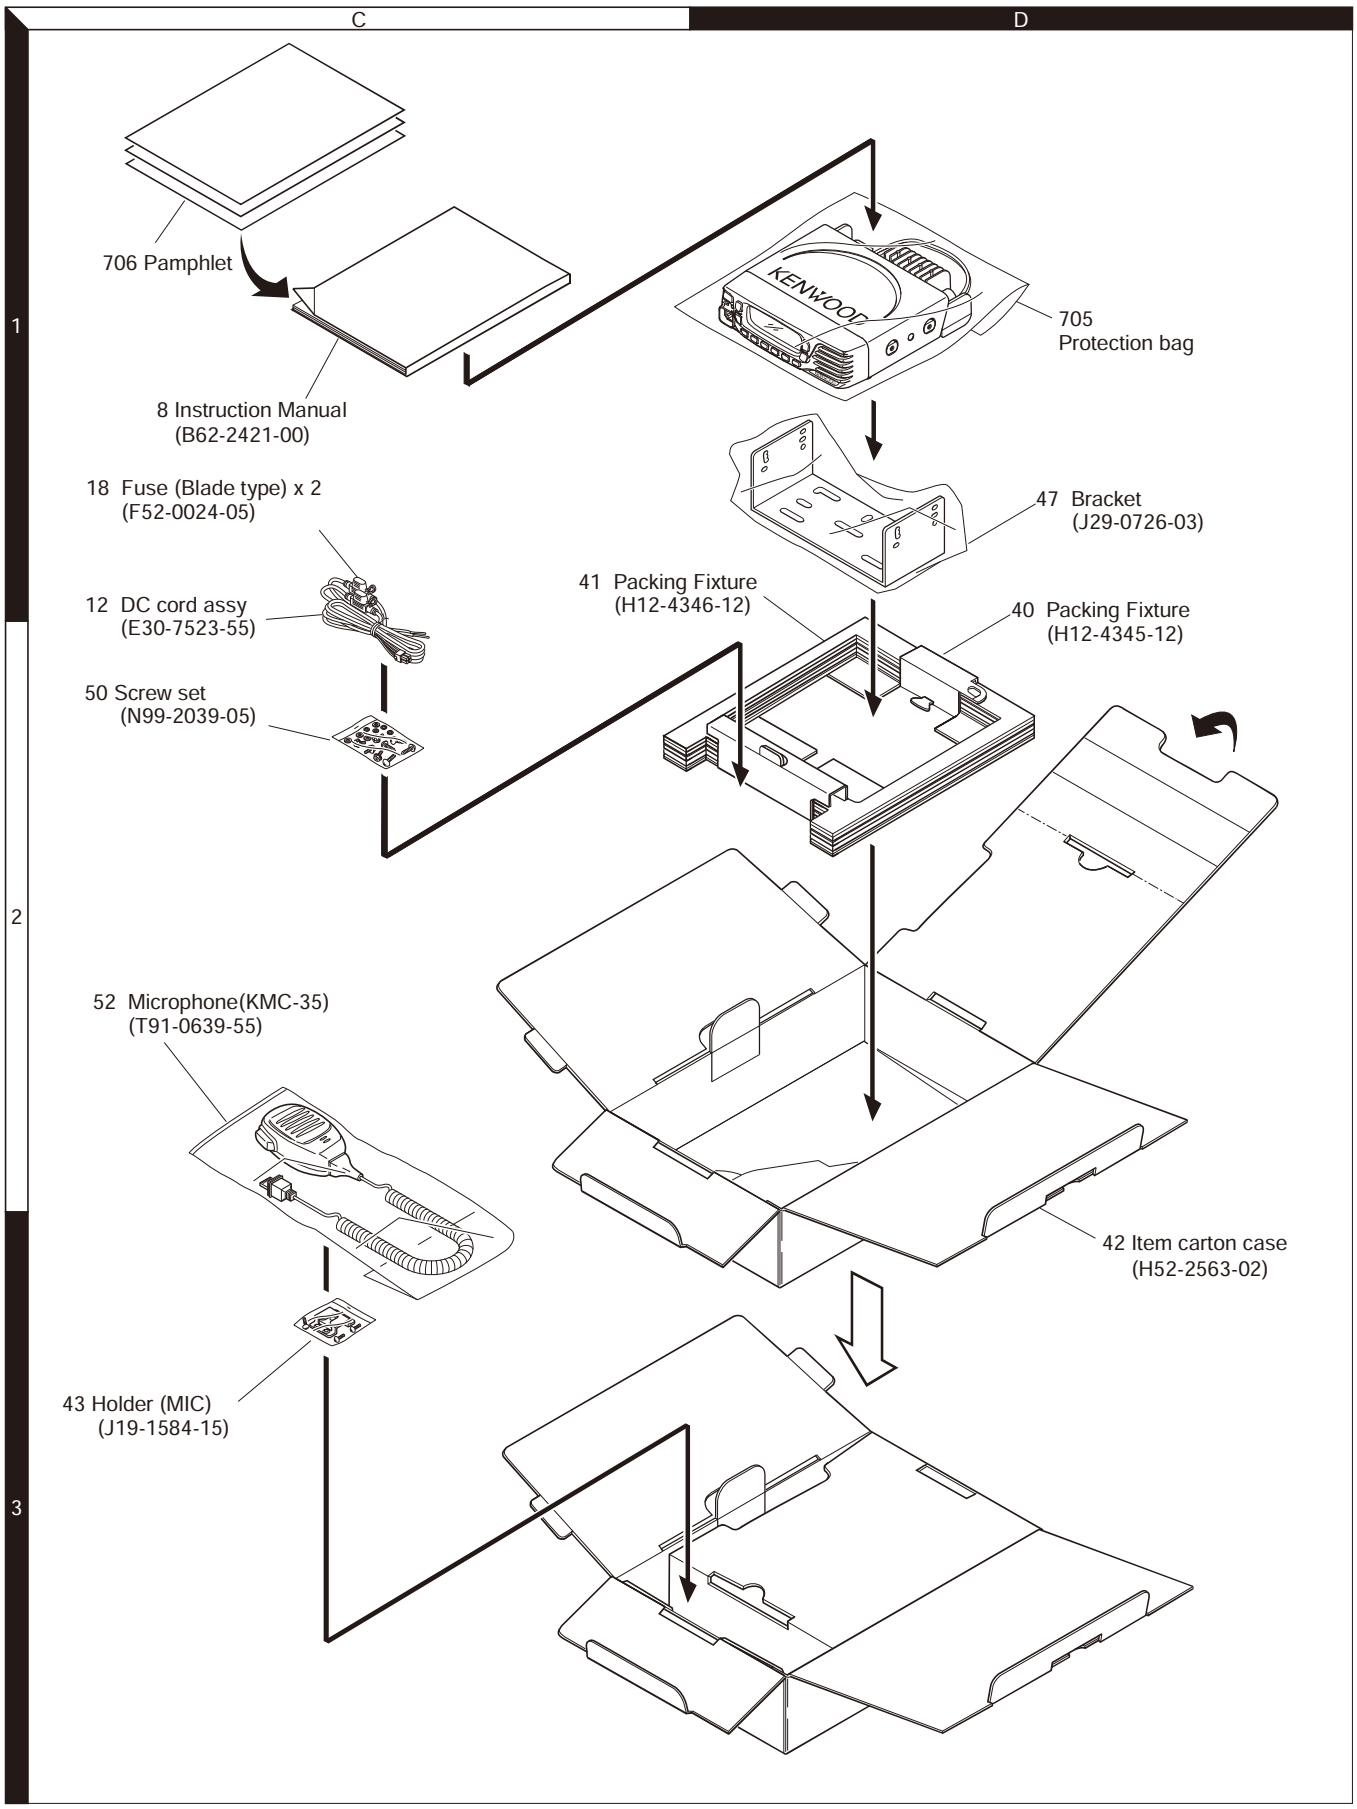


**Parts with the exploded numbers larger than 700 are not supplied.**

# PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

**L** : Scandinavia **K** : USA **P** : Canada
**Y** : PX (Far East, Hawaii) **T** : England **E** : Europe
**C** : China **X** : Australia **M** : Other Areas

**NX-820H(G) / 820H**
**DISPLAY UNIT (X54-3830-10)**

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| **NX-820H(G)/820H** | | | | | |
| 1 | 1B | | A02-4073-21 | PLASTIC CABINET | |
| 2 | 2B | ✻ | A10-4161-01 | CHASSIS | |
| 3 | 3A | ✻ | A62-1200-03 | PANEL ASSY | |
| 5 | 2B | | B09-0732-03 | CAP(D-SUB) | |
| 6 | 2B | | B09-0754-05 | CAP(SMA) | HGK,HGK2 |
| 7 | 3A | | B43-1675-04 | BADGE | |
| 8 | 1C | ✻ | B62-2421-00 | INSTRUCTION MANUAL(E/S/F) | |
| 9 | 3B | ✻ | E29-1244-14 | RELAY HARDWARE | |
| 10 | 2B | | E04-0167-15 | RF COAXIAL RECEPTACLE(M) | |
| 11 | 2B | | E04-0492-05 | RF COAXIAL RECEPTACLE(SMA) | HGK,HGK2 |
| 12 | 1C | | E30-7523-55 | DC CORD ASSY ACCESSORY | |
| 13 | 1C | | E30-7684-15 | DC CORD | |
| 14 | 2A | | E37-1461-05 | FLAT CABLE(30P) | |
| 15 | 2B | ✻ | F10-3183-03 | SHIELDING CASE(POWER MODULE) | |
| 16 | 1B | ✻ | F10-3184-03 | SHIELDING COVER(TOP) | |
| 17 | 1B | ✻ | F10-3203-02 | SHIELDING CASE(LPF) | |
| 18 | 1C | | F52-0024-05 | FUSE(15A/BLADE) ACCESSORY | |
| 19 | 1A | | G11-4353-04 | SHEET(SHIELDING/BOTTOM) | |
| 20 | 2B | | G11-4578-04 | SHEET(FOR W/O SMA) | HK,HK2 |
| 21 | 1B | | G11-4611-04 | SHEET(D-SUB) | |
| 22 | 1B | | G13-2102-04 | CONDUCTIVE CUSHION | |
| 23 | 3B | | G13-2363-04 | CUSHION(PANELHOLDER) | |
| 24 | 1B | | G13-2389-04 | CUSHION(SHIELDING/TOP) | |
| 25 | 2B | | G13-2395-04 | CUSHION(X57) | |
| 26 | 2B | | G53-1643-04 | PACKING(DC CORD) | |
| 27 | 2B | | G53-1662-04 | PACKING(M/ANT) | |
| 28 | 2B | | G53-1768-04 | PACKING(SMA) | HGK,HGK2 |
| 31 | 1B | | G53-1819-21 | PACKING(CHASSIS) | |
| 32 | 3A | | G53-1820-03 | PACKING(PANEL) | |
| 33 | 3A | | G53-1858-03 | PACKING(SP) | |
| 40 | 2D | ✻ | H12-4345-12 | PACKING FIXTURE | |
| 41 | 2D | ✻ | H12-4346-12 | PACKING FIXTURE | |
| 42 | 2D | ✻ | H52-2568-02 | ITEM CARTON CASE | |
| 43 | 3C | | J19-1584-15 | HOLDER(MIC) ACCESSORY | |
| 46 | 3A | | J19-5542-02 | HOLDER(PANEL) | |
| 47 | 1D | | J29-0726-03 | BRACKET ACCESSORY | |
| 48 | 3A | | K29-9479-01 | KEY TOP | |
| A | 2B | | N30-2605-48 | PAN HEAD MACHINE SCREW(SMA) | HGK,HGK2 |
| B | 2A,2B | | N67-3008-48 | PAN HEAD SEMS SCREW | |
| C | 2A,2B | | N87-2608-48 | BRAZIER HEAD TAPTITE SCREW | |
| 50 | 2C | | N99-2039-05 | SCREW SET ACCESSORY | |
| 51 | 3A | | T07-0785-15 | SPEAKER | |
| 52 | 2C | | T91-0639-55 | MICROPHONE(KMC-35) ACCESSORY | |
| | | | X57-8240-14 | TX-RX UNIT(FOR SERVICE) | HGK |
| | | | X57-8240-15 | TX-RX UNIT(FOR SERVICE) | HK |
| | | | X57-8240-16 | TX-RX UNIT(FOR SERVICE) | HGK2 |
| | | | X57-8240-17 | TX-RX UNIT(FOR SERVICE) | HK2 |

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| **DISPLAY UNIT (X54-3830-10)** | | | | | |
| 101 | 2A | | B11-1885-03 | ILLUMINATION GUIDE | |
| 102 | 2A | | B38-0936-05 | LCD | |
| D5 -9 | | | B30-2337-05 | LED(YELLOW) | |
| D11 -21 | | | B30-2337-05 | LED(YELLOW) | |
| D22 | 3A | | B30-2321-05 | LED(BLUE) | |
| D23 | 3A | | B30-2151-05 | LED(RED/GREEN) | |
| D24 | | | B30-2337-05 | LED(YELLOW) | |
| C1 | | | CC73HCH1H101J | CHIP C 100PF J | |
| C2 ,3 | | | CC73HCH1H221J | CHIP C 220PF J | |
| C4 | | | CC73HCH1H101J | CHIP C 100PF J | |
| C5 | | | CC73HCH1H221J | CHIP C 220PF J | |
| C6 | | | CK73HB1H471K | CHIP C 470PF K | |
| C7 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C10 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C11 | | | CC73HCH1H221J | CHIP C 220PF J | |
| C12 | | | CC73HCH1H101J | CHIP C 100PF J | |
| C13 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C14 ,15 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C21 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C23 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C24 ,25 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C27 | | | CK73HB1A105K | CHIP C 1.0UF K | |
| C31 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C32 ,33 | | | CK73HB1C473K | CHIP C 0.047UF K | |
| C34 | | | CC73HCH1H470J | CHIP C 47PF J | |
| C35 ,36 | | | CC73HCH1H221J | CHIP C 220PF J | |
| 103 | 3A | | E29-1231-15 | INTER CONNECTOR(LCD) | |
| CN1 | | | E40-6924-05 | FLAT CABLE CONNECTOR(30P) | |
| J1 | 3A | | E58-0535-05 | MODULAR JACK(MIC) | |
| 104 | 2A | | J21-8629-03 | MOUNTING HARDWARE(LCD) | |
| L1 | | | L92-0138-05 | CHIP FERRITE | |
| L2 ,3 | | | L92-0140-05 | CHIP FERRITE | |
| CP1 | | | RK74HB1J101J | CHIP-COM 100 J 1/16W | |
| R1 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R2 -4 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R5 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R7 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R9 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R12 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R14 | | | RK73HB1J122J | CHIP R 1.2K J 1/16W | |
| R15 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R17 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R18 | | | RK73GB2A331J | CHIP R 330 J 1/10W | |
| R19 | | | RK73GB2A221J | CHIP R 220 J 1/10W | |
| R20 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R22 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R23 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R24 ,25 | | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R26 | | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R28 | | | RK73FB2B121J | CHIP R 120 J 1/8W | |
| R29 | | | RK73FB2B221J | CHIP R 220 J 1/8W | |
| R34 -37 | | | RK73GB2A271J | CHIP R 270 J 1/10W | |

# PARTS LIST

**DISPLAY UNIT (X54-3830-10)**
**TX-RX UNIT (X57-8240-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | | | | Destination |
|---|---|---|---|---|---|---|---|---|
| R38 -40 | | | RK73HB1J472J | CHIP R | 4.7K | J | 1/16W | |
| R41 | | | RK73HB1J101J | CHIP R | 100 | J | 1/16W | |
| R42 | | | RK73HB1J272J | CHIP R | 2.7K | J | 1/16W | |
| R43 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R44 | | | RK73HB1J222J | CHIP R | 2.2K | J | 1/16W | |
| R45 | | | RK73HB1J472J | CHIP R | 4.7K | J | 1/16W | |
| D1 | | | DZ2J062(M) | ZENER DIODE | | | | |
| D2 | | | DA3S101F | DIODE | | | | |
| D25 | | | MINISMDC020F | VARISTOR | | | | |
| D26 | | | HN2S03FE | DIODE | | | | |
| D27 | | | DZ2J062(M) | ZENER DIODE | | | | |
| IC1 | | | LC75857W-E | MOS-IC | | | | |
| Q3 | | | KTC4075E(Y,GR) | TRANSISTOR | | | | |
| Q6 | | | KTC4075E(Y,GR) | TRANSISTOR | | | | |
| Q8 | | | KTC4075E(Y,GR) | TRANSISTOR | | | | |
| Q9 | | | QST7 | TRANSISTOR | | | | |
| Q10 | | | LTC014EEBFS8 | TRANSISTOR | | | | |
| Q11 | | | KTC4075E(Y,GR) | TRANSISTOR | | | | |
| **TX-RX UNIT (X57-8240-XX) -10:HGK -11:HK -12:HGK2 -13:HK2** | | | | | | | | |
| C1 | | | CK73HB1E103K | CHIP C | 0.010UF | K | | |
| C2 | | | CC73HCH1H101J | CHIP C | 100PF | J | | |
| C3 ,4 | | | CK73HB1H103K | CHIP C | 0.010UF | K | | |
| C5 ,6 | | | CC73HCH1H100B | CHIP C | 10PF | B | | |
| C7 | | | CK73HB1H103K | CHIP C | 0.010UF | K | | |
| C8 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C9 | | | CC73HCH1H100B | CHIP C | 10PF | B | | |
| C10 ,11 | | | CK73HB1H103K | CHIP C | 0.010UF | K | | |
| C12 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | | HGK,HK |
| C12 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | | HGK2,HK2 |
| C16 -21 | | | CC73HCH1H101J | CHIP C | 100PF | J | | |
| C22 | | | CK73HB1A104K | CHIP C | 0.10UF | K | | |
| C23 | | | CC73HCH1H101J | CHIP C | 100PF | J | | |
| C25 ,26 | | | CC73HCH1H101J | CHIP C | 100PF | J | | |
| C28 | | | CC73HCH1H101J | CHIP C | 100PF | J | | |
| C29 | | | CS77MA1VR15M | CHIP TNTL | 0.15UF | 35WV | | |
| C30 | | | CK73GB1E105K | CHIP C | 1.0UF | K | | |
| C31 | | | CC73HCH1H470J | CHIP C | 47PF | J | | |
| C32 | | | CS77BA1D100M | CHIP TNTL | 10UF | 20WV | | |
| C33 | | | CK73HB1H103K | CHIP C | 0.010UF | K | | |
| C34 | | | C93-1906-05 | CHIP FILM | 0.047UF | J | | |
| C36 | | | CC73HCH1H101J | CHIP C | 100PF | J | | |
| C39 | | | CC73HCH1H330J | CHIP C | 33PF | J | | |
| C41 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C43 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C46 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | | |
| C47 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | | HGK,HK |
| C47 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | | HGK2,HK2 |
| C48 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | | |
| C49 | | | CC73HCH1H100B | CHIP C | 10PF | B | | HGK2,HK2 |
| C49 | | | CC73HCH1H180G | CHIP C | 18PF | G | | HGK,HK |
| C50 | | | CC73HCH1H151J | CHIP C | 150PF | J | | HGK2,HK2 |
| C50 | | | CC73HCH1H271J | CHIP C | 270PF | J | | HGK,HK |
| C51 | | | CC73HCH1H271J | CHIP C | 270PF | J | | HGK2,HK2 |
| C51 | | | CK73HB1H471K | CHIP C | 470PF | K | | HGK,HK |
| C53 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | | HGK2,HK2 |
| C53 ,54 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | | HGK,HK |
| C54 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | | HGK2,HK2 |

| Ref. No. | Address | New parts | Parts No. | Description | | | | Destination |
|---|---|---|---|---|---|---|---|---|
| C55 | | | CK73HB0J105K | CHIP C | 1.0UF | K | | |
| C56 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | | |
| C57 ,58 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C59 | | | CC73HCH1H200G | CHIP C | 20PF | G | | HGK,HK |
| C59 | | | CC73HCH1H240G | CHIP C | 24PF | G | | HGK2,HK2 |
| C61 | | | CC73HCH1H0R5B | CHIP C | 0.5PF | B | | HGK,HK |
| C63 | | | CC73HCH1H0R5B | CHIP C | 0.5PF | B | | |
| C64 | | | CK73FB1A106K | CHIP C | 10UF | K | | |
| C65 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C66 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | | HGK,HK |
| C66 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | | HGK2,HK2 |
| C67 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | | HGK,HK |
| C67 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | | HGK2,HK2 |
| C68 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | | HGK,HK |
| C68 ,69 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | | HGK2,HK2 |
| C69 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | | HGK,HK |
| C70 | | | CK73GB1E105K | CHIP C | 1.0UF | K | | |
| C71 | | | CC73HCH1H180G | CHIP C | 18PF | G | | |
| C72 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | | HGK2,HK2 |
| C72 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | | HGK,HK |
| C73 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C74 | | | CC73HCH1H0R5B | CHIP C | 0.5PF | B | | |
| C76 | | | CC73HCH1H0R5B | CHIP C | 0.5PF | B | | |
| C78 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C80 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C81 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | | |
| C82 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C83 | | | CC73HCH1H100B | CHIP C | 10PF | B | | |
| C84 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | | |
| C85 -87 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C88 | | | CK73HB1A104K | CHIP C | 0.10UF | K | | |
| C89 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | | |
| C90 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | | HGK,HK |
| C90 | | | CC73HCH1H100B | CHIP C | 10PF | B | | HGK2,HK2 |
| C91 | | | C93-0787-05 | CHIP C | 0.1UF | J | | |
| C102 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C103 | | | CK73HB1H103K | CHIP C | 0.010UF | K | | |
| C104 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C106,107 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C108 | | | CK73FB1E475K | CHIP C | 4.7UF | K | | |
| C109 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | | |
| C110,111 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C113 | | | CC73HCH1H101J | CHIP C | 100PF | J | | |
| C116 | | | CC73HCH1H101J | CHIP C | 100PF | J | | |
| C117,118 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C119 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | | |
| C124 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | | HGK,HK |
| C124 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | | HGK2,HK2 |
| C125 | | | CK73HB1H471K | CHIP C | 470PF | K | | |
| C127 | | | CC73HCH1H220J | CHIP C | 22PF | J | | |
| C128 | | | CC73HCH1H470J | CHIP C | 47PF | J | | |
| C129 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | | HGK,HK |
| C129 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | | HGK2,HK2 |
| C131 | | | CC73HCH1H101J | CHIP C | 100PF | J | | |
| C133 | | | CC73HCH1H221J | CHIP C | 220PF | J | | HGK2,HK2 |
| C134 | | | CK73HB1H471K | CHIP C | 470PF | K | | HGK,HK |
| C134,135 | | | CK73HB1H471K | CHIP C | 470PF | K | | HGK2,HK2 |
| C136 | | | CK73FB1H471K | CHIP C | 470PF | K | | |
| C137 | | | CC73HCH1H101J | CHIP C | 100PF | J | | HGK2,HK2 |
| C140 | | | CS77LA1C4R7M | CHIP TNTL | 4.7UF | 16WV | | |

# PARTS LIST

TX-RX UNIT (X57-8240-XX)

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C142 | | | CC73HCH1H220J | CHIP C | 22PF | J | HGK2,HK2 |
| C144 | | | CC73HCH1H470J | CHIP C | 47PF | J | HGK2,HK2 |
| C145 | | | CK73HB1A104K | CHIP C | 1.5PF | K | HGK2,HK2 |
| C146 | | | C93-0550-05 | CHIP C | 1.0PF | C | HGK,HK |
| C148 | | | CC73HCH1H101J | CHIP C | 100PF | J | HGK2,HK2 |
| C149 | | | CC73HCH1H220J | CHIP C | 22PF | J | HGK,HK |
| C149 | | | CK73HB1H471K | CHIP C | 470PF | K | HGK2,HK2 |
| C150 | | | CK73GB1E105K | CHIP C | 1.0UF | K | HGK2,HK2 |
| C151 | | | C93-0551-05 | CHIP C | 1.5PF | C | HGK,HK |
| C151 | | | C93-0553-05 | CHIP C | 3.0PF | C | HGK2,HK2 |
| C152 | | | C92-0875-05 | ELECTRO | 47UF | 25WV | |
| C154 | | | CK73HB1E223K | CHIP C | 0.022UF | K | |
| C155 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C156 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C157 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C158 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C161 | | | CC73GCH1H040C | CHIP C | 4.0PF | C | |
| C165 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C167 | | | CC73GCH1H040C | CHIP C | 4.0PF | C | |
| C168 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C169 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C171 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C172,173 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C175 | | | CC73FCH1H020B | CHIP C | 2.0PF | B | HGK,HK |
| C175 | | | CC73FCH1H060B | CHIP C | 6.0PF | B | HGK2,HK2 |
| C177 | | | C93-1871-05 | CHIP C | 100PF | 250WV | |
| C179 | | | C93-0553-05 | CHIP C | 3.0PF | C | HGK,HK |
| C179 | | | C93-0554-05 | CHIP C | 4.0PF | C | HGK2,HK2 |
| C180 | | | C93-0555-05 | CHIP C | 5.0PF | C | HGK,HK |
| C180 | | | C93-0556-05 | CHIP C | 6.0PF | D | HGK2,HK2 |
| C183 | | | C93-1852-05 | CHIP C | 6.0PF | 250WV | HGK,HK |
| C184 | | | C93-0557-05 | CHIP C | 7.0PF | D | HGK2,HK2 |
| C187,188 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C190 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | |
| C191 | | | CC73GCH1H220J | CHIP C | 22PF | J | |
| C192 | | | CC73GCH1H120J | CHIP C | 12PF | J | |
| C193 | | | CC73GCH1H330J | CHIP C | 33PF | J | |
| C194 | | | CC73GCH1H100D | CHIP C | 10PF | D | |
| C197 | | | C93-1855-05 | CHIP C | 7.0PF | 250WV | HGK,HK |
| C197 | | | C93-1857-05 | CHIP C | 8.0PF | 250WV | HGK2,HK2 |
| C201,202 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C203 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C204 | | | CK73FB1E475K | CHIP C | 4.7UF | K | |
| C205 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C206 | | | CC73HCH1H1R5B | CHIP C | 1.5PF | B | |
| C207 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C208 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | HGK,HK |
| C208 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | HGK2,HK2 |
| C209 | | | CC73HCH1H120J | CHIP C | 12PF | J | |
| C210 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C211 | | | CC73HCH1H010B | CHIP C | 1.0PF | B | |
| C212 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | HGK,HK |
| C212 | | | CC73HCH1H120G | CHIP C | 12PF | G | HGK2,HK2 |
| C213 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | |
| C214 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | HGK,HK |
| C214 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | HGK2,HK2 |
| C215,216 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C217 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | |
| C218 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | HGK2,HK2 |
| C218 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | HGK,HK |

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C219 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C220 | | | CC73HCH1H120G | CHIP C | 12PF | G | HGK,HK |
| C220 | | | CC73HCH1H150G | CHIP C | 15PF | G | HGK2,HK2 |
| C221 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | HGK,HK |
| C221 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | HGK2,HK2 |
| C222 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | HGK,HK |
| C222 | | | CC73HCH1H100B | CHIP C | 10PF | B | HGK2,HK2 |
| C223 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C224 | | | CC73HCH1H130G | CHIP C | 13PF | G | HGK,HK |
| C224 | | | CC73HCH1H150G | CHIP C | 15PF | G | HGK2,HK2 |
| C225 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | HGK2,HK2 |
| C225 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | HGK,HK |
| C226 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | HGK,HK |
| C226 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | HGK2,HK2 |
| C227,228 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C230 | | | CC73HCH1H100B | CHIP C | 10PF | B | HGK2,HK2 |
| C230,231 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | HGK,HK |
| C231 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | HGK2,HK2 |
| C232 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | HGK,HK |
| C232 | | | CC73HCH1H090B | CHIP C | 9.0PF | B | HGK2,HK2 |
| C233 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C234 | | | CC73HCH1H100B | CHIP C | 10PF | B | |
| C239 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C240 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C246 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C250 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C251 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | |
| C252,253 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C254 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | HGK2,HK2 |
| C254 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | HGK,HK |
| C255 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | HGK,HK |
| C256 | | | CC73HCH1H180G | CHIP C | 18PF | G | HGK2,HK2 |
| C256 | | | CC73HCH1H220G | CHIP C | 22PF | G | HGK,HK |
| C263 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | HGK,HK |
| C263 | | | CC73HCH1H100B | CHIP C | 10PF | B | HGK2,HK2 |
| C289 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C290 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | HGK2,HK2 |
| C290,291 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | HGK,HK |
| C291 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | HGK2,HK2 |
| C292 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | HGK2,HK2 |
| C292 | | | CC73HCH1H100B | CHIP C | 10PF | B | HGK,HK |
| C293 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C294 | | | CC73HCH1H100B | CHIP C | 10PF | B | |
| C295 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | |
| C296 | | | CC73HCH1H180G | CHIP C | 18PF | G | HGK2,HK2 |
| C296,297 | | | CC73HCH1H101J | CHIP C | 100PF | J | HGK,HK |
| C297 | | | CC73HCH1H101J | CHIP C | 100PF | J | HGK2,HK2 |
| C299 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C306 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C307 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C309 | | | CC73HCH1H100B | CHIP C | 10PF | B | |
| C312 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C313 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C315 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C316 | | | CC73HCH1H100B | CHIP C | 10PF | B | |
| C317 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C322 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C323 | | | CC73HCH1H151J | CHIP C | 150PF | J | |
| C324 | | | CC73HCH1H330G | CHIP C | 33PF | G | |
| C325 | | | CC73HCH1H680G | CHIP C | 68PF | G | |

# NX-820H(G)/820H

## PARTS LIST

**TX-RX UNIT (X57-8240-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C326 | | | CC73HCH1H100B | CHIP C | 10PF | B | |
| C327 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C330 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C332-335 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C336 | | | CK73FB1A106K | CHIP C | 10UF | K | |
| C337 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C338 | | | CK73FB1A106K | CHIP C | 10UF | K | |
| C339 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C340 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C341 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C342 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C343-345 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C346 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C347 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C348 | | | CC73HCH1H470J | CHIP C | 47PF | J | |
| C350 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C351 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C357 | | | CC73HCH1H0R5B | CHIP C | 0.5PF | B | |
| C358 | | | CC73HCH1H100B | CHIP C | 10PF | B | |
| C359-361 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C363 | | | CC73HCH1H220G | CHIP C | 22PF | G | |
| C366 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C367 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C368 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C369 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C371 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C401 | | | C92-0968-05 | ELECTRO | 470UF | 25WV | |
| C403 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C405 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C408,409 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C410 | | | CK73GB1C225K | CHIP C | 2.2UF | K | |
| C411 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C413 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C416 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C417 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C420 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C422 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C423,424 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C425 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C427 | | | CK73GB1H473K | CHIP C | 0.047UF | K | |
| C428 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C429 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C430 | | | CK73FB1E475K | CHIP C | 4.7UF | K | |
| C431 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C432 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C433,434 | | | CK73FB1E475K | CHIP C | 4.7UF | K | |
| C435 | | | CK73GB1C225K | CHIP C | 2.2UF | K | |
| C436 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C437 | | | CK73FB1E475K | CHIP C | 4.7UF | K | |
| C438,439 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C440 | | | C92-0875-05 | ELECTRO | 47UF | 25WV | |
| C441 | | | CK73GB1C225K | CHIP C | 2.2UF | K | |
| C442 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C443 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C445,446 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C447 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C448 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C449 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C450,451 | | | CK73FB1A106K | CHIP C | 10UF | K | |
| C452 | | | CS77LA1C4R7M | CHIP TNTL | 4.7UF | 16WV | |

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C453 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C454,455 | | | CK73GB1C225K | CHIP C | 2.2UF | K | |
| C456 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C457,458 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C460 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C461 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C462 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C463 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C464 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C465,466 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C468 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C469 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C471 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C472 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C475 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C476 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C477 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C501-504 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C505-507 | | | CK73GB0J106K | CHIP C | 10UF | K | |
| C508,509 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C510 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C512 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C514-516 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C518-520 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C521 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C522,523 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C524 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C525-531 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C532 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C533 | | | CK73GB0J106K | CHIP C | 10UF | K | |
| C534 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C535 | | | CK73HB1H272K | CHIP C | 2700PF | K | |
| C536 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C537 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C541 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C542 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C543,544 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C545 | | | CK73FB1A106K | CHIP C | 10UF | K | |
| C546 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C547 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C548 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C549 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C551 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C552 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C553 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C555,556 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C558 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C559 | | | CK73FB1A106K | CHIP C | 10UF | K | |
| C560 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | |
| C563 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C565-568 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C569 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C570 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C572-576 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C577 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C578 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C579-581 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C602 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C603 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C604 | | | CK73HB1H102K | CHIP C | 1000PF | K | |

# PARTS LIST

TX-RX UNIT (X57-8240-XX)

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C605 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C607 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C609-611 | | | CC73HCH1H470J | CHIP C | 47PF | J | |
| C612 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C613 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C614-618 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C620 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C621 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C622-624 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C625 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C626 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C627-630 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C632 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C633-642 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C643 | | | CK73HB1E223K | CHIP C | 0.022UF | K | |
| C644 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C645 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C646 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C647 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C648 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C649 | | | CK73GB1H103K | CHIP C | 0.010UF | K | |
| C650-652 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C660 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C661 | | | CC73HCH1H470J | CHIP C | 47PF | J | |
| C680 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C701 | | | CK73HB1H682K | CHIP C | 6800PF | K | |
| C702 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C704 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C705 | | | CC73HCH1H470J | CHIP C | 47PF | J | |
| C706 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C707 | | | CK73HB1H681K | CHIP C | 680PF | K | |
| C708 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C709 | | | CC73HCH1H270J | CHIP C | 27PF | J | |
| C711 | | | CC73HCH1H331J | CHIP C | 330PF | J | |
| C712 | | | CC73HCH1H181J | CHIP C | 180PF | J | |
| C714 | | | CC73HCH1H680J | CHIP C | 68PF | J | |
| C716 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C718 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C719 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C720 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C722 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C723 | | | CC73HCH1H470J | CHIP C | 47PF | J | |
| C725 | | | CC73HCH1H121J | CHIP C | 120PF | J | |
| C728 | | | CK73HB1H821K | CHIP C | 820PF | K | |
| C729 | | | CK73HB1H681K | CHIP C | 680PF | K | |
| C732 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C733 | | | CK73FB1E475K | CHIP C | 4.7UF | K | |
| C734 | | | CK73HB1H472K | CHIP C | 4700PF | K | |
| C735 | | | CK73GB0J106K | CHIP C | 10UF | K | |
| C738 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C739 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C740 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C741 | | | CK73HB1A224K | CHIP C | 0.22UF | K | |
| C743 | | | CC73HCH1H470J | CHIP C | 47PF | J | |
| C744 | | | CK73HB1A224K | CHIP C | 0.22UF | K | |
| C746 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C747 | | | CC73HCH1H221J | CHIP C | 220PF | J | |
| C749 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C752,753 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C758 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C762 | | | CK73HB1H103K | CHIP C | 0.010UF | K | |
| C765 | | | CC73HCH1H220J | CHIP C | 22PF | J | |
| C766,767 | | | CK73GB0J475K | CHIP C | 4.7UF | K | |
| C769 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C770 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C771 | | | CK73HB1H122K | CHIP C | 1200PF | K | |
| C773 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C774 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C775 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C776 | | | CK73HB1A393K | CHIP C | 0.039UF | K | |
| C777 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C778 | | | CK73HB1A105K | CHIP C | 1.0UF | K | |
| C779,780 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C782 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C784 | | | CK73FB1A106K | CHIP C | 10UF | K | |
| C786 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C788 | | | CK73FB1E475K | CHIP C | 4.7UF | K | |
| C790,791 | | | CK73FB1A106K | CHIP C | 10UF | K | |
| C796 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C797,798 | | | CK73GB1C224K | CHIP C | 0.22UF | K | |
| C801 | | | C92-0875-05 | ELECTRO | 47UF | 25WV | |
| C802 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C803,804 | | | C92-0906-05 | ELECTRO | 330UF | 16WV | |
| C805 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C806 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C807 | | | CK73HB1C473K | CHIP C | 0.047UF | K | |
| C808 | | | CK73HB1A683K | CHIP C | 0.068UF | K | |
| C809 | | | CK73HB1H102K | CHIP C | 1000PF | K | HGK,HGK2 |
| C810 | | | CK73FB1E475K | CHIP C | 4.7UF | K | |
| C811 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C812 | | | CK73FB1A106K | CHIP C | 10UF | K | |
| C813 | | | CK73GB0J106K | CHIP C | 10UF | K | HK,HK2 |
| C813,814 | | | CK73GB0J106K | CHIP C | 10UF | K | HGK,HGK2 |
| C815 | | | CK73HB1A104K | CHIP C | 0.10UF | K | HGK,HGK2 |
| C816 | | | CK73HB1H102K | CHIP C | 1000PF | K | HGK,HGK2 |
| C820 | | | CK73HB1A104K | CHIP C | 0.10UF | K | HGK,HGK2 |
| C821,822 | | | CC73HCH1H180J | CHIP C | 18PF | J | HGK,HGK2 |
| C823 | | | CK73HB1H102K | CHIP C | 1000PF | K | HGK,HGK2 |
| C824,825 | | | CC73HCH1H180J | CHIP C | 18PF | J | HGK,HGK2 |
| C826 | | | CK73HB1A104K | CHIP C | 0.10UF | K | HGK,HGK2 |
| C829 | | | CK73GB0J106K | CHIP C | 10UF | K | |
| C830,831 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C832,833 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| CN10-12 | | | E23-1278-05 | TERMINAL | | | HGK2,HK2 |
| CN10-15 | | | E23-1278-05 | TERMINAL | | | HGK,HK |
| CN14,15 | | | E23-1278-05 | TERMINAL | | | HGK2,HK2 |
| CN203-206 | | | E23-1278-05 | TERMINAL | | | |
| CN514 | | | E40-6847-05 | FLAT CABLE CONNECTOR | | | |
| CN801 | | | E04-0410-05 | PIN SOCKET(3P) | | | HGK,HGK2 |
| J501 | | | E58-0536-05 | D-SUB SOCKET(15P) | | | |
| J701 | | | E11-0425-05 | 3.5D PHONE JACK(EXT-SP) | | | |
| F401 | | | F53-0328-15 | FUSE(5A) | | | |
| F501 | | | F53-0324-15 | FUSE(2.5A) | | | |
| F502,503 | | | F53-0315-15 | FUSE(250MA) | | | |
| F701 | | | F53-0324-15 | FUSE(2.5A) | | | |
| CF1 | | | L72-1017-05 | CERAMIC FILTER(450KHZ) | | | |
| CF2 | | | L72-1040-05 | CERAMIC FILTER(450KHZ) | | | |
| L1 | | | L92-0163-05 | BEADS CORE | | | |
| L2 | | | L41-4795-39 | SMALL FIXED INDUCTOR(4.7U/2520 | | | |

# PARTS LIST

**TX-RX UNIT (X57-8240-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | Desti-nation |
|---|---|---|---|---|---|
| L3 | | | L92-0163-05 | BEADS CORE | |
| L5 | | | L92-0163-05 | BEADS CORE | |
| L6 ,7 | | | L40-1001-86 | SMALL FIXED INDUCTOR(10UH) | |
| L9 | | | L40-5675-71 | SMALL FIXED INDUCTOR(56NH) | |
| L11 | | | L40-2285-92 | SMALL FIXED INDUCTOR(220NH) | HGK2,HK2 |
| L11 -16 | | | L40-1885-92 | SMALL FIXED INDUCTOR(180NH) | HGK,HK |
| L12 | | | L40-1885-92 | SMALL FIXED INDUCTOR(180NH) | HGK2,HK2 |
| L13 | | | L40-2285-92 | SMALL FIXED INDUCTOR(220NH) | HGK2,HK2 |
| L14 -16 | | | L40-1885-92 | SMALL FIXED INDUCTOR(180NH) | HGK2,HK2 |
| L17 | | | L34-4607-15 | AIR-CORE COIL(6T) | HGK,HK |
| L17 | | | L34-4608-15 | AIR-CORE COIL(7T) | HGK2,HK2 |
| L18 | | | L34-4608-15 | AIR-CORE COIL(7T) | HGK,HK |
| L18 | | | L34-4609-15 | AIR-CORE COIL(8T) | HGK2,HK2 |
| L19 | | | L92-0163-05 | BEADS CORE | |
| L20 | | | L40-1275-92 | SMALL FIXED INDUCTOR(12NH) | |
| L21 | | | L40-1885-92 | SMALL FIXED INDUCTOR(180NH) | HGK,HK |
| L21 | | | L40-2285-92 | SMALL FIXED INDUCTOR(220NH) | HGK2,HK2 |
| L22 | | | L92-0446-05 | BEADS CORE | |
| L23 ,24 | | | L40-1885-92 | SMALL FIXED INDUCTOR(180NH) | HGK,HK |
| L23 ,24 | | | L40-2285-92 | SMALL FIXED INDUCTOR(220NH) | HGK2,HK2 |
| L25 | | | L40-2775-71 | SMALL FIXED INDUCTOR(27NH) | |
| L26 | | | L92-0163-05 | BEADS CORE | |
| L27 | | | L40-3975-92 | SMALL FIXED INDUCTOR(39NH) | |
| L29 | | | L40-2285-92 | SMALL FIXED INDUCTOR(220NH) | |
| L40 ,41 | | | L92-0163-05 | BEADS CORE | |
| L101 | | | L40-2275-92 | SMALL FIXED INDUCTOR(22NH) | |
| L102 | | | L40-1875-92 | SMALL FIXED INDUCTOR(18NH) | |
| L103 | | | L92-0140-05 | CHIP FERRITE | |
| L105 | | | L92-0163-05 | BEADS CORE | |
| L106 | | | L40-1875-92 | SMALL FIXED INDUCTOR(18NH) | |
| L107 | | | L92-0140-05 | CHIP FERRITE | |
| L108-110 | | | L92-0179-05 | CHIP FERRITE | |
| L111 | | | L92-0163-05 | BEADS CORE | |
| L112 | | | L34-4667-05 | AIR-CORE COIL(9.5T) | |
| L113 | | | L34-4694-05 | AIR-CORE COIL(1.5T) | |
| L114 | | | L34-4667-05 | AIR-CORE COIL(9.5T) | |
| L115 | | | L34-4912-05 | AIR-CORE COIL(1T) | |
| L116,117 | | | L34-4669-05 | AIR-CORE COIL(2.5T) | |
| L118 | | | L40-2275-92 | SMALL FIXED INDUCTOR(22NH) | |
| L121 | | | L40-1575-71 | SMALL FIXED INDUCTOR(15NH) | |
| L201 | | | L92-0138-05 | CHIP FERRITE | |
| L202 | | | L41-5685-39 | SMALL FIXED INDUCTOR(0.56UH) | |
| L203 | | | L41-2785-39 | SMALL FIXED INDUCTOR(0.27UH) | |
| L204,205 | | | L40-1575-71 | SMALL FIXED INDUCTOR(15NH) | HGK,HK |
| L204,205 | | | L40-1875-71 | SMALL FIXED INDUCTOR(18NH) | HGK2,HK2 |
| L206 | | | L40-3975-71 | SMALL FIXED INDUCTOR(39NH) | HGK,HK |
| L206 | | | L40-4775-71 | SMALL FIXED INDUCTOR(47NH) | HGK2,HK2 |
| L207-209 | | | L41-2778-14 | SMALL FIXED INDUCTOR(27NH) | HGK,HK |
| L207-209 | | | L41-3378-14 | SMALL FIXED INDUCTOR(33NH) | HGK2,HK2 |
| L210 | | | L41-6878-14 | SMALL FIXED INDUCTOR(68NH) | HGK,HK |
| L210 | | | L41-8278-14 | SMALL FIXED INDUCTOR(82NH) | HGK2,HK2 |
| L211 | | | L41-2778-14 | SMALL FIXED INDUCTOR(27NH) | HGK,HK |
| L211 | | | L41-3378-14 | SMALL FIXED INDUCTOR(33NH) | HGK2,HK2 |
| L212 | | | L92-0138-05 | CHIP FERRITE | |
| L213,214 | | | L41-1878-14 | SMALL FIXED INDUCTOR(18NH) | HGK,HK |
| L213,214 | | | L41-2278-14 | SMALL FIXED INDUCTOR(22NH) | HGK2,HK2 |
| L215,216 | | | L41-2778-14 | SMALL FIXED INDUCTOR(27NH) | HGK,HK |
| L215,216 | | | L41-3378-14 | SMALL FIXED INDUCTOR(33NH) | HGK2,HK2 |
| L228 | | | L40-1875-92 | SMALL FIXED INDUCTOR(18NH) | HGK,HK |
| L228 | | | L40-2763-92 | SMALL FIXED INDUCTOR(2.7NH) | HGK2,HK2 |

| Ref. No. | Address | New parts | Parts No. | Description | Desti-nation |
|---|---|---|---|---|---|
| L302 | | | L40-5681-86 | SMALL FIXED INDUCTOR(0.56UH) | |
| L304 | | | L40-5675-92 | SMALL FIXED INDUCTOR(56NH) | |
| L307 | | | L40-2291-86 | SMALL FIXED INDUCTOR(2.2UH) | |
| L309 | | | L40-1085-57 | SMALL FIXED INDUCTOR(100NH) | |
| L310 | | | L92-0138-05 | CHIP FERRITE | |
| L312 | | | L41-1585-14 | SMALL FIXED INDUCTOR(150NH) | |
| L315 | | | L41-3985-39 | SMALL FIXED INDUCTOR(0.39UH) | |
| L316 | | | L41-1885-39 | SMALL FIXED INDUCTOR(0.18UH) | |
| L404 | | | L92-0639-05 | CHIP FERRITE | |
| L405 | | | L33-1496-05 | SMALL FIXED INDUCTOR(22UH) | |
| L501 | | | L92-0138-05 | CHIP FERRITE | |
| L503 | | | L92-0138-05 | CHIP FERRITE | |
| L504-506 | | | L92-0162-05 | BEADS CORE | |
| L508 | | | L92-0138-05 | CHIP FERRITE | |
| L510 | | | L92-0138-05 | CHIP FERRITE | |
| L801 | | | L79-1958-05 | FILTER | HGK,HGK2 |
| L802 | | | L40-2775-57 | SMALL FIXED INDUCTOR(27.0NH) | HGK,HGK2 |
| L805,806 | | | L92-0138-05 | CHIP FERRITE | HGK,HGK2 |
| X1 | | | L77-3073-05 | TCXO(16.8MHZ) | |
| X501 | | | L77-3015-05 | TCXO(18.432MHZ) | |
| XF1 | | | L71-0678-05 | MCF(49.95MHZ) | |
| CP1 | | | RK74HB1J100J | CHIP-COM 10 J 1/16W | |
| CP501 | | | RK74HB1J104J | CHIP-COM 100K J 1/16W | |
| CP502 | | | RK74HA1J104J | CHIP-COM 100K J 1/16W | |
| CP503 | | | RK74HB1J104J | CHIP-COM 100K J 1/16W | |
| CP504 | | | RK74HA1J101J | CHIP-COM 100 J 1/16W | |
| CP505 | | | RK74HA1J104J | CHIP-COM 100K J 1/16W | |
| CP506-508 | | | RK74HB1J104J | CHIP-COM 100K J 1/16W | |
| CP510 | | | RK74HA1J104J | CHIP-COM 100K J 1/16W | |
| CP511 | | | RK74HA1J101J | CHIP-COM 100 J 1/16W | |
| CP512 | | | RK74HA1J104J | CHIP-COM 100K J 1/16W | |
| CP513 | | | RK74HB1J104J | CHIP-COM 100K J 1/16W | |
| CP514 | | | RK74HA1J104J | CHIP-COM 100K J 1/16W | |
| CP515 | | | RK74HA1J101J | CHIP-COM 100 J 1/16W | |
| CP516 | | | RK74HB1J101J | CHIP-COM 100 J 1/16W | |
| CP701 | | | RK74HB1J101J | CHIP-COM 100 J 1/16W | |
| CP703,704 | | | RK74HB1J104J | CHIP-COM 100K J 1/16W | |
| CP705,706 | | | RK74HA1J104J | CHIP-COM 100K J 1/16W | |
| CP707 | | | RK74HB1J102J | CHIP-COM 1.0K J 1/16W | |
| R1 | | | RK73HB1J000J | CHIP R 0 J 1/16W | HGK,HK |
| R2 | | | RK73HB1J000J | CHIP R 0 J 1/16W | HGK2,HK2 |
| R5 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R10 | | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R12 | | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R13 ,14 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R15 | | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R16 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R17 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R18 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R19 ,20 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R21 | | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R22 | | | RK73HB1J181J | CHIP R 180 J 1/16W | |
| R23 | | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R24 | | | RK73HH1J391D | CHIP R 390 D 1/16W | |
| R25 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R26 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |

# PARTS LIST

TX-RX UNIT (X57-8240-XX)

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| R27 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R28 | | | RK73HB1J106J | CHIP R | 10M | J 1/16W | |
| R29 | | | RK73HB1J470J | CHIP R | 47 | J 1/16W | |
| R30 | | | RK73HB1J184J | CHIP R | 180K | J 1/16W | |
| R31 | | | RK73HB1J473J | CHIP R | 47K | J 1/16W | |
| R33 | | | RK73HB1J472J | CHIP R | 4.7K | J 1/16W | |
| R34 -36 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R40 ,41 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R46 | | | RK73HB1J330J | CHIP R | 33 | J 1/16W | HGK2,HK2 |
| R46 | | | RK73HB1J680J | CHIP R | 68 | J 1/16W | HGK,HK |
| R48 | | | RK73HB1J472J | CHIP R | 4.7K | J 1/16W | |
| R49 | | | RK73HB1J473J | CHIP R | 47K | J 1/16W | |
| R50 | | | RN73HH1J100D | CHIP R | 10 | D 1/16W | |
| R52 | | | RK73HB1J474J | CHIP R | 470K | J 1/16W | |
| R53 ,54 | | | RK73HB1J333J | CHIP R | 33K | J 1/16W | |
| R55 | | | RN73HH1J151D | CHIP R | 150 | D 1/16W | HGK,HK |
| R55 | | | RN73HH1J181D | CHIP R | 180 | D 1/16W | HGK2,HK2 |
| R56 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R57 | | | RN73HH1J151D | CHIP R | 150 | D 1/16W | HGK,HK |
| R57 | | | RN73HH1J181D | CHIP R | 180 | D 1/16W | HGK2,HK2 |
| R58 | | | RN73HH1J100D | CHIP R | 10 | D 1/16W | |
| R59 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R60 | | | RK73HB1J473J | CHIP R | 47K | J 1/16W | |
| R61 | | | RK73HB1J154J | CHIP R | 150K | J 1/16W | |
| R62 | | | RK73HB1J101J | CHIP R | 100 | J 1/16W | |
| R63 | | | RK73HB1J682J | CHIP R | 6.8K | J 1/16W | |
| R64 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R65 | | | RK73HB1J221J | CHIP R | 220 | J 1/16W | |
| R66 | | | RK73HB1J391J | CHIP R | 390 | J 1/16W | |
| R67 | | | RK73HB1J101J | CHIP R | 100 | J 1/16W | |
| R69 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R70 | | | RK73HB1J474J | CHIP R | 470K | J 1/16W | |
| R71 | | | RK73HB1J101J | CHIP R | 100 | J 1/16W | |
| R72 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R73 | | | RK73GB2A000J | CHIP R | 0 | J 1/10W | |
| R75 | | | RK73HB1J100J | CHIP R | 10 | J 1/16W | |
| R76 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R80 -85 | | | RK73GB2A000J | CHIP R | 0 | J 1/10W | HGK,HK |
| R80 ,81 | | | RK73GB2A000J | CHIP R | 0 | J 1/10W | HGK2,HK2 |
| R83 ,84 | | | RK73GB2A000J | CHIP R | 0 | J 1/10W | HGK2,HK2 |
| R86 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | HGK,HK |
| R87 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R90 | | | RK73HB1J105J | CHIP R | 1.0M | J 1/16W | HGK,HK |
| R101 | | | RK73HB1J332J | CHIP R | 3.3K | J 1/16W | |
| R102 | | | RK73HB1J221J | CHIP R | 220 | J 1/16W | HGK2,HK2 |
| R102 | | | RK73HB1J471J | CHIP R | 470 | J 1/16W | HGK,HK |
| R103 | | | RK73HB1J120J | CHIP R | 12 | J 1/16W | HGK,HK |
| R103 | | | RK73HB1J220J | CHIP R | 22 | J 1/16W | HGK2,HK2 |
| R104 | | | RK73HB1J221J | CHIP R | 220 | J 1/16W | HGK2,HK2 |
| R104 | | | RK73HB1J471J | CHIP R | 470 | J 1/16W | HGK,HK |
| R108 | | | RK73GB2A680J | CHIP R | 68 | J 1/10W | |
| R109 | | | RK73HB1J221J | CHIP R | 220 | J 1/16W | |
| R110 | | | RK73GB2A220J | CHIP R | 22 | J 1/10W | |
| R111 | | | RK73HB1J272J | CHIP R | 2.7K | J 1/16W | |
| R112 | | | RK73HB1J681J | CHIP R | 680 | J 1/16W | |
| R113 | | | RK73GB2A150J | CHIP R | 15 | J 1/10W | |
| R114 | | | RK73HB1J471J | CHIP R | 470 | J 1/16W | |
| R120 | | | RK73HB1J153J | CHIP R | 15K | J 1/16W | |
| R121 | | | RK73FB2B821J | CHIP R | 820 | J 1/8W | |
| R122,123 | | | RK73FB2B120J | CHIP R | 12 | J 1/8W | |

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| R125 | | | RK73FB2B821J | CHIP R | 820 | J 1/8W | |
| R128 | | | RK73HB1J221J | CHIP R | 220 | J 1/16W | |
| R130 | | | RK73HB1J153J | CHIP R | 15K | J 1/16W | HGK2,HK2 |
| R131 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R133 | | | RK73HB1J123J | CHIP R | 12K | J 1/16W | |
| R134 | | | RK73GB2A121J | CHIP R | 120 | J 1/10W | |
| R135 | | | RK73HB1J823J | CHIP R | 82K | J 1/16W | |
| R136 | | | RK73GB2A151J | CHIP R | 150 | J 1/10W | |
| R137 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R138 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R139,140 | | | RK73GB2A151J | CHIP R | 150 | J 1/10W | |
| R141 | | | RK73HB1J333J | CHIP R | 33K | J 1/16W | |
| R142 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R143 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R145 | | | RK73GB2A100J | CHIP R | 10 | J 1/10W | |
| R146 | | | RK73HB1J393J | CHIP R | 39K | J 1/16W | |
| R147 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R148 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R149 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R150 | | | RK73HB1J124J | CHIP R | 120K | J 1/16W | |
| R152 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R154 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R155 | | | RK73HB1J223J | CHIP R | 22K | J 1/16W | |
| R157,158 | | | RK73HB1J333J | CHIP R | 33K | J 1/16W | |
| R159,160 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R161 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R167 | | | RK73HB1J153J | CHIP R | 15K | J 1/16W | |
| R168,169 | | | RK73EB2E241J | CHIP R | 240 | J 1/4W | |
| R170 | | | RK73GB2A000J | CHIP R | 0 | J 1/10W | |
| R171 | | | R92-1061-05 | JUMPER REST | | 0 OHM | |
| R176 | | | RK73GB2A221J | CHIP R | 220 | J 1/10W | |
| R177,178 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R179,180 | | | RK73HB1J333J | CHIP R | 33K | J 1/16W | |
| R181 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R183 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R184,185 | | | RK73HB1J471J | CHIP R | 470 | J 1/16W | HGK2,HK2 |
| R184,185 | | | RK73HB1J821J | CHIP R | 820 | J 1/16W | HGK,HK |
| R187 | | | RK73HB1J473J | CHIP R | 47K | J 1/16W | |
| R188 | | | RK73GB2A120J | CHIP R | 12 | J 1/10W | HGK2,HK2 |
| R188 | | | RK73GB2A5R6J | CHIP R | 5.6 | J 1/10W | HGK,HK |
| R201 | | | RK73HB1J470J | CHIP R | 47 | J 1/16W | |
| R203 | | | RK73HB1J681J | CHIP R | 680 | J 1/16W | |
| R204 | | | RK73HB1J472J | CHIP R | 4.7K | J 1/16W | |
| R205 | | | RK73HB1J151J | CHIP R | 150 | J 1/16W | |
| R207 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R208 | | | RK73HB1J184J | CHIP R | 180K | J 1/16W | |
| R209 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R210 | | | RK73HB1J224J | CHIP R | 220K | J 1/16W | |
| R213-217 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R218 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R223 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R230 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R233 | | | RK73HB1J274J | CHIP R | 270K | J 1/16W | |
| R234 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R235 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R241 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R242 | | | RK73HB1J274J | CHIP R | 270K | J 1/16W | |
| R243 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R245 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R247 | | | RK73HB1J470J | CHIP R | 47 | J 1/16W | |

# PARTS LIST

**TX-RX UNIT (X57-8240-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| R249,250 | | | RK73HB1J183J | CHIP R | 18K | J 1/16W | |
| R255-257 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R259 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R290 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R291,292 | | | RK73GB2A000J | CHIP R | 0 | J 1/10W | HGK,HK |
| R303-305 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R306 | | | RK73HB1J334J | CHIP R | 330K | J 1/16W | |
| R307 | | | RK73HB1J561J | CHIP R | 560 | J 1/16W | |
| R308 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R315 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R316 | | | RK73HB1J332J | CHIP R | 3.3K | J 1/16W | |
| R323 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R324 | | | RK73HB1J183J | CHIP R | 18K | J 1/16W | |
| R326 | | | RK73GB2A331J | CHIP R | 330 | J 1/10W | |
| R328 | | | RK73HB1J183J | CHIP R | 18K | J 1/16W | |
| R329 | | | RK73HB1J100J | CHIP R | 10 | J 1/16W | |
| R332 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R336,337 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R338 | | | RK73HB1J473J | CHIP R | 47K | J 1/16W | |
| R339 | | | RK73HB1J153J | CHIP R | 15K | J 1/16W | |
| R340 | | | RK73HB1J274J | CHIP R | 270K | J 1/16W | |
| R341 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R342 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R343 | | | RK73HB1J223J | CHIP R | 22K | J 1/16W | |
| R344 | | | RK73HB1J272J | CHIP R | 2.7K | J 1/16W | |
| R345 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R350 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R351 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R355 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R357 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R358 | | | RK73HB1J333J | CHIP R | 33K | J 1/16W | |
| R368 | | | RK73HB1J221J | CHIP R | 220 | J 1/16W | |
| R378 | | | RK73HB1J394J | CHIP R | 390K | J 1/16W | |
| R379 | | | RK73HB1J222J | CHIP R | 2.2K | J 1/16W | |
| R381 | | | RK73HB1J221J | CHIP R | 220 | J 1/16W | |
| R390 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R394 | | | RK73HB1J181J | CHIP R | 180 | J 1/16W | |
| R401 | | | RK73HB1J471J | CHIP R | 470 | J 1/16W | |
| R402 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R403 | | | RK73HH1J274D | CHIP R | 270K | D 1/16W | |
| R404 | | | RK73HH1J104D | CHIP R | 100K | D 1/16W | |
| R405,406 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R407 | | | RK73HB1J472J | CHIP R | 4.7K | J 1/16W | |
| R408 | | | RK73HB1J684J | CHIP R | 680K | J 1/16W | |
| R409 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R410 | | | RK73GB2A4R7J | CHIP R | 4.7 | J 1/10W | |
| R411 | | | RK73HB1J473J | CHIP R | 47K | J 1/16W | |
| R412,413 | | | RK73GB2A100J | CHIP R | 10 | J 1/10W | |
| R414,415 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R417 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R418 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R419 | | | RK73HB1J272J | CHIP R | 2.7K | J 1/16W | |
| R421 | | | RK73HB1J472J | CHIP R | 4.7K | J 1/16W | |
| R422 | | | RK73HB1J474J | CHIP R | 470K | J 1/16W | |
| R423 | | | RK73HB1J472J | CHIP R | 4.7K | J 1/16W | |
| R424 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R425 | | | RK73HH1J124D | CHIP R | 120K | D 1/16W | |
| R426 | | | RK73HH1J183D | CHIP R | 18K | D 1/16W | |
| R427 | | | RK73HH1J223D | CHIP R | 22K | D 1/16W | |
| R428 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| R429 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R430 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R431 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R432 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R433 | | | RK73HB1J274J | CHIP R | 270K | J 1/16W | |
| R434 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R435 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R438 | | | RK73GB2A100J | CHIP R | 10 | J 1/10W | |
| R439 | | | RK73HB1J474J | CHIP R | 470K | J 1/16W | |
| R440 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R441 | | | RK73HB1J272J | CHIP R | 2.7K | J 1/16W | |
| R501 | | | RK73HB1J220J | CHIP R | 22 | J 1/16W | |
| R503,504 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R505,506 | | | RK73GB2A000J | CHIP R | 0 | J 1/10W | |
| R508-511 | | | RK73HB1J101J | CHIP R | 100 | J 1/16W | |
| R512 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R513 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R515-517 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R518 | | | RK73HB1J101J | CHIP R | 100 | J 1/16W | |
| R519 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R521,522 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R524 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R525 | | | RK73HB1J474J | CHIP R | 470K | J 1/16W | |
| R526 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R531 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R532 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R533,534 | | | RK73HB1J473J | CHIP R | 47K | J 1/16W | |
| R536 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R541 | | | RK73HB1J101J | CHIP R | 100 | J 1/16W | |
| R546 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R549 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R550 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R552,553 | | | RK73HB1J472J | CHIP R | 4.7K | J 1/16W | |
| R554 | | | RK73HB1J332J | CHIP R | 3.3K | J 1/16W | |
| R555 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R556 | | | RK73HB1J220J | CHIP R | 22 | J 1/16W | |
| R557 | | | RK73HB1J153J | CHIP R | 15K | J 1/16W | |
| R558 | | | RK73HB1J220J | CHIP R | 22 | J 1/16W | |
| R559 | | | RK73HB1J392J | CHIP R | 3.9K | J 1/16W | |
| R560 | | | RK73HB1J474J | CHIP R | 470K | J 1/16W | |
| R561 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | HGK,HGK2 |
| R566 | | | RK73HB1J474J | CHIP R | 470K | J 1/16W | |
| R567 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R568,569 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R571,572 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R580 | | | RK73HB1J332J | CHIP R | 3.3K | J 1/16W | |
| R581 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R583 | | | RK73HH1J104D | CHIP R | 100K | D 1/16W | |
| R584 | | | RK73HB1J473J | CHIP R | 47K | J 1/16W | |
| R599 | | | RK73HB1J104J | CHIP R | 100K | J 1/16W | |
| R603 | | | RK73HB1J474J | CHIP R | 470K | J 1/16W | |
| R606 | | | RK73HB1J105J | CHIP R | 1.0M | J 1/16W | |
| R610 | | | RK73HB1J474J | CHIP R | 470K | J 1/16W | |
| R611 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R612 | | | RK73HB1J102J | CHIP R | 1.0K | J 1/16W | |
| R613 | | | RK73HB1J103J | CHIP R | 10K | J 1/16W | |
| R614 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |
| R615 | | | RK73HB1J472J | CHIP R | 4.7K | J 1/16W | |
| R616 | | | RK73HB1J474J | CHIP R | 470K | J 1/16W | |
| R617 | | | RK73HB1J000J | CHIP R | 0 | J 1/16W | |

# PARTS LIST

TX-RX UNIT (X57-8240-XX)

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| R620 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R621-624 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R626 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R627,628 | | | RK73HB1J682J | CHIP R 6.8K J 1/16W | |
| R629 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R631 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R632 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R634 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R635 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R636 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R637,638 | | | RK73FB2B102J | CHIP R 1.0K J 1/8W | |
| R639 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R641 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R643 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R657 | | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R658,659 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R661 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R662 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R664 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R667 | | | RK73GB2A101J | CHIP R 100 J 1/10W | |
| R668 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R669-671 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R672 | | | RK73GB2A471J | CHIP R 470 J 1/10W | |
| R673 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R674 | | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R677-680 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R681 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R682,683 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R684 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R685 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R686 | | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R687 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R688 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R690 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R701 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R702 | | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R703 | | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R704 | | | RK73HB1J153J | CHIP R 15K J 1/16W | |
| R705 | | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R706 | | | RK73HB1J823J | CHIP R 82K J 1/16W | |
| R707 | | | RK73HB1J182J | CHIP R 1.8K J 1/16W | |
| R708 | | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R709 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R710 | | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R711 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R712 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R713 | | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R716 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R720 | | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R722 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R724 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R728 | | | RK73HB1J393J | CHIP R 39K J 1/16W | |
| R730 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R738 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R739 | | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R741 | | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R742 | | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R743 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R745 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R746 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R748,749 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R750 | | | RK73HB1J393J | CHIP R 39K J 1/16W | |
| R751 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R752 | | | RK73HB1J394J | CHIP R 390K J 1/16W | |
| R754 | | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R755 | | | RK73HB1J224J | CHIP R 220K J 1/16W | |
| R756 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R769 | | | RK73HB1J684J | CHIP R 680K J 1/16W | |
| R770,771 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R772 | | | RK73HB1J153J | CHIP R 15K J 1/16W | |
| R773 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R775 | | | RK73HB1J562J | CHIP R 5.6K J 1/16W | |
| R776,777 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R778 | | | RK73HB1J273J | CHIP R 27K J 1/16W | |
| R779 | | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R781 | | | RK73HB1J000J | CHIP R 0 J 1/16W | HGK,HK |
| R783 | | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R785 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R786 | | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R787 | | | RK73HB1J123J | CHIP R 12K J 1/16W | |
| R796,797 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R800 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R801 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | HK,HK2 |
| R801,802 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | HGK,HGK2 |
| R803,804 | | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R805,806 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R810 | | | RK73HB1J123J | CHIP R 12K J 1/16W | |
| R811 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R813 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R814 | | | RK73HB1J391J | CHIP R 390 J 1/16W | |
| R816 | | | RK73HB1J123J | CHIP R 12K J 1/16W | |
| R818 | | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R819,820 | | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R821,822 | | | RK73GB2A000J | CHIP R 0 J 1/10W | |
| R823 | | | RK73HB1J123J | CHIP R 12K J 1/16W | |
| R824 | | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R825 | | | RK73HB1J000J | CHIP R 0 J 1/16W | |
| R826 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R827 | | | RK73HB1J823J | CHIP R 82K J 1/16W | |
| R831,832 | | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R833 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R834 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R835 | | | RK73HB1J100J | CHIP R 10 J 1/16W | HGK,HGK2 |
| R837 | | | RK73HB1J562J | CHIP R 5.6K J 1/16W | |
| R838 | | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R839 | | | RK73EB2E100J | CHIP R 10 J 1/4W | HGK,HGK2 |
| R842-844 | | | RK73HB1J000J | CHIP R 0 J 1/16W | HGK,HGK2 |
| R845 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R846,847 | | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| D2 | | | DZ2J091(M) | ZENER DIODE | |
| D3 ,4 | | | 1SV323F | VARIABLE CAPACITANCE DIODE | |
| D7 -12 | | | 1SV282-F | VARIABLE CAPACITANCE DIODE | |
| D13 | | | 1SV278F | VARIABLE CAPACITANCE DIODE | |
| D14 | | | DA2S101 | DIODE | |
| D16 ,17 | | | RKS151KJ | DIODE | |
| D101 | | | DZ2J056(M) | ZENER DIODE | |
| D102 | | | DA3S101F | DIODE | HGK2,HK2 |
| D103 | | | RKS151KJ | DIODE | |
| D104,105 | | | HSB88AS-E | DIODE | |

# PARTS LIST

**TX-RX UNIT (X57-8240-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | Desti-nation |
|---|---|---|---|---|---|
| D106 | | | DZ2J056(M) | ZENER DIODE | |
| D107 | | | RKP351KW-1P2 | DIODE | |
| D108,109 | | | RB520SM-30 | DIODE | |
| D110,111 | | | L407CDB | DIODE (50V/1W) | |
| D112-114 | | | RN142S | DIODE | |
| D201-206 | | | 1SV278F | VARIABLE CAPACITANCE DIODE | |
| D401 | | | DZ2J180(M) | ZENER DIODE | |
| D403 | | | RB520SM-30 | DIODE | |
| D404 | | | DA2S101 | DIODE | |
| D405 | | | DB2S310 | DIODE | |
| D406 | | | DB22306 | DIODE | |
| D407 | | | RB520SM-30 | DIODE | |
| D408,409 | | | DB2S310 | DIODE | |
| D410 | | | 22ZR-10D | SURGE ABSORBER | |
| D411 | | | DSA3A1 | DIODE | |
| D502 | | | DB2S310 | DIODE | |
| D504 | | | DB2S310 | DIODE | |
| D505-510 | | | MC2850 | DIODE | |
| D511-513 | | | DB2S310 | DIODE | |
| D601 | | | DB2S310 | DIODE | |
| D701 | | | DA2S101 | DIODE | |
| D702 | | | 1SS422 | DIODE | |
| D703,704 | | | DA3S101F | DIODE | |
| D705,706 | | | EMZ6.8N | ZENER DIODE | |
| D801,802 | | | RN142S | DIODE | HGK,HGK2 |
| IC1 | | | TA7808F-NQ | ANALOGUE IC | |
| IC2 | | | SKY72310-362 | MOS-IC | |
| IC3 | | | BD7542FVM | MOS-IC | |
| IC102 | 2B | | RA60H40471101 | POWER MODULE | HGK2,HK2 |
| IC102 | 2B | | RA60H44521101 | POWER MODULE | HGK,HK |
| IC103 | | | NJM12904RB1 | MOS-IC | |
| IC201 | | | BD7542FVM | MOS-IC | |
| IC301 | | | TC7SH08FU-F | MOS-IC | |
| IC303 | | | TK10931VTL-G | ANALOGUE IC | |
| IC304 | | | BU7445HFV | MOS-IC | |
| IC401 | | | XC6209B332M-G | MOS-IC | |
| IC402 | | | XC6118C23CMR | MOS-IC | |
| IC404 | | | XC6209B502P-G | MOS-IC | |
| IC405 | | | LT1616ES6-PBF | ANALOGUE IC | |
| IC406 | | | XC6209B332M-G | MOS-IC | |
| IC407 | | | NJM2878F4-33 | BI-POLAR IC | |
| IC408 | | | XC6205B152P-G | MOS-IC | |
| IC409 | | | NJM2878F4-33 | BI-POLAR IC | |
| IC501 | | | **Note1(BGA)** | ROM IC | |
| IC502 | | | **Note1(BGA)** | ASIC | |
| IC503 | | | **Note1(BGA)** | SRAM IC | |
| IC504 | | | BD5329FVE | MOS-IC | |
| IC506 | | | SM5023CNDH-G | MOS-IC | |
| IC507 | | | **Note1(BGA)** | MOS-IC | |
| IC508 | | | TC7SH08FU-F | MOS-IC | |
| IC509 | | | TC7WH126FU-F | MOS-IC | |
| IC511 | | | TC74VHCT244AFK | MOS-IC | |
| IC512 | | | TC7WBD125AFK | MOS-IC | |
| IC513 | | | TC7WT126FU-F | MOS-IC | |
| IC514 | | | TC7WH126FU-F | MOS-IC | |
| IC515 | | | PCA9535BS | MOS-IC | |
| IC516 | | | ADM202EARNZ | MOS-IC | |
| IC701 | | | BU7462NUX | MOS-IC | |
| IC702 | | | BU7242NUX | MOS-IC | |
| IC703 | | | BU7462NUX | MOS-IC | |

| Ref. No. | Address | New parts | Parts No. | Description | Desti-nation |
|---|---|---|---|---|---|
| IC705 | | | BU7242NUX | MOS-IC | |
| IC711 | | | BU7462NUX | MOS-IC | |
| IC712 | | | R2A20178NP | DAC IC | |
| IC713 | | | TC7W53FK(F) | MOS-IC | |
| IC714 | 2A | | LA4600 | BI-POLAR IC | |
| IC716 | | | TC7WT126FU-F | MOS-IC | |
| IC801 | | | TC7WH126FU-F | MOS-IC | HGK,HGK2 |
| Q1 | | | LTC014EEBFS8 | TRANSISTOR | |
| Q2 | | | 2SJ648-A | FET | |
| Q4 | | | 2SC5383-T111 | TRANSISTOR | |
| Q5 ,6 | | | MCH3914(8)-H | FET | |
| Q8 | | | EM6M1 | FET | |
| Q9 | | | SSM3J15FS | FET | |
| Q10 ,11 | | | 2SC5108(Y)F | TRANSISTOR | |
| Q101 | | | 2SC3356-A(R24) | TRANSISTOR | |
| Q102 | | | 2SC3357-A | TRANSISTOR | |
| Q105 | | | FK330301 | FET | |
| Q106 | | | EMD5 | TRANSISTOR | |
| Q201 | | | 3SK318 | FET | |
| Q202 | | | NESG240034 | TRANSISTOR | |
| Q303 | | | 2SC5108(Y)F | TRANSISTOR | |
| Q305 | | | 2SC4215-F(Y) | TRANSISTOR | |
| Q401 | | | LTC014EEBFS8 | TRANSISTOR | |
| Q402 | | | 2SA1955A-F | TRANSISTOR | |
| Q403 | | | MTM981400BF | FET | |
| Q404 | | | 2SA1955A-F | TRANSISTOR | |
| Q405 | | | LTC014EEBFS8 | TRANSISTOR | |
| Q407 | | | FK330301 | FET | |
| Q408 | | | EMD5 | TRANSISTOR | |
| Q409 | | | EM6M1 | FET | |
| Q410 | | | 2SA1955A-F | TRANSISTOR | |
| Q411,412 | | | LTC014EEBFS8 | TRANSISTOR | |
| Q414 | | | EMD9 | TRANSISTOR | |
| Q415 | | | 2SC4738(GR)F | TRANSISTOR | |
| Q416 | | | 2SA1832(GR)F | TRANSISTOR | |
| Q417 | | | EMD5 | TRANSISTOR | |
| Q418 | | | LTC014EEBFS8 | TRANSISTOR | |
| Q501 | | | FK330301 | FET | |
| Q502 | | | LTC014TEBFS8 | TRANSISTOR | |
| Q503 | | | MTM981400BF | FET | |
| Q504 | | | LTC014TEBFS8 | TRANSISTOR | |
| Q701 | | | FK330301 | FET | |
| Q702 | | | KTC4075E(Y,GR) | TRANSISTOR | |
| Q703 | | | 2SA1832(GR)F | TRANSISTOR | |
| Q704 | | | 2SC4738(GR)F | TRANSISTOR | |
| Q705,706 | | | SSM3J15FS | FET | |
| Q708 | | | LTC014EEBFS8 | TRANSISTOR | |
| Q709 | | | SSM6N37FE | FET | |
| TH1 | | | ERTJ0EV104H | THERMISTOR(100K) | HGK2,HK2 |
| TH1 ,2 | | | ERTJ0EV104H | THERMISTOR(100K) | HGK,HK |
| TH101 | | | ERTJ0EV104H | THERMISTOR(100K) | |
| TH103 | | | ERTJ0EV104H | THERMISTOR(100K) | |
| TH701 | | | ERTJ0EV104H | THERMISTOR(100K) | |
| A801 | | | W02-3768-05 | GPS MODULE | HGK,HGK2 |



**If a part reference number is listed in a shaded box, that part does not come with the PCB.**
**Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.**