EXPLODED VIEW

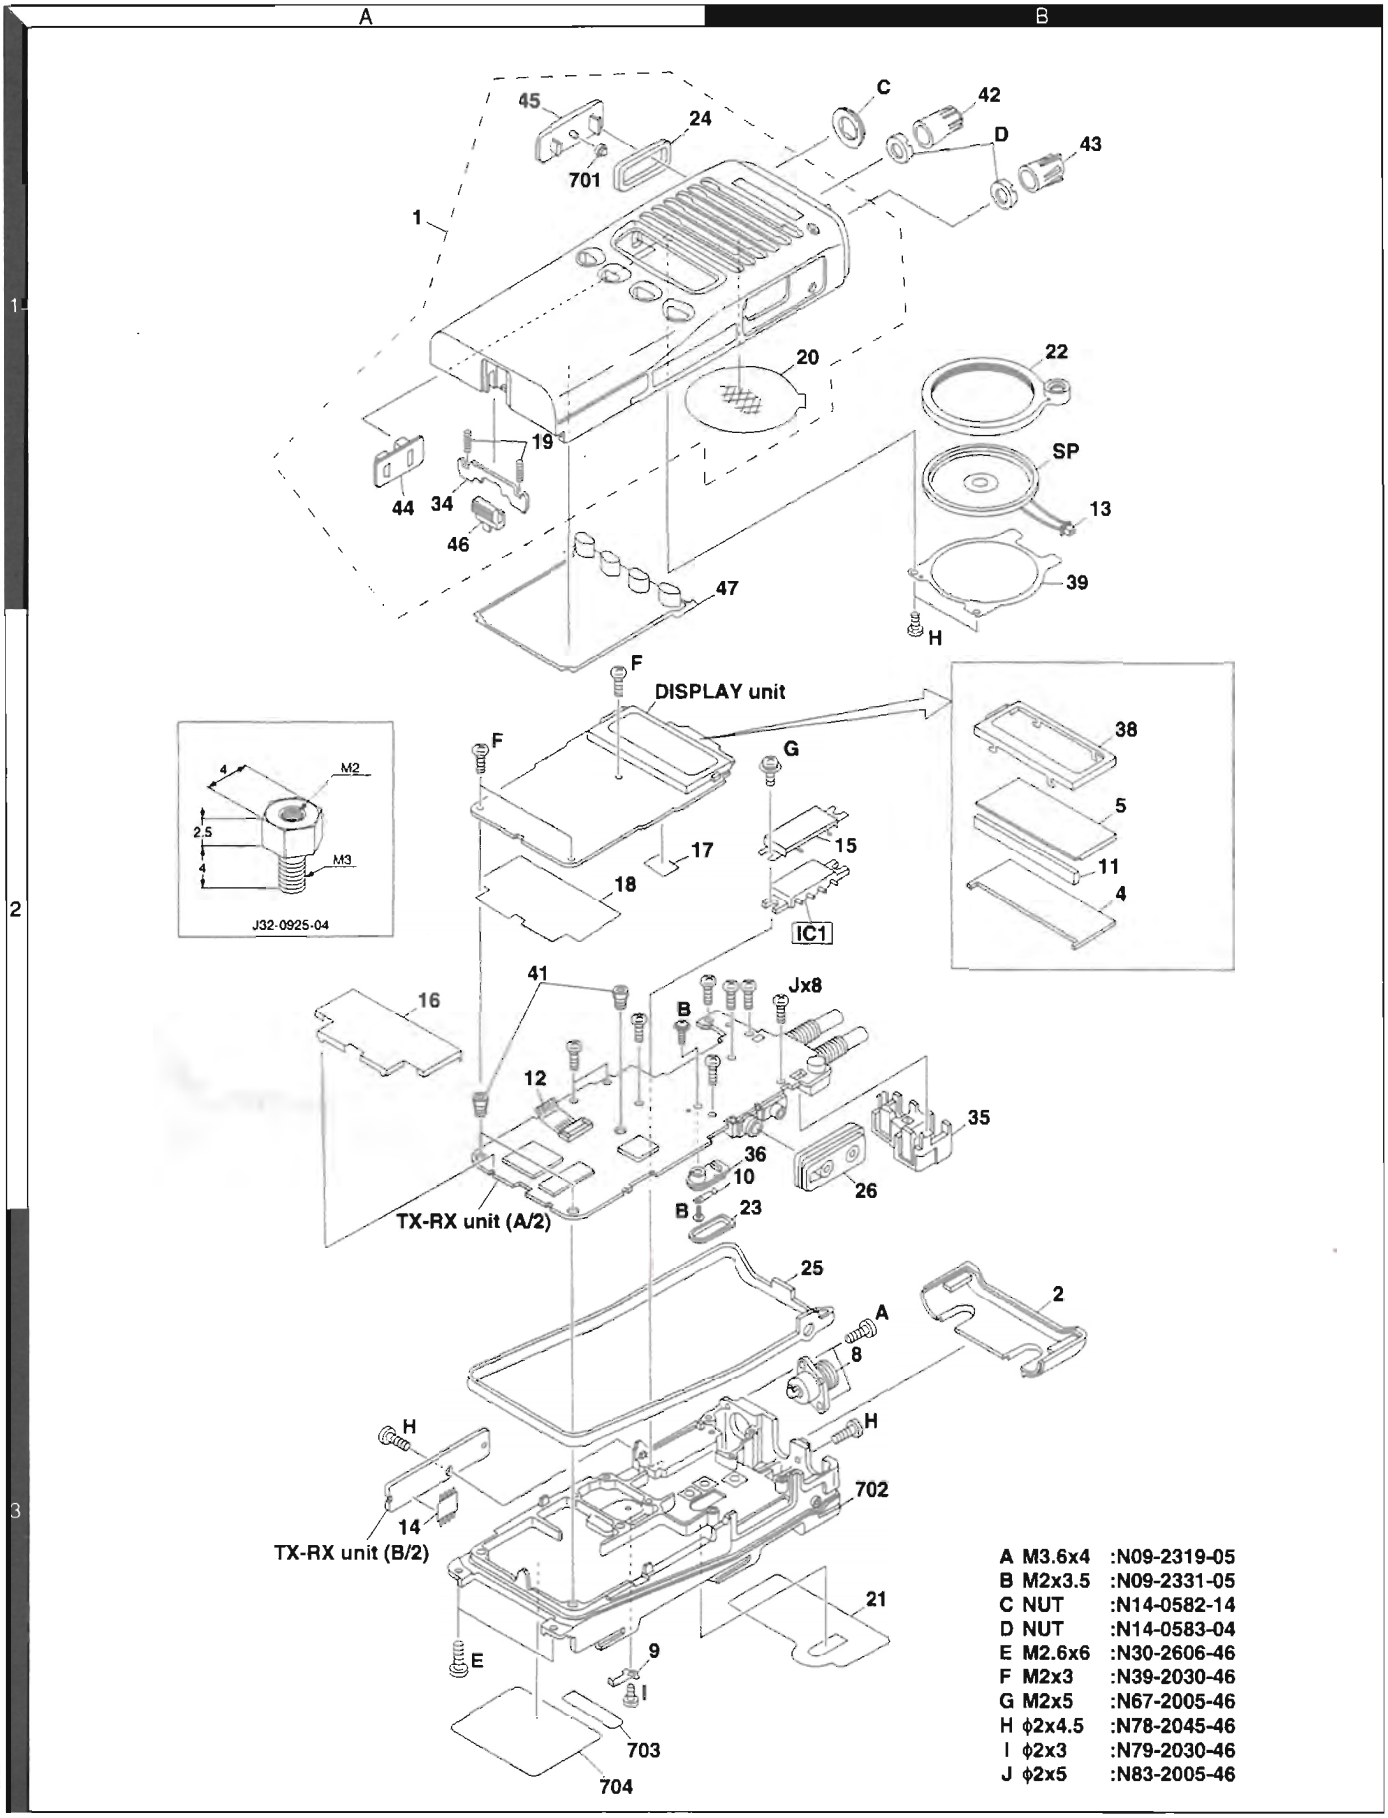

A	M3.6x4	:N09-2319-05
B	M2x3.5	:N09-2331-05
C	NUT	:N14-0582-14
D	NUT	:N14-0583-04
E	M2.6x6	:N30-2606-46
F	M2x3	:N39-2030-46
G	M2x5	:N67-2005-46
H	ϕ2x4.5	:N78-2045-46
I	ϕ2x3	:N79-2030-46
J	ϕ2x5	:N83-2005-46

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

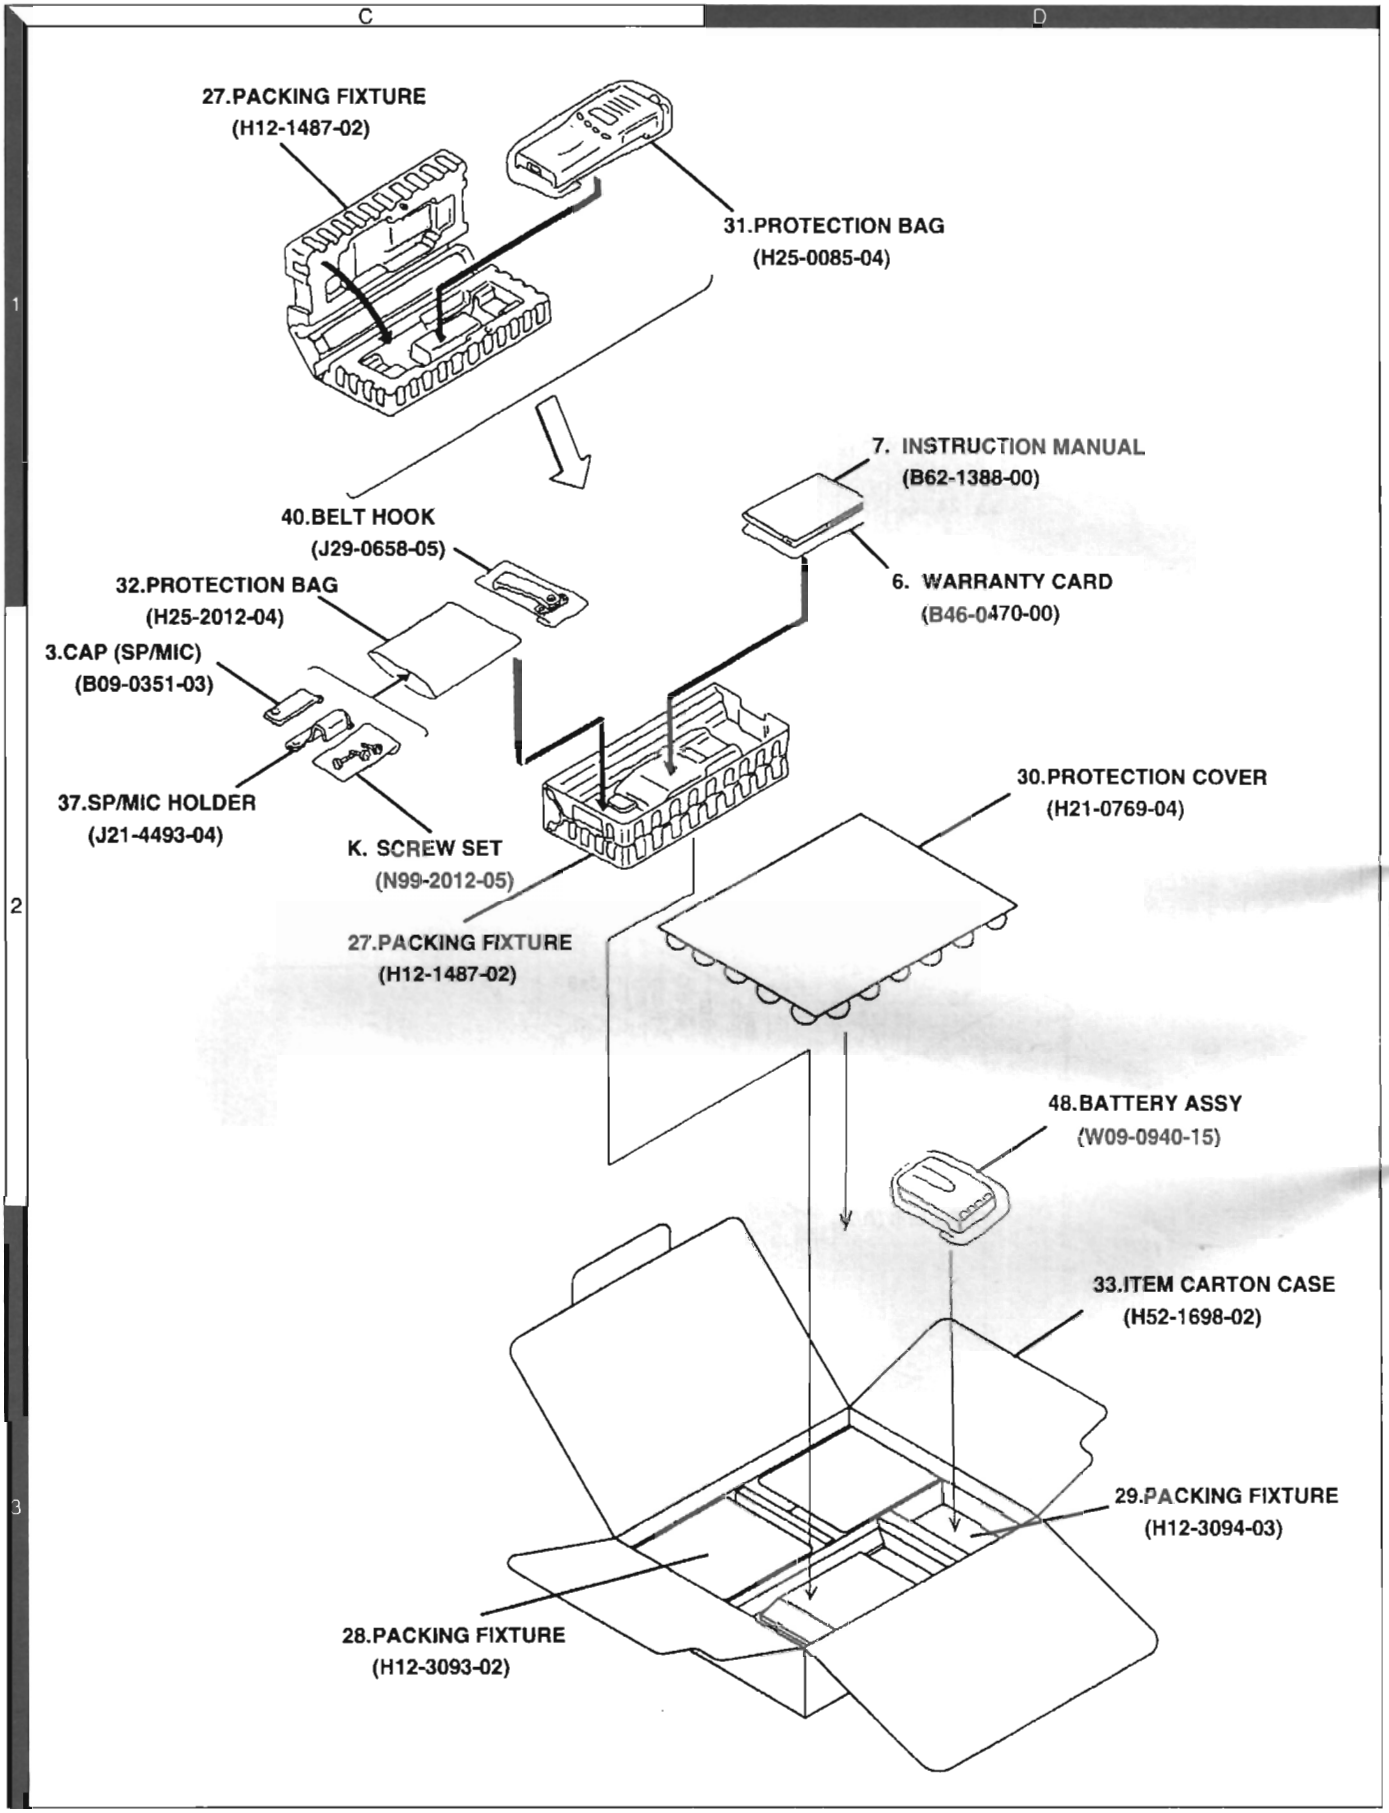
C
D
1
2
3
27.PACKING FIXTURE
(H12-1487-02)
31.PROTECTION BAG
(H25-0085-04)
7. INSTRUCTION MANUAL
(B62-1388-00)
40.BELT HOOK
(J29-0658-05)
6. WARRANTY CARD
(B46-0470-00)
32.PROTECTION BAG
(H25-2012-04)
3.CAP (SP/MIC)
(B09-0351-03)
37.SP/MIC HOLDER
(J21-4493-04)
K. SCREW SET
(N99-2012-05)
30.PROTECTION COVER
(H21-0769-04)
27.PACKING FIXTURE
(H12-1487-02)
48.BATTERY ASSY
(W09-0940-15)
33.ITEM CARTON CASE
(H52-1698-02)
29.PACKING FIXTURE
(H12-3094-03)
28.PACKING FIXTURE
(H12-3093-02)

PARTS LIST

* New Parts. ⚠ indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L: Scandinavia K: USA P: Canada
Y: PX (Far East, Hawaii) T: England E: Europe
Y: AAFES (Europe) X: Australia M: Other Areas

TK-372G

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-372G					
1	1A	*	A02-3568-23	CABINET ASSY	
2	3B		A82-0036-02	REAR PANEL	
3	2C		B09-0351-03	CAP (SP/MIC)	
4	2B		B11-1220-03	ILLUMINATION GUIDE	
5	2B		B38-0820-05	LCD	
6	1D		B46-0470-00	WARRANTY CARD	
7	1D	*	B62-1388-00	INSTRUCTION MANUAL	
8	3B		E04-0413-05	RF COAXIAL RECEPTACLE(SMA)	
9	3A		E23-1183-04	RELAY TERMINAL (BATT-)	
10	2A		E23-1184-14	RELAY TERMINAL (BATT+)	
11	2B		E29-1177-04	INTER CONNECTOR (LCD)	
12	2A		E37-0805-05	FLAT CABLE (TX/RX-DISP)	
13	1B		E37-0829-05	PROCESSED LEAD WIRE	
14	3A		E37-0830-05	FLAT CABLE (PTT)	
15	2B		F10-2302-04	SHIELDING COVER(POWER MODULE)	
16	2A		F10-2304-03	SHIELDING COVER(TX-RX UNIT)	
17	2A		F20-3307-04	INSULATING SHEET(TX-RX UNIT)	
18	2A		F20-3308-04	INSULATING SHEET(TX-RX UNIT)	
19	1A		G01-0881-04	COIL SPRING (BATT RELEASE)	
20	1B		G10-1232-04	FIBROUS SHEET (SPEAKER)	
21	3B		G13-1744-14	CUSHION (CHASSIS-BATT)	
-	-		G13-1834-04	CUSHION (TERMINAL + -)	
22	1B		G53-0882-03	PACKING (SPEAKER/ECM)	
23	3A		G53-0883-04	PACKING (BATT TERMINAL)	
24	1A		G53-0891-04	PACKING (PTT KNOB)	
25	1A	*	G53-1530-02	PACKING (SIDE)	
26	2B	*	G53-1531-03	PACKING (SP/MIC)	
27	1C,2C		H12-1487-02	PACKING FIXTURE	
28	3C	*	H12-3093-02	PACKING FIXTURE	
29	3D	*	H12-3094-03	PACKING FIXTURE	
30	2D	*	H21-0769-04	PROTECTION COVER	
31	1C		H25-0085-04	PROTECTION BAG (100/200/0.07)	
32	2C		H25-2012-04	PROTECTION BAG (75/100/0.08)	
33	1C	*	H52-1698-02	ITEM CARTON CASE	
34	1A		J19-1572-04	HOLDER (BATT RELEASE)	
35	2B		J19-5352-03	HOLDER (VOL/ENC)	
36	2A		J19-5353-14	HOLDER (BATT TERMINAL)	
37	2C		J21-4493-04	SP/MIC HOLDER	
38	2B		J21-8377-03	LCD HOLDER	
39	1B		J21-8378-04	SPEAKER FIXTURE	
40	1C		J29-0658-05	BELT HOOK	
41	2A		J32-0925-04	HEXAGON BOSS	
42	1B		K29-5331-03	KNOB (ENCODER)	
43	1B		K29-5332-03	KNOB (VOLUME)	
44	1A		K29-5333-13	BUTTON KNOB (MONI/LAMP)	
45	1A		K29-5334-13	BUTTON KNOB (PTT)	
46	1A		K29-5337-03	LEVER KNOB (BATT RELEASE)	
47	1A	*	K29-9043-02	KEY TOP	
A	3B		N09-2319-05	BINDING HEAD SCREW	
B	2A		N09-2331-05	SPECIAL SCREW	
C	1B		N14-0582-14	CIRCULAR NUT	
D	1B		N14-0583-04	CIRCULAR NUT	
E	3A		N30-2606-46	PAN HEAD MACHINE SCREW	
F	2A		N39-2030-46	PAN HEAD MACHINE SCREW	
G	2B		N67-2005-46	PAN HEAD SEMS SCREW W	
H	1B,3A,3B		N78-2045-46	PAN HEAD TAPTITE SCREW	
I	3A		N79-2030-46	PAN HEAD TAPTITE SCREW	
J	2A,2B		N83-2005-46	PAN HEAD TAPTITE SCREW	
K	2C		N99-2012-05	SCREW SET	
VR2	-		R31-0628-15	VARIABLE RESISTOR	
SP	1B		T07-0326-05	SPEAKER	
S1	-		W02-1969-15	ENCODER	
48	2D		W09-0940-15	BATTERY ASSY	
DISPLAY UNIT (X54-3250-10)					
D506			B30-2210-05	LED(TLY)	
D508-510			B30-2171-05	LED(D)	
D511			B30-2210-05	LED(TLY)	
D512-516			B30-2171-05	LED(D)	
C501-509			CC73GCH1H221J	CHIP C 220PF J	
C513			CK73GB1H102K	CHIP C 1000PF K	
C515,516			CC73GCH1H101J	CHIP C 100PF J	
CN501			E40-6012-05	FLAT CABLE CONNECTOR	
L501,502			L92-0138-05	FERRITE CHIP	
CP501			R90-0748-05	MULTI-COMP 47K X4	
CP502,503			R90-0724-05	MULTI-COMP 1K X4	
R501-510			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R511			R92-1252-05	CHIP R 0 OHM	
R512			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R513-515			RK73GB1J103J	CHIP R 10K J 1/16W	
R516			RK73GB1J473J	CHIP R 47K J 1/16W	
R517			RK73GB1J103J	CHIP R 10K J 1/16W	
R518			RK73GB1J471J	CHIP R 470 J 1/16W	
R519-522			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R523			RK73GB1J473J	CHIP R 47K J 1/16W	
R524			RK73GB1J471J	CHIP R 470 J 1/16W	
D501-504			MA2S111	DIODE	
D505			1SS373	DIODE	
D507			MA2S111	DIODE	
IC501			LC75823W	MOS IC	
Q501			2SB1132(Q,R)	TRANSISTOR	
Q502			2SC4617(S)	TRANSISTOR	
TX-RX UNIT (X57-5880-XX)					
-11:TK-372G K			**-16:TK-372G K2**	**-17:TK-372G K3**	**-13:TK-370G K4**
D18			B30-2019-05	LED(RED/GRE)	
C1			CK73GB1H471K	CHIP C 470PF K	
C2			CC73GCH1H020C	CHIP C 2.0PF C	
C3			CC73GCH1H0108	CHIP C 1.0PF B	K4

K : TK-372G K **K3 : TK-372G K3**
K2 : TK-372G K2 **K4 : TK-372G K4**

PARTS LIST

DISPLAY UNIT (X54-3250-10)
TX-RX UNIT (X57-5880-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C3			CC73GCH1H1R5B	CHIP C	1.5PF	B	K3
C3-5			CC73GCH1H010B	CHIP C	1.0PF	B	K2
C4			CC73GCH1H0R5B	CHIP C	0.5PF	B	K4
C4			CC73GCH1H010B	CHIP C	1.0PF	B	K3
C4,5			CC73GCH1H010B	CHIP C	1.0PF	B	K
C5			CC73GCH1H0R5B	CHIP C	0.5PF	B	K3
C5			CC73GCH1H020B	CHIP C	2.0PF	B	K4
C6			CK73GB1C104K	CHIP C	0.10UF	K	
C8			CC73GCH1H030B	CHIP C	3.0PF	B	
C9			CK73GB1H471K	CHIP C	470PF	K	
C10			CC73GCH1H080B	CHIP C	8.0PF	B	K,K2
C10			CC73GCH1H180G	CHIP C	18PF	G	K3
C10			CC73GCH1H270G	CHIP C	27PF	G	K4
C11			CC73GCH1H080D	CHIP C	8.0PF	D	K,K2,K3
C11			CC73GCH1H120J	CHIP C	12PF	J	K4
C12			CC73GCH1H070D	CHIP C	7.0PF	D	K,K2,K3
C12			CC73GCH1H110J	CHIP C	11PF	J	K4
C13			CK73GB1H471K	CHIP C	470PF	K	
C14			CC73GCH1H0R5B	CHIP C	0.5PF	B	
C16			CC73GCH1H060B	CHIP C	6.0PF	B	K,K3
C16			CC73GCH1H080B	CHIP C	8.0PF	B	K2
C16,17			CC73GCH1H040B	CHIP C	4.0PF	B	K4
C17			CC73GCH1H040B	CHIP C	4.0PF	B	K,K2,K3
C18			CC73GCH1H060B	CHIP C	6.0PF	B	K
C18			CC73GCH1H100C	CHIP C	10PF	C	K2,K3
C18			CC73GCH1H270J	CHIP C	27PF	J	K4
C20			CC73GCH1H020B	CHIP C	2.0PF	B	K2,K3
C20			CC73GCH1H030B	CHIP C	3.0PF	B	K
C20			CC73GCH1H040B	CHIP C	4.0PF	B	K4
C21			CC73GCH1H0R5B	CHIP C	0.5PF	B	K4
C22			CC73GCH1H101J	CHIP C	100PF	J	
C23			CC73GCH1H020B	CHIP C	2.0PF	B	K
C23			CC73GCH1H050B	CHIP C	5.0PF	B	K2,K3,K4
C24			CC73GCH1H030B	CHIP C	3.0PF	B	K
C24			CC73GCH1H060B	CHIP C	6.0PF	B	K3
C24			CC73GCH1H080B	CHIP C	8.0PF	B	K2
C24,25			CC73GCH1H080B	CHIP C	8.0PF	B	K4
C25			CC73GCH1H040B	CHIP C	4.0PF	B	K
C25			CC73GCH1H070B	CHIP C	7.0PF	B	K3
C25			CC73GCH1H090B	CHIP C	9.0PF	B	K2
C26			CC73GCH1H020B	CHIP C	2.0PF	B	K4
C26			CC73GCH1H1R5B	CHIP C	1.5PF	B	K,K2,K3
C27			CC73GCH1H0R5B	CHIP C	0.5PF	B	
C28			CC73GCH1H060D	CHIP C	6.0PF	D	K,K2,K3
C28			CC73GCH1H070D	CHIP C	7.0PF	D	K4
C29			CC73GCH1H220J	CHIP C	22PF	J	
C30			CC73GCH1H060D	CHIP C	6.0PF	D	K,K2,K3
C30			CC73GCH1H080D	CHIP C	8.0PF	D	K4
C31			C92-0507-05	CHIP-TAN	4.7UF	6.3WV	
C32			CK73GB1C104K	CHIP C	0.10UF	K	
C33			CC73GCH1H060B	CHIP C	6.0PF	B	K
C33			CC73GCH1H080B	CHIP C	8.0PF	B	K3,K4
C33			CC73GCH1H100C	CHIP C	10PF	C	K2
C35-41			CK73GB1H471K	CHIP C	470PF	K	
C42-44			CC73GCH1H101J	CHIP C	100PF	J	
C45			CK73GB1H471K	CHIP C	470PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C48,49			C92-0001-05	CHIP-C	0.1UF	35WV	
C51			C92-0604-05	CHIP-TAN	1.0UF	16WV	K,K2
C51			C92-0585-05	CHIP-TAN	4.7UF	16WV	K3,K4
C52			CC73GCH1H020B	CHIP C	2.0PF	B	K3
C52			CC73GCH1H030B	CHIP C	3.0PF	B	K2,K4
C52			CC73GCH1H040B	CHIP C	4.0PF	B	K
C53			CK73GB1H471K	CHIP C	470PF	K	
C54			CK73FB1C474K	CHIP C	0.47UF	K	
C55			CK73GB1H471K	CHIP C	470PF	K	
C57			CK73FB1C474K	CHIP C	0.47UF	K	
C59			CK73GB1H103K	CHIP C	0.010UF	K	
C60			CK73GB1H103K	CHIP C	0.010UF	K	
C62			CC73GCH1H560J	CHIP C	56PF	J	
C63			CC73GCH1H070B	CHIP C	7.0PF	B	
C64			CC73GCH1H010B	CHIP C	1.0PF	B	
C68			C92-0565-05	CHIP-TAN	6.8UF	10WV	
C70			CK73GB1H103K	CHIP C	0.010UF	K	
C71			CC73GCH1H101J	CHIP C	100PF	J	
C72			CC73GCH1H180G	CHIP C	18PF	G	K2,K3,K4
C72			CC73GCH1H330G	CHIP C	33PF	G	K
C73			CK73GB1H471K	CHIP C	470PF	K	
C74			CK73FB1E104K	CHIP C	0.10UF	K	
C75			CK73GB1H471K	CHIP C	470PF	K	
C76			CK73GB1H102K	CHIP C	1000PF	K	
C77			CC73GCH1H010B	CHIP C	1.0PF	B	K3,K4
C77			CC73GCH1H030B	CHIP C	3.0PF	B	K
C77			CC73GCH1H040B	CHIP C	4.0PF	B	K2
C78			CC73GCH1H470J	CHIP C	47PF	J	
C81			CC73GCH1H010C	CHIP C	1.0PF	C	
C82			CK73GB1H102K	CHIP C	1000PF	K	K
C84,85			CK73GB1H471K	CHIP C	470PF	K	
C86,87			CC73GCH1H100D	CHIP C	10PF	D	
C88			CC73GCH1H020B	CHIP C	2.0PF	B	K2
C88			CC73GCH1H040B	CHIP C	4.0PF	B	K,K4
C88			CC73GCH1H1R5B	CHIP C	1.5PF	B	K3
C89			CC73GCH1H070B	CHIP C	7.0PF	B	
C90			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C94			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C95,96			CK73GB1H471K	CHIP C	470PF	K	
C99			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C99			CK73GB1C104K	CHIP C	0.10UF	K	
C100			C92-0507-05	CHIP-TAN	4.7UF	6.3WV	
C101			CK73GB1H471K	CHIP C	470PF	K	
C104			CK73GB1H471K	CHIP C	470PF	K	
C107,108			CK73GB1C104K	CHIP C	0.10UF	K	
C109			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C110			CK73GB1H103K	CHIP C	0.010UF	K	
C111			CK73GB1H471K	CHIP C	470PF	K	
C112			CC73GCH1H050B	CHIP C	5.0PF	B	
C113			CK73GB1H471K	CHIP C	470PF	K	
C114			CK73GB1H391K	CHIP C	390PF	K	
C115			CK73GB1C104K	CHIP C	0.10UF	K	
C116			CK73GB1H471K	CHIP C	470PF	K	K3,K4
C118			CK73GB1H471K	CHIP C	470PF	K	
C119			CK73FB1A105K	CHIP C	1.0UF	K	
C120,121			CK73GB1H471K	CHIP C	470PF	K	

K : TK-372G K　　K3 : TK-372G K3
K2 : TK-372G K2　　K4 : TK-372G K4

PARTS LIST

TX-RX UNIT (X57-5880-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C122			CK73FB1A105K	CHIP C	1.0UF	K	
C123			CK73GB1H391K	CHIP C	390PF	K	
C124			CC73GCH1H390J	CHIP C	39PF	J	K,K4
C124			CC73GCH1H560J	CHIP C	56PF	J	K2,K3
C125,126			CK73GB1H103K	CHIP C	0.010UF	K	
C128			CC73GCH1H040C	CHIP C	4.0PF	C	
C130			CK73GB1H471K	CHIP C	470PF	K	
C131			CC73GCH1H100D	CHIP C	10PF	D	
C132			CK73GB1H103K	CHIP C	0.010UF	K	
C133			CC73GCH1H820J	CHIP C	82PF	J	
C135			CK73GB1H103K	CHIP C	0.010UF	K	
C136			CC73GCH1H060B	CHIP C	6.0PF	B	K4
C136			CC73GCH1H080D	CHIP C	8.0PF	D	K,K2,K3
C137			CK73GB1H471K	CHIP C	470PF	K	
C138			CK73GB1C104K	CHIP C	0.10UF	K	
C139			CC73GCH1H181J	CHIP C	180PF	J	
C140			CK73GB1H103K	CHIP C	0.010UF	K	
C141			CK73GB1C104K	CHIP C	0.10UF	K	
C142			CK73FB1A105K	CHIP C	1.0UF	K	
C143,144			CK73GB1H471K	CHIP C	470PF	K	
C146,147			CK73GB1C104K	CHIP C	0.10UF	K	
C148			CK73GB1H103K	CHIP C	0.010UF	K	
C150			CK73GB1H102K	CHIP C	1000PF	K	
C151-153			CK73GB1H471K	CHIP C	470PF	K	
C155			C92-0662-05	CHIP-TAN	15UF	6.3WV	
C156,157			CK73GB1H471K	CHIP C	470PF	K	
C158			CK73FB1A105K	CHIP C	1.0UF	K	
C159			CK73GB1H471K	CHIP C	470PF	K	
C161			CK73GB1H471K	CHIP C	470PF	K	
C162			CK73GB1H103K	CHIP C	0.010UF	K	
C163,164			CK73GB1H471K	CHIP C	470PF	K	
C165			CK73GB1H103K	CHIP C	0.010UF	K	
C166			CK73FF1E104Z	CHIP C	0.10UF	Z	
C167			CK73GB1H471K	CHIP C	470PF	K	
C170,171			CK73GB1H471K	CHIP C	470PF	K	
C173			C92-0567-05	CHIP-TAN	68UF	6.3WV	
C174			CK73GB1H471K	CHIP C	470PF	K	
C176			CC73GCH1H101J	CHIP C	100PF	J	
C177			CK73GB1C473K	CHIP C	0.047UF	K	
C178			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C179			CK73GB1C104K	CHIP C	0.10UF	K	
C180			CK73GB1H103K	CHIP C	0.010UF	K	
C181			CK73GB1C393K	CHIP C	0.039UF	K	
C182			CK73GB1H102K	CHIP C	1000PF	K	
C183,184			CK73GB1C104K	CHIP C	0.10UF	K	
C185			CC73GCH1H180J	CHIP C	18PF	J	
C186,187			CK73GB1C104K	CHIP C	0.10UF	K	
C189			CK73GB1H103K	CHIP C	0.010UF	K	
C190,191			CK73GB1C104K	CHIP C	0.10UF	K	
C192,193			CC73GCH1H300J	CHIP C	30PF	J	
C194			C92-0507-05	CHIP-TAN	4.7UF	6.3WV	
C196			CC73GCH1H101J	CHIP C	100PF	J	
C198,199			CK73GB1H103K	CHIP C	0.010UF	K	
C200			CK73GB1A224K	CHIP C	0.22UF	K	
C201			CK73GB1H103K	CHIP C	0.010UF	K	
C202,203			CK73GB1C104K	CHIP C	0.10UF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C204			CK73FB1C474K	CHIP C	0.47UF	K	
C205			CK73GB1H103K	CHIP C	0.010UF	K	
C206-208			CK73GB1C104K	CHIP C	0.10UF	K	
C209			CK73GB1H392K	CHIP C	3900PF	K	
C210			CK73GB1H102K	CHIP C	1000PF	K	
C211			C92-0507-05	CHIP-TAN	4.7UF	6.3WV	
C212			CK73GB1H122K	CHIP C	1200PF	K	
C213			CK73GB1H103K	CHIP C	0.010UF	K	
C215			CK73GB1C104K	CHIP C	0.10UF	K	
C216			CK73GB1H392K	CHIP C	3900PF	K	
C217			CK73GB1E153K	CHIP C	0.015UF	K	
C218			CK73FB1H563K	CHIP C	0.056UF	K	
C219,220			CK73GB1C104K	CHIP C	0.10UF	K	
C221			CK73GB1H471K	CHIP C	470PF	K	
C222			CK73GB1H103K	CHIP C	0.010UF	K	
C223			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C224			CK73GB1H122K	CHIP C	1200PF	K	
C225			CC73GCH1H101J	CHIP C	100PF	J	
C226,227			CK73GB1H562J	CHIP C	5600PF	J	
C229			CK73FB1H471K	CHIP C	470PF	K	
C230			CK73GB1H562J	CHIP C	5600PF	J	
C231			C92-0521-05	CHIP-TAN	0.47UF	20WV	
C232			CK73GB1H471K	CHIP C	470PF	K	
C233			CC73GCH1H151J	CHIP C	150PF	J	
C234,235			CK73GB1H272J	CHIP C	2700PF	J	
C236			CK73GB1C104K	CHIP C	0.10UF	K	
C238			CK73GB1H392K	CHIP C	3900PF	K	
C239			CK73GB1C104K	CHIP C	0.10UF	K	
C240			CK73GB1H272J	CHIP C	2700PF	J	
C241			CK73GB1H471K	CHIP C	470PF	K	
C242			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C243			CK73FB1A105K	CHIP C	1.0UF	K	
C244			C92-0560-05	CHIP-TAN	10UF	6.3WV	
C245			CK73GB1H471K	CHIP C	470PF	K	
C246			CK73FB1A105K	CHIP C	1.0UF	K	
C247			CK73GB1E123K	CHIP C	0.012UF	K	
C248			CK73GB1H103K	CHIP C	0.010UF	K	
C249			CK73GB1H222K	CHIP C	2200PF	K	
C250			CK73GB1C683K	CHIP C	0.068UF	K	
C251			CK73GB1C104K	CHIP C	0.10UF	K	
C252			CK73GB1C473K	CHIP C	0.047UF	K	
C253,254			CK73GB1H103K	CHIP C	0.010UF	K	
C255			CK73GB1H183K	CHIP C	0.018UF	K	
C257			CK73GB1E153K	CHIP C	0.015UF	K	
C258			CK73GB1C333K	CHIP C	0.033UF	K	
C259			CC73GCH1H121J	CHIP C	120PF	J	
C260			CK73GB1H183K	CHIP C	0.018UF	K	
C261			CK73GB1E153K	CHIP C	0.015UF	K	
C262			CK73GB1H102K	CHIP C	1000PF	K	
C263			CK73GB1C104K	CHIP C	0.10UF	K	
C265,266			CK73GB1C104K	CHIP C	0.10UF	K	
C268			CK73GB1H102K	CHIP C	1000PF	K	
C269			CK73GB1H152K	CHIP C	1500PF	K	
C270			CK73GB1H222K	CHIP C	2200PF	K	
C271			CK73GB1H102K	CHIP C	1000PF	K	
C302			CC73GCH1H0R3B	CHIP C	0.3PF	B	K3

K : TK-372G K **K3 : TK-372G K3**
K2 : TK-372G K2 **K4 : TK-372G K4**

PARTS LIST

TX-RX UNIT (X57-5880-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C302			CC73GCH1H0R5B	CHIP C 0.5PF B	K2
C302			CC73GCH1H010B	CHIP C 1.0PF B	K
C302			CC73GCH1H020B	CHIP C 2.0PF B	K4
C303			CC73GCH1H020B	CHIP C 2.0PF B	K
C303			CC73GCH1H040B	CHIP C 4.0PF B	K2
C303			CC73GCH1H1R5B	CHIP C 1.5PF B	K3
C303			CC73GCH1H220G	CHIP C 22PF G	K4
C304			CC73GCH1H100D	CHIP C 10PF D	K2
C304			CC73GCH1H150G	CHIP C 15PF G	K,K3
C304			CK73GB1H471K	CHIP C 470PF K	K4
C305,306			CC73GCH1HR75B	CHIP C 0.75PF B	K4
C305,306			CC73GCH1H0R5B	CHIP C 0.5PF B	K,K2,K3
C307			CC73GCH1H220J	CHIP C 22PF J	
C309			CK73GB1H471K	CHIP C 470PF K	
C311			CC73GCH1H020B	CHIP C 2.0PF B	K
C311			CC73GCH1H030B	CHIP C 3.0PF B	K4
C311			CC73GCH1H060B	CHIP C 6.0PF B	K2
C311			CC73GCH1H1R5B	CHIP C 1.5PF B	K3
C312			CC73GCH1H0R3B	CHIP C 0.3PF B	K3
C312			CC73GCH1H010B	CHIP C 1.0PF B	K4
C312			CC73GCH1H030B	CHIP C 3.0PF B	K2
C312			CC73GCH1H040B	CHIP C 4.0PF B	K
C314			CC73GCH1H010B	CHIP C 1.0PF B	K3
C314			CC73GCH1H020B	CHIP C 2.0PF B	K2
C314			CC73GCH1H030B	CHIP C 3.0PF B	K
C316,317			CK73GB1H471K	CHIP C 470PF K	
C319			CK73GB1H471K	CHIP C 470PF K	K3,K4
C320			CC73GCH1H030B	CHIP C 3.0PF B	K4
C320,321			CC73GCH1H040B	CHIP C 4.0PF B	K3
C322			CK73GB1H471K	CHIP C 470PF K	K3
C325,326			CK73GB1H471K	CHIP C 470PF K	
C327			CC73GCH1H080B	CHIP C 8.0PF B	K
C327			CC73GCH1H120G	CHIP C 12PF G	K2,K4
C327			CC73GCH1H270G	CHIP C 27PF G	K3
C328,329			CK73GB1H471K	CHIP C 470PF K	K3,K4
C330,331			CC73GCH1H040B	CHIP C 4.0PF B	K3
C330,331			CC73GCH1H050B	CHIP C 5.0PF B	K4
C332			CC73GCH1H040B	CHIP C 4.0PF B	K4
C332			CC73GCH1H050B	CHIP C 5.0PF B	K3
TC1,2			C05-0384-05	CERAMIC TRIMMER CAP(10P)	
TC301-303			C05-0383-05	CERAMIC TRIMMER CAP(6P)	K,K2
TC301,302			C05-0383-05	CERAMIC TRIMMER CAP(6P)	K4
TC302,303			C05-0382-05	CERAMIC TRIMMER CAP(3P)	K3
TC303			C05-0382-05	CERAMIC TRIMMER CAP(3P)	K4
CN1			E40-6012-05	FLAT CABLE CONNECTOR	
CN3			E40-5662-05	PIN ASSY SOCKET	
CN5			E40-5932-05	PIN ASSY SOCKET	
J1			E11-0457-05	PHONE JACK (2.5/3.5D)	
F1			F53-0130-05	FUSE	
F1			F53-0217-05	FUSE	
CD1			L79-1474-05	TUNING COIL	
CF1			L72-0968-05	CERAMIC FILTER	
CF2			L72-0969-05	CERAMIC FILTER	
L1			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	K2,K3
L1			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	K

Ref. No.	Address	New parts	Parts No.	Description	Destination
L1			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	K4
L2			L92-0138-05	FERRITE CHIP	
L3			L40-3391-86	SMALL FIXED INDUCTOR(3.3U)	
L4			L33-0744-05	SMALL FIXED INDUCTOR	K,K4
L4			L33-0750-05	SMALL FIXED INDUCTOR	K2
L4			L33-1266-05	SMALL FIXED INDUCTOR	K3
L5-7			L34-4546-05	AIR-CORE COIL	K2,K3
L5-7			L34-4547-05	AIR-CORE COIL	K
L5,6			L34-4547-05	AIR-CORE COIL	K4
L7			L34-4546-05	AIR-CORE COIL	K4
L8			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	
L9			L40-1075-92	SMALL FIXED INDUCTOR(10NH)	K,K2,K3
L9			L40-1275-92	SMALL FIXED INDUCTOR(12NH)	K4
L10			L40-1095-34	SMALL FIXED INDUCTOR(1UH)	
L11			L40-1092-81	SMALL FIXED INDUCTOR	
L12			L40-2702-86	SMALL FIXED INDUCTOR(27U)	K2,K3,K4
L12			L40-3391-86	SMALL FIXED INDUCTOR(3.3U)	K
L14			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	K,K4
L14,15			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	K2,K3
L15			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	K
L15			L40-2775-92	SMALL FIXED INDUCTOR(27NH)	K4
L17			L34-4546-05	AIR-CORE COIL	K2,K3
L17			L34-4547-05	AIR-CORE COIL	K,K4
L18-20			L92-0138-05	FERRITE CHIP	
L21			L40-1275-92	SMALL FIXED INDUCTOR(12NH)	K3
L21			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	K,K2,K4
L22			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	K
L22			L40-1585-92	SMALL FIXED INDUCTOR(150NH)	K2,K3
L22			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	K4
L23			L92-0138-05	FERRITE CHIP	
L24			L40-5681-86	SMALL FIXED INDUCTOR(0.56U)	
L25			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	K
L25			L40-1585-92	SMALL FIXED INDUCTOR(150NH)	K2,K3
L25			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	K4
L26			L33-0744-05	SMALL FIXED INDUCTOR	K,K2,K3
L26			L33-0745-05	SMALL FIXED INDUCTOR	K4
L27			L92-0149-05	FERRITE CHIP	
L30			L40-2702-86	SMALL FIXED INDUCTOR(27U)	
L31			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	K
L31			L40-1585-92	SMALL FIXED INDUCTOR(150NH)	K2,K3
L31			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	K4
L32			L40-1005-85	SMALL FIXED INDUCTOR(10U)	
L35			L40-1075-92	SMALL FIXED INDUCTOR(10NH)	K2
L35			L40-1275-92	SMALL FIXED INDUCTOR(12NH)	K,K3
L35			L40-2775-92	SMALL FIXED INDUCTOR(27NH)	K4
L36			L40-1085-85	SMALL FIXED INDUCTOR(0.10U)	
L37			L40-6885-85	SMALL FIXED INDUCTOR(0.68U)	
L38			L92-0138-05	FERRITE CHIP	
L39			L92-0149-05	FERRITE CHIP	
L40,41			L92-0138-05	FERRITE CHIP	
L42			L92-0131-05	FERRITE CHIP	
L43,44			L92-0138-05	FERRITE CHIP	
L301			L40-3975-92	SMALL FIXED INDUCTOR 39NH)	K2
L301			L40-5675-92	SMALL FIXED INDUCTOR(56NH)	K,K3,K4
L302			L34-4546-05	AIR-CORE COIL	
L303			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	K4

K : TK-372G K K3 : TK-372G K3
K2 : TK-372G K2 K4 : TK-372G K4

PARTS LIST

TX-RX UNIT (X57-5880-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
L303			L40-3975-92	SMALL FIXED INDUCTOR(39NH)	K2
L303			L40-5675-92	SMALL FIXED INDUCTOR(56NH)	K,K3
L304-306			L34-4546-05	AIR-CORE COIL	K,K2
L304,305			L34-4546-05	AIR-CORE COIL	K3,K4
L307			L40-4785-85	SMALL FIXED INDUCTOR(0.47U)	
L308-310			L34-4546-05	AIR-CORE COIL	K,K2
L308,309			L34-4546-05	AIR-CORE COIL	K3,K4
L311			L33-1301-05	SMALL FIXED INDUCTOR	K3
L311			L40-8268-53	SMALL FIXED INDUCTOR(8.2NH)	K4
L312			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	K2
L312			L40-2775-92	SMALL FIXED INDUCTOR(27NH)	K
L313			L40-1275-92	SMALL FIXED INDUCTOR(12NH)	K3
X1		*	L77-1833-05	TCXO (16.8MHZ)	
X2			L78-0479-05	RESONATOR (3.58MHZ)	
X3			L77-1810-05	CRYSTAL RESONATOR(9.8304MHZ)	
X3			L77-1835-05	CRYSTAL RESONATOR(9.8304MHZ)	
XF1			L71-0546-05	CRYSTAL FILTER (49.95MHZ)	
CP1			R90-0724-05	MULTI-COMP 1K X4	
CP2-9			R90-0741-05	MULTIPLE RESISTOR	
CP10			R90-0724-05	MULTI-COMP 1K X4	
CP11-18			R90-0741-05	MULTIPLE RESISTOR	
CP19			R90-0718-05	MULTI-COMP 4.7K X4	
CP20			RK75HA1J472J	CHIP-COM 4.7K J 1/16W	
R1			RK73GB1J124J	CHIP R 120K J 1/16W	K,K2
R1			RK73GB1J394J	CHIP R 390K J 1/16W	K3,K4
R2			RK73GB1J104J	CHIP R 100K J 1/16W	
R3			RK73GB1J392J	CHIP R 3.9K J 1/16W	K
R3			RK73GB1J472J	CHIP R 4.7K J 1/16W	K2,K3,K4
R4			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R5			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R6			R92-1252-05	CHIP R 0 OHM	
R7			RK73GB1J100J	CHIP R 10 J 1/16W	
R8			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R9			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R10			RK73GB1J331J	CHIP R 330 J 1/16W	
R13			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R14			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R16			RK73GB1J391J	CHIP R 390 J 1/16W	
R17			RK73GB1J103J	CHIP R 10K J 1/16W	
R18			RK73GB1J124J	CHIP R 120K J 1/16W	
R19			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R20			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R21			RK73GB1J331J	CHIP R 330 J 1/16W	
R22			RK73GB1J561J	CHIP R 560 J 1/16W	
R23			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R24			RK73GB1J682J	CHIP R 6.8K J 1/16W	
R25			RK73GB1J470J	CHIP R 47 J 1/16W	
R26			RK73GB1J561J	CHIP R 560 J 1/16W	
R27			RK73GB1J390J	CHIP R 39 J 1/16W	
R28,29			RK73GB1J271J	CHIP R 270 J 1/16W	
R30			RK73GB1J152J	CHIP R 1.5K J 1/16W	K4
R30			RK73GB1J182J	CHIP R 1.8K J 1/16W	K3
R30			RK73GB1J472J	CHIP R 4.7K J 1/16W	K,K2
R31			RK73GB1J101J	CHIP R 100 J 1/16W	
R33			RK73GB1J101J	CHIP R 100 J 1/16W	
R34			RK73GB1J473J	CHIP R 47K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R35			RK73GB1J104J	CHIP R 100K J 1/16W	
R36			RK73GB1J473J	CHIP R 47K J 1/16W	
R37			RK73GB1J392J	CHIP R 3.9K J 1/16W	
R38			RK73GB1J101J	CHIP R 100 J 1/16W	
R39			RK73GB1J220J	CHIP R 22 J 1/16W	
R41			RK73GB1J100J	CHIP R 10 J 1/16W	
R42			RK73GB1J220J	CHIP R 22 J 1/16W	
R43			RK73GB1J101J	CHIP R 100 J 1/16W	
R44			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R45			RK73GB1J222J	CHIP R 2.2K J 1/16W	K
R45			RK73GB1J562J	CHIP R 5.6K J 1/16W	K2,K3,K4
R46			RN73GH1J154D	CHIP R 150K D 1/16W	
R47			RK73GB1J104J	CHIP R 100K J 1/16W	
R48			RK73GB1J334J	CHIP R 330K J 1/16W	
R49			RK73GB1J103J	CHIP R 10K J 1/16W	
R50			RN73GH1J154D	CHIP R 150K D 1/16W	
R51			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R52			RK73GB1J181J	CHIP R 180 J 1/16W	
R53			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R54			RN73GH1J154D	CHIP R 150K D 1/16W	
R55			RK73GB1J105J	CHIP R 1.0M J 1/16W	
R56-58			RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R59			RN73GH1J154D	CHIP R 150K D 1/16W	
R60			R92-1252-05	CHIP R 0 OHM	
R61			RK73GB1J104J	CHIP R 100K J 1/16W	
R62			RN73GH1J154D	CHIP R 150K D 1/16W	
R64,65			RK73GB1J104J	CHIP R 100K J 1/16W	
R67			RK73GB1J273J	CHIP R 27K J 1/16W	
R68			RN73GH1J154D	CHIP R 150K D 1/16W	
R69			RK73GB1J220J	CHIP R 22 J 1/16W	
R70			RK73GB1J104J	CHIP R 100K J 1/16W	K
R71			RK73GB1J124J	CHIP R 120K J 1/16W	
R72			RK73GB1J103J	CHIP R 10K J 1/16W	
R73			RK73GB1J273J	CHIP R 27K J 1/16W	
R74,75			RK73GB1J223J	CHIP R 22K J 1/16W	
R76			R92-0670-05	CHIP R 0 OHM	
R77			R92-1252-05	CHIP R 0 OHM	
R78,79			RK73GB1J153J	CHIP R 15K J 1/16W	
R80,81			RK73GB1J223J	CHIP R 22K J 1/16W	
R82			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R83			RK73GB1J104J	CHIP R 100K J 1/16W	K3,K4
R84			RK73GB1J394J	CHIP R 390K J 1/16W	K2,K3,K4
R84			RK73GB1J474J	CHIP R 470K J 1/16W	K
R85			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R86			RK73GB1J334J	CHIP R 330K J 1/16W	
R87			R92-1252-05	CHIP R 0 OHM	
R88			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R89			RK73GB1J821J	CHIP R 820 J 1/16W	
R90,91			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R92			RK73GB1J100J	CHIP R 10 J 1/16W	
R93			RK73GB1J332J	CHIP R 3.3K J 1/16W	
R94			RK73GB1J221J	CHIP R 220 J 1/16W	
R95			RK73GB1J102J	CHIP R 1.0K J 1/16W	K2
R95			RK73GB1J222J	CHIP R 2.2K J 1/16W	K,K3
R95			RK73GB1J561J	CHIP R 560 J 1/16W	K4
R96			RK73GB1J181J	CHIP R 180 J 1/16W	K,K3,K4

K : TK-372G K **K3 : TK-372G K3**
K2 : TK-372G K2 **K4 : TK-372G K4**

PARTS LIST

TX-RX UNIT (X57-5880-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R96			RK73GB1J820J	CHIP R 82 J 1/16W	K2
R97			RK73GB1J183J	CHIP R 18K J 1/16W	
R98			RK73GB1J473J	CHIP R 47K J 1/16W	
R99			RK73GB1J684J	CHIP R 680K J 1/16W	
R100			RK73GB1J473J	CHIP R 47K J 1/16W	
R101			RK73GB1J104J	CHIP R 100K J 1/16W	
R102,103			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R104			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R105			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R106			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R107			RK73GB1J470J	CHIP R 47 J 1/16W	
R108			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R109			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R110,111			RK73GB1J103J	CHIP R 10K J 1/16W	
R112			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R113			RK73GB1J391J	CHIP R 390 J 1/16W	
R114,115			RK73GB1J103J	CHIP R 10K J 1/16W	
R116,117			RK73GB1J153J	CHIP R 15K J 1/16W	
R118			RK73GB1J473J	CHIP R 47K J 1/16W	
R119			RS2-1252-05	CHIP R 0 OHM	
R120,121			RK73GB1J473J	CHIP R 47K J 1/16W	
R122			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R123			RK73GB1J104J	CHIP R 100K J 1/16W	
R124			RK73GB1J334J	CHIP R 330K J 1/16W	
R126			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R127			RK73GB1J333J	CHIP R 33K J 1/16W	
R128			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R129			RK73GB1J224J	CHIP R 220K J 1/16W	
R130			RS2-1252-05	CHIP R 0 OHM	
R131			RK73GB1J101J	CHIP R 100 J 1/16W	
R132			RK73GB1J104J	CHIP R 100K J 1/16W	
R133			RS2-1252-05	CHIP R 0 OHM	
R135			RK73GB1J100J	CHIP R 10 J 1/16W	
R137			RK73GB1J101J	CHIP R 100 J 1/16W	
R138			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R139			RK73GB1J151J	CHIP R 150 J 1/16W	
R140			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R142			RS2-1252-05	CHIP R 0 OHM	
R143			RK73GB1J184J	CHIP R 180K J 1/16W	
R144			RS2-1252-05	CHIP R 0 OHM	
R145			RK73GB1J474J	CHIP R 470K J 1/16W	
R146			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R147			RK73GB1J470J	CHIP R 47 J 1/16W	
R148			RK73GB1J220J	CHIP R 22 J 1/16W	
R149			RK73GB1J104J	CHIP R 100K J 1/16W	
R150			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R151			RK73GB1J473J	CHIP R 47K J 1/16W	
R152			RK73GB1J823J	CHIP R 82K J 1/16W	
R153			RK73GB1J104J	CHIP R 100K J 1/16W	
R154			RK73GB1J564J	CHIP R 560K J 1/16W	
R155			RK73GB1J473J	CHIP R 47K J 1/16W	
R156			RN73GH1J683D	CHIP R 68K D 1/16W	
R157			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R158			RS2-1252-05	CHIP R 0 OHM	
R159			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R160			RK73GB1J222J	CHIP R 2.2K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R161			RK73GB1J563J	CHIP R 56K J 1/16W	
R162			RN73GH1J333D	CHIP R 33K D 1/16W	
R163			RN73GH1J274D	CHIP R 270K D 1/16W	
R164			RK73GB1J184J	CHIP R 180K J 1/16W	
R165			RK73GB1J473J	CHIP R 47K J 1/16W	
R166			RK73GB1J103J	CHIP R 10K J 1/16W	
R167			RK73GB1J564J	CHIP R 560K J 1/16W	
R168			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R169			RK73GB1J473J	CHIP R 47K J 1/16W	
R170			RK73GB1J394J	CHIP R 390K J 1/16W	
R171			RK73GB1J474J	CHIP R 470K J 1/16W	
R172			RK73GB1J473J	CHIP R 47K J 1/16W	
R173			RK73GB1J104J	CHIP R 100K J 1/16W	
R174			RS2-1252-05	CHIP R 0 OHM	
R175			RK73GB1J103J	CHIP R 10K J 1/16W	
R176			RS2-1252-05	CHIP R 0 OHM	
R177			RK73GB1J473J	CHIP R 47K J 1/16W	
R178,179			RK73GB1J104J	CHIP R 100K J 1/16W	
R180			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R181			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R182,183			RS2-1252-05	CHIP R 0 OHM	
R184			RK73GB1J333J	CHIP R 33K J 1/16W	
R185			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R186			RK73GB1J155J	CHIP R 1.5M J 1/16W	
R198			RK73GB1J154J	CHIP R 150K J 1/16W	
R199			RK73GB1J103J	CHIP R 10K J 1/16W	
R200			RK73GB1J101J	CHIP R 100 J 1/16W	
R201			RS2-1252-05	CHIP R 0 OHM	
R202			RK73GB1J474J	CHIP R 470K J 1/16W	
R203			RS2-1252-05	CHIP R 0 OHM	
R204			RK73GB1J104J	CHIP R 100K J 1/16W	
R205			RK73GB1J182J	CHIP R 1.8K J 1/16W	
R206			RK73GB1J471J	CHIP R 470 J 1/16W	
R207			RK73GB1J101J	CHIP R 100 J 1/16W	
R208			RN73GH1J682D	CHIP R 6.8K D 1/16W	
R209			RK73GB1J224J	CHIP R 220K J 1/16W	
R210			RK73GB1J474J	CHIP R 470K J 1/16W	
R211			RK73GB1J103J	CHIP R 10K J 1/16W	
R212			RN73GH1J683D	CHIP R 68K D 1/16W	
R213			RN73GH1J682D	CHIP R 6.8K D 1/16W	
R214			RK73GB1J184J	CHIP R 180K J 1/16W	
R215			RK73GB1J474J	CHIP R 470K J 1/16W	
R218			RS2-1252-05	CHIP R 0 OHM	
R219			RK73GB1J273J	CHIP R 27K J 1/16W	
R220,221			RK73GB1J184J	CHIP R 180K J 1/16W	
R222			RK73GB1J153J	CHIP R 15K J 1/16W	
R223			RK73GB1J223J	CHIP R 22K J 1/16W	
R224			RK73GB1J103J	CHIP R 10K J 1/16W	
R225			RK73GB1J153J	CHIP R 15K J 1/16W	
R226			RS2-1252-05	CHIP R 0 OHM	
R230			RK73GB1J223J	CHIP R 22K J 1/16W	
R231			RK73GB1J104J	CHIP R 100K J 1/16W	
R232			RK73GB1J182J	CHIP R 1.8K J 1/16W	K
R232,233			RS2-1252-05	CHIP R 0 OHM	K2,K3,K4
R233			RS2-1252-05	CHIP R 0 OHM	K
R234			RK73GB1J124J	CHIP R 120K J 1/16W	

K : TK-372G K
K2 : TK-372G K2
K3 : TK-372G K3
K4 : TK-372G K4

PARTS LIST

TX-RX UNIT (X57-5880-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R235			RK73GB1J334J	CHIP R 330K J 1/16W	
R237			R92-1252-05	CHIP R 0 OHM	
R239			RK73GB1J153J	CHIP R 15K J 1/16W	
R240			RK73GB1J223J	CHIP R 22K J 1/16W	
R241			RK73GB1J334J	CHIP R 330K J 1/16W	
R242			R92-1252-05	CHIP R 0 OHM	
R244			RK73GB1J391J	CHIP R 390 J 1/16W	K4
R244			RK73GB1J561J	CHIP R 560 J 1/16W	K,K2,K3
R249			R92-1252-05	CHIP R 0 OHM	
R250			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R251			RK73GB1J474J	CHIP R 470K J 1/16W	
R252,253			R92-1252-05	CHIP R 0 OHM	
R254			RK73GB1J184J	CHIP R 180K J 1/16W	
R255			RK73GB1J474J	CHIP R 470K J 1/16W	
R256			R92-1252-05	CHIP R 0 OHM	
R258			R92-1252-05	CHIP R 0 OHM	
R259			RK73GB1J473J	CHIP R 47K J 1/16W	
R260,261			RK73GB1J224J	CHIP R 220K J 1/16W	
R301			R92-0679-05	CHIP R 0 OHM	
R303			RK73GB1J100J	CHIP R 10 J 1/16W	K2
R303			RK73GB1J470J	CHIP R 47 J 1/16W	K,K4
R303			R92-1252-05	CHIP R 0 OHM	K3
R304			R92-1252-05	CHIP R 0 OHM	K,K2,K4
R305			RK73GB1J102J	CHIP R 1.0K J 1/16W	K
R305			RK73GB1J222J	CHIP R 2.2K J 1/16W	K2,K3K4
R306			RK73GB1J332J	CHIP R 3.3K J 1/16W	K,K2,K3
R306			RK73GB1J472J	CHIP R 4.7K J 1/16W	K4
R308			R92-1252-05	CHIP R 0 OHM	K3,K4
R309			RK73GB1J101J	CHIP R 100 J 1/16W	
R310			RK73GB1J151J	CHIP R 150 J 1/16W	K3
R310			RK73GB1J221J	CHIP R 220 J 1/16W	K4
R310			RK73GB1J331J	CHIP R 330 J 1/16W	K,K2
R311			RK73GB1J104J	CHIP R 100K J 1/16W	K4
R311,312			RK73GB1J104J	CHIP R 100K J 1/16W	K3
R314			RK73GB1J224J	CHIP R 220K J 1/16W	
R315-318			RK73GB1J104J	CHIP R 100K J 1/16W	K3,K4
R318			RK73GB1J104J	CHIP R 100K J 1/16W	K,K2
R320			R92-1252-05	CHIP R 0 OHM	
R600			R92-1252-05	CHIP R 0 OHM	K3,K4
VR1			R12-7491-05	TRIMMING POT.(69K)	
S401			S70-0457-05	TACT SWITCH	
S402,403			S70-0424-05	TACT SWITCH	
MIC1			T91-0579-05	MIC ELEMENT	
D1			MA2S111	DIODE	
D2			MA2S376	VARIABLE CAPACITANCE DIODE	
D3			HVU131	DIODE	
D4			MA2S376	VARIABLE CAPACITANCE DIODE	
D5			HSC277	DIODE	
D6			MA360	VARIABLE CAPACITANCE DIODE	
D7			HSC277	DIODE	K
D7			HVC131	DIODE	K2,K3,K4
D8			HZU5ALL	DIODE	
D9			MA2S376	VARIABLE CAPACITANCE DIODE	
D10			HSC277	DIODE	
D11			MA2S376	VARIABLE CAPACITANCE DIODE	

Ref. No.	Address	New parts	Parts No.	Description	Destination
D12			MA2S111	DIODE	
D13,14			DAN235E	DIODE	
D15			HSC277	DIODE	
D17			MA2S111	DIODE	
D21			1SS373	DIODE	
D22			1SR154-400	DIODE	
D23			RB706F-40	DIODE	
D302			HVC350B	VARIABLE CAPACITANCE DIODE	K4
D302,303			1SV285	VARIABLE CAPACITANCE DIODE	K3
D305-307			HVC350B	VARIABLE CAPACITANCE DIODE	K4
D305-307			1SV285	VARIABLE CAPACITANCE DIODE	K3
IC1			M68732H	IC (RF POWER MODULE)	K
IC1			M68732UH	IC (RF POWER MODULE)	K2
IC1			M68732SH	IC (RF POWER MODULE)	K3
IC1			M68732L	IC (RF POWER MODULE)	K4
IC2			MB15A02	MOS IC	
IC3			NJM2904V	MOS IC	
IC4			TA31136FN	MOS IC	
IC5,6			BU4094BCFV	MOS IC	
IC7			S-81350HG-KD	MOS IC	
IC8			PST9140NR	MOS IC	
IC9			RN5VL45C	MOS IC	
IC10			AT2408N10SI2.5	ROM IC	
IC11			TA7368F	MOS IC	
IC12			AT29C020-90TI	ROM IC	
IC13			30622M4102GP	MPU	
IC14			TC35453F	MOS IC	
IC15			TA75W01FU	MOS IC	
IC16			TC75W51FU	MOS IC	
IC17			XSC103SI	ANALOG IC	
IC18			LC73872M	MOS IC	
IC19			TA75W01FU	MOS IC	
Q1			2SC5108(Y)	TRANSISTOR	
Q2			2SC4226(R24)	TRANSISTOR	
Q3-5			2SC5108(Y)	TRANSISTOR	
Q6			2SC4988	TRANSISTOR	
Q7			2SJ243	FET	
Q8			UMC4	TRANSISTOR	
Q9			DTC144EE	DIGITAL TRANSISTOR	
Q10			2SK508NV(K52)	FET	
Q11			2SC4617(S)	TRANSISTOR	
Q12			2SC4649(N,P)	TRANSISTOR	
Q13,14			DTA144EE	DIGITAL TRANSISTOR	
Q15			DTC114EE	DIGITAL TRANSISTOR	
Q16			DTA114YE	DIGITAL TRANSISTOR	
Q17			DTC144EE	DIGITAL TRANSISTOR	
Q18			FP210	TRANSISTOR	
Q19			3SK228	FET	
Q20,21			UMG3N	TRANSISTOR	
Q22			2SC4619	TRANSISTOR	
Q23			UMC4	TRANSISTOR	
Q24,25			DTC114EE	DIGITAL TRANSISTOR	
Q26			DTA114EE	DIGITAL TRANSISTOR	
Q27			UPA572T	FET	
Q28			DTA114YE	DIGITAL TRANSISTOR	
Q30			2SK1588	FET	

K : TK-372G K **K3 : TK-372G K3**
K2 : TK-372G K2 **K4 : TK-372G K4**

PARTS LIST

TX-RX UNIT (X57-5880-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q31			2SC4619	TRANSISTOR	
Q32			2SA1362(GR)	TRANSISTOR	
Q33,34			DTC144EE	DIGITAL TRANSISTOR	
Q35			UPA672T	FET	
Q36			2SK1324	FET	
Q301			3SK228	FET	

Ref. No.	Address	New parts	Parts No.	Description	Destination

K : TK-372G K
K2 : TK-372G K2
K3 : TK-372G K3
K4 : TK-372G K4