EXPLODED VIEW (TK-5210(G) K)

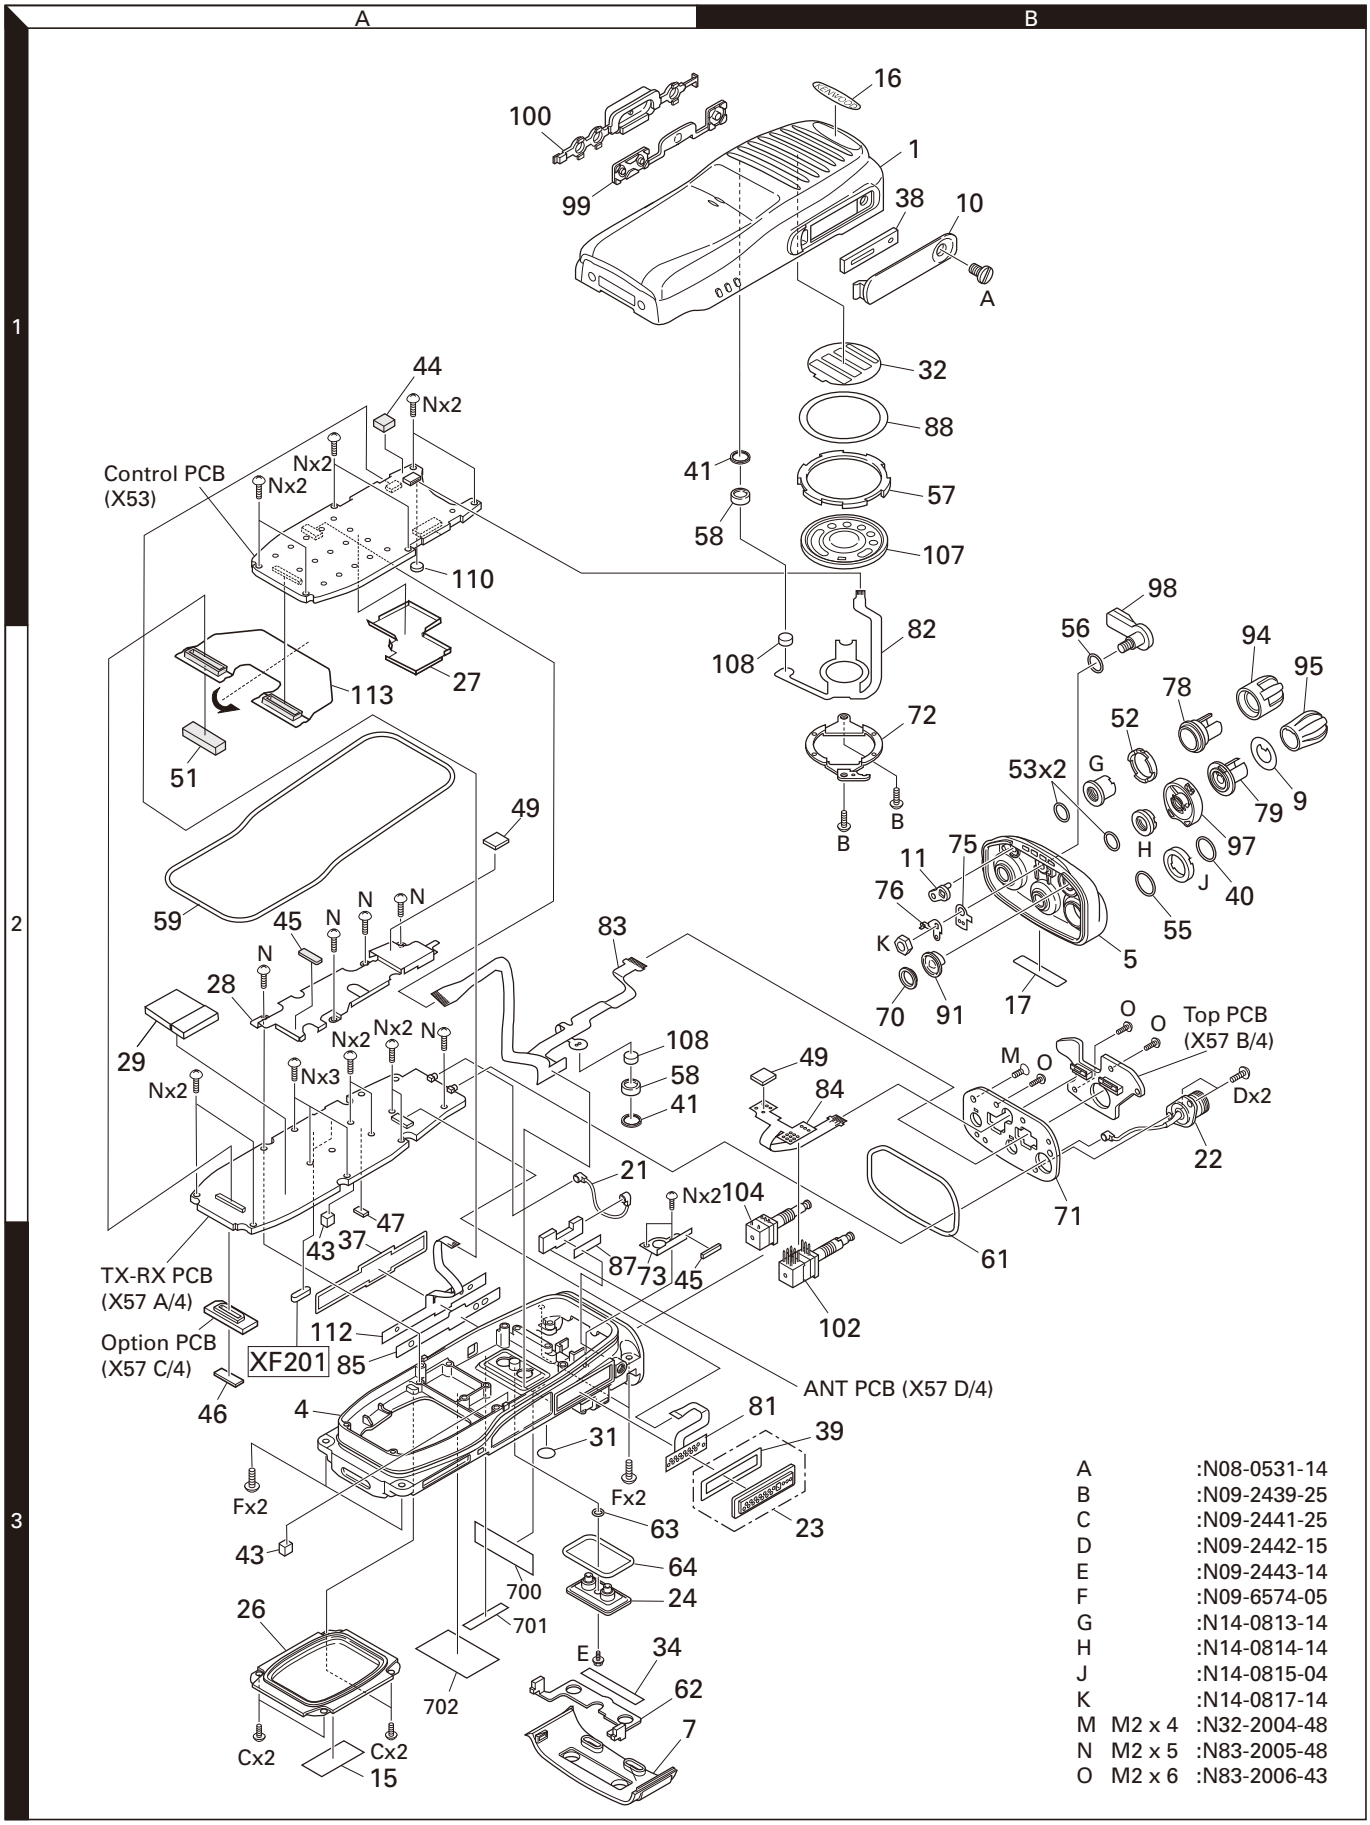

A		:N08-0531-14
B		:N09-2439-25
C		:N09-2441-25
D		:N09-2442-15
E		:N09-2443-14
F		:N09-6574-05
G		:N14-0813-14
H		:N14-0814-14
J		:N14-0815-04
K		:N14-0817-14
M	M2 x 4	:N32-2004-48
N	M2 x 5	:N83-2005-48
O	M2 x 6	:N83-2006-43

Parts with the exploded numbers larger than 700 are not supplied.
If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB. These parts must be ordered separately.

EXPLODED VIEW (TK-5210(G) K2, K3, K7)

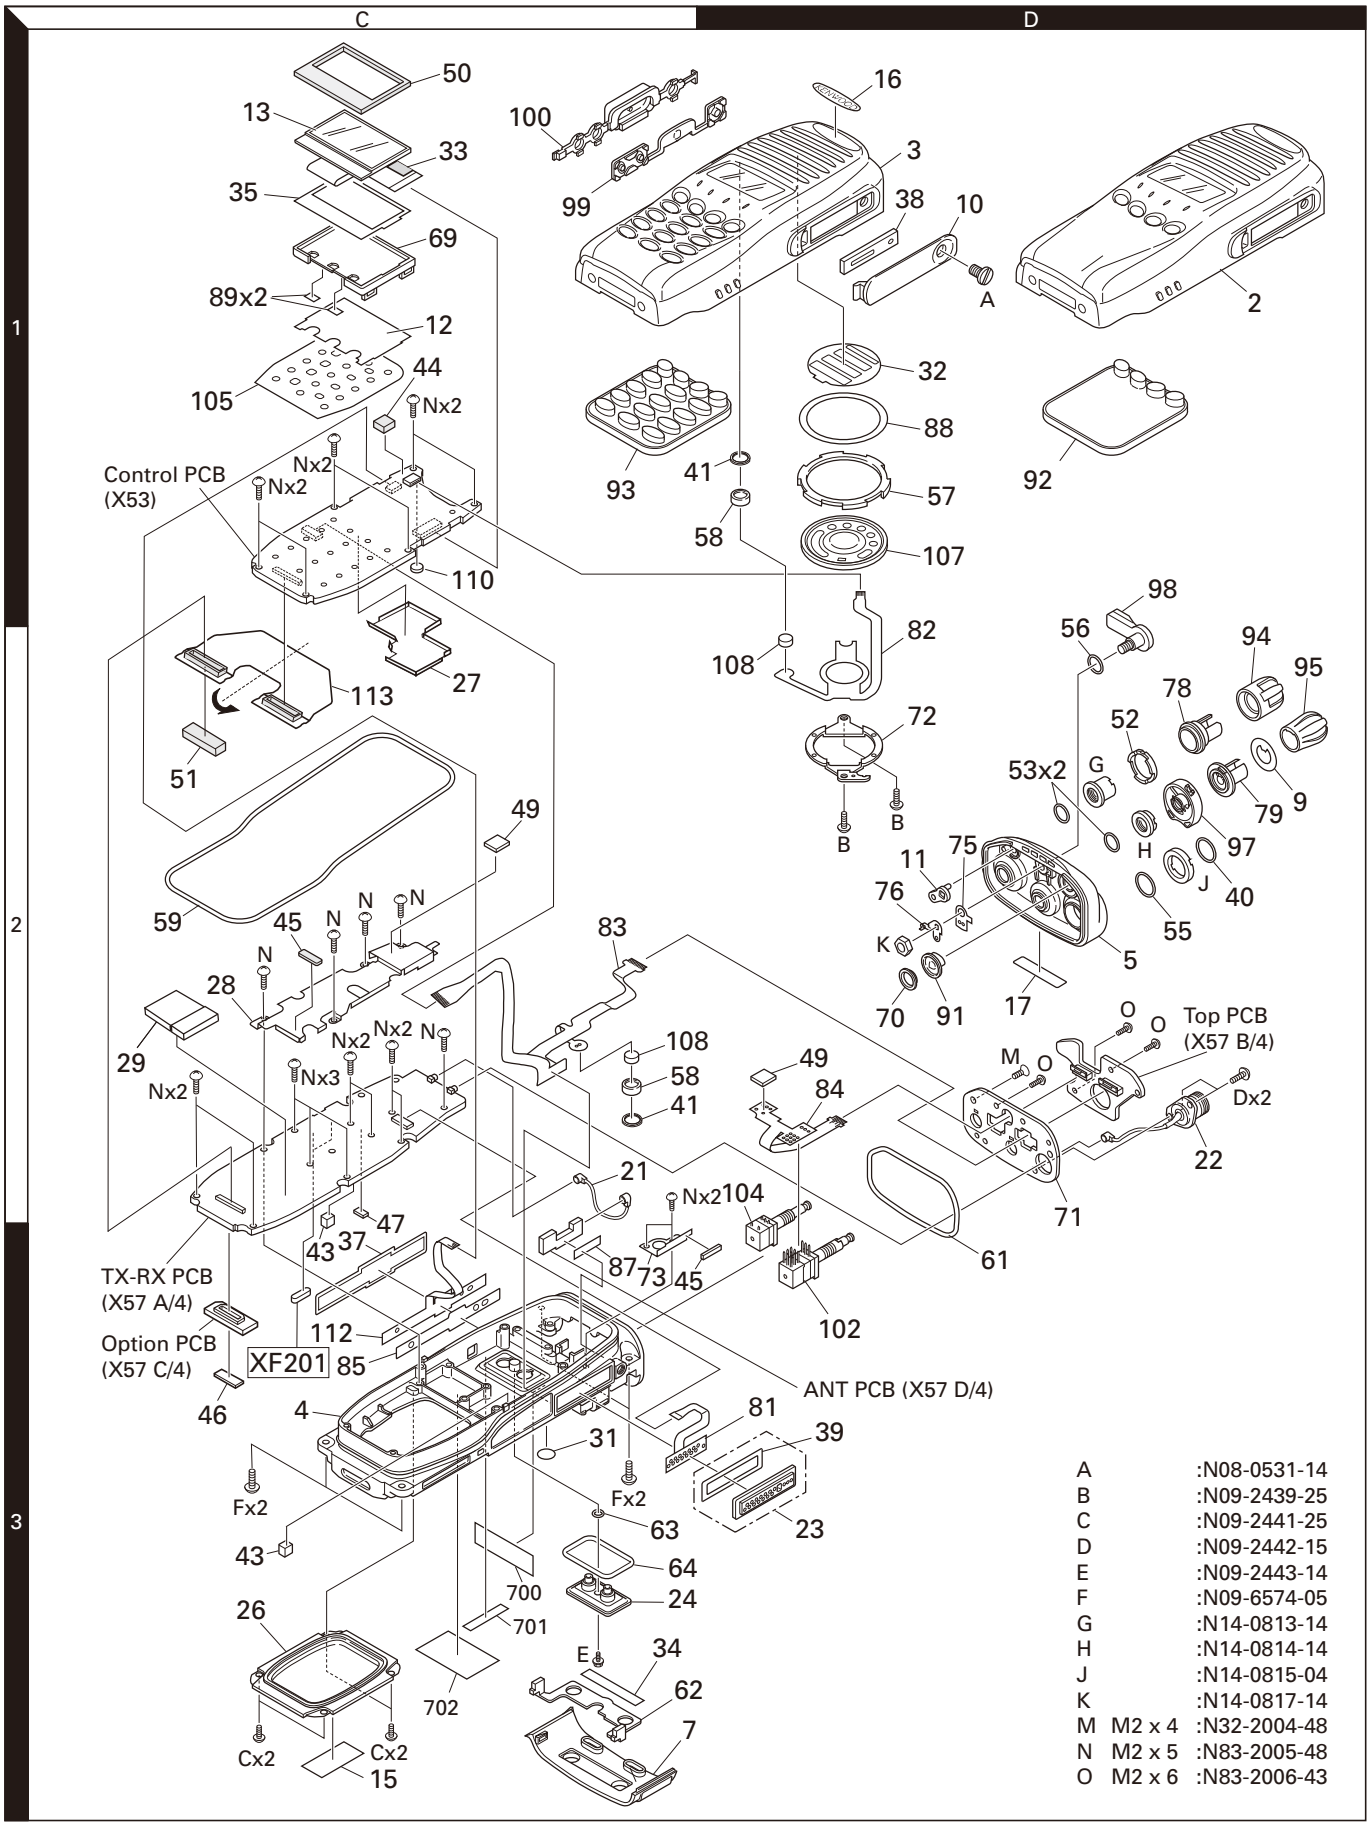

Parts with the exploded numbers larger than 700 are not supplied.
If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB.
These parts must be ordered separately.

PACKING

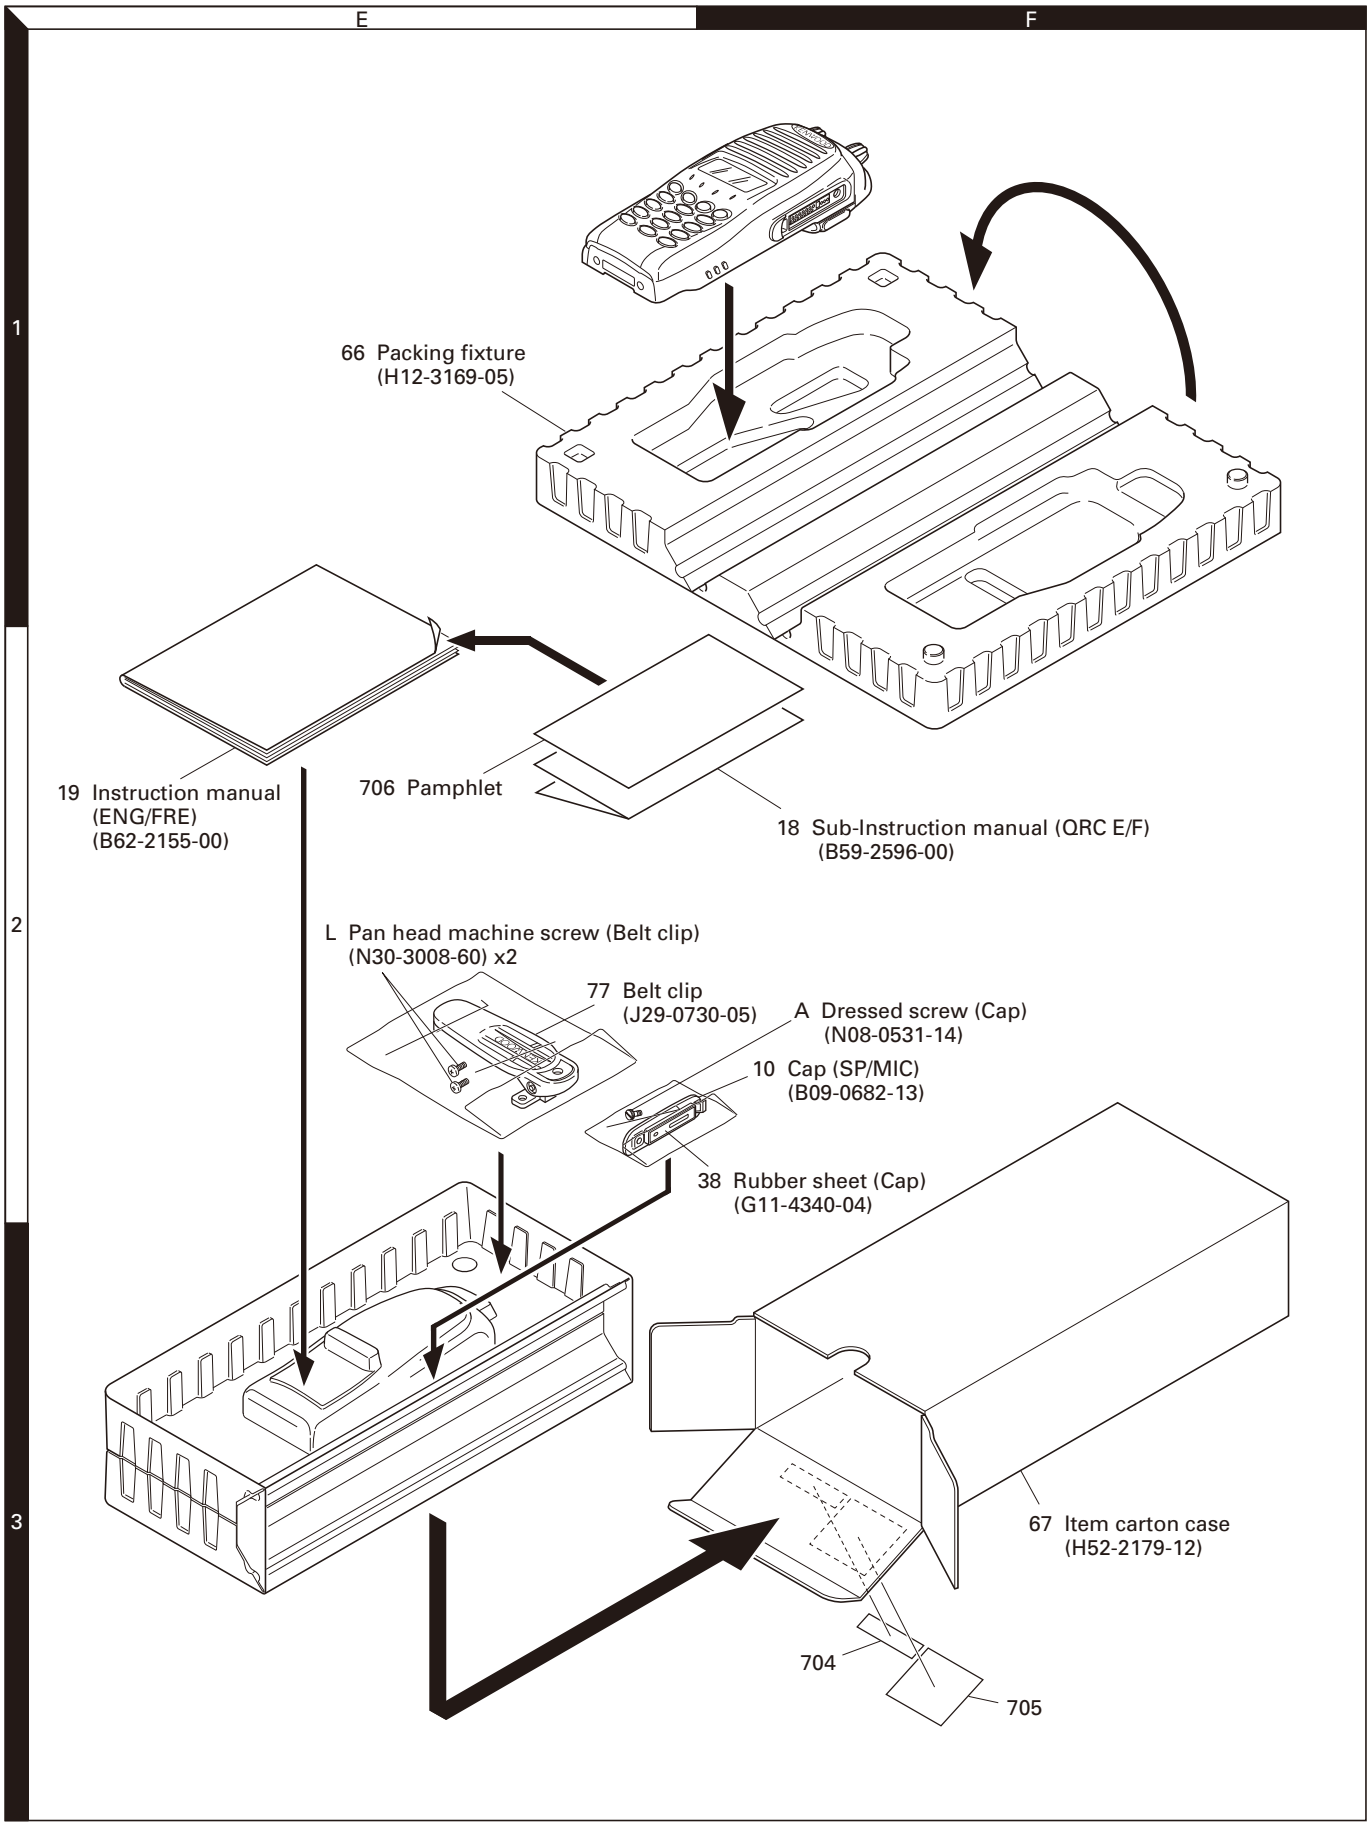

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

TK-5210(G)

Ref. No.	Address	New parts	Parts No.	Description	Destination
			TK-5210(G)		
1	1B		A02-3875-01	MAIN CABINET	K
2	1D		A02-3877-11	MAIN CABINET (4KEY)	K2K7
3	1D		A02-3879-11	MAIN CABINET (DTMF)	K3
4	3A,3C		A10-4084-51	CHASSIS	
5	2B,2D		A62-1104-02	PANEL (TOP)	
7	3A,3C		A82-0057-02	REAR PANEL	
9	2B,2D		B03-3612-04	DRESSING PLATE (SELECTOR)	
10	1B,1D,1E		B09-0682-13	CAP (SP/MIC) ACCESSOY	
11	2B,2D		B11-1821-03	ILLUMINATION GUIDE (TX-BUSY)	
12	1C		B11-1832-04	FILTER (LCD)	K2K3K7
13	1C		B38-0929-05	LCD	K2K3K7
15	3A,3C		B41-1841-04	CAUTION STICKER	
16	1B,1D		B43-1171-04	BADGE (FRONT)	
17	2B,2D		B43-1172-04	BADGE (REAR)	
18	2F		B59-2596-00	SUB-INSTRUCTION MANUAL (QRC E/F)	
19	2E		B62-2155-00	INSTRUCTION MANUAL (ENG/FRE)	
21	2A,2C		E37-0722-05	LEAD WIRE WITH CONNECTOR (UNIV)	
22	2B,2D		E37-1126-25	LEAD WIRE WITH CONNECTOR (ANT)	
23	3B,3D		E58-0510-15	RECTANGULAR RECEPTACLE (UNIV)	
24	3A,3C		E72-0420-33	TERMINAL BLOCK	
26	3A,3C		F07-1887-22	COVER ASSY	
27	2A,2B		F10-3104-03	SHIELDING CASE (CONT-B)	
28	2A,2B		F10-3114-03	SHIELDING CASE (TXRX-A UPPER)	
29	2A,2B		F10-3115-04	SHIELDING CASE (TXRX-A BOTTOM)	
31	3A,3C		G10-1327-04	FIBROUS SHEET (AIR)	
32	1B,1D		G10-1338-04	FIBROUS SHEET (SP)	
33	1C		G10-1346-04	FIBROUS SHEET (LCD FPC)	K2K3K7
34	3A,3C		G10-1366-04	FIBROUS SHEET (BACKPANEL)	
35	1C		G11-4302-04	SHEET (LCD)	K2K3K7
37	3A,3C		G11-4303-14	SHEET (PTT)	
38	1B,1D,2F		G11-4340-04	RUBBER SHEET (CAP) ACCESSORY	
39	3B,3D		G11-4346-08	SHEET (UNIV)	
40	2B,2D		G11-4490-04	SHEET (ANT)	
41	1B,1D,2A,2C		G11-4526-04	SHEET (MIC)	
43	3A,3C		G13-1941-04	CUSHION (CHASS/PCB)	
44	1A,1C		G13-2036-04	CUSHION (MIC)	
45	2A,2C,3B,3D		G13-2046-04	CUSHION (UNIV)	
46	3A,3C		G13-2070-04	CUSHION (OPB)	
47	2A,2C		G13-2071-04	CONDUCTIVE CUSHION (CHASS/PCB)	
49	2A,2B,2C,2D		G13-2079-04	CUSHION (VOL)	
50	1C		G13-2087-14	CUSHION (LCD)	K2K3K7
51	2A,2C		G13-2284-04	CUSHION (CORD ASSY)	
52	2B,2D		G53-1628-04	PACKING (VOLTORQ-UP)	
53	2B,2D		G53-1629-05	PACKING (VOL,SEL O-RIG)	
55	2B,2D		G53-1630-05	PACKING (ANT O-RIG)	
56	2B,2D		G53-1631-05	PACKING (LEVER SW O-RING)	
57	1B,1D		G53-1633-04	PACKING (SP)	
58	1B,1D,2A,2C		G53-1634-14	PACKING (MAIN MIC,NC MIC)	
59	2A,2C		G53-1637-04	PACKING (MAIN)	
61	2B,2D		G53-1638-04	PACKING (TOP)	
62	3A,3C		G53-1640-03	PACKING (BATT)	
63	3A,3C		G53-1649-05	PACKING (TERMINAL O-RING)	
64	3A,3C		G53-1663-23	PACKING (TERMINAL BLOCK)	
66	1F		H12-3169-05	PACKING FIXTURE	
67	3F	✻	H52-2179-12	ITEM CARTON CASE	
69	1C		J19-5475-12	HOLDER (LCD)	K2K3K7
70	2B,2D		J19-5477-04	HOLDER (EMG)	
71	2B,2D		J21-8482-13	MOUNTING HARDWARE (TOP)	
72	2B,2D		J21-8483-13	MOUNTING HARDWARE (SP)	
73	3A,3C		J21-8484-04	MOUNTING HARDWARE (NC MIC)	
75	2B,2D		J21-8495-04	MOUNTING HARDWARE (LEVER PANEL)	
76	2B,2D		J21-8581-04	MOUNTING HARDWARE (LEVER)	
77	2E		J29-0730-05	BELT CLIP ACCESSORY	
78	2B,2D		J39-0646-03	SPACER (VOL)	
79	2B,2D		J39-0647-03	SPACER (SELECTOR)	
81	3B,3D		J82-0097-25	FPC (UNIV)	
82	2B,2D		J82-0098-05	FPC (SP/MIC)	
83	2A,2C		J87-0011-05	FPC (LEAD FREE/CONT-TOP)	
84	2B,2D	✻	J87-0025-05	FPC (LEAD FREE/VOL.SEL)	
85	3A,3C		J99-0377-14	ADHESIVE SHEET (PTT)	
87	3A,3C		J99-0380-04	ADHESIVE SHEET (ANT PCB)	
88	1B,1D		J99-0383-14	ADHESIVE SHEET (SP)	
89	1C		J99-0390-04	ADHESIVE SHEET (LCD FILTER)	K2K3K7
91	2B,2D		K29-9319-03	KEY TOP (EMG)	
92	1D		K29-9320-03	KEY TOP (4KEY)	K2K7
93	1C		K29-9321-13	KEY TOP (DTMF)	K3
94	2B,2D		K29-9322-03	KNOB (VOL)	
95	2B,2D		K29-9323-03	KNOB (SELECTOR)	
97	2B,2D		K29-9324-13	KNOB (CONCENTRIC SW)	
98	1B,1D		K29-9325-04	KNOB (LEVER SW)	
99	1A,1C		K29-9327-03	KEY TOP (PTT)	
100	1A,1C		K29-9328-02	KNOB (PTT)	
A	1B,1D,2E		N08-0531-14	DRESSED SCREW (CAP) ACCESSORY	
B	2B,2D		N09-2439-25	SPECIAL SCREW (SP)	
C	3A,3C		N09-2441-25	SPECIAL SCREW (COVER ASSY)	
D	2B,2D		N09-2442-15	SPECIAL SCREW (ANT)	
E	3A,3C		N09-2443-14	HEXAGON HEAD SCREW (TERMINAL)	
F	3A,3C		N09-6574-05	SPECIAL SCREW (CASE)	
G	2B,2D		N14-0813-14	CIRCULAR NUT (VOL)	
H	2B,2D		N14-0814-14	CIRCULAR NUT (SEL)	
J	2B,2D		N14-0815-04	CIRCULAR NUT (ANT)	
K	2B,2D		N14-0817-14	HEXAGON NUT (LEVER SW)	
L	2E		N30-3008-60	PAN HEAD MACHINE SCREW (BELT CLIP)	
M	2B,2D		N32-2004-48	FLAT HEAD MACHINE SCREW (TOP)	
N	1A,2A,1C,2C		N83-2005-48	PAN HEAD TAPTITE SCREW (CONT/TXRX)	
O	2B,2D		N83-2006-43	PAN HEAD TAPTITE SCREW (TOP)	
102	3B,3D		R31-0654-05	VARIABLE RESISTOR (VOL)	
104	2B,2D		S60-0431-15	ROTARY SWITCH (SEL)	
105	1C		S79-0454-05	KEYBOARD ASSY (4KEY&DTMF)	K2K3K7
107	1B,1D		T07-0755-15	SPEAKER	
108	2A,2B,2C,2D		T91-0575-05	MIC ELEMENT (MAIN MIC,NC MIC)	
110	1B,1D		W09-0971-05	LITHIUM CELL	
112	3A,3C		X41-3690-10	SWITCH UNIT (FPC (PTT))	
113	2A,2C		X42-3370-10	CORD ASSY (FPC (100P))	

PARTS LIST

TK-5210(G)
CONTROL UNIT (X53-4390-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
-		✻	X53-4390-13	SERVICE CONTROL UNIT	K
-			X53-4390-14	SERVICE CONTROL UNIT	K2K7
-			X53-4390-15	SERVICE CONTROL UNIT	K3
CONTROL UNIT (X53-4390-XX) -10: K -11: K2,K7 -12: K3					
D2-5			B30-2171-05	LED	K3
D5			B30-2171-05	LED	K2K7
D6-8			B30-2261-05	LED	K2K3K7
D9-12			B30-2171-05	LED	K3
D12			B30-2171-05	LED	K2K7
C12-15			CK73HB1A104K	CHIP C 0.10UF K	
C16			CK73HB0J105K	CHIP C 1.0UF K	
C17			CK73HB1E103K	CHIP C 0.010UF K	
C18,19			CK73HB1A104K	CHIP C 0.10UF K	K2K3K7
C19			CK73HB1A104K	CHIP C 0.10UF K	K
C21,22			CK73HB1H102K	CHIP C 1000PF K	
C23			CK73HB1A104K	CHIP C 0.10UF K	
C24			CC73HCH1H101J	CHIP C 100PF J	K2K3K7
C25			CK73HB1A104K	CHIP C 0.10UF K	
C27			CK73HB1A104K	CHIP C 0.10UF K	
C29			CK73HB1A104K	CHIP C 0.10UF K	
C30			CK73HB1E103K	CHIP C 0.010UF K	
C31			CK73HB1A104K	CHIP C 0.10UF K	
C32			CK73HB1E103K	CHIP C 0.010UF K	
C33			CK73HB0J105K	CHIP C 1.0UF K	
C34			CK73HB1A104K	CHIP C 0.10UF K	
C35			CK73HB0J105K	CHIP C 1.0UF K	
C36			CK73HB1A104K	CHIP C 0.10UF K	
C37			CK73HB1E103K	CHIP C 0.010UF K	
C38,39			CK73HB1A104K	CHIP C 0.10UF K	
C40			CK73HB1E103K	CHIP C 0.010UF K	
C44			CK73HB1E682K	CHIP C 6800PF K	
C47			CK73HB1E103K	CHIP C 0.010UF K	
C48			CK73HB1A104K	CHIP C 0.10UF K	
C49			CK73GB0J106K	CHIP C 10UF K	
C50-55			CK73HB1A104K	CHIP C 0.10UF K	
C56			CK73HB1E103K	CHIP C 0.010UF K	
C57,58			CK73GB1E105K	CHIP C 1.0UF K	
C59,60			CC73HCH1H101J	CHIP C 100PF J	
C61			CK73HB1H102K	CHIP C 1000PF K	
C62			CK73HB1E103K	CHIP C 0.010UF K	
C63			CK73HB0J105K	CHIP C 1.0UF K	
C64,65			CK73HB1A104K	CHIP C 0.10UF K	
C66			CK73HB1E682K	CHIP C 6800PF K	
C67			CK73HB1A104K	CHIP C 0.10UF K	
C68			CK73GB0J106K	CHIP C 10UF K	
C69			CC73HCH1H101J	CHIP C 100PF J	
C70,71			CK73HB1A104K	CHIP C 0.10UF K	
C72			CC73HCH1H030C	CHIP C 3.0PF C	
C73			CK73HB1E103K	CHIP C 0.010UF K	
C74			CK73HB0J105K	CHIP C 1.0UF K	
C75-78			CK73HB1A104K	CHIP C 0.10UF K	
C79			CK73HB1E103K	CHIP C 0.010UF K	
C80			CK73HB0J105K	CHIP C 1.0UF K	
C81-85			CK73HB1A104K	CHIP C 0.10UF K	
C86			CC73HCH1H101J	CHIP C 100PF J	
C87			CK73HB1A104K	CHIP C 0.10UF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C88			CK73HB1H102K	CHIP C 1000PF K	
C90			CK73HB1A104K	CHIP C 0.10UF K	
C91			CK73HB1H102K	CHIP C 1000PF K	
C92			CK73HB1A104K	CHIP C 0.10UF K	
C93			CK73HB0J105K	CHIP C 1.0UF K	
C94			CK73HB0J474K	CHIP C 0.47UF K	
C95			CK73HB1H102K	CHIP C 1000PF K	
C96			CK73HB0J474K	CHIP C 0.47UF K	
C97-100			CK73HB1H471K	CHIP C 470PF K	
C101			CK73HB1A104K	CHIP C 0.10UF K	
C102			CK73HB1H471K	CHIP C 470PF K	
C103-111			CK73HB1H472K	CHIP C 4700PF K	
C112			CK73HB1A104K	CHIP C 0.10UF K	
C113,114			CK73GB0J106K	CHIP C 10UF K	
C115			CK73HB1H471K	CHIP C 470PF K	
C116			CK73HB0J105K	CHIP C 1.0UF K	
C117			CK73GB1E105K	CHIP C 1.0UF K	
C118,119			CK73HB1E103K	CHIP C 0.010UF K	
C120			CK73HB1H472K	CHIP C 4700PF K	
C121,122			CK73HB1E103K	CHIP C 0.010UF K	
C136,137			CK73HB1A104K	CHIP C 0.10UF K	
C141			CK73HB1A104K	CHIP C 0.10UF K	
C143			CK73HB1A104K	CHIP C 0.10UF K	K2K3K7
C144			CC73HCH1H221J	CHIP C 220PF J	K2K3K7
C146,147			CK73HB1A104K	CHIP C 0.10UF K	K2K3K7
C148-152			CK73HB0J105K	CHIP C 1.0UF K	K2K3K7
C153			CK73HB1A104K	CHIP C 0.10UF K	K
C153,154			CK73HB1A104K	CHIP C 0.10UF K	K2K3K7
C155			CK73HB1H102K	CHIP C 1000PF K	
C156			CC73HCH1H470J	CHIP C 47PF J	
C157			CC73HCH1H101J	CHIP C 100PF J	
C161			CK73HB1E103K	CHIP C 0.010UF K	
C997			CK73HB1H102K	CHIP C 1000PF K	K
C998			CK73HB1H102K	CHIP C 1000PF K	K2K7
C999			CK73HB1H102K	CHIP C 1000PF K	K3
CN1		✻	E40-6884-05	FLAT CABLE CONNECTOR	K2K3K7
CN34			E41-3183-05	FLAT CABLE CONNECTOR	
CN35			E40-6755-05	FLAT CABLE CONNECTOR	
CN38		✻	E40-6777-05	FLAT CABLE CONNECTOR	
CN40			E40-6846-05	PIN ASSY	
CN37			J19-5386-05	HOLDER	
L4-6			L92-0444-05	CHIP FERRITE	
L7,8			L92-0162-05	BEADS CORE	
L9			L92-0444-05	CHIP FERRITE	
L10			L92-0149-05	CHIP FERRITE	
L11,12			L92-0467-05	CHIP FERRITE	
L13			L92-0163-05	BEADS CORE	
L14,15			L92-0467-05	CHIP FERRITE	
L16,17			L92-0444-05	CHIP FERRITE	
L19			L92-0444-05	CHIP FERRITE	
L20,21			L92-0163-05	BEADS CORE	
L22,23			L92-0446-05	BEADS CORE	
L24,25			L92-0162-05	BEADS CORE	K2K3K7
L25			L92-0162-05	BEADS CORE	K
L27			L92-0446-05	BEADS CORE	
X1			L77-1802-05	CRYSTAL RESONATOR (32.768KHZ)	
X2			L77-3015-05	TCXO (18.432MHZ)	
R5			RK73HB1J474J	CHIP R 470K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4390-XX)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R6-9			RK73HB1J101J	CHIP R	100	J	1/16W	K3
R9			RK73HB1J101J	CHIP R	100	J	1/16W	K2K7
R11-13			RK73HB1J181J	CHIP R	180	J	1/16W	K2K3K7
R16			RK73HB1J474J	CHIP R	470K	J	1/16W	
R17			RK73HB1J222J	CHIP R	2.2K	J	1/16W	K2K3K7
R18			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R19,20			RK73HB1J104J	CHIP R	100K	J	1/16W	
R21			RK73HB1J474J	CHIP R	470K	J	1/16W	K2K3K7
R25,26			RK73HB1J473J	CHIP R	47K	J	1/16W	
R27			RK73HB1J104J	CHIP R	100K	J	1/16W	
R29			RK73HB1J104J	CHIP R	100K	J	1/16W	
R30			RK73HB1J474J	CHIP R	470K	J	1/16W	
R31			RK73HB1J471J	CHIP R	470	J	1/16W	
R32-34			RK73HB1J104J	CHIP R	100K	J	1/16W	
R35,36			RK73HB1J471J	CHIP R	470	J	1/16W	
R37-39			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R40-42			RK73HB1J101J	CHIP R	100	J	1/16W	
R43			RK73HB1J104J	CHIP R	100K	J	1/16W	
R44			RK73HB1J101J	CHIP R	100	J	1/16W	
R45			RK73HB1J471J	CHIP R	470	J	1/16W	
R46-49			RK73HB1J104J	CHIP R	100K	J	1/16W	
R50			RK73HB1J473J	CHIP R	47K	J	1/16W	
R51			RK73HB1J104J	CHIP R	100K	J	1/16W	
R52			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R53			RK73HB1J104J	CHIP R	100K	J	1/16W	
R54-57			RK73HB1J471J	CHIP R	470	J	1/16W	
R58			RK73HB1J104J	CHIP R	100K	J	1/16W	
R59			RK73HB1J471J	CHIP R	470	J	1/16W	
R60-65			RK73HB1J104J	CHIP R	100K	J	1/16W	
R66			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R67			RK73HB1J151J	CHIP R	150	J	1/16W	
R69			RK73HB1J153J	CHIP R	15K	J	1/16W	
R70			RK73HB1J474J	CHIP R	470K	J	1/16W	
R71			RK73HB1J104J	CHIP R	100K	J	1/16W	
R72			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R74			RK73HB1J470J	CHIP R	47	J	1/16W	
R75			RK73HB1J103J	CHIP R	10K	J	1/16W	
R76			RK73HB1J473J	CHIP R	47K	J	1/16W	
R77,78			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R80,81			RK73HB1J220J	CHIP R	22	J	1/16W	
R82			RK73HB1J470J	CHIP R	47	J	1/16W	
R83,84			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R86			RK73HB1J474J	CHIP R	470K	J	1/16W	
R88			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R90			RK73HH1J104D	CHIP R	100K	D	1/16W	
R92-95			RK73HH1J153D	CHIP R	15K	D	1/16W	
R96,97			RK73HH1J683D	CHIP R	68K	D	1/16W	
R98,99			RK73HH1J473D	CHIP R	47K	D	1/16W	
R100			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R101			RK73HB1J104J	CHIP R	100K	J	1/16W	
R102			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R103			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R105			RK73HB1J104J	CHIP R	100K	J	1/16W	
R106			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R107			RK73HB1J103J	CHIP R	10K	J	1/16W	
R108			RK73HB1J104J	CHIP R	100K	J	1/16W	
R109,110			RK73HH1J223D	CHIP R	22K	D	1/16W	
R111-113			RK73HB1J104J	CHIP R	100K	J	1/16W	
R115			RK73HB1J473J	CHIP R	47K	J	1/16W	
R116			RK73HB1J104J	CHIP R	100K	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R117			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R118			RK73HB1J274J	CHIP R	270K	J	1/16W	
R119			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R120			RK73HB1J274J	CHIP R	270K	J	1/16W	
R121,122			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R123,124			RK73HB1J474J	CHIP R	470K	J	1/16W	
R125			RK73HB1J470J	CHIP R	47	J	1/16W	
R126,127			RK73HB1J154J	CHIP R	150K	J	1/16W	
R128			RK73HB1J273J	CHIP R	27K	J	1/16W	
R129			RK73HB1J473J	CHIP R	47K	J	1/16W	
R130,131			RK73HB1J223J	CHIP R	22K	J	1/16W	
R132,133			RK73HB1J473J	CHIP R	47K	J	1/16W	
R134			RK73HB1J223J	CHIP R	22K	J	1/16W	
R135,136			RK73HB1J182J	CHIP R	1.8K	J	1/16W	
R137-142			RK73HB1J473J	CHIP R	47K	J	1/16W	
R143,144			RK73HB1J104J	CHIP R	100K	J	1/16W	
R145			RK73HB1J473J	CHIP R	47K	J	1/16W	
R146,147			RK73HB1J104J	CHIP R	100K	J	1/16W	
R148			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R151			RK73HB1J104J	CHIP R	100K	J	1/16W	
R152			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R154-156			RK73HB1J474J	CHIP R	470K	J	1/16W	
R157			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R158			RK73HB1J474J	CHIP R	470K	J	1/16W	
R159			RK73HB1J104J	CHIP R	100K	J	1/16W	
R160			RK73HB1J471J	CHIP R	470	J	1/16W	
R161			RK73HB1J103J	CHIP R	10K	J	1/16W	
R162			RK73HB1J474J	CHIP R	470K	J	1/16W	
R163			RK73HB1J471J	CHIP R	470	J	1/16W	
R164,165			RK73HB1J474J	CHIP R	470K	J	1/16W	
R166-168			RK73HB1J103J	CHIP R	10K	J	1/16W	
R169,170			RK73HB1J474J	CHIP R	470K	J	1/16W	
R171			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R172			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R173			RK73HB1J474J	CHIP R	470K	J	1/16W	
R174,175			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R176			RK73HB1J103J	CHIP R	10K	J	1/16W	
R177			RK73HB1J474J	CHIP R	470K	J	1/16W	
R178			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R179			RK73HB1J473J	CHIP R	47K	J	1/16W	
R181			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R182			RK73HB1J473J	CHIP R	47K	J	1/16W	
R184			RK73HB1J473J	CHIP R	47K	J	1/16W	
R185			RK73HB1J100J	CHIP R	10	J	1/16W	
R187			RK73HB1J471J	CHIP R	470	J	1/16W	
R188,189			RK73HB1J104J	CHIP R	100K	J	1/16W	
R190			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R191-199			RK73HB1J104J	CHIP R	100K	J	1/16W	
R201,202			RK73HB1J103J	CHIP R	10K	J	1/16W	K2K3K7
R203			RK73HB1J000J	CHIP R	0.0	J	1/16W	K2K3K7
R204			RK73HB1J104J	CHIP R	100K	J	1/16W	K2K3K7
R205-212			RK73HB1J103J	CHIP R	10K	J	1/16W	K2K3K7
R215			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R219-221			RK73HB1J101J	CHIP R	100	J	1/16W	
R225-227			RK73HB1J101J	CHIP R	100	J	1/16W	
R230-284			RK73HB1J101J	CHIP R	100	J	1/16W	
R285			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R287			RK73HB1J333J	CHIP R	33K	J	1/16W	
R288			RK73HB1J393J	CHIP R	39K	J	1/16W	
R291			RK73HB1J822J	CHIP R	8.2K	J	1/16W	

PARTS LIST

CONTROL UNIT (X53-4390-XX)
TX-RX UNIT (X57-7650-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R292			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R293			RK73HB1J473J	CHIP R 47K J 1/16W	
R295			RK73HB1J223J	CHIP R 22K J 1/16W	
R997			RK73HB1J000J	CHIP R 0.0 J 1/16W	K
R998			RK73HB1J000J	CHIP R 0.0 J 1/16W	K2K7
R999			RK73HB1J000J	CHIP R 0.0 J 1/16W	K3
D1			UDZW3.9(B)	ZENER DIODE	K2K3K7
D13-16			1SS388F	DIODE	
D19,20			AVRM1005C270M	VARISTOR	
D22			AVRM1005C270M	VARISTOR	
D23			1SS301F	DIODE	
D24			1SS416	DIODE	
D25			1SS301F	DIODE	
D26			1SS388F	DIODE	
D27			AVRM1005C270M	VARISTOR	
IC1			**Note 1**	ROM IC	
IC3			**Note 1**	MICROPROCESSOR IC	
IC4			**Note 1**	SRAM IC	
IC5			XC6109C29ANN	ANALOGUE IC	
IC6			TC7SH08FU-F	MOS-IC	
IC7			RV5C386A	MOS-IC	
IC8			SM5023CNDH-G	MOS-IC	
IC9			TC7W66FK-F	MOS-IC	
IC10			**Note 1**	MOS-IC	
IC11,12			TPA6201A1DRBR	ANALOGUE IC	
IC13			AK2925T	MOS-IC	
IC15			PCA9535BS	MOS-IC	
IC16			XC61CC5602NR	MOS-IC	
IC17			S-812C31BPI-G	ANALOGUE IC	
IC18			TC7WZ245FK-F	MOS-IC	K2K3K7
IC19			TC74LCX245FK	MOS-IC	K2K3K7
Q1			2SB798AZ(DLDK	TRANSISTOR	K2K3K7
Q2			2SC4617(S)	TRANSISTOR	K2K3K7
Q3			2SB1132(Q,R)	TRANSISTOR	
Q4			SSM3K15TE(F)	FET	
Q5			UMG3N	TRANSISTOR	
Q6			EMD12	TRANSISTOR	
Q7,8			SSM6N16FE-F	FET	
Q10,11			SSM6L05FU-F	FET	
Q12			EMD12	TRANSISTOR	
Q13			2SA1955A-F	TRANSISTOR	
Q14,15			SSM3K15TE(F)	FET	
Q16			2SA1955A-F	TRANSISTOR	

TX-RX UNIT (X57-7650-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
D901			B30-2019-05	LED (RE/GR)	
C101			CK73HB1E103K	CHIP C 0.010UF K	
C102-106			CK73HB1H102K	CHIP C 1000PF K	
C107			CC73HCH1H330J	CHIP C 33PF J	
C108			CK73HB1H102K	CHIP C 1000PF K	
C110,111			CK73HB1H102K	CHIP C 1000PF K	
C112			CC73HCH1H270J	CHIP C 27PF J	
C113			CK73HB1H102K	CHIP C 1000PF K	
C114			CC73HCH1H180J	CHIP C 18PF J	
C116			CK73HB1H102K	CHIP C 1000PF K	
C118			CK73HB1H471K	CHIP C 470PF K	
C120			CC73GCH1H560J	CHIP C 56PF J	
C121			CK73HB1H102K	CHIP C 1000PF K	
C122			CC73GCH1H040B	CHIP C 4.0PF B	
C123			CC73HCH1H101J	CHIP C 100PF J	
C124			CK73HB1H102K	CHIP C 1000PF K	
C128			CK73HB1H102K	CHIP C 1000PF K	
C130			CK73HB1H102K	CHIP C 1000PF K	
C132			CK73HB1H102K	CHIP C 1000PF K	
C133			CK73GB1E105K	CHIP C 1.0UF K	
C134			CK73HB1E103K	CHIP C 0.010UF K	
C135			CK73GB1H102K	CHIP C 1000PF K	
C136			CK73HB1H102K	CHIP C 1000PF K	
C137			CC73GCH1H330J	CHIP C 33PF J	
C138			CK73GB0J475K	CHIP C 4.7UF K	
C139			CC73GCH1H390J	CHIP C 39PF J	
C140			CK73GB1H102K	CHIP C 1000PF K	
C141			CC73GCH1H220J	CHIP C 22PF J	
C142			CC73GCH1H680J	CHIP C 68PF J	
C144			CK73GB1H102K	CHIP C 1000PF K	
C145			CC73GCH1H270J	CHIP C 27PF J	
C146			CK73HB1E103K	CHIP C 0.010UF K	
C147			CC73GCH1H270J	CHIP C 27PF J	
C148			CK73GB1H102K	CHIP C 1000PF K	
C149			CC73HCH1H050B	CHIP C 5.0PF B	
C150			CC73HCH1H100C	CHIP C 10PF C	
C151			CC73HCH1H270J	CHIP C 27PF J	
C155			CC73HCH1H0R5B	CHIP C 0.5PF B	
C156			CC73HCH1H050B	CHIP C 5.0PF B	
C157			CC73HCH1H120J	CHIP C 12PF J	
C158,159			CK73GB1H102K	CHIP C 1000PF K	
C160			CK73HB1H102K	CHIP C 1000PF K	
C162,163			CK73HB1H102K	CHIP C 1000PF K	
C166,167			CC73HCH1H120J	CHIP C 12PF J	
C168,169			CC73GCH1H040B	CHIP C 4.0PF B	
C170			CC73HCH1H120J	CHIP C 12PF J	
C171			CC73HCH1H100C	CHIP C 10PF C	
C173			CK73HB1E103K	CHIP C 0.010UF K	
C174			CK73HB1H102K	CHIP C 1000PF K	
C176-178			CK73HB1H102K	CHIP C 1000PF K	
C180,181			CK73HB1H102K	CHIP C 1000PF K	
C182,183			CC73HCH1H150J	CHIP C 15PF J	
C184			CC73HCH1H180J	CHIP C 18PF J	
C185			CK73HB1E103K	CHIP C 0.010UF K	
C186			CK73HB1H102K	CHIP C 1000PF K	
C190			CC73GCH1H050B	CHIP C 5.0PF B	
C192			CC73GCH1H390J	CHIP C 39PF J	
C193,194			CC73GCH1H330J	CHIP C 33PF J	
C195			CC73HCH1H0R5B	CHIP C 0.5PF B	
C196,197			CC73GCH1H330J	CHIP C 33PF J	
C201			CK73GB1E105K	CHIP C 1.0UF K	
C203			CK73HB1E104K	CHIP C 0.10UF K	
C204			CK73HB1H102K	CHIP C 1000PF K	
C205			CC73HCH1H100C	CHIP C 10PF C	
C206			CK73HB1H102K	CHIP C 1000PF K	
C207			CC73HCH1H030B	CHIP C 3.0PF B	
C208			CK73HB1A104K	CHIP C 0.10UF K	
C210			CK73HB1H102K	CHIP C 1000PF K	
C212-215			CK73HB1H102K	CHIP C 1000PF K	
C217			CK73GB1E105K	CHIP C 1.0UF K	

Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

TX-RX UNIT (X57-7650-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C218,219			CK73HB1H102K	CHIP C	1000PF	K	
C220			CC73HCH1H060B	CHIP C	6.0PF	B	
C221			CC73HCH1H030B	CHIP C	3.0PF	B	
C222			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C223			CK73HB1H102K	CHIP C	1000PF	K	
C225			CC73GCH1H060B	CHIP C	6.0PF	B	
C227			CC73HCH1H150J	CHIP C	15PF	J	
C228			CC73HCH1H020B	CHIP C	2.0PF	B	
C229			CC73HCH1H180J	CHIP C	18PF	J	
C230			CK73GB1H102K	CHIP C	1000PF	K	
C231			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C232			CK73HB1A104K	CHIP C	0.10UF	K	
C233			CC73HCH1H090D	CHIP C	9.0PF	D	
C235			CK73HB1H471K	CHIP C	470PF	K	
C236			CK73HB1H102K	CHIP C	1000PF	K	
C237			CK73HB1C223K	CHIP C	0.022UF	K	
C238,239			CK73HB1H471K	CHIP C	470PF	K	
C240			CK73GB0J475K	CHIP C	4.7UF	K	
C241			CK73HB1A104K	CHIP C	0.10UF	K	
C242			CK73HB1H102K	CHIP C	1000PF	K	
C243			CK73HB1H471K	CHIP C	470PF	K	
C244,245			CK73HB1A104K	CHIP C	0.10UF	K	
C246			CK73GB1H103K	CHIP C	0.010UF	K	
C248			CC73GCH1H150J	CHIP C	15PF	J	
C250			CC73HCH1H270J	CHIP C	27PF	J	
C252			CC73HCH1H120J	CHIP C	12PF	J	
C253-256			CK73HB1E103K	CHIP C	0.010UF	K	
C257			CK73HB1A104K	CHIP C	0.10UF	K	
C259			CC73HCH1H470J	CHIP C	47PF	J	
C260			CC73HCH1H080D	CHIP C	8.0PF	D	
C261			CK73HB1H471K	CHIP C	470PF	K	
C262			CK73HB1E103K	CHIP C	0.010UF	K	
C263			CC73HCH1H220J	CHIP C	22PF	J	
C264			CC73HCH1H820J	CHIP C	82PF	J	
C265			CC73HCH1H680J	CHIP C	68PF	J	
C266			CK73HB1H102K	CHIP C	1000PF	K	
C267,268			CK73HB1A104K	CHIP C	0.10UF	K	
C270			CK73HB1A104K	CHIP C	0.10UF	K	
C272,273			CK73HB1E103K	CHIP C	0.010UF	K	
C274			CK73FB0J106K	CHIP C	10UF	K	
C275,276			CK73HB1A104K	CHIP C	0.10UF	K	
C277			CC73HCH1H390J	CHIP C	39PF	J	
C278,279			CC73HCH1H151J	CHIP C	150PF	J	
C281-287			CK73HB1A104K	CHIP C	0.10UF	K	
C288			CK73HB1H102K	CHIP C	1000PF	K	
C289			CC73HCH1H101J	CHIP C	100PF	J	
C290			CK73HB1H102K	CHIP C	1000PF	K	
C292,293			CK73HB1A104K	CHIP C	0.10UF	K	
C294			CK73HB1H471K	CHIP C	470PF	K	
C295,296			CC73HCH1H470J	CHIP C	47PF	J	
C301			CK73HB1H102K	CHIP C	1000PF	K	
C304,305			CK73HB1A104K	CHIP C	0.10UF	K	
C309			CK73HB1H471K	CHIP C	470PF	K	
C312			CK73GB1E105K	CHIP C	1.0UF	K	
C313			CK73HB1H102K	CHIP C	1000PF	K	
C315,316			CC73HCH1H101J	CHIP C	100PF	J	
C318			CK73HB1E103K	CHIP C	0.010UF	K	
C320			CK73HB1A104K	CHIP C	0.10UF	K	
C323			CK73HB1H471K	CHIP C	470PF	K	
C325			CK73HB0J105K	CHIP C	1.0UF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C329			CK73HB1H471K	CHIP C	470PF	K	
C330			C93-0787-05	CHIP C	0.1UF	J	
C331			CK73HB1H102K	CHIP C	1000PF	K	
C333			CS77CA1V0R1M	CHIP TNTL	0.1UF	35WV	
C334			CS77BA1E010M	CHIP TNTL	1.0UF	25WV	
C335			CC73HCH1H101J	CHIP C	100PF	J	
C336			CK73EB1H223K	CHIP C	0.022UF	K	
C338			CK73HB1H471K	CHIP C	470PF	K	
C340			CK73HB1H122K	CHIP C	1200PF	K	
C341			CK73HB1H102K	CHIP C	1000PF	K	
C343			CS77CP0J100M	CHIP TNTL	10UF	6.3WV	
C344-346			CK73HB1H471K	CHIP C	470PF	K	
C347			CC73HCH1H560J	CHIP C	56PF	J	
C348			CC73HCH1H100C	CHIP C	10PF	C	
C350			CK73HB1H182K	CHIP C	1800PF	K	
C352			CC73HCH1H010B	CHIP C	1.0PF	B	
C353			CC73HCH1H150J	CHIP C	15PF	J	
C354			CC73GCH1H040B	CHIP C	4.0PF	B	
C355			CC73HCH1H040B	CHIP C	4.0PF	B	
C356			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C357			CC73HCH1H100C	CHIP C	10PF	C	
C358			CK73HB1H471K	CHIP C	470PF	K	
C359			CC73GCH1H040B	CHIP C	4.0PF	B	
C360			CK73HB1H471K	CHIP C	470PF	K	
C361			CC73GCH1H060B	CHIP C	6.0PF	B	
C362			CC73HCH1H080D	CHIP C	8.0PF	D	
C363			CC73GCH1H050B	CHIP C	5.0PF	B	
C364			CC73HCH1H080D	CHIP C	8.0PF	D	
C365			CK73HB1H471K	CHIP C	470PF	K	
C366			CC73GCH1H030B	CHIP C	3.0PF	B	
C367			CK73HB1H471K	CHIP C	470PF	K	
C368			CC73GCH1H040B	CHIP C	4.0PF	B	
C369			CK73GB0J475K	CHIP C	4.7UF	K	
C370			CK73HB1H471K	CHIP C	470PF	K	
C371,372			CC73HCH1H0R5B	CHIP C	0.5PF	B	
C373,374			CK73HB1H471K	CHIP C	470PF	K	
C375			CC73HCH1H060B	CHIP C	6.0PF	B	
C376			CC73HCH1H020B	CHIP C	2.0PF	B	
C377-379			CK73HB1H102K	CHIP C	1000PF	K	
C381-383			CK73HB1H102K	CHIP C	1000PF	K	
C384			CK73HB0J105K	CHIP C	1.0UF	K	
C385			CC73HCH1H150J	CHIP C	15PF	J	
C386			CK73HB1H102K	CHIP C	1000PF	K	
C387			CK73GB1E105K	CHIP C	1.0UF	K	
C388			CK73GB1E153K	CHIP C	0.015UF	K	
C389			CK73GB0J475K	CHIP C	4.7UF	K	
C390			CC73HCH1H101J	CHIP C	100PF	J	
C393			CK73HB1H102K	CHIP C	1000PF	K	
C396,397			CK73HB1H102K	CHIP C	1000PF	K	
C399			CK73HB1H102K	CHIP C	1000PF	K	
C482			CK73FB0J106K	CHIP C	10UF	K	
C487			CC73HCH1H220J	CHIP C	22PF	J	
C500			CK73HB1E103K	CHIP C	0.010UF	K	
C503			CC73HCH1H101J	CHIP C	100PF	J	
C504			CK73HB1A104K	CHIP C	0.10UF	K	
C505,506			CC73HCH1H151J	CHIP C	150PF	J	
C507			CK73HB1A104K	CHIP C	0.10UF	K	
C508			CK73HB1H102K	CHIP C	1000PF	K	
C509			CK73HB0J105K	CHIP C	1.0UF	K	
C510,511			CK73HB1A104K	CHIP C	0.10UF	K	

PARTS LIST

TX-RX UNIT (X57-7650-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C512			CK73HB1H102K	CHIP C	1000PF	K	
C513			CC73HCH1H101J	CHIP C	100PF	J	
C515			CK73HB1A224K	CHIP C	0.22UF	K	
C516			CK73HB1E103K	CHIP C	0.010UF	K	
C518			CK73HB1A224K	CHIP C	0.22UF	K	
C519			CK73HB0J105K	CHIP C	1.0UF	K	
C520,521			CK73HB1A104K	CHIP C	0.10UF	K	
C522			CK73HB0J105K	CHIP C	1.0UF	K	
C524,525			CK73HB1A104K	CHIP C	0.10UF	K	
C527			CK73HB1A104K	CHIP C	0.10UF	K	
C528			CK73HB1H152K	CHIP C	1500PF	K	
C529			CK73HB1E103K	CHIP C	0.010UF	K	
C532			CK73HB1A104K	CHIP C	0.10UF	K	
C533			CK73HB1E103K	CHIP C	0.010UF	K	
C536			CC73HCH1H151J	CHIP C	150PF	J	
C537,538			CK73HB1A104K	CHIP C	0.10UF	K	
C539,540			CK73HB1E103K	CHIP C	0.010UF	K	
C542,543			CK73HB1E103K	CHIP C	0.010UF	K	
C544			CK73HB1A104K	CHIP C	0.10UF	K	
C545			CK73HB0J105K	CHIP C	1.0UF	K	
C546			CK73HB1E103K	CHIP C	0.010UF	K	
C547			CC73HCH1H100C	CHIP C	10PF	C	
C551			CK73HB1H102K	CHIP C	1000PF	K	
C552			CK73HB1E103K	CHIP C	0.010UF	K	
C554			CC73HCH1H101J	CHIP C	100PF	J	
C555			CK73HB0J105K	CHIP C	1.0UF	K	
C556			CK73HB1E103K	CHIP C	0.010UF	K	
C557-560			CK73HB1A104K	CHIP C	0.10UF	K	
C561			CC73HCH1H101J	CHIP C	100PF	J	
C562			CK73HB1A104K	CHIP C	0.10UF	K	
C563			CK73HB1H152K	CHIP C	1500PF	K	
C564			CK73HB1E103K	CHIP C	0.010UF	K	
C565			CC73HCH1H101J	CHIP C	100PF	J	
C566			CK73HB1H331K	CHIP C	330PF	K	
C567			CC73HCH1H101J	CHIP C	100PF	J	
C568			CK73HB1H821K	CHIP C	820PF	K	
C570			CK73HB1H471K	CHIP C	470PF	K	
C571			CK73HB1E562K	CHIP C	5600PF	K	
C573			CK73HB1A104K	CHIP C	0.10UF	K	
C574,575			CK73HB1H471K	CHIP C	470PF	K	
C576			CK73HB1C223K	CHIP C	0.022UF	K	
C577			CC73HCH1H101J	CHIP C	100PF	J	
C578			CK73HB1A104K	CHIP C	0.10UF	K	
C579			CK73HB1E103K	CHIP C	0.010UF	K	
C581			CK73HB1H471K	CHIP C	470PF	K	
C582			CK73HB1E103K	CHIP C	0.010UF	K	
C583			CK73HB1E682K	CHIP C	6800PF	K	
C585-587			CC73HCH1H101J	CHIP C	100PF	J	
C589			CK73HB1A224K	CHIP C	0.22UF	K	
C590,591			CK73HB1A104K	CHIP C	0.10UF	K	
C594			CC73HCH1H101J	CHIP C	100PF	J	
C595			CK73HB1H471K	CHIP C	470PF	K	
C598			CK73HB1H332K	CHIP C	3300PF	K	
C599-601			CC73HCH1H101J	CHIP C	100PF	J	
C602			CK73HB1E103K	CHIP C	0.010UF	K	
C603			CC73HCH1H101J	CHIP C	100PF	J	
C604-606			CK73HB0J105K	CHIP C	1.0UF	K	
C607,608			CC73HCH1H101J	CHIP C	100PF	J	
C609			CC73HCH1H150J	CHIP C	15PF	J	
C610			CC73HCH1H680J	CHIP C	68PF	J	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C611-613			CK73HB1A104K	CHIP C	0.10UF	K	
C614			CK73HB0J105K	CHIP C	1.0UF	K	
C615			CK73HB1A393K	CHIP C	0.039UF	K	
C616			CK73HB1E103K	CHIP C	0.010UF	K	
C617			CK73HB1A104K	CHIP C	0.10UF	K	
C618			CK73HB0J105K	CHIP C	1.0UF	K	
C619			CK73GB0J106K	CHIP C	10UF	K	
C620			CK73HB1H471K	CHIP C	470PF	K	
C621			CK73HB1C473K	CHIP C	0.047UF	K	
C622			CK73HB0J105K	CHIP C	1.0UF	K	
C701			CK73HB1H471K	CHIP C	470PF	K	
C703			CK73HB1H471K	CHIP C	470PF	K	
C704,705			CK73HB1H102K	CHIP C	1000PF	K	
C706			CK73GB1H104K	CHIP C	0.10UF	K	
C707			CK73GB1E105K	CHIP C	1.0UF	K	
C709			CK73GB0J106K	CHIP C	10UF	K	
C711			CK73GB1E105K	CHIP C	1.0UF	K	
C712			CK73GB1H104K	CHIP C	0.10UF	K	
C713			CK73GB1E105K	CHIP C	1.0UF	K	
C714			CK73HB1H471K	CHIP C	470PF	K	
C715			CK73HB1H102K	CHIP C	1000PF	K	
C716,717			CK73HB1H471K	CHIP C	470PF	K	
C719,720			CK73GB1E105K	CHIP C	1.0UF	K	
C721			CK73HB1H102K	CHIP C	1000PF	K	
C724			CK73GB1E105K	CHIP C	1.0UF	K	
C725			CK73HB1E682K	CHIP C	6800PF	K	
C727			CK73HB1H471K	CHIP C	470PF	K	
C728			CK73GB1E105K	CHIP C	1.0UF	K	
C730			C92-0822-05	CHIP TNTL	33UF	10WV	
C731,732			CK73HB0J105K	CHIP C	1.0UF	K	
C733			CK73HB1A104K	CHIP C	0.10UF	K	
C735			CK73HB1E103K	CHIP C	0.010UF	K	
C736			CK73GB1E105K	CHIP C	1.0UF	K	
C737			CC73HCH1H820J	CHIP C	82PF	J	
C739			CK73GB1E105K	CHIP C	1.0UF	K	
C740			CK73HB0J105K	CHIP C	1.0UF	K	
C741			CK73FB1E475K	CHIP C	4.7UF	K	
C742			CK73GB1E105K	CHIP C	1.0UF	K	
C744			CK73HB1H102K	CHIP C	1000PF	K	
C745			CK73HB0J105K	CHIP C	1.0UF	K	
C746			CK73FB1E475K	CHIP C	4.7UF	K	
C748			CC73HCH1H181J	CHIP C	180PF	J	
C749			CK73GB0J475K	CHIP C	4.7UF	K	
C750			CC73HCH1H220J	CHIP C	22PF	J	
C751			CK73HB1H471K	CHIP C	470PF	K	
C752			CK73FB1E475K	CHIP C	4.7UF	K	
C753			CK73GB1E105K	CHIP C	1.0UF	K	
C754			CK73FB1E475K	CHIP C	4.7UF	K	
C755			CK73GB1E105K	CHIP C	1.0UF	K	
C756			CK73FB1E475K	CHIP C	4.7UF	K	
C758			CK73GB1E105K	CHIP C	1.0UF	K	
C759			CK73HB1H102K	CHIP C	1000PF	K	
C761,762			CK73FB1E475K	CHIP C	4.7UF	K	
C763			CC73HCH1H101J	CHIP C	100PF	J	
C765			CS77CP1C2R2M	CHIP TNTL	2.2UF	16WV	
C766			CK73HB1A104K	CHIP C	0.10UF	K	
C767-769			CS77CP1C2R2M	CHIP TNTL	2.2UF	16WV	
C770,771			CK73HB1H102K	CHIP C	1000PF	K	
C772			CK73HB1E103K	CHIP C	0.010UF	K	
C773-785			CC73HCH1H470J	CHIP C	47PF	J	

PARTS LIST

TX-RX UNIT (X57-7650-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C786			CK73HB1H102K	CHIP C 1000PF K	
C787			CC73HCH1H470J	CHIP C 47PF J	
C788-791			CK73HB1H102K	CHIP C 1000PF K	
C792-796			CC73HCH1H470J	CHIP C 47PF J	
C797			CK73HB1H102K	CHIP C 1000PF K	
C798-819			CC73HCH1H470J	CHIP C 47PF J	
C821-834			CC73HCH1H470J	CHIP C 47PF J	
C836-846			CC73HCH1H470J	CHIP C 47PF J	
CN101,102			E04-0403-05	PIN SOCKET	
CN501			E40-6357-05	PIN ASSY	
CN502			E40-6586-05	SOCKET FOR PIN ASSY	
CN505			E41-3167-05	FLAT CABLE CONNECTOR	
CN707			E40-6846-05	PIN ASSY	
CN902			E40-6722-05	FLAT CABLE CONNECTOR	
CN903			E40-6464-05	FLAT CABLE CONNECTOR	
CN923			E40-6358-05	SOCKET FOR PIN ASSY	
CN941			E04-0403-05	PIN SOCKET	
F500			F53-0360-05	FUSE (0.25A)	
F700			F53-0372-05	FUSE (3.15A)	
F701			F53-0360-05	FUSE (0.25A)	
CD201			L79-1850-05	TUNING COIL	
CF201			L72-1017-05	CERAMIC FILTER	
CF203			L72-1017-05	CERAMIC FILTER	
CF204			L72-1021-05	CERAMIC FILTER	
CF250			L72-1040-05	CERAMIC FILTER	
L101,102			L41-1085-45	SMALL FIXED INDUCTOR (100NH)	
L103			L92-0140-05	CHIP FERRITE	
L104			L40-5675-92	SMALL FIXED INDUCTOR (56NH)	
L105			L40-1863-92	SMALL FIXED INDUCTOR (1.8NH)	
L106			L92-0149-05	CHIP FERRITE	
L107			L40-3975-92	SMALL FIXED INDUCTOR (39NH)	
L108			L40-1575-92	SMALL FIXED INDUCTOR (15NH)	
L109			L92-0149-05	CHIP FERRITE	
L110			L34-4577-05	AIR-CORE COIL	
L111			L34-4650-05	AIR-CORE COIL	
L113			L34-4567-05	AIR-CORE COIL	
L114			L41-2295-39	SMALL FIXED INDUCTOR (2.2UH)	
L115,116			L34-4576-05	AIR-CORE COIL	
L118			L34-4577-05	AIR-CORE COIL	
L119,120			L34-4576-05	AIR-CORE COIL	
L121			L41-8285-14	SMALL FIXED INDUCTOR (820NH)	
L122,123			L92-0446-05	BEADS CORE	
L124			L40-5675-71	SMALL FIXED INDUCTOR (56NH)	
L125,126			L34-4577-05	AIR-CORE COIL	
L201		✻	L34-4820-05	COIL	
L202		✻	L34-4821-05	COIL	
L203			L41-6885-14	SMALL FIXED INDUCTOR (680N)	
L204		✻	L34-4821-05	COIL	
L205		✻	L34-4820-05	COIL	
L206,207			L40-3975-71	SMALL FIXED INDUCTOR (39NH)	
L210			L41-4778-14	SMALL FIXED INDUCTOR (47NH)	
L211,212			L39-1272-15	TOROIDAL COIL	
L213			L92-0163-05	BEADS CORE	
L214			L39-1272-15	TOROIDAL COIL	
L216,217			L41-5685-14	SMALL FIXED INDUCTOR (560NH)	
L218			L40-6881-37	SMALL FIXED INDUCTOR (0.680UH)	
L219			L40-1885-92	SMALL FIXED INDUCTOR (180NH)	
L220			L40-1091-86	SMALL FIXED INDUCTOR (1.0UH)	
L221			L41-1585-14	SMALL FIXED INDUCTOR (150NH)	
L222			L41-1085-14	SMALL FIXED INDUCTOR (100NH)	
L224			L41-2278-14	SMALL FIXED INDUCTOR (22NH)	
L302			L92-0446-05	BEADS CORE	
L303			L41-4795-39	SMALL FIXED INDUCTOR (4.7UH)	
L304-307			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L308,309			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L310			L92-0163-05	BEADS CORE	
L311			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L312			L41-3985-20	SMALL FIXED INDUCTOR (390NH)	
L313			L92-0446-05	BEADS CORE	
L314			L33-1267-05	SMALL FIXED INDUCTOR (27NH)	
L315			L40-1875-71	SMALL FIXED INDUCTOR (18NH)	
L316			L33-0751-05	SMALL FIXED INDUCTOR (39UH)	
L317			L40-1575-71	SMALL FIXED INDUCTOR (15NH)	
L318			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L319			L40-1075-71	SMALL FIXED INDUCTOR (10NH)	
L320			L41-3985-20	SMALL FIXED INDUCTOR (390NH)	
L321,322			L40-2285-92	SMALL FIXED INDUCTOR (220NH)	
L323			L40-3975-71	SMALL FIXED INDUCTOR (39NH)	
L324			L92-0446-05	BEADS CORE	
L325			L40-4775-71	SMALL FIXED INDUCTOR (47NH)	
L327			L40-8275-71	SMALL FIXED INDUCTOR (82NH)	
L500			L92-0140-05	CHIP FERRITE	
L501			L92-0444-05	CHIP FERRITE	
L502			L92-0140-05	CHIP FERRITE	
L503,504			L92-0467-05	CHIP FERRITE	
L505,506			L92-0163-05	BEADS CORE	
L700			L92-0136-05	CHIP FERRITE	
L701,702			L92-0162-05	BEADS CORE	
L703			L92-0467-05	CHIP FERRITE	
L704			L92-0162-05	BEADS CORE	
L705			L33-1462-05	SMALL FIXED INDUCTOR (68UH)	
L706			L33-1469-05	SMALL FIXED INDUCTOR (68UH)	
L707			L33-1494-05	SMALL FIXED INDUCTOR (4.7UH)	
L708			L33-1462-05	SMALL FIXED INDUCTOR (68UH)	
L710			L92-0446-05	BEADS CORE	
X201		✻	L77-1961-15	VCXO (16.8MHZ/5PPM)	
X301			L77-1960-15	VCXO (16.8MHZ/1.5PPM)	
XF201			L71-0551-45	MCF (49.95MHZ)	
CP31,32			RK74HA1J101J	CHIP-COM 100 J 1/16W	
R101			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R102			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R103			RK73HB1J103J	CHIP R 10K J 1/16W	
R104			RK73HB1J330J	CHIP R 33 J 1/16W	
R105			RK73HB1J331J	CHIP R 330 J 1/16W	
R106			RK73HB1J220J	CHIP R 22 J 1/16W	
R107			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R108			RK73HB1J471J	CHIP R 470 J 1/16W	
R109			RK73HB1J330J	CHIP R 33 J 1/16W	
R110			RK73HB1J331J	CHIP R 330 J 1/16W	
R111			RK73HB1J271J	CHIP R 270 J 1/16W	
R112			RK73HB1J180J	CHIP R 18 J 1/16W	
R113			RK73HB1J271J	CHIP R 270 J 1/16W	
R114			RK73HB1J101J	CHIP R 100 J 1/16W	
R115			RK73GB2A100J	CHIP R 10 J 1/10W	
R116			RK73HB1J104J	CHIP R 100K J 1/16W	
R117			RK73HB1J103J	CHIP R 10K J 1/16W	
R118			RK73HB1J104J	CHIP R 100K J 1/16W	
R119,120			RK73EB2HR22F	CHIP R 0.22 F 1/2W	

If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

TX-RX UNIT (X57-7650-10)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R121,122			RK73HH1J154D	CHIP R	150K	D	1/16W	
R123			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R124			RK73HH1J154D	CHIP R	150K	D	1/16W	
R125			RK73GB2A103J	CHIP R	10K	J	1/10W	
R126			RK73GB2A101J	CHIP R	100	J	1/10W	
R127-129			RK73HH1J154D	CHIP R	150K	D	1/16W	
R130			RK73HB1J333J	CHIP R	33K	J	1/16W	
R131			RK73HB1J103J	CHIP R	10K	J	1/16W	
R132		✻	RK73FB2B3R3J	CHIP R	3.3	J	1/8W	
R133			RK73HB1J103J	CHIP R	10K	J	1/16W	
R134			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R135			RK73HB1J473J	CHIP R	47K	J	1/16W	
R136			RK73HB1J184J	CHIP R	180K	J	1/16W	
R137			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R140			RK73GB2A271J	CHIP R	270	J	1/10W	
R142			RK73GB2A271J	CHIP R	270	J	1/10W	
R144			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R147			RK73HB1J183J	CHIP R	18K	J	1/16W	
R149			RK73HB1J103J	CHIP R	10K	J	1/16W	
R150			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R152			RK73HB1J103J	CHIP R	10K	J	1/16W	
R153			RK73HB1J474J	CHIP R	470K	J	1/16W	
R156			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R157			RK73HB1J822J	CHIP R	8.2K	J	1/16W	
R158			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R159			RK73HB1J104J	CHIP R	100K	J	1/16W	
R160			RK73HB1J473J	CHIP R	47K	J	1/16W	
R163			RK73FB2B102J	CHIP R	1.0K	J	1/8W	
R164			RK73HB1J104J	CHIP R	100K	J	1/16W	
R201			RK73HB1J473J	CHIP R	47K	J	1/16W	
R202			RK73HB1J103J	CHIP R	10K	J	1/16W	
R203			RK73HH1J104D	CHIP R	100K	D	1/16W	
R204			RK73HH1J124D	CHIP R	120K	D	1/16W	
R205			RK73HB1J103J	CHIP R	10K	J	1/16W	
R207			RK73HB1J100J	CHIP R	10	J	1/16W	
R208			RK73HB1J473J	CHIP R	47K	J	1/16W	
R209			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R212,213			RK73HB1J103J	CHIP R	10K	J	1/16W	
R214			RK73HB1J121J	CHIP R	120	J	1/16W	
R215			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R216			RK73HB1J100J	CHIP R	10	J	1/16W	
R217			RK73HB1J473J	CHIP R	47K	J	1/16W	
R218			RK73HB1J122J	CHIP R	1.2K	J	1/16W	
R219			RK73HB1J330J	CHIP R	33	J	1/16W	
R220,221			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R222			RK73HB1J271J	CHIP R	270	J	1/16W	
R223			RK73HB1J220J	CHIP R	22	J	1/16W	
R224			RK73HB1J271J	CHIP R	270	J	1/16W	
R228			RK73HB1J271J	CHIP R	270	J	1/16W	
R229			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R231			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R233			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R234			RK73HB1J100J	CHIP R	10	J	1/16W	
R235			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R237			RK73HB1J681J	CHIP R	680	J	1/16W	
R238,239			RK73HB1J470J	CHIP R	47	J	1/16W	
R240			RK73HB1J221J	CHIP R	220	J	1/16W	
R241			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R242			RK73HB1J822J	CHIP R	8.2K	J	1/16W	
R243			RK73HB1J684J	CHIP R	680K	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R244			RK73HB1J470J	CHIP R	47	J	1/16W	
R247			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R249			RK73HB1J220J	CHIP R	22	J	1/16W	
R252			RK73HB1J154J	CHIP R	150K	J	1/16W	
R255			RK73HB1J153J	CHIP R	15K	J	1/16W	
R256			RK73HB1J563J	CHIP R	56K	J	1/16W	
R258			RK73HB1J474J	CHIP R	470K	J	1/16W	
R259			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R261			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R264			RK73HB1J100J	CHIP R	10	J	1/16W	
R265			RK73HH1J473D	CHIP R	47K	D	1/16W	
R266			RK73HH1J104D	CHIP R	100K	D	1/16W	
R268			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R269			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R272			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R273			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R275			RK73HB1J333J	CHIP R	33K	J	1/16W	
R276			RK73HB1J220J	CHIP R	22	J	1/16W	
R278			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R279			RK73HB1J182J	CHIP R	1.8K	J	1/16W	
R280,281			RK73HB1J392J	CHIP R	3.9K	J	1/16W	
R282			RK73HB1J104J	CHIP R	100K	J	1/16W	
R284			RK73HB1J103J	CHIP R	10K	J	1/16W	
R286			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R287			RK73HB1J223J	CHIP R	22K	J	1/16W	
R288,289			RK73HB1J392J	CHIP R	3.9K	J	1/16W	
R290			RK73HB1J220J	CHIP R	22	J	1/16W	
R294			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R295			RK73HB1J473J	CHIP R	47K	J	1/16W	
R303			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R306			RK73HB1J101J	CHIP R	100	J	1/16W	
R310			RK73HH1J184D	CHIP R	180K	D	1/16W	
R311			RK73HH1J473D	CHIP R	47K	D	1/16W	
R313-315			RK73HB1J100J	CHIP R	10	J	1/16W	
R316			RK73GB2A106J	CHIP R	10M	J	1/10W	
R318			RK73HB1J333J	CHIP R	33K	J	1/16W	
R319			RK73HB1J183J	CHIP R	18K	J	1/16W	
R321			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R322			RK73HB1J473J	CHIP R	47K	J	1/16W	
R323			RK73HB1J182J	CHIP R	1.8K	J	1/16W	
R325			RK73HB1J683J	CHIP R	68K	J	1/16W	
R327			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R328,329			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R330			RK73HB1J474J	CHIP R	470K	J	1/16W	
R331			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R334			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R335			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R336			RK73HB1J560J	CHIP R	56	J	1/16W	
R337			RK73HB1J473J	CHIP R	47K	J	1/16W	
R338			RK73HB1J474J	CHIP R	470K	J	1/16W	
R339			RK73HB1J220J	CHIP R	22	J	1/16W	
R340			RK73HB1J104J	CHIP R	100K	J	1/16W	
R341			RK73HB1J221J	CHIP R	220	J	1/16W	
R342			RK73HB1J121J	CHIP R	120	J	1/16W	
R343			RK73HB1J101J	CHIP R	100	J	1/16W	
R344			RK73HB1J224J	CHIP R	220K	J	1/16W	
R345			RK73HB1J154J	CHIP R	150K	J	1/16W	
R346			RK73HB1J101J	CHIP R	100	J	1/16W	
R350			RK73HB1J822J	CHIP R	8.2K	J	1/16W	
R351			RK73HB1J103J	CHIP R	10K	J	1/16W	

PARTS LIST

TX-RX UNIT (X57-7650-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R352			RK73HB1J681J	CHIP R 680 J 1/16W	
R353			RK73HB1J101J	CHIP R 100 J 1/16W	
R355,356			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R359			RK73HB1J561J	CHIP R 560 J 1/16W	
R360			RK73HB1J470J	CHIP R 47 J 1/16W	
R361			RK73HB1J473J	CHIP R 47K J 1/16W	
R363			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R364			RK73HB1J104J	CHIP R 100K J 1/16W	
R366			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R368			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R369			RK73HB1J471J	CHIP R 470 J 1/16W	
R372			RK73HB1J560J	CHIP R 56 J 1/16W	
R373			RK73HB1J473J	CHIP R 47K J 1/16W	
R501			RK73HB1J104J	CHIP R 100K J 1/16W	
R502			RK73HB1J683J	CHIP R 68K J 1/16W	
R503			RK73HB1J121J	CHIP R 120 J 1/16W	
R505			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R506			RK73HB1J104J	CHIP R 100K J 1/16W	
R507			RK73HB1J103J	CHIP R 10K J 1/16W	
R509			RK73HB1J104J	CHIP R 100K J 1/16W	
R511			RK73HB1J101J	CHIP R 100 J 1/16W	
R513			RK73HB1J101J	CHIP R 100 J 1/16W	
R514			RK73HB1J103J	CHIP R 10K J 1/16W	
R515			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R517			RK73HB1J101J	CHIP R 100 J 1/16W	
R518			RK73HB1J474J	CHIP R 470K J 1/16W	
R519			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R520			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R521			RK73HB1J224J	CHIP R 220K J 1/16W	
R522			RK73HB1J100J	CHIP R 10 J 1/16W	
R524			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R525			RK73HB1J473J	CHIP R 47K J 1/16W	
R526			RK73HB1J474J	CHIP R 470K J 1/16W	
R527			RK73HB1J473J	CHIP R 47K J 1/16W	
R528			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R529			RK73HB1J473J	CHIP R 47K J 1/16W	
R530			RK73HB1J474J	CHIP R 470K J 1/16W	
R531			RK73HB1J104J	CHIP R 100K J 1/16W	
R532,533			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R534			RK73HB1J220J	CHIP R 22 J 1/16W	
R535			RK73HB1J563J	CHIP R 56K J 1/16W	
R536			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R538			RK73HB1J103J	CHIP R 10K J 1/16W	
R541			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R544-547			RK73HB1J104J	CHIP R 100K J 1/16W	
R550			RK73HB1J563J	CHIP R 56K J 1/16W	
R553			RK73HB1J563J	CHIP R 56K J 1/16W	
R554			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R556			RK73HB1J683J	CHIP R 68K J 1/16W	
R557			RK73HB1J564J	CHIP R 560K J 1/16W	
R558,559			RK73HB1J104J	CHIP R 100K J 1/16W	
R560			RK73HB1J103J	CHIP R 10K J 1/16W	
R561			RK73HB1J334J	CHIP R 330K J 1/16W	
R562-565			RK73HB1J104J	CHIP R 100K J 1/16W	
R566			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R567			RK73HB1J104J	CHIP R 100K J 1/16W	
R568			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R569			RK73HB1J103J	CHIP R 10K J 1/16W	
R570			RK73HB1J224J	CHIP R 220K J 1/16W	
R571,572			RK73HB1J334J	CHIP R 330K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R573			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R574			RK73HB1J104J	CHIP R 100K J 1/16W	
R575			RK73HB1J473J	CHIP R 47K J 1/16W	
R576			RK73HB1J103J	CHIP R 10K J 1/16W	
R577			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R578			RK73HB1J473J	CHIP R 47K J 1/16W	
R579			RK73HB1J103J	CHIP R 10K J 1/16W	
R580			RK73HB1J104J	CHIP R 100K J 1/16W	
R581,582			RK73HB1J103J	CHIP R 10K J 1/16W	
R583,584			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R585			RK73HB1J274J	CHIP R 270K J 1/16W	
R586,587			RK73HB1J474J	CHIP R 470K J 1/16W	
R588			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R589,590			RK73HB1J473J	CHIP R 47K J 1/16W	
R591,592			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R593			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R594,595			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R596			RK73HB1J154J	CHIP R 150K J 1/16W	
R597-601			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R602			RK73HB1J274J	CHIP R 270K J 1/16W	
R603-608			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R610-612			RK73HB1J104J	CHIP R 100K J 1/16W	
R614			RK73HB1J154J	CHIP R 150K J 1/16W	
R615			RK73HB1J104J	CHIP R 100K J 1/16W	
R616			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R617			RK73HB1J473J	CHIP R 47K J 1/16W	
R618			RK73HB1J103J	CHIP R 10K J 1/16W	
R619,620			RK73HB1J104J	CHIP R 100K J 1/16W	
R621			RK73HB1J124J	CHIP R 120K J 1/16W	
R622			RK73HB1J223J	CHIP R 22K J 1/16W	
R623,624			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R625			RK73HB1J104J	CHIP R 100K J 1/16W	
R626			RK73HB1J183J	CHIP R 18K J 1/16W	
R627			RK73HB1J103J	CHIP R 10K J 1/16W	
R628			RK73HB1J183J	CHIP R 18K J 1/16W	
R629,630			RK73HB1J223J	CHIP R 22K J 1/16W	
R631			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R635,636			RK73HB1J471J	CHIP R 470 J 1/16W	
R637			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R638			RK73HB1J273J	CHIP R 27K J 1/16W	
R640			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R641			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R642			RK73HB1J473J	CHIP R 47K J 1/16W	
R643,644			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R645			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R646			RK73HB1J103J	CHIP R 10K J 1/16W	
R647			RK73HB1J471J	CHIP R 470 J 1/16W	
R648			RK73HB1J104J	CHIP R 100K J 1/16W	
R649			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R650			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R651			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R652			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R653,654			RK73HB1J103J	CHIP R 10K J 1/16W	
R655			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R656,657			RK73HB1J683J	CHIP R 68K J 1/16W	
R658			RK73HB1J474J	CHIP R 470K J 1/16W	
R659			RK73HB1J473J	CHIP R 47K J 1/16W	
R660			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R661			RK73HB1J684J	CHIP R 680K J 1/16W	
R662			RK73HB1J000J	CHIP R 0.0 J 1/16W	

PARTS LIST

TX-RX UNIT (X57-7650-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R663			RK73HB1J564J	CHIP R 560K J 1/16W	
R664			RK73HB1J473J	CHIP R 47K J 1/16W	
R665			RK73HB1J683J	CHIP R 68K J 1/16W	
R666			RK73HB1J153J	CHIP R 15K J 1/16W	
R667			RK73HB1J333J	CHIP R 33K J 1/16W	
R668			RK73HB1J564J	CHIP R 560K J 1/16W	
R669			RK73HB1J123J	CHIP R 12K J 1/16W	
R670			RK73HB1J104J	CHIP R 100K J 1/16W	
R671			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R672			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R673			RK73HB1J104J	CHIP R 100K J 1/16W	
R674			RK73HB1J471J	CHIP R 470 J 1/16W	
R675			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R676			RK73HB1J104J	CHIP R 100K J 1/16W	
R690			RK73HB1J103J	CHIP R 10K J 1/16W	
R693			RK73HB1J473J	CHIP R 47K J 1/16W	
R694,695			RK73HB1J104J	CHIP R 100K J 1/16W	
R697-699			RK73HB1J104J	CHIP R 100K J 1/16W	
R700-703			RK73HB1J474J	CHIP R 470K J 1/16W	
R704			RK73HB1J104J	CHIP R 100K J 1/16W	
R705			RK73HB1J474J	CHIP R 470K J 1/16W	
R706			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R707-709			RK73HB1J474J	CHIP R 470K J 1/16W	
R710			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R711			RK73HB1J474J	CHIP R 470K J 1/16W	
R712			RK73HB1J564J	CHIP R 560K J 1/16W	
R714			RK73HB1J154J	CHIP R 150K J 1/16W	
R716			RK73HB1J471J	CHIP R 470 J 1/16W	
R717			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R720			RK73HB1J473J	CHIP R 47K J 1/16W	
R722			RK73HH1J334D	CHIP R 330K D 1/16W	
R723			RK73HH1J124D	CHIP R 120K D 1/16W	
R724			RK73GB2A100J	CHIP R 10 J 1/10W	
R726			RK73HB1J474J	CHIP R 470K J 1/16W	
R727			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R729			RK73HB1J123J	CHIP R 12K J 1/16W	
R730			RK73HH1J334D	CHIP R 330K D 1/16W	
R731			RK73HH1J223D	CHIP R 22K D 1/16W	
R749			RK73HB1J104J	CHIP R 100K J 1/16W	
R750			RK73HB1J123J	CHIP R 12K J 1/16W	
R751			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R752			RK73HB1J470J	CHIP R 47 J 1/16W	
R753			RK73HB1J473J	CHIP R 47K J 1/16W	
R754			RK73HB1J100J	CHIP R 10 J 1/16W	
R756,757			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R759			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R761,762			RK73HB1J474J	CHIP R 470K J 1/16W	
R910			RK73HB1J474J	CHIP R 470K J 1/16W	
R912			RK73HB1J103J	CHIP R 10K J 1/16W	
R913			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R915			RK73HB1J564J	CHIP R 560K J 1/16W	
R916			RK73HB1J473J	CHIP R 47K J 1/16W	
S901			S64-0406-05	LEVER SWITCH	
S902			S70-0496-05	TACT SWITCH	
D101			RN142S	DIODE	
D105			HZU5CLL	ZENER DIODE	
D106-109			HVC131	DIODE	
D110,111			EZJZ0V500AA	VARISTOR	
D202-209			1SV281-F	VARIABLE CAPACITANCE DIODE	

Ref. No.	Address	New parts	Parts No.	Description	Destination
D210			RN142S	DIODE	
D303,304			HVC376B	VARIABLE CAPACITANCE DIODE	
D306-311			1SV282-F	VARIABLE CAPACITANCE DIODE	
D312			1SV278F	VARIABLE CAPACITANCE DIODE	
D313			MA2S111-F	DIODE	
D314			DA221	DIODE	
D500			RB706F-40	DIODE	
D501			MA2S111-F	DIODE	
D502			NNCD6.8G-A	ZENER DIODE	
D504			NNCD6.8G-A	ZENER DIODE	
D505			1SS416	DIODE	
D510-512			RB706F-40	DIODE	
D515,516			AVRM1005C270M	VARISTOR	
D517			DA221	DIODE	
D518,519			1SS416	DIODE	
D521			1SS416	DIODE	
D700			1SR154-400	DIODE	
D702			MA2S111-F	DIODE	
D704			1SS388F	DIODE	
D706			HRB0502A	DIODE	
IC101			TA75W01FUF	MOS-IC	
IC102,103			MASWSS0181	ANALOGUE IC	
IC104			TC75W51FK(F)	MOS-IC	
IC201			TLV2381IDBV	MOS-IC	
IC202			SPM5001	MOS-IC	
IC204			TA31137FNG	MOS-IC	
IC206,207			TC7W53FK(F)	MOS-IC	
IC250			MCP6021-E/OT	MOS-IC	
IC301			TLV2381IDBV	MOS-IC	
IC303			ADF4111BCP7	MOS-IC	
IC304			UPB1509GV	BI-POLAR IC	
IC414			MCP41100T	ANALOGUE IC	
IC500			TC75W51FK(F)	MOS-IC	
IC501			TC7MBD3245AFK	MOS-IC	
IC502			AK2330	MOS-IC	
IC503			TC75W51FK(F)	MOS-IC	
IC505			PCA9535BS	MOS-IC	
IC506			TC75S51FE(F)	MOS-IC	
IC507-509			TC7W53FK(F)	MOS-IC	
IC510			TC75W51FK(F)	MOS-IC	
IC511			TC7SH126FU-F	MOS-IC	
IC512,513			TC75W51FK(F)	MOS-IC	
IC514			TC75S51FE(F)	MOS-IC	
IC515			TC7S66FUF	MOS-IC	
IC516			TC75W51FK(F)	MOS-IC	
IC517			TC7SET08FU-F	MOS-IC	
IC700			TK11250CUCB	MOS-IC	
IC701			XC6209B502PR	MOS-IC	
IC702			XC6204B502MR	MOS-IC	
IC704			TK11250CUCB	MOS-IC	
IC705,706			XC6204B332M	MOS-IC	
IC707			XC6365D103M	MOS-IC	
IC708			XC9101D09AKR	ANALOGUE IC	
IC709			XC9235A15CM1	MOS-IC	
IC710			XC6204B332M	MOS-IC	
IC712			NJM2130F3-ZB	BI-POLAR IC	
IC713			LM2682MMX	MOS-IC	
IC714			LM73CIMKX-0	MOS-IC	
Q101			2SC5108(Y)F	TRANSISTOR	
Q102			2SC5455-A	TRANSISTOR	

PARTS LIST

TX-RX UNIT (X57-7650-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q103			RD01MUS1-T113	FET	
Q104			SSM3K15TE(F)	FET	
Q105			RD07MVS1-T122	FET	
Q106			DTA144EEB	DIGITAL TRANSISTOR	
Q107			SSM3K15TE(F)	FET	
Q110			2SJ243-A	FET	
Q111			EMD9	TRANSISTOR	
Q201			2SC4617(S)	TRANSISTOR	
Q202			3SK274✣J-FP	FET	
Q204			2SK1215-E(E)	FET	
Q205			2SC5108(Y)F	TRANSISTOR	
Q209			EMD9	TRANSISTOR	
Q306			2SK879-F(Y)	FET	
Q307			2SC4617(S)	TRANSISTOR	
Q308			SSM6L05FU-F	FET	
Q309			2SJ347F	FET	
Q310,311			2SK508NV(K52)	FET	
Q312-314			2SC5108(Y)F	TRANSISTOR	
Q315			2SC4617(S)	TRANSISTOR	
Q316			SSM6L05FU-F	FET	
Q417			SSM3K15TE(F)	FET	
Q502			2SC4617(S)	TRANSISTOR	
Q503			SSM3K15TE(F)	FET	
Q504			2SC4738(GR)F	TRANSISTOR	
Q505			2SA1832(GR)F	TRANSISTOR	
Q506			2SJ243-A	FET	
Q507			SSM3K15TE(F)	FET	
Q508			2SJ347F	FET	
Q509			SSM6N16FE-F	FET	
Q700,701			SSM6L05FU-F	FET	
Q703			SSM3K15TE(F)	FET	
Q704			TPC6108-F	FET	
Q705			SSM5H01TU-F	FET	
Q706			TPC6108-F	FET	
Q707			2SJ648-A	FET	
Q708			SSM3K15TE(F)	FET	
Q709			SSM6L05FU-F	FET	
TH101,102			B57331V2104J	THERMISTOR	

Ref. No.	Address	New parts	Parts No.	Description	Destination