EXPLODED VIEW (KOS-V1000)

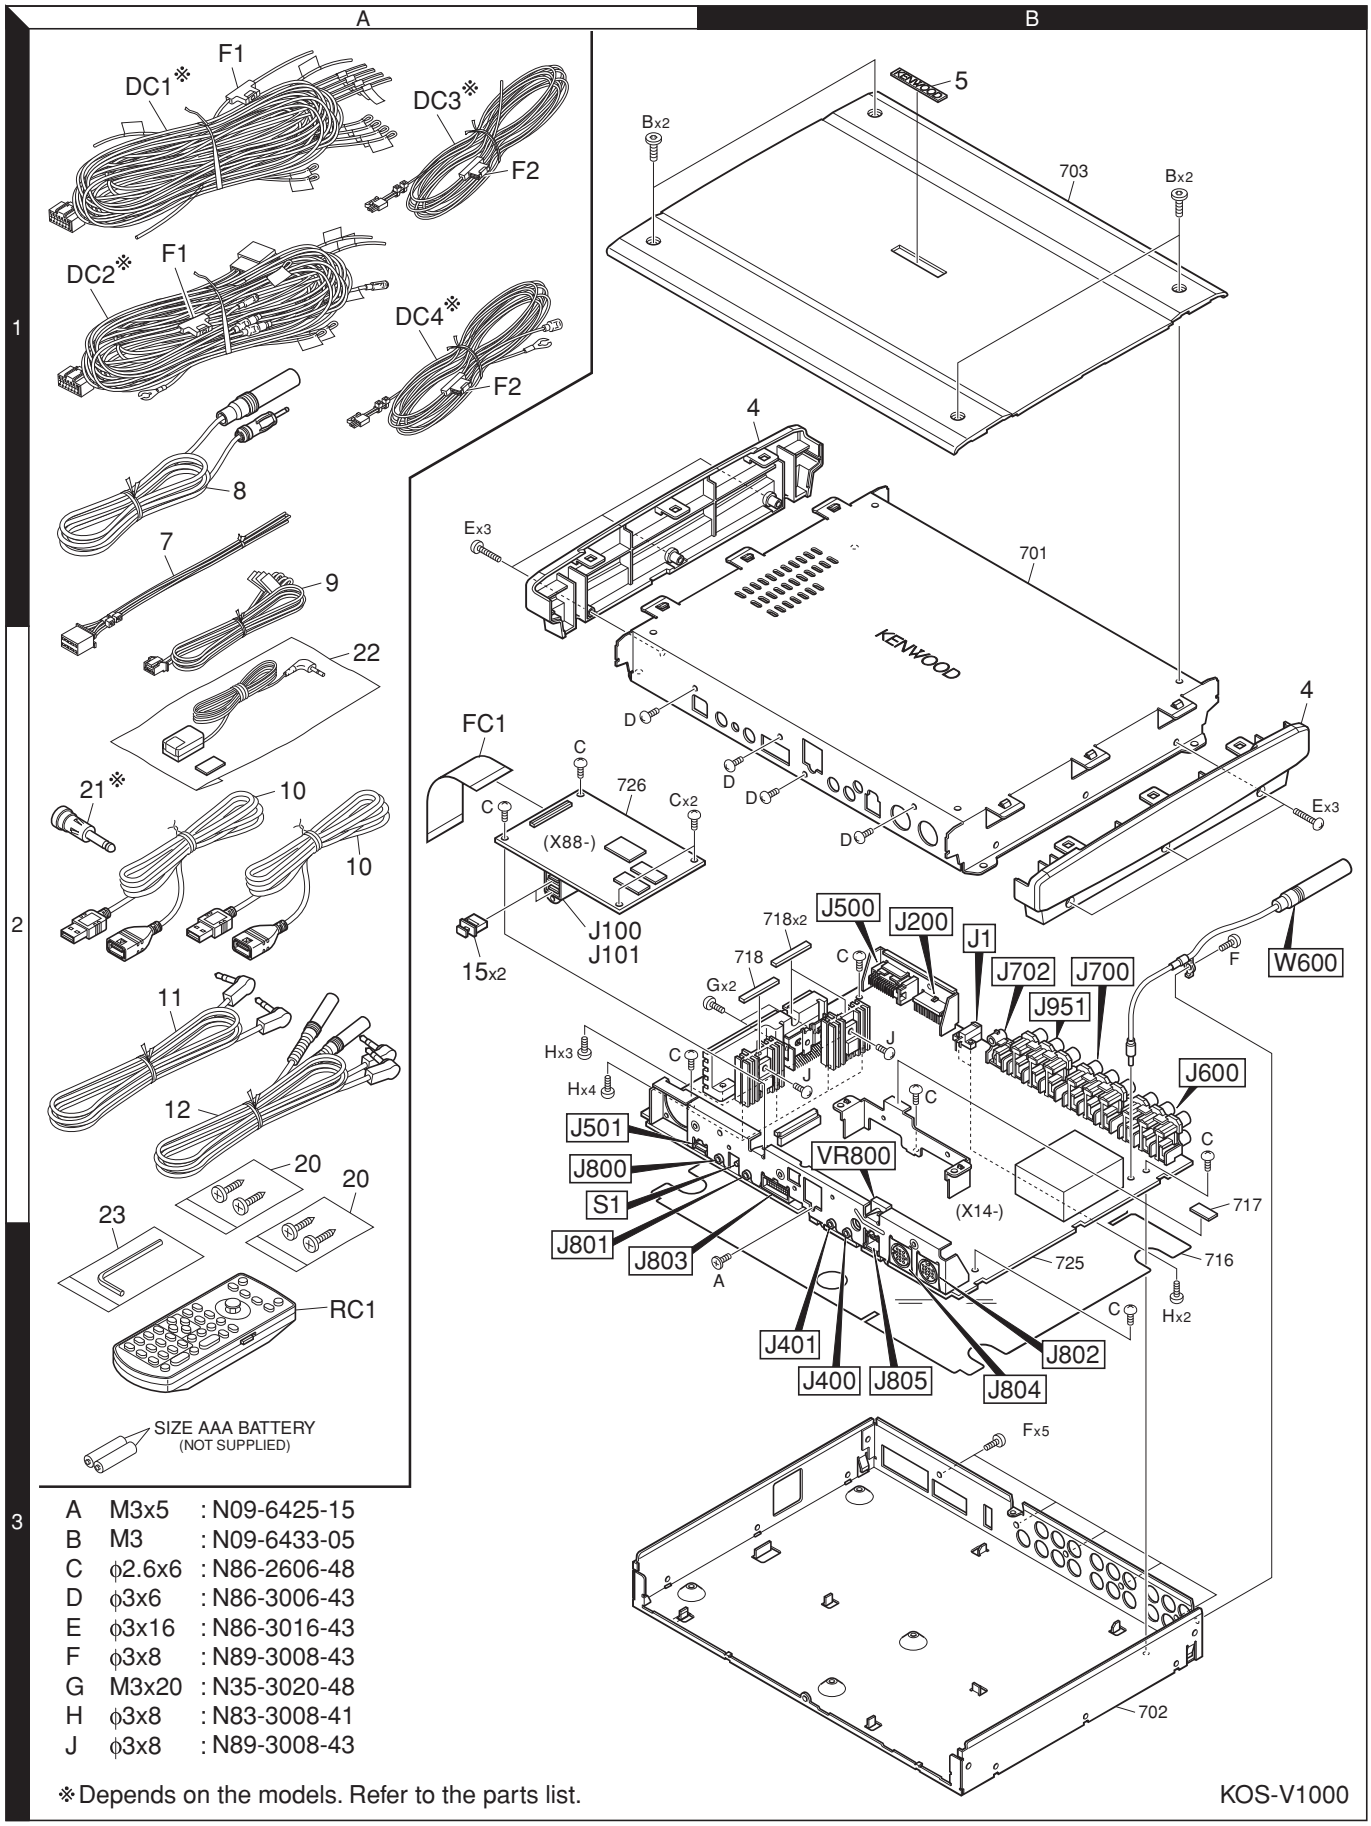

A	M3x5	:	N09-6425-15
B	M3	:	N09-6433-05
C	ϕ2.6x6	:	N86-2606-48
D	ϕ3x6	:	N86-3006-43
E	ϕ3x16	:	N86-3016-43
F	ϕ3x8	:	N89-3008-43
G	M3x20	:	N35-3020-48
H	ϕ3x8	:	N83-3008-41
J	ϕ3x8	:	N89-3008-43

※Depends on the models. Refer to the parts list.

KOS-V1000

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (KOS-V500)

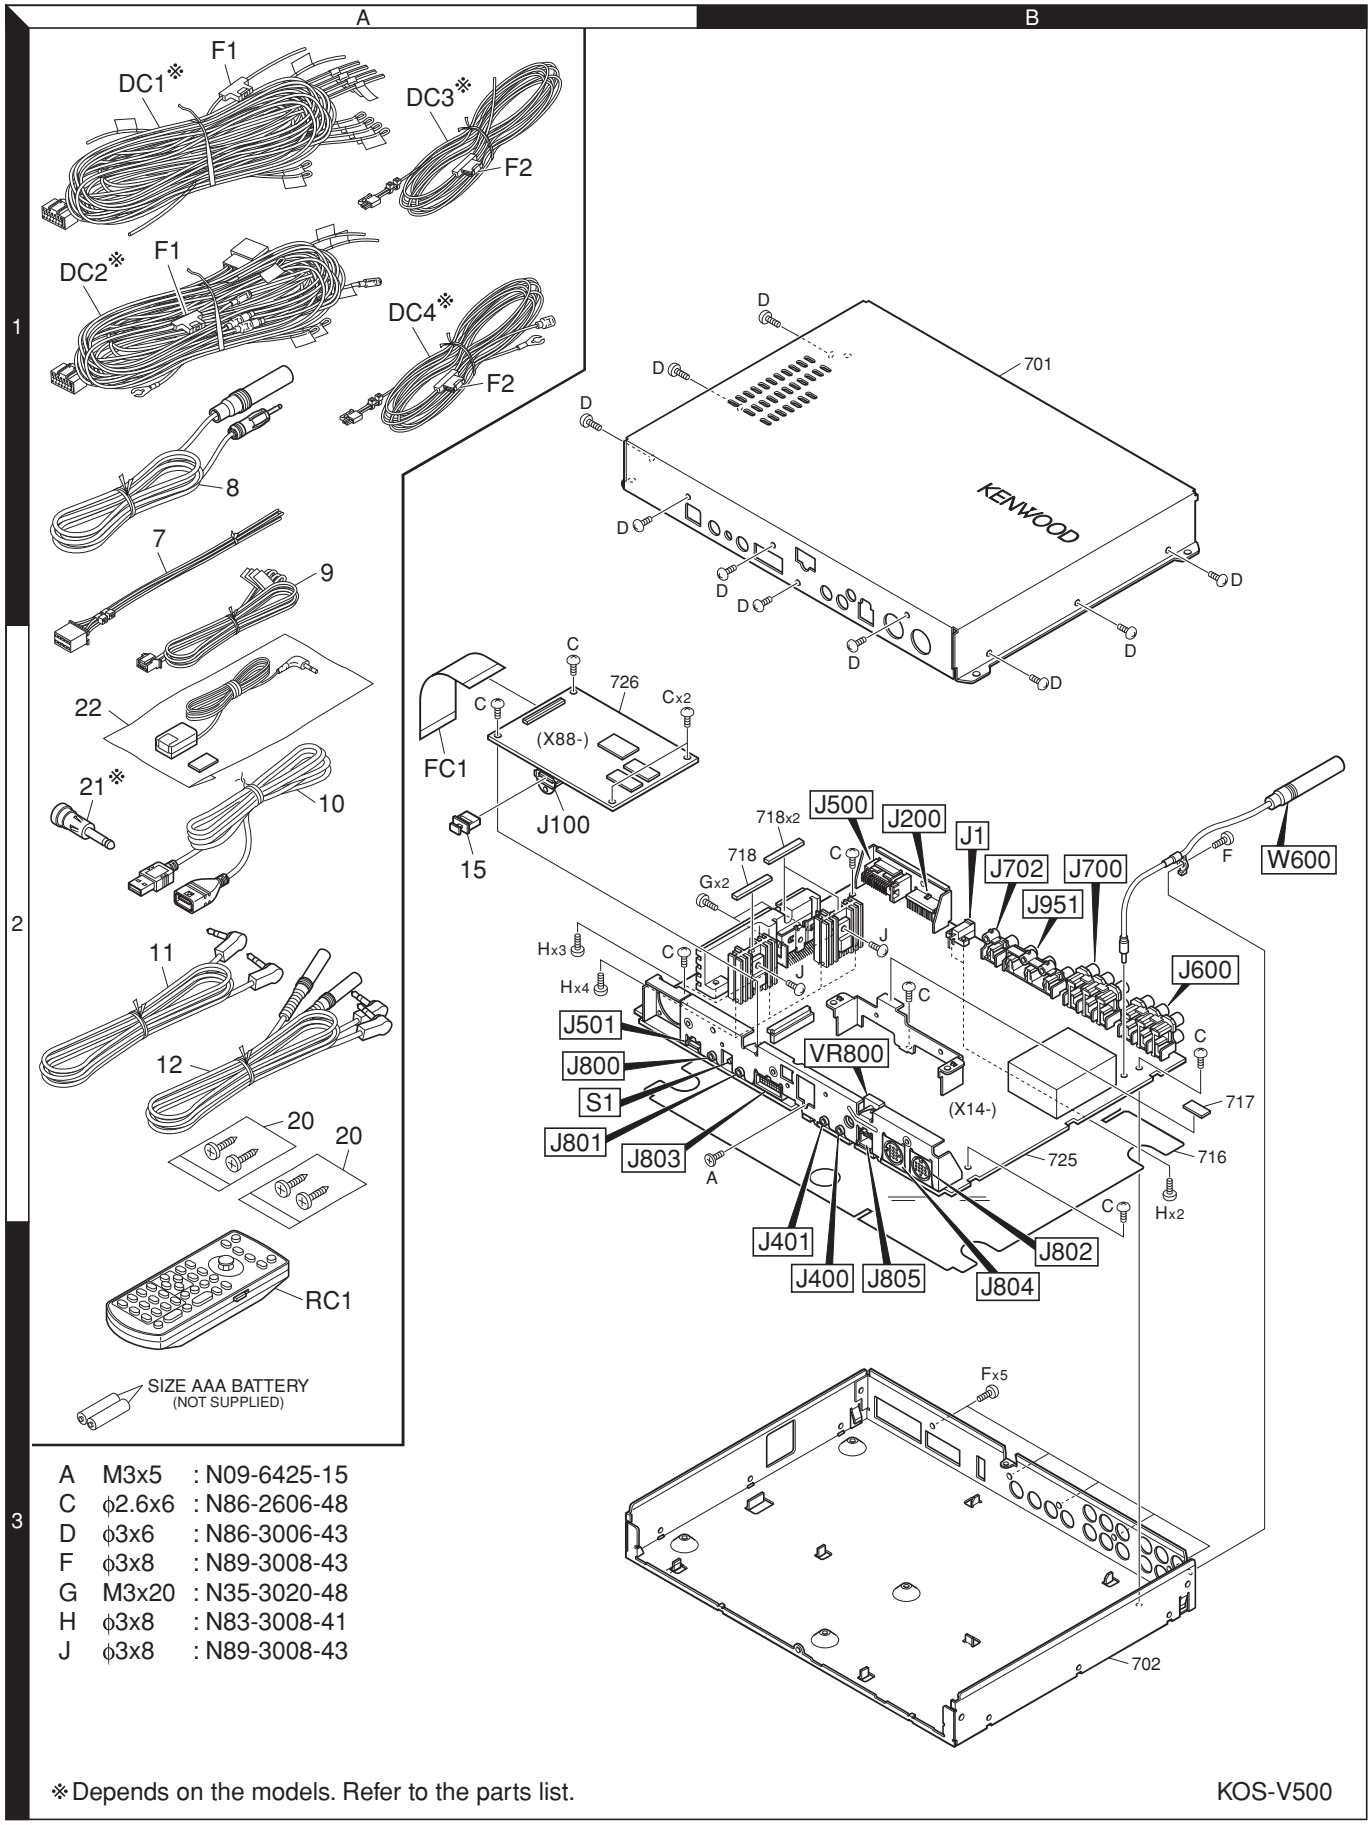

A	M3x5	: N09-6425-15
C	ϕ2.6x6	: N86-2606-48
D	ϕ3x6	: N86-3006-43
F	ϕ3x8	: N89-3008-43
G	M3x20	: N35-3020-48
H	ϕ3x8	: N83-3008-41
J	ϕ3x8	: N89-3008-43

※Depends on the models. Refer to the parts list.

KOS-V500

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KOS-V1000/V500					
4	1B	✻	A21-6604-02	DRESSING PANEL	K1M2E2
RC1	3A		A70-2082-15	REMOTE CONTROLLER ASSY	
5	1B		B43-0336-04	BADGE	K1M2E2
-			B46-0612-14	ID CARD	E1M1E2
-			B46-0612-14	ID CARD	M2
-			B59-1880-00	SUB-INSTRUCTION MANUAL	
-		✻	B64-3482-00	INSTRUCTION MANUAL (ENGLISH)	K
-		✻	B64-3483-00	INSTRUCTION MANUAL (ENGLISH)	E1
-		✻	B64-3484-00	INSTRUCTION MANUAL (ENGLISH)	M1
-		✻	B64-3584-00	INSTRUCTION MANUAL (ENGLISH)	K1
-		✻	B64-3585-00	INSTRUCTION MANUAL (ENGLISH)	E2
-		✻	B64-3586-00	INSTRUCTION MANUAL (ENGLISH)	M2
-		✻	B64-3788-00	INSTRUCTION MANUAL (FRENCH)	K1
-		✻	B64-3789-00	INSTRUCTION MANUAL (SPANISH)	K1
-		✻	B64-3790-00	INSTRUCTION MANUAL (FRENCH)	E2
-		✻	B64-3791-00	INSTRUCTION MANUAL (GERMAN)	E2
-		✻	B64-3792-00	INSTRUCTION MANUAL (DUTCH)	E2
-		✻	B64-3793-00	INSTRUCTION MANUAL (ITALIAN)	E2
-		✻	B64-3794-00	INSTRUCTION MANUAL (SPANISH)	E2
-		✻	B64-3795-00	INSTRUCTION MANUAL (PORTUGUESE)	E2
-		✻	B64-3796-00	INSTRUCTION MANUAL (S-CHINESE)	M2
-		✻	B64-3797-00	INSTRUCTION MANUAL (KOREAN)	M2
-		✻	B64-3798-00	INSTRUCTION MANUAL (FRENCH)	K
-		✻	B64-3799-00	INSTRUCTION MANUAL (SPANISH)	K
-		✻	B64-3800-00	INSTRUCTION MANUAL (FRENCH)	E1
-		✻	B64-3801-00	INSTRUCTION MANUAL (GERMAN)	E1
-		✻	B64-3802-00	INSTRUCTION MANUAL (DUTCH)	E1
-		✻	B64-3803-00	INSTRUCTION MANUAL (ITALIAN)	E1
-		✻	B64-3804-00	INSTRUCTION MANUAL (SPANISH)	E1
-		✻	B64-3805-00	INSTRUCTION MANUAL (PORTUGUESE)	E1
-		✻	B64-3806-00	INSTRUCTION MANUAL (S-CHINESE)	M1
-		✻	B64-3807-00	INSTRUCTION MANUAL (KOREAN)	M1
7	1A		E30-6145-05	CONNECTING CORD ASSY (190mm)	
8	1A		E30-6483-05	CORD WITH PLUG (ANT 6m)	
9	1A		E30-6693-05	CORD WITH PLUG (RELAY 1m)	KM1E1
9	1A	✻	E30-6694-05	CORD WITH PLUG (RELAY 1m)	K1M2E2
10	2A	✻	E30-6696-05	CORD WITH PLUG (USB 3.5m)	
11	2A	✻	E30-6697-05	CORD WITH PLUG (MINI 3P 6m)	
12	2A	✻	E30-6698-05	CORD WITH PLUG (MINI 3,2P 3.5m)	
DC1	1A	✻	E30-6682-05	DC CORD (6m)	KM1K1
DC1	1A	✻	E30-6682-05	DC CORD (6m)	M2
DC2	1A	✻	E30-6683-05	DC CORD (6m)	E1E2
DC3	1A	✻	E30-6700-05	DC CORD (2P GND1.5m,BU6m)	KM1K1
DC3	1A	✻	E30-6700-05	DC CORD (2P GND1.5m,BU6m)	M2
DC4	1A	✻	E30-6699-05	DC CORD (2P GND1.5m,BU6m)	E1E2
FC1	2A	✻	E39-0913-05	FLAT CABLE	
J100	2A	✻	E58-1068-05	RECTANGULAR RECEPTACLE (USB-1P)	KM1E1
J100,101	2A	✻	E58-1052-05	RECTANGULAR RECEPTACLE (USB-2P)	K1M2E2
15	2A	✻	F09-2890-04	CAP (USB)	
F1	1A		F05-1537-05	FUSE (BLADE TYPE) 15A	
F2	1A		F52-0004-05	FUSE (MINI BLADE TYPE) 5A	

Ref. No.	Add	New	Parts No.	Description	Destination
-		✻	H54-3861-03	ITEM CARTON CASE	K
-		✻	H54-3862-03	ITEM CARTON CASE	E1
-		✻	H54-3863-03	ITEM CARTON CASE	M1
-		✻	H54-3864-03	ITEM CARTON CASE	K1
-		✻	H54-3865-03	ITEM CARTON CASE	E2
-		✻	H54-3866-03	ITEM CARTON CASE	M2
20	2A		N99-1782-05	SCREW SET	
A	3B		N09-6425-15	MACHINE SCREW (M3.0X5)	
B	1B		N09-6433-05	DRESSED SCREW (M3)	K1M2E2
C	2B		N86-2606-48	BINDING HEAD TAPTITE SCREW	
D	1B	✻	N86-3006-43	BINDING HEAD TAPTITE SCREW	
E	1A	✻	N86-3016-43	BINDING HEAD TAPTITE SCREW	K1M2E2
F	3B		N89-3008-43	BINDING HEAD TAPTITE SCREW	
21	2A		T90-0552-05	ANTENNA ADAPTOR	E1E2
22	1A	✻	T95-0273-05	REMOTE CONTROL SENSOR ASSY (6m)	
23	2A	✻	W01-1699-05	ACCESSORIES	K1M2E2

VIDEO CONTROL UNIT(X14-982x-xx)

C1			CK73GB1H104K	CHIP C	0.10UF	K
C2			CK73FB1E474K	CHIP C	0.47UF	K
C3		✻	CD04AY1E471M	ELECTRO	470UF	25WV
C4			CK73GB1H104K	CHIP C	0.10UF	K
C6			CK73GB1H104K	CHIP C	0.10UF	K
C7			CD04AY0J331M	ELECTRO	330UF	6.3WV
C8			CD04BJ1A101M	ELECTRO	100UF	10WV
C9			CK73GB1H104K	CHIP C	0.10UF	K
C10			CD04AY1H220M	ELECTRO	22UF	50WV
C11			CK73EB1E225K	CHIP C	2.2UF	K
C13			CD04AY1H220M	ELECTRO	22UF	50WV
C14			CD04AY1E470M	ELECTRO	47UF	25WV
C15			CK73GB1H104K	CHIP C	0.10UF	K
C16			CK73GB1H103K	CHIP C	0.010UF	K
C17			CK73DF1E106Z	CHIP C	10UF	Z
C18			CK73FB1E154K	CHIP C	0.15UF	K
C19			CK73GB1H104K	CHIP C	0.10UF	K
C20			CC73GCH1H151J	CHIP C	150PF	J
C21			CK73GB1C224K	CHIP C	0.22UF	K
C22			CK73EB1E225K	CHIP C	2.2UF	K
C23			CK73FB1C105K	CHIP C	1.0UF	K
C24			CD04BJ1E470M	ELECTRO	47UF	25WV
C25			CK73GB1H103K	CHIP C	0.010UF	K
C26			CD04BJ1E470M	ELECTRO	47UF	25WV
C27			CK73GB1H103K	CHIP C	0.010UF	K
C28			CD04BJ1E470M	ELECTRO	47UF	25WV
C29			CK73GB1H104K	CHIP C	0.10UF	K
C30			CD04BJ1E101M	ELECTRO	100UF	25WV
C33			CK73FB1C105K	CHIP C	1.0UF	K
C34			CD04AY1A221M	ELECTRO	220UF	10WV
C36			CD04AY1E221M	ELECTRO	220UF	25WV
C37			CK73GB1H103K	CHIP C	0.010UF	K
C100			CK73GB1H473K	CHIP C	0.047UF	K
C102			CC73GCH1H221J	CHIP C	220PF	J
C103			CK73GB1H102K	CHIP C	1000PF	K

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C104			CK73GB1H104K	CHIP C	0.10UF	K	
C105			CK73GB1H102K	CHIP C	1000PF	K	
C106			CK73GB1H103K	CHIP C	0.010UF	K	
C107			CK73GB1H104K	CHIP C	0.10UF	K	
C108			CK73EB1E225K	CHIP C	2.2UF	K	
C109			CC73GCH1H101J	CHIP C	100PF	J	
C110			CC73GCH1H470J	CHIP C	47PF	J	
C111			CK73GB1H153K	CHIP C	0.015UF	K	
C112			CK73GB1H104K	CHIP C	0.10UF	K	
C113			CK73FB0J106K	CHIP C	10UF	K	
C114			CC73GCH1H470J	CHIP C	47PF	J	
C115			CK73GB1H223K	CHIP C	0.022UF	K	
C116			CK73GB1H104K	CHIP C	0.10UF	K	
C117			CK73GB1H102K	CHIP C	1000PF	K	
C119			CC73GCH1H221J	CHIP C	220PF	J	
C120			CK73GB1H683K	CHIP C	0.068UF	K	
C121,122			CK73GB1H103K	CHIP C	0.010UF	K	
C123			CK73GB1H102K	CHIP C	1000PF	K	
C124			CK73GB1H103K	CHIP C	0.010UF	K	
C125			CK73GB1H102K	CHIP C	1000PF	K	
C126			CK73GB1H103K	CHIP C	0.010UF	K	
C127			CK73GB1H102K	CHIP C	1000PF	K	
C128			C93-1367-05	CHIP C	10UF	K	
C129			CK73GB1H102K	CHIP C	1000PF	K	
C130			C93-1367-05	CHIP C	10UF	K	
C131			CK73FB0J106K	CHIP C	10UF	K	
C132			CK73GB1H104K	CHIP C	0.10UF	K	
C133-136			CK73GB1H102K	CHIP C	1000PF	K	
C137			CE32AV0G331M	CHIP EL	330UF	4.0WV	
C138			CE32AV0J221M	CHIP EL	220UF	6.3WV	
C139-142			CK73GB1H103K	CHIP C	0.010UF	K	
C143-146			CK73GB1C224K	CHIP C	0.22UF	K	
C191,192			CK73GB1H104K	CHIP C	0.10UF	K	
C193			CC73GCH1H390J	CHIP C	39PF	J	
C194			C93-1394-05	CHIP C	5PF	J	
C199			CC73GCH1H101J	CHIP C	100PF	J	
C200			C90-5612-05	ELECTRO	3900UF	16WV	
C201			CC73GCH1H101J	CHIP C	100PF	J	
C202,203			CK73GB1H104K	CHIP C	0.10UF	K	
C204			CK73GB1A105K	CHIP C	1.0UF	K	
C205			CC73GCH1H331J	CHIP C	330PF	J	
C206			CK73FB1C105K	CHIP C	1.0UF	K	
C207,208			CK73GB1H104K	CHIP C	0.10UF	K	
C209			CK73GB1A105K	CHIP C	1.0UF	K	
C210			CK73GB1H153K	CHIP C	0.015UF	K	
C211			CK73EB1A475K	CHIP C	4.7UF	K	
C212			CC73GCH1H151J	CHIP C	150PF	J	
C213			CC73GCH1H102J	CHIP C	1000PF	J	
C214			CK73GB1H104K	CHIP C	0.10UF	K	
C215			CD04BJ0J331M	ELECTRO	330UF	6.3WV	
C216			CC73GCH1H150J	CHIP C	15PF	J	
C217			CD04BJ1H220M	ELECTRO	22UF	50WV	
C218			CD04BJ1E101M	ELECTRO	100UF	25WV	
C219			CD04BJ1H220M	ELECTRO	22UF	50WV	
C220			CD04BJ1E101M	ELECTRO	100UF	25WV	

Ref. No.	Add	New	Parts No.	Description			Destination
C221			CK73GB1H104K	CHIP C	0.10UF	K	
C222			CD04BJ1H100M	ELECTRO	10UF	50WV	
C223			CD04BJ1E101M	ELECTRO	100UF	25WV	
C224			CK73FB1C105K	CHIP C	1.0UF	K	
C225			CK73GB1H104K	CHIP C	0.10UF	K	
C226			CD04BJ1H220M	ELECTRO	22UF	50WV	
C227			CD04BJ1E101M	ELECTRO	100UF	25WV	
C228-230			CK73FB1C105K	CHIP C	1.0UF	K	
C231			CK73GB1H103K	CHIP C	0.010UF	K	
C232			CK73EB1A106K	CHIP C	10UF	K	
C233			CC73GCH1H470J	CHIP C	47PF	J	
C234			CD04BJ1E470M	ELECTRO	47UF	25WV	
C235			CK73GB1H103K	CHIP C	0.010UF	K	
C236			CK73GB1H104K	CHIP C	0.10UF	K	
C240			CK73GB1A105K	CHIP C	1.0UF	K	
C241-246			CK73GB1H103K	CHIP C	0.010UF	K	
C247			CK73GB1A105K	CHIP C	1.0UF	K	
C248			CC73GCH1H821J	CHIP C	820PF	J	
C249			CK73EB1A106K	CHIP C	10UF	K	
C250			CK73GB1A105K	CHIP C	1.0UF	K	
C251			CD04BJ1H4R7M	ELECTRO	4.7UF	50WV	
C252			CK73GB1H104K	CHIP C	0.10UF	K	
C253			CK73GB1H682K	CHIP C	6800PF	K	
C255			CK73GB1H104K	CHIP C	0.10UF	K	
C257,258			CK73GB1H103K	CHIP C	0.010UF	K	
C259			CC73GCH1H050C	CHIP C	5.0PF	C	
C260			CD04BJ1H4R7M	ELECTRO	4.7UF	50WV	
C261			CK73GB1H104K	CHIP C	0.10UF	K	
C262			CC73GCH1H080D	CHIP C	8.0PF	D	
C263			CK73GB1A474K	CHIP C	0.47UF	K	
C264,265			CK73GB1A105K	CHIP C	1.0UF	K	
C267			CD04BJ1E470M	ELECTRO	47UF	25WV	
C268-270			CK73GB1A105K	CHIP C	1.0UF	K	
C271			CK73GB1H103K	CHIP C	0.010UF	K	
C272-277			CK73GB1A105K	CHIP C	1.0UF	K	
C279,280			CK73GB1A105K	CHIP C	1.0UF	K	
C281-284			CK73GB1H104K	CHIP C	0.10UF	K	
C285			CK73GB1A105K	CHIP C	1.0UF	K	
C286			CK73GB1H104K	CHIP C	0.10UF	K	
C287			CK73GB1H103K	CHIP C	0.010UF	K	
C288,289			CK73GB1A105K	CHIP C	1.0UF	K	
C291,292			CK73GB1H104K	CHIP C	0.10UF	K	
C293			CC73GCH1H101J	CHIP C	100PF	J	
C296			CK73GB1A105K	CHIP C	1.0UF	K	
C297			CK73GB1H561K	CHIP C	560PF	K	
C298			CK73GB1A105K	CHIP C	1.0UF	K	
C299			CK73GB1H561K	CHIP C	560PF	K	
C300			CK73GB1H104K	CHIP C	0.10UF	K	
C301			CK73GB1H103K	CHIP C	0.010UF	K	
C302			CK73GB1H104K	CHIP C	0.10UF	K	
C303,304			CC73GCH1H220J	CHIP C	22PF	J	
C305-307			CK73GB1H103K	CHIP C	0.010UF	K	
C308-311			CK73GB1H104K	CHIP C	0.10UF	K	
C312			CD04BJ1E101M	ELECTRO	100UF	25WV	
C313			CK73GB1H104K	CHIP C	0.10UF	K	

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C314			CD04AY1H100M	ELECTRO	10UF	50WV	
C315,316			CK73GB1H104K	CHIP C	0.10UF	K	
C317			CD04BJ1E101M	ELECTRO	100UF	25WV	
C318			CD04AY1H100M	ELECTRO	10UF	50WV	
C319			CK73GB1H104K	CHIP C	0.10UF	K	
C320			CD04AY1E470M	ELECTRO	47UF	25WV	
C321			CK73GB1H104K	CHIP C	0.10UF	K	
C322			CK73FB0J475K	CHIP C	4.7UF	K	
C323			CK73GB1H103K	CHIP C	0.010UF	K	
C324			CD04BJ1E101M	ELECTRO	100UF	25WV	
C325-328			CK73GB1H104K	CHIP C	0.10UF	K	
C400			CK73GB1H103K	CHIP C	0.010UF	K	
C401			CD04BJ1E470M	ELECTRO	47UF	25WV	
C402			CK73GB1H103K	CHIP C	0.010UF	K	
C403-405			CD04BJ1HR47M	ELECTRO	0.47UF	50WV	
C406,407			CK73GB1H471K	CHIP C	470PF	K	
C408			CD04BJ1HR47M	ELECTRO	0.47UF	50WV	
C411,412			CK73FB1A225K	CHIP C	2.2UF	K	
C413			CK73GB1A105K	CHIP C	1.0UF	K	
C414			CK73GB1H103K	CHIP C	0.010UF	K	
C415,416			CK73GB1H223K	CHIP C	0.022UF	K	
C451			CK73GB1H103K	CHIP C	0.010UF	K	
C452			CD04BJ1E470M	ELECTRO	47UF	25WV	
C453-455			CC73GCH1H470J	CHIP C	47PF	J	
C500			CK73FB1C105K	CHIP C	1.0UF	K	
C501			CK73GB1H103K	CHIP C	0.010UF	K	
C502,503			CK73FB1C105K	CHIP C	1.0UF	K	
C504,505			CK73GB1H103K	CHIP C	0.010UF	K	
C507			CK73GB1H223K	CHIP C	0.022UF	K	
C508			C90-6794-05	ELECTRO	6800UF	16WV	
C509			CK73FB1A335K	CHIP C	3.3UF	K	
C510			CK73FB1C105K	CHIP C	1.0UF	K	
C511			CK73GB1H104K	CHIP C	0.10UF	K	
C512			CK73GB1H103K	CHIP C	0.010UF	K	
C513			CK73GB1H223K	CHIP C	0.022UF	K	
C516			CD04AY0J331M	ELECTRO	330UF	6.3WV	
C517			CK73GB1A105K	CHIP C	1.0UF	K	
C518			CD04AY1A221M	ELECTRO	220UF	10WV	
C521			CK73GB1H473K	CHIP C	0.047UF	K	
C522			CK73EB1E105K	CHIP C	1.0UF	K	
C523			CK73GB1H473K	CHIP C	0.047UF	K	
C524			CK73EB1E105K	CHIP C	1.0UF	K	
C525			CC73GCH1H220J	CHIP C	22PF	J	
C526			CC73GCH1H221J	CHIP C	220PF	J	
C527			CK73GB1H222K	CHIP C	2200PF	K	
C528			CC73GCH1H220J	CHIP C	22PF	J	
C529			CC73GCH1H221J	CHIP C	220PF	J	
C530			CK73GB1H222K	CHIP C	2200PF	K	
C531			CC73GCH1H220J	CHIP C	22PF	J	
C532			CC73GCH1H221J	CHIP C	220PF	J	
C533			CK73GB1H222K	CHIP C	2200PF	K	
C534			CC73GCH1H220J	CHIP C	22PF	J	
C535			CC73GCH1H221J	CHIP C	220PF	J	
C536			CK73GB1H222K	CHIP C	2200PF	K	
C537			CC73GCH1H220J	CHIP C	22PF	J	

Ref. No.	Add	New	Parts No.	Description			Destination
C538			CC73GCH1H221J	CHIP C	220PF	J	
C539			CK73GB1H222K	CHIP C	2200PF	K	
C540			CC73GCH1H220J	CHIP C	22PF	J	
C541			CC73GCH1H221J	CHIP C	220PF	J	
C542			CK73GB1H222K	CHIP C	2200PF	K	
C543			CC73GCH1H220J	CHIP C	22PF	J	
C544			CC73GCH1H221J	CHIP C	220PF	J	
C545			CK73GB1H222K	CHIP C	2200PF	K	
C546			CC73GCH1H220J	CHIP C	22PF	J	
C547			CC73GCH1H221J	CHIP C	220PF	J	
C548			CK73GB1H222K	CHIP C	2200PF	K	
C551-553			CC73GCH1H221J	CHIP C	220PF	J	K1M2E2
C551-557			CC73GCH1H471J	CHIP C	470PF	J	KM1E1
C561-564			CC73GCH1H471J	CHIP C	470PF	J	K1M2E2
C600,601			CC73GCH1H101J	CHIP C	100PF	J	
C602,603			CK73FB1E474K	CHIP C	0.47UF	K	
C604			CC73GCH1H101J	CHIP C	100PF	J	
C605,606			CD04BJ1H3R3M	ELECTRO	3.3UF	50WV	
C607			CC73GCH1H101J	CHIP C	100PF	J	
C608			CK73FB1C105K	CHIP C	1.0UF	K	
C609-612			CK73FB1E474K	CHIP C	0.47UF	K	
C614-616			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C617,618			CC73GCH1H101J	CHIP C	100PF	J	
C619			CD04BJ1H100M	ELECTRO	10UF	50WV	
C620-623			CC73GCH1H101J	CHIP C	100PF	J	
C624			CK73GB1H103K	CHIP C	0.010UF	K	
C625			CK73GB1H152K	CHIP C	1500PF	K	
C626,627			CK73FB1C105K	CHIP C	1.0UF	K	
C628			CK73GB1H152K	CHIP C	1500PF	K	
C629			CD04BJ1E470M	ELECTRO	47UF	25WV	
C630			CC73GCH1H150J	CHIP C	15PF	J	
C631			CC73GCH1H221J	CHIP C	220PF	J	
C632			CC73GCH1H150J	CHIP C	15PF	J	
C633			CC73GCH1H221J	CHIP C	220PF	J	
C634,635			C90-6779-05	ELECTRO	0.47UF	16WV	
C636			CC73GCH1H150J	CHIP C	15PF	J	
C637			CC73GCH1H221J	CHIP C	220PF	J	
C638			CC73GCH1H150J	CHIP C	15PF	J	
C639			CC73GCH1H221J	CHIP C	220PF	J	
C640,641			C90-6780-05	ELECTRO	1UF	16WV	
C642,643			CC73GCH1H150J	CHIP C	15PF	J	
C644			CK73GB1A105K	CHIP C	1.0UF	K	
C645,646			C90-6779-05	ELECTRO	0.47UF	16WV	
C647			CD04BM1E330M	ELECTRO	33UF	25WV	KM1E1
C648,649			CC73GCH1H150J	CHIP C	15PF	J	
C650			CK73GB1A105K	CHIP C	1.0UF	K	
C651-654			CC73GCH1H221J	CHIP C	220PF	J	
C655,656			CK73GB1H103K	CHIP C	0.010UF	K	
C657			CD04BJ1H100M	ELECTRO	10UF	50WV	
C658,659			CK73GB1H103K	CHIP C	0.010UF	K	
C660			CD04BJ1H100M	ELECTRO	10UF	50WV	
C661,662			CK73GB1H102K	CHIP C	1000PF	K	KM1E1
C663			CD04BJ1H100M	ELECTRO	10UF	50WV	
C664			CC73GCH1H050C	CHIP C	5.0PF	C	K1M2E2
C665			CD04BJ1H100M	ELECTRO	10UF	50WV	

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C666,667			CK73GB1H102K	CHIP C	1000PF	K	KM1E1
C668,669			CD04BJ1H100M	ELECTRO	10UF	50WV	
C670,671			CK73GB1H102K	CHIP C	1000PF	K	KM1E1
C672			CD04BJ1H100M	ELECTRO	10UF	50WV	
C673-675			CK73GB1H104K	CHIP C	0.10UF	K	
C676-679			CD04BJ1A101M	ELECTRO	100UF	10WV	
C680-683			CK73GB1H103K	CHIP C	0.010UF	K	
C685-688			CC73GCH1H101J	CHIP C	100PF	J	
C689,690			CC73GCH1H100D	CHIP C	10PF	D	
C691			CD04BJ1H100M	ELECTRO	10UF	50WV	
C692			CC73GCH1H331J	CHIP C	330PF	J	
C693			CK73GB1H103K	CHIP C	0.010UF	K	
C694			CD04BJ1H100M	ELECTRO	10UF	50WV	
C696,697			CK73GB1H223K	CHIP C	0.022UF	K	
C700			CK73GB1A105K	CHIP C	1.0UF	K	KM1K1
C700			CK73GB1A105K	CHIP C	1.0UF	K	M2
C700-705			CK73GB1A105K	CHIP C	1.0UF	K	E1E2
C702			CK73GB1A105K	CHIP C	1.0UF	K	KM1K1
C702			CK73GB1A105K	CHIP C	1.0UF	K	M2
C704			CK73GB1A105K	CHIP C	1.0UF	K	KM1K1
C704			CK73GB1A105K	CHIP C	1.0UF	K	M2
C706			CK73GB1H104K	CHIP C	0.10UF	K	E1K1E2
C707			CD04BJ1H220M	ELECTRO	22UF	50WV	E1E2
C708-710			CK73GB1A105K	CHIP C	1.0UF	K	
C711			CK73GB1H104K	CHIP C	0.10UF	K	
C712			CK73GB1H561K	CHIP C	560PF	K	
C713			CK73GB1A105K	CHIP C	1.0UF	K	
C714			CK73GB1H561K	CHIP C	560PF	K	
C715			CK73GB1H104K	CHIP C	0.10UF	K	
C716			CK73EB0J226K	CHIP C	22UF	K	
C717-725			CK73GB1A105K	CHIP C	1.0UF	K	
C726			CK73EB0J226K	CHIP C	22UF	K	
C727,728			CK73GB1H104K	CHIP C	0.10UF	K	
C729			CK73GB1A105K	CHIP C	1.0UF	K	
C730			CK73GB1H104K	CHIP C	0.10UF	K	
C731			CD04BJ0J331M	ELECTRO	330UF	6.3WV	
C732			CK73GB1H104K	CHIP C	0.10UF	K	
C736			CD04AS1H4R7M	ELECTRO	4.7UF	50WV	
C737			CC73GCH1H471J	CHIP C	470PF	J	
C738			CD04AS1H4R7M	ELECTRO	4.7UF	50WV	
C739			CC73GCH1H471J	CHIP C	470PF	J	
C740,741			CD04AS1H4R7M	ELECTRO	4.7UF	50WV	
C742			CC73GCH1H471J	CHIP C	470PF	J	
C743			CD04AS1H4R7M	ELECTRO	4.7UF	50WV	
C744			CC73GCH1H471J	CHIP C	470PF	J	
C745			CD04AS1H4R7M	ELECTRO	4.7UF	50WV	
C746			CD04BJ1H100M	ELECTRO	10UF	50WV	
C747,748			CK73GB1H103K	CHIP C	0.010UF	K	
C750,751			CD04BJ1E470M	ELECTRO	47UF	25WV	
C752			CK73GB1H104K	CHIP C	0.10UF	K	
C753			CD04BJ1H100M	ELECTRO	10UF	50WV	
C754			CK73GB1H102K	CHIP C	1000PF	K	
C756			CK73GB1H102K	CHIP C	1000PF	K	
C757			CD04BJ1H100M	ELECTRO	10UF	50WV	
C760,761			CD04AS1H4R7M	ELECTRO	4.7UF	50WV	

Ref. No.	Add	New	Parts No.	Description			Destination
C764			CD04BJ1H100M	ELECTRO	10UF	50WV	K1M2E2
C765			CK73GB1A105K	CHIP C	1.0UF	K	E1K1M2
C765			CK73GB1A105K	CHIP C	1.0UF	K	E2
C766			CK73GB1H104K	CHIP C	0.10UF	K	KE1K1
C766			CK73GB1H104K	CHIP C	0.10UF	K	M2E2
C767			CK73EB1C106K	CHIP C	10UF	K	K1M2E2
C771-774			CC73GCH1H681J	CHIP C	680PF	J	
C800			CK73GB1H104K	CHIP C	0.10UF	K	
C801			CK73GB1H103K	CHIP C	0.010UF	K	
C802			CK73GB1H104K	CHIP C	0.10UF	K	
C803			CD04BJ1HR47M	ELECTRO	0.47UF	50WV	
C804			CD04BJ1E470M	ELECTRO	47UF	25WV	
C805-807			CD04BJ1HR47M	ELECTRO	0.47UF	50WV	
C808			CK73GB1H103K	CHIP C	0.010UF	K	
C809			CD04BJ1H100M	ELECTRO	10UF	50WV	
C810			CK73GB1H103K	CHIP C	0.010UF	K	
C811			CD04BJ1H220M	ELECTRO	22UF	50WV	
C812			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C813			CD04BJ1E470M	ELECTRO	47UF	25WV	
C814			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C817			CK73GB1H103K	CHIP C	0.010UF	K	
C818			CD04BJ1H220M	ELECTRO	22UF	50WV	
C819,820			CD04BJ1E470M	ELECTRO	47UF	25WV	
C821			CK73GB1H104K	CHIP C	0.10UF	K	KM1E1
C821			CK73GB1H104K	CHIP C	0.10UF	K	K1
C822			CK73GB1H103K	CHIP C	0.010UF	K	
C823,824			CD04BJ1E470M	ELECTRO	47UF	25WV	
C825,826			CC73GCH1H101J	CHIP C	100PF	J	
C827			CD04BJ1H100M	ELECTRO	10UF	50WV	KM1E1
C828			CK73GB1H103K	CHIP C	0.010UF	K	KM1E1
C829,830			CC73GCH1H150J	CHIP C	15PF	J	
C831			CK73GB1H103K	CHIP C	0.010UF	K	
C832,833			CC73GCH1H101J	CHIP C	100PF	J	
C834			CK73GB1H103K	CHIP C	0.010UF	K	
C835-838			CD04BJ1H100M	ELECTRO	10UF	50WV	
C839			CK73GB1H103K	CHIP C	0.010UF	K	
C900			CK73GB1H104K	CHIP C	0.10UF	K	KK1
C901			CK73GB1H102K	CHIP C	1000PF	K	
C902			CD04BJ0J331M	ELECTRO	330UF	6.3WV	
C903			CK73GB1H103K	CHIP C	0.010UF	K	
C904,905			CK73GB1H104K	CHIP C	0.10UF	K	
C906			CK73GB1H103K	CHIP C	0.010UF	K	
C907			CK73GB1H104K	CHIP C	0.10UF	K	
C908			CK73GB1A105K	CHIP C	1.0UF	K	
C909,910			CK73GB1H104K	CHIP C	0.10UF	K	
C911			CK73GB1H103K	CHIP C	0.010UF	K	
C913			CK73GB1E154K	CHIP C	0.15UF	K	
C914			CK73GB1H104K	CHIP C	0.10UF	K	KE1K1
C914			CK73GB1H104K	CHIP C	0.10UF	K	M2E2
C914			CK73GB1H223K	CHIP C	0.022UF	K	KM1E1
C917,918			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C920,921			CD04AY1H100M	ELECTRO	10UF	50WV	
C951			CK73GB1H102K	CHIP C	1000PF	K	K1M2E2
C952			CK73GB1H473K	CHIP C	0.047UF	K	K1M2E2
C953			CK73EB1E105K	CHIP C	1.0UF	K	K1M2E2

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C954			CK73GB1H473K	CHIP C 0.047UF K	K1M2E2
C955			CK73EB1E105K	CHIP C 1.0UF K	K1M2E2
C956			CK73GB1A105K	CHIP C 1.0UF K	
C957,958			CK73GB1H104K	CHIP C 0.10UF K	KE1K1
C957,958			CK73GB1H104K	CHIP C 0.10UF K	M2E2
C959			CD04BJ0J331M	ELECTRO 330UF 6.3WV	K1M2E2
C961			CD04BJ1H100M	ELECTRO 10UF 50WV	K1M2E2
C962,963			CK73GB1H102K	CHIP C 1000PF K	K1M2E2
C964			CD04BJ1H100M	ELECTRO 10UF 50WV	K1M2E2
C965-970			CK73GB1H103K	CHIP C 0.010UF K	
C971-975			CK73GB1H102K	CHIP C 1000PF K	K1M2E2
C976-987			CD04BJ1H100M	ELECTRO 10UF 50WV	K1M2E2
C988			CD04BJ1H220M	ELECTRO 22UF 50WV	K1M2E2
C989			CC73GCH1H102J	CHIP C 1000PF J	K1M2E2
C991			CK73GB1H104K	CHIP C 0.10UF K	KE1K1
C991			CK73GB1H104K	CHIP C 0.10UF K	M2E2
C992			CD04BJ1H100M	ELECTRO 10UF 50WV	K1M2E2
C993			CD04BJ1H220M	ELECTRO 22UF 50WV	K1M2E2
C994			CD04BJ1H100M	ELECTRO 10UF 50WV	K1M2E2
C995			CK73GB1H104K	CHIP C 0.10UF K	KE1K1
C995			CK73GB1H104K	CHIP C 0.10UF K	M2E2
C996			CK73EB0J226K	CHIP C 22UF K	
C997,998			CC73GCH1H102J	CHIP C 1000PF J	K1M2E2
CN202,203			E41-2637-05	PIN ASSY	
CN301			E41-2590-05	FLAT CABLE CONNECTOR	
J1			E58-0967-05	RECTANGULAR RECEPTACLE	
J200			E58-1035-05	RECTANGULAR RECEPTACLE	
J400		✻	E11-0653-05	3.5D PHONE JACK (LGY3309-0101 (B	
J401		✻	E11-0652-05	3.5D PHONE JACK (LGY3309-0140 (Y	
J500			E58-1043-05	RECTANGULAR RECEPTACLE	
J501		✻	E58-1067-05	RECTANGULAR RECEPTACLE	
J600			E63-0944-05	PIN JACK	KM1E1
J600		✻	E63-0949-05	PIN JACK	K1M2E2
J700			E63-0942-05	PIN JACK	
J702		✻	E63-0946-05	PIN JACK	
J800			E11-0647-05	3.5D PHONE JACK (LGY3309-0150 (G	
J801		✻	E11-0653-05	3.5D PHONE JACK (LGY3309-0101 (B	
J802			E56-0865-05	CYLINDRICAL RECEPTACLE	
J803			E58-1034-05	RECTANGULAR RECEPTACLE	
J804			E56-0864-05	CYLINDRICAL RECEPTACLE	
J805			E58-1031-05	RECTANGULAR RECEPTACLE	
J951			E63-0942-05	PIN JACK	K1M2E2
J951			E63-0943-05	PIN JACK	KM1E1
W600			E30-6492-05	CORD WITH PLUG (ANT)	
F1			F53-0374-05	FUSE 1.5A	
F500			F53-0297-05	FUSE (UL,CSA) 1.6A	
L1			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)	
L2			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)	
L3			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L4,5			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)	
L6,7			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L8			L92-0371-05	FERRITE CORE	
L10			L33-2283-05	CHOKE COIL (140UH)	

Ref. No.	Add	New	Parts No.	Description	Destination
L100,101			L33-2369-05	CHOKE COIL (10UH)	
L102			L33-2417-05	CHOKE COIL (10UH)	
L103			L33-2370-05	CHOKE COIL (10UH)	
L201,202			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L203			L92-0319-05	CHIP FERRITE	
L205,206			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L211-215			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L300,301			L92-0319-05	CHIP FERRITE	
L400			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L401			L92-0319-05	CHIP FERRITE	
L402			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L451			L92-0319-05	CHIP FERRITE	
⚠ L500		✻	L33-2348-05	CHOKE COIL	
L600-605			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L700-702			L41-1005-33	SMALL FIXED INDUCTOR (10U)	E1E2
L701,702			L41-1005-33	SMALL FIXED INDUCTOR (10U)	KM1K1
L701,702			L41-1005-33	SMALL FIXED INDUCTOR (10U)	M2
L900			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L951			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
X200			L78-0549-05	RESONATOR (15.734KHZ)	
X201			L77-2906-05	CRYSTAL RESONATOR (4.433619MHZ)	
X202			L77-2905-05	CRYSTAL RESONATOR (3.579545MHZ)	
X300			L78-1210-05	RESONATOR (4.95MHZ)	
X301			L77-2917-15	CRYSTAL RESONATOR (32.768KHZ)	
X600			L77-2002-05	CRYSTAL RESONATOR	
X900			L78-1220-05	RESONATOR (19.8000MHZ)	
G	2B		N35-3020-48	BINDING HEAD MACHINE SCREW	
H	2B	✻	N83-3008-41	PAN HEAD TAPTITE SCREW	
J	2B		N89-3008-43	BINDING HEAD TAPTITE SCREW	
R7			RK73GH2A363D	CHIP R 36K D 1/10W	
R8			RK73GH2A113D	CHIP R 11K D 1/10W	
R9			RK73GB2A104J	CHIP R 100K J 1/10W	
R10			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R11			RK73EB2E332J	CHIP R 3.3K J 1/4W	
R12			RK73GB2A153J	CHIP R 15K J 1/10W	
R13			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R14			RK73GB2A473J	CHIP R 47K J 1/10W	
R15			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R16			RK73GB2A823J	CHIP R 82K J 1/10W	
R17			RK73GB2A103J	CHIP R 10K J 1/10W	
R18			RK73GB2A224J	CHIP R 220K J 1/10W	
R19			RK73GB2A333J	CHIP R 33K J 1/10W	
R20			RK73GB2A224J	CHIP R 220K J 1/10W	
R21			RK73GB2A103J	CHIP R 10K J 1/10W	
R22			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R23			RK73GB2A101J	CHIP R 100 J 1/10W	
R25			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R27			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GH2A104D	CHIP R 100K D 1/10W	
R30			RK73GH2A113D	CHIP R 11K D 1/10W	
R31			RK73GH2A823D	CHIP R 82K D 1/10W	
R32			RK73GH2A103D	CHIP R 10K D 1/10W	
R33			RK73GB2A473J	CHIP R 47K J 1/10W	

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R34			RK73PB2H220J	CHIP R	22	J 1/2W	
R35			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R37			RK73PB2H300J	CHIP R	30	J 1/2W	
R39			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R41			RK73GH2A153D	CHIP R	15K	D 1/10W	
R42			RK73GH2A512D	CHIP R	5.1K	D 1/10W	
R43			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R45			RK73PB2H300J	CHIP R	30	J 1/2W	
R46,47			RK73GB2A223J	CHIP R	22K	J 1/10W	
R50			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R54			RK73EB2E222J	CHIP R	2.2K	J 1/4W	
R55			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R56			RK73GB2A473J	CHIP R	47K	J 1/10W	
R73,74			RK73FB2B221J	CHIP R	220	J 1/8W	
R75			RK73GH2A103D	CHIP R	10K	D 1/10W	
R101			RK73GB2A104J	CHIP R	100K	J 1/10W	
R102			RK73EB2E100J	CHIP R	10	J 1/4W	
R104			RK73GH2A333D	CHIP R	33K	D 1/10W	
R105			RK73GH2A103D	CHIP R	10K	D 1/10W	
R106			RK73GH2A561D	CHIP R	560	D 1/10W	
R107			RK73GB2A103J	CHIP R	10K	J 1/10W	
R109,110			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R111			RK73GB2A683J	CHIP R	68K	J 1/10W	
R113			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R114			RK73GB2A683J	CHIP R	68K	J 1/10W	
R115			RK73GH2A333D	CHIP R	33K	D 1/10W	
R116			RK73GH2A562D	CHIP R	5.6K	D 1/10W	
R117			RK73GH2A681D	CHIP R	680	D 1/10W	
R118			RK73GB2A101J	CHIP R	100	J 1/10W	
R120			RK73GB2A220J	CHIP R	22	J 1/10W	
R121			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R122			RK73GB2A220J	CHIP R	22	J 1/10W	
R123			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R124,125			RK73EB2E100J	CHIP R	10	J 1/4W	
R128,129			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R130,131			RK73EB2E100J	CHIP R	10	J 1/4W	
R132,133			R92-5159-05	CHIP R	0.033	J 1/4W	
R134,135			R92-5158-05	CHIP R	0.022	J 1/4W	
R136,137			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R138-141			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R199			RK73GH2A271D	CHIP R	270	D 1/10W	
R200-203			RK73EB2E750J	CHIP R	75	J 1/4W	
R204-213			RK73EB2E101J	CHIP R	100	J 1/4W	
R214			RK73GB2A103J	CHIP R	10K	J 1/10W	
R215			RK73GB2A331J	CHIP R	330	J 1/10W	
R216			RK73GB2A914J	CHIP R	910K	J 1/10W	
R217,218			RK73GB2A101J	CHIP R	100	J 1/10W	
R219			RK73GH2A182D	CHIP R	1.8K	D 1/10W	
R220			RK73GH2A471D	CHIP R	470	D 1/10W	
R221			RK73GB2A103J	CHIP R	10K	J 1/10W	
R222			RK73GH2A302D	CHIP R	3.0K	D 1/10W	
R223			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R224			RK73GB2A103J	CHIP R	10K	J 1/10W	
R225			RK73GB2A220J	CHIP R	22	J 1/10W	
R226,227			RK73GB2A103J	CHIP R	10K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R228,229			RK73GB2A220J	CHIP R	22	J 1/10W	
R230			RK73GB2A103J	CHIP R	10K	J 1/10W	
R231-233			RK73GH2A182D	CHIP R	1.8K	D 1/10W	
R234			RK73GH2A102D	CHIP R	1.0K	D 1/10W	
R235			RK73GH2A122D	CHIP R	1.2K	D 1/10W	
R236,237			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R238			RK73GH2A393D	CHIP R	39K	D 1/10W	
R239-241			RK73GH2A303D	CHIP R	30K	D 1/10W	
R242			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R243			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R246,247			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R249			RK73GB2A101J	CHIP R	100	J 1/10W	
R251			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R252			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R253			RK73GB2A473J	CHIP R	47K	J 1/10W	
R254			RK73GB2A101J	CHIP R	100	J 1/10W	
R255			RK73GB2A681J	CHIP R	680	J 1/10W	
R256			RK73GH2A183D	CHIP R	18K	D 1/10W	
R257			RK73GB2A103J	CHIP R	10K	J 1/10W	
R258			RK73GB2A394J	CHIP R	390K	J 1/10W	
R259-264			RK73GB2A101J	CHIP R	100	J 1/10W	
R265			RK73GB2A103J	CHIP R	10K	J 1/10W	
R266			RK73GB2A561J	CHIP R	560	J 1/10W	
R267,268			RK73GB2A101J	CHIP R	100	J 1/10W	
R269			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R270			RK73GB2A105J	CHIP R	1.0M	J 1/10W	
R271			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R272			RK73GB2A105J	CHIP R	1.0M	J 1/10W	
R273			RK73GH2A681D	CHIP R	680	D 1/10W	
R274			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R275-277			RK73GH2A362D	CHIP R	3.6K	D 1/10W	
R278			RK73GB2A101J	CHIP R	100	J 1/10W	
R280			RK73GB2A822J	CHIP R	8.2K	J 1/10W	
R281			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R282			RK73GB2A101J	CHIP R	100	J 1/10W	
R283			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R284-286			RK73GB2A101J	CHIP R	100	J 1/10W	
R287			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R288			RK73GB2A101J	CHIP R	100	J 1/10W	
R289			RK73GB2A561J	CHIP R	560	J 1/10W	
R290			RK73GB2A101J	CHIP R	100	J 1/10W	
R291			RK73GB2A473J	CHIP R	47K	J 1/10W	
R292			RK73GB2A334J	CHIP R	330K	J 1/10W	
R293			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R294			RK73GB2A473J	CHIP R	47K	J 1/10W	
R295,296			RK73GB2A101J	CHIP R	100	J 1/10W	
R297			RK73GB2A100J	CHIP R	10	J 1/10W	
R298,299			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R300-304			RK73GB2A101J	CHIP R	100	J 1/10W	
R305			RK73GB2A103J	CHIP R	10K	J 1/10W	
R306,307			RK73GB2A101J	CHIP R	100	J 1/10W	
R308			RK73GB2A103J	CHIP R	10K	J 1/10W	KK1
R308-310			RK73GB2A103J	CHIP R	10K	J 1/10W	M1M2
R308,309			RK73GB2A103J	CHIP R	10K	J 1/10W	E1E2
R310			RK73GB2A103J	CHIP R	10K	J 1/10W	KK1

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R310			RK73GB2A332J	CHIP R	3.3K	J	1/10W	E1E2
R311			RK73GB2A473J	CHIP R	47K	J	1/10W	
R312,313			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R314-318			RK73GB2A101J	CHIP R	100	J	1/10W	
R319			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R320			RK73GB2A473J	CHIP R	47K	J	1/10W	
R321			RK73GB2A750J	CHIP R	75	J	1/10W	
R322			RK73GB2A103J	CHIP R	10K	J	1/10W	
R323			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R324			RK73GB2A473J	CHIP R	47K	J	1/10W	
R325-338			RK73GB2A101J	CHIP R	100	J	1/10W	
R339,340			RK73GB2A473J	CHIP R	47K	J	1/10W	
R341-346			RK73GB2A101J	CHIP R	100	J	1/10W	
R347			RK73GB2A302J	CHIP R	3.0K	J	1/10W	
R348-350			RK73GB2A473J	CHIP R	47K	J	1/10W	
R356			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R357			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R358			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R359			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R360			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R361,362			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R363			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R364			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R365-368			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R374			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R378-380			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R381			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R382			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R383-385			RK73GB2A101J	CHIP R	100	J	1/10W	
R386			RK73GB2A473J	CHIP R	47K	J	1/10W	
R387			RK73GB2A223J	CHIP R	22K	J	1/10W	
R388			RK73GB2A473J	CHIP R	47K	J	1/10W	KM1E1
R389			RK73GB2A473J	CHIP R	47K	J	1/10W	K1M2E2
R390			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R391			RK73GB2A101J	CHIP R	100	J	1/10W	
R392			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R394-396			RK73GB2A101J	CHIP R	100	J	1/10W	
R397			RK73GB2A103J	CHIP R	10K	J	1/10W	
R399			RK73GB2A103J	CHIP R	10K	J	1/10W	
R400			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R401,402			RK73GB2A101J	CHIP R	100	J	1/10W	
R403			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R404,405			RK73GB2A473J	CHIP R	47K	J	1/10W	
R406			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R407			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R408-410			RK73EB2E100J	CHIP R	10	J	1/4W	
R411,412			RK73EB2E750J	CHIP R	75	J	1/4W	
R413,414			RK73GB2A103J	CHIP R	10K	J	1/10W	
R415			RK73GB2A104J	CHIP R	100K	J	1/10W	
R416			RK73EB2E100J	CHIP R	10	J	1/4W	
R417,418			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R420			RK73GB2A333J	CHIP R	33K	J	1/10W	
R421			RK73GB2A223J	CHIP R	22K	J	1/10W	
R422,423			RK73EB2E101J	CHIP R	100	J	1/4W	
R424		✻	RK73EB2E154J	CHIP R	150K	J	1/4W	

Ref. No.	Add	New	Parts No.	Description				Destination
R445			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R446			RK73GH2A203D	CHIP R	20K	D	1/10W	
R447			RK73GH2A103D	CHIP R	10K	D	1/10W	
R448			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R449			RK73GH2A203D	CHIP R	20K	D	1/10W	
R450			RK73GH2A103D	CHIP R	10K	D	1/10W	
R451,452			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R454			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R456			RK73GH2A203D	CHIP R	20K	D	1/10W	
R460			RK73GH2A103D	CHIP R	10K	D	1/10W	
R466,467			RK73EB2E2R2J	CHIP R	2.2	J	1/4W	K1M2E2
R472-477			RK73EB2E820J	CHIP R	82	J	1/4W	K1M2E2
R478-483			RK73GB2A104J	CHIP R	100K	J	1/10W	K1M2E2
R484-495			RK73GB2A103J	CHIP R	10K	J	1/10W	K1M2E2
R499			RK73EB2E000J	CHIP R	0.0	J	1/4W	
R500			RK73GB2A104J	CHIP R	100K	J	1/10W	
R502			RK73GB2A473J	CHIP R	47K	J	1/10W	
R504			RK73GB2A104J	CHIP R	100K	J	1/10W	
R505			RK73EB2E103J	CHIP R	10K	J	1/4W	
R507			RK73EB2E103J	CHIP R	10K	J	1/4W	
R508			RK73EB2E472J	CHIP R	4.7K	J	1/4W	
R509			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R510			RK73GB2A104J	CHIP R	100K	J	1/10W	
R511,512			RK73GB2A103J	CHIP R	10K	J	1/10W	
R513			RK73GB2A822J	CHIP R	8.2K	J	1/10W	
R520			RK73EB2E103J	CHIP R	10K	J	1/4W	
R521			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R522			RK73FB2B472J	CHIP R	4.7K	J	1/8W	
R523			RK73PB2H102J	CHIP R	1.0K	J	1/2W	
R524			RK73GB2A223J	CHIP R	22K	J	1/10W	
R525			RK73PB2H102J	CHIP R	1.0K	J	1/2W	
R526			RK73GB2A000J	CHIP R	0.0	J	1/10W	E1E2
R527			RK73GB2A103J	CHIP R	10K	J	1/10W	KM1K1
R527			RK73GB2A103J	CHIP R	10K	J	1/10W	M2
R528			RK73FB2B472J	CHIP R	4.7K	J	1/8W	
R529			RK73GB2A222J	CHIP R	2.2K	J	1/10W	KM1K1
R529			RK73GB2A222J	CHIP R	2.2K	J	1/10W	M2
R530,531			RK73PB2H102J	CHIP R	1.0K	J	1/2W	KM1K1
R530,531			RK73PB2H102J	CHIP R	1.0K	J	1/2W	M2
R532			RK73GB2A103J	CHIP R	10K	J	1/10W	KM1K1
R532			RK73GB2A103J	CHIP R	10K	J	1/10W	M2
R533			RK73GB2A473J	CHIP R	47K	J	1/10W	
R534			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R535			RK73FB2B561J	CHIP R	560	J	1/8W	
R536			RK73GB2A104J	CHIP R	100K	J	1/10W	
R537			RK73GB2A473J	CHIP R	47K	J	1/10W	
R545			RK73GH2A273D	CHIP R	27K	D	1/10W	
R546			RK73GH2A472D	CHIP R	4.7K	D	1/10W	
R550			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R551,552			RK73GB2A473J	CHIP R	47K	J	1/10W	
R553			RK73EB2E152J	CHIP R	1.5K	J	1/4W	
R554			RK73GB2A621J	CHIP R	620	J	1/10W	
R555			RK73GB2A242J	CHIP R	2.4K	J	1/10W	
R556,557			RK73PB2H2R0J	CHIP R	2.0	J	1/2W	
R558			RK73GB2A124J	CHIP R	120K	J	1/10W	

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R559			RK73GB2A103J	CHIP R	10K	J 1/10W	
R560			RK73GB2A473J	CHIP R	47K	J 1/10W	
R561			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R562,563			RK73GB2A473J	CHIP R	47K	J 1/10W	
R564			RK73EB2E152J	CHIP R	1.5K	J 1/4W	
R565			RK73GB2A621J	CHIP R	620	J 1/10W	
R566			RK73GB2A242J	CHIP R	2.4K	J 1/10W	
R567,568			RK73PB2H2R0J	CHIP R	2.0	J 1/2W	
R569			RK73GB2A124J	CHIP R	120K	J 1/10W	
R570			RK73GB2A103J	CHIP R	10K	J 1/10W	
R571			RK73GB2A473J	CHIP R	47K	J 1/10W	
R574-577			RK73GB2A101J	CHIP R	100	J 1/10W	
R578			RK73GB2A472J	CHIP R	4.7K	J 1/10W	K1M2E2
R579,580			RK73GB2A473J	CHIP R	47K	J 1/10W	K1M2E2
R581			RK73EB2E152J	CHIP R	1.5K	J 1/4W	K1M2E2
R582			RK73GB2A621J	CHIP R	620	J 1/10W	K1M2E2
R583			RK73GB2A242J	CHIP R	2.4K	J 1/10W	K1M2E2
R584,585			RK73PB2H2R0J	CHIP R	2.0	J 1/2W	K1M2E2
R586			RK73GB2A124J	CHIP R	120K	J 1/10W	K1M2E2
R587			RK73GB2A103J	CHIP R	10K	J 1/10W	K1M2E2
R588			RK73GB2A473J	CHIP R	47K	J 1/10W	K1M2E2
R589			RK73GB2A472J	CHIP R	4.7K	J 1/10W	K1M2E2
R590,591			RK73GB2A473J	CHIP R	47K	J 1/10W	K1M2E2
R592			RK73EB2E152J	CHIP R	1.5K	J 1/4W	K1M2E2
R593			RK73GB2A621J	CHIP R	620	J 1/10W	K1M2E2
R594			RK73GB2A242J	CHIP R	2.4K	J 1/10W	K1M2E2
R595,596			RK73PB2H2R0J	CHIP R	2.0	J 1/2W	K1M2E2
R597			RK73GB2A124J	CHIP R	120K	J 1/10W	K1M2E2
R598			RK73GB2A103J	CHIP R	10K	J 1/10W	K1M2E2
R599			RK73GB2A473J	CHIP R	47K	J 1/10W	K1M2E2
R600			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R601			RK73GB2A104J	CHIP R	100K	J 1/10W	
R602			RK73GB2A103J	CHIP R	10K	J 1/10W	
R603,604			RK73GB2A101J	CHIP R	100	J 1/10W	
R605			RK73GB2A103J	CHIP R	10K	J 1/10W	
R606,607			RK73GB2A101J	CHIP R	100	J 1/10W	
R608,609			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R610			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	
R611			RK73GB2A000J	CHIP R	0.0	J 1/10W	K1M2E2
R612			RK73FB2B000J	CHIP R	0.0	J 1/8W	K1M2E2
R613			RK73GB2A000J	CHIP R	0.0	J 1/10W	E1K1M2
R613			RK73GB2A000J	CHIP R	0.0	J 1/10W	E2
R614			RK73GB2A473J	CHIP R	47K	J 1/10W	
R615			RK73GB2A000J	CHIP R	0.0	J 1/10W	KM1E1
R616			RK73GB2A331J	CHIP R	330	J 1/10W	
R617			RK73GB2A473J	CHIP R	47K	J 1/10W	
R618			RK73GB2A183J	CHIP R	18K	J 1/10W	
R619			RK73GB2A911J	CHIP R	910	J 1/10W	
R620			RK73GB2A100J	CHIP R	10	J 1/10W	KM1E1
R621			RK73GB2A473J	CHIP R	47K	J 1/10W	
R622,623			RK73GB2A103J	CHIP R	10K	J 1/10W	
R624			RK73GB2A473J	CHIP R	47K	J 1/10W	
R625,626			RK73GB2A103J	CHIP R	10K	J 1/10W	
R627			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	
R628-634			RK73GB2A103J	CHIP R	10K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R635			RK73EB2E101J	CHIP R	100	J 1/4W	KM1E1
R636			RK73GB2A471J	CHIP R	470	J 1/10W	
R637			RK73GB2A223J	CHIP R	22K	J 1/10W	
R638,639			RK73GB2A103J	CHIP R	10K	J 1/10W	
R640			RK73GB2A223J	CHIP R	22K	J 1/10W	
R641			RK73GB2A473J	CHIP R	47K	J 1/10W	
R642			RK73EB2E101J	CHIP R	100	J 1/4W	KM1E1
R643			RK73GB2A471J	CHIP R	470	J 1/10W	
R644			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R645			RK73EB2E101J	CHIP R	100	J 1/4W	KM1E1
R646			RK73GB2A471J	CHIP R	470	J 1/10W	
R648			RK73GB2A223J	CHIP R	22K	J 1/10W	
R649			RK73GB2A103J	CHIP R	10K	J 1/10W	
R651			RK73GB2A103J	CHIP R	10K	J 1/10W	
R652			RK73GB2A223J	CHIP R	22K	J 1/10W	
R654			RK73EB2E101J	CHIP R	100	J 1/4W	KM1E1
R655			RK73GB2A471J	CHIP R	470	J 1/10W	
R656			RK73EB2E101J	CHIP R	100	J 1/4W	KM1E1
R657			RK73GB2A471J	CHIP R	470	J 1/10W	
R658			RK73GB2A223J	CHIP R	22K	J 1/10W	
R659,660			RK73GB2A103J	CHIP R	10K	J 1/10W	
R661			RK73GB2A223J	CHIP R	22K	J 1/10W	
R662			RK73EB2E101J	CHIP R	100	J 1/4W	KM1E1
R663			RK73GB2A471J	CHIP R	470	J 1/10W	
R664			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R665			RK73GB2A223J	CHIP R	22K	J 1/10W	
R666			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R667-669			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R671-674			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R689			RK73EB2E101J	CHIP R	100	J 1/4W	K1M2E2
R690			RK73GB2A471J	CHIP R	470	J 1/10W	K1M2E2
R691			RK73GB2A223J	CHIP R	22K	J 1/10W	K1M2E2
R692			RK73GB2A103J	CHIP R	10K	J 1/10W	
R693			RK73GB2A223J	CHIP R	22K	J 1/10W	K1M2E2
R694			RK73GB2A103J	CHIP R	10K	J 1/10W	
R695			RK73EB2E101J	CHIP R	100	J 1/4W	K1M2E2
R696			RK73GB2A471J	CHIP R	470	J 1/10W	K1M2E2
R697			RK73EB2E750J	CHIP R	75	J 1/4W	K1M2E2
R698			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R700-702			RK73GB2A000J	CHIP R	0.0	J 1/10W	KM1K1
R700-702			RK73GB2A000J	CHIP R	0.0	J 1/10W	M2
R703			RK73GB2A561J	CHIP R	560	J 1/10W	
R704			RK73GB2A334J	CHIP R	330K	J 1/10W	
R705			RK73GB2A103J	CHIP R	10K	J 1/10W	
R706,707			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R708			RK73EB2E100J	CHIP R	10	J 1/4W	
R709			RK73GB2A223J	CHIP R	22K	J 1/10W	
R710			RK73EB2E100J	CHIP R	10	J 1/4W	
R711			RK73GB2A223J	CHIP R	22K	J 1/10W	
R712,713			RK73EB2E100J	CHIP R	10	J 1/4W	
R714			RK73GB2A223J	CHIP R	22K	J 1/10W	
R715			RK73EB2E100J	CHIP R	10	J 1/4W	
R716			RK73GB2A223J	CHIP R	22K	J 1/10W	
R717			RK73EB2E100J	CHIP R	10	J 1/4W	
R718-721			RK73GB2A103J	CHIP R	10K	J 1/10W	

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R722			RK73EB2E101J	CHIP R 100	J	1/4W	
R723			RK73GB2A100J	CHIP R 10	J	1/10W	
R724-727			RK73GB2A183J	CHIP R 18K	J	1/10W	
R728			RK73EB2E101J	CHIP R 100	J	1/4W	
R729			RK73GB2A100J	CHIP R 10	J	1/10W	
R730,731			RK73GB2A750J	CHIP R 75	J	1/10W	
R732			RK73GB2A4R7J	CHIP R 4.7	J	1/10W	
R733,734			RK73GB2A222J	CHIP R 2.2K	J	1/10W	
R735			RK73GB2A621J	CHIP R 620	J	1/10W	
R736			RK73EB2E101J	CHIP R 100	J	1/4W	
R737			RK73GB2A471J	CHIP R 470	J	1/10W	
R738			RK73GB2A223J	CHIP R 22K	J	1/10W	
R739			RK73GB2A103J	CHIP R 10K	J	1/10W	
R742			RK73GB2A103J	CHIP R 10K	J	1/10W	
R743			RK73EB2E101J	CHIP R 100	J	1/4W	
R744			RK73GB2A471J	CHIP R 470	J	1/10W	
R745			RK73EB2E750J	CHIP R 75	J	1/4W	
R746			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R748			RK73EB2E101J	CHIP R 100	J	1/4W	
R749			RK73GB2A100J	CHIP R 10	J	1/10W	
R750			RK73GB2A750J	CHIP R 75	J	1/10W	
R754			RK73FB2B470J	CHIP R 47	J	1/8W	K1M2E2
R755			RK73GB2A272J	CHIP R 2.7K	J	1/10W	
R756			RK73GB2A362J	CHIP R 3.6K	J	1/10W	
R757,758			RK73GB2A472J	CHIP R 4.7K	J	1/10W	
R759			RK73GB2A103J	CHIP R 10K	J	1/10W	
R760			RK73GB2A242J	CHIP R 2.4K	J	1/10W	K1M2E2
R761			RK73GB2A101J	CHIP R 100	J	1/10W	
R762			RK73GB2A103J	CHIP R 10K	J	1/10W	
R763			RK73GH2A102D	CHIP R 1.0K	D	1/10W	K1M2E2
R764			RK73GB2A102J	CHIP R 1.0K	J	1/10W	K1M2E2
R765			RK73GB2A223J	CHIP R 22K	J	1/10W	
R766			RK73GB2A473J	CHIP R 47K	J	1/10W	K1M2E2
R767,768			RK73GB2A103J	CHIP R 10K	J	1/10W	
R769			RK73GB2A100J	CHIP R 10	J	1/10W	K1M2E2
R770			RK73GB2A123J	CHIP R 12K	J	1/10W	K1M2E2
R771-773			RK73GB2A750J	CHIP R 75	J	1/10W	E1E2
R774,775			RK73EB2E100J	CHIP R 10	J	1/4W	
R776,777			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R778			RK73GB2A391J	CHIP R 390	J	1/10W	K1M2E2
R779			RK73GH2A152D	CHIP R 1.5K	D	1/10W	K1M2E2
R780-783			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R784			RK73GH2A222D	CHIP R 2.2K	D	1/10W	K1M2E2
R785			RK73GH2A822D	CHIP R 8.2K	D	1/10W	K1M2E2
R786			RK73GH2A102D	CHIP R 1.0K	D	1/10W	K1M2E2
R788			RK73GB2A102J	CHIP R 1.0K	J	1/10W	K1M2E2
R789			RK73GH2A223D	CHIP R 22K	D	1/10W	K1M2E2
R790			RK73GH2A472D	CHIP R 4.7K	D	1/10W	K1M2E2
R791			RK73GH2A101D	CHIP R 100	D	1/10W	K1M2E2
R792			RK73GB2A4R7J	CHIP R 4.7	J	1/10W	K1M2E2
R798			RK73GB2A151J	CHIP R 150	J	1/10W	K1M2E2
R799			RK73GH2A101D	CHIP R 100	D	1/10W	K1M2E2
R800,801			RK73GB2A101J	CHIP R 100	J	1/10W	
R802			RK73GB2A104J	CHIP R 100K	J	1/10W	
R803			RK73EB2E102J	CHIP R 1.0K	J	1/4W	

Ref. No.	Add	New	Parts No.	Description			Destination
R805,806			RK73GB2A104J	CHIP R 100K	J	1/10W	
R807			RK73GB2A101J	CHIP R 100	J	1/10W	
R811			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R812			RK73EB2E100J	CHIP R 10	J	1/4W	
R813			RK73EB2E4R7J	CHIP R 4.7	J	1/4W	
R814			RK73EB2E100J	CHIP R 10	J	1/4W	
R815			RK73EB2E101J	CHIP R 100	J	1/4W	
R816,817			RK73EB2E432J	CHIP R 4.3K	J	1/4W	
R818,819			RK73EB2E101J	CHIP R 100	J	1/4W	
R820-822			RK73EB2E432J	CHIP R 4.3K	J	1/4W	
R823-826			RK73GB2A100J	CHIP R 10	J	1/10W	
R827			RK73GB2A750J	CHIP R 75	J	1/10W	
R828			RK73EB2E101J	CHIP R 100	J	1/4W	
R829			RK73GB2A750J	CHIP R 75	J	1/10W	
R830			RK73EB2E101J	CHIP R 100	J	1/4W	
R831			RK73GB2A750J	CHIP R 75	J	1/10W	
R832			RK73EB2E101J	CHIP R 100	J	1/4W	
R833			RK73GB2A750J	CHIP R 75	J	1/10W	
R834			RK73EB2E101J	CHIP R 100	J	1/4W	
R835,836			RK73EB2E102J	CHIP R 1.0K	J	1/4W	
R837-839			RK73EB2E101J	CHIP R 100	J	1/4W	
R840-842			RK73EB2E102J	CHIP R 1.0K	J	1/4W	
R843			RK73EB2E100J	CHIP R 10	J	1/4W	
R844			RK73EB2E4R7J	CHIP R 4.7	J	1/4W	
R845			RK73EB2E100J	CHIP R 10	J	1/4W	
R846			RK73GB2A222J	CHIP R 2.2K	J	1/10W	
R847			RK73GB2A4R7J	CHIP R 4.7	J	1/10W	
R848			RK73GB2A102J	CHIP R 1.0K	J	1/10W	
R849			RK73EB2E100J	CHIP R 10	J	1/4W	
R850			RK73EB2E4R7J	CHIP R 4.7	J	1/4W	
R851			RK73EB2E100J	CHIP R 10	J	1/4W	
R852			RK73GB2A100J	CHIP R 10	J	1/10W	
R853			RK73EB2E101J	CHIP R 100	J	1/4W	
R854			RK73GB2A100J	CHIP R 10	J	1/10W	
R855			RK73EB2E101J	CHIP R 100	J	1/4W	
R856			RK73GB2A100J	CHIP R 10	J	1/10W	
R857			RK73EB2E101J	CHIP R 100	J	1/4W	
R858			RK73GB2A100J	CHIP R 10	J	1/10W	
R859			RK73EB2E101J	CHIP R 100	J	1/4W	
R860,861			RK73GB2A390J	CHIP R 39	J	1/10W	
R862			RK73GB2A750J	CHIP R 75	J	1/10W	
R863			RK73GB2A470J	CHIP R 47	J	1/10W	
R864-866			RK73GB2A750J	CHIP R 75	J	1/10W	
R869,870			RK73EB2E102J	CHIP R 1.0K	J	1/4W	
R872			RK73GB2A101J	CHIP R 100	J	1/10W	
R873			RK73EB2E102J	CHIP R 1.0K	J	1/4W	
R876,877			RK73GB2A431J	CHIP R 430	J	1/10W	
R878			RK73GB2A4R7J	CHIP R 4.7	J	1/10W	
R879			RK73GB2A102J	CHIP R 1.0K	J	1/10W	KM1E1
R880			RK73GB2A682J	CHIP R 6.8K	J	1/10W	KM1E1
R881			RK73GH2A103D	CHIP R 10K	D	1/10W	
R882			RK73GB2A103J	CHIP R 10K	J	1/10W	KM1E1
R882			RK73GB2A103J	CHIP R 10K	J	1/10W	K1M2
R883			RK73GH2A103D	CHIP R 10K	D	1/10W	
R884,885			RK73GB2A103J	CHIP R 10K	J	1/10W	KM1E1

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R884,885			RK73GB2A103J	CHIP R	10K	J	1/10W	K1M2
R886,887			RK73GH2A103D	CHIP R	10K	D	1/10W	
R888-891			RK73GH2A473D	CHIP R	47K	D	1/10W	
R892			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R893-896		*	RK73EB2E563J	CHIP R	56K	J	1/4W	
R897,898			RK73EB2E222J	CHIP R	2.2K	J	1/4W	
R899			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R900,901			RK73GB2A473J	CHIP R	47K	J	1/10W	
R902			RK73GB2A101J	CHIP R	100	J	1/10W	
R903			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R904,905			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R906			RK73GB2A103J	CHIP R	10K	J	1/10W	
R907,908			RK73GB2A104J	CHIP R	100K	J	1/10W	
R909			RK73GB2A473J	CHIP R	47K	J	1/10W	
R910			RK73GB2A103J	CHIP R	10K	J	1/10W	KM1E1
R910			RK73GB2A103J	CHIP R	10K	J	1/10W	K1M2
R911,912			RK73GB2A473J	CHIP R	47K	J	1/10W	
R913			RK73GB2A103J	CHIP R	10K	J	1/10W	
R914			RK73GB2A473J	CHIP R	47K	J	1/10W	
R915			RK73GB2A103J	CHIP R	10K	J	1/10W	KM1K1
R915			RK73GB2A103J	CHIP R	10K	J	1/10W	M2
R915			RK73GB2A332J	CHIP R	3.3K	J	1/10W	E1E2
R916-926			RK73GB2A101J	CHIP R	100	J	1/10W	
R927			RK73GB2A103J	CHIP R	10K	J	1/10W	
R928			RK73GB2A104J	CHIP R	100K	J	1/10W	
R929			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R930,931			RK73GB2A473J	CHIP R	47K	J	1/10W	
R932			RK73GB2A103J	CHIP R	10K	J	1/10W	E1M1K1
R932			RK73GB2A103J	CHIP R	10K	J	1/10W	M2E2
R933			RK73GB2A104J	CHIP R	100K	J	1/10W	
R934			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R935			RK73GB2A223J	CHIP R	22K	J	1/10W	
R936-940			RK73GB2A473J	CHIP R	47K	J	1/10W	
R941-943			RK73GB2A101J	CHIP R	100	J	1/10W	
R944,945			RK73GB2A103J	CHIP R	10K	J	1/10W	
R946-948			RK73GB2A101J	CHIP R	100	J	1/10W	
R949			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R950-953			RK73GB2A101J	CHIP R	100	J	1/10W	
R954,955			RK73GB2A473J	CHIP R	47K	J	1/10W	
R956			RK73GB2A101J	CHIP R	100	J	1/10W	
R957			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R958			RK73EB2E101J	CHIP R	100	J	1/4W	
R959			RK73GB2A473J	CHIP R	47K	J	1/10W	KM1E1
R960-964			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R965			RK73GB2A223J	CHIP R	22K	J	1/10W	
R966-969			RK73GB2A473J	CHIP R	47K	J	1/10W	
R970			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R972			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R973			RK73GB2A103J	CHIP R	10K	J	1/10W	
R974,975			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R976,977			RK73GB2A101J	CHIP R	100	J	1/10W	
R979-982			RK73GB2A101J	CHIP R	100	J	1/10W	
R983			RK73GB2A473J	CHIP R	47K	J	1/10W	
R985			RK73GB2A473J	CHIP R	47K	J	1/10W	
R986			RK73GB2A153J	CHIP R	15K	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R989			RK73GB2A104J	CHIP R	100K	J	1/10W	
R990			RK73GB2A473J	CHIP R	47K	J	1/10W	
R991,992			RK73GB2A101J	CHIP R	100	J	1/10W	
R993			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R995			RK73GB2A103J	CHIP R	10K	J	1/10W	
R998			RK73GB2A100J	CHIP R	10	J	1/10W	
VR201			R32-0327-05	SEMI FIXED VARIABLE RESISTOR				
VR800			R31-0232-15	VARIABLE RESISTOR				
S1			S68-0806-05	PUSH SWITCH				
D1			UDZS6.8B	ZENER DIODE				
D2			UDZS10B	ZENER DIODE				
D3			DAN202U	DIODE				
D4			UDZS6.2B	ZENER DIODE				
D6			UDZS11B	ZENER DIODE				
D8			EP05Q06	DIODE				
D9-11			EP05Q04	DIODE				
D12			1SR154-400	DIODE				
D13			ST70-27F-5072	ZENER DIODE				
D14			RB160L-40	DIODE				
D100,101			1SS357-F	DIODE				
D200-203			STZ6.2N	ZENER DIODE				
D204,205			AVRM1608120M6A	VARISTOR				
D206-209			STZ6.2N	ZENER DIODE				
D210,211			UDZS4.7B	ZENER DIODE				
D212			STZ6.2N	ZENER DIODE				
D213,214			AVRM1608120M6A	VARISTOR				
D301			DAN202U	DIODE				
D302			DAP202U	DIODE				
D400			UDZS4.7B	ZENER DIODE				
D401			DAP202U	DIODE				
D402			STZ6.8N	ZENER DIODE				
D404,405			STZ6.2N	ZENER DIODE				
D502			1SR154-400	DIODE				K1M2E2
D503			DAN202U	DIODE				
D507			1SR154-400	DIODE				K1M2E2
D508			DAN202U	DIODE				
D510			DAN202U	DIODE				
D511			UDZS6.2B	ZENER DIODE				
D512			UDZS6.8B	ZENER DIODE				
D515			ST70-27F-5072	ZENER DIODE				
D516			DAP202U	DIODE				
D517-520			1SR154-400	DIODE				
D521			UDZS5.6B	ZENER DIODE				
D522			UDZS4.7B	ZENER DIODE				
D523			RB160L-40	DIODE				
D525-528			1SR154-400	DIODE				
D600-604			DAP202U	DIODE				K1M2E2
D600-606			DAP202U	DIODE				KM1E1
D606			DAP202U	DIODE				K1M2E2
D607,608			AVRM1608180M6A	VARISTOR				
D609			DAP202U	DIODE				
D610,611			AVRM1608180M6A	VARISTOR				
D612-615			DAP202U	DIODE				
D616,617			AVRM1608180M6A	VARISTOR				

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
D618			IMSA-6801-E	SURGE ABSORBER	
D700			UDZS8.2B	ZENER DIODE	
D701,702			UDZS6.2B	ZENER DIODE	
D703,704			UDZS8.2B	ZENER DIODE	
D705			UDZS6.2B	ZENER DIODE	
D706,707			STZ6.2N	ZENER DIODE	
D708			DAP202U	DIODE	
D709			UDZS4.7B	ZENER DIODE	
D710,711			AVRM1608180M6A	VARISTOR	
D712,713			DAP202U	DIODE	
D714			STZ6.2N	ZENER DIODE	
D715			AVRM1608270MAA	VARISTOR	
D716			STZ6.2N	ZENER DIODE	
D717			UDZS6.2B	ZENER DIODE	
D718			UDZS8.2B	ZENER DIODE	
D719			UDZS5.6B	ZENER DIODE	K1M2E2
D800			UDZS6.2B	ZENER DIODE	
D802			UDZS6.2B	ZENER DIODE	
D803			STZ6.8N	ZENER DIODE	
D804-816			STZ6.2N	ZENER DIODE	
D817			STZ6.8N	ZENER DIODE	
D818			STZ6.2N	ZENER DIODE	
D819			DAP202U	DIODE	
D820			UDZS4.7B	ZENER DIODE	
D821-823			STZ6.2N	ZENER DIODE	
D824			STZ6.8N	ZENER DIODE	
D825-828			STZ6.2N	ZENER DIODE	
D829			UDZS6.8B	ZENER DIODE	KM1E1
D830			DAN202U	DIODE	
D831			DAP202U	DIODE	
D832			DAN202U	DIODE	
D833			DAP202U	DIODE	
D834,835			1SR154-400	DIODE	
D951-954			1SR154-400	DIODE	K1M2E2
D955,956			AVRM1608180M6A	VARISTOR	K1M2E2
D957			DAP202U	DIODE	K1M2E2
D958			STZ6.2N	ZENER DIODE	K1M2E2
D959			AVRM1608270MAA	VARISTOR	K1M2E2
D963-965			1SS355	DIODE	K1M2E2
IC1		✻	BD3941HFP	ANALOGUE IC	
IC2			XC6201P332PR	ANALOGUE IC	
IC3			LT1947-PBF	ANALOGUE IC	
IC4			BA05CC0WFP	ANALOGUE IC	
IC5,6			M5237ML-CF0J	ANALOGUE IC	
IC100			LTC3728LEGN	ANALOGUE IC	
IC200,201			TC7SET32FU-F	MOS-IC	
IC202,203			TC7W53FU-F	MOS-IC	
IC204			NJW1303V-ZB	ANALOGUE IC	
IC205			TC7WH34FU-F	MOS-IC	
IC206			BA7666FS	ANALOGUE IC	
IC208			MM1508XNRE-E	ANALOGUE IC	
IC209			TC7WH123FU-F	MOS-IC	
IC210			TC7SH04FU-F	MOS-IC	
IC211			RB5P0090M	ANALOGUE IC	
IC212			BA7649F	ANALOGUE IC	

Ref. No.	Add	New	Parts No.	Description	Destination
IC213,214			MM1234XFBE-E	ANALOGUE IC	
IC215			MM1503-E	ANALOGUE IC	
IC216			TC7S86FU-F	MOS-IC	
IC217			TC7S02FU-F	MOS-IC	
IC218			MM1108XFFE-E	ANALOGUE IC	
IC219			TC7WH123FU-F	MOS-IC	
IC220			TC7S02FU-F	MOS-IC	
IC300			S1000N30N4T1G	ANALOGUE IC	
IC301			BR24L08FV-W	ROM IC	
IC302		✻	M24C02-WDW029	ROM IC	
IC303			703261YGC315A	MICROCONTROLLER IC	
IC304			TC7SET32FU-F	MOS-IC	
IC305			TC7WH34FU-F	MOS-IC	
IC400			TC4052BFT	MOS-IC	
IC401			NJM2794RB2ZB	ANALOGUE IC	
IC402			NJM2505AF-ZB	ANALOGUE IC	
IC451			TC7WH34FU-F	MOS-IC	
IC600			E-TDA7415CB	ANALOGUE IC	
IC601			E-TDA7850A	ANALOGUE IC	KM1E1
IC601			TB2923HQ	ANALOGUE IC	K1M2E2
IC602			TC4052BFT	MOS-IC	
IC603			BU2090FS	MOS-IC	
IC604,605			TC4052BFT	MOS-IC	
IC606			E-TDA7478AD	ANALOGUE IC	
IC700			MM1234XFBE-E	ANALOGUE IC	E1E2
IC701			BA7653AFV	ANALOGUE IC	
IC702			MM1108XFFE-E	ANALOGUE IC	
IC703,704			BA7649F	ANALOGUE IC	
IC705			MM1508XNRE-E	ANALOGUE IC	
IC706,707			NJM2794RB2ZB	ANALOGUE IC	
IC800			TC7SET08FU-F	MOS-IC	
IC801			NJM2794RB2ZB	ANALOGUE IC	
IC802			TC7S08FU-F	MOS-IC	
IC803			NJM4580V-ZB	ANALOGUE IC	
IC804			NJM4565V-ZB	ANALOGUE IC	KM1E1
IC805			NJM4580V-ZB	ANALOGUE IC	
IC806			TC7SET08FU-F	MOS-IC	
IC807			TC7SET32FU-F	MOS-IC	
IC900			BR24L02FV-W	ROM IC	KK1
IC901			TC74VHCT08AFT	MOS-IC	
IC902			703030BYGCJ30	MICROCONTROLLER IC	
IC903			S-80842CNNB-G	MOS-IC	
IC951			MM1508XNRE-E	ANALOGUE IC	K1M2E2
IC952-954			NJM4580V-ZB	ANALOGUE IC	K1M2E2
IC955			NJM4565V-ZB	ANALOGUE IC	K1M2E2
IC956			NJM2125F-ZB	ANALOGUE IC	K1M2E2
IC957			TC7WH241FK-F	MOS-IC	
Q1-3			2SC4081	TRANSISTOR	
Q4			DTC114YUA	DIGITAL TRANSISTOR	
Q5,6			2SA1576A	TRANSISTOR	
Q7			TPC8110-F	FET	
Q9			2SB1450-E	TRANSISTOR	
Q10			2SC4081	TRANSISTOR	
Q11			2SB1565 (E,F)	TRANSISTOR	
Q12			2SC4081	TRANSISTOR	

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT(X14-982x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q21			DTA114YUA	DIGITAL TRANSISTOR	
Q22			DTC124EUA	DIGITAL TRANSISTOR	
Q101			DTC114YUA	DIGITAL TRANSISTOR	
Q102,103			HAT2218R-E	DUAL FET	
Q104			DTC114YUA	DIGITAL TRANSISTOR	
Q200			DTC114YUA	DIGITAL TRANSISTOR	
Q201			DTA114EUA	DIGITAL TRANSISTOR	
Q203			DTC124EUA	DIGITAL TRANSISTOR	
Q205			2SC4081	TRANSISTOR	
Q208,209			2SA1576A	TRANSISTOR	
Q210			2SC4081	TRANSISTOR	
Q211			2SA1576A	TRANSISTOR	
Q300			DTA114YUA	DIGITAL TRANSISTOR	
Q301			DTC114YUA	DIGITAL TRANSISTOR	
Q400,401			DTC114YUA	DIGITAL TRANSISTOR	
Q500			DTC143EUA	DIGITAL TRANSISTOR	
Q501			DTA114YUA	DIGITAL TRANSISTOR	
Q502			DTC124EUA	DIGITAL TRANSISTOR	
Q503			2SC4081	TRANSISTOR	
Q506			2SB1188 (Q,R)	TRANSISTOR	
Q507			2SA1576A	TRANSISTOR	
Q508			DTA114EUA	DIGITAL TRANSISTOR	
Q509			DTC114YUA	DIGITAL TRANSISTOR	
Q510			2SB1188 (R)	TRANSISTOR	KM1K1
Q510			2SB1188 (R)	TRANSISTOR	M2
Q511			2SC4081	TRANSISTOR	KM1K1
Q511			2SC4081	TRANSISTOR	M2
Q512			2SA1576A	TRANSISTOR	
Q518			2SB1565 (E,F)	TRANSISTOR	
Q522			DTC114TUA	DIGITAL TRANSISTOR	
Q523			2SC4081	TRANSISTOR	
Q524			2SB1184	TRANSISTOR	
Q525			2SA1576A	TRANSISTOR	
Q526,527			2SC4081	TRANSISTOR	
Q528			DTC114TUA	DIGITAL TRANSISTOR	
Q529			2SC4081	TRANSISTOR	
Q530			2SB1184	TRANSISTOR	
Q531			2SA1576A	TRANSISTOR	
Q532,533			2SC4081	TRANSISTOR	
Q600,601			DTC124EUA	DIGITAL TRANSISTOR	
Q602			DTC323TU	DIGITAL TRANSISTOR	
Q603			2SA1576A	TRANSISTOR	
Q604-607			DTC323TU	DIGITAL TRANSISTOR	
Q608			DTA144EUA	DIGITAL TRANSISTOR	
Q609			DTC323TU	DIGITAL TRANSISTOR	
Q610			DTC124EUA	DIGITAL TRANSISTOR	
Q611			2SB1689	TRANSISTOR	
Q700			DTC323TU	DIGITAL TRANSISTOR	
Q701			DTA144EUA	DIGITAL TRANSISTOR	
Q702			DTC323TU	DIGITAL TRANSISTOR	
Q703			2SA1576A	TRANSISTOR	K1M2E2
Q704,705			2SC4081	TRANSISTOR	K1M2E2
Q900			DTA114TUA	DIGITAL TRANSISTOR	
Q901,902			DTC114YUA	DIGITAL TRANSISTOR	
Q903			DTC114TUA	DIGITAL TRANSISTOR	
Q904			DTA114EUA	DIGITAL TRANSISTOR	
Q905,906			DTC114TUA	DIGITAL TRANSISTOR	
Q907,908			2SC4081	TRANSISTOR	
Q951			DTC114TUA	DIGITAL TRANSISTOR	K1M2E2
Q952			2SC4081	TRANSISTOR	K1M2E2
Q953			2SB1184	TRANSISTOR	K1M2E2
Q954			2SA1576A	TRANSISTOR	K1M2E2
Q955,956			2SC4081	TRANSISTOR	K1M2E2
Q957			DTC114TUA	DIGITAL TRANSISTOR	K1M2E2
Q958			2SC4081	TRANSISTOR	K1M2E2
Q959			2SB1184	TRANSISTOR	K1M2E2
Q960			2SA1576A	TRANSISTOR	K1M2E2
Q961,962			2SC4081	TRANSISTOR	K1M2E2
Q963,964			DTC323TU	DIGITAL TRANSISTOR	K1M2E2
TH600			PRF18BE471QB2	POSITIVE RESISTOR	
A600			X86-4080-12	FRONT-END UNIT	KK1
A600			X86-4082-71	FRONT-END UNIT	E1M1E2
A600			X86-4082-71	FRONT-END UNIT	M2

DIGITAL I/O UNIT (X88-2020-10: KOS-V500, 0-13: KOS-V1000)

C100			CC73HCH1H101J	CHIP C	100PF	J	KM1E1
C100,101			CC73HCH1H101J	CHIP C	100PF	J	K1M2E2
C102-105			CK73HB1A104K	CHIP C	0.10UF	K	
C106			CK73GB0J106M	CHIP C	10UF	M	
C107-110			CK73HB1A104K	CHIP C	0.10UF	K	
C112			CK73EB0J226K	CHIP C	22UF	K	
C113			C92-1983-05	ELECTRO	100UF	4WV	
C114-124			CK73HB1A104K	CHIP C	0.10UF	K	
C125			CC73HCH1H220J	CHIP C	22PF	J	
C126-130			CK73HB1A104K	CHIP C	0.10UF	K	
C133,134			CK73GB0J106M	CHIP C	10UF	M	
C135			CK73HB1A104K	CHIP C	0.10UF	K	
C138,139			CC73HCH1H100D	CHIP C	10PF	D	
C140			CK73HB0J105K	CHIP C	1.0UF	K	K1M2E2
C142			CE32BN0J221M	CHIP EL	220UF	6.3WV	
C143			CK73HB0J105K	CHIP C	1.0UF	K	
C144			CK73HB1A104K	CHIP C	0.10UF	K	
C148			CE32BN0J221M	CHIP EL	220UF	6.3WV	K1M2E2
C149			CK73HB1A104K	CHIP C	0.10UF	K	
C153			CK73HB0J105K	CHIP C	1.0UF	K	
C154			CK73HB1A104K	CHIP C	0.10UF	K	
C200			CC73HCH1H220J	CHIP C	22PF	J	
C201			CK73HB1A104K	CHIP C	0.10UF	K	
C202			CC73HCH1H220J	CHIP C	22PF	J	
C203,204			CK73HB1A104K	CHIP C	0.10UF	K	
C217-226			CK73HB1A104K	CHIP C	0.10UF	K	
C227,228			CK73GB0J106M	CHIP C	10UF	M	
C230,231			CK73HB1H102K	CHIP C	1000PF	K	
C233-236			CK73HB1A104K	CHIP C	0.10UF	K	
C244			CK73GB0J106M	CHIP C	10UF	M	
C247			CK73HB1H102K	CHIP C	1000PF	K	
C264			CK73HB1A104K	CHIP C	0.10UF	K	
C275			CK73GB0J106M	CHIP C	10UF	M	
C300			CC73GCH1H681J	CHIP C	680PF	J	
C301			CC73HCH1H101J	CHIP C	100PF	J	

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America) ⚠Indicates safety critical components.
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

PARTS LIST

DIGITAL I/O UNIT (X88-2020-10: KOS-V500, 0-13: KOS-V1000)

Ref. No.	Add	New	Parts No.	Description	Destination
C302			CK73GB1H683K	CHIP C 0.068UF K	
C303			CK73GB0J106M	CHIP C 10UF M	
C304-313			CK73HB1A104K	CHIP C 0.10UF K	
C314,315			CK73GB0J106M	CHIP C 10UF M	
C316-320			CK73HB1A104K	CHIP C 0.10UF K	
C322-325			CK73HB1A104K	CHIP C 0.10UF K	
C326,327			CK73GB0J106M	CHIP C 10UF M	
C328			CC73HCH1H150J	CHIP C 15PF J	
C329			CC73HCH1H270J	CHIP C 27PF J	
C330			CK73HB1A104K	CHIP C 0.10UF K	
C331			CK73GB0J106M	CHIP C 10UF M	
C332			CK73HB1A104K	CHIP C 0.10UF K	
C336			CK73GB0J106M	CHIP C 10UF M	
C337,338			CK73HB1H152K	CHIP C 1500PF K	
C340,341			CC73HCH1H331J	CHIP C 330PF J	
C342			CK73HB1E103K	CHIP C 0.010UF K	
C349			CC73HCH1H020C	CHIP C 2.0PF C	
C351			CK73HB1A104K	CHIP C 0.10UF K	
C352			CK73GB0J106M	CHIP C 10UF M	
C354-357			CK73HB1A104K	CHIP C 0.10UF K	
C358			CC73HCH1H020C	CHIP C 2.0PF C	
C360,361			CK73HB1A104K	CHIP C 0.10UF K	
C362			CK73GB0J106M	CHIP C 10UF M	
C363			CK73HB1A104K	CHIP C 0.10UF K	
C367			CK73HB0J105K	CHIP C 1.0UF K	
C368			CK73HB1A104K	CHIP C 0.10UF K	
C375,376			CK73HB1A104K	CHIP C 0.10UF K	
C456			CK73EB1A106K	CHIP C 10UF K	
C460			CK73HB1A104K	CHIP C 0.10UF K	
C464			CK73HB1C473K	CHIP C 0.047UF K	
C468			CK73GB0J106M	CHIP C 10UF M	
C472			CK73HB1A104K	CHIP C 0.10UF K	
C473			CC73HCH1H331J	CHIP C 330PF J	
C478			CK73HB1A104K	CHIP C 0.10UF K	
C482			CK73GB1H222K	CHIP C 2200PF K	
C600			CC73HCH1H101J	CHIP C 100PF J	
C601,602			CC73HCH1H470J	CHIP C 47PF J	
C700-713			CK73HB1H222K	CHIP C 2200PF K	
C715			CK73HB1A104K	CHIP C 0.10UF K	
C800			CK73HB1H222K	CHIP C 2200PF K	
C801,802			CK73HB1H102K	CHIP C 1000PF K	
C803,804			CK73HB1H222K	CHIP C 2200PF K	
C805			CK73HB1H102K	CHIP C 1000PF K	
C807-814			CK73HB1H222K	CHIP C 2200PF K	
CN328			E41-2237-05	FLAT CABLE CONNECTOR	
L101,102			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L103-106			L92-0321-05	CHIP FERRITE	K1M2E2
L103,104			L92-0321-05	CHIP FERRITE	KM1E1
L200			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L203-205			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L212			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L300-302			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L303			L41-6805-33	SMALL FIXED INDUCTOR (68U)	
L304-307			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L309			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
X100			L77-2941-05	CRYSTAL RESONATOR (14.7456MHZ)	
X202			L77-2917-15	CRYSTAL RESONATOR (32.768KHZ)	
CP104-109			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP117-127			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP128-134			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP135-138			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP139-142			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP143-146			RK74HB1J680J	CHIP-COM 68 J 1/16W	
CP147-154			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP155-160			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP200-203			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP204-207			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R1,2			RK73HB1J473J	CHIP R 47K J 1/16W	
R3-5			RK73HB1J220J	CHIP R 22 J 1/16W	
R6			RK73HB1J473J	CHIP R 47K J 1/16W	
R7			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R8			RK73HB1J473J	CHIP R 47K J 1/16W	
R9,10			RK73HB1J220J	CHIP R 22 J 1/16W	
R12			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R13			RK73HB1J473J	CHIP R 47K J 1/16W	
R14			RK73HB1J561J	CHIP R 560 J 1/16W	
R15,16			RK73FB2B220J	CHIP R 22 J 1/8W	
R17,18			RK73HB1J153J	CHIP R 15K J 1/16W	
R24			RK73HB1J220J	CHIP R 22 J 1/16W	
R29			RK73HB1J473J	CHIP R 47K J 1/16W	
R30			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R31			RK73HB1J473J	CHIP R 47K J 1/16W	KM1E1
R32			RK73HB1J472J	CHIP R 4.7K J 1/16W	K1M2E2
R33			RK73HB1J473J	CHIP R 47K J 1/16W	
R34-37			RK73FB2B220J	CHIP R 22 J 1/8W	
R104			RK73HB1J330J	CHIP R 33 J 1/16W	
R105			RK73HB1J103J	CHIP R 10K J 1/16W	
R107-109			RK73HB1J103J	CHIP R 10K J 1/16W	
R112			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R115			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R116			RK73HB1J103J	CHIP R 10K J 1/16W	
R118			RK73HB1J103J	CHIP R 10K J 1/16W	
R121			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R123			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R124			RK73HB1J473J	CHIP R 47K J 1/16W	
R126			RK73HB1J473J	CHIP R 47K J 1/16W	
R129			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R130-132			RK73HB1J220J	CHIP R 22 J 1/16W	
R134			RK73HB1J220J	CHIP R 22 J 1/16W	
R137			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R139			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R140			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R141,142			RK73FB2B220J	CHIP R 22 J 1/8W	
R145,146			RK73HB1J153J	CHIP R 15K J 1/16W	
R147			RK73HB1J220J	CHIP R 22 J 1/16W	
R148			RK73HB1J473J	CHIP R 47K J 1/16W	
R149			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R150			RK73HB1J220J	CHIP R 22 J 1/16W	

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

DIGITAL I/O UNIT (X88-2020-10: KOS-V500, 0-13: KOS-V1000)

Ref. No.	Add	New	Parts No.	Description			Destination
R153			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R157-163			RK73HB1J220J	CHIP R	22	J 1/16W	
R164,165			RK73HB1J470J	CHIP R	47	J 1/16W	
R166-169			RK73HB1J220J	CHIP R	22	J 1/16W	
R170,171			RK73HB1J330J	CHIP R	33	J 1/16W	
R172,173			RK73HB1J680J	CHIP R	68	J 1/16W	
R174,175			RK73HB1J470J	CHIP R	47	J 1/16W	
R176			RK73HB1J220J	CHIP R	22	J 1/16W	
R177-192			RK73HB1J473J	CHIP R	47K	J 1/16W	
R193-198			RK73HB1J220J	CHIP R	22	J 1/16W	
R199			RK73HB1J473J	CHIP R	47K	J 1/16W	
R200			RK73HB1J330J	CHIP R	33	J 1/16W	
R201			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R202			RK73HB1J106J	CHIP R	10M	J 1/16W	
R203			RK73HB1J334J	CHIP R	330K	J 1/16W	
R212,213			RK73HB1J100J	CHIP R	10	J 1/16W	
R219-221			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R223			RK73HB1J473J	CHIP R	47K	J 1/16W	
R227			RK73HB1J100J	CHIP R	10	J 1/16W	
R248-250			RK73HB1J473J	CHIP R	47K	J 1/16W	
R255			RK73HH1J104D	CHIP R	100K	D 1/16W	
R258-260			RK73HB1J473J	CHIP R	47K	J 1/16W	
R265-271			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R273			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R276			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R284-287			RK73HB1J473J	CHIP R	47K	J 1/16W	
R291			RK73HB1J330J	CHIP R	33	J 1/16W	
R292-295			RK73HB1J473J	CHIP R	47K	J 1/16W	
R296			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R297			RK73HB1J103J	CHIP R	10K	J 1/16W	
R300,301		✻	RN73GE1J302D	MF R	3K	D 1/16W	
R304,305			RK73HB1J103J	CHIP R	10K	J 1/16W	
R308			RK73HB1J103J	CHIP R	10K	J 1/16W	
R310			RK73HB1J103J	CHIP R	10K	J 1/16W	
R315			RK73HB1J101J	CHIP R	100	J 1/16W	
R316			RK73HB1J473J	CHIP R	47K	J 1/16W	
R317			RK73HB1J220J	CHIP R	22	J 1/16W	
R318			RK73HB1J104J	CHIP R	100K	J 1/16W	
R320-322			RK73HB1J103J	CHIP R	10K	J 1/16W	
R324,325			RK73HB1J103J	CHIP R	10K	J 1/16W	
R326,327			RK73HB1J822J	CHIP R	8.2K	J 1/16W	
R328,329			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R332,333			RK73HB1J151J	CHIP R	150	J 1/16W	
R343			RK73HB1J101J	CHIP R	100	J 1/16W	
R344			RK73HB1J680J	CHIP R	68	J 1/16W	
R345			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R347			RK73HH1J100D	CHIP R	10	D 1/16W	
R348			RK73HH1J131D	CHIP R	130	D 1/16W	
R351			RK73HH1J100D	CHIP R	10	D 1/16W	
R352			RK73HH1J131D	CHIP R	130	D 1/16W	
R356			RK73HH1J100D	CHIP R	10	D 1/16W	
R357			RK73HH1J131D	CHIP R	130	D 1/16W	
R367			RK73HB1J101J	CHIP R	100	J 1/16W	
R368			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R369			RK73HB1J101J	CHIP R	100	J 1/16W	

Ref. No.	Add	New	Parts No.	Description			Destination
R370			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R371			RK73HB1J101J	CHIP R	100	J 1/16W	
R372			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R438			RK73HB1J103J	CHIP R	10K	J 1/16W	
R440			RK73HB1J103J	CHIP R	10K	J 1/16W	
R443-445			RK73HB1J473J	CHIP R	47K	J 1/16W	
R458,459			RK73HB1J473J	CHIP R	47K	J 1/16W	
R461			RK73HB1J473J	CHIP R	47K	J 1/16W	
R462			RK73HB1J561J	CHIP R	560	J 1/16W	
R463-465			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R467			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R469			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R474			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R481,482			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R485-487			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R493			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R496			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R498			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R500			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R503			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R505			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R507			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R509			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R522			RK73HB1J470J	CHIP R	47	J 1/16W	
R523			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R524			RK73HB1J330J	CHIP R	33	J 1/16W	
R525			RK73HB1J201J	CHIP R	200	J 1/16W	
R529			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R600,601			RK73HB1J220J	CHIP R	22	J 1/16W	
R602,603			RK73HB1J153J	CHIP R	15K	J 1/16W	
R701			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R703			RK73GB2A206J	CHIP R	20M	J 1/10W	
R705			RK73HB1J331J	CHIP R	330	J 1/16W	
D102,103			AVRL1613R3FTA	VARISTOR			
D104,105			IMSA-6802-E	SURGE ABSORBER			
D106,107			AVRL1613R3FTA	VARISTOR			K1M2E2
D108,109			IMSA-6802-E	SURGE ABSORBER			K1M2E2
D300			DA204U	DIODE			
IC100			MIC2005-05YM6	MOS-IC			KM1E1
IC100,101			MIC2005-05YM6	MOS-IC			K1M2E2
IC104			TC7S86FU-F	MOS-IC			
IC105			SI-3018KM	ANALOGUE IC			
IC106		✻	EP9307IRZ	MICROPROCESSOR IC			
IC108			TC7SH04FU-F	MOS-IC			
IC200			TC7WHU04FU-F	MOS-IC			
IC201			TC74LCX245FT	MOS-IC			
IC202,203			K4S561632HUI7	DRAM IC			
IC205			TC74LCX245FT	MOS-IC			
IC207			341S2094	MICROPROCESSOR IC			
IC211			DW128F70NF1Y3	ROM IC			
IC300			CXA3266Q	MOS-IC			
IC301			WM8728SEDSR	ANALOGUE IC			
IC302			BH7240AKV	MOS-IC			
IC303			TC7SET08FU-F	MOS-IC			

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

DIGITAL I/O UNIT (X88-2020-10: KOS-V500, 0-13: KOS-V1000)

Ref. No.	Add	New	Parts No.	Description	Destination
IC305			NJM2100V-ZB	ANALOGUE IC	
IC309			LC74735NW8A20	MOS-IC	
IC332			NJM2864F05-ZB	ANALOGUE IC	
IC335			TC7WH14FU-F	MOS-IC	
Q302-304			2SA1576A	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination

E1 : KOS-V500 **E2** : KOS-V1000 (Europe) **K** : KOS-V500 **K1** : KOS-V1000 (North America)
M1 : KOS-V500 **M2** : KOS-V1000 (Other Areas)

⚠Indicates safety critical components.