EXPLODED VIEW

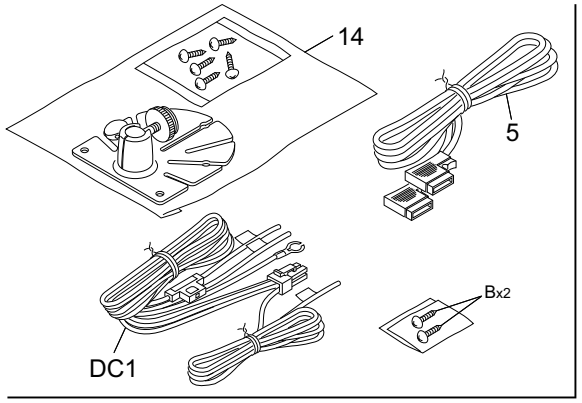

A φ2.6x6 (BLK) : N09-4142-05
B φ4x16 (BLK) : N46-4016-45
C φ1.7x5 : N79-1750-46
D φ3x6 (BLK) : N80-3006-45
E φ2x6 (BLK) : N82-2006-45
F φ2.6x4 (BLK) : N84-2604-45

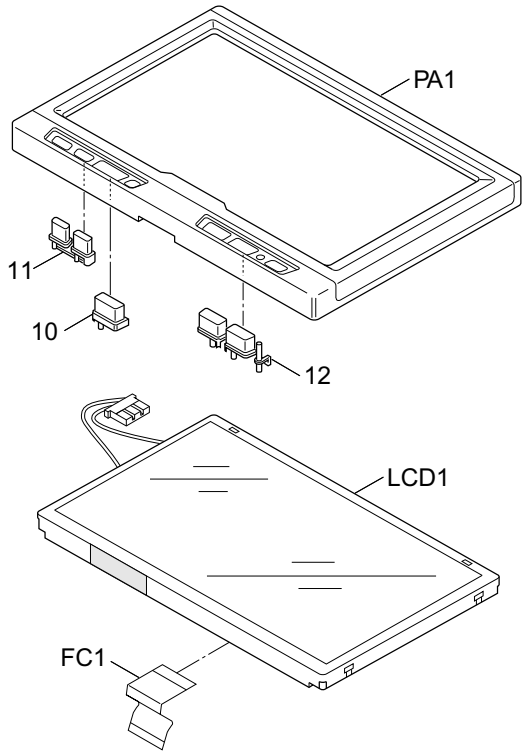

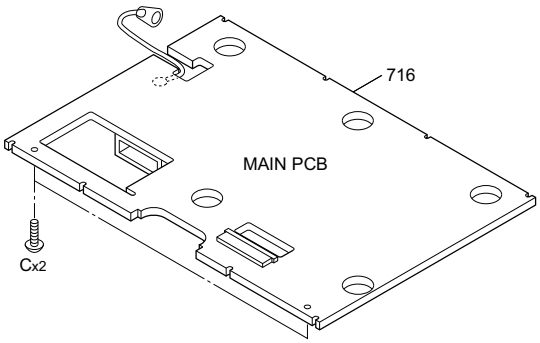

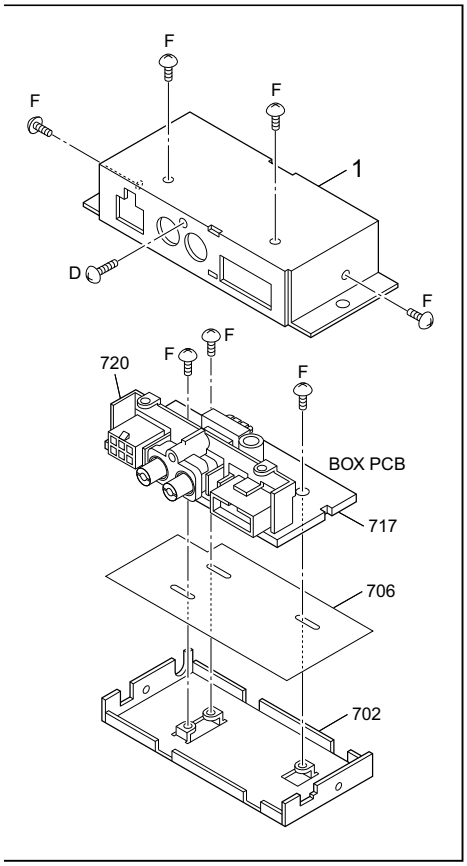

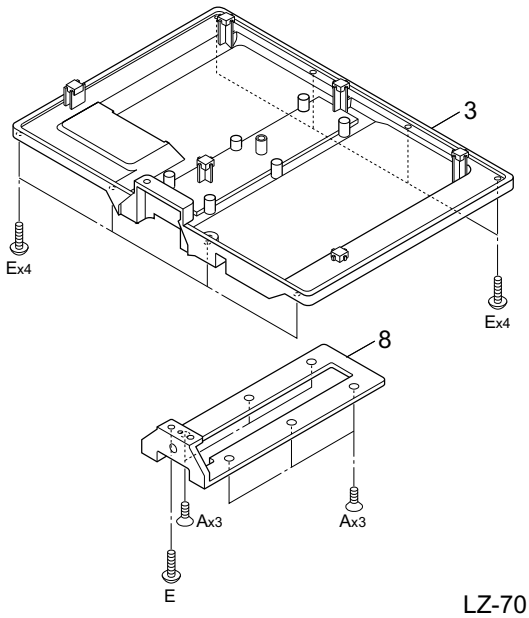

LZ-701W

Parts with the exploded numbers larger than 700 are not supplied.

LZ-701W

PARTS LIST

∗ New parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
LZ-701W					
1	2A	*	A01-2789-08	CASE ASSY	
3	3B	*	A46-1758-08	CASE REAR ASSY	
PA1	1B	*	A64-2638-08	PANEL ASSY	
-			B46-0100-50	WARRANTY CARD	
-		*	B64-1932-00	INST.MANUAL(ENG,FRE,GER,DUT)	
-		*	B64-1932-00	INST.MANUAL(ITA,SPA,POR)	
-		*	B64-1933-00	INST.MANUAL(ENG,FRE,CHI,KOR)	
5	1A	*	E30-6037-08	CORD WITH PLUG	
DC1	1A	*	E30-6038-08	DC CORD	
FC1	2B	*	E58-0931-08	FLAT CABLE (24P)	
-		*	H12-2703-08	PACKING FIXTURE (CASE)	
-		*	H12-2704-08	PACKING FIXTURE (R)	
-		*	H12-2705-08	PACKING FIXTURE (1)	
-		*	H12-2706-08	PACKING FIXTURE (L)	
-		*	H12-2707-08	PACKING FIXTURE (2)	
-		*	H12-2708-08	PACKING FIXTURE (SHEET)	
-		*	H25-1150-08	PROTECTION BAG (100X100)	
-		*	H25-1172-08	PROTECTION BAG (220X250)	
-		*	H25-1173-08	PROTECTION BAG (120X280)	
-		*	H54-2111-08	ITEM CARTON CASE	
8	3B	*	J19-5015-14	BRACKET (CABINET)	
10	1B	*	K24-3712-04	KNOB (V.SEL)	
11	1B	*	K25-1281-04	KNOB (SCRN/MODE)	
12	1B	*	K25-1282-04	KNOB (L/R/RES)	
A	3A		N09-4142-05	SCREW (S-TPG FLT 2.6X6)	
B	1A		N46-4016-45	SCREW (TPG PAN 4X16)	
C	3A		N79-1750-46	SCREW (S-TPG PAN PCS 1.7X5)	
D	3A		N80-3006-45	SCREW (S-TPG PAN 3X6)	
E	3A		N82-2006-45	SCREW (S-TPG BIN 2X6)	
F	3A	*	N84-2604-45	SCREW (S-TPG PAN 2.6X4)	
14	1A		W01-1508-05	STAND ASSY	
LCD1	2B	*	W02-3322-08	DISPLAY MODULE ASSY	
MAIN UNIT					
C001,002		*	C92-1699-08	ELECTRO 100UF 16WV	
C003			CK73GB1H103K	CHIP C 0.010UF K	
C004,005		*	C92-1687-08	ELECTRO 10UF 16WV	
C006			CC73GCH1H221J	CHIP C 220PF J	
C007		*	C92-1688-08	ELECTRO 330UF 6.3WV	
C008		*	C92-1689-08	OS-SOLID 82UF 6.3WV	
C009		*	C92-1690-08	ELECTRO 47UF 16WV	
C010		*	C92-1716-08	ELECTRO 100UF 10WV	
C011		*	C92-1689-08	OS-SOLID 82UF 6.3WV	
C012,013			CK73GB1H103K	CHIP C 0.010UF K	
C014		*	C92-1691-08	ELECTRO 100UF 6.3WV	
C015			CK73GB1H103K	CHIP C 0.010UF K	
C016		*	C92-1690-08	ELECTRO 47UF 16WV	
C017		*	C92-1716-08	ELECTRO 100UF 10WV	
C018			CK73GB1H103K	CHIP C 0.010UF K	
C019		*	C92-1692-08	ELECTRO 33UF 10WV	
C020			CK73GB1H103K	CHIP C 0.010UF K	
C021,022		*	C92-1693-08	CHIP C 1UF K	
C023,024			CK73GB1H103K	CHIP C 0.010UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C025			CC73GCH1H050C	CHIP C 5.0PF C	
C026			CK73GB1H103K	CHIP C 0.010UF K	
C028		*	C92-1694-08	ELECTRO 22UF 20WV	
C030		*	C92-1694-08	ELECTRO 22UF 20WV	
C032		*	C92-1689-08	OS-SOLID 82UF 6.3WV	
C033			CK73GB1H103K	CHIP C 0.010UF K	
C101		*	C92-1695-08	ELECTRO 33UF 6.3WV	
C102			CK73GB1H103K	CHIP C 0.010UF K	
C103			CK73GB1E333K	CHIP C 0.033UF K	
C104		*	C93-1195-08	CHIP C 0.01UF K	
C105		*	C92-1691-08	ELECTRO 100UF 6.3WV	
C106			CK73GB1H103K	CHIP C 0.010UF K	
C107		*	C92-1695-08	ELECTRO 33UF 6.3WV	
C108			CK73GB1H103K	CHIP C 0.010UF K	
C109,110		*	C93-1197-08	CHIP C 33PF J	
C111,112		*	C93-1161-08	CHIP C 1.0UF Z	
C201		*	C92-1696-08	ELECTRO 1UF 50WV	
C202		*	C93-1193-08	CHIP C 560PF J	
C203		*	C92-1704-08	ELECTRO 3.3UF 50WV	
C204			CK73GB1H392K	CHIP C 3900PF K	
C205		*	C93-1200-08	CHIP C 270PF J	
C206		*	C93-1201-08	CHIP C 390PF J	
C207			CK73GB1H472K	CHIP C 4700PF K	
C208		*	C92-1697-08	ELECTRO 2.2UF 50WV	
C209		*	C92-1691-08	ELECTRO 100UF 6.3WV	
C210			CK73GB1H103K	CHIP C 0.010UF K	
C211-215		*	C93-1194-08	CHIP C 0.22UF K	
C216,217			CK73GB1H103K	CHIP C 0.010UF K	
C218			CC73GCH1H101J	CHIP C 100PF J	
C219-224		*	C93-1194-08	CHIP C 0.22UF K	
C225		*	C92-1697-08	ELECTRO 2.2UF 50WV	
C226		*	C92-1696-08	ELECTRO 1UF 50WV	
C227		*	C93-1193-08	CHIP C 560PF J	
C228			CC73GCH1H221J	CHIP C 220PF J	
C229,230			CK73GB1H103K	CHIP C 0.010UF K	
C231		*	C93-1161-08	CHIP C 1.0UF Z	
C232		*	C93-1194-08	CHIP C 0.22UF K	
C233		*	C93-1161-08	CHIP C 1.0UF Z	
C234		*	C92-1698-08	ELECTRO 4.7UF 25WV	
C235		*	C93-1195-08	CHIP C 0.01UF K	
C236			CK73GB1H103K	CHIP C 0.010UF K	
C237,238			CC73GCH1H150J	CHIP C 15PF J	
C239		*	C93-1194-08	CHIP C 0.22UF K	
C240,241		*	C92-1691-08	ELECTRO 100UF 6.3WV	
C301		*	C92-1698-08	ELECTRO 4.7UF 25WV	
C302-306			CK73GB1H103K	CHIP C 0.010UF K	
C307		*	C92-1695-08	ELECTRO 33UF 6.3WV	
C308			CK73GB1H103K	CHIP C 0.010UF K	
C310-312			CK73GB1H103K	CHIP C 0.010UF K	
C313		*	C92-1699-08	ELECTRO 100UF 16WV	
C314-316			CK73GB1H103K	CHIP C 0.010UF K	
C317-319		*	C93-1161-08	CHIP C 1.0UF Z	
C320-325			CK73GB1H103K	CHIP C 0.010UF K	
C326		*	C93-1202-08	CHIP C 5600PF K	
C329		*	C92-1701-08	CHIP C 10UF K	

E : Europe **K** : North America **M** : Other Areas
W : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

∗ New parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

MAIN UNIT

Ref. No.	Add	New	Parts No.	Description	Destination
C330		*	C92-1690-08	ELECTRO 47UF 16WV	
C331			CK73GB1H103K	CHIP C 0.010UF K	
C333		*	C92-1691-08	ELECTRO 100UF 6.3WV	
C334		*	C92-1699-08	ELECTRO 100UF 16WV	
C335,336		*	C92-1700-08	ELECTRO 47UF 16WV	
C337		*	C92-1699-08	ELECTRO 100UF 16WV	
C338			CC73GCH1H330J	CHIP C 33PF J	
C339-344		*	C93-1161-08	CHIP C 1.0UF Z	
C401		*	C92-1699-08	ELECTRO 100UF 16WV	
C402			CC73GCH1H151J	CHIP C 150PF J	
C403			CK73GB1E473K	CHIP C 0.047UF K	
C404			CK73GB1H102K	CHIP C 1000PF K	
C407		*	C92-1698-08	ELECTRO 4.7UF 25WV	
C409		*	C92-1702-08	CHIP C 0.15UF K	
C410			CK73GB1H103K	CHIP C 0.010UF K	
C411		*	C92-1703-08	CHIP C 0.022UF K	
C412,413		*	C92-1699-08	ELECTRO 100UF 16WV	
C415			CK73GB1H103K	CHIP C 0.010UF K	
C701			CC73GCH1H330J	CHIP C 33PF J	
C703-705		*	C92-1686-08	CHIP C 10UF K	
CS001		*	E41-0175-08	PIN ASSY (SOCKET 20P)	
CS301		*	E41-0117-08	PIN ASSY (SOCKET 24P)	
CS401		*	E41-0116-08	PIN ASSY (PLUG 2P)	
U001		*	G02-1432-08	CONTACT(ON-BOARD)	
F001,002		*	F09-1729-08	FUSE 63V0.315A	
F401		*	F09-1681-08	FUSE 125V 1A	
L001		*	L33-1821-08	INDUCTOR 270UH N	
L002		*	L33-1822-08	INDUCTOR 33UH N	
L003			L92-0314-05	CORE	
L004		*	L33-1183-08	INDUCTOR 10UH K	
L005			L92-0314-05	CORE	
L401		*	L33-1823-08	INDUCTOR 22UH M	
L402		*	L33-1824-08	INDUCTOR 100UH K	
T401,402		*	L19-0705-08	INVERTER TRANS	
X101		*	L77-2796-08	RESONATOR,XTAL,8.000MHZ	
X201		*	L77-2797-08	RESONATOR,CERAM 504.5KHZ	
X202		*	L77-2798-08	RESONATOR,XTAL 4.433619MHZ	
X203		*	L77-2799-08	RESONATOR,XTAL 3.579545MHZ	
BR101		*	R90-1079-08	MULTI RESISTOR (2X10K)	
BR103,104		*	R90-1081-08	MULTI RESISTOR (4X100)	
BR105		*	R90-1080-08	MULTI RESISTOR (2X100K)	
BR106		*	R90-1081-08	MULTI RESISTOR (4X100)	
BR108		*	R90-1084-08	MULTI RESISTOR (4X47K)	
BR109		*	R90-1081-08	MULTI RESISTOR (4X100)	
BR110		*	R90-1083-08	MULTI RESISTOR (4X10K)	
BR201		*	R90-1078-08	MULTI RESISTOR (2X22K)	
BR202		*	R90-1082-08	MULTI RESISTOR (4X2.2K)	
C327			R92-2053-05	CHIP R 0 J 1/8W	
JP001,002			R92-1252-05	CHIP R 0 OHM	
R002			RK73FB2A100J	CHIP R 10 J 1/10W	
R003		*	R92-3308-08	CHIP R 0.33 J 3/4W	
R004			RK73GB1J104J	CHIP R 100K J 1/16W	
R005		*	R92-3303-08	CHIP R 1.0K J 1/2W	

Ref. No.	Add	New	Parts No.	Description	Destination
R006			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R007			RK73GB1J392J	CHIP R 3.9K J 1/16W	
R008		*	R92-3307-08	CHIP R 470 J 1/8W	
R009		*	R92-3304-08	CHIP R 3.3 J 1/16W	
R010			RK73GB1J271J	CHIP R 270 J 1/16W	
R011			RK73GB1J105J	CHIP R 1.0M J 1/16W	
R012			RK73GB1J184J	CHIP R 180K J 1/16W	
R013			RK73GB1J154J	CHIP R 150K J 1/16W	
R014,015			R92-1252-05	CHIP R 0 OHM	
R017			RK73GB1J104J	CHIP R 100K J 1/16W	
R018			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R019			RK73GB1J103J	CHIP R 10K J 1/16W	
R020			RK73GB1J473J	CHIP R 47K J 1/16W	
R101			RK73GB1J103J	CHIP R 10K J 1/16W	
R103		*	R92-3306-08	CHIP R 1.0K J 1/16W	
R104,105			RK73GB1J101J	CHIP R 100 J 1/16W	
R106			RK73GB1J473J	CHIP R 47K J 1/16W	
R107			RK73GB1J101J	CHIP R 100 J 1/16W	
R108			RK73GB1J100J	CHIP R 10 J 1/16W	
R109		*	R92-3310-08	CHIP R 5.6M J 1/16W	
R111			RK73GB1J103J	CHIP R 10K J 1/16W	
R112			RK73GB1J223J	CHIP R 22K J 1/16W	
R114		*	R92-3306-08	CHIP R 1.0K J 1/16W	
R115,116			RK73GB1J473J	CHIP R 47K J 1/16W	
R117			RK73GB1J563J	CHIP R 56K J 1/16W	
R118			RK73GB1J105J	CHIP R 1.0M J 1/16W	
R201			RK73GB1J103J	CHIP R 10K J 1/16W	
R202		*	R92-3305-08	CHIP R 100K F 1/16W	
R203			RK73GB1J823J	CHIP R 82K J 1/16W	
R204		*	R92-3306-08	CHIP R 1.0K J 1/16W	
R205			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R206			RK73GB1J331J	CHIP R 330 J 1/16W	
R207			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R208			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R209			R92-1252-05	CHIP R 0 OHM	
R210			RK73GB1J473J	CHIP R 47K J 1/16W	
R211-213			RK73GB1J750J	CHIP R 75 J 1/16W	
R214			RK73GB1J561J	CHIP R 560 J 1/16W	
R215			RK73GB1J334J	CHIP R 330K J 1/16W	
R216		*	R92-3306-08	CHIP R 1.0K J 1/16W	
R217			RK73GB1J182J	CHIP R 1.8K J 1/16W	
R218			RK73GB1J184J	CHIP R 180K J 1/16W	
R219			RK73GB1J123J	CHIP R 12K J 1/16W	
R220			RK73GB1J153J	CHIP R 15K J 1/16W	
R221			RK73GB1J473J	CHIP R 47K J 1/16W	
R222			RK73GB1J684J	CHIP R 680K J 1/16W	
R223			RK73GB1J153J	CHIP R 15K J 1/16W	
R224			RK73GB1J821J	CHIP R 820 J 1/16W	
R225			RK73GB1J471J	CHIP R 470 J 1/16W	
R226			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R227			RK73GB1J105J	CHIP R 1.0M J 1/16W	
R228		*	R92-3306-08	CHIP R 1.0K J 1/16W	
R229			RK73GB1J750J	CHIP R 75 J 1/16W	
R230			RK73GB1J221J	CHIP R 220 J 1/16W	
R231			RK73GB1J472J	CHIP R 4.7K J 1/16W	

E : Europe **K** : North America **M** : Other Areas
W : Without Europe

⚠ Indicates safety critical components.

LZ-701W

PARTS LIST

∗ New parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

MAIN UNIT

Ref. No.	Add	New	Parts No.	Description	Destination
R232			RK73GB1J153J	CHIP R 15K J 1/16W	
R233			RK73GB1J333J	CHIP R 33K J 1/16W	
R302			RK73GB1J103J	CHIP R 10K J 1/16W	
R303			RK73GB1J473J	CHIP R 47K J 1/16W	
R304			RK73GB1J104J	CHIP R 100K J 1/16W	
R305			RK73GB1J473J	CHIP R 47K J 1/16W	
R307			RK73GB1J123J	CHIP R 12K J 1/16W	
R308			RK73GB1J823J	CHIP R 82K J 1/16W	
R309			RK73GB1J153J	CHIP R 15K J 1/16W	
R310			RK73GB1J333J	CHIP R 33K J 1/16W	
R311			RK73GB1J154J	CHIP R 150K J 1/16W	
R313-315			RK73GB1J101J	CHIP R 100 J 1/16W	
R316			RK73GB1J473J	CHIP R 47K J 1/16W	
R317			RK73GB1J153J	CHIP R 15K J 1/16W	
R318			RK73GB1J473J	CHIP R 47K J 1/16W	
R319			RK73GB1J153J	CHIP R 15K J 1/16W	
R320			RK73GB1J563J	CHIP R 56K J 1/16W	
R321			RK73GB1J153J	CHIP R 15K J 1/16W	
R322			RK73GB1J563J	CHIP R 56K J 1/16W	
R323			RK73GB1J473J	CHIP R 47K J 1/16W	
R324			RK73GB1J473J	CHIP R 47K J 1/16W	
R325			RK73GB1J153J	CHIP R 15K J 1/16W	
R326			RK73GB1J473J	CHIP R 47K J 1/16W	
R327			RK73GB1J153J	CHIP R 15K J 1/16W	
R328		*	R92-3306-08	CHIP R 1.0K J 1/16W	
R329-332			RK73GB1J101J	CHIP R 100 J 1/16W	
R333			RK73GB1J471J	CHIP R 470 J 1/16W	
R336		*	R92-3302-08	CHIP R 10 J 1/8W	
R337			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R338			RK73GB1J223J	CHIP R 22K J 1/16W	
R339			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R340			R92-1252-05	CHIP R 0 OHM	
R341		*	R92-3302-08	CHIP R 10 J 1/8W	
R342			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R346			RK73GB1J104J	CHIP R 100K J 1/16W	
R348		*	R92-3306-08	CHIP R 68 J 1/8W	
R350-352			RK73GB1J103J	CHIP R 10K J 1/16W	
R353-355			RK73GB1J152J	CHIP R 1.5K J 1/16W	
R401,403			RK73GB1J153J	CHIP R 15K J 1/16W	
R402			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R404			RK73GB1J123J	CHIP R 12K J 1/16W	
R405			RK73GB1J563J	CHIP R 56K J 1/16W	
R407		*	R92-3306-08	CHIP R 1.0K J 1/16W	
R408			RK73GB1J104J	CHIP R 100K J 1/16W	
R409		*	R92-3309-08	CHIP R 18 J 1/2W	
R412		*	R92-3331-08	CHIP R 1.8K J 1/8W	
R702			RK73GB1J223J	CHIP R 22K J 1/16W	
R703			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R705			RK73GB1J103J	CHIP R 10K J 1/16W	
R706			RK73FB2B100J	CHIP R 10 J 1/8W	
R707			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R708			RK73FB2B100J	CHIP R 10 J 1/8W	
R709			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R711			RK73GB1J123J	CHIP R 12K J 1/16W	
R712			RK73GB1J472J	CHIP R 4.7K J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
R713			RK73GB1J473J	CHIP R 47K J 1/16W	
R714			RK73GB1J103J	CHIP R 10K J 1/16W	
R750			RK73GB1J105J	CHIP R 1.0M J 1/16W	
R751			RK73GB1J473J	CHIP R 47K J 1/16W	
R999			RK73GB1J102J	CHIP R 1.0K J 1/16W	
SVR201		*	R32-0275-08	SEMI FIXED VARIABLE RESI.(22K)	
SVR302		*	R32-0261-08	SEMI FIXED VARIABLE RESI.(33K)	
SVR311		*	R32-0261-08	SEMI FIXED VARIABLE RESI.(33K)	
SVR701		*	R32-0268-08	SEMI FIXED VARIABLE RESI.(10K)	
SVR702		*	R32-0274-08	SEMI FIXED VARIABLE RESI.(100K	
S101-105		*	S68-0867-08	TACT SWITCH 1P-1T	
S106		*	S68-0868-08	TACT SWITCH	
D001,002		*	RB706D-40-T146	DIODE	
D003			DSM10C	DIODE	
D004		*	SB20-03P	DIODE	
D101		*	EP05Q03L	DIODE	
D401		*	SB20-03P	DIODE	
DZ001		*	02CZ9.1-X	ZENER DIODE	
DZ003			02CZ8.2-Y	ZENER DIODE	
DZ101-114			02CZ6.2-X	ZENER DIODE	
DZ201			02CZ6.2-X	ZENER DIODE	
DZ301		*	02CZ5.1-X	ZENER DIODE	
DZ999		*	02CZ16	ZENER DIODE	
IC001			S-81250HG	IC(VOLTAGE REGULATOR/ +5V)	
IC002		*	LT1615ES5	IC	
IC003		*	NJM2360M	IC	
IC101		*	M37212EFFP	IC	
IC102		*	S-80741AL-A5	IC	
IC103		*	HN58X2402FPI-Z	IC	
IC104		*	SN74AHC2G34HDC	IC	
IC105		*	M62334FP	IC	
IC106			TC75S51F	IC(OP AMP)	
IC107			TC7S32FU	IC(2INPUT OR GATE)	
IC201			UPC1830GT	IC(ANALPGUE IC)	
IC202			TDA4665T	IC	
IC203			TC7W74FU	IC(D-TYPE FLIP FLOP)	
IC204		*	MM1108XF	IC	
IC206			MM1234XFBE	IC	
IC301			IR3Y26A1	IC	
IC302		*	TC74VHC123AFS	IC	
IC302		*	TC74VHC123AFT	IC	
IC303		*	NJM4565M-B	IC(OP AMP X2)	
IC304		*	NC7S02P5	IC	
IC304			TC7S02FU	IC(2,INPUT NOR GATE)	
IC401		*	MB3817PFV	IC	
IC701		*	NJM4565M-B	IC(OP AMP X2)	
IC702			TC4W53FU	MOS-IC	
IC750		*	M62339FP	IC	
Q001		*	2SB1203-S	TRANSISTOR	
Q001		*	2SB1203-T	TRANSISTOR	
Q002		*	2SC2412K-R	TRANSISTOR	
Q003,005		*	2SC3647-S	TRANSISTOR	
Q003,005		*	2SC3647-T	TRANSISTOR	
Q007		*	2SB1424-R	TRANSISTOR	

E : Europe **K** : North America **M** : Other Areas
W : Without Europe

⚠ Indicates safety critical components.

PARTS LIST

∗ New parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
Q008		*	DTC114YKA-T146	TRANSISTOR	
Q101,102		*	DTA114YKA-T146	TRANSISTOR	
Q103		*	DTC114YKA-T146	TRANSISTOR	
Q104-106		*	DTA114YKA-T146	TRANSISTOR	
Q107		*	2SC2412K-R	TRANSISTOR	
Q108			DTA114YKA	TRANSISTOR	
Q109			2SB709A-R	TRANSISTOR	
Q110		*	DTC114YKA-T146	TRANSISTOR	
Q201			2SA1576A	TRANSISTOR	
Q202			2SC4081	TRANSISTOR	
Q301,302		*	IMZ4	TRANSISTOR	
Q401		*	2SB1203-S	TRANSISTOR	
Q401		*	2SB1203-T	TRANSISTOR	
Q402,403		*	2SD1803-S	TRANSISTOR	
Q701,702		*	IMZ4	TRANSISTOR	
Q703		*	2SC2412K-R	TRANSISTOR	
REM101			RPM6938-V4	SENSOR	
SEN101			TPS703	PHOTO DIODE	
TH101		*	SC20-3U104K	THERMISTOR	
TH750		*	NTH5G20P39A	THERMISTOR	
BOX UNIT					
C901		*	C92-1706-08	ELECT 1000UF 16WV	
C902		*	C93-1195-08	CHIP C 0.01UF K	
C903		*	C92-1647-08	ELECTRO 10UF 16WV	
C904		*	C93-1196-08	CHIP C 0.1UF K	
C905		*	C93-1161-08	CHIP C 1.0UF Z	
C906		*	C92-1644-08	ELECTRO 100UF 6.3WV	
C907,908		*	C93-1196-08	CHIP C 0.1UF K	
C910		*	C93-1196-08	CHIP C 0.1UF K	
C911		*	C92-1647-08	ELECTRO 10UF 16WV	
CS901		*	E41-0175-08	PIN ASSY (CONNECTOR)	
CS902		*	E41-0176-08	PIN ASSY (SOCKET 20P)	
CS903		*	E41-0177-08	RCA PIN JACK	
F901		*	F09-1730-08	FUSE 125V 5A	
L901		*	L33-1842-08	INDUCTOR, SK	
JP907			R92-2052-05	CHIP R 0 J 1/10W	
R901			RK73FB2A100J	CHIP R 10 J 1/10W	
R902			RK73GB1J104J	CHIP R 100K J 1/16W	
R904			RK73GB1J750J	CHIP R 75 J 1/16W	
R906			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R909			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R910		*	R92-3333-08	CHIP R 33K J 1/8W	
R911			RK73GB1J104J	CHIP R 100K J 1/16W	
R912			RK73GB1J472J	CHIP R 4.7K J 1/16W	
R913			RK73GB1J473J	CHIP R 47K J 1/16W	
R914		*	R92-3332-08	CHIP R 10K J 1/8W	
D901			DS135D	DIODE	
D902			MA152K	DIODE	
DZ901,902			02CZ6.2-X	ZENER DIODE	
IC901			S-81250HG	IC(VOLTAGE REGULATOR/ +5V)	
IC903			MM1031XM	IC	
Q901			DTA114YKA	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q902			2SB709A	TRANSISTOR	
Q903			2SC2412K-R	TRANSISTOR	
VA901			ERZ-C07DK220	VARISTOR	

E : Europe **K** : North America **M** : Other Areas
W : Without Europe

⚠ Indicates safety critical components.