9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *Screws adjacent to ▼ mark on product are used for disassembly.*
● *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

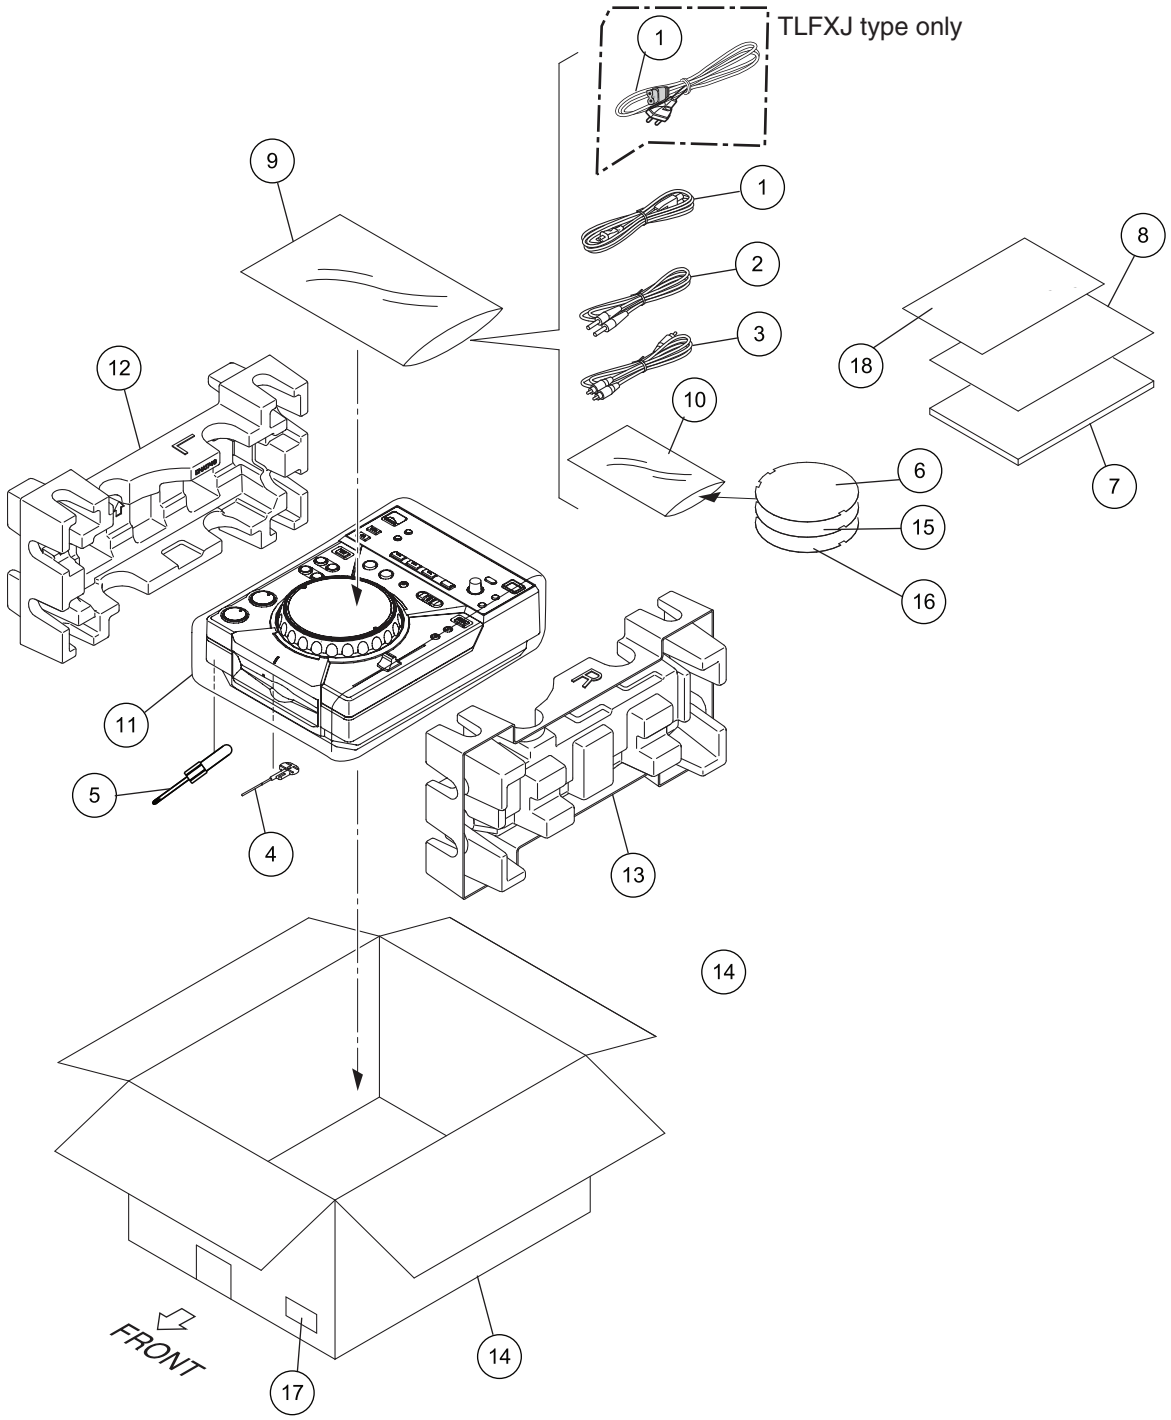

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table (2)
	2	Control Cable (L=1.0 m)	ADE7108
	3	Audio Cable (L=1.5 m)	VDE1064
	4	Forced Eject Pin (Housed in a groove in the bottom panel)	DEX1008
	5	Screw driver	DEX1022
	6	Jog Sheet 1	DAH2599
	7	Operating Instructions	See Contrast table (2)
NSP	8	Warranty Card	See Contrast table (2)
NSP	9	Polyethylene Bag (0.06 x 230 x 340)	AHG7117
NSP	10	Polyethylene Bag	DHL1174
	11	Packing Sheet	AHG7015
	12	Pad L	DHA1749
	13	Pad R	DHA1750
	14	Packing Case	See Contrast table (2)
	15	Jog Sheet 2	DAH2600
	16	Jog Sheet 3	DAH2601
NSP	17	Label	VRW1629
	18	Caution Card SR	See Contrast table (2)

(2) CONTRAST TABLE

CDJ-400/KUCXJ, WYXJ5 and TLFXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-400/KUCXJ	CDJ-400/WYXJ5	CDJ-400/TLFXJ
⚠	1	Power Cord	ADG7021	ADG1154	ADG1154
⚠	1	Power Cord	Not used	Not used	ADG7097
	7	Operation Instructions (English)	DRB1450	Not used	Not used
	7	Operation Instructions (English, French, German, Italian, Dutch, Spanish, Russian)	Not used	DRB1451	Not used
	7	Operation Instructions (English, Spanish, Chinese)	Not used	Not used	DRB1452
NSP	8	Warranty Card	ARY7043	ARY7107	Not used
	14	Packing Case	DHG2710	DHG2709	DHG2711
	18	Caution Card SR	Not used	Not used	ARM7064

9.2 EXTERIOR SECTION

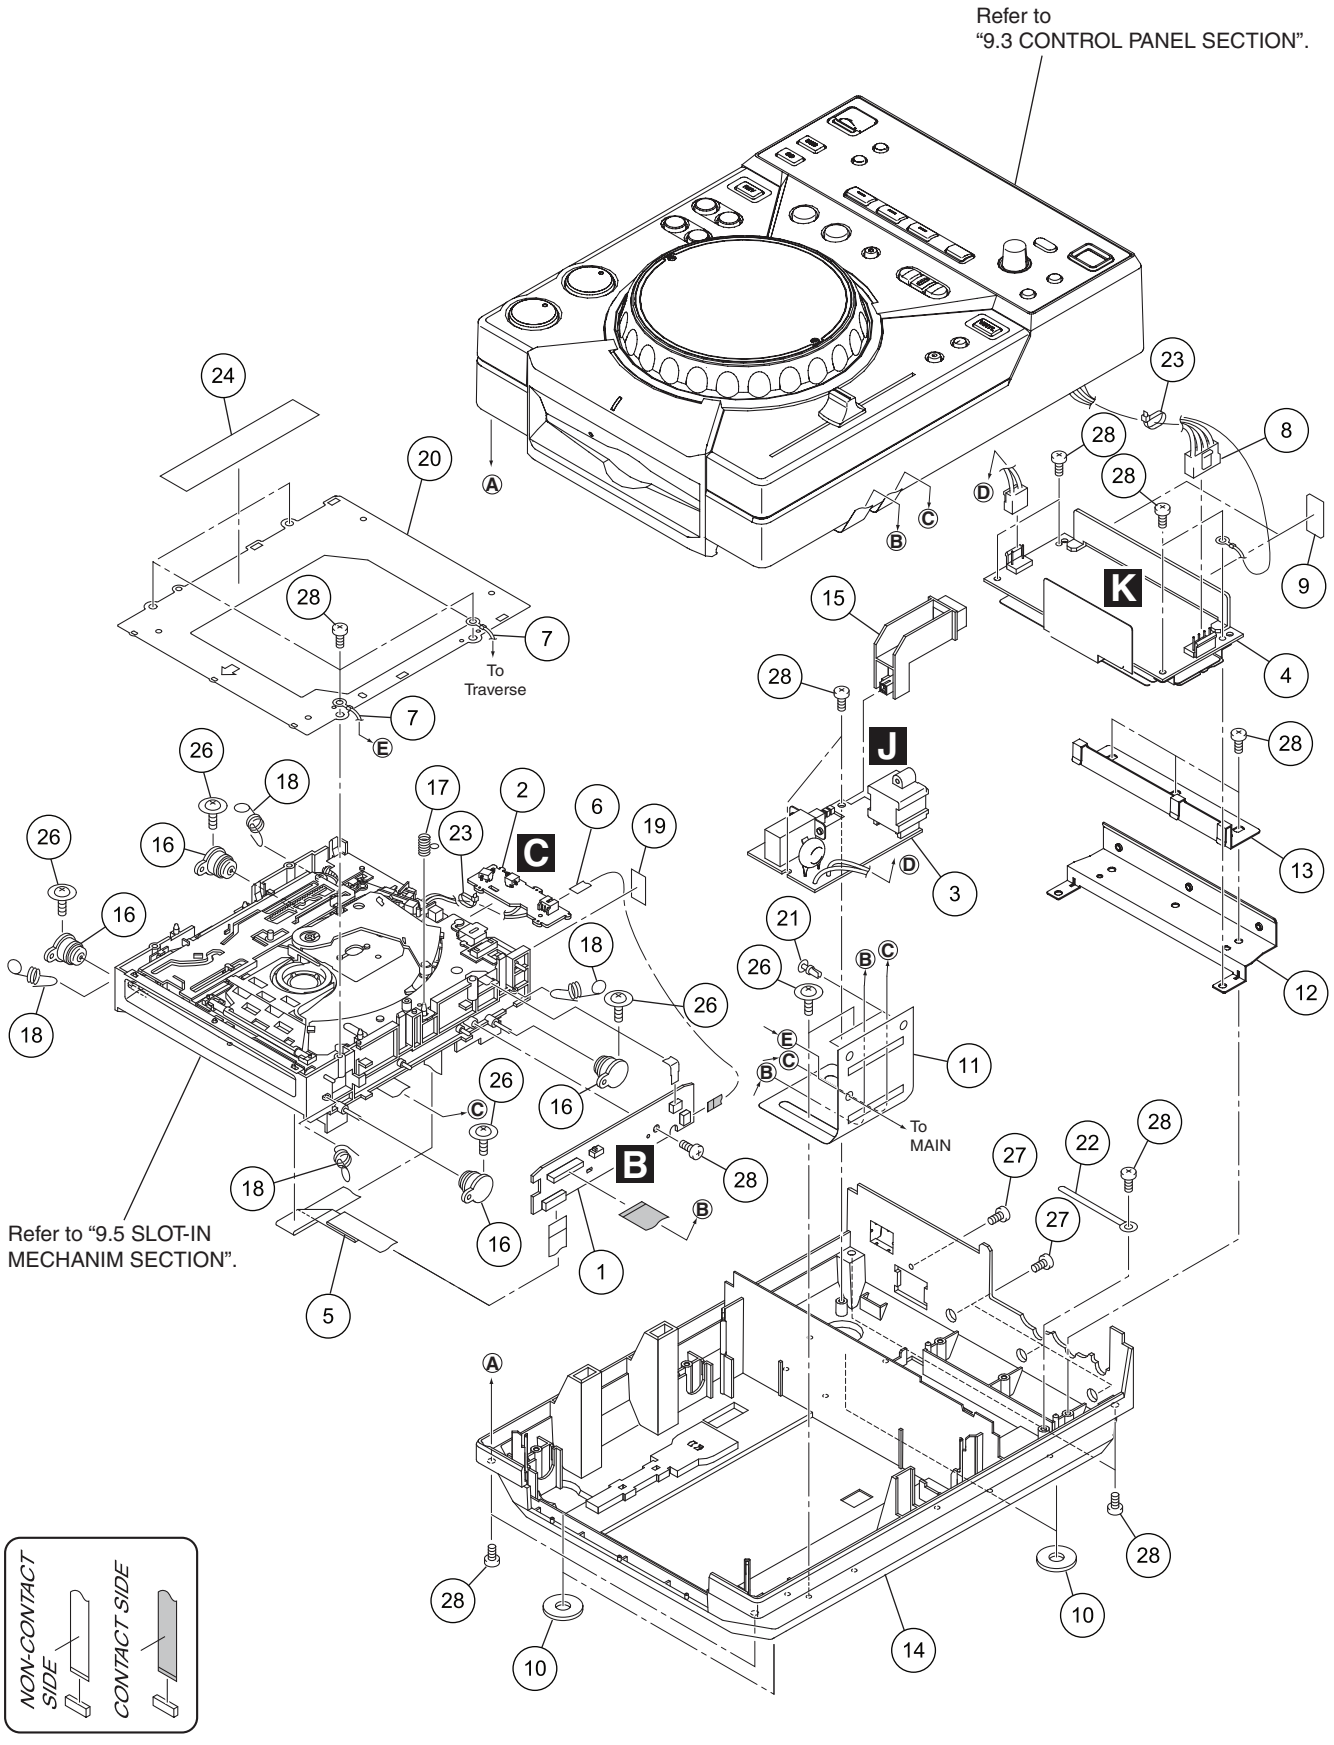

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CNCT Assy	DWX2762
	2	SLMB Assy	DWS1404
	3	ACIN Assy	See Contrast table (2)
⚠	4	SW POWER SUPPLY	DWR1443
	5	24P FFC	DDD1331
	6	5P FFC	DDD1370
NSP	7	Earth Lead Wire	DE010VE0
	8	Connector Assy	PF04EE-S22
NSP	9	Silicone Sheet D5 L	DEB1456
	10	Insulator MO	DEC2250
	11	Cable Protector	DEC3072
	12	Heat Plate 1	DNH2814
	13	Heat Plate 2	DNH2815
NSP	14	Chassis	See Contrast table (2)
	15	Power Knob	DNK5017
	16	Damper	CNV6011
	17	Earth Spring	DBH1398
	18	Float Spring G5	DBH1494
	19	Tape	DEC3053
	20	Mecha. Plate (FE)	DNH2642
	21	Push Rivet	XEC3034
	22	Cord Clamper	RNH-184-0
	23	Binder (SKB-90BK)	ZCA-SKB90BK
	24	Laser Caution	See Contrast table (2)
	25	•••••	
	26	DM Screw (FTC)	DBA1260
	27	Screw	PBZ30P080FTB
	28	Screw	BPZ30P080FTB

(2) CONTRAST TABLE

CDJ-400/KUCXJ, WYXJ5 and TLFXJ are constructed the same except for the following:

Mark	No.	Symbol and Description	CDJ-400/KUCXJ	CDJ-400/WYXJ5	CDJ-400/TLFXJ
	3	ACIN Assy	DWX2800	DWX2766	DWX2766
NSP	14	Chassis	DNK4984	DNK4983	DNK4985
	24	Laser Caution	DRW2308	DRW2308	DRW2248

9.3 CONTROL PANEL SECTION

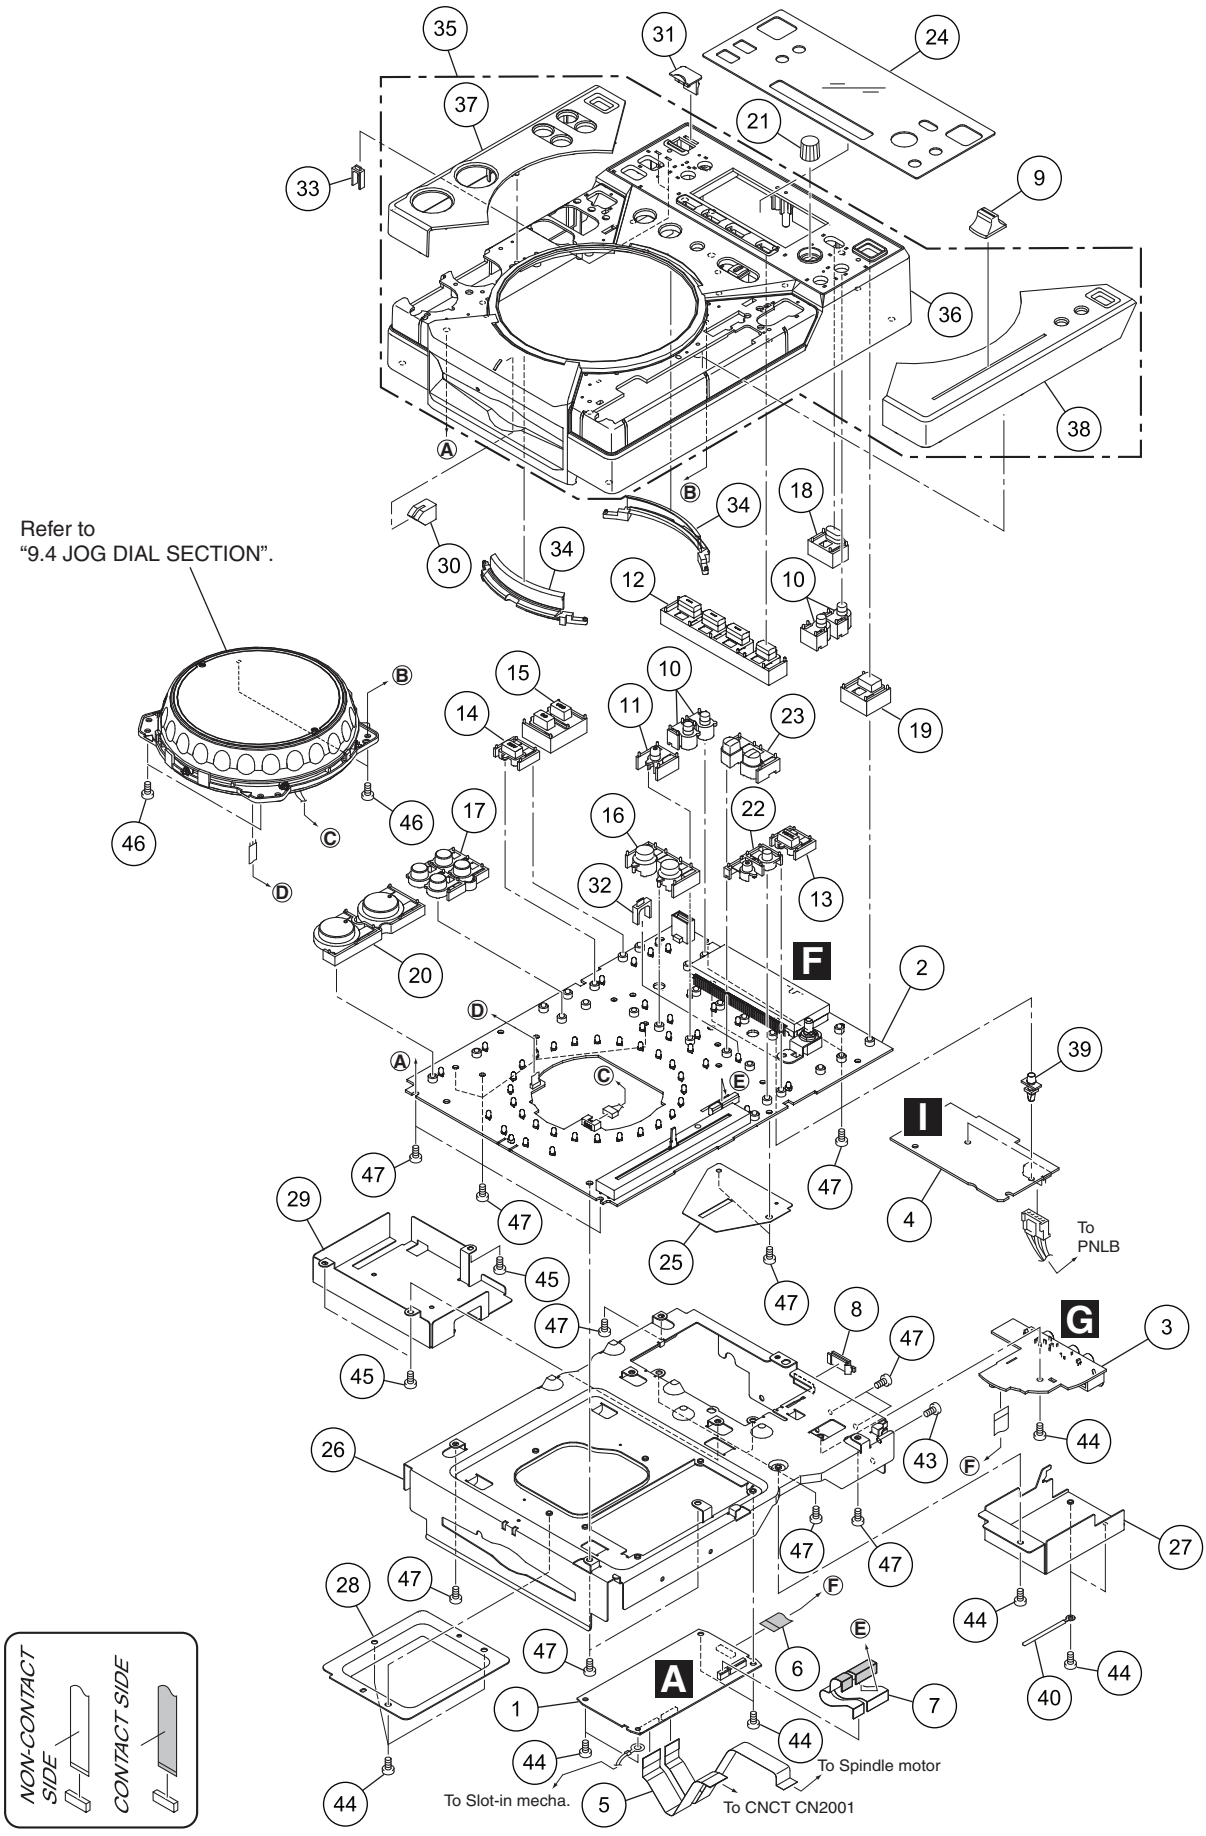

CONTROL PANEL SECTION PARTS LIST

Mark	No.	Description	Part No.
NSP	1	MAIN Assy	DWG1652
	2	PNLB Assy	DWX2756
	3	JACB Assy	DWX2759
	4	REGB Assy	DWR1442
	5	32P FFC	DDD1371
	6	17P FFC	DDD1372
	7	23P FFC	DDD1374
	8	Blind Cap	DNK4218
	9	Slide Knob	DAC2406
	10	TIME Knob	DAC2407
	11	RELOOP Knob	DAC2409
	12	JOG EFFECT Knob	DAC2410
	13	VINYL Knob	DAC2411
	14	REVERSE Knob	DAC2412
	15	Set Knob (SELECT)	DAC2413
	16	Set Knob (LOOP)	DAC2414
	17	Set Knob (SEARCH)	DAC2415
	18	BACK Knob	DAC2416
	19	EJECT Knob	DAC2417
	20	PLAY Button	DAC2418
	21	Dial Knob	DAC2419
	22	TEMPO Knob	DAC2423
	23	BEAT LOOP Knob	DAC2424
	24	Display Panel	DAH2549
	25	FFC guard	DEC3056
	26	MAIN PCB Stay	DNH2800
	27	Shield Case	DNH2801
	28	JOG Support	DNH2808
	29	Shield Case 2	DNH2813
	30	FRONT Lens	DNK4997
	31	USB Cover	DNK4999
	32	BEAT LOOP Lens	DNK5042
	33	MEMORY Lens	DNK5049
	34	JOG Lens	DNK5078
	35	Control Panel Assy	DXB1977
	36	Control Panel	DNK5030
	37	Top Panel (L)	DNK5031
	38	Top Panel (R)	DNK5073
	39	Locking Card Spacer	VEC2234
	40	Cord Clamper	RNH-184-0
	41	•••••	
	42	•••••	
	43	Screw (M3 x 5)	DBA1340
	44	Screw	BBZ30P060FTC
	45	Screw	BPZ30P100FTC
	46	Screw	CPZ30P080FTB
	47	Screw	BPZ30P080FTB

9.4 JOG DIAL SECTION

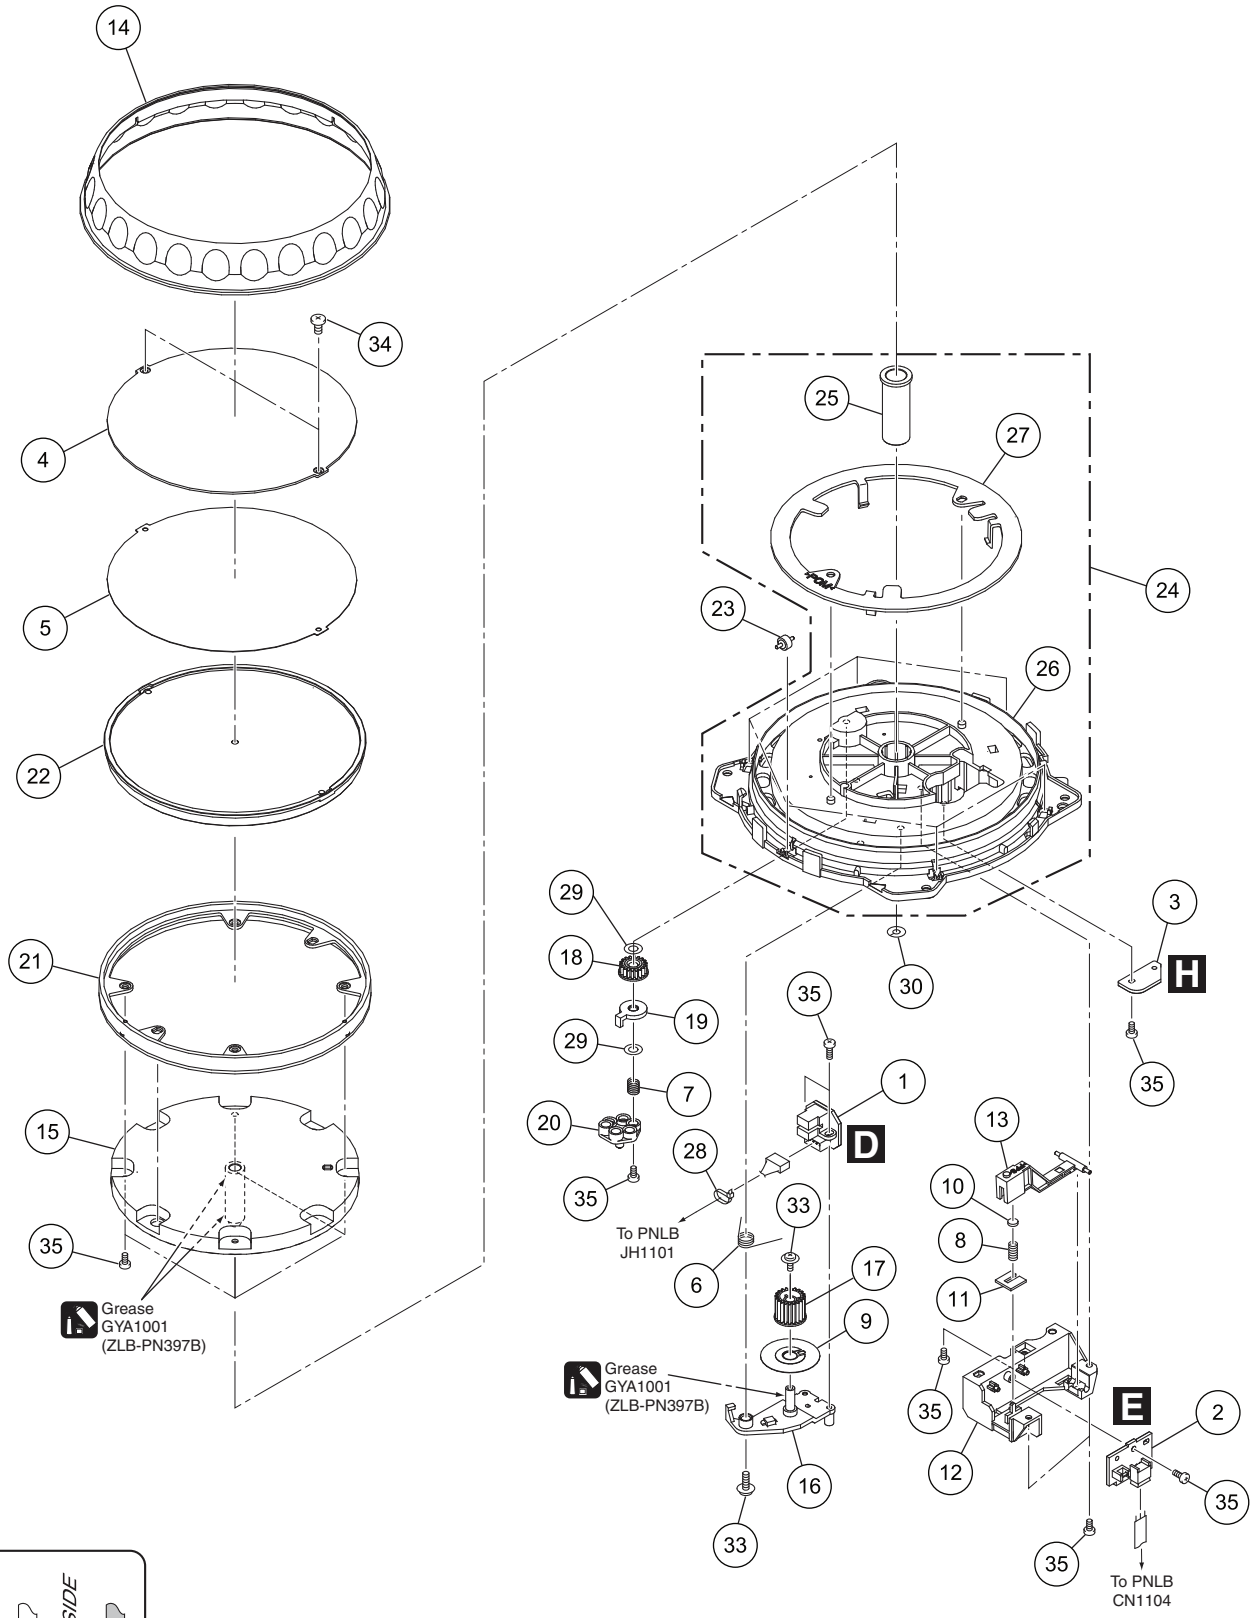

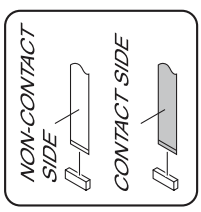

JOG DIAL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	JOGB Assy	DWX2760
	2	TCHB Assy	DWX2761
	3	STPB Assy	DWX2792
	4	Jog Plate	DAH2565
	5	Jog Sheet	DAH2581
	6	Arm Spring	DBH1612
	7	Load Spring	DBH1632
	8	Lever Spring	DBH1626
	9	Encoder Plate	DEC2889
	10	Lever Cushion (A)	DEC3001
	11	Lever Cushion (B)	DEC3002
	12	Lever Holder	DNK4762
	13	Jog Lever	DNK4763
	14	Jog B	DNK4932
	15	Jog Shaft	DNK4934
	16	Encoder Arm	DNK4936
	17	Encoder Gear	DNK4937
	18	Load Gear	DNK4938
	19	Load Smoother	DNK4939
	20	Adjust Plate	DNK4943
	21	Ring Lens	DNK4979
	22	Jog A Assy	DXA2122
	23	Roller B Assy	DXB1877
	24	Jog Holder Assy	DXB1982
	25	Shaft Holder	DLA2042
	26	Jog Holder	DNK4933
	27	Slide Ring	DNK4935
	28	Binder (SKB-90BK)	ZCA-SKB90BK
	29	Washer	WA42D080D025
	30	Washer	WT32D080D050
	31	•••••	
	32	•••••	
	33	Screw (FE)	DBA1265
	34	Screw	DBA1347
	35	Screw	BPZ20P060FTC

9.5 SLOT-IN MECHANISM SECTION

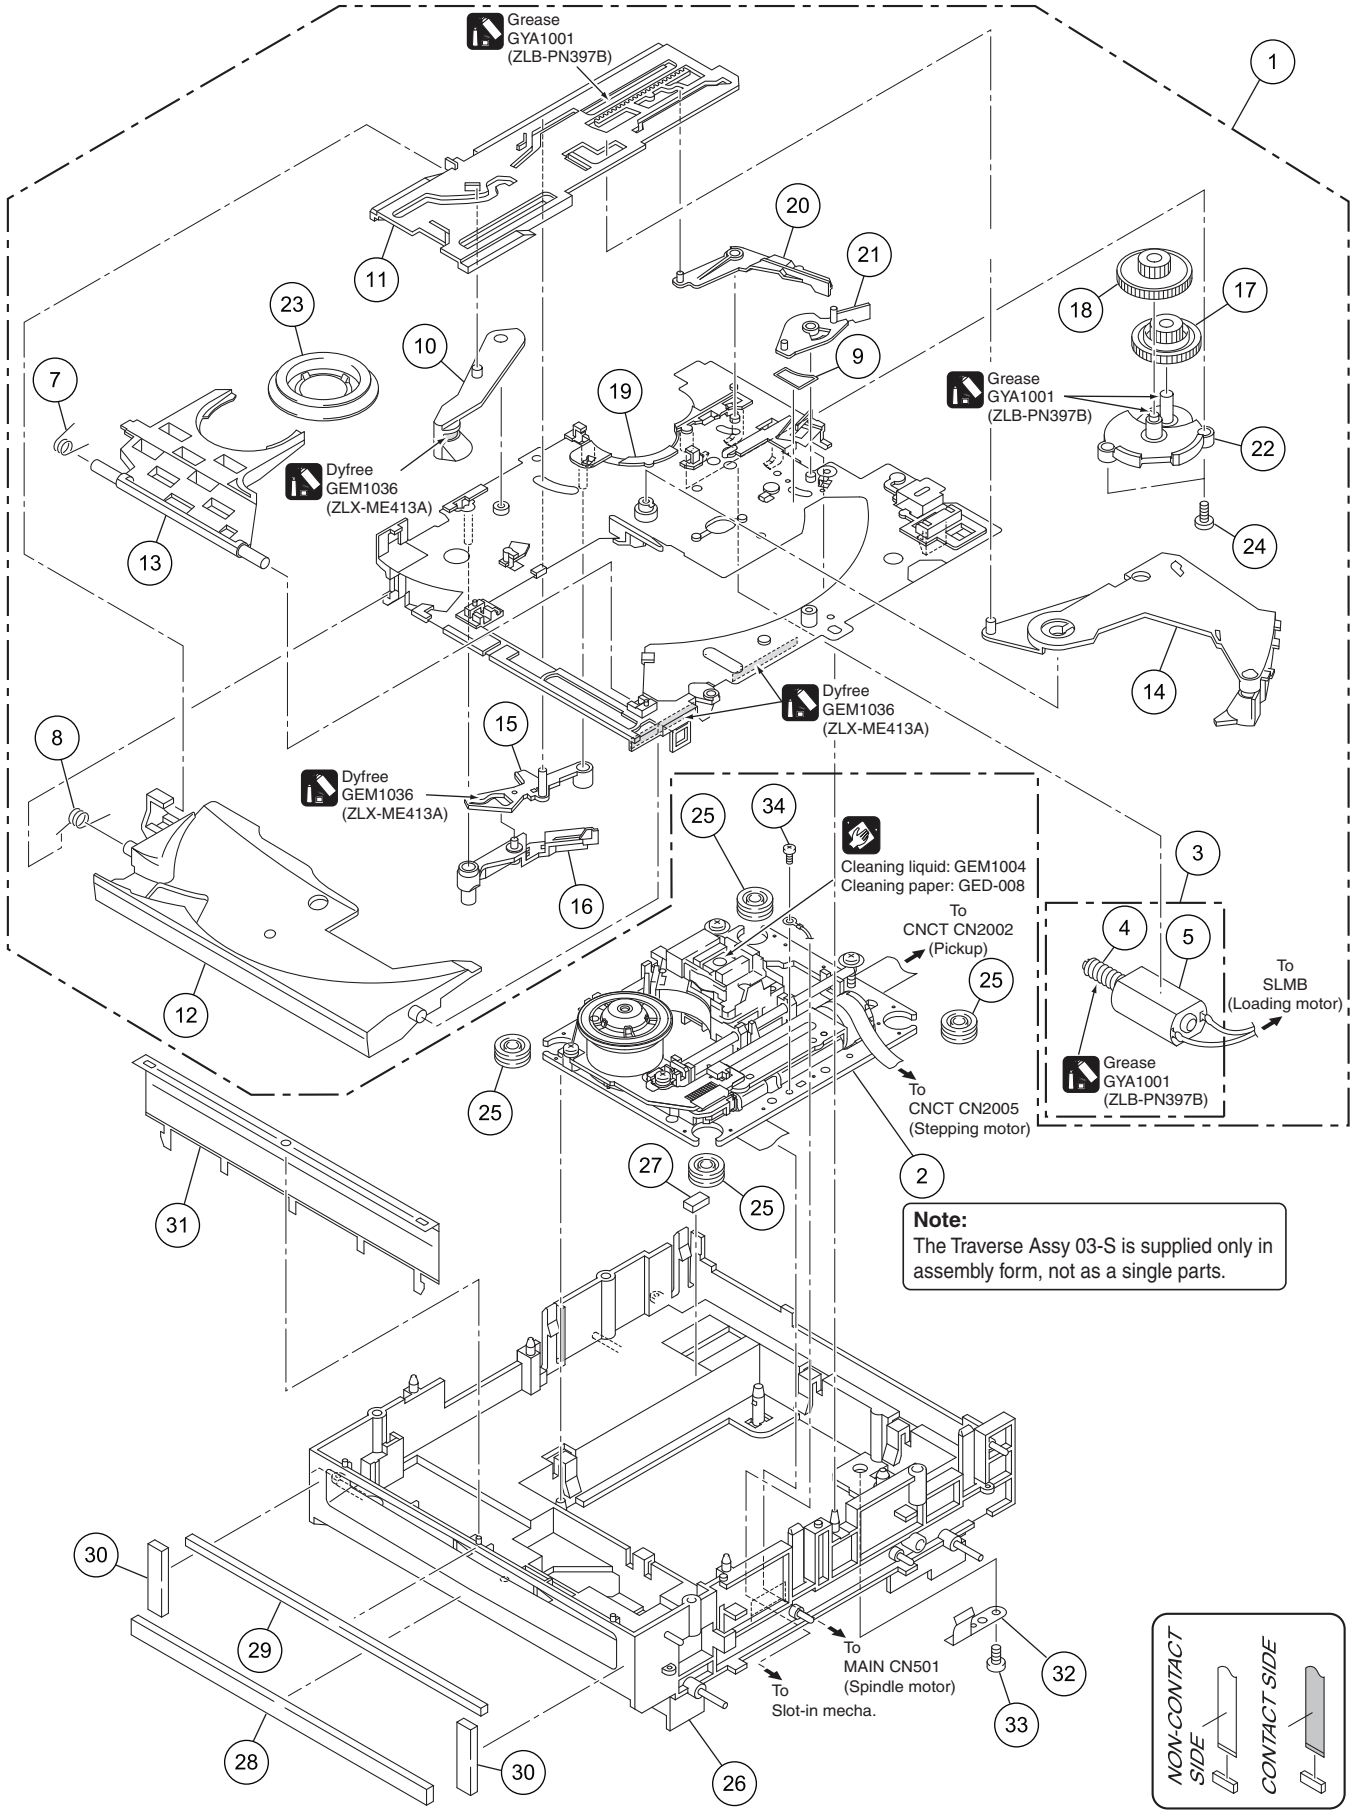

Note:
The Traverse Assy 03-S is supplied only in assembly form, not as a single parts.

SLOT-IN MECHANISM SECTION PARTS LIST

Mark	No.	Description	Part No.
NSP	1	Slot-in Mechanism Assy	DXA2121
	2	03 Traverse Assy (Ro)	VXX3125
	3	Loading Motor Assy-S	DXX2510
NSP	4	Worm Gear	DNK3910
NSP	5	DC Motor S (ROHS)	DXM1230
	6	•••••	
	7	Clamp Spring	DBH1374
	8	Guide Spring	DBH1375
	9	SW Lever Spacer SV	DEC2831
	10	Loading Gear	DNK3406
	11	Main Cam	DNK3407
	12	Disc Guide	DNK3478
	13	Clamp Arm	DNK3576
	14	Eject Lever	DNK3684
	15	Lever AP	DNK3835
	16	Lever BP	DNK3836
	17	Loading Gear	DNK3911
	18	Drive Gear	DNK3912
	19	Loading Base SV	DNK4369
	20	SW Lever SV1	DNK4370
	21	SW Lever SV2	DNK4371
	22	Gear Holder SV	DNK4372
	23	Clamper 04 Assy	DXB1859
	24	Screw	BPZ20P060FTC
	25	Float Rubber (SI)	VEB1351
	26	Float Base 04 Assy	DXB1838
	27	Spacer POR (T3)	DEB1566
	28	Vessel Cushion A	DEC2852
	29	Vessel Cushion B	DEC2853
	30	Vessel Cushion C	DEC2854
	31	Front Sheet	DED1132
	32	FPC Guard	DBK1282
	33	Screw	BPZ30P080FTB
	34	Screw	BBZ26P040FTC

12. PCB PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J=5%, and K=10%).

560 Ω	→	*56 x 10^1* →	*561* ·····	*RD1/4PU 5 6 1 J*
47k Ω	→	*47 x 10^3* →	*473* ·····	*RD1/4PU 4 7 3 J*
0.5 Ω	→	*R50* ·····		*RN2H R 5 0 K*
1 Ω	→	*1R0* ·····		*RS1P 1 R 0 K*

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62k Ω	→	*562 x 10^1* →	*5621* ·····	*RN1/4PC 5 6 2 1 F*

■ LIST OF WHOLE PCB ASSEMBLIES

Mark	Symbol and Description	CDJ-400 /KUCXJ	CDJ-400 /WYXJ5	CDJ-400 /TLFXJ
	1..MAIN ASSY	DWG1652	DWG1652	DWG1652
NSP	1..PNLA ASSY	DWM2323	DWM2313	DWM2313
	2..REGB ASSY	DWR1442	DWR1442	DWR1442
	2..SLMB ASSY	DWS1404	DWS1404	DWS1404
	2..PNLB ASSY	DWX2756	DWX2756	DWX2656
	2..JACB ASSY	DWX2759	DWX2759	DWX2659
	2..JOGB ASSY	DWX2760	DWX2760	DWX2660
	2..TCHB ASSY	DWX2761	DWX2761	DWX2761
⚠	2..ACIN ASSY	DWX2800	DWX2766	DWX2766
	2..STPB ASSY	DWX2792	DWX2792	DWX2792
	1..CNCT ASSY	DWX2762	DWX2762	DWX2762
⚠	1..SW POWER SUPPLY	DWR1443	DWR1443	DWR1443

■ CONTRAST OF PCB ASSEMBLIES

J ACIN ASSY

DWX2800 and DWX2766 are constructed the same except for the following :

Mark	Symbol and Description	DWX2800	DWX2766
⚠	JA1001AC Inlet 1P	XKP3042	Not used
⚠	JA1001AC Inlet 1P	Not used	XKP3041

■ PCB PARTS LIST FOR CDJ-400 / KUCXJ UNLESS OTHER WISE NOTED

Mark	No.	Description	Part No.
A		**MAIN ASSY**	
		SEMICONDUCTORS	
	IC	101	DYW1763
	IC	102	K4S561632H-UC75
	IC	103	PCM1742KE
	IC	104	MM1562FF
	IC	105	DSPC56371AF180
	IC	106	XC3S50-4VQG100C
	IC	107	NJM4580MD
	IC	108,110	BD00KA5WFP
	IC	109	TC7W04FU
	IC	111,117	TC7SU04FU
	IC	112	BU4230G
	IC	113	TDOTG242-0F0C8
	IC	114	SCF5249VM140
	IC	116	MM1561JF
	IC	118	TC7SH04FUS1
	IC	119	NJM2872BF05
	IC	120	NJM2872BF33
	IC	502	TC94A15FG
	IC	503	BD7956FS
	IC	504	NJM2903M
⚠	IC	505	NJM2872BF05
	Q	101	RT1P241M
	Q	102	2SC2412K
	Q	103,105	RT1N241M
	Q	104,106	2SC4081
	Q	501	2SA1036K
		MISCELLANEOUS	
	L	501,502 CHIP COIL	OTL1009
	X	101 CRYSTAL RESONATOR (16.9 MHz)	VSS1084
	X	102 CRYSTAL RESONATOR (6 MHz)	VSS1210
	CN	102 17P CONNECTOR	RKN1058
	CN	103 23P CONNECTOR	VKN1427
	CN	501 CONNECTOR	CKS4999
	CN	502 32P FFC CONNECTOR	DKN1447
		RESISTORS	
	R	122,123	RS1/16SS4702D
	R	124,125	RS1/16SS4700D
	R	127,130	RS1/16SS1002D
	R	128,129,131,132	RS1/16SS1501D
	R	135,136	RS1/16SS1102D
	R	140,151	RS1/16SS3302F
	R	141	RS1/16SS5602F
	R	150	RS1/16SS2202F
	R	507,512,515,516	RS1/4SA1R0J
	R	517,518	RS1/16SS4702F
	R	545	RS1/16SS1002F
	R	555,556	RS1/4SA2R7J
	R	558	RS1/16S0R0J
	Other Resistors		RS1/16SS###J
		CAPACITORS	
	C	101-103,105-112	CKSSYB104K10
	C	113	CEHVW220M6R3
	C	114,117-123	CKSSYB104K10
	C	115,158,166	CEVW220M6R3
	C	116,143,144,147	CKSSYB471K50
	C	124	CEVW100M16
	C	125,172,203,214	CKSSYB105K6R3
	C	126	CKSSYB474K6R3
	C	127-134,137-142	CKSSYB104K10
	C	135,136,162,169	CEVW101M6R3
	C	145,146,149-157	CKSSYB104K10
	C	148,201,521	CKSSYB471K50
	C	159,165,206,207	CCSSCH180J50
	C	160,163,164,168	CKSSYB104K10
	C	161,167,175,216	CKSSYB103K16
	C	170,171,173,174	CKSSYB104K10
	C	176-188,190	CKSSYB104K10
	C	195-197,202,204	CKSSYB104K10
	C	199	CEVW101M4
	C	205,211,212	CEVW101M16
	C	208,213,215,220	CKSSYB104K10
	C	209,210	CKSSYB561K50
	C	217	CKSSYB105K6R3
	C	218,219,504,506	CKSSYB103K16
	C	501,505,513,515	CKSSYB104K10
	C	502,533,550,559	CEHVW470M6R3
	C	503,538	CCSSCH470J50
	C	507,512,517,540	CKSSYB103K16
	C	508,509	CKSSYB223K16
	C	510	CKSSYB102K50
	C	511,528	CKSSYB153K16
	C	514,518	CEHVW101M6R3
	C	516,523,525,527	CKSSYB104K10
	C	520,524	CCSSCH121J50
	C	522	CKSSYB681K50
	C	529-532,536,537	CKSSYB104K10
	C	534	CCSSCH680J50
	C	535	CEHVW470M16
	C	539,541-543	CKSSYB104K10
	C	544,562	CKSSYB103K16
	C	545,549,555	CKSSYB333K10
	C	546-548,556-558	CKSSYB104K10
	C	551,552	CKSSYB271K50
	C	553	CKSSYB122K50
	C	554	CCSSCH101J50
	C	561	CKSSYB104K10
B		**CNCT ASSY**	
		MISCELLANEOUS	
	L	2001,2002 INDUCTOR	CTF1410
	S	2002 SLIDE SWITCH	VSH1018
	CN	2001 32P FFC CONNECTOR	DKN1447
	CN	2002 24P FFC CONNECTOR	DKN1445
	CN	2003 5P CONNECTOR	DKN1402
	CN	2005 04P CONNECTOR	RKN1045
		RESISTORS	
	All Resistors		RS1/16S###J
		CAPACITORS	
	C	2014-2016	CKSRYB103K50

Mark	No.	Description	Part No.
C	2017,2019		CKSRYB104K50
C	2018		CEHVW220M6R3

C SLMB ASSY

MISCELLANEOUS

S	1801,1802	PUSH SWITCH	DSG1017
CN	1801	5P CONNECTOR	VKN1265

D JOGB ASSY

MISCELLANEOUS

CN	1601	CONNECTOR ASS'Y	PF04PG-B05

RESISTORS

All Resistors			RS1/16S###J

MISCELLANEOUS

PC	1601	PHOTO INTERRUPTER	SEDS-7573

CAPACITORS

C	1601		DCH1201
C	1602,1603		CKSRYB103K50

E TCHB ASSY

SEMICONDUCTORS

IC	1701		GP1S94
Q	1701		2SC4081
D	1701		1SS355

MISCELLANEOUS

CN	1701	3PJUMPER CONNECTOR	52151-0310

RESISTORS

All Resistors			RS1/16S###J

CAPACITORS

C	1701		CKSRYB104K16

F PNLB ASSY

SEMICONDUCTORS

IC	1100		PEG482A8
IC	1101		BU4242G
IC	1102		TC7SET08FUS1
IC	1103		TC7SET04FUS1
IC	1105		R5523N001B
IC	1106		NJM2845DL1-05
Q	1100,1102,1103,1105		RT1N241M
Q	1107-1115,1117-1126		RT1N241M
Q	1127,1128,1130,1131		RT1P241M
Q	1129,1132,1137-1141		RT1N241M
Q	1133,1134		RT1P241M
Q	1142		2SA2092
Q	1143		2SC4081
D	1101,1106,1110,1112		SLI-343Y8C(KLMN)
D	1102,1103,1105,1114		SLI-343U8RC(HJKL)
D	1107,1116,1157		SLI-343M8C(FGHJ)
D	1108		SLR343BC4T(JKLM)
D	1113,1115,1164,1165		SLI-343Y8C(KLMN)
D	1118		SLI-343U8RC(HJKL)
D	1119-1126,1131-1146		SLI-343U3R(HJKL)
D	1148-1150,1158		SLI-343U3R(HJKL)
D	1151		EP05Q04
D	1153		RD2.4FM
D	1156,1167		NNCD6.2MF
D	1160-1163		SLI-343U3R(HJKL)
D	1166		UDZS5R1(B)
D	1168		1SS355

MISCELLANEOUS

L	1101-1104	INDUCTOR	CTF1410
JA	1101	USB CONNECTOR A	DKB1087
V	1101	FL INDICATOR TUBE	DEL1064
VR	1100	VR	DCV1009
S	1100-1112,1114-1117	SWITCH	VSG1024
S	1113,1120-1123,1127	TACT SWITCH	DSG1079
S	1118,1119	TACT SWITCH	DSG1117
S	1124	JOG SWITCH	DSX1056
S	1125,1126	SWITCH	VSG1024
X	1101	CRYSTAL RESONATOR (15.975M)	DSS1166
CN	1104	L-PLUG(4P)	KM200NA4L
CN	1108	23P CONNECTOR	VKN1254
		FL HOLDER	DNF1778
JH	1101	3P CABLE HOLDER	51048-0300
JP	1101	3P JUMPER WIRE	D20PDY0310E
⚠ P	1101	PROTECTOR(0.750A)	DEK1096

RESISTORS

R	1111,1113		RS1/10S100J
R	1167,1168,1172,1173		RS1/10S221J
R	1182,1183		RS1/16S2201F
R	1191,1220,1223-1225		RS1/10S131J
R	1206,1207,1211,1212		RS1/10S221J
R	1208,1219,1233,1234		RS1/10S332J
R	1216,1217,1221,1222		RS1/10S221J
R	1226,1227,1231,1232		RS1/10S221J
R	1228-1230,1268-1274		RS1/10S131J
Other Resistors			RS1/16S###J

CAPACITORS

C	1109-1111,1149,1152		CKSRYB102K50
C	1112,1113		CKSRYB474K16
C	1114,1120,1128,1129		CKSRYB104K16
C	1115-1118		CCSRCH221J50
C	1119,1122,1123,1130		CKSRYB103K50
C	1121		CEHAR220M16
C	1124		CEHAR100M50
C	1125,1127		CCSRCH120J50
C	1126		CKSRYB104K50
C	1131		CEHAZL101M10
C	1132		CCSRCH121J50
C	1133,1139		CEJQ101M16
C	1134,1135,1140		CKSRYB104K16
C	1136,1138,1142,1144		CKSRYB103K50
C	1141		CEHAZL330M16
C	1143,1145		CEJQ470M16
C	1153		CKSRYB102K50
C	1157,1159		CKSRYB103K50
C	1158,1163		CEHAR101M10

Mark	No.	Description	Part No.
C	1160		CKSRYB105K16
C	1161,1162		CKSRYB474K10

G JACB ASSY

SEMICONDUCTORS

Q	1501-1504		2SD2114K
D	1501,1505-1509		NNCD6.2MF
D	1502-1504		1SS355

MISCELLANEOUS

JA	1501	JACK	VKB1243
JA	1502	2P JACK	DKB1088
JA	1503	1P JACK	DKB1089
JA	1504	USB CONNECTOR	DKN1237
CN	1501	17P CONNECTOR	VKN1248
CN	1502	L-PLUG(6P)	KM200NA6L

RESISTORS

All Resistors			RS1/16S###J

CAPACITORS

C	1501,1502		CEHAT221M16
C	1504,1505		CQMA102J50
C	1506		CKSRYB104K50
C	1510		CEHAT101M16
C	1511,1512		CKSRYB103K50

H DC MOTORS ASSY

DC MOTORS assembly has no service dart

I REGB ASSY

SEMICONDUCTORS

⚠ IC	1901		BD9300FV
⚠ IC	1902-1904		BD9305AFVM
⚠ IC	1905		BD9306AFVM
⚠ Q	1901,1902,1905		RSQ030P03
Q	1903		2SC4081
⚠ Q	1904		2SA2092
⚠ Q	1906		RTR020N05
D	1901		1SS355
D	1902		RB051LA-40
D	1903,1906		RB050LA-30
D	1904		RB160M-30
D	1905		RB160M-60

MISCELLANEOUS

L	1901,1902,1905	COIL	ATH1189
L	1903,1904	INDUCTOR	CTF1483
KN	1901	WRAPPING TERMINAL	VNF1084
CN	1901	CONNECTOR	B4B-EH
	0	G PLATE	DNH2819
⚠ P	1901	PROTECTOR(2A)	AEK7013

RESISTORS

R	1903		RS1/16S4701F
R	1908		RS1/16S2402F
R	1913		RS1/16S5101D
R	1914		RS1/16S1102F
R	1917		RS1/16S1802D
R	1918		RS1/16S5102F
R	1925		RS1/16S3302F
R	1926		RS1/16S1302F
R	1929		RS1/16S5602F
R	1930		RS1/16S3003F
R	1932,1933,1935,1936		RS1/4SA1R0J
R	1938,1939,1944		RS1/4SA1R0J
Other Resistors			RS1/16S###J

CAPACITORS

C	1901		CKSRYB104K25
C	1902		CKSRYB105K16
C	1903,1913,1914,1925		CEHAZL101M25
C	1904,1931,1933,1934		CKSRYB104K50
C	1905		CKSRYB332K50
C	1906,1908,1909,1921		CCSRCH101J50
C	1907,1916		CCSRCH201J50
C	1910		CKSQYB225K16
C	1911,1912,1915,1923		CKSRYB103K50
C	1917		CCSRCH121J50
C	1918-1920,1929		CEHAZL101M10
C	1922		CCSRCH101J50
C	1924		CKSRYB103K50
C	1926		CEHAZL101M25
C	1927		CCSRCH471J50
C	1928		CCSRCH750J50
C	1930		CEHAZL101M50
C	1932,1935,1938,1941		CCSRCH102J50
C	1936,1937,1939,1940		CKSRYB104K50
C	1942,1943,1945-1948		CKSRYB104K50
C	1944		CCSRCH102J50
C	1950		CKSRYB474K16
C	1951-1955		CCSRCH221J50
C	1956-1958		CCSRCH222J50

J ACIN ASSY

MISCELLANEOUS

⚠ JA	1001	AC INLET 1P	XKP3042
⚠ S	1001	SWITCH	DSA1035
⚠ JP	1001	VH-BOARDIN	DKP3790

CAPACITORS

⚠ C	1001		ACG7033

K SW POWER SUPPLY

SW POWER assembly has no service dart