2. EXPLODED VIEWS AND PARTS LIST

*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
• Screw adjacent to ▽ mark on the product are used for disassembly.
• For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

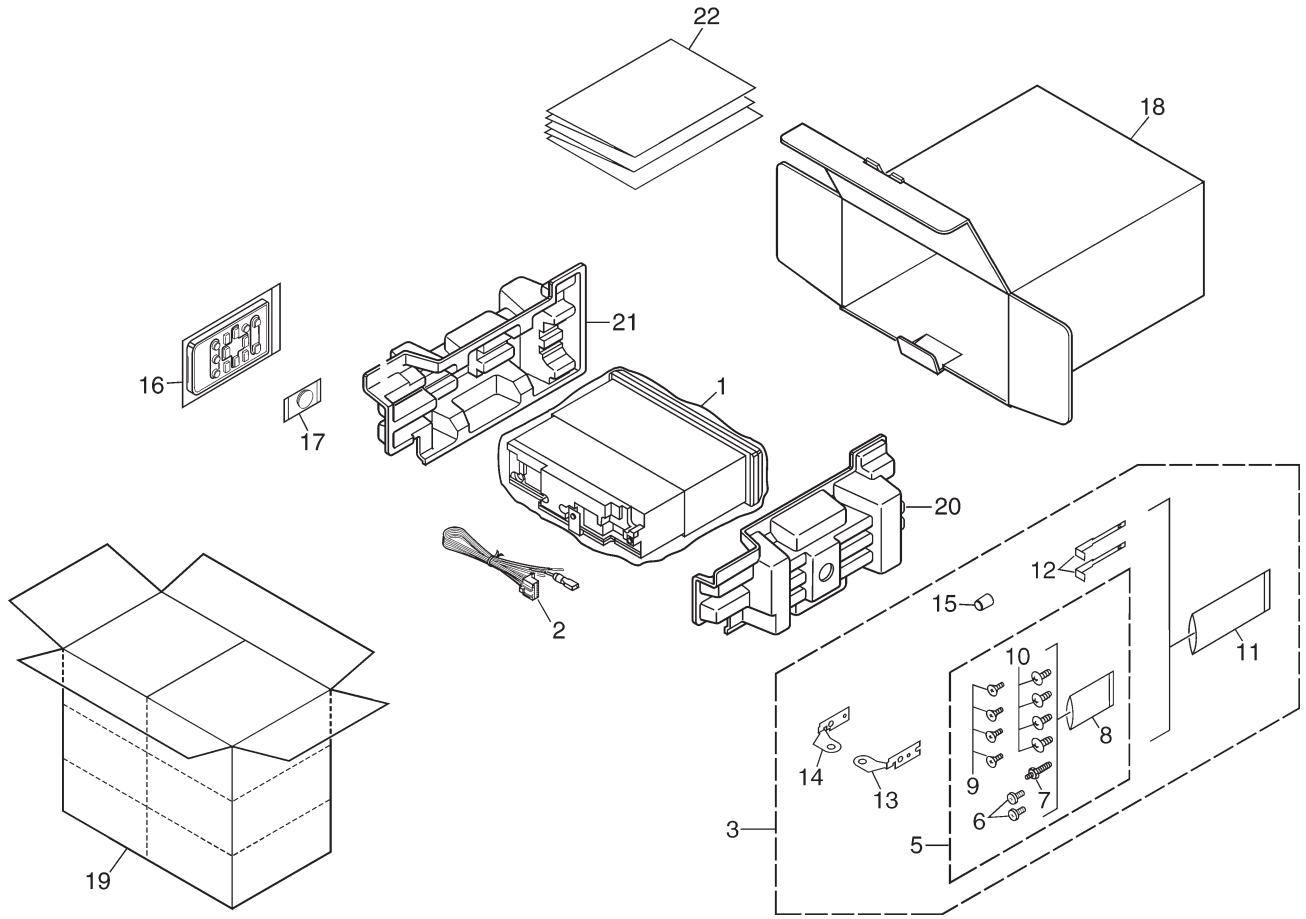

PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Polyethylene Bag	CEG1173
	2	Cord Assy	XDE7008
*	3	Accessory Assy	YEA5008
	4	•••••	
	5	Screw Assy	YEA5007
	6	Fixing Screw	BPZ20P060FTB
	7	Screw	CBA1650
*	8	Polyethylene Bag	CEG-127
	9	Screw	CRZ50P090FTC
	10	Screw	TRZ50P080FTC
*	11	Polyethylene Bag	CEG-158
	12	Handle	CNC5395
	13	Holder	CND1249
	14	Holder	CND1250
	15	Bush	CNV3930

Mark	No.	Description	Part No.
	16	Remote Control Assy	CXC5719
*	17	Battery	CEX1065
	18	Carton(P480MP)	YHG5078
		Carton(P4800MP)	YHG5077
	19	Contain Box(P480MP)	YHL5055
		Contain Box(P4800MP)	YHL5054
	20	Protector	YHP5008
	21	Protector	YHP5009
	22-1	Owner's Manual(P480MP)	YRD5038
		Owner's Manual(P4800MP)	YRD5037
	22-2	Installation Manual(P480MP)	YRD5043
		Installation Manual(P4800MP)	YRD5042
	22-3	Caution Card	CRP1310
*	22-4	Warranty Card(P480MP)	CRY1070
*		Warranty Card(P4800MP)	CRY1246
	22-5	Caution Card(P4800MP)	CRP1294

Owner's Manual,Installation Manual

Part No.	Language
YRD5038,YRD5037,YRD5043,YRD5042	English, French, Spanish

2.2 EXTERIOR

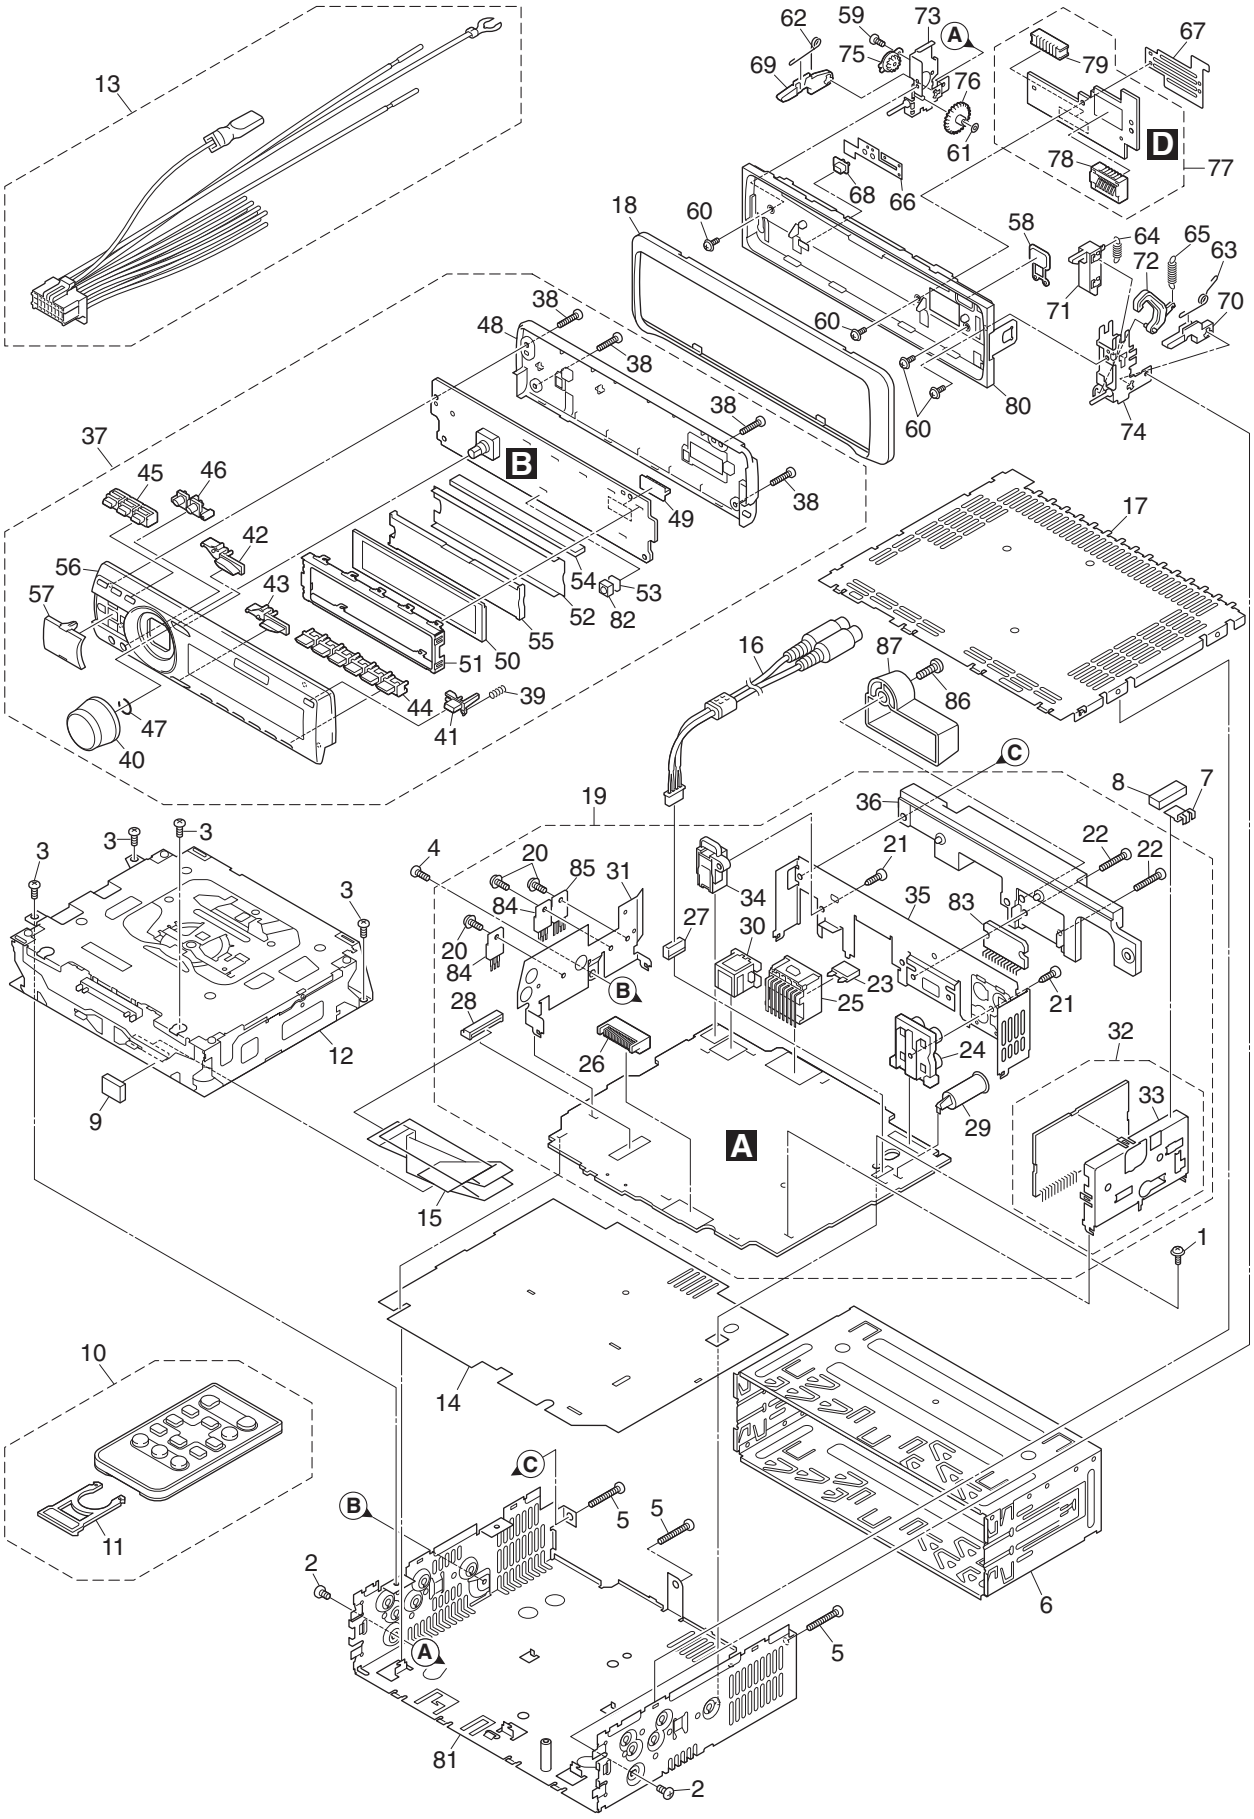

A
B
C
D
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87

EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	BMZ30P040FTB
	3	Screw	BSZ26P060FTC
	4	Screw	BSZ30P060FTC
	5	Screw	BSZ30P200FTC
	6	Holder	CNC8659
	7	Earth Plate	CNC8915
	8	Cushion	CNM8890
	9	Insulator	CNM7682
	10	Remote Control Assy	CXC5719
	11	Cover	CNS7068
	12	CD Mechanism Module(S10.5)	CXK5750
	13	Cord Assy	XDE7008
	14	Insulator	XNM7100
	15	Cable	YDE5013
	16	Cord Assy	YDE5014
	17	Case	YNB5008
	18	Panel(P480MP)	YNS5157
		Panel(P4800MP)	YNS5114
	19	Tuner Amp Unit(P480MP)	YWM5085
		Tuner Amp Unit(P4800MP)	YWM5087
	20	Screw	ASZ26P060FTC
	21	Screw	BPZ26P080FTC
	22	Screw	BSZ26P160FTC
⚠	23	Fuse(10 A)	CEK1208
	24	Pin Jack(CN353)	CKB1051
	25	Plug(CN901)	CKM1376
	26	Plug(CN801)	CKS3537
	27	Connector(CN352)	CKS3584
	28	Connector(CN701)	CKS3834
	29	Antenna Jack(CN401)	CKX1056
	30	Connector(CN101)	CKS5271
	31	Holder	CND1352
	32	FM/AM Tuner Unit	CWE1957
	33	Holder	CND1054
	34	JACK(CN621)	YKS5001
	35	Holder	YNC5015
	36	Heat Sink	YNR5004
	37	Detachable Assy(P480MP)	YXA5104
		Detachable Assy(P4800MP)	YXA5105
	38	Screw	BPZ20P100FTB
	39	Spring	CBH2210
	40	Knob(SOURCE,VOLUME)	YAA5006
	41	Button(OPEN)	YAC5067
	42	Button(EQ)	YAC5068
	43	Button(BAND)	YAC5069
	44	Button(1-6)	YAC5070
	45	Button(AUDIO,FUNCTION,SW)(P480MP)	YAC5096
		Button(AUDIO,FUNCTION,SW)(P4800MP)	YAC5072
	46	Button(CLOCK,DISPLAY)(P480MP)	YAC5098
		Button(CLOCK,DISPLAY)(P4800MP)	YAC5073
	47	Spring	YBH5003
	48	Cover	YNS5113
	49	Connector(CN1801)	CKS5207
	50	LCD(LCD1801)	YAW5051
	51	Holder	YNC5013
	52	Sheet	YNM5015
	53	Spacer	YNM5016
	54	Connector	YNV5030
	55	Lighting Conductor	YNV5032
	56	Grille Unit(P480MP)	YXA5159
		Grille Unit(P4800MP)	YXA5127
	57	Button Unit(UP,DOWN,LEFT,RIGHT)(P480MP)	YXC5025
		Button Unit(UP,DOWN,LEFT,RIGHT)(P4800MP)	YXC5022
	58	Button(EJECT)	CAC7752
	59	Screw(M2 x 4)	CBA1649
	60	Screw(M2 x 4.5)	CBA1925
	61	Washer	CBF1038
	62	Spring	CBH2650
	63	Spring	CBH2651
	64	Spring	CBH2652
	65	Spring	CBH2653
	66	Spring	CBL1512
	67	Holder	CND1254
	68	Pin	CNV6486
	69	Arm	CNV7400
	70	Arm	CNV7401
	71	Arm	CNV7402
	72	Arm	CNV7403
	73	Holder Unit	CXB9501
	74	Holder Unit	CXB9502
	75	Damper Unit	CXB9503
	76	Gear	YNV5053
	77	Panel Unit	YWM5099
	78	Connector(CN1901)	CKS4806
	79	Connector(CN1902)	CKS5192
	80	Sub Panel Unit	YXA5160
	81	Chassis Unit	YXA5131
	82	IC(IC1801)	TSOP4840SB1
	83	IC(IC301)	PAL007B
	84	Transistor(Q702,Q911)	2SD2396
	85	IC(IC921)	NJM2388F84
	86	Screw(P4800MP)	BMZ40P140FTC
	87	Holder(P4800MP)	CNV7619

2.3 CD MECHANISM MODULE

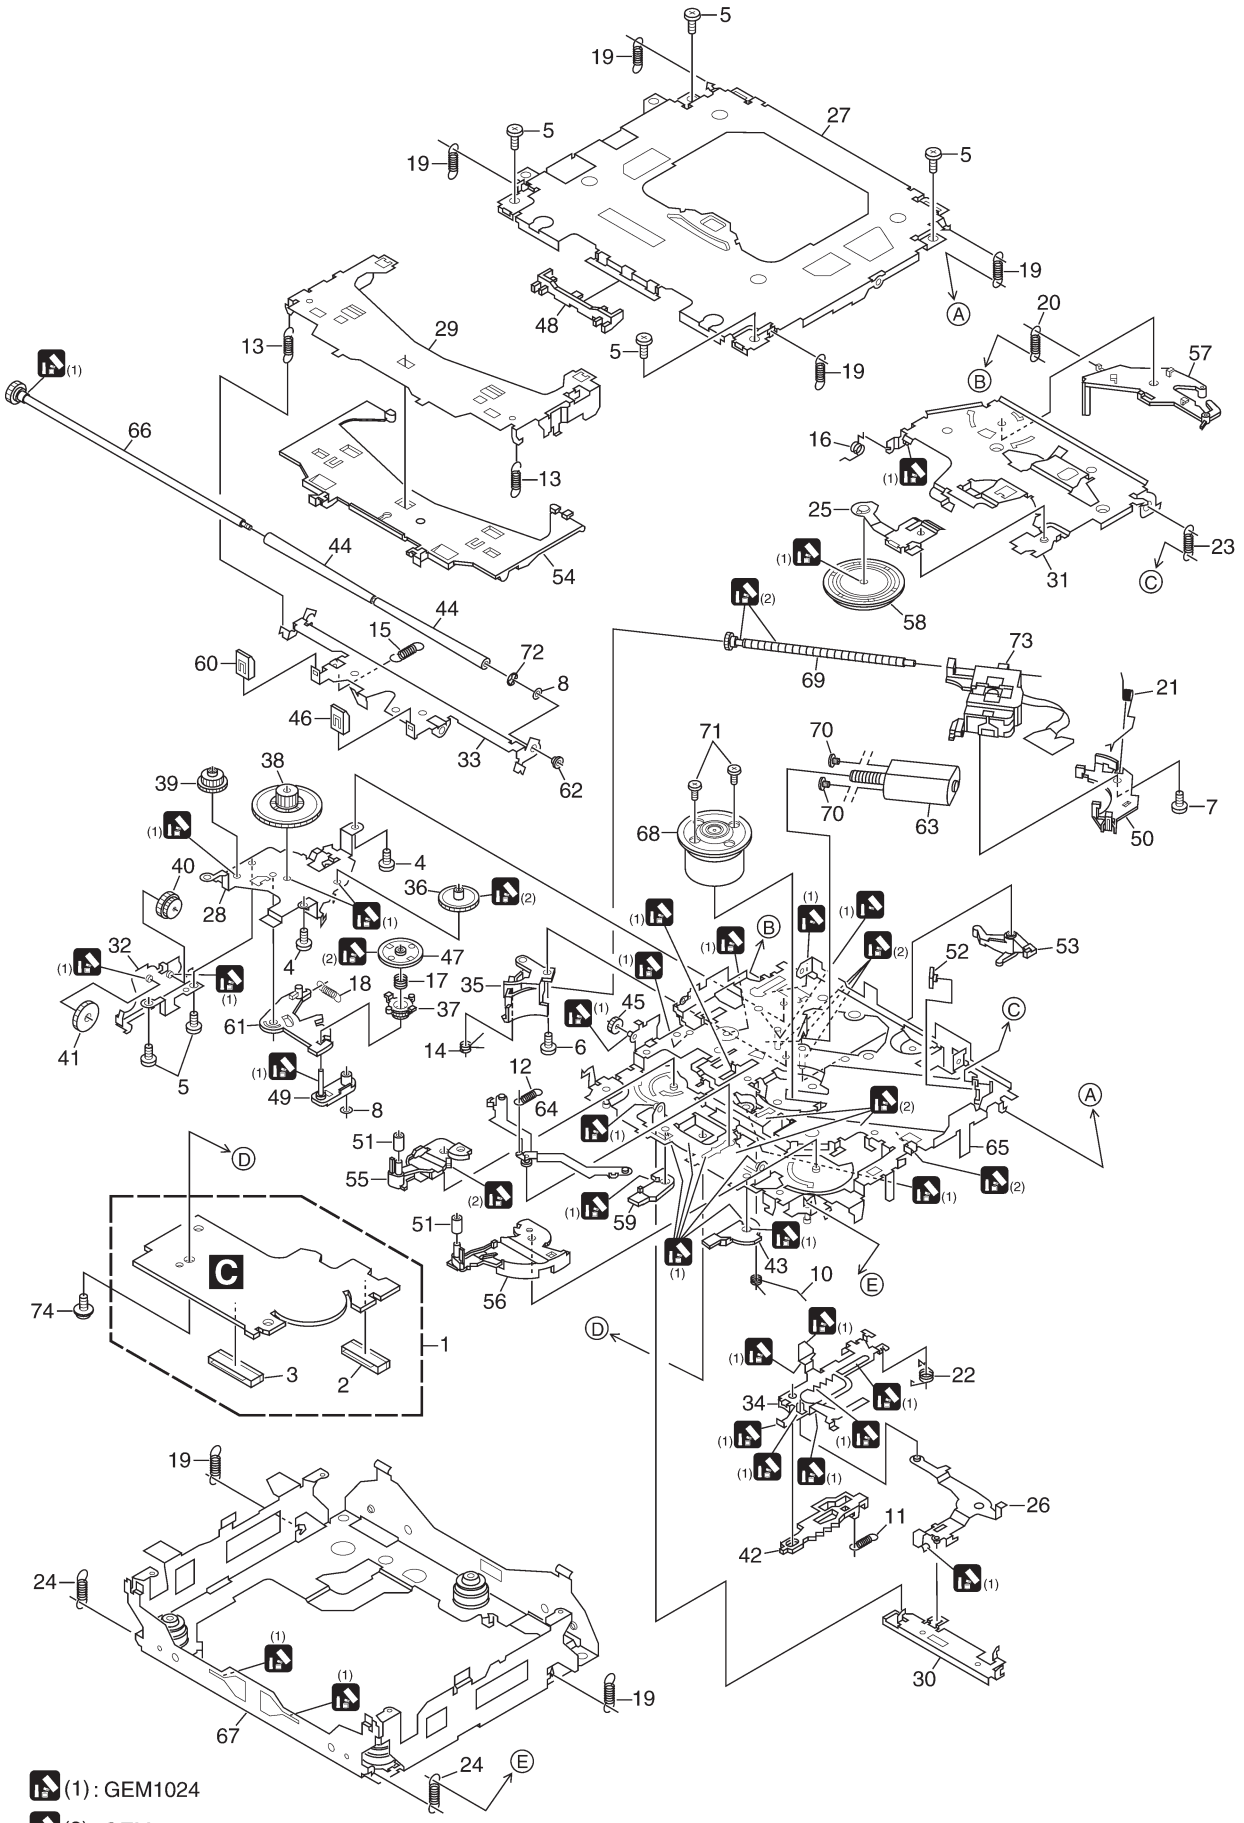

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10.5COMP1)	CWX3176
	2	Connector(CN101)	CKS4808
	3	Connector(CN901)	CKS5284
	4	Screw	BMZ20P025FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2 x 3)	CBA1511
	7	Screw(M2 x 4)	CBA1835
	8	Washer	CBF1038
	9	•••••	
	10	Spring	CBH2609
	11	Spring	CBH2612
	12	Spring	CBH2614
	13	Spring	CBH2616
	14	Spring	CBH2617
	15	Spring	CBH2620
	16	Spring	CBH2855
	17	Spring	CBH2937
	18	Spring	CBH2735
	19	Spring	CBH2854
	20	Spring	CBH2642
	21	Spring	CBH2856
	22	Spring	CBH2857
	23	Spring	CBH2860
	24	Spring	CBH2861
	25	Spring	CBL1686
	26	Arm	CND1909
	27	Frame	CND2582
	28	Bracket	CND2583
	29	Arm	CND2584
	30	Lever	CND2585
	31	Arm	CND2586
	32	Bracket	CND2587
	33	Arm	CND2588
	34	Lever	CND2589
	35	Holder	CNV7201
	36	Gear	CNV7207
	37	Gear	CNV7208
	38	Gear	CNV7209
	39	Gear	CNV7210
	40	Gear	CNV7211
	41	Gear	CNV7212
	42	Rack	CNV7214
	43	Arm	CNV7216
	44	Roller	CNV8189
	45	Gear	CNV7219
	46	Guide	CNV7361
	47	Gear	CNV7595
	48	Guide	CNV8448
	49	Arm	CNV7805
	50	Rack	CNV8342
	51	Roller	CNV8343
	52	Holder	CNV8344
	53	Arm	CNV8345
	54	Guide	CNV8347
	55	Arm	CNV8348
	56	Arm	CNV8349
	57	Arm	CNV8350
	58	Clamper	CNV8365
	59	Arm	CNV8386
	60	Guide	CNV8396
	61	Arm	CNV8413
	62	Collar	CNV8447
	63	Motor Unit(M2)	CXC4026
	64	Arm Unit	CXC4027
	65	Chassis Unit	CXC4028
	66	Gear Unit	CXC4029
	67	Frame Unit	CXC4031
	68	Motor Unit(M1)	CXC6742
	69	Screw Unit	CXC6359
	70	Screw	JFZ20P020FTC
	71	Screw	JGZ17P022FTC
	72	Washer	YE20FTC
	73	Pickup Unit(P10.5)(Service)	CXX1942
	74	Screw	IMS26P030FTC

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. **Part No.**

Unit Number : YWM5085(P480MP)
Unit Name : Tuner Amp Unit
Unit Number : YWM5087(P4800MP)
Unit Name : Tuner Amp Unit
Unit Number :
Unit Name : Keyboard Unit
Unit Number : YWM5099
Unit Name : Panel Unit
Unit Number : CWX3176
Unit Name : CD Core Unit(S10.5COMP1)

A

Unit Number : YWM5085(P480MP)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(B,63,61) IC	HA12241FP
IC 151	(B,136,85) IC	PML015A
IC 171	(B,101,94) IC	NJM2360M
IC 301	(A,96,137) IC	PAL007B
IC 401	(B,153,28) IC	NJM2885DL1-33
IC 601	(B,88,57) IC	PEG155B
IC 751	(B,124,67) IC	NJM4558MD
IC 921	(A,10,124) IC	NJM2388F84
IC 961	(B,67,35) IC	BD4843G
Q 101	(B,42,99) Transistor	2SA1576
Q 102	(B,34,116) Transistor	DTC114EU
Q 171	(B,46,78) Transistor	UMD2N
Q 172	(B,53,79) Transistor	2SD2674
Q 351	(B,163,134) Transistor	UMH3N
Q 352	(B,141,124) Transistor	UMH3N
Q 353	(B,141,129) Transistor	UMH3N
Q 451	(B,124,116) Transistor	DTC124EU
Q 453	(B,124,122) Transistor	UMD2N
Q 701	(B,30,54) Transistor	UMD2N
Q 702	(A,9,71) Transistor	2SD2396
Q 801	(B,132,27) Transistor	DTC114EU
Q 802	(B,135,32) Transistor	2SA1576
Q 841	(B,129,33) Transistor	2SA1036K
Q 842	(B,125,35) Transistor	DTC114EU
Q 851	(B,41,17) Transistor	2SA1036K
Q 852	(B,51,12) Transistor	DTC114EU
Q 911	(A,9,106) Transistor	2SD2396
Q 912	(B,21,74) Transistor	UMD2N
Q 931	(B,64,92) Transistor	UMX1N
D 171	(A,44,75) Diode	HZS11L(A1)
D 172	(A,107,102) Diode	S5688G
D 701	(A,25,57) Diode	HZS7L(C3)
D 801	(B,35,20) Diode	DAN202U
D 802	(B,39,23) Diode	DAP202U
D 803	(B,116,30) Diode	DAN202U
D 804	(B,115,26) Diode	DAP202U
D 805	(B,115,43) Diode	DAN202U
D 806	(B,110,44) Diode	DAP202U
D 901	(A,77,115) Diode	S5688G
D 902	(A,80,111) Diode	S5688G
D 903	(A,70,100) Diode	S5688G
D 904	(A,66,100) Diode	S5688G
D 911	(A,24,84) Diode	S5688G
D 912	(A,24,78) Diode	HZS6L(B2)
D 931	(A,60,95) Diode	HZS7L(C3)
D 932	(A,56,91) Diode	HZS7L(A1)
L 101	(A,54,73) Inductor	LAU2R2K
L 161	(A,116,85) Inductor	LAU2R2K
L 171	(A,103,99) Inductor	YTF5001
L 172	(A,116,107) Inductor	YTF5001
L 401	(A,159,91) Inductor	LAU1R0K
L 402	(B,159,96) Inductor	LCTAW220J2520
L 403	(A,158,54) Inductor	LAU1R0K
L 602	(A,99,37) Inductor	LAU2R2K
L 701	(A,64,70) Ferri-Inductor	LAU100K
L 852	(A,50,16) Inductor	LAU2R2K
L 901	(A,39,107) Choke Coil 600μH	CTH1280

Circuit Symbol and No.		Part No.
X 601	(A,76,38) Crystal Resonator 15.000MHz	CSS1653
S 801	(A,26,14) Switch(DSENS)	CSN1039
⚠FU352	(B,163,117) Fuse 3A	CEK1286
⚠FU353	(B,134,137) Fuse 3A	CEK1286
Z 401	(A,166,99) FM/AM Tuner Unit	CWE1952
⚠	Fuse 10A	CEK1208
BZ601	(A,23,35) Buzzer	CPV1062
AR401	(A,175,107) Surge Protector	DSP-201M-S00B

RESISTORS

R 101	(B,35,126)	RS1/16S181J
R 102	(B,36,104)	RS1/16S222J
R 103	(B,27,132)	RS1/16S181J
R 104	(B,38,139)	RS1/16S101J
R 105	(B,29,138)	RS1/16S101J
R 106	(B,33,125)	RS1/16S223J
R 107	(B,29,130)	RS1/16S223J
R 108	(B,30,129)	RS1/16S102J
R 109	(B,31,125)	RS1/16S102J
R 110	(B,38,100)	RS1/16S332J
R 111	(B,36,111)	RS1/16S562J
R 112	(A,69,70)	RD1/4PU102J
R 113	(B,71,57)	RS1/16S472J
R 114	(B,69,57)	RS1/16S472J
R 116	(B,32,140)	RS1/16S470J
R 117	(B,31,140)	RS1/16S150J
R 118	(B,59,66)	RS1/16S0R0J
R 151	(B,94,74)	RS1/16S102J
R 152	(B,94,76)	RS1/16S102J
R 153	(B,94,77)	RS1/16S102J
R 171	(B,46,81)	RS1/16S122J
R 172	(B,42,81)	RS1/16S122J
R 173	(B,95,90)	RS1/16S101J
R 176	(B,99,102)	RS1/16S1R0J
R 177	(B,95,100)	RS1/16S391J
R 178	(B,95,92)	RS1/16S102J
R 179	(A,107,98)	RD1/4PU103J
R 301	(B,130,111)	RS1/16S103J
R 302	(B,144,111)	RS1/16S183J
R 303	(B,129,111)	RS1/16S103J
R 304	(B,145,111)	RS1/16S103J
R 305	(B,133,111)	RS1/16S183J
R 306	(B,147,111)	RS1/16S103J
R 307	(B,136,111)	RS1/16S183J
R 308	(B,141,111)	RS1/16S183J
R 309	(A,88,79)	RD1/4PU153J
R 351	(B,152,97)	RS1/16S820J
R 352	(B,159,133)	RS1/16S0R0J
R 353	(B,136,107)	RS1/16S820J
R 354	(B,138,107)	RS1/16S820J
R 355	(B,141,126)	RS1/16S820J
R 356	(B,137,103)	RS1/16S820J
R 358	(B,135,133)	RS1/16S820J
R 359	(B,146,133)	RS1/16S223J
R 360	(B,166,139)	RS1/16S223J
R 361	(B,162,114)	RS1/16S223J
R 362	(B,162,121)	RS1/16S223J
R 363	(B,138,133)	RS1/16S223J
R 364	(B,140,133)	RS1/16S223J
R 381	(B,137,129)	RS1/16S0R0J
R 382	(B,145,129)	RS1/16S0R0J
R 383	(B,147,127)	RS1/16S0R0J
R 384	(B,145,123)	RS1/16S0R0J
R 385	(B,148,123)	RS1/16S0R0J
R 386	(B,166,136)	RS1/16S0R0J
R 401	(B,160,60)	RS1/16S681J
R 403	(B,160,78)	RS1/16S681J
R 404	(B,160,81)	RS1/16S681J
R 405	(B,160,83)	RS1/16S681J
R 406	(B,160,85)	RS1/16S681J
R 407	(B,160,87)	RS1/16S0R0J
R 414	(A,138,38)	RD1/4PU1R8J
R 421	(B,157,77)	RS1/16S0R0J
R 451	(B,125,113)	RS1/16S103J
R 452	(B,125,125)	RS1/16S221J
R 453	(B,124,119)	RS1/16S153J
R 454	(A,120,119)	RD1/4PU102J
R 602	(B,72,41)	RS1/16S103J
R 603	(B,94,80)	RS1/16S103J
R 604	(B,100,63)	RS1/16S681J
R 605	(B,158,60)	RS1/16S681J
R 606	(B,107,43)	RS1/16S103J
R 607	(B,147,55)	RS1/16S681J
R 609	(B,104,44)	RS1/16S473J
R 610	(B,104,54)	RS1/16S473J
R 612	(B,101,74)	RS1/16S103J
R 613	(B,100,76)	RS1/16S103J
R 615	(B,70,64)	RS1/16S0R0J
R 616	(B,61,36)	RS1/16S473J
R 618	(B,36,31)	RS1/16S102J
R 620	(B,96,66)	RS1/16S0R0J
R 621	(B,18,145)	RS1/16S102J
R 622	(B,16,142)	RS1/16S102J
R 701	(A,20,54)	RD1/4PU271J
R 702	(A,20,61)	RD1/4PU121J
R 703	(B,57,54)	RS1/16S682J
R 704	(B,54,42)	RS1/16S682J
R 705	(B,57,51)	RS1/16S682J
R 706	(B,57,48)	RS1/16S682J
R 707	(B,45,52)	RS1/16S104J
R 708	(B,57,47)	RS1/16S221J
R 709	(B,48,47)	RS1/16S221J
R 710	(B,57,50)	RS1/16S221J
R 711	(B,52,42)	RS1/16S221J
R 712	(B,57,53)	RS1/16S221J
R 713	(B,61,34)	RS1/16S102J
R 715	(B,45,56)	RS1/16S0R0J
R 751	(B,118,64)	RS1/16S103J
R 752	(B,118,69)	RS1/16S103J
R 753	(B,113,74)	RS1/16S103J
R 754	(B,122,72)	RS1/16S103J
R 755	(B,116,74)	RS1/16S103J
R 756	(B,129,67)	RS1/16S103J
R 757	(B,116,75)	RS1/16S103J
R 758	(B,110,75)	RS1/16S103J
R 759	(B,113,75)	RS1/16S103J
R 760	(B,123,79)	RS1/16S103J
R 761	(B,126,62)	RS1/16S0R0J
R 762	(B,119,78)	RS1/16S0R0J
R 801	(B,115,48)	RS1/16S473J

Circuit Symbol and No.		Part No.
R 802	(B,136,35)	RS1/16S222J
R 803	(B,117,45)	RS1/16S473J
R 804	(B,116,24)	RS1/16S222J
R 805	(B,106,25)	RS1/16S222J
R 806	(A,91,16)	RD1/4PU222J
R 807	(B,86,15)	RS1/16S222J
R 809	(B,142,39)	RS1/16S222J
R 811	(B,93,31)	RS1/16S473J
R 812	(B,109,41)	RS1/16S473J
R 813	(B,111,28)	RS1/16S104J
R 814	(B,96,31)	RS1/16S102J
R 815	(B,108,27)	RS1/16S102J
R 816	(B,123,26)	RS1/16S1R0J
R 817	(B,115,47)	RS1/16S473J
R 818	(B,62,40)	RS1/16S104J
R 819	(B,30,19)	RS1/16S102J
R 820	(B,127,25)	RS1/16S391J
R 821	(B,93,40)	RS1/16S222J
R 822	(B,46,70)	RS1/16S102J
R 823	(B,46,71)	RS1/16S102J
R 824	(B,115,50)	RS1/16S102J
R 826	(B,121,25)	RS1/16S0R0J
R 831	(B,137,28)	RS1/16S1R0J
R 832	(B,133,32)	RS1/16S473J
R 833	(B,135,28)	RS1/16S103J
R 841	(B,130,29)	RS1/16S103J
R 842	(B,128,28)	RS1/16S222J
R 851	(B,34,17)	RS1/16S153J
R 852	(B,43,14)	RS1/16S153J
R 853	(B,119,17)	RS1/16S222J
R 911	(B,21,71)	RS1/16S223J
R 912	(A,24,81)	RD1/4PU152J
R 922	(B,14,117)	RS1/16S473J
R 931	(B,63,56)	RS1/16S104J
R 932	(B,57,57)	RS1/16S104J
R 933	(B,64,94)	RS1/16S104J
R 934	(B,64,96)	RS1/16S473J
R 935	(B,60,91)	RS1/16S473J
R 936	(B,64,97)	RS1/16S473J
R 937	(B,65,122)	RS1/16S473J
R 938	(B,63,127)	RS1/4SA102J
R 961	(B,73,35)	RS1/16S102J
R 962	(B,64,38)	RS1/16S822J

CAPACITORS

C 101	(B,29,142)	CKSRYB104K16
C 104	(B,52,69)	CKSRYB103K50
C 151	(B,146,82)	CKSRYB105K10
C 152	(B,146,80)	CKSRYB105K10
C 153	(B,163,71)	CKSRYB224K16
C 154	(B,133,67)	CKSRYB474K10
C 155	(B,160,69)	CKSRYB224K16
C 156	(B,126,79)	CKSRYB474K10
C 157	(B,126,80)	CKSRYB105K10
C 158	(B,126,82)	CKSRYB105K10
C 159	(B,126,89)	CKSRYB153K50
C 160	(A,122,89)	CEJQ100M16
C 161	(B,139,97)	CKSRYB153K50
C 162	(A,116,95)	CEJQ470M10
C 163	(B,125,87)	CKSRYB104K25
C 165	(A,136,97)	CEJQ100M16
C 171	(B,43,78)	CKSRYB104K50
C 172	(A,93,96)	CEJQ101M16
C 173	(B,95,95)	CKSRYB104K50
C 174	(B,106,92)	CKSRYB102K50
C 176	(A,112,93)	CEJQ101M16
C 177	(B,122,95)	CKSRYB103K50
C 178	(A,119,102)	CEJQ101M16
C 305	(A,128,119)	CFTNA224J50
C 306	(A,143,119)	CFTNA224J50
C 307	(A,133,119)	CFTNA224J50
C 308	(A,138,119)	CFTNA224J50
C 309	(B,127,146)	CKSQYB225K10
C 310	(B,132,137)	CKSQYB225K10
C 311	(A,107,128)	CEJQ100M16
C 313	(A,54,125) 3300μF/16V	CCH1494
C 351	(A,129,96)	CEJQ2R2M50
C 352	(A,142,96)	CEJQ2R2M50
C 353	(A,134,104)	CEJQ2R2M50
C 354	(A,142,104)	CEJQ2R2M50
C 355	(A,127,104)	CEJQ2R2M50
C 356	(A,148,104)	CEJQ2R2M50
C 357	(B,147,133)	CKSRYB222K50
C 358	(B,164,139)	CKSRYB222K50
C 401	(A,152,53)	CEJQ470M6R3
C 402	(B,155,51)	CKSRYB103K50
C 403	(B,151,34)	CKSRYB103K50
C 405	(A,154,87)	CEJQ101M10
C 406	(B,170,91)	CKSRYB104K25
C 407	(B,166,66)	CKSRYB103K50
C 408	(A,142,32)	CEJQ220M16
C 409	(B,167,131)	CKSRYB103K50
C 410	(B,141,28)	CKSRYB474K10
C 411	(B,170,90)	CCSRCH470J50
C 451	(A,124,127)	CEJQ330M10
C 601	(B,76,43)	CCSRCH180J50
C 602	(B,81,43)	CCSRCH200J50
C 604	(B,97,42)	CKSRYB104K16
C 605	(A,100,42)	CEJQ100M16
C 606	(B,74,32)	CKSRYB104K16
C 607	(A,76,30)	CEJQ100M16
C 609	(B,147,52)	CCSRCH470J50
C 701	(B,31,51)	CKSRYB473K25
C 703	(A,34,35) 470μF/16V	CCH1331
C 704	(B,145,77)	CKSRYB105K10
C 705	(B,134,70)	CKSRYB105K10
C 751	(B,116,64)	CCSRCH101J50
C 752	(B,113,69)	CKSRYB105K10
C 753	(B,113,72)	CCSRCH101J50
C 754	(B,116,72)	CCSRCH101J50
C 755	(B,131,67)	CCSRCH101J50
C 756	(B,122,71)	CKSRYB105K10
C 757	(B,116,77)	CKSRYB474K10
C 758	(B,107,81)	CKSRYB474K10
C 759	(B,113,76)	CKSRYB474K10
C 760	(B,121,78)	CKSRYB474K10
C 761	(A,107,86)	CEJQR47M50
C 762	(A,115,70)	CEJQ101M10
C 851	(B,48,14)	CKSRYB104K16

Circuit Symbol and No.		Part No.
C 901	(B,57,121)	CKSRYB104K50
C 911	(A,32,59)	CEJQ470M10
C 912	(B,25,75)	CKSRYB103K50
C 913	(A,25,68) 470μF/16V	CCH1331
C 921	(B,19,108)	CKSRYB103K50
C 922	(A,20,104)	CEJQ221M10
C 923	(A,18,120)	CEJQ101M16
C 924	(B,19,116)	CKSRYB103K50
C 961	(B,70,34)	CKSRYB473K25
C 962	(A,67,39)	CEJQ100M16

A

Unit Number : YWM5087(P4800MP)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 101	(B,63,61) IC	HA12241FP
IC 151	(B,136,85) IC	PML015A
IC 301	(A,96,137) IC	PAL007B
IC 401	(B,153,28) IC	NJM2885DL1-33
IC 601	(B,88,57) IC	PEG155B
IC 751	(B,124,67) IC	NJM4558MD
IC 921	(A,10,124) IC	NJM2388F84
IC 961	(B,67,35) IC	BD4843G
Q 101	(B,42,99) Transistor	2SA1576
Q 102	(B,34,116) Transistor	DTC114EU
Q 351	(B,163,134) Transistor	UMH3N
Q 352	(B,141,124) Transistor	UMH3N
Q 353	(B,141,129) Transistor	UMH3N
Q 451	(B,124,116) Transistor	DTC124EU
Q 453	(B,124,122) Transistor	UMD2N
Q 701	(B,30,54) Transistor	UMD2N
Q 702	(A,9,71) Transistor	2SD2396
Q 801	(B,132,27) Transistor	DTC114EU
Q 802	(B,135,32) Transistor	2SA1576
Q 841	(B,129,33) Transistor	2SA1036K
Q 842	(B,125,35) Transistor	DTC114EU
Q 851	(B,41,17) Transistor	2SA1036K
Q 852	(B,51,12) Transistor	DTC114EU
Q 911	(A,9,106) Transistor	2SD2396
Q 912	(B,21,74) Transistor	UMD2N
Q 931	(B,64,92) Transistor	UMX1N
D 701	(A,25,57) Diode	HZS7L(C3)
D 801	(B,35,20) Diode	DAN202U
D 802	(B,39,23) Diode	DAP202U
D 803	(B,116,30) Diode	DAN202U
D 804	(B,115,26) Diode	DAP202U
D 805	(B,115,43) Diode	DAN202U
D 806	(B,110,44) Diode	DAP202U
D 901	(A,77,115) Diode	S5688G
D 902	(A,80,111) Diode	S5688G
D 903	(A,70,100) Diode	S5688G
D 904	(A,66,100) Diode	S5688G
D 911	(A,24,84) Diode	S5688G
D 912	(A,24,78) Diode	HZS6L(B2)
D 931	(A,60,95) Diode	HZS7L(C3)
D 932	(A,56,91) Diode	HZS7L(A1)
L 101	(A,54,73) Inductor	LAU2R2K
L 161	(A,116,85) Inductor	LAU2R2K

Circuit Symbol and No.		Part No.
L 401	(A,159,91) Inductor	LAU1R0K
L 402	(B,159,96) Inductor	LCTAW220J2520
L 403	(A,158,54) Inductor	LAU1R0K
L 602	(A,99,37) Inductor	LAU2R2K
L 701	(A,64,70) Ferri-Inductor	LAU100K
L 852	(A,50,16) Inductor	LAU2R2K
L 901	(A,39,107) Choke Coil 600μH	CTH1280
X 601	(A,76,38) Crystal Resonator 15.000MHz	CSS1653
S 801	(A,26,14) Switch(DSENS)	CSN1039
⚠FU352	(B,163,117) Fuse 3A	CEK1286
⚠FU353	(B,134,137) Fuse 3A	CEK1286
Z 401	(A,166,99) FM/AM Tuner Unit	CWE1952
⚠	Fuse 10A	CEK1208
BZ601	(A,23,35) Buzzer	CPV1062
AR401	(A,175,107) Surge Protector	DSP-201M-S00B

RESISTORS

R 101	(B,35,126)	RS1/16S181J
R 102	(B,36,104)	RS1/16S222J
R 103	(B,27,132)	RS1/16S181J
R 104	(B,38,139)	RS1/16S101J
R 105	(B,29,138)	RS1/16S101J
R 106	(B,33,125)	RS1/16S223J
R 107	(B,29,130)	RS1/16S223J
R 108	(B,30,129)	RS1/16S102J
R 109	(B,31,125)	RS1/16S102J
R 110	(B,38,100)	RS1/16S332J
R 111	(B,36,111)	RS1/16S562J
R 112	(A,69,70)	RD1/4PU102J
R 113	(B,71,57)	RS1/16S472J
R 114	(B,69,57)	RS1/16S472J
R 116	(B,32,140)	RS1/16S470J
R 117	(B,31,140)	RS1/16S150J
R 118	(B,59,66)	RS1/16S0R0J
R 151	(B,94,74)	RS1/16S102J
R 152	(B,94,76)	RS1/16S102J
R 153	(B,94,77)	RS1/16S102J
R 180	(B,119,98)	RS1/16S0R0J
R 301	(B,130,111)	RS1/16S471J
R 303	(B,129,111)	RS1/16S471J
R 304	(B,145,111)	RS1/16S471J
R 306	(B,147,111)	RS1/16S471J
R 309	(A,88,79)	RD1/4PU153J
R 351	(B,152,97)	RS1/16S821J
R 352	(B,159,133)	RS1/16S0R0J
R 353	(B,136,107)	RS1/16S821J
R 354	(B,138,107)	RS1/16S821J
R 355	(B,141,126)	RS1/16S821J
R 356	(B,137,103)	RS1/16S821J
R 358	(B,135,133)	RS1/16S821J
R 359	(B,146,133)	RS1/16S223J
R 360	(B,166,139)	RS1/16S223J
R 361	(B,162,114)	RS1/16S223J
R 362	(B,162,121)	RS1/16S223J
R 363	(B,138,133)	RS1/16S223J
R 364	(B,140,133)	RS1/16S223J
R 381	(B,137,129)	RS1/16S0R0J
R 382	(B,145,129)	RS1/16S0R0J
R 383	(B,147,127)	RS1/16S0R0J

Circuit Symbol and No.		Part No.
R 384	(B,145,123)	RS1/16S0R0J
R 385	(B,148,123)	RS1/16S0R0J
R 386	(B,166,136)	RS1/16S0R0J
R 401	(B,160,60)	RS1/16S681J
R 403	(B,160,78)	RS1/16S681J
R 404	(B,160,81)	RS1/16S681J
R 405	(B,160,83)	RS1/16S681J
R 406	(B,160,85)	RS1/16S681J
R 407	(B,160,87)	RS1/16S0R0J
R 414	(A,138,38)	RD1/4PU1R8J
R 421	(B,157,77)	RS1/16S0R0J
R 451	(B,125,113)	RS1/16S103J
R 452	(B,125,125)	RS1/16S221J
R 453	(B,124,119)	RS1/16S153J
R 454	(A,120,119)	RD1/4PU102J
R 602	(B,72,41)	RS1/16S103J
R 603	(B,94,80)	RS1/16S103J
R 604	(B,100,63)	RS1/16S681J
R 605	(B,158,60)	RS1/16S681J
R 606	(B,107,43)	RS1/16S103J
R 607	(B,147,55)	RS1/16S681J
R 608	(B,104,46)	RS1/16S473J
R 609	(B,104,44)	RS1/16S104J
R 610	(B,104,54)	RS1/16S473J
R 612	(B,101,74)	RS1/16S103J
R 613	(B,100,76)	RS1/16S103J
R 615	(B,70,64)	RS1/16S0R0J
R 616	(B,61,36)	RS1/16S473J
R 618	(B,36,31)	RS1/16S102J
R 620	(B,96,66)	RS1/16S0R0J
R 621	(B,18,145)	RS1/16S102J
R 622	(B,16,142)	RS1/16S102J
R 701	(A,20,54)	RD1/4PU271J
R 702	(A,20,61)	RD1/4PU121J
R 703	(B,57,54)	RS1/16S682J
R 704	(B,54,42)	RS1/16S682J
R 705	(B,57,51)	RS1/16S682J
R 706	(B,57,48)	RS1/16S682J
R 707	(B,45,52)	RS1/16S104J
R 708	(B,57,47)	RS1/16S221J
R 709	(B,48,47)	RS1/16S221J
R 710	(B,57,50)	RS1/16S221J
R 711	(B,52,42)	RS1/16S221J
R 712	(B,57,53)	RS1/16S221J
R 713	(B,61,34)	RS1/16S102J
R 715	(B,45,56)	RS1/16S0R0J
R 751	(B,118,64)	RS1/16S103J
R 752	(B,118,69)	RS1/16S103J
R 753	(B,113,74)	RS1/16S103J
R 754	(B,122,72)	RS1/16S103J
R 755	(B,116,74)	RS1/16S103J
R 756	(B,129,67)	RS1/16S103J
R 757	(B,116,75)	RS1/16S103J
R 758	(B,110,75)	RS1/16S103J
R 759	(B,113,75)	RS1/16S103J
R 760	(B,123,79)	RS1/16S103J
R 761	(B,126,62)	RS1/16S0R0J
R 762	(B,119,78)	RS1/16S0R0J
R 801	(B,115,48)	RS1/16S473J
R 802	(B,136,35)	RS1/16S222J
R 803	(B,117,45)	RS1/16S473J
R 804	(B,116,24)	RS1/16S222J
R 805	(B,106,25)	RS1/16S222J
R 806	(A,91,16)	RD1/4PU222J
R 807	(B,86,15)	RS1/16S222J
R 809	(B,142,39)	RS1/16S222J
R 811	(B,93,31)	RS1/16S473J
R 812	(B,109,41)	RS1/16S473J
R 813	(B,111,28)	RS1/16S104J
R 814	(B,96,31)	RS1/16S102J
R 815	(B,108,27)	RS1/16S102J
R 816	(B,123,26)	RS1/16S1R0J
R 817	(B,115,47)	RS1/16S473J
R 818	(B,62,40)	RS1/16S104J
R 819	(B,30,19)	RS1/16S102J
R 820	(B,127,25)	RS1/16S391J
R 821	(B,93,40)	RS1/16S222J
R 822	(B,46,70)	RS1/16S102J
R 823	(B,46,71)	RS1/16S102J
R 824	(B,115,50)	RS1/16S102J
R 826	(B,121,25)	RS1/16S0R0J
R 831	(B,137,28)	RS1/16S1R0J
R 832	(B,133,32)	RS1/16S473J
R 833	(B,135,28)	RS1/16S103J
R 841	(B,130,29)	RS1/16S103J
R 842	(B,128,28)	RS1/16S222J
R 851	(B,34,17)	RS1/16S153J
R 852	(B,43,14)	RS1/16S153J
R 853	(B,119,17)	RS1/16S222J
R 911	(B,21,71)	RS1/16S223J
R 912	(A,24,81)	RD1/4PU152J
R 922	(B,14,117)	RS1/16S473J
R 931	(B,63,56)	RS1/16S104J
R 932	(B,57,57)	RS1/16S104J
R 933	(B,64,94)	RS1/16S104J
R 934	(B,64,96)	RS1/16S473J
R 935	(B,60,91)	RS1/16S473J
R 936	(B,64,97)	RS1/16S473J
R 937	(B,65,122)	RS1/16S473J
R 938	(B,63,127)	RS1/4SA102J
R 961	(B,73,35)	RS1/16S102J
R 962	(B,64,38)	RS1/16S822J

CAPACITORS

C 101	(B,29,142)	CKSRYB104K16
C 104	(B,52,69)	CKSRYB103K50
C 151	(B,146,82)	CKSRYB105K10
C 152	(B,146,80)	CKSRYB105K10
C 153	(B,163,71)	CKSRYB224K16
C 154	(B,133,67)	CKSRYB474K10
C 155	(B,160,69)	CKSRYB224K16
C 156	(B,126,79)	CKSRYB474K10
C 157	(B,126,80)	CKSRYB105K10
C 158	(B,126,82)	CKSRYB105K10
C 159	(B,126,89)	CKSRYB153K50
C 160	(A,122,89)	CEJQ100M16
C 161	(B,139,97)	CKSRYB153K50
C 162	(A,116,95)	CEJQ470M10
C 163	(B,125,87)	CKSRYB104K25

Circuit Symbol and No.		Part No.
C 165	(A,136,97)	CEJQ100M16
C 305	(A,128,119)	CFTNA224J50
C 306	(A,143,119)	CFTNA224J50
C 307	(A,133,119)	CFTNA224J50
C 308	(A,138,119)	CFTNA224J50
C 309	(B,127,146)	CKSQYB225K10
C 310	(B,132,137)	CKSQYB225K10
C 311	(A,107,128)	CEJQ100M16
C 313	(A,54,125) 3300μF/16V	CCH1494
C 351	(A,129,96)	CEJQ2R2M50
C 352	(A,142,96)	CEJQ2R2M50
C 353	(A,134,104)	CEJQ2R2M50
C 354	(A,142,104)	CEJQ2R2M50
C 355	(A,127,104)	CEJQ2R2M50
C 356	(A,148,104)	CEJQ2R2M50
C 357	(B,147,133)	CKSRYB222K50
C 358	(B,164,139)	CKSRYB222K50
C 401	(A,152,53)	CEJQ470M6R3
C 402	(B,155,51)	CKSRYB103K50
C 403	(B,151,34)	CKSRYB103K50
C 405	(A,154,87)	CEJQ101M10
C 406	(B,170,91)	CKSRYB104K25
C 407	(B,166,66)	CKSRYB103K50
C 408	(A,142,32)	CEJQ220M16
C 410	(B,141,28)	CKSRYB474K10
C 411	(B,170,90)	CCSRCH470J50
C 451	(A,124,127)	CEJQ330M10
C 601	(B,76,43)	CCSRCH180J50
C 602	(B,81,43)	CCSRCH200J50
C 604	(B,97,42)	CKSRYB104K16
C 605	(A,100,42)	CEJQ100M16
C 606	(B,74,32)	CKSRYB104K16
C 607	(A,76,30)	CEJQ100M16
C 609	(B,147,52)	CCSRCH470J50
C 701	(B,31,51)	CKSRYB473K25
C 703	(A,34,35) 470μF/16V	CCH1331
C 704	(B,145,77)	CKSRYB105K10
C 705	(B,134,70)	CKSRYB105K10
C 751	(B,116,64)	CCSRCH101J50
C 752	(B,113,69)	CKSRYB105K10
C 753	(B,113,72)	CCSRCH101J50
C 754	(B,116,72)	CCSRCH101J50
C 755	(B,131,67)	CCSRCH101J50
C 756	(B,122,71)	CKSRYB105K10
C 757	(B,116,77)	CKSRYB474K10
C 758	(B,107,81)	CKSRYB474K10
C 759	(B,113,76)	CKSRYB474K10
C 760	(B,121,78)	CKSRYB474K10
C 761	(A,107,86)	CEJQR47M50
C 762	(A,115,70)	CEJQ101M10
C 851	(B,48,14)	CKSRYB104K16
C 901	(B,57,121)	CKSRYB104K50
C 911	(A,32,59)	CEJQ470M10
C 912	(B,25,75)	CKSRYB103K50
C 913	(A,25,68) 470μF/16V	CCH1331
C 921	(B,19,108)	CKSRYB103K50
C 922	(A,20,104)	CEJQ221M10
C 923	(A,18,120)	CEJQ101M16
C 924	(B,19,116)	CKSRYB103K50
C 961	(B,70,34)	CKSRYB473K25
C 962	(A,67,39)	CEJQ100M16

B

Unit Number :
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,27,108) IC	PD6538A
IC 1802	(A,39,79) IC	TSOP4840SB1
D 1801	(B,40,128) Diode	DAN202U
D 1802	(B,40,121) Diode	DAP202U
D 1804	(A,24,67) LED	NESW505C-5273
D 1805	(A,18,14) LED	SML-310PT
D 1806	(A,23,20) LED	SML-310PT
D 1807	(A,29,15) LED	SML-310PT
D 1808	(A,38,26) LED	SML-310PT
D 1809	(A,38,20) LED	SML-310PT
D 1810	(A,24,8) LED	SML-310PT
D 1811	(A,39,104) LED	SML-310PT
D 1812	(A,39,93) LED	SML-310PT
D 1813	(A,24,56) LED	SML-310PT
D 1814	(A,39,137) LED	SML-310PT
D 1815	(A,39,126) LED	SML-310PT
D 1816	(A,39,115) LED	SML-310PT
D 1817	(A,8,67) LED	SML-310PT
D 1818	(A,39,67) LED	SML-310PT
D 1819	(A,7,8) LED	SML-310PT
D 1820	(A,7,18) LED	SML-310PT
D 1821	(A,7,29) LED	SML-310PT
D 1822	(A,8,159) LED	SML-310PT
D 1823	(A,39,147) LED	SML-310PT
D 1824	(A,14,46) LED	SML-310PT
D 1825	(A,33,46) LED	SML-310PT
D 1826	(A,24,37) LED	SML-310PT
X 1801	(B,40,111) Ceramic Resonator 5.00MHz	CSS1547
S 1801	(A,40,97) Push Switch	CSG1155
S 1803	(A,32,14) Push Switch	CSG1155
S 1804	(A,40,108) Push Switch	CSG1155
S 1805	(A,40,73) Push Switch	CSG1155
S 1806	(A,37,29) Push Switch	CSG1155
S 1807	(A,24,5) Push Switch	CSG1155
S 1808	(A,40,119) Push Switch	CSG1155
S 1809	(A,10,8) Push Switch	CSG1155
S 1810	(A,16,14) Push Switch	CSG1155
S 1811	(A,40,130) Push Switch	CSG1155
S 1812	(A,10,29) Push Switch	CSG1155
S 1813	(A,24,23) Push Switch	CSG1155
S 1814	(A,10,18) Push Switch	CSG1155
S 1815	(A,40,140) Push Switch	CSG1155
S 1816	(A,8,73) Push Switch	CSG1155
S 1817	(A,37,17) Push Switch	CSG1155
S 1818	(A,40,151) Push Switch	CSG1155
S 1827	(A,24,46) Encoder	YSD5007
LCD1801	(A,12,69) LCD	YAW5051

RESISTORS

R 1801	(B,39,134)	RS1/16S222J
R 1802	(B,41,134)	RS1/16S222J
R 1803	(B,10,29)	RS1/4SA561J

Circuit Symbol and No.		Part No.
R 1804	(B,38,26)	RS1/4SA471J
R 1805	(B,38,22)	RS1/4SA471J
R 1806	(B,38,30)	RS1/4SA681J
R 1807	(B,19,160)	RS1/4SA471J
R 1808	(B,10,21)	RS1/4SA471J
R 1822	(B,10,17)	RS1/4SA471J
R 1823	(B,19,157)	RS1/4SA681J
R 1831	(B,11,56)	RS1/16S472J
R 1832	(B,11,54)	RS1/16S472J
R 1833	(B,39,106)	RS1/16S2R2J
R 1835	(B,37,62)	RS1/16S121J
R 1838	(B,10,25)	RS1/4SA471J

CAPACITORS

C 1801	(B,37,60)	CKSRYB474K10
C 1802	(B,39,115)	CKSRYF104Z25
C 1803	(B,39,117)	CKSRYF104Z25
C 1804	(B,39,118)	CKSRYF104Z25

D

Unit Number : YWM5099
Unit Name : Panel Unit

MISCELLANEOUS

D 1901	LED	CL220PGC
S 1901	Push Switch(EJECT)	CSG1174
R 1903		RS1/16S101J
R 1904		RS1/16S101J

C

Unit Number : CWX3176
Unit Name : CD Core Unit(S10.5COMP1)

MISCELLANEOUS

IC 201	(B,39,70)	IC	UPD63763CGJ
IC 203	(A,12,16)	IC	NJM2886DL3-33
IC 301	(A,28,18)	IC	BA5835FP
IC 701	(A,32,48)	IC	PE5505A
Q 101	(B,60,89)	Transistor	2SA1577
Q 701	(B,24,41)	Transistor	UN2111
X 201	(B,28,57)	Ceramic Resonator 16.934MHz	CSS1603
X 701	(A,24,37)	Ceramic Resonator 4.000MHz	CSS1652
S 901	(A,57,57)	Switch(HOME)	CSN1067
S 903	(B,23,78)	Switch(DSCSNS)	CSN1067
S 904	(B,42,87)	Switch(12EJ)	CSN1068
S 905	(B,28,88)	Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,61,92)	RS1/10SR2R4J
R 102	(B,63,92)	RS1/10SR2R4J
R 103	(B,63,89)	RS1/10SR2R7J
R 104	(A,52,73)	RS1/16SS102J
R 201	(B,44,57)	RS1/16SS102J
R 202	(A,38,62)	RS1/16SS473J
R 203	(A,37,62)	RS1/16SS473J
R 214	(A,46,79)	RS1/16SS472J
R 216	(A,46,81)	RS1/16SS472J
R 221	(A,44,81)	RS1/16SS103J
R 222	(A,45,81)	RS1/16SS103J
R 225	(B,52,78)	RS1/16SS103J
R 226	(B,52,77)	RS1/16SS393J
R 227	(A,44,75)	RS1/16SS562J
R 228	(A,46,72)	RS1/16SS122J
R 229	(A,44,72)	RS1/16SS472J
R 232	(A,46,75)	RS1/16SS122J
R 241	(B,26,63)	RS1/16SS333J
R 243	(B,26,62)	RS1/16SS333J
R 245	(B,26,69)	RS1/16SS333J
R 248	(B,55,74)	RS1/16SS105J
R 307	(A,19,20)	RS1/16SS183J
R 308	(A,17,20)	RS1/16SS183J
R 309	(A,18,18)	RS1/16SS183J
R 310	(A,17,16)	RS1/16SS183J
R 601	(B,30,47)	RS1/16S101J
R 602	(B,28,50)	RS1/16S101J
R 606	(B,20,54)	RS1/16S0R0J
R 701	(B,26,44)	RS1/16SS221J
R 707	(B,32,45)	RS1/16SS473J
R 709	(A,36,35)	RS1/16SS222J
R 710	(B,41,46)	RS1/16SS102J
R 712	(A,45,57)	RS1/16SS222J
R 713	(B,40,57)	RS1/16SS222J
R 716	(B,29,37)	RS1/16SS472J
R 724	(B,31,36)	RS1/16S473J
R 726	(B,23,47)	RS1/16SS103J
R 727	(B,31,42)	RS1/16SS473J
R 729	(B,20,48)	RS1/16SS223J
R 730	(B,20,46)	RS1/16SS473J
R 740	(A,38,59)	RS1/16SS222J
R 746	(A,13,38)	RS1/16SS104J
R 750	(A,40,66)	RS1/16SS473J
R 902	(A,20,36)	RS1/16SS221J
R 905	(A,21,36)	RS1/16SS221J
R 906	(B,20,36)	RS1/16SS221J
R 907	(B,16,62)	RS1/16SS0R0J
R 908	(B,16,64)	RS1/16SS0R0J
R 911	(B,20,32)	RS1/16SS0R0J

CAPACITORS

C 103	(B,57,83)	CEVW101M16
C 108	(A,47,66)	CKSSYB104K10
C 201	(B,46,56)	CKSSYB102K50
C 202	(B,47,58)	CKSSYB104K10
C 204	(B,35,48)	CEVW220M6R3
C 205	(A,34,63)	CKSSYB104K10
C 208	(B,34,54)	CKSSYB104K10
C 209	(B,31,57)	CKSSYB104K10
C 210	(A,31,66)	CKSRYB105K10
C 216	(B,53,77)	CKSSYB332K50
C 217	(B,52,79)	CKSSYB104K10
C 218	(B,52,76)	CKSSYB473K10
C 219	(B,52,74)	CKSSYB104K10
C 220	(A,46,77)	CKSSYB182K50
C 221	(B,51,74)	CKSSYB104K10
C 222	(A,46,73)	CCSSCH560J50
C 223	(A,44,74)	CCSSCH4R0C50

Circuit Symbol and No.		Part No.
C 224	(B,52,68)	CKSSYB104K10
C 225	(A,47,67)	CKSSYB103K16
C 226	(A,49,67)	CCSSCH680J50
C 227	(A,48,65)	CCSSCH470J50
C 228	(A,46,62)	CKSSYB103K16
C 232	(A,12,31)	CKSRYB105K10
C 237	(A,31,67)	CKSSYB104K10
C 239	(A,46,74)	CCSSCH220J50
C 246	(A,42,80)	CKSSYB104K10
C 250	(A,42,81)	CKSRYB102K50
C 251	(A,41,83)	CKSRYB102K50
C 303	(A,18,20)	CKSSYB472K25
C 304	(A,17,17)	CKSSYB103K16
C 307	(A,34,15)	CKSSYB104K10
C 308	(A,17,30)	CKSRYB105K10
C 601	(B,25,50)	CCSRCH102J50
C 602	(B,26,51)	CCSRCH102J50
C 701	(B,25,47)	CKSSYB104K10
C 703	(B,28,42)	CKSSYB103K16
C 706	(B,34,43)	CKSSYB104K10
C 707	(A,36,57)	CKSSYB104K10
C 714	(A,24,41)	CKSSYB104K10
C 722	(B,29,45)	CKSQYB475K6R3
C 903	(B,14,54)	CKSSYB471K50
C 907	(B,14,62)	CKSSYB103K16

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC6742
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026