EXPLODED VIEW (TK-5210 K)

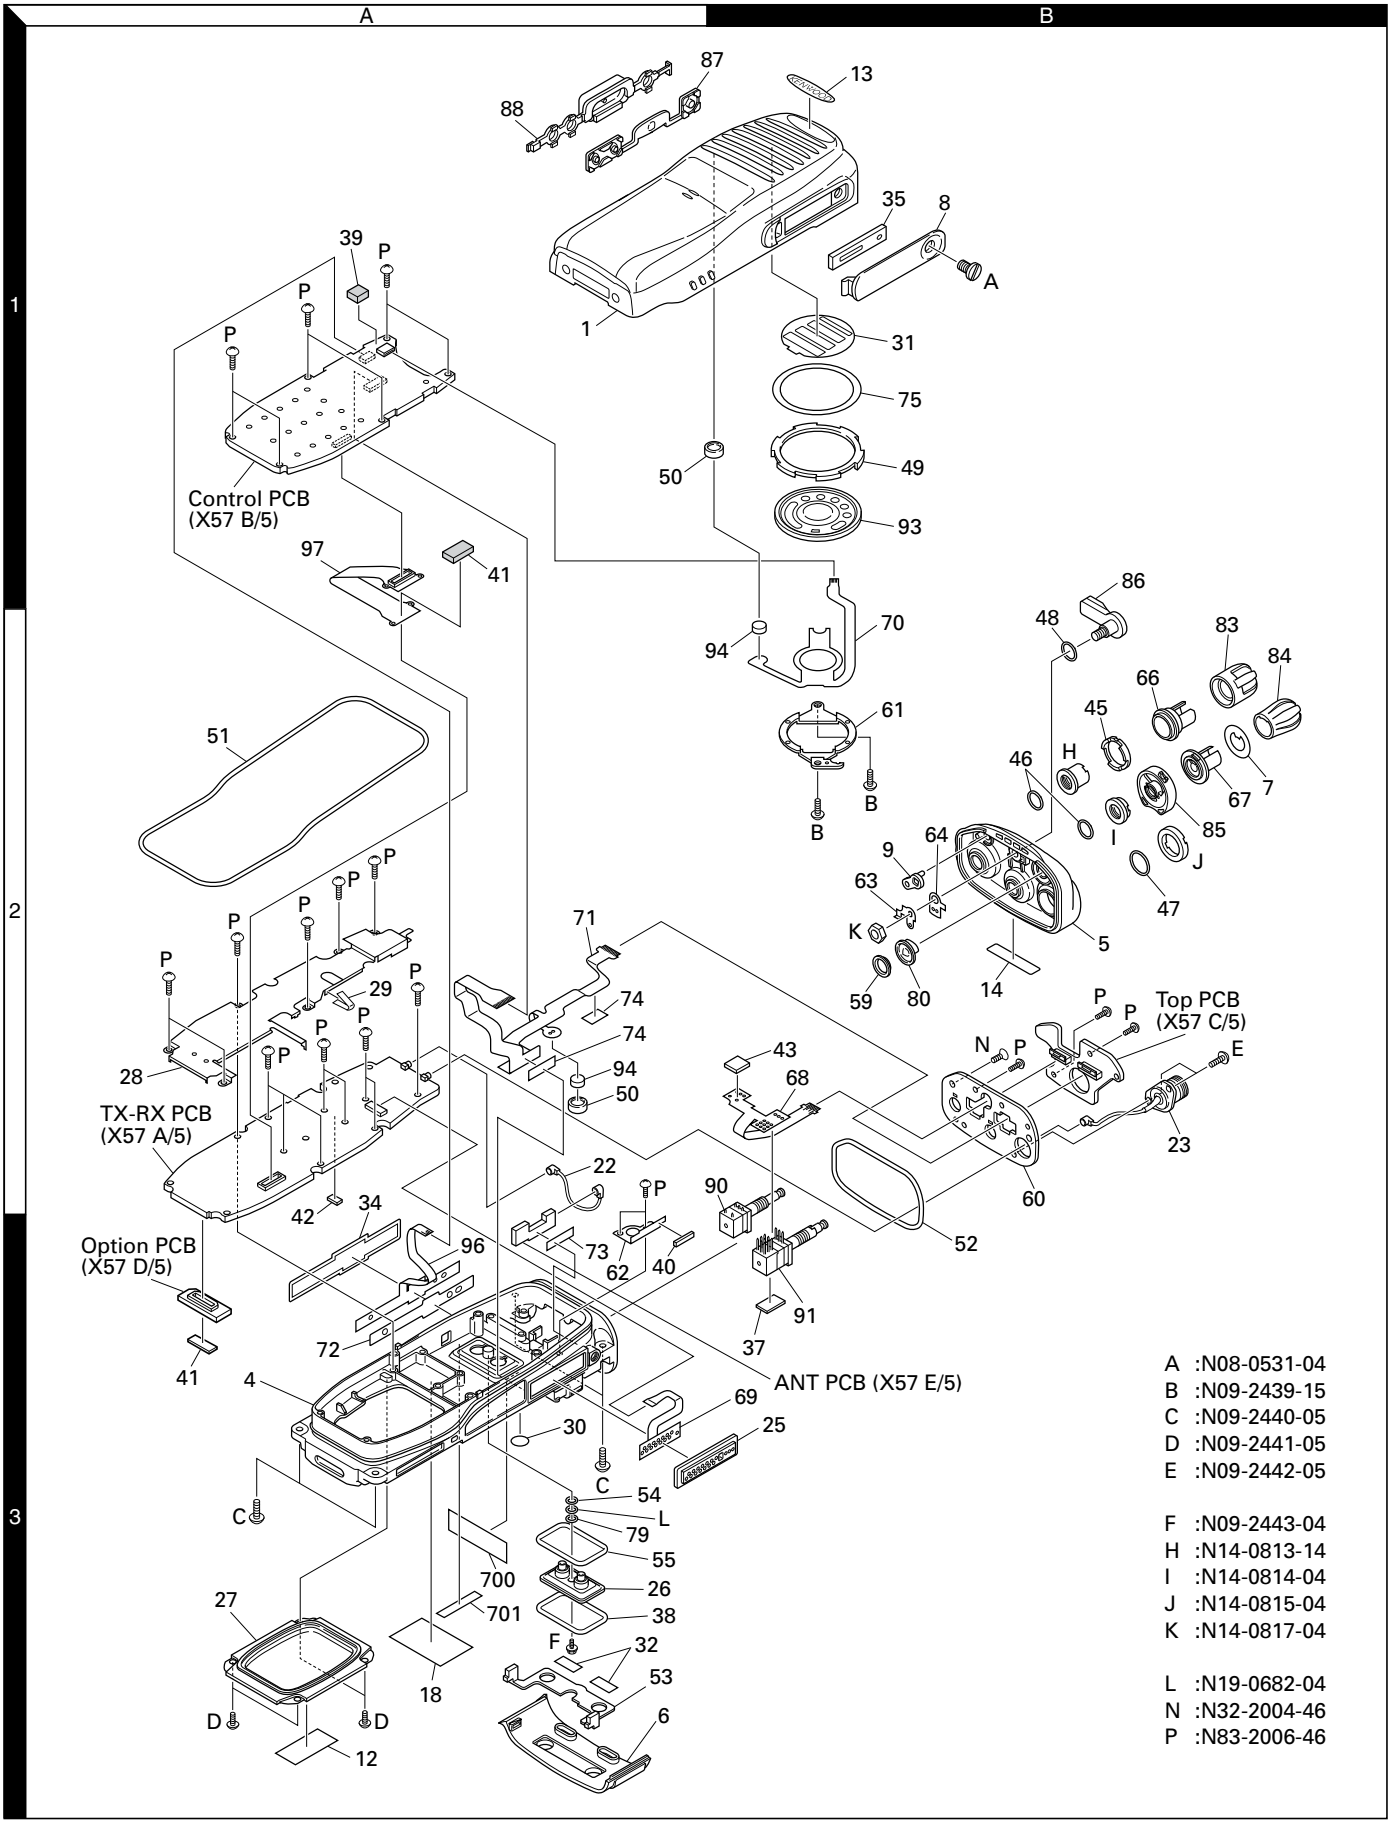

A :N08-0531-04
B :N09-2439-15
C :N09-2440-05
D :N09-2441-05
E :N09-2442-05

F :N09-2443-04
H :N14-0813-14
I :N14-0814-04
J :N14-0815-04
K :N14-0817-04

L :N19-0682-04
N :N32-2004-46
P :N83-2006-46

EXPLODED VIEW (TK-5210 K2, K3)

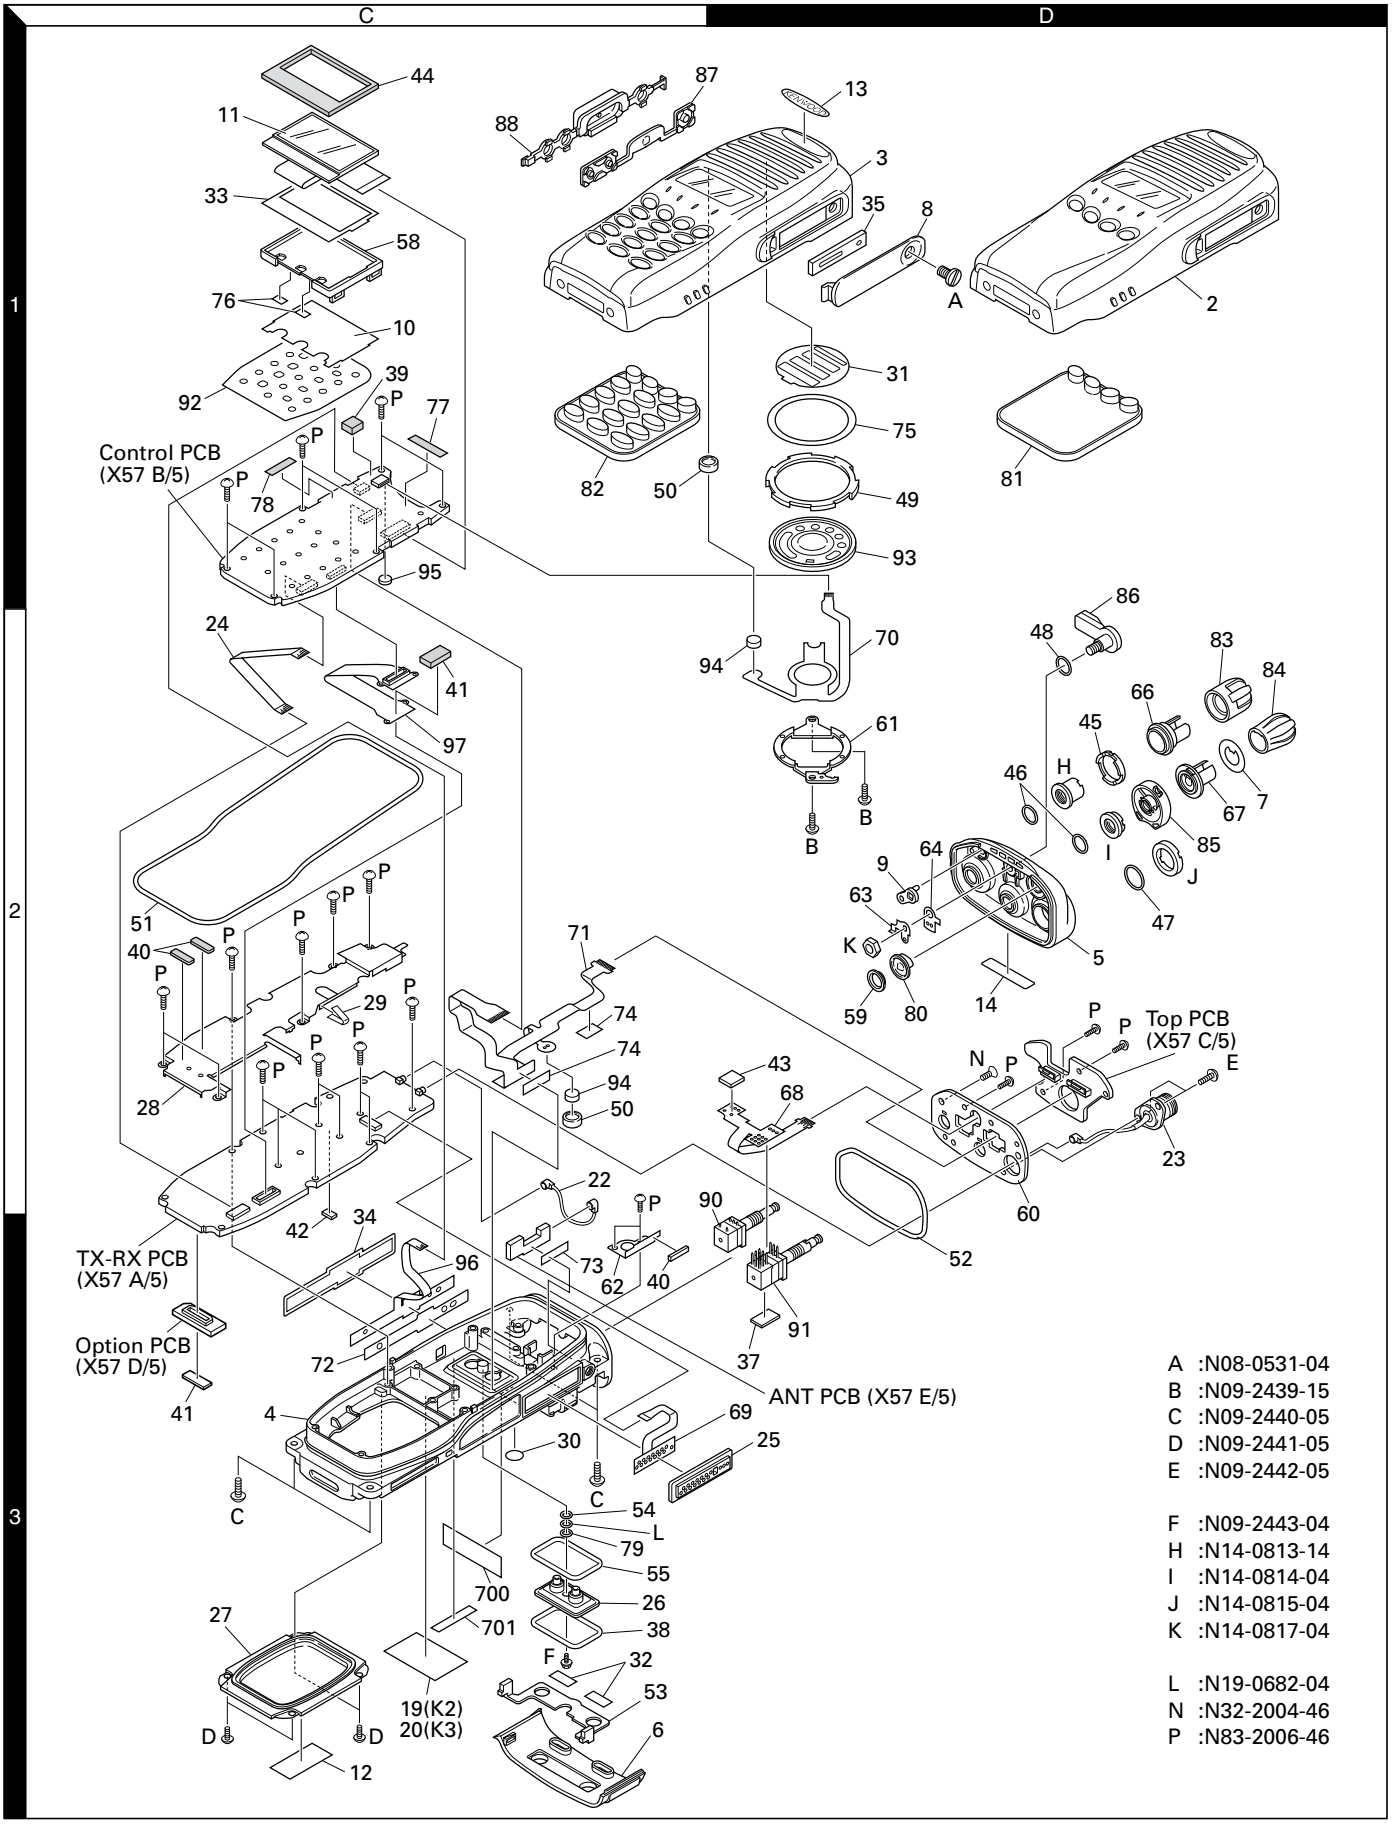

 Parts with the exploded numbers larger than 700 are not supplied.

PACKING

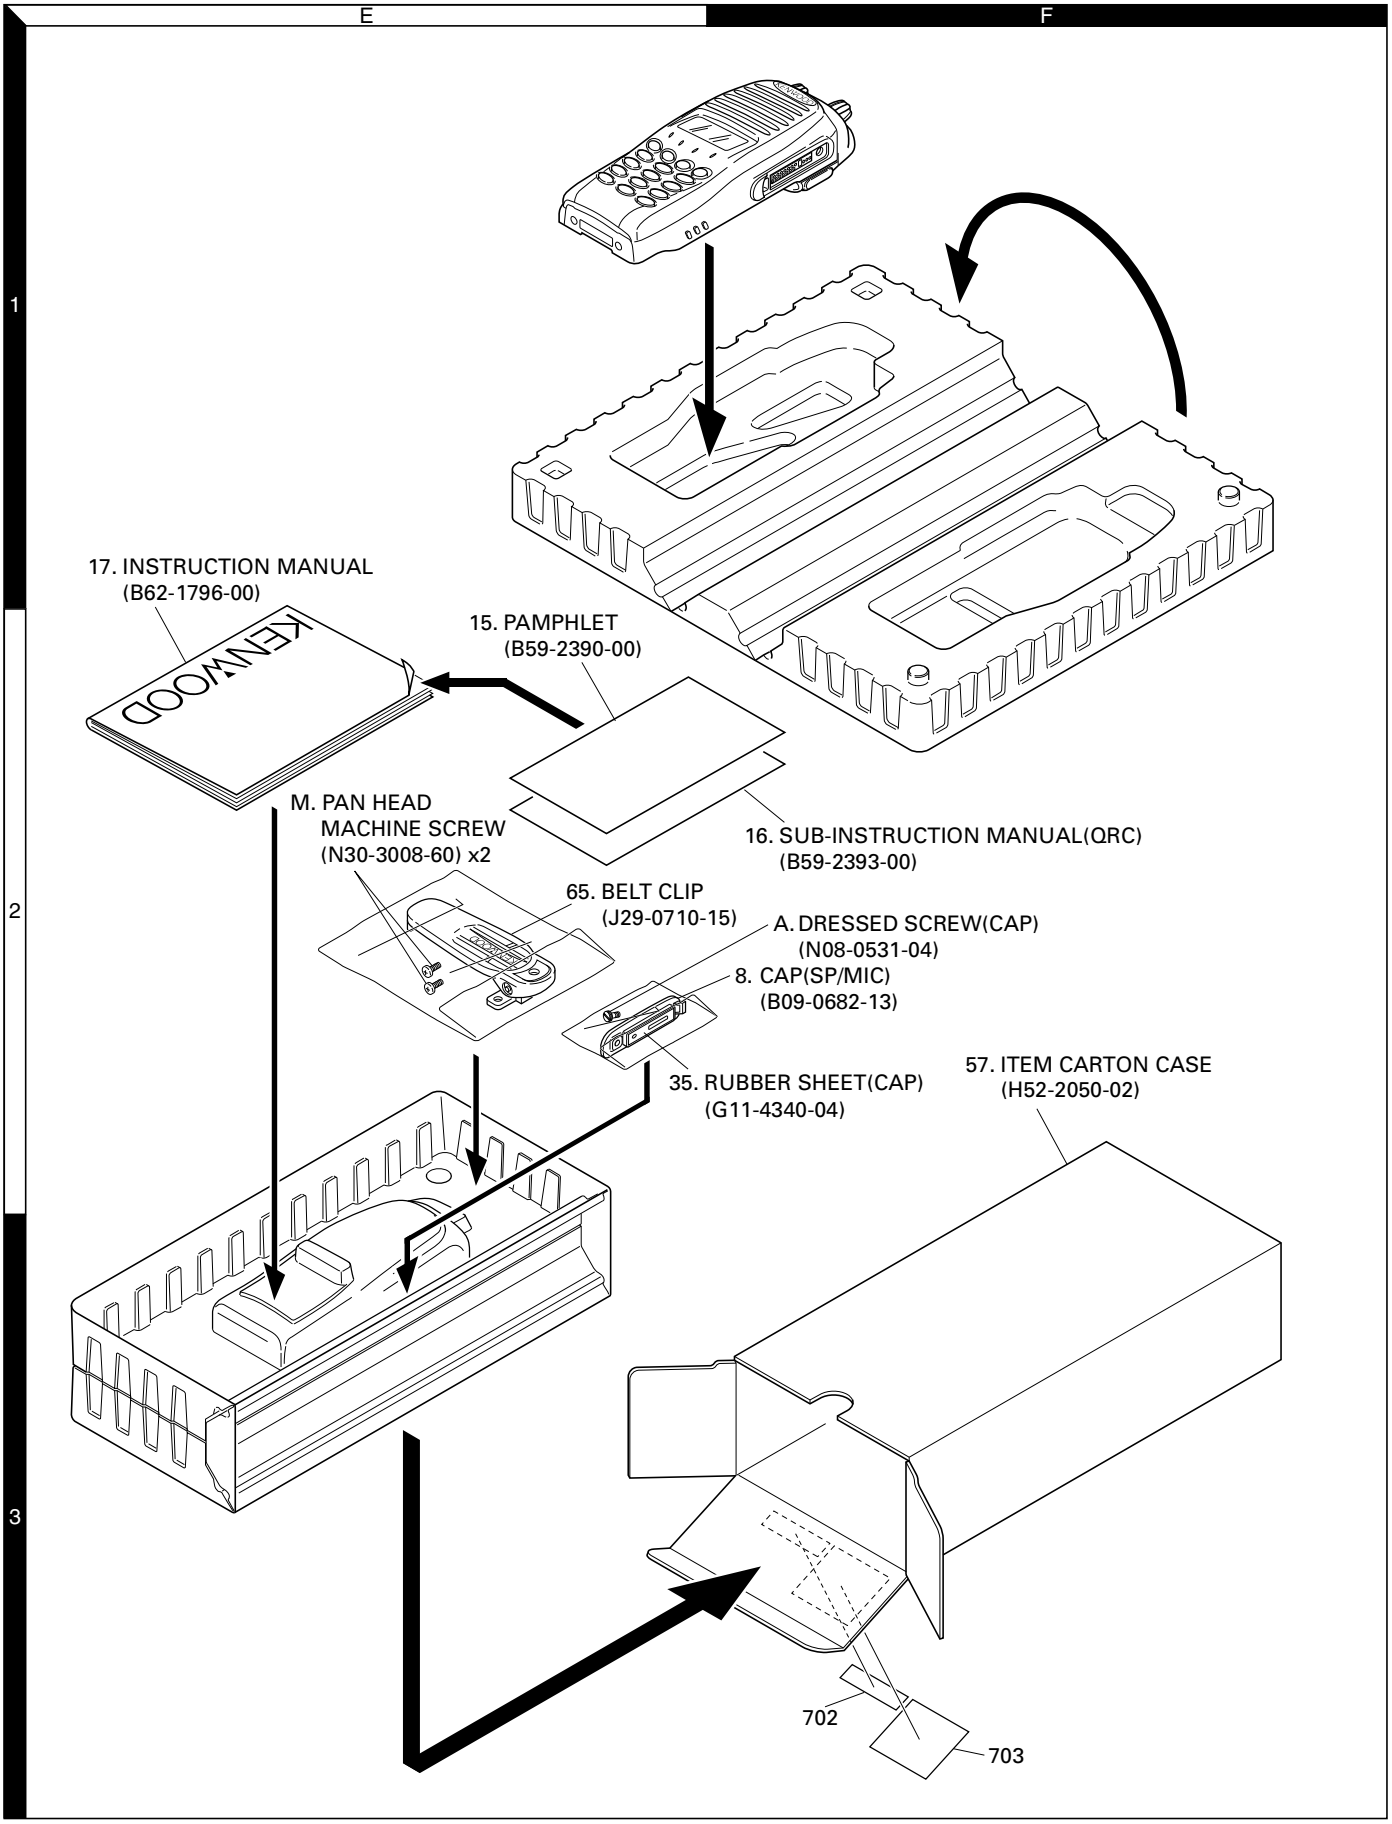

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

∗ New Parts. ⚠ indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L: Scandinavia **K**: USA **P**: Canada
Y: PX (Far East, Hawaii) **T**: England **E**: Europe
Y: AAFES (Europe) **X**: Australia **M**: Other Areas

TK-5210 (Y50-5950-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
			TK-5210		
1	1A	∗	A02-3875-01	MAIN CABINET	K
2	1D	∗	A02-3877-01	MAIN CABINET(4KEY)	K2
3	1C	∗	A02-3879-01	MAIN CABINET(DTMF)	K3
4	3A,3C	∗	A10-4084-01	CHASSIS	
5	2B,2D	∗	A62-1104-02	PANEL(TOP)	
6	3A,3C	∗	A82-0057-02	REAR PANEL	
7	2B,2D	∗	B03-3612-04	DRESSING PLATE(16CH)	
8	1B,2E	∗	B09-0682-13	CAP(SP/MIC) ACCESSORY	
9	2B,2D	∗	B11-1821-03	ILLUMINATION GUIDE(TX-BUSY)	
10	1C	∗	B11-1832-04	FILTER(LCD)	K2,K3
11	1C	∗	B38-0891-05	LCD ASSY	K2,K3
12	3A,3C		B41-1841-04	CAUTION STICKER(HUMAN BODY PROTECTION)	
13	1B,1D	∗	B43-1171-04	BADGE(FRONT)	
14	2B,2D	∗	B43-1172-04	BADGE(REAR)	
15	2E	∗	B59-2390-00	PAMPHLET(HUMAN BODY PROTECTION)	
16	2E	∗	B59-2393-00	SUB-INSTRUCTION MANUAL(QRC)	
17	2E	∗	B62-1796-00	INSTRUCTION MANUAL	
18	3A	∗	B72-2247-04	MODEL NAME-PLATE	K
19	3C	∗	B72-2248-04	MODEL NAME-PLATE	K2
20	3C	∗	B72-2249-04	MODEL NAME-PLATE	K3
22	2A,2C		E37-0722-05	LEAD WIRE WITH CONNECTOR(UNIV)	
23	2B,2D	∗	E37-1126-15	LEAD WIRE WITH CONNECTOR(ANT)	
24	2C	∗	E37-1128-05	FLAT CABLE(CN19-CN604)	K2,K3
25	3B,3D	∗	E58-0510-05	RECTANGULAR RECEPTACLE(UNIV)	
26	3A,3C	∗	E72-0420-13	TERMINAL BLOCK(BATT+)	
27	3A,3C	∗	F07-1887-02	COVER ASSY	
28	2A,2C	∗	F10-2499-02	SHIELDING PLATE(TX-RX PCB)	
29	2A,2C	∗	F20-3360-04	INSULATING SHEET	
30	3A,3C	∗	G10-1327-04	FIBROUS SHEET(AIR)	
31	1B,1D	∗	G10-1338-04	FIBROUS SHEET(SP)	
32	3A,3C	∗	G10-1346-04	FIBROUS SHEET(CHASSIS)	
33	1C	∗	G11-4302-04	SHEET(LCD)	K2,K3
34	3A,3C	∗	G11-4303-14	SHEET(PTT)	
35	1B,2E	∗	G11-4340-04	RUBBER SHEET(CAP) ACCESSORY	
36	-	∗	G11-4346-08	SHEET(UNIV)	
37	3B,3D	∗	G11-4356-04	SHEET(CH)	
38	3A,3C	∗	G11-4360-04	SHEET(TERMINAL BLOCK)	
39	1A,1C	∗	G13-2036-04	CUSHION(MIC)	
40	3A,2C,3C	∗	G13-2046-04	CUSHION(UNIV)	
41	1A,2C,3A,3C	∗	G13-2070-04	CUSHION(CORD ASSY)	
42	3A,3C	∗	G13-2071-04	CONDUCTIVE CUSHION(CHASSIS/PCB)	
43	2B,2D	∗	G13-2079-04	CUSHION(VOL)	
44	1C	∗	G13-2087-04	CUSHION(LCD)	K2,K3
45	2B,2D	∗	G53-1628-04	PACKING(VOL TORQ-UP)	
46	2B,2D	∗	G53-1629-05	PACKING(VOL,CH O-RING)	
47	2B,2D	∗	G53-1630-05	PACKING(ANT O-RING)	
48	2B,2D	∗	G53-1631-05	PACKING(LEVER SW O-RING)	
49	1B,1D	∗	G53-1633-04	PACKING(SP)	
50	1B,1D,2A,2C	∗	G53-1634-14	PACKING(MAIN MIC,NC MIC)	
51	2A,2C	∗	G53-1637-04	PACKING(CHASSIS-FRONT)	
52	2B,2D	∗	G53-1638-04	PACKING(CHASSIS-TOP)	
53	3A,3C	∗	G53-1640-03	PACKING(BATT)	
54	3A,3C	∗	G53-1649-05	PACKING(BATT- O-RING)	
55	3A,3C	∗	G53-1663-03	PACKING(TERMINAL BLOCK)	
57	2E	∗	H52-2050-02	ITEM CARTON CASE	
58	1C	∗	J19-5475-02	HOLDER(LCD)	K2,K3
59	2B,2D	∗	J19-5477-04	HOLDER(EMG)	
60	2B,2D	∗	J21-8482-03	MOUNTING HARDWARE(TOP)	
61	2B,2D	∗	J21-8483-03	MOUNTING HARDWARE(SP)	
62	3A,3C	∗	J21-8484-04	MOUNTING HARDWARE(NC MIC)	
63	2B,2D	∗	J21-8486-04	MOUNTING HARDWARE(LEVER SW)	
64	2B,2D	∗	J21-8495-04	MOUNTING HARDWARE(LEVER SW PANEL SIDE)	
65	2E	∗	J29-0710-15	BELT CLIP ACCESSORY	
66	2B,2D	∗	J39-0646-03	SPACER(VOL)	
67	2B,2D	∗	J39-0647-03	SPACER(16CH)	
68	2B,2D	∗	J82-0096-05	FPC(VOL/CH)	
69	3A,3C	∗	J82-0097-15	FPC(UNIV)	
70	2B,2D	∗	J82-0098-05	FPC(SP/MIC)	
71	2A,2C	∗	J82-0104-05	FPC(CONTROL-TOP)	
72	3A,3C	∗	J99-0377-04	ADHESIVE SHEET(PTT)	
73	3A,3C	∗	J99-0380-04	ADHESIVE SHEET(ANT PCB)	
74	2A,2C	∗	J99-0381-04	ADHESIVE SHEET(CONTROL-TOP FPC)	
75	1B,1D	∗	J99-0383-14	ADHESIVE SHEET(SP)	
76	1C	∗	J99-0390-04	ADHESIVE SHEET(LCD FILTER)	K2,K3
77	1C	∗	J99-0393-04	ADHESIVE SHEET	K2,K3
78	1C	∗	J99-0394-04	ADHESIVE SHEET	K2,K3
79	3A,3C	∗	J99-0395-04	ADHESIVE SHEET(BATT-)	
80	2B,2D	∗	K29-9319-03	KEY TOP(EMG)	
81	1D	∗	K29-9320-03	KEY TOP(4KEY)	K2
82	1C	∗	K29-9321-13	KEY TOP(DTMF)	K3
83	2B,2D	∗	K29-9322-03	KNOB(VOL)	
84	2B,2D	∗	K29-9323-03	KNOB(16CH)	
85	2B,2D	∗	K29-9324-13	KNOB(CONCENTRIC SW)	
86	2B,2D	∗	K29-9325-04	KNOB(LEVER SW)	
87	1A,1C	∗	K29-9327-03	KEY TOP(PTT)	
88	1A,1C	∗	K29-9328-02	KNOB(PTT)	
A	1B,2E		N08-0531-04	DRESSED SCREW(CAP) ACCESSORY	
B	2B,2D	∗	N09-2439-15	SPECIAL SCREW(SP)	
C	3A,3C	∗	N09-2440-05	SPECIAL SCREW(CASE)	
D	3A,3C	∗	N09-2441-05	SPECIAL SCREW(COVER ASSY)	
E	2B,2D	∗	N09-2442-05	SPECIAL SCREW(ANT)	
F	3A,3C	∗	N09-2443-04	HEXAGON HEAD SCREW(BATT-)	
H	2B,2D	∗	N14-0813-14	CIRCULAR NUT(VOL)	
I	2B,2D	∗	N14-0814-04	CIRCULAR NUT(CH)	
J	2B,2D	∗	N14-0815-04	CIRCULAR NUT(ANT)	
K	2B,2D	∗	N14-0817-04	HEXAGON NUT(LEVER SW)	
L	3A,3C	∗	N19-0682-04	SPECIAL WASHER(BATT-)	
M	2E		N30-3008-60	PAN HEAD MACHINE SCREW(BELT CLIP)	
N	2B,2D		N32-2004-46	FLAT HEAD MACHINE SCREW(TOP)	
P	1A,1C,2A,2B 2C,2D,3C		N83-2006-46	PAN HEAD TAPTITE SCREW(CONT/TXRX)	
90	3B,3D	∗	R31-0654-05	VARIABLE RESISTOR(VOL)	
91	3B,3D	∗	S60-0431-05	ROTARY SWITCH(CH)	
92	1C	∗	S79-0454-05	KEYBOARD ASSY(4KEY,DTMF)	K2,K3

PARTS LIST

TK-5210
TX-RX UNIT (X57-6820-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
93	1B,1D	*	T07-0755-05	SPEAKER	
94	2B,2D		T91-0575-05	MIC ELEMENTT(MAIN MIC,NC MIC)	
95	1C		W09-0971-05	LITHIUM CELL	K2,K3
96	3A,3C	*	X41-3690-10	SWITCH UNIT(FPC(PTT))	
97	1A,2C	*	X42-3270-10	CORD ASSY(FPC(50PIN))	
TX-RX UNIT (X57-6820-XX) -10 :K -11 :K2 -12 :K3					
D705-708			B30-2171-05	LED	K3
D705,706			B30-2171-05	LED	K2
D709		*	B30-2261-05	LED	K2,K3
D711,712			B30-2171-05	LED	K3
D713		*	B30-2261-05	LED	K2,K3
D715,716			B30-2171-05	LED	K3
D723		*	B30-2261-05	LED	K2,K3
D901			B30-2019-05	LED(RE/GR)	
C1			CK73HB1A104K	CHIP C 0.10UF K	
C2			CK73HB1C103K	CHIP C 0.010UF K	
C3 ,4			CK73HB1A104K	CHIP C 0.10UF K	
C5			CK73HB1H102K	CHIP C 1000PF K	
C7			CK73HB1A104K	CHIP C 0.10UF K	
C8			CK73HB1H102K	CHIP C 1000PF K	
C9 ,10			CK73HB1A104K	CHIP C 0.10UF K	
C11			CK73HB1H102K	CHIP C 1000PF K	
C12 -14			CK73HB1A104K	CHIP C 0.10UF K	
C15			CK73HB1C103K	CHIP C 0.010UF K	
C16 ,17			CC73HCH1H101J	CHIP C 100PF J	
C18			CK73FB0J106K	CHIP C 10UF K	
C19			CC73HCH1H101J	CHIP C 100PF J	
C20			CK73HB1H332K	CHIP C 3300PF K	
C21 ,22			CK73HB1C103K	CHIP C 0.010UF K	
C23			CC73HCH1H101J	CHIP C 100PF J	
C24			CK73FB0J106K	CHIP C 10UF K	
C26			CK73HB1C103K	CHIP C 0.010UF K	
C27 -30			CC73HCH1H101J	CHIP C 100PF J	
C31 -33			CK73HB1C103K	CHIP C 0.010UF K	
C34			CK73HB1A104K	CHIP C 0.10UF K	
C35			CK73HB1C103K	CHIP C 0.010UF K	
C36			CK73HB1A104K	CHIP C 0.10UF K	
C37 ,38			CK73HB1C103K	CHIP C 0.010UF K	
C39			CC73HCH1H101J	CHIP C 100PF J	
C40 ,41			CK73HB1A104K	CHIP C 0.10UF K	
C43 -48			CK73HB1C103K	CHIP C 0.010UF K	
C49 ,50			CK73HB1H102K	CHIP C 1000PF K	
C51			CK73HB1A104K	CHIP C 0.10UF K	
C52 -55			CK73HB1C103K	CHIP C 0.010UF K	
C57 ,58			CC73HCH1H101J	CHIP C 100PF J	
C59 ,60			CK73HB1H102K	CHIP C 1000PF K	
C61			CC73HCH1H470J	CHIP C 47PF J	
C62			CK73HB1A104K	CHIP C 0.10UF K	
C65 -69			CK73HB1H102K	CHIP C 1000PF K	
C70 ,71			CK73HB1A104K	CHIP C 0.10UF K	
C75			CK73HB1H102K	CHIP C 1000PF K	
C86			CK73HB1H471K	CHIP C 470PF K	
C101			CK73HB1C103K	CHIP C 0.010UF K	
C102-106			CK73HB1H102K	CHIP C 1000PF K	
C107			CC73HCH1H330J	CHIP C 33PF J	
C108			CK73HB1H102K	CHIP C 1000PF K	
C110,111			CK73HB1H102K	CHIP C 1000PF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C112			CC73HCH1H270J	CHIP C 27PF J	
C113			CK73HB1H102K	CHIP C 1000PF K	
C114			CC73HCH1H180J	CHIP C 18PF J	
C116			CK73HB1H102K	CHIP C 1000PF K	
C118			CK73HB1H471K	CHIP C 470PF K	
C120			CC73GCH1H560J	CHIP C 56PF J	
C121			CK73HB1H102K	CHIP C 1000PF K	
C122			CC73GCH1H040B	CHIP C 4.0PF B	
C123			CC73HCH1H101J	CHIP C 100PF J	
C124			CK73HB1H102K	CHIP C 1000PF K	
C128			CK73HB1H102K	CHIP C 1000PF K	
C130			CK73HB1H102K	CHIP C 1000PF K	
C132			CK73HB1H102K	CHIP C 1000PF K	
C133			CK73GB1E105K	CHIP C 1.0UF K	
C134			CK73HB1C103K	CHIP C 0.010UF K	
C135			CK73GB1H102K	CHIP C 1000PF K	
C136			CK73HB1H102K	CHIP C 1000PF K	
C137			CC73GCH1H330J	CHIP C 33PF J	
C138			CK73GB0J475K	CHIP C 4.7UF K	
C139			CC73GCH1H390J	CHIP C 39PF J	
C140			CK73GB1H102K	CHIP C 1000PF K	
C141			CC73GCH1H220J	CHIP C 22PF J	
C142			CC73GCH1H680J	CHIP C 68PF J	
C144			CK73GB1H102K	CHIP C 1000PF K	
C145			CC73GCH1H270J	CHIP C 27PF J	
C146			CK73HB1C103K	CHIP C 0.010UF K	
C147			CC73GCH1H270J	CHIP C 27PF J	
C148			CK73GB1H102K	CHIP C 1000PF K	
C149			CC73HCH1H050B	CHIP C 5.0PF B	
C150			CC73HCH1H100D	CHIP C 10PF D	
C151			CC73HCH1H270J	CHIP C 27PF J	
C156			CC73HCH1H050B	CHIP C 5.0PF B	
C157			CC73HCH1H120J	CHIP C 12PF J	
C158-160			CK73GB1H102K	CHIP C 1000PF K	
C162,163			CK73HB1H102K	CHIP C 1000PF K	
C166,167			CC73HCH1H120J	CHIP C 12PF J	
C168,169			CC73GCH1H040C	CHIP C 4.0PF C	
C170			CC73HCH1H120J	CHIP C 12PF J	
C171			CC73HCH1H100D	CHIP C 10PF D	
C173			CK73HB1C103K	CHIP C 0.010UF K	
C174			CK73HB1H102K	CHIP C 1000PF K	
C176-178			CK73HB1H102K	CHIP C 1000PF K	
C180,181			CK73HB1H102K	CHIP C 1000PF K	
C182,183			CC73HCH1H150J	CHIP C 15PF J	
C184			CC73HCH1H180J	CHIP C 18PF J	
C185			CK73HB1C103K	CHIP C 0.010UF K	
C186			CK73HB1H102K	CHIP C 1000PF K	
C190			CC73GCH1H050B	CHIP C 5.0PF B	
C192			CC73GCH1H390J	CHIP C 39PF J	
C193,194			CC73GCH1H330J	CHIP C 33PF J	
C196,197			CC73GCH1H330J	CHIP C 33PF J	
C201			CK73GB1E105K	CHIP C 1.0UF K	
C203			CK73HB1A104K	CHIP C 0.10UF K	
C204			CK73HB1H102K	CHIP C 1000PF K	
C205			CC73HCH1H100C	CHIP C 10PF C	
C206			CK73HB1H102K	CHIP C 1000PF K	
C207			CC73HCH1H030C	CHIP C 3.0PF C	
C208			CK73HB1A104K	CHIP C 0.10UF K	
C210			CK73HB1H102K	CHIP C 1000PF K	
C212-215			CK73HB1H102K	CHIP C 1000PF K	

PARTS LIST

TX-RX UNIT (X57-6820-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C217			CK73GB1E105K	CHIP C 1.0UF K	
C218,219			CK73HB1H102K	CHIP C 1000PF K	
C220			CC73HCH1H060B	CHIP C 6.0PF B	
C221			CC73HCH1H030C	CHIP C 3.0PF C	
C222			CC73HCH1H1R5B	CHIP C 1.5PF B	
C223			CK73HB1H102K	CHIP C 1000PF K	
C225			CC73GCH1H060B	CHIP C 6.0PF B	
C227			CC73HCH1H150J	CHIP C 15PF J	
C228			CC73HCH1H020C	CHIP C 2.0PF C	
C229			CC73HCH1H180J	CHIP C 18PF J	
C230			CK73GB1H102K	CHIP C 1000PF K	
C231			CC73HCH1H1R5C	CHIP C 1.5PF C	
C232			CK73HB1A104K	CHIP C 0.10UF K	
C233			CC73HCH1H090D	CHIP C 9.0PF D	
C235			CK73HB1H471K	CHIP C 470PF K	
C236			CK73HB1H102K	CHIP C 1000PF K	
C237			CK73HB1C223K	CHIP C 0.022UF K	
C238,239			CK73HB1H471K	CHIP C 470PF K	
C240			CK73GB0J475K	CHIP C 4.7UF K	
C241			CK73HB1A104K	CHIP C 0.10UF K	
C242			CK73HB1H102K	CHIP C 1000PF K	
C243			CK73HB1H471K	CHIP C 470PF K	
C244,245			CK73HB1A104K	CHIP C 0.10UF K	
C246			CK73GB1H103K	CHIP C 0.010UF K	
C248			CC73GCH1H150J	CHIP C 15PF J	
C250			CC73HCH1H270J	CHIP C 27PF J	
C252			CC73HCH1H120J	CHIP C 12PF J	
C253-256			CK73HB1C103K	CHIP C 0.010UF K	
C257			CK73HB1A104K	CHIP C 0.10UF K	
C259			CC73HCH1H470J	CHIP C 47PF J	
C260			CC73HCH1H080D	CHIP C 8.0PF D	
C261			CK73HB1H471K	CHIP C 470PF K	
C262			CK73HB1C103K	CHIP C 0.010UF K	
C263			CC73HCH1H220J	CHIP C 22PF J	
C264			CC73HCH1H820J	CHIP C 82PF J	
C265			CC73HCH1H680J	CHIP C 68PF J	
C266			CK73HB1H102K	CHIP C 1000PF K	
C267,268			CK73HB1A104K	CHIP C 0.10UF K	
C270,271			CK73HB1A104K	CHIP C 0.10UF K	
C272,273			CK73HB1C103K	CHIP C 0.010UF K	
C274			CK73FB0J106K	CHIP C 10UF K	
C275,276			CK73HB1A104K	CHIP C 0.10UF K	
C277			CC73HCH1H390J	CHIP C 39PF J	
C278,279			CC73HCH1H151J	CHIP C 150PF J	
C281-285			CK73HB1A104K	CHIP C 0.10UF K	
C288			CK73HB1H102K	CHIP C 1000PF K	
C289			CC73HCH1H101J	CHIP C 100PF J	
C292,293			CK73HB1A104K	CHIP C 0.10UF K	
C294			CK73HB1H471K	CHIP C 470PF K	
C295,296			CC73HCH1H470J	CHIP C 47PF J	
C301			CK73HB1H102K	CHIP C 1000PF K	
C302			CC73HCH1H470J	CHIP C 47PF J	
C304,305			CK73HB1A104K	CHIP C 0.10UF K	
C306			CC73HCH1H470J	CHIP C 47PF J	
C309			CK73HB1H471K	CHIP C 470PF K	
C311			CC73HCH1H470J	CHIP C 47PF J	
C312			CK73GB1E105K	CHIP C 1.0UF K	
C313			CK73HB1H102K	CHIP C 1000PF K	
C315,316			CC73HCH1H101J	CHIP C 100PF J	
C318			CK73HB1C103K	CHIP C 0.010UF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C320			CK73HB1A104K	CHIP C 0.10UF K	
C323			CK73HB1H471K	CHIP C 470PF K	
C325			CK73HB0J105K	CHIP C 1.0UF K	
C329			CK73HB1H471K	CHIP C 470PF K	
C330		*	C93-0787-05	CERAMIC 0.1UF 50WV	
C331			CK73HB1H102K	CHIP C 1000PF K	
C333			C92-0001-05	CHIP-TAN 0.1UF 35WV	
C334			C92-0519-05	CHIP-TAN 1.0UF 25WV	
C335			CC73HCH1H101J	CHIP C 100PF J	
C336			CK73EB1H223K	CHIP C 0.022UF K	
C338			CK73HB1H471K	CHIP C 470PF K	
C340			CK73HB1H122K	CHIP C 1200PF K	
C341			CK73HB1H102K	CHIP C 1000PF K	
C343			C92-0713-05	CHIP-TAN 10UF 6.3WV	
C344-346			CK73HB1H471K	CHIP C 470PF K	
C347			CC73HCH1H560J	CHIP C 56PF J	
C348			CC73HCH1H100D	CHIP C 10PF D	
C350			CK73HB1H182K	CHIP C 1800PF K	
C352			CC73HCH1H010C	CHIP C 1.0PF C	
C353			CC73HCH1H150J	CHIP C 15PF J	
C354			CC73GCH1H040B	CHIP C 4.0PF B	
C355			CC73HCH1H040C	CHIP C 4.0PF C	
C356			CC73HCH1H0R5B	CHIP C 0.5PF B	
C357			CC73HCH1H100D	CHIP C 10PF D	
C358			CK73HB1H471K	CHIP C 470PF K	
C359			CC73GCH1H040B	CHIP C 4.0PF B	
C360			CK73HB1H471K	CHIP C 470PF K	
C361			CC73GCH1H060B	CHIP C 6.0PF B	
C362			CC73HCH1H080D	CHIP C 8.0PF D	
C363			CC73GCH1H050B	CHIP C 5.0PF B	
C364			CC73HCH1H080D	CHIP C 8.0PF D	
C365			CK73HB1H471K	CHIP C 470PF K	
C366			CC73GCH1H030B	CHIP C 3.0PF B	
C367			CK73HB1H471K	CHIP C 470PF K	
C368			CC73GCH1H040B	CHIP C 4.0PF B	
C369			CK73GB0J475K	CHIP C 4.7UF K	
C370			CK73HB1H471K	CHIP C 470PF K	
C371,372			CC73HCH1H0R5B	CHIP C 0.5PF B	
C373,374			CK73HB1H471K	CHIP C 470PF K	
C375			CC73HCH1H060D	CHIP C 6.0PF D	
C376			CC73HCH1H020C	CHIP C 2.0PF C	
C377-383			CK73HB1H102K	CHIP C 1000PF K	
C384			CK73HB0J105K	CHIP C 1.0UF K	
C385			CC73HCH1H150J	CHIP C 15PF J	
C386			CK73HB1H102K	CHIP C 1000PF K	
C387			CK73GB1E105K	CHIP C 1.0UF K	
C388			CK73GB1E153K	CHIP C 0.015UF K	
C389			CK73GB0J475K	CHIP C 4.7UF K	
C390			CK73HB1H471K	CHIP C 470PF K	
C391,392			CK73HB1A104K	CHIP C 0.10UF K	
C393			CK73HB1H102K	CHIP C 1000PF K	
C396,397			CK73HB1H102K	CHIP C 1000PF K	
C400			CK73GB0J475K	CHIP C 4.7UF K	
C401			CK73HB1H102K	CHIP C 1000PF K	
C402			CK73FB0J106K	CHIP C 10UF K	
C403			CK73HB0J105K	CHIP C 1.0UF K	
C404			CK73GB1A105K	CHIP C 1.0UF K	
C405			CK73GB1E105K	CHIP C 1.0UF K	
C406			CK73HB1H102K	CHIP C 1000PF K	
C407			CK73GB1E105K	CHIP C 1.0UF K	

PARTS LIST

TX-RX UNIT (X57-6820-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C408-410			CK73HB1H102K	CHIP C 1000PF K	
C411,412			C92-0784-05	TANTALUM 4.7UF 10WV	
C413			CK73HB0J105K	CHIP C 1.0UF K	
C414			CC73HCH1H101J	CHIP C 100PF J	
C415			CK73HB1A104K	CHIP C 0.10UF K	
C416			CC73HCH1H101J	CHIP C 100PF J	
C417,418			CK73GB0J475K	CHIP C 4.7UF K	
C419			CK73FB0J106K	CHIP C 10UF K	
C420			CK73HB0J105K	CHIP C 1.0UF K	
C421			C92-0713-05	CHIP-TAN 10UF 6.3WV	
C422,423			CK73HB1A104K	CHIP C 0.10UF K	
C424,425			CK73HB0J105K	CHIP C 1.0UF K	
C426			CK73HB1A104K	CHIP C 0.10UF K	
C427			CK73HB0J105K	CHIP C 1.0UF K	
C428			CK73HB1A104K	CHIP C 0.10UF K	
C430			CK73HB1A104K	CHIP C 0.10UF K	
C431,432			CC73HCH1H151J	CHIP C 150PF J	
C433			CK73HB1H471K	CHIP C 470PF K	
C434			CK73HB1A104K	CHIP C 0.10UF K	
C436			CK73HB0J105K	CHIP C 1.0UF K	
C437			CK73HB1A104K	CHIP C 0.10UF K	
C438,439			CK73FB0J106K	CHIP C 10UF K	
C440-442			CK73HB1A104K	CHIP C 0.10UF K	
C443			CK73HB1H102K	CHIP C 1000PF K	
C444			CK73GB0J475K	CHIP C 4.7UF K	
C445			CK73HB0J224K	CHIP C 0.22UF K	
C446			CK73FB0J106K	CHIP C 10UF K	
C447			CK73HB0J224K	CHIP C 0.22UF K	
C448			CK73HB1H122K	CHIP C 1200PF K	
C449			CC73HCH1H101J	CHIP C 100PF J	
C451			CK73GB0J475K	CHIP C 4.7UF K	
C452			CK73HB0J105K	CHIP C 1.0UF K	
C453			CK73HB1A104K	CHIP C 0.10UF K	
C454			CK73GB0J475K	CHIP C 4.7UF K	
C455			CC73HCH1H151J	CHIP C 150PF J	
C456			CK73HB1C103K	CHIP C 0.010UF K	
C457			CK73GB0J475K	CHIP C 4.7UF K	
C458			CK73HB1H152K	CHIP C 1500PF K	
C459			CC73HCH1H101J	CHIP C 100PF J	
C460			CK73HB1A104K	CHIP C 0.10UF K	
C461			CC73HCH1H101J	CHIP C 100PF J	
C462			CK73HB1A104K	CHIP C 0.10UF K	
C463			CK73HB0J105K	CHIP C 1.0UF K	
C465,466			CK73HB1A104K	CHIP C 0.10UF K	
C468			CC73HCH1H101J	CHIP C 100PF J	
C469			CK73HB1A104K	CHIP C 0.10UF K	
C479			CK73HB1A104K	CHIP C 0.10UF K	
C480			CC73HCH1H101J	CHIP C 100PF J	
C481,482			CK73FB0J106K	CHIP C 10UF K	
C483			CK73HB1H102K	CHIP C 1000PF K	
C484			CK73HB0J105K	CHIP C 1.0UF K	
C485			CK73HB1A104K	CHIP C 0.10UF K	
C486			CK73HB1H102K	CHIP C 1000PF K	
C487			CC73HCH1H220J	CHIP C 22PF J	
C488-490			CK73HB1H102K	CHIP C 1000PF K	
C491			CK73HB1A104K	CHIP C 0.10UF K	
C492,493			CK73FB0J106K	CHIP C 10UF K	
C494			CK73HB1C103K	CHIP C 0.010UF K	
C495,496			CK73HB1A104K	CHIP C 0.10UF K	
C497,498			CK73GB1E105K	CHIP C 1.0UF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C499			CK73HB1H471K	CHIP C 470PF K	
C505-515			CC73HCH1H101J	CHIP C 100PF J	
C601			CK73HB1A104K	CHIP C 0.10UF K	
C602-604			CK73HB1H471K	CHIP C 470PF K	
C606			CK73GB1A105K	CHIP C 1.0UF K	
C607			C92-0585-05	CHIP-TAN 4.7UF 16WV	
C608			CK73GB1A105K	CHIP C 1.0UF K	
C609			C92-0585-05	CHIP-TAN 4.7UF 16WV	
C610,611			CK73HB1H102K	CHIP C 1000PF K	
C612,613			CK73GB1A105K	CHIP C 1.0UF K	
C614,615			CK73HB1A104K	CHIP C 0.10UF K	
C620			CC73HCH1H101J	CHIP C 100PF J	
C621		*	CK73GB1C474K	CHIP C 0.47UF K	
C622			CK73GB0J475K	CHIP C 4.7UF K	
C623			CK73HB1A104K	CHIP C 0.10UF K	
C624			CK73GB1E223K	CHIP C 0.022UF K	
C625			CK73HB1H102K	CHIP C 1000PF K	
C627,628		*	CK73GB1C474K	CHIP C 0.47UF K	
C629,630			CK73HB1H471K	CHIP C 470PF K	
C631			CK73HB1A104K	CHIP C 0.10UF K	
C632,633			CK73HB1H471K	CHIP C 470PF K	
C638			CK73HB1A104K	CHIP C 0.10UF K	
C639,640			CK73HB0J105K	CHIP C 1.0UF K	
C643			CK73HB1A104K	CHIP C 0.10UF K	
C710-712			CK73HB1C103K	CHIP C 0.010UF K	
C714			CC73HCH1H101J	CHIP C 100PF J	K2,K3
C715			CK73HB1A104K	CHIP C 0.10UF K	K2,K3
C716-722			CK73HB1E472K	CHIP C 4700PF K	
C750-754		*	CK73GB1C474K	CHIP C 0.47UF K	K2,K3
C755			CK73HB1C103K	CHIP C 0.010UF K	K2,K3
C759-762			CK73GB1E105K	CHIP C 1.0UF K	K2,K3
C763-765			CK73HB1E472K	CHIP C 4700PF K	
C766			CK73HB1H102K	CHIP C 1000PF K	K2,K3
C767			CK73HB1C103K	CHIP C 0.010UF K	K2,K3
C768			CK73HB1H102K	CHIP C 1000PF K	K2,K3
C769			CK73HB1C103K	CHIP C 0.010UF K	K2,K3
C770			CK73HB1H471K	CHIP C 470PF K	K2,K3
C801-804		*	C92-0821-05	TANTALUM 10UF 20WV	
C805-809			CK73GB1E105K	CHIP C 1.0UF K	
C811			CK73GB1E105K	CHIP C 1.0UF K	
C812			C92-0765-05	TANTALUM 4.7UF 16WV	
C813			CK73HB1A104K	CHIP C 0.10UF K	
C814-816			CK73HB1H102K	CHIP C 1000PF K	
C817			CK73HB1A104K	CHIP C 0.10UF K	
C818			CK73HB1H102K	CHIP C 1000PF K	
C819,820			CK73FB0J106K	CHIP C 10UF K	
C821			CC73HCH1H820J	CHIP C 82PF J	
C822			CK73FB0J106K	CHIP C 10UF K	
C823,824			CK73HB1H102K	CHIP C 1000PF K	
C825			CK73FB0J106K	CHIP C 10UF K	
C826			C92-0784-05	TANTALUM 4.7UF 10WV	
C827			CK73HB1A104K	CHIP C 0.10UF K	
C828		*	C92-0822-05	TANTALUM 33UF 10WV	
C829			CK73HB1C103K	CHIP C 0.010UF K	
C830			CC73HCH1E181J	CHIP C 180PF J	
C831			CC73HCH1H220J	CHIP C 22PF J	
C832			CK73HB1H471K	CHIP C 470PF K	
C833-836			CK73GB1E105K	CHIP C 1.0UF K	
C838			CK73HB1H102K	CHIP C 1000PF K	
C839			CK73HB1C103K	CHIP C 0.010UF K	

PARTS LIST

TX-RX UNIT (X57-6820-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
CN7			E40-5856-05	FLAT CABLE CONNECTOR	
CN14			E40-6357-05	PIN ASSY	
CN19		*	E40-6431-05	FLAT CABLE CONNECTOR	K2,K3
CN101,102			E04-0403-05	PIN SOCKET	
CN408		*	E40-6422-05	SOCKET FOR PIN ASSY	
CN601		*	E40-6421-05	PIN ASSY	
CN603			E40-5948-05	FLAT CABLE CONNECTOR	
CN604		*	E40-6431-05	FLAT CABLE CONNECTOR	K2,K3
CN751		*	E40-6337-05	FLAT CABLE CONNECTOR	K2,K3
CN752		*	E40-6388-05	FLAT CABLE CONNECTOR	
CN753		*	E40-5664-05	FLAT CABLE CONNECTOR	
CN901			E40-6358-05	SOCKET FOR PIN ASSY	
CN902		*	E40-6391-05	FLAT CABLE CONNECTOR	
CN903			E40-6053-05	FLAT CABLE CONNECTOR	
CN904			E04-0403-05	PIN SOCKET	
F1		*	F53-0360-05	FUSE(0.25A)	
F401		*	F53-0372-05	FUSE(3.15A)	
F402		*	F53-0360-05	FUSE(0.25A)	
CN602			J19-5386-05	HOLDER	
CD201		*	L79-1850-05	TUNING COIL	
CF201		*	L72-1017-05	CERAMIC FILTER	
CF202		*	L72-1009-05	CERAMIC FILTER	
CF203		*	L72-1017-05	CERAMIC FILTER	
CF204		*	L72-1018-05	CERAMIC FILTER	
L1 -3			L92-0163-05	BEADS CORE	
L5 -8			L92-0163-05	BEADS CORE	
L9		*	L92-0446-05	BEADS CORE	
L10			L92-0163-05	BEADS CORE	
L13 ,14			L92-0408-05	CHIP FERRITE	
L15 ,16			L92-0163-05	BEADS CORE	
L17 ,18			L92-0162-05	BEADS CORE	
L19		*	L92-0446-05	BEADS CORE	
L22 -24		*	L92-0446-05	BEADS CORE	
L25			L92-0138-05	CHIP FERRITE	
L26			L92-0161-05	BEADS CORE	
L27 ,28		*	L92-0446-05	BEADS CORE	
L29			L92-0161-05	BEADS CORE	
L30		*	L92-0446-05	BEADS CORE	
L31			L92-0140-05	CHIP FERRITE	
L101,102		*	L41-1085-30	SMALL FIXED INDUCTOR	
L103			L92-0140-05	CHIP FERRITE	
L104			L40-5675-92	SMALL FIXED INDUCTOR(56NH)	
L105			L40-1863-92	SMALL FIXED INDUCTOR(1.8NH)	
L106			L92-0149-05	CHIP FERRITE	
L107			L40-3975-92	SMALL FIXED INDUCTOR(39NH)	
L108			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	
L109			L92-0149-05	CHIP FERRITE	
L110			L34-4577-05	AIR-CORE COIL	
L111			L34-4650-05	AIR-CORE COIL	
L113			L34-4567-05	AIR-CORE COIL	
L114			L40-2295-85	SMALL FIXED INDUCTOR(2.2UH)	
L115,116			L34-4576-05	AIR-CORE COIL	
L118			L34-4577-05	AIR-CORE COIL	
L119,120			L34-4576-05	AIR-CORE COIL	
L121			L41-8285-14	SMALL FIXED INDUCTOR	
L122,123		*	L92-0446-05	BEADS CORE	
L124			L40-5675-71	SMALL FIXED INDUCTOR(56NH)	
L125,126			L34-4577-05	AIR-CORE COIL	
L201			L34-4492-05	COIL	

Ref. No.	Address	New parts	Parts No.	Description	Destination
L202			L34-4493-05	COIL	
L203			L41-6885-14	SMALL FIXED INDUCTOR	
L204			L34-4493-05	COIL	
L205			L34-4492-05	COIL	
L206,207			L40-3975-71	SMALL FIXED INDUCTOR(39NH)	
L210			L41-4778-14	SMALL FIXED INDUCTOR	
L211,212			L39-1272-05	TOROIDAL COIL	
L213			L92-0163-05	BEADS CORE	
L214			L39-1272-05	TOROIDAL COIL	
L216,217			L41-5685-14	SMALL FIXED INDUCTOR	
L218			L40-6881-37	SMALL FIXED INDUCTOR(0.680UH)	
L219			L40-1885-92	SMALL FIXED INDUCTOR(180NH)	
L220			L40-1091-86	SMALL FIXED INDUCTOR(1.0UH)	
L221			L41-1585-14	SMALL FIXED INDUCTOR	
L222			L41-1085-14	SMALL FIXED INDUCTOR	
L224			L41-2278-14	SMALL FIXED INDUCTOR	
L302		*	L92-0446-05	BEADS CORE	
L303			L40-4795-85	SMALL FIXED INDUCTOR(4.7UH)	
L304-307			L40-1001-86	SMALL FIXED INDUCTOR(10UH)	
L308,309			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L310			L92-0163-05	BEADS CORE	
L311			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L312		*	L41-3985-20	SMALL FIXED INDUCTOR	
L313		*	L92-0446-05	BEADS CORE	
L314			L33-1267-05	SMALL FIXED INDUCTOR	
L315			L40-1875-71	SMALL FIXED INDUCTOR(18NH)	
L316			L33-0751-05	SMALL FIXED INDUCTOR	
L317			L40-1575-71	SMALL FIXED INDUCTOR(15NH)	
L318			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L319			L40-1075-71	SMALL FIXED INDUCTOR(10NH)	
L320		*	L41-3985-20	SMALL FIXED INDUCTOR	
L321,322			L40-2285-92	SMALL FIXED INDUCTOR(220NH)	
L323			L40-3975-71	SMALL FIXED INDUCTOR(39NH)	
L324		*	L92-0446-05	BEADS CORE	
L325			L40-4775-71	SMALL FIXED INDUCTOR(47NH)	
L327			L40-8275-71	SMALL FIXED INDUCTOR(82NH)	
L330		*	L92-0446-05	BEADS CORE	
L401			L92-0136-05	CHIP FERRITE	
L402,403			L92-0408-05	CHIP FERRITE	
L404			L92-0149-05	CHIP FERRITE	
L405			L92-0140-05	CHIP FERRITE	
L406		*	L92-0446-05	BEADS CORE	
L601			L92-0149-05	CHIP FERRITE	
L602-605			L92-0408-05	CHIP FERRITE	
L606,607			L92-0163-05	BEADS CORE	
L701-703		*	L92-0446-05	BEADS CORE	K
L701-706		*	L92-0446-05	BEADS CORE	K2,K3
L801		*	L33-1462-05	SMALL FIXED INDUCTOR	
L802		*	L33-1469-05	SMALL FIXED INDUCTOR	
L803		*	L33-1462-05	SMALL FIXED INDUCTOR	
X1			L77-1802-05	CRYSTAL RESONATOR(32768HZ)	
X2		*	L77-1962-05	VCXO(18.432M)	
X201		*	L77-1961-05	VCXO(16.8MHZ)	
X301		*	L77-1960-05	VCXO(16.8MHZ)	
XF201		*	L71-0551-45	MCF(49.95MHZ)	
CP3			R90-0743-05	MULTIPLE RESISTOR	
CP6			R90-0745-05	MULTIPLE RESISTOR	
CP7			R90-0743-05	MULTIPLE RESISTOR	
CP8 ,9			R90-0741-05	MULTIPLE RESISTOR	

PARTS LIST

TX-RX UNIT (X57-6820-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
CP10-12			R90-0743-05	MULTIPLE RESISTOR	
CP301,302			R90-0741-05	MULTIPLE RESISTOR	
R1			R92-1368-05	CHIP R 0 OHM	
R2			RK73HB1J473J	CHIP R 47K J 1/16W	
R3			RK73HB1J104J	CHIP R 100K J 1/16W	
R4 ,5			RK73HB1J473J	CHIP R 47K J 1/16W	
R6			RK73HB1J474J	CHIP R 470K J 1/16W	
R7			RK73HB1J100J	CHIP R 10 J 1/16W	
R8			RK73HB1J104J	CHIP R 100K J 1/16W	
R9 -11			RK73HB1J474J	CHIP R 470K J 1/16W	
R12			RK73HB1J124J	CHIP R 120K J 1/16W	
R13			RK73HB1J473J	CHIP R 47K J 1/16W	
R14			RK73HB1J100J	CHIP R 10 J 1/16W	
R15			RK73HH1J224D	CHIP R 220K D 1/16W	
R16			RK73HH1J104D	CHIP R 100K D 1/16W	
R18			RK73HB1J103J	CHIP R 10K J 1/16W	
R19			RK73HB1J473J	CHIP R 47K J 1/16W	
R20			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R21 ,22			RK73HB1J474J	CHIP R 470K J 1/16W	
R23			RK73HB1J473J	CHIP R 47K J 1/16W	
R24 ,25			RK73HB1J474J	CHIP R 470K J 1/16W	
R26			RK73HB1J104J	CHIP R 100K J 1/16W	
R27			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R28 -30			RK73HB1J473J	CHIP R 47K J 1/16W	
R31 ,32			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R33 ,34			RK73HB1J473J	CHIP R 47K J 1/16W	
R35			RK73HB1J471J	CHIP R 470 J 1/16W	
R36			RK73HB1J473J	CHIP R 47K J 1/16W	
R37			R92-1368-05	CHIP R 0 OHM	
R38			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R39			RK73HB1J473J	CHIP R 47K J 1/16W	
R40			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R41			RK73HB1J104J	CHIP R 100K J 1/16W	
R42			RK73HB1J473J	CHIP R 47K J 1/16W	
R43			R92-1368-05	CHIP R 0 OHM	
R44			RK73HB1J473J	CHIP R 47K J 1/16W	
R45			R92-1368-05	CHIP R 0 OHM	
R46			RK73HB1J473J	CHIP R 47K J 1/16W	
R47			RK73HB1J103J	CHIP R 10K J 1/16W	
R48			RK73HB1J474J	CHIP R 470K J 1/16W	
R49			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R50			RK73HB1J474J	CHIP R 470K J 1/16W	
R51			RK73HB1J471J	CHIP R 470 J 1/16W	
R52			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R54			RK73HB1J103J	CHIP R 10K J 1/16W	
R55			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R56			RK73HB1J470J	CHIP R 47 J 1/16W	
R57			RK73HB1J474J	CHIP R 470K J 1/16W	
R58			RK73HB1J104J	CHIP R 100K J 1/16W	
R60			RK73HB1J474J	CHIP R 470K J 1/16W	
R61			RK73HB1J104J	CHIP R 100K J 1/16W	
R62			RK73HB1J471J	CHIP R 470 J 1/16W	
R63			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R64			RK73HB1J474J	CHIP R 470K J 1/16W	
R65			RK73HB1J473J	CHIP R 47K J 1/16W	
R66			RK73HB1J104J	CHIP R 100K J 1/16W	
R68			RK73HB1J473J	CHIP R 47K J 1/16W	
R71			RK73HB1J474J	CHIP R 470K J 1/16W	
R72			RK73HB1J470J	CHIP R 47 J 1/16W	
R74			RK73HB1J470J	CHIP R 47 J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R75			RK73HB1J474J	CHIP R 470K J 1/16W	
R76			RK73HB1J470J	CHIP R 47 J 1/16W	
R77			RK73HB1J183J	CHIP R 18K J 1/16W	
R78			RK73HB1J474J	CHIP R 470K J 1/16W	
R79			RK73HB1J100J	CHIP R 10 J 1/16W	
R81			RK73HB1J470J	CHIP R 47 J 1/16W	
R82			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R83			RK73HB1J473J	CHIP R 47K J 1/16W	
R85			RK73HB1J104J	CHIP R 100K J 1/16W	
R87			RK73HB1J104J	CHIP R 100K J 1/16W	
R89			RK73HB1J100J	CHIP R 10 J 1/16W	
R91 -98			RK73HB1J101J	CHIP R 100 J 1/16W	
R99			RK73HB1J474J	CHIP R 470K J 1/16W	
R101			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R102			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R103			RK73HB1J103J	CHIP R 10K J 1/16W	
R104			RK73HB1J330J	CHIP R 33 J 1/16W	
R105			RK73HB1J331J	CHIP R 330 J 1/16W	
R106			RK73HB1J220J	CHIP R 22 J 1/16W	
R107			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R108			RK73HB1J471J	CHIP R 470 J 1/16W	
R109			RK73HB1J330J	CHIP R 33 J 1/16W	
R110			RK73HB1J331J	CHIP R 330 J 1/16W	
R111			RK73HB1J271J	CHIP R 270 J 1/16W	
R112			RK73HB1J180J	CHIP R 18 J 1/16W	
R113			RK73HB1J271J	CHIP R 270 J 1/16W	
R114			RK73HB1J101J	CHIP R 100 J 1/16W	
R115			RK73GB1J100J	CHIP R 10 J 1/16W	
R116			RK73HB1J104J	CHIP R 100K J 1/16W	
R117			RK73HB1J103J	CHIP R 10K J 1/16W	
R118			RK73HB1J104J	CHIP R 100K J 1/16W	
R119,120		*	RK73EB2HR22F	CHIP R 0.22 F 1/2W	
R121,122			RK73HH1J154D	CHIP R 150K D 1/1	
R123			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R124			RK73HH1J154D	CHIP R 150K D 1/1	
R125			RK73GB1J103J	CHIP R 10K J 1/16W	
R126			RK73GB1J101J	CHIP R 100 J 1/16W	
R127-129			RK73HH1J154D	CHIP R 150K D 1/1	
R130			RK73HB1J333J	CHIP R 33K J 1/16W	
R131			RK73HB1J103J	CHIP R 10K J 1/16W	
R132			RK73FB2A3R3J	CHIP R 3.3 J 1/10W	
R133			RK73HB1J103J	CHIP R 10K J 1/16W	
R134			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R135			RK73HB1J473J	CHIP R 47K J 1/16W	
R136			RK73HB1J184J	CHIP R 180K J 1/16W	
R137			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R140			RK73GB1J271J	CHIP R 270 J 1/16W	
R142			RK73GB1J271J	CHIP R 270 J 1/16W	
R144			R92-1252-05	CHIP R 0 OHM J 1/16W	
R147			RK73HB1J183J	CHIP R 18K J 1/16W	
R149			RK73HB1J103J	CHIP R 10K J 1/16W	
R150			RK73GB1J272J	CHIP R 2.7K J 1/16W	
R152			RK73HB1J103J	CHIP R 10K J 1/16W	
R153			RK73HB1J474J	CHIP R 470K J 1/16W	
R156			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R157			RK73HB1J333J	CHIP R 33K J 1/16W	
R158			R92-0670-05	CHIP R 0 OHM	
R159			RK73HB1J104J	CHIP R 100K J 1/16W	
R160			RK73HB1J473J	CHIP R 47K J 1/16W	
R201			RK73HB1J473J	CHIP R 47K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-6820-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R202			RK73HB1J103J	CHIP R 10K J 1/16W	
R203			RK73HH1J104D	CHIP R 100K D 1/16W	
R204			RK73HH1J274D	CHIP R 270K D 1/16W	
R205			RK73HB1J103J	CHIP R 10K J 1/16W	
R207			RK73HB1J100J	CHIP R 10 J 1/16W	
R208			RK73HB1J473J	CHIP R 47K J 1/16W	
R209			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R212,213			RK73HB1J103J	CHIP R 10K J 1/16W	
R214			RK73HB1J121J	CHIP R 120 J 1/16W	
R215			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R216			RK73HB1J100J	CHIP R 10 J 1/16W	
R217			RK73HB1J473J	CHIP R 47K J 1/16W	
R218			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R219			RK73HB1J330J	CHIP R 33 J 1/16W	
R220,221			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R222			RK73HB1J271J	CHIP R 270 J 1/16W	
R223			RK73HB1J220J	CHIP R 22 J 1/16W	
R224			RK73HB1J271J	CHIP R 270 J 1/16W	
R228			RK73HB1J271J	CHIP R 270 J 1/16W	
R229			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R231			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R233			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R234			RK73HB1J100J	CHIP R 10 J 1/16W	
R235			R92-0670-05	CHIP R 0 OHM	
R237			RK73HB1J681J	CHIP R 680 J 1/16W	
R238,239			RK73HB1J470J	CHIP R 47 J 1/16W	
R240			RK73HB1J221J	CHIP R 220 J 1/16W	
R241			R92-1252-05	CHIP R 0 OHM J 1/16W	
R242			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R243			RK73HB1J684J	CHIP R 680K J 1/16W	
R244			RK73HB1J470J	CHIP R 47 J 1/16W	
R247			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R249			RK73HB1J220J	CHIP R 22 J 1/16W	
R252			RK73HB1J154J	CHIP R 150K J 1/16W	
R255			RK73HB1J153J	CHIP R 15K J 1/16W	
R256			RK73HB1J563J	CHIP R 56K J 1/16W	
R259			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R264			RK73HB1J470J	CHIP R 47 J 1/16W	
R265			RK73HH1J473D	CHIP R 47K D 1/16W	
R266			RK73HH1J104D	CHIP R 100K D 1/16W	
R268			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R269			RK73HB1J104J	CHIP R 100K J 1/16W	
R272			R92-1368-05	CHIP R 0 OHM	
R274			RK73HB1J470J	CHIP R 47 J 1/16W	
R276			RK73HB1J220J	CHIP R 22 J 1/16W	
R278			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R279-282			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R285			R92-1368-05	CHIP R 0 OHM	
R288,289			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R294			R92-0670-05	CHIP R 0 OHM	
R295			RK73HB1J473J	CHIP R 47K J 1/16W	
R303			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R306			RK73HB1J101J	CHIP R 100 J 1/16W	
R310		*	RK73HH1J184D	CHIP R 180K D 1/16W	
R311			RK73HH1J473D	CHIP R 47K D 1/16W	
R313-315			RK73HB1J100J	CHIP R 10 J 1/16W	
R316		*	RK73GB1J106J	CHIP R 10M J 1/16W	
R318			RK73HB1J333J	CHIP R 33K J 1/16W	
R319			RK73HB1J183J	CHIP R 18K J 1/16W	
R321			RK73HB1J102J	CHIP R 1.0K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R322			RK73HH1J563D	CHIP R 56K D 1/16W	
R323			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R324			RK73HB1J103J	CHIP R 10K J 1/16W	
R325			RK73HH1J104D	CHIP R 100K D 1/16W	
R326			RK73HB1J104J	CHIP R 100K J 1/16W	
R327			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R328,329			R92-1368-05	CHIP R 0 OHM	
R330			RK73HB1J474J	CHIP R 470K J 1/16W	
R331			R92-1368-05	CHIP R 0 OHM	
R334			R92-1368-05	CHIP R 0 OHM	
R335			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R336			RK73HB1J560J	CHIP R 56 J 1/16W	
R337			RK73HB1J473J	CHIP R 47K J 1/16W	
R338			RK73HB1J474J	CHIP R 470K J 1/16W	
R339			RK73HB1J220J	CHIP R 22 J 1/16W	
R340			RK73HB1J104J	CHIP R 100K J 1/16W	
R341			RK73HB1J221J	CHIP R 220 J 1/16W	
R342			RK73HB1J121J	CHIP R 120 J 1/16W	
R343			RK73HB1J101J	CHIP R 100 J 1/16W	
R344			RK73HB1J224J	CHIP R 220K J 1/16W	
R345			RK73HB1J154J	CHIP R 150K J 1/16W	
R346			RK73HB1J101J	CHIP R 100 J 1/16W	
R348			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R350			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R351			RK73HB1J103J	CHIP R 10K J 1/16W	
R352			RK73HB1J681J	CHIP R 680 J 1/16W	
R353			RK73HB1J101J	CHIP R 100 J 1/16W	
R355,356			R92-1368-05	CHIP R 0 OHM	
R359			RK73HB1J561J	CHIP R 560 J 1/16W	
R360			RK73HB1J470J	CHIP R 47 J 1/16W	
R361			RK73HB1J473J	CHIP R 47K J 1/16W	
R362			R92-1368-05	CHIP R 0 OHM	
R363			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R364			RK73HB1J104J	CHIP R 100K J 1/16W	
R366			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R368			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R369			RK73HB1J471J	CHIP R 470 J 1/16W	
R371			RK73HB1J474J	CHIP R 470K J 1/16W	
R401-405			RK73HB1J474J	CHIP R 470K J 1/16W	
R406			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R407,408			RK73HB1J474J	CHIP R 470K J 1/16W	
R409			R92-1368-05	CHIP R 0 OHM	
R410			RK73HB1J223J	CHIP R 22K J 1/16W	
R411			RK73HH1J154D	CHIP R 150K D 1/1	
R412			RK73HH1J104D	CHIP R 100K D 1/16W	
R413			RK73HB1J103J	CHIP R 10K J 1/16W	
R414			R92-1368-05	CHIP R 0 OHM	
R415			RK73HB1J223J	CHIP R 22K J 1/16W	
R416,417			RK73HB1J474J	CHIP R 470K J 1/16W	
R418			RK73HB1J333J	CHIP R 33K J 1/16W	
R419			RK73HB1J394J	CHIP R 390K J 1/16W	
R420			RK73HB1J474J	CHIP R 470K J 1/16W	
R421			RK73HB1J224J	CHIP R 220K J 1/16W	
R422			RK73HB1J223J	CHIP R 22K J 1/16W	
R423			RK73HB1J471J	CHIP R 470 J 1/16W	
R424			RK73HB1J474J	CHIP R 470K J 1/16W	
R425			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R426			RK73HB1J333J	CHIP R 33K J 1/16W	
R427			R92-1368-05	CHIP R 0 OHM	
R428			RK73HB1J224J	CHIP R 220K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-6820-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R429			RK73HB1J474J	CHIP R 470K J 1/16W	
R430			RK73HB1J333J	CHIP R 33K J 1/16W	
R431			RK73HB1J474J	CHIP R 470K J 1/16W	
R432			RK73HB1J124J	CHIP R 120K J 1/16W	
R433			RK73HB1J100J	CHIP R 10 J 1/16W	
R434			RK73HB1J473J	CHIP R 47K J 1/16W	
R435			RK73HB1J474J	CHIP R 470K J 1/16W	
R436			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R437			RK73HB1J474J	CHIP R 470K J 1/16W	
R438			RK73HB1J103J	CHIP R 10K J 1/16W	
R440			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R441			RK73HB1J224J	CHIP R 220K J 1/16W	
R442			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R443			RK73HB1J220J	CHIP R 22 J 1/16W	
R444			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R445			R92-1368-05	CHIP R 0 OHM	
R446			RK73HB1J100J	CHIP R 10 J 1/16W	
R447			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R448			RK73HB1J104J	CHIP R 100K J 1/16W	
R450,451			RK73HB1J473J	CHIP R 47K J 1/16W	
R452			RK73HB1J683J	CHIP R 68K J 1/16W	
R454			RK73HB1J473J	CHIP R 47K J 1/16W	
R455			RK73HB1J184J	CHIP R 180K J 1/16W	
R456			RK73HB1J473J	CHIP R 47K J 1/16W	
R457			RK73HB1J102J	CHIP R 1K J 1/16W	
R458			RK73HB1J333J	CHIP R 33K J 1/16W	
R459			RK73HB1J474J	CHIP R 470K J 1/16W	
R460			RK73HB1J473J	CHIP R 47K J 1/16W	
R461			RK73HB1J333J	CHIP R 33K J 1/16W	
R462			RK73HB1J124J	CHIP R 120K J 1/16W	
R463			RK73HB1J473J	CHIP R 47K J 1/16W	
R464			RK73HB1J223J	CHIP R 22K J 1/16W	
R465			RK73HB1J393J	CHIP R 39K J 1/16W	
R466,467			RK73HB1J333J	CHIP R 33K J 1/16W	
R468			RK73HB1J154J	CHIP R 150K J 1/16W	
R469			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R470			RK73HB1J124J	CHIP R 120K J 1/16W	
R472			R92-1368-05	CHIP R 0 OHM	
R473			RK73HB1J474J	CHIP R 470K J 1/16W	
R474			RK73HB1J393J	CHIP R 39K J 1/16W	
R475			R92-1368-05	CHIP R 0 OHM	
R476			RK73HB1J100J	CHIP R 10 J 1/16W	
R477			R92-1368-05	CHIP R 0 OHM	
R478			RK73HB1J103J	CHIP R 10K J 1/16W	
R479			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R480			RK73HB1J474J	CHIP R 470K J 1/16W	
R481			RK73HB1J104J	CHIP R 100K J 1/16W	
R483,484			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R486			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R488-490			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R491-498			RK73HB1J101J	CHIP R 100 J 1/16W	K2,K3
R499			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R500			R92-1368-05	CHIP R 0 OHM	
R501			RK73HB1J101J	CHIP R 100 J 1/16W	K2,K3
R502			RK73HB1J471J	CHIP R 470 J 1/16W	
R503			RK73HB1J101J	CHIP R 100 J 1/16W	K2,K3
R505			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R506			RK73HB1J104J	CHIP R 100K J 1/16W	
R507			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R514			RK73GB1J103J	CHIP R 10K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R515			RK73HB1J104J	CHIP R 100K J 1/16W	
R516			RK73HB1J124J	CHIP R 120K J 1/16W	
R517			RK73HB1J101J	CHIP R 100 J 1/16W	K2,K3
R518			R92-1368-05	CHIP R 0 OHM	
R519			RK73HB1J474J	CHIP R 470K J 1/16W	
R520			R92-1368-05	CHIP R 0 OHM	
R521			RK73HB1J104J	CHIP R 100K J 1/16W	
R522,523			RK73HB1J154J	CHIP R 150K J 1/16W	
R524			RK73HB1J103J	CHIP R 10K J 1/16W	
R525,526			RK73HB1J104J	CHIP R 100K J 1/16W	
R527			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R528			RK73HB1J104J	CHIP R 100K J 1/16W	
R530			R92-1368-05	CHIP R 0 OHM	
R533,534			RK73HB1J474J	CHIP R 470K J 1/16W	
R535			R92-1368-05	CHIP R 0 OHM	
R536			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R537			RK73HB1J104J	CHIP R 100K J 1/16W	
R539			RK73HB1J104J	CHIP R 100K J 1/16W	
R540-548			RK73HB1J470J	CHIP R 47 J 1/16W	
R549-551			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R552			RK73HB1J103J	CHIP R 10K J 1/16W	
R555,556			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R557			RK73HB1J104J	CHIP R 100K J 1/16W	
R559			RK73HB1J100J	CHIP R 10 J 1/16W	
R561			R92-1368-05	CHIP R 0 OHM	
R565-568			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R570-573			RK73HB1J100J	CHIP R 10 J 1/16W	
R574,575			RK73HB1J474J	CHIP R 470K J 1/16W	
R576,577			RK73HB1J100J	CHIP R 10 J 1/16W	
R578			R92-1368-05	CHIP R 0 OHM	
R579			RK73HB1J471J	CHIP R 470 J 1/16W	
R580			RK73HB1J474J	CHIP R 470K J 1/16W	
R583			R92-1368-05	CHIP R 0 OHM	
R585			RK73HB1J471J	CHIP R 470 J 1/16W	
R586			RK73HB1J103J	CHIP R 10K J 1/16W	
R587			RK73HB1J473J	CHIP R 47K J 1/16W	
R588			RK73HB1J470J	CHIP R 47 J 1/16W	
R589			RK73HB1J103J	CHIP R 10K J 1/16W	
R590			RK73HB1J473J	CHIP R 47K J 1/16W	
R591			RK73HB1J470J	CHIP R 47 J 1/16W	
R594,595			RK73HB1J104J	CHIP R 100K J 1/16W	
R602			RK73HB1J104J	CHIP R 100K J 1/16W	
R603			RK73HB1J470J	CHIP R 47 J 1/16W	
R604			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R605			RK73HB1J333J	CHIP R 33K J 1/16W	
R606			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R607			RK73HB1J681J	CHIP R 680 J 1/16W	
R608			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R609			RK73HB1J104J	CHIP R 100K J 1/16W	
R612			RK73HB1J154J	CHIP R 150K J 1/16W	
R613			RK73HB1J184J	CHIP R 180K J 1/16W	
R614			RK73HB1J223J	CHIP R 22K J 1/16W	
R616			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R617			RK73HB1J154J	CHIP R 150K J 1/16W	
R618			RK73HB1J470J	CHIP R 47 J 1/16W	
R619			RK73HB1J273J	CHIP R 27K J 1/16W	
R620,621			RK73HB1J223J	CHIP R 22K J 1/16W	
R622			RK73HB1J473J	CHIP R 47K J 1/16W	
R623			RK73HB1J223J	CHIP R 22K J 1/16W	
R624			RK73HB1J182J	CHIP R 1.8K J 1/16W	

PARTS LIST

TX-RX UNIT (X57-6820-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R626			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R627,628			RK73HB1J473J	CHIP R 47K J 1/16W	
R631			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R634,635			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R637			RK73HB1J470J	CHIP R 47 J 1/16W	
R638			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R640			RK73HB1J684J	CHIP R 680K J 1/16W	
R641			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R643			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R651			R92-1368-05	CHIP R 0 OHM	
R701-704			RK73HB1J102J	CHIP R 1.0K J 1/16W	K2
R701-716			RK73HB1J102J	CHIP R 1.0K J 1/16W	K3
R717,718			RK73HB1J474J	CHIP R 470K J 1/16W	
R719,720			RK73HB1J101J	CHIP R 100 J 1/16W	K2,K3
R721			RK73HB1J181J	CHIP R 180 J 1/16W	K2,K3
R722			RK73HB1J101J	CHIP R 100 J 1/16W	K3
R723			RK73HB1J181J	CHIP R 180 J 1/16W	K2,K3
R724			RK73HB1J101J	CHIP R 100 J 1/16W	K3
R727			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R728-730			RK73HB1J474J	CHIP R 470K J 1/16W	
R731-733			RK73HB1J102J	CHIP R 1.0K J 1/16W	K
R731-735			RK73HB1J102J	CHIP R 1.0K J 1/16W	K2,K3
R735			RK73HB1J102J	CHIP R 1.0K J 1/16W	K
R736			RK73HB1J471J	CHIP R 470 J 1/16W	
R737			RK73HB1J474J	CHIP R 470K J 1/16W	
R738			RK73HB1J471J	CHIP R 470 J 1/16W	
R739			RK73HB1J474J	CHIP R 470K J 1/16W	K2,K3
R740			RK73HB1J222J	CHIP R 2.2K J 1/16W	K2,K3
R741-745			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R747			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R754			RK73HB1J474J	CHIP R 470K J 1/16W	K2,K3
R756			RK73HB1J181J	CHIP R 180 J 1/16W	K2,K3
R760-762			RK73HB1J102J	CHIP R 1.0K J 1/16W	K2,K3
R760,761			RK73HB1J102J	CHIP R 1.0K J 1/16W	K
R763			RK73HH1J333D	CHIP R 33K D 1/16W	K2,K3
R764			RK73HH1J104D	CHIP R 100K D 1/16W	K2,K3
R766			RK73HB1J223J	CHIP R 22K J 1/16W	K2,K3
R767			RK73HH1J223D	CHIP R 22K D 1/16W	K2,K3
R768			RK73HB1J223J	CHIP R 22K J 1/16W	K2,K3
R803			RK73GB1J2R2J	CHIP R 2.2 J 1/16W	
R804			R92-1368-05	CHIP R 0 OHM	
R805,806			RK73GB1J2R2J	CHIP R 2.2 J 1/16W	
R807			R92-1368-05	CHIP R 0 OHM	
R808			RK73GB1J4R7J	CHIP R 4.7 J 1/16W	
R812			RK73GB1J100J	CHIP R 10 J 1/16W	
R813			R92-1368-05	CHIP R 0 OHM	
R814			R92-1252-05	CHIP R 0 OHM J 1/16W	
R815			RK73HB1J103J	CHIP R 10K J 1/16W	
R817			RK73HB1J224J	CHIP R 220K J 1/16W	
R818			RK73HB1J334J	CHIP R 330K J 1/16W	
R819			RK73HB1J124J	CHIP R 120K J 1/16W	
R825			RK73HB1J154J	CHIP R 150K J 1/16W	
R826			RK73HB1J123J	CHIP R 12K J 1/16W	
R827			RK73HH1J334D	CHIP R 330K D 1/16W	
R828			RK73HH1J223D	CHIP R 22K D 1/16W	
S901		*	S64-0406-05	LEVER SWITCH	
S902		*	S70-0496-05	TACT SWITCH	
D1			MA2S111	DIODE	
D2 ,3			NNCD6.8G	ZENER DIODE	

Ref. No.	Address	New parts	Parts No.	Description	Destination
D4 -6		*	AVRM1005C270M	VARISTOR	
D13 ,14			MA2S111	DIODE	
D101			HVC131	DIODE	
D105			HZU5CLL	ZENER DIODE	
D106-109			HVC131	DIODE	
D110,111		*	EZJZ0V500AA	VARISTOR	
D202-209			1SV273	VARIABLE CAPACITANCE DIODE	
D210			HVC131	DIODE	
D303,304			HVC376B	VARIABLE CAPACITANCE DIODE	
D306-311			1SV282	VARIABLE CAPACITANCE DIODE	
D312			1SV278	VARIABLE CAPACITANCE DIODE	
D313			MA2S111	DIODE	
D314			DA221	DIODE	
D401			1SR154-400	DIODE	
D402-404			RB706F-40	DIODE	
D405			1SS388	DIODE	
D604			NNCD6.8G	ZENER DIODE	
D608,609			1SS388	DIODE	
D701-704			IMN10	DIODE	K3
D701,702			IMN10	DIODE	K2
D717-719			IMN10	DIODE	K3
D718,719			IMN10	DIODE	K,K2
D720			DTZ3.9(B)	ZENER DIODE	K2,K3
D801			1SS301	DIODE	
D802			HRB0502A	DIODE	
D803,804			DA221	DIODE	
D805		*	CUS01	DIODE	
IC1			RV5C386A	MOS-IC	
IC2		*	AT2425610TI27	ROM IC	
IC3			S-80930CNNBG80	MOS-IC	
IC4		*	MM1522XURE	ANALOGUE IC	
IC5		*	30625MGP193GP	MICROPROCESSOR IC	
IC6		*	29LV160BE90PBT	ROM IC	
IC7		*	TC7W08FK	MOS-IC	
IC8		*	320VC5416GGU12	MICROPROCESSOR IC	
IC9			TC74VHCT244AFT	MOS-IC	
IC10			TC7W53FK	HYBRID IC	
IC11			BU4094BCFV	MOS-IC	
IC12		*	TC7WH74FK	MOS-IC	
IC13		*	EX128TQ64I	MOS-IC	
IC14		*	TC7WU04FK	MOS-IC	
IC101			TA75W01FU	MOS-IC	
IC102,103		*	MASWSS0006	ANALOGUE IC	
IC104			TC75W51FK	MOS-IC	
IC201			LMC7101BIM5	MOS-IC	
IC202			SPM5001	MOS-IC	
IC203			TC7W53FK	HYBRID IC	
IC204			TA31137FN	MOS-IC	
IC205-207			TC7W53FK	HYBRID IC	
IC208		*	TC7WU04FK	MOS-IC	
IC301			LMC7101BIM5	MOS-IC	
IC303			ADF4111BCP7	MOS-IC	
IC304		*	UPB1511TB	BI-POLAR IC	
IC401		*	XC6204B502PR	MOS-IC	
IC402			XC6204B502MR	MOS-IC	
IC403			TC75W51FK	MOS-IC	
IC404			TC7W66FK	MOS-IC	
IC405			TC75W51FK	MOS-IC	
IC406			AK4550VT	MOS-IC	

PARTS LIST

TX-RX UNIT (X57-6820-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
IC407			TC75W51FK	MOS-IC	
IC408			TC7W66FK	MOS-IC	
IC409			TC75W51FK	MOS-IC	
IC411			M62364FP	MOS-IC	
IC412			TC75W51FK	MOS-IC	
IC413			TC7W53FK	HYBRID IC	
IC414		*	MCP41100T	ANALOGUE IC	
IC415		*	TC7MB3245FK	MOS-IC	
IC416,417		*	TC7WB125FK	MOS-IC	
IC501,502		*	TC7SBD384AFU	MOS-IC	
IC601,602		*	LM4906LD	ANALOGUE IC	
IC603			TC75W51FK	MOS-IC	
IC604			TC7W66FK	MOS-IC	
IC606		*	XC6201P302MR	MOS-IC	
IC701-703			BU4094BCF	MOS-IC	
IC704			LMC7101BIM5	MOS-IC	K2,K3
IC801,802			XC6204B332M	MOS-IC	
IC803		*	XC6209B152M	MOS-IC	
IC804			XC61CC5602NR	MOS-IC	
IC805			XC6365D103M	MOS-IC	
IC806			XC6204B252M	MOS-IC	
IC807			TK11250CUCB	MOS-IC	
IC808		*	XC9101D09AKR	ANALOGUE IC	
Q1		*	UM6K1N	FET	
Q101			2SC5108(Y)	TRANSISTOR	
Q102			2SC5192	TRANSISTOR	
Q103		*	RD01MUS1	FET	
Q104			SSM3K15TE	FET	
Q105			RD07MVS1	FET	
Q106			DTA144EE	DIGITAL TRANSISTOR	
Q107			SSM3K15TE	FET	
Q110			2SJ243	FET	
Q111		*	EMD9	TRANSISTOR	
Q201			2SC4617(S)	TRANSISTOR	
Q202			3SK274*J	FET	
Q204			2SK1215(E)	FET	
Q205			2SC5108(Y)	TRANSISTOR	
Q209		*	EMD9	TRANSISTOR	
Q306			2SK879(GR,Y)	FET	
Q307			2SC4617(S)	TRANSISTOR	
Q308		*	SSM6L05FU	FET	
Q309			2SJ347	FET	
Q310,311			2SK508NV(K52)	FET	
Q312-314			2SC5108(Y)	TRANSISTOR	
Q315			2SC4617(S)	TRANSISTOR	
Q316		*	SSM6L05FU	FET	
Q401,402		*	SSM6L05FU	FET	
Q403			TPC6102	FET	
Q404			2SC4738(GR)	TRANSISTOR	
Q405			2SA1832(GR)	TRANSISTOR	
Q406			SSM3K15TE	FET	
Q407			2SJ347	FET	
Q408,409			SSM3K15TE	FET	
Q410			2SJ347	FET	
Q411			SSM3K15TE	FET	
Q412			2SC4617(S)	TRANSISTOR	
Q415		*	SSM6L05FU	FET	
Q416-418			SSM3K15TE	FET	
Q420		*	SSM6L05FU	FET	

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q601			SSM3K15TE	FET	
Q605			UMG3N	TRANSISTOR	
Q606			SSM3K15TE	FET	
Q607			UMC4N	TRANSISTOR	
Q608			2SB798(DL,DK)	TRANSISTOR	
Q609			2SJ243	FET	
Q610			SSM3K15TE	FET	
Q611			2SJ243	FET	
Q612			SSM3K15TE	FET	
Q702			SSM3K15TE	FET	
Q703,704		*	SSM6L05FU	FET	
Q705			2SC4617(S)	TRANSISTOR	K2,K3
Q706			2SB798(DL,DK)	TRANSISTOR	K2,K3
Q801			TPC6102	FET	
Q802		*	SSM5H01TU	FET	
TH101			B57331V2104J	THERMISTOR	