2. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " " are generally unavailable because they are not in our Master Spare Parts List.*
• Screw adjacent to ▽ mark on the product are used for disassembly.
• For the applying amount of lobricants or glue, follow the instructions in this manual.
(In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING

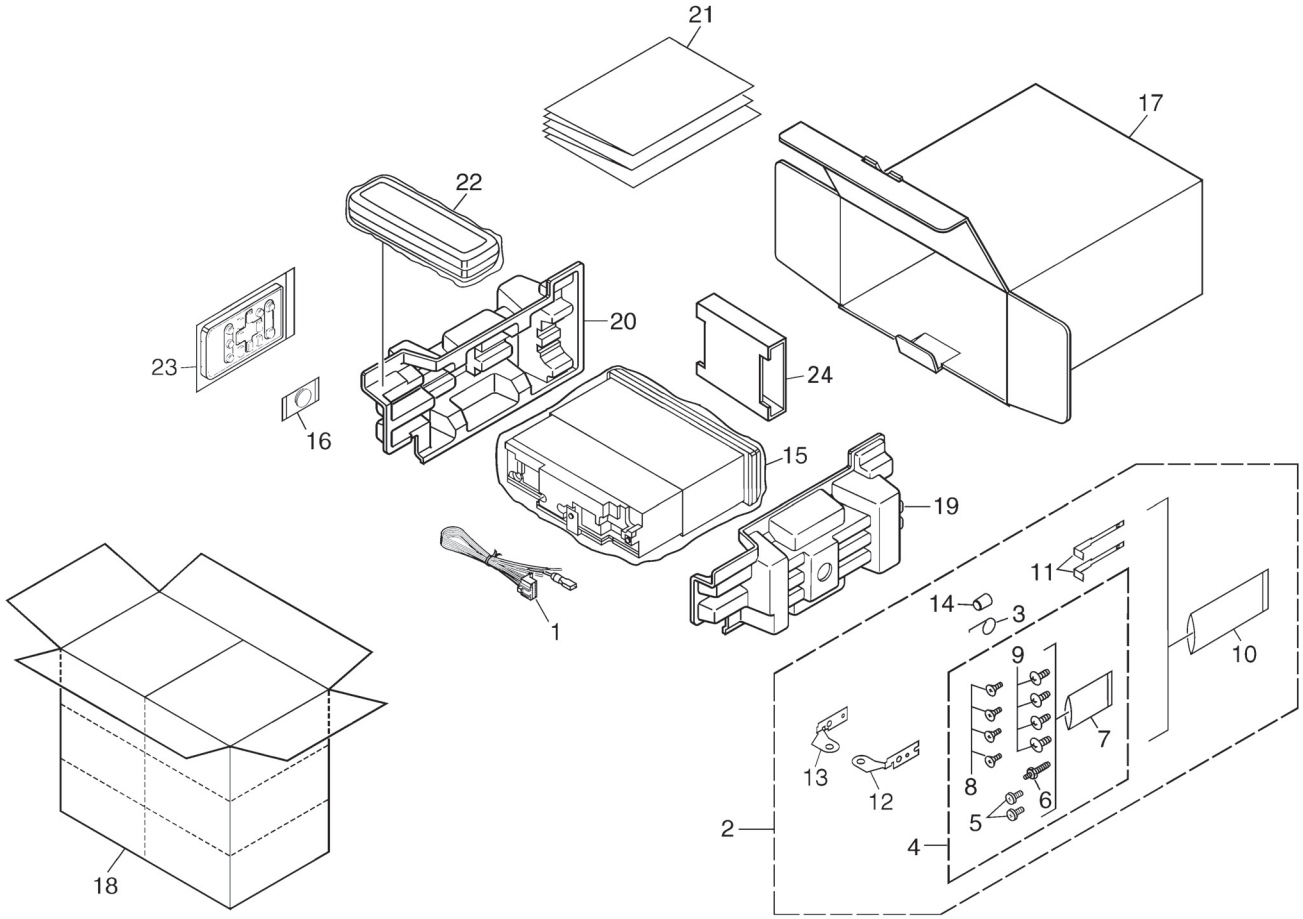

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDE7060
	2	Accessory Assy	See Contrast table(2)
	3	Spring	CBH1650
	4	Screw Assy	See Contrast table(2)
	5	Fixing Screw	See Contrast table(2)
	6	Screw	CBA1650
*	7	Polyethylene Bag	CEG-127
	8	Screw	CRZ50P090FTC
	9	Screw	TRZ50P080FTC
*	10	Polyethylene Bag	CEG-158
	11	Handle	CNC5395
	12	Holder	See Contrast table(2)
	13	Holder	See Contrast table(2)
	14	Bush	CNV3930
	15	Polyethylene Bag	See Contrast table(2)

Mark	No.	Description	Part No.
*	16	Battery	CEX1065
	17	Carton	See Contrast table(2)
	18	Contain Box	See Contrast table(2)
	19	Protector	CHP2663
	20	Protector	CHP2664
	21-1	Owner's Manual	See Contrast table(2)
	21-2	Owner's Manual	See Contrast table(2)
	21-3	Installation Manual	See Contrast table(2)
*	21-4	Warranty Card	See Contrast table(2)
*	21-5	Card	See Contrast table(2)
*	21-6	Caution Card	See Contrast table(2)
	22	Case Assy	See Contrast table(2)
	23	Remote Control Unit	CXC3173
	24	Inner Box	XHW7001

(2) CONTRAST TABLE

DEH-P460MP/XM/UC, DEH-P4600MP/XM/UC and DEH-P4650MP/XM/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Parts No.		
		DEH-P460MP/XM/UC	DEH-P4600MP/XM/UC	DEH-P4650MP/XM/ES
2	Accessory Assy	CEA3376	CEA3376	CEA3439
4	Screw Assy	CEA3848	CEA3848	CEA3849
5	Fixing Screw	BPZ20P060FZK	BPZ20P060FZK	Not used
12	Holder	CND1249	CND1249	Not used
13	Holder	CND1250	CND1250	Not used
15	Polyethylene Bag	CEG1173	CEG1173	CEG-162
17	Carton	XHG7016	XHG7013	XHG7011
18	Contain Box	XHL7016	XHL7013	XHL7011
21-1	Owner's Manual	XRD7030	XRD7028	XRD7021
21-2	Owner's Manual	Not used	Not used	XRD7022
21-3	Installation Manual	XRD7031	XRD7029	XRD7023
* 21-4	Warranty Card	CRY1070	Not used	Not used
* 21-5	Card	Not used	ARY1048	Not used
* 21-6	Caution Card	Not used	CRP1294	Not used
22	Case Assy	Not used	Not used	CXB3520

● Owner's Manual, Installation Manual

Model	Parts No.	Language
DEH-P460MP/XM/UC	XRD7030	English, French, Spanish
	XRD7031	
DEH-P4600MP/XM/UC	XRD7028	
	XRD7029	
DEH-P4650MP/XM/ES	XRD7021	English, Spanish, Portuguese(B)
	XRD7022	Arabic, Traditional Chinese
	XRD7023	English, Spanish, Portuguese(B), Arabic, Traditional Chinese

2.2 EXTERIOR

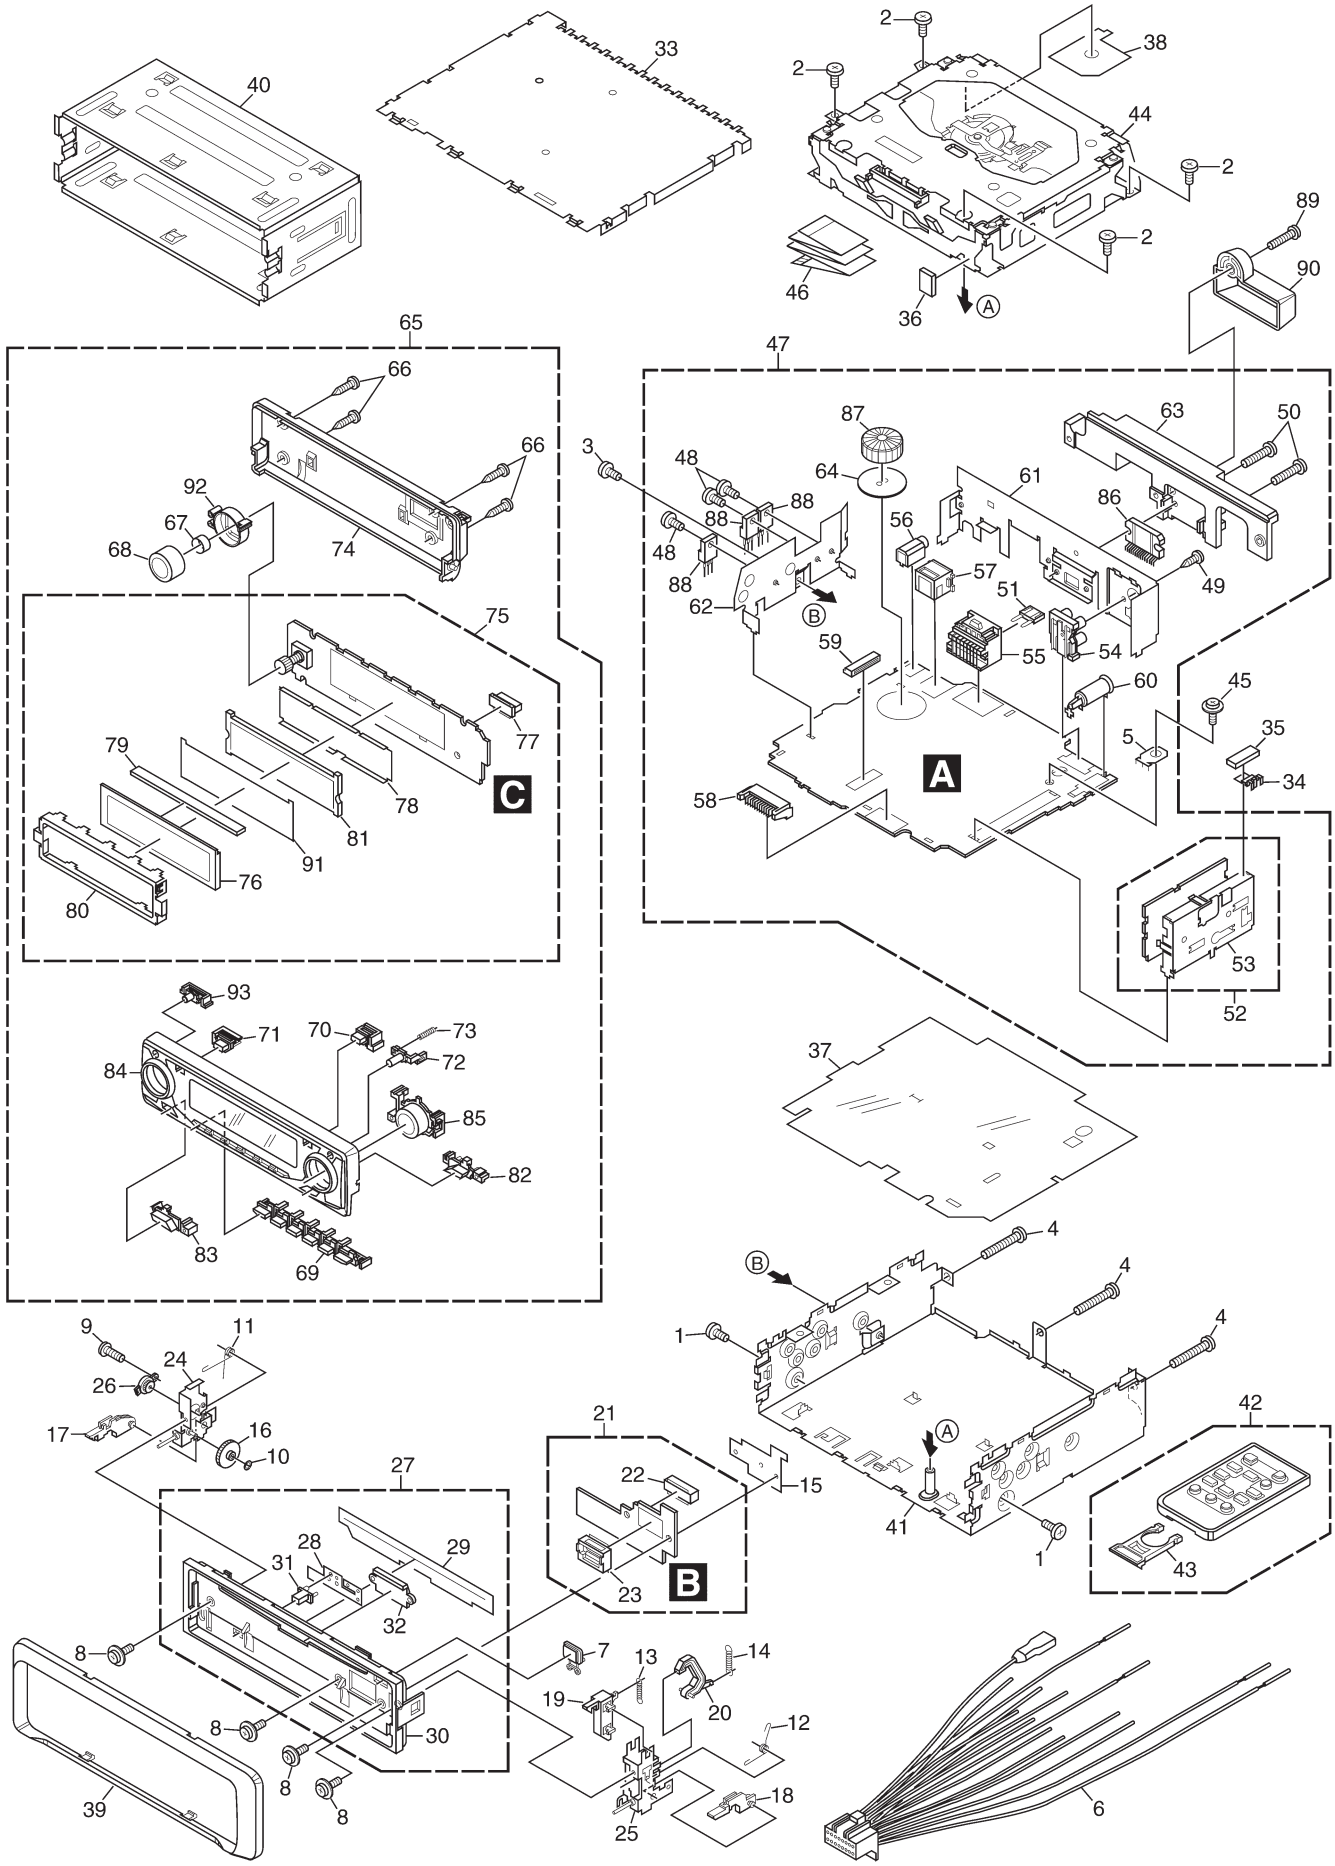

40
33
2
38
44
46
36
A
89
90
65
66
92
67
68
74
75
77
79
78
81
91
76
80
C
47
87
63
50
3
48
64
61
88
86
56
57
49
62
B
51
59
55
54
60
45
5
35
34
58
A
53
52
93
71
70
73
72
84
85
82
83
69
37
4
1
9
11
24
26
17
16
10
21
22
15
41
42
43
27
28
29
31
32
23
B
8
7
13
14
19
20
12
30
39
25
18
6

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ30P040FZK
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ30P060FTC
	4	Screw	BSZ30P200FTC
	5	Terminal(CN402)	VNF1084
	6	Cord Assy	CDE7060
	7	Button(EJECT)	CAC7752
	8	Screw(M2x4.5)	CBA1647
	9	Screw(M2x4)	CBA1649
	10	Washer	CBF1038
	11	Spring	CBH2650
	12	Spring	CBH2651
	13	Spring	CBH2652
	14	Spring	CBH2653
	15	Holder	CND1254
	16	Gear	CNV5997
	17	Arm	CNV7400
	18	Arm	CNV7401
	19	Arm	CNV7402
	20	Arm	CNV7403
	21	Panel Unit	CWM8758
	22	Socket(CN1950)	CKS3550
	23	Connector(CN1951)	CKS4806
	24	Holder Unit	CXB9501
	25	Holder Unit	CXB9502
	26	Damper Unit	CXB9503
	27	Service Panel Unit	CXX1691
	28	Spring	CBL1512
	29	Cover	CNM6854
	30	Panel	CNS7245
	31	Pin	CNV6486
	32	Lighting Conductor	CNV6487
	33	Case	CNB2870
	34	Earth Plate	CNC8915
	35	Cushion	CNM8890
	36	Insulator	CNM7682
	37	Insulator	CNM7935
	38	Insulator	CNM8174
	39	Panel	See Contrast table(2)
	40	Holder Unit	CXB6681
	41	Chassis Unit	CXB9528
	42	Remote Control Unit	CXC3173
	43	Cover	CNS7068
	44	CD Mechanism Module(S10CODE2)	CXK5665
	45	Screw	ISS26P055FTC
	46	Cable	CDE7189
	47	Tuner Amp Unit	See Contrast table(2)
	48	Screw	ASZ26P060FTC
	49	Screw	BPZ26P080FTC
	50	Screw	BSZ26P160FTC
	51	Fuse(10A)	CEK1208
	52	FM/AM Tuner Unit	CWE1646
	53	Holder	CND1054
	54	Pin Jack(CN352)	See Contrast table(2)
	55	Plug(CN981)	CKM1376
	56	Connector(CN801)	See Contrast table(2)
	57	Connector(CN101)	CKS3408
	58	Plug(CN831)	CKS3537
	59	Connector(CN721)	CKS3837
	60	Antenna Jack(CN401)	CKX1056
	61	Holder	See Contrast table(2)
	62	Holder	CND1352
	63	Heat Sink	CNR1668
	64	Insulator	XNM7031
	65	Detachable Assy	See Contrast table(2)
	66	Screw	BPZ20P100FZK
	67	Spring	CBL1470
	68	Knob	See Contrast table(2)
	69	Button(1-6)	XAC7005
	70	Button(LOUD)	XAC7020
	71	Button(PAUSE)	XAC7019
	72	Button(OPEN)	See Contrast table(2)
	73	Spring	XBH7001
	74	Cover	XNS7013
	75	Keyboard Unit	See Contrast table(2)
	76	LCD(LCD1901)	See Contrast table(2)
	77	Connector(CN1901)	CKS4524
	78	Sheet	XNM7006
	79	Connector	XNV7006
	80	Holder	XNC7002
	81	Lighting Conductor	XNV7005
	82	Button(BAND)	XAC7021
	83	Button(EQ)	XAC7022
	84	Sub Grille Assy	See Contrast table(2)
	85	Sub Button Assy(SELECT)	See Contrast table(2)
	86	IC(IC301)	PAL007A
	87	Choke Coil(L981)	CTH1280
	88	Transistor(Q752,901,911)	2SD2375
	89	Screw	See Contrast table(2)
	90	Holder	See Contrast table(2)
	91	Sheet	See Contrast table(2)
*	92	Lighting Conductor	XNV7012
	93	Button(CLOCK)	See Contrast table(2)

(2) CONTRAST TABLE

DEH-P460MP/XM/UC, DEH-P4600MP/XM/UC and DEH-P4650MP/XM/ES are constructed the same except for the following:

Mark No.	Symbol and Description	Parts No.		
		DEH-P460MP/XM/UC	DEH-P4600MP/XM/UC	DEH-P4650MP/XM/ES
39	Panel	CNS6935	XNS7070	CNS6935
47	Tuner Amp Unit	XWM7023	XWM7023	XWM7024
54	Pin Jack(CN352)	CKB1051	CKB1051	CKB1057(CN351)
56	Connector(CN801)	CKS4124	CKS4124	Not used
61	Holder	CND1325	CND1325	CND1237
65	Detachable Assy	XXA7132	XXA7133	XXA7134
68	Knob	XAA7009	XAA7003	XAA7009
72	Button(OPEN)	XAC7026	XAC7012	XAC7026
75	Keyboard Unit	XWM7031	XWM7031	XWM7032
76	LCD(LCD1901)	XAW7004	XAW7004	XAW7002
84	Sub Grille Assy	XXA7147	XXA7148	XXA7149
85	Sub Button Assy(SELECT)	XXA7229	XXA7228	XXA7229
89	Screw	Not used	BMZ40P140FTC	Not used
90	Holder	Not used	CNV7619	Not used
91	Sheet	Not used	Not used	XNM7008
93	Button(CLOCK)	XAC7016	XAC7024	XAC7016

2.3 CD MECHANISM MODULE

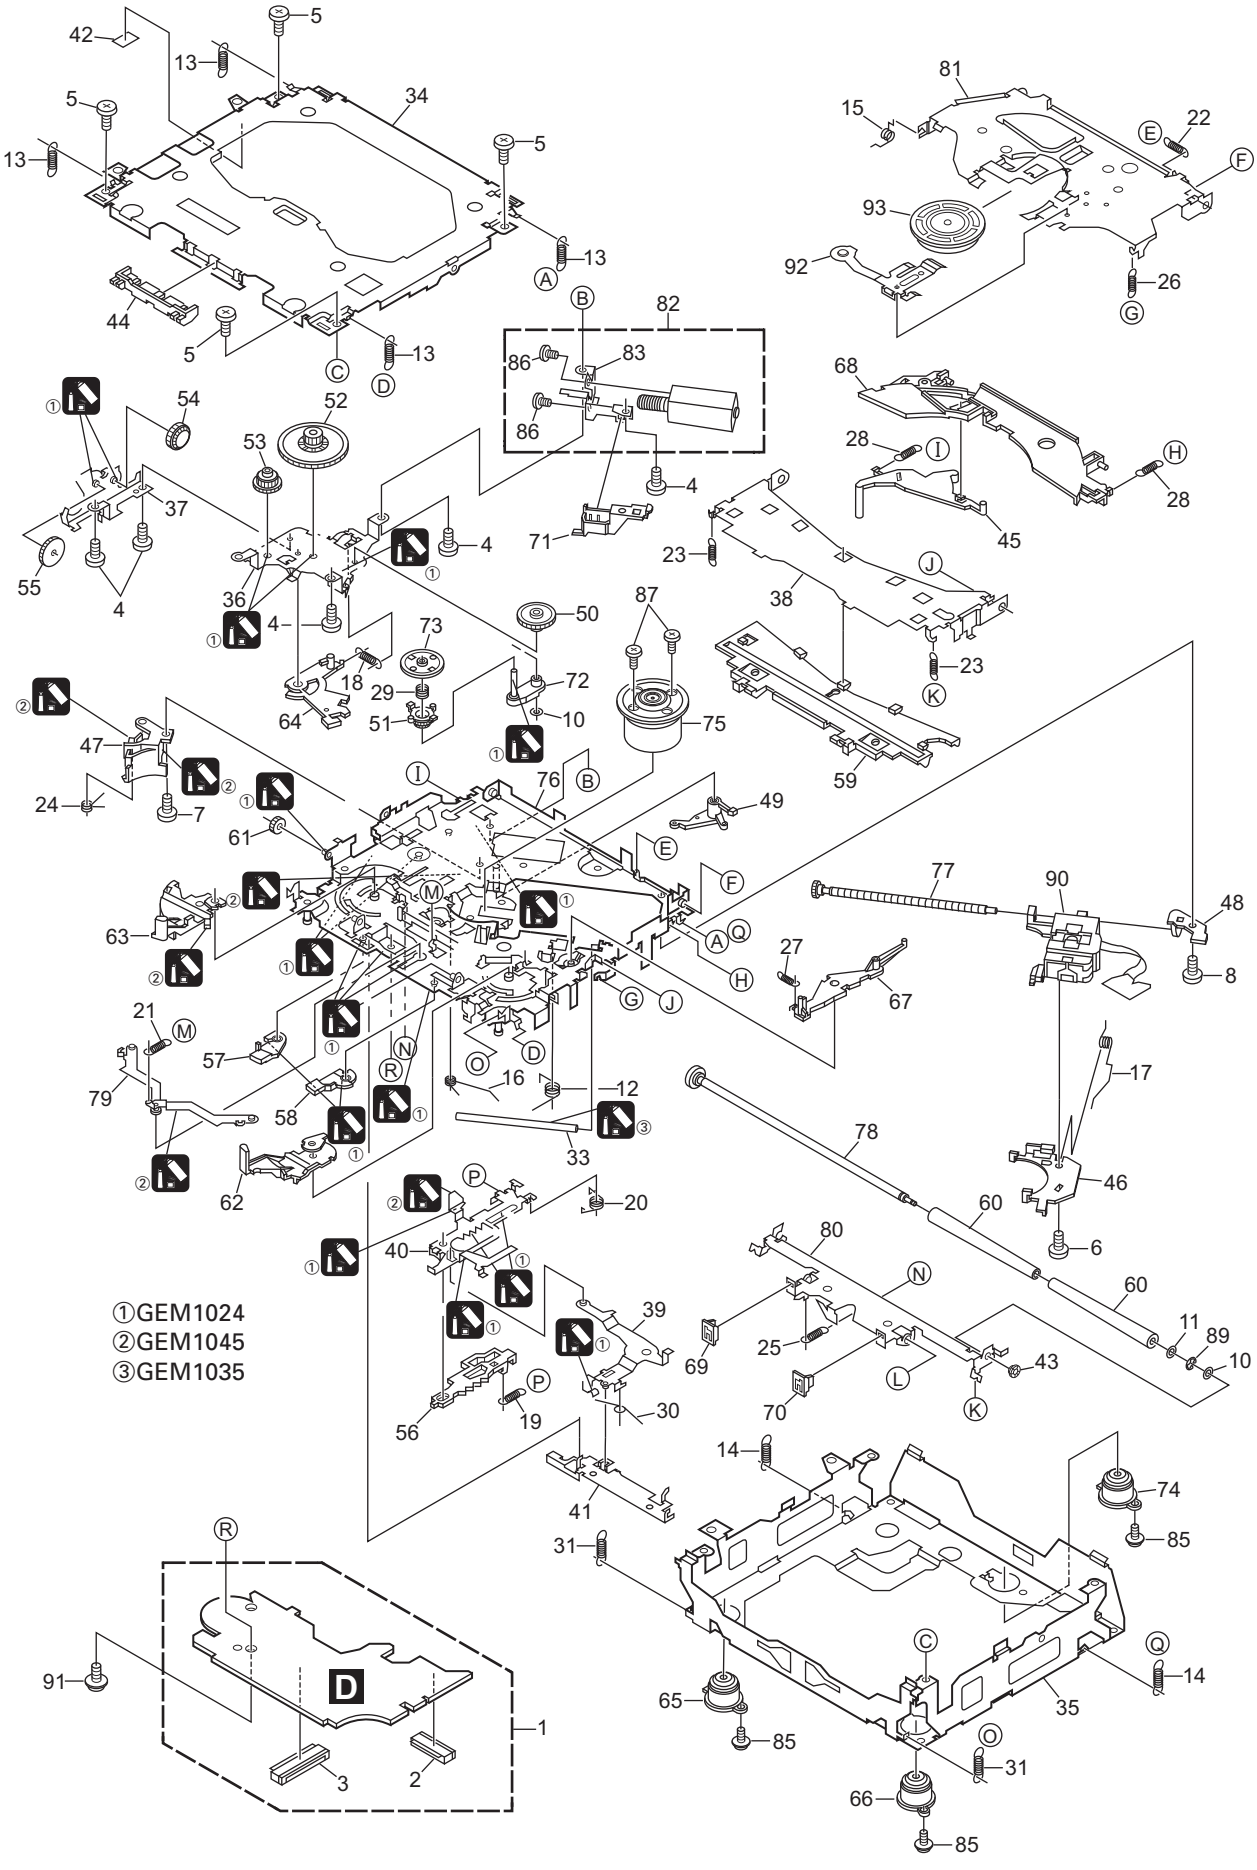

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10WMA)	CWX2851
	2	Connector(CN101)	CKS4182
	3	Connector(CN901)	CKS4017
	4	Screw	BMZ20P035FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1511
	8	Screw(M2x3)	CBA1527
	9	•••••	
	10	Washer	CBF1038
	11	Washer	CBF1060
	12	Spring	CBH2390
	13	Spring	CBH2606
	14	Spring	CBH2607
	15	Spring	CBH2608
	16	Spring	CBH2609
	17	Spring	CBH2610
	18	Spring	CBH2735
	19	Spring	CBH2612
	20	Spring	CBH2613
	21	Spring	CBH2614
	22	Spring	CBH2615
	23	Spring	CBH2616
	24	Spring	CBH2617
	25	Spring	CBH2620
	26	Spring	CBH2621
	27	Spring	CBH2641
	28	Spring	CBH2642
	29	Spring	CBH2643
	30	Spring	CBH2659
	31	Spring	CBH2688
	32	•••••	
	33	Shaft	CLA4441
	34	Frame	CNC9962
	35	Frame	CNC9963
	36	Bracket	CNC9966
	37	Bracket	CND1895
	38	Arm	CNC9968
	39	Arm	CND1909
	40	Lever	CND2032
	41	Lever	CNC9984
	42	Sheet	CNM8134
	43	Collar	CNV7798
	44	Guide	CNV7799
	45	Arm	CNV7800
	46	Rack	CNV7199
	47	Holder	CNV7201
	48	Holder	CNV7202
	49	Arm	CNV7203
	50	Gear	CNV7207
	51	Gear	CNV7208
	52	Gear	CNV7209
	53	Gear	CNV7210
	54	Gear	CNV7211
	55	Gear	CNV7212
	56	Rack	CNV7214
	57	Arm	CNV7215
	58	Arm	CNV7216
	59	Guide	CNV7217
	60	Roller	CNV7218
	61	Gear	CNV7219
	62	Arm	CNV7221
	63	Arm	CNV7220
	64	Arm	CNV7222
	65	Damper	CNV7313
	66	Damper	CNV7314
	67	Arm	CNV7341
	68	Arm	CNV7342
	69	Guide	CNV7360
	70	Guide	CNV7361
	71	Holder	CNV7437
	72	Arm	CNV7805
	73	Gear	CNV7595
	74	Damper	CNV7618
	75	Motor Unit(M1)	CXB6007
	76	Chassis Unit	CXC2318
	77	Screw Unit	CXB8729
	78	Gear Unit	CXC2397
	79	Arm Unit	CXC2316
	80	Arm	CND1896
	81	Arm	CND1894
	82	Motor Unit(M2)	CXB8933
	83	Bracket	CNC9985
	84	•••••	
	85	Screw(M2x5)	EBA1028
	86	Screw	JFZ20P020FTC
	87	Screw	JGZ17P022FTC
	88	•••••	
	89	Washer	YE20FTC
	90	Pickup Unit(P10)(Service)	CXX1641
	91	Screw	IMS26P030FTC
	92	Spring	CBL1635
	93	Clamper	CNV7197

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

Chip Resistor

RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A

Unit Number:XWM7023(DEH-P460MP, P4600MP)
:XWM7024(DEH-P4650MP)

Unit Name:Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 101	IC	HA12240FP
IC 131	IC	PML003AM
IC 301	IC	PAL007A
IC 601	IC	PE5407A
IC 651	IC	BD4834G
IC 921	IC	NJM2391DL1-33
Q 101	Transistor	2SA1576
Q 102	Transistor	DTC124EU
Q 301	Transistor	DTC124EU
Q 351	Transistor	UMH3N
Q 352	Transistor (DEH-P460MP, P4600MP)	UMH3N
Q 502	Transistor	UMD2N
Q 601	Transistor	DTA114EU
Q 751	Transistor	UMD2N
Q 752	Transistor	2SD2375
Q 753	Transistor	UMD2N
Q 754	Transistor	2SD1760F5
Q 831	Transistor	DTC143EU
Q 901	Transistor	2SD2375
Q 902	Transistor	UMD2N
Q 911	Transistor	2SD2375
Q 912	Transistor	2SB1238
Q 913	Transistor	DTC114EU
Q 931	Transistor	UMX1N
Q 961	Transistor	2SB1238
Q 962	Transistor	DTC114EU
Q 971	Transistor	2SA1577
D 571	Diode	MPG06G-6415G50
D 572	Diode	MPG06G-6415G50
D 751	Diode	HZS9L(B1)
D 753	Diode	HZS6L(C1)
D 831	Diode	DAN202U
D 832	Diode	DAN202U
D 833	Diode	DAP202U
D 834	Diode	DAP202U
D 835	Diode	DAN202U
D 836	Diode	DAP202U
D 901	Diode	HZS6L(B1)
D 902	Diode	MPG06G-6415G50
D 911	Diode	HZS9L(B3)
D 931	Diode	HZS7L(C3)
D 932	Diode	HZS7L(A1)
D 981	Diode	MPG06G-6415G50
D 982	Diode	MPG06G-6415G50
L 131	Inductor	LACU2R2K
L 401	Inductor	LACU4R7K
L 404	Inductor	LACU1R0K
L 601	Inductor	LACU2R2K
L 721	Inductor	LACU2R2K
L 971	Inductor	LACU2R2K
L 981	Choke Coil 600µH	CTH1280
X 601	Radiator 12.58291MHz	CSS1402
S 831	Switch(DETACH SENSE)	CSN1039
FU351	Fuse 3A	CEK1286
	Fuse 10A	CEK1208
	FM/AM Tuner Unit	CWE1646
SP601	Buzzer	CPV1062
AR401	Surge Protector	DSP-201M-S00B

RESISTORS

R 101		RS1/16S620J
R 102		RS1/16S0R0J
R 103		RS1/16S101J
R 104		RS1/16S101J
R 105		RS1/16S181J
R 106		RS1/16S181J
R 107		RS1/16S223J
R 108		RS1/16S223J
R 109		RS1/16S102J
R 110		RS1/16S102J
R 111		RS1/16S222J
R 112		RS1/16S102J
R 113		RS1/16S332J
R 114		RS1/16S562J
R 115		RS1/16S473J
R 131		RS1/16S471J
R 132		RS1/16S471J
R 133		RAB4C102J
R 137		RS1/16S101J
R 138		RS1/16S101J
R 139		RS1/16S101J
R 140		RS1/16S101J
R 301		RS1/16S153J
R 302		RS1/16S103J
R 303		RS1/16S103J
R 304		RS1/16S331J
R 351		RS1/16S821J
R 352		RS1/16S821J

Circuit Symbol and No.		Part No.
R 353	(DEH-P460MP, P4600MP)	RS1/16S821J
R 354	(DEH-P460MP, P4600MP)	RS1/16S821J
R 359		RS1/16S223J
R 360		RS1/16S223J
R 361	(DEH-P460MP, P4600MP)	RS1/16S223J
R 362	(DEH-P460MP, P4600MP)	RS1/16S223J
R 401		RS1/16S681J
R 403		RS1/16S122J
R 404		RS1/16S681J
R 405		RS1/16S681J
R 406		RS1/16S681J
R 413		RS1/16S0R0J
R 414		RS1/16S0R0J
R 415		RS1/16S0R0J
R 416		RS1/16S0R0J
R 417		RS1/16S0R0J
R 504		RS1/16S102J
R 505		RS1/16S0R0J
R 601		RS1/16S102J
R 603		RS1/16S473J
R 605		RS1/16S102J
R 606		RS1/16S473J
R 607		RS1/16S104J
R 609	(DEH-P460MP, P4600MP)	RS1/16S103J
R 612		RS1/16S0R0J
R 615	(DEH-P460MP, P4600MP)	RS1/16S103J
R 617	(DEH-P4650MP)	RS1/16S104J
R 618	(DEH-P460MP, P4600MP)	RS1/16S104J
R 620		RS1/16S473J
R 621		RS1/16S473J
R 622		RS1/16S473J
R 623		RS1/16S473J
R 624		RS1/16S473J
R 625		RS1/16S473J
R 626		RS1/16S681J
R 627		RS1/16S681J
R 628		RS1/16S681J
R 632	(DEH-P4650MP)	RS1/16S104J
R 633	(DEH-P4650MP)	RS1/16S104J
R 640		RS1/16S0R0J
R 651		RS1/16S102J
R 652		RS1/16S183J
R 711		RS1/16S682J
R 718		RS1/16S473J
R 721		RS1/16S0R0J
R 722		RS1/16S682J
R 723		RS1/16S682J
R 724		RS1/16S682J
R 727		RS1/16S821J
R 728		RS1/16S821J
R 734		RS1/16S102J
R 738		RS1/16S0R0J
R 739		RS1/16S0R0J
R 743		RS1/16S221J
R 744		RS1/16S221J
R 745		RS1/16S221J
R 746		RS1/16S221J
R 747		RS1/16S221J
R 748		RS1/16S221J
R 751		RD1/4PU221J
R 752		RD1/4PU221J
R 755		RS1/16S331J
R 801	(DEH-P460MP, P4600MP)	RS1/16S102J
R 802	(DEH-P460MP, P4600MP)	RS1/16S102J
R 831		RS1/16S222J
R 832		RS1/16S222J
R 833		RS1/16S222J
R 834		RS1/16S222J
R 835		RS1/16S473J
R 836		RS1/16S473J
R 837		RD1/4PU391J
R 838		RS1/16S102J
R 839		RS1/16S102J
R 840		RS1/16S102J
R 841		RS1/16S102J
R 842		RS1/16S222J
R 843		RS1/16S222J
R 845		RS1/16S102J
R 846		RS1/16S102J
R 847		RS1/16S102J
R 848		RS1/16S104J
R 849		RS1/16S473J
R 901		RD1/4PU221J
R 902		RS1/16S223J
R 903		RS1/16S821J
R 904		RS1/16S821J
R 914		RS1/16S152J
R 915		RD1/4PU152J
R 916		RS1/16S223J
R 931		RS1/16S104J
R 932		RS1/16S473J
R 933		RS1/16S103J
R 934		RS1/16S473J
R 935		RS1/16S472J
R 961		RS1/16S223J
R 962		RS1/16S182J
R 963		RS1/16S1R0J
R 965		RS1/16S182J
R 971		RS1/16S153J
R 972		RS1/16S153J
R 973		RS1/16S222J
R 981		RD1/4PU102J

CAPACITORS

C 101	CKSRYB104K16
C 102	CKSRYB473K25
C 103	CKSRYB102K50
C 104	CKSRYB102K50
C 131	CEJQ1R0M50
C 132	CEJQ1R0M50
C 133	CKSRYB104K16
C 134	CKSRYB104K16
C 135	CEJQ1R0M50
C 136	CEJQ1R0M50
C 137	CEJQ1R0M50
C 138	CEJQ1R0M50
C 139	CEJQ470M16
C 140	CKSRYB104K16
C 141	CKSRYB102K50

Circuit Symbol and No.		Part No.
C 143		CEJQ100M16
C 145		CEJQ4R7M35
C 146		CEJQ4R7M35
C 147		CKSRYB153K50
C 148		CKSRYB153K50
C 172		CKSRYB102K50
C 301		CKSRYB474K10
C 302		CKSRYB474K10
C 303		CKSRYB474K10
C 304		CKSRYB474K10
C 305		CKSRYB474K10
C 306		CKSRYB474K10
C 307		CKSRYB474K10
C 308		CKSRYB474K10
C 309		CEJQ330M10
C 310	3300µF/16V	CCH1486
C 311		CKSRYB104K25
C 312		CEHAR100M16
C 313		CKSQYB225K10
C 314		CKSQYB225K10
C 317		CKSQYB105K16
C 351		CEJQ2R2M50
C 352		CEJQ2R2M50
C 353	(DEH-P460MP, P4600MP)	CEJQ2R2M50
C 354	(DEH-P460MP, P4600MP)	CEJQ2R2M50
C 401		CKSRYB103K50
C 402		CEJQ470M6R3
C 403		CKSRYB103K50
C 404		CKSRYB103K50
C 405		CEJQ101M16
C 407		CKSYB475K10
C 410		CKSRYB102K50
C 601		CKSRYB473K25
C 602		CKSRYB105K10
C 603		CCSRCH200J50
C 604		CCSRCH200J50
C 605		CEJQ4R7M35
C 606		CKSRYB104K16
C 608		CCSRCH101J50
C 609		CCSRCH470J50
C 611		CKSRYB104K16
C 652		CEJQ1R0M50
C 725		CKSRYB102K50
C 726		CKSRYB102K50
C 727	470µF/16V	CCH1331
C 751		CKSRYB224K10
C 752		CKSRYB102K50
C 753		CEJQ101M16
C 754		CKSRYB473K25
C 755		CEJQ101M16
C 901		CEJQ470M10
C 902		CKSRYB103K50
C 903		CKSRYB472K50
C 904	470µF/16V	CCH1331
C 911		CEJQ221M10
C 912		CKSRYB103K50
C 913		CEJQ101M16
C 921		CEJQ220M10
C 922		CKSRYB103K50
C 924		CEJQ4R7M35
C 931		CKSRYB104K25
C 962		CKSRYB103K50
C 971		CKSRYB104K25

C

Unit Number:XWM7031(DEH-P460MP, P4600MP)
:XWM7032(DEH-P4650MP)
Unit Name:Keyboard Unit

MISCELLANEOUS

IC 1901	IC	PD6340A
IC 1902	IC	RS-140
D 1900	Diode	DAN202U
D 1901	Diode	DAP202U
D 1915	LED	CL-195PG-CD
D 1918	LED	CL-195PG-CD
D 1919	LED	CL-195PG-CD
D 1921	LED	CL-195PG-CD
D 1922	LED	CL-195PG-CD
D 1923	LED	CL-195PG-CD
D 1924	LED	CL-195PG-CD
D 1927	LED	CL-195PG-CD
D 1950	LED	NSCW505C-3388
D 1951	LED	NSCW505C-3388
X 1901	Ceramic Resonator 4.97MHz	CSS1573
S 1901	Switch	CSG1107
S 1902	Push Switch	CSG1112
S 1903	Switch	CSG1107
S 1904	Switch	CSG1107
S 1905	Switch	CSG1107
S 1906	Switch	CSG1107
S 1907	Switch	CSG1107
S 1908	Push Switch	CSG1112
S 1909	Switch	CSG1107
S 1910	Push Switch	CSG1112
S 1911	Switch	CSG1107
S 1912	Switch	CSG1107
S 1913	Switch	CSG1107
S 1914	Switch	CSG1107
S 1915	Push Switch	CSG1112
S 1916	Switch	CSG1107
S 1917	Switch	CSG1107
S 1918	Switch	CSG1107
S 1960	Encoder(VOLUME)	XSD7001
S 1961	Push Switch	CSG1111
LCD1901	LCD (DEH-P460MP, P4600MP)	XAW7004
LCD1901	LCD (DEH-P4650MP)	XAW7002

RESISTORS

R 1900		RS1/16S222J
R 1901		RS1/16S222J
R 1902		RS1/16S2R2J
R 1904		RS1/16S121J
R 1910		RS1/16S181J
R 1911		RS1/16S181J
R 1912		RS1/16S181J
R 1913		RS1/16S181J
R 1914		RS1/16S181J
R 1915		RS1/16S181J

Circuit Symbol and No.		Part No.
R 1916		RS1/16S181J
R 1917		RS1/16S181J
R 1918		RS1/16S181J
R 1919		RS1/16S181J
R 1920		RS1/16S181J
R 1921		RS1/16S181J
R 1922		RS1/16S181J
R 1923		RS1/16S181J
R 1925		RS1/16S181J
R 1926		RS1/16S181J
R 1927		RS1/16S181J
R 1928		RS1/16S181J
R 1929		RS1/16S181J
R 1930		RS1/16S181J
R 1931		RS1/16S181J
R 1932		RS1/16S181J
R 1933		RS1/16S181J
R 1934		RS1/16S181J
R 1935		RS1/16S181J
R 1936		RS1/16S181J
R 1942		RS1/16S181J
R 1945		RS1/16S181J
R 1947		RS1/16S0R0J
R 1948		RS1/16S0R0J
R 1950		RS1/16S181J
R 1951		RS1/16S181J
R 1952		RS1/16S151J
R 1960		RS1/16S472J
R 1980		RS1/16S473J

CAPACITORS

C 1900		CKSRYB224K10
C 1902		CKSYF106Z10

B
Unit Number:CWM8758
Unit Name:Panel Unit

MISCELLANEOUS

D 1970	LED	CL220PGC
S 1970	Push Switch(EJECT)	CSG1112

RESISTORS

R 1970		RS1/16S101J
R 1971		RS1/16S101J
R 1972		RS1/16S0R0J

CAPACITORS

C 1970		CKSRYB104K16

D
Unit Number:CWX2851
Unit Name:CD CORE UNIT(S10WMA)

MISCELLANEOUS

IC 201	IC	UPD63761GJ
IC 203	IC	NJM2391DL1-33
IC 301	IC	BA5835FM
IC 501	IC	S-L2980A15MC-C6A
IC 701	IC	PE5402A
IC 703	IC	S-812C33AUA-C2N
Q 101	Transistor	2SB1132
Q 601	Transistor	IMH20
Q 603	Transistor	2SB709A
Q 701	Transistor	UN2111
D 101	Diode	1SS355
D 601	Diode	MA152WA
L 203	Inductor	CTF1389
L 207	Inductor	CTF1389
L 209	Inductor	CTF1389
L 703	Inductor	CTF1389
X 201	Ceramic Resonator 16.934MHz	CSS1603
X 701	Ceramic Resonator 4.00MHz	CSS1652
S 901	Switch(HOME)	CSN1051
S 902	Switch(CLAMP)	CSN1051
S 903	Spring Switch(DSCSNS)	CSN1052
S 904	Switch(12EJ)	CSN1051
S 905	Switch(8EJ)	CSN1051

RESISTORS

R 101		RS1/10S1R5J
R 102		RS1/10S1R5J
R 103		RS1/10S1R5J
R 104		RS1/10S1R5J
R 105		RS1/10S1R5J
R 107		RS1/16SS0R0J
R 201		RS1/16SS102J
R 202		RS1/16SS333J
R 205		RS1/16SS473J
R 207		RS1/16SS473J
R 209		RS1/16SS473J
R 214		RS1/16SS472J
R 216		RS1/16SS472J
R 218		RS1/16SS472J
R 220		RS1/16SS472J
R 221		RS1/16SS103J
R 222		RS1/16SS103J
R 223		RS1/16SS0R0J
R 224		RS1/16SS0R0J
R 225		RS1/16SS103J
R 226		RS1/16SS393J
R 227		RS1/16SS562J
R 228		RS1/16SS122J
R 229		RS1/16SS472J
R 231		RS1/16SS0R0J
R 232		RS1/16SS122J
R 233		RS1/16SS0R0J
R 240		RS1/16SS0R0J
R 241		RS1/16SS333J
R 242		RS1/16SS0R0J
R 243		RS1/16SS333J
R 245		RS1/16SS333J
R 250		RS1/16SS0R0J
R 256		RS1/16SS0R0J
R 261		RS1/16S0R0J

Circuit Symbol and No.	Part No.
R 262	RS1/16S0R0J
R 263	RS1/16S0R0J
R 264	RS1/16S0R0J
R 267	RS1/16S0R0J
R 301	RS1/16SS183J
R 302	RS1/16SS822J
R 304	RS1/16SS183J
R 305	RS1/16SS822J
R 307	RS1/16SS183J
R 308	RS1/16SS183J
R 309	RS1/16SS183J
R 310	RS1/16SS183J
R 501	RS1/16SS0R0J
R 601	RS1/16S101J
R 602	RS1/16S101J
R 603	RS1/16S223J
R 604	RS1/16S223J
R 605	RS1/16SS103J
R 606	RS1/16S0R0J
R 701	RS1/16S0R0J
R 702	RS1/16SS0R0J
R 703	RS1/16SS104J
R 704	RS1/16SS104J
R 705	RS1/16SS221J
R 706	RS1/16SS221J
R 707	RS1/16SS0R0J
R 708	RS1/16SS221J
R 709	RS1/16SS473J
R 710	RS1/16SS102J
R 711	RS1/16SS102J
R 712	RS1/16SS102J
R 713	RS1/16SS102J
R 714	RS1/16SS473J
R 715	RS1/16SS0R0J
R 716	RS1/16SS472J
R 719	RS1/16SS221J
R 720	RS1/16SS471J
R 721	RS1/16S0R0J
R 724	RS1/16S473J
R 725	RS1/16SS222J
R 726	RS1/16SS103J
R 727	RS1/16SS473J
R 729	RS1/16SS223J
R 730	RS1/16SS473J
R 731	RS1/16SS104J
R 732	RS1/16SS104J
R 733	RS1/16SS104J
R 735	RS1/16SS473J
R 737	RS1/16SS104J
R 740	RS1/16SS473J
R 742	RS1/16SS104J
R 745	RS1/16SS473J
R 746	RS1/16SS104J
R 750	RS1/16SS473J
R 754	RS1/16SS102J
R 755	RS1/16SS102J
R 756	RS1/16SS104J
R 765	RAB4CQ221J
R 769	RAB4CQ221J
R 773	RAB4CQ221J

Circuit Symbol and No.	Part No.
R 777	RS1/16SS221J
R 778	RS1/16SS221J
R 779	RS1/16SS221J
R 901	RAB4CQ221J
R 902	RS1/16S0R0J
R 905	RS1/16SS221J
R 906	RS1/16SS221J
R 908	RS1/16SS0R0J
R 910	RS1/16SS0R0J

CAPACITORS

C 101		CKSSYB104K10
C 102		CKSSYB104K10
C 103	100µF/16V	CCH1504
C 104	47µF/6.3V	CCH1506
C 105		CKSSYB104K10
C 106		CCSSCH101J50
C 107		CKSRYB224K16
C 108		CKSSYB104K10
C 110		CKSSYB104K10
C 201		CKSSYB471K50
C 202		CKSSYB104K10
C 203		CKSSYB104K10
C 204	22µF/6.3V	CCH1507
C 205		CKSSYB104K10
C 207	220µF/4V	CCH1590
C 208		CKSSYB104K10
C 209		CKSSYB104K10
C 216		CKSSYB332K50
C 217		CKSSYB104K10
C 218		CKSSYB223K16
C 219		CKSSYB104K10
C 220		CKSSYB103K16
C 221		CKSSYB104K10
C 222		CCSSCH560J50
C 223		CCSSCH5R0C50
C 224		CKSSYB104K10
C 225		CKSSYB103K16
C 226		CCSSCH680J50
C 227		CCSSCH470J50
C 228		CKSSYB682K25
C 230		CKSSYB104K10
C 232		CKSSYB104K10
C 233	10µF/6.3V	CCH1470
C 234	220µF/4V	CCH1590
C 235		CKSRYB224K16
C 237		CKSSYB104K10
C 239		CCSSCH330J50
C 242		CKSSYB104K10
C 246		CKSSYB104K10
C 250		CKSRYB102K50
C 251		CKSRYB102K50
C 260		CKSSYB104K10
C 301		CKSSYB221K50
C 302		CKSSYB221K50
C 303		CKSSYB472K25
C 304		CKSSYB103K16
C 305	100µF/16V	CCH1504
C 306		CKSSYB104K10
C 307		CKSSYB104K10

Circuit Symbol and No.		Part No.
C 501		CKSRYB224K16
C 505		CKSQYB475K6R3
C 601		CCSRCH102J50
C 602		CCSRCH102J50
C 603	4.7µF/25V	CCH1568
C 604	4.7µF/25V	CCH1568
C 701		CKSSYB104K10
C 702		CKSSYB471K50
C 703		CKSSYB103K16
C 704	4.7µF/25V	CCH1592
C 706		CKSSYB104K10
C 707		CKSSYB104K10
C 712		CKSRYB224K16
C 713		CKSSYB104K10
C 714		CKSSYB104K10
C 716		CKSSYB103K16
C 720		CKSQYB225K10
C 722		CKSRYB105K10
C 903		CKSSYB471K50
C 906		CKSRYB224K16
C 907		CKSSYB103K16
C 910		CKSQYB225K10

Miscellaneous Parts List

	Pickup Unit(P10)(Service)	CXX1641
M 1	Motor Unit(SPINDLE)	CXB6007
M 2	Motor Unit(LOADING/CARRIAGE)	CXB8933