EXPLODED VIEW (MECHANISM)

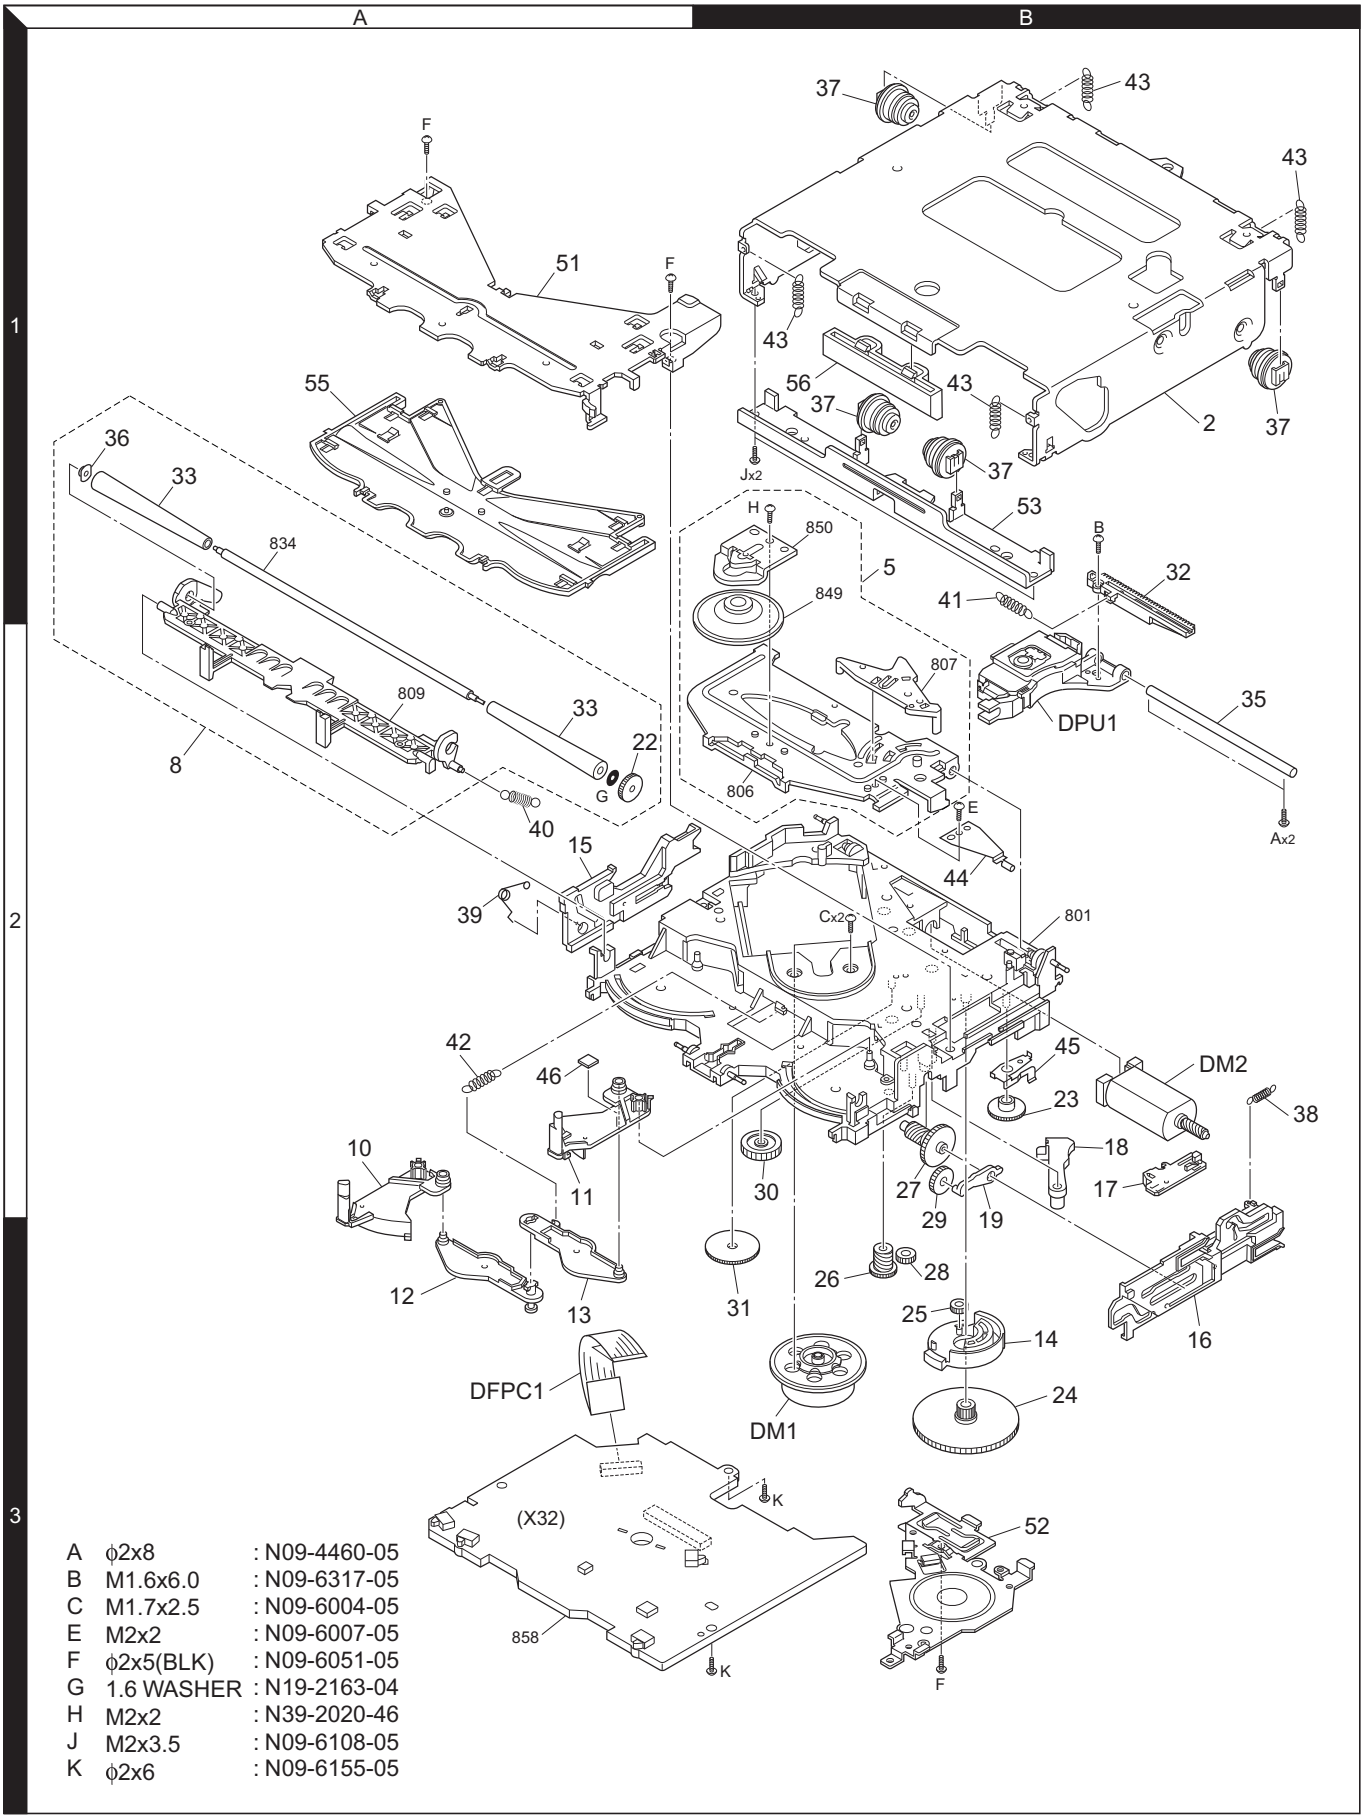

A	ϕ2x8	: N09-4460-05
B	M1.6x6.0	: N09-6317-05
C	M1.7x2.5	: N09-6004-05
E	M2x2	: N09-6007-05
F	ϕ2x5(BLK)	: N09-6051-05
G	1.6 WASHER	: N19-2163-04
H	M2x2	: N39-2020-46
J	M2x3.5	: N09-6108-05
K	ϕ2x6	: N09-6155-05

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

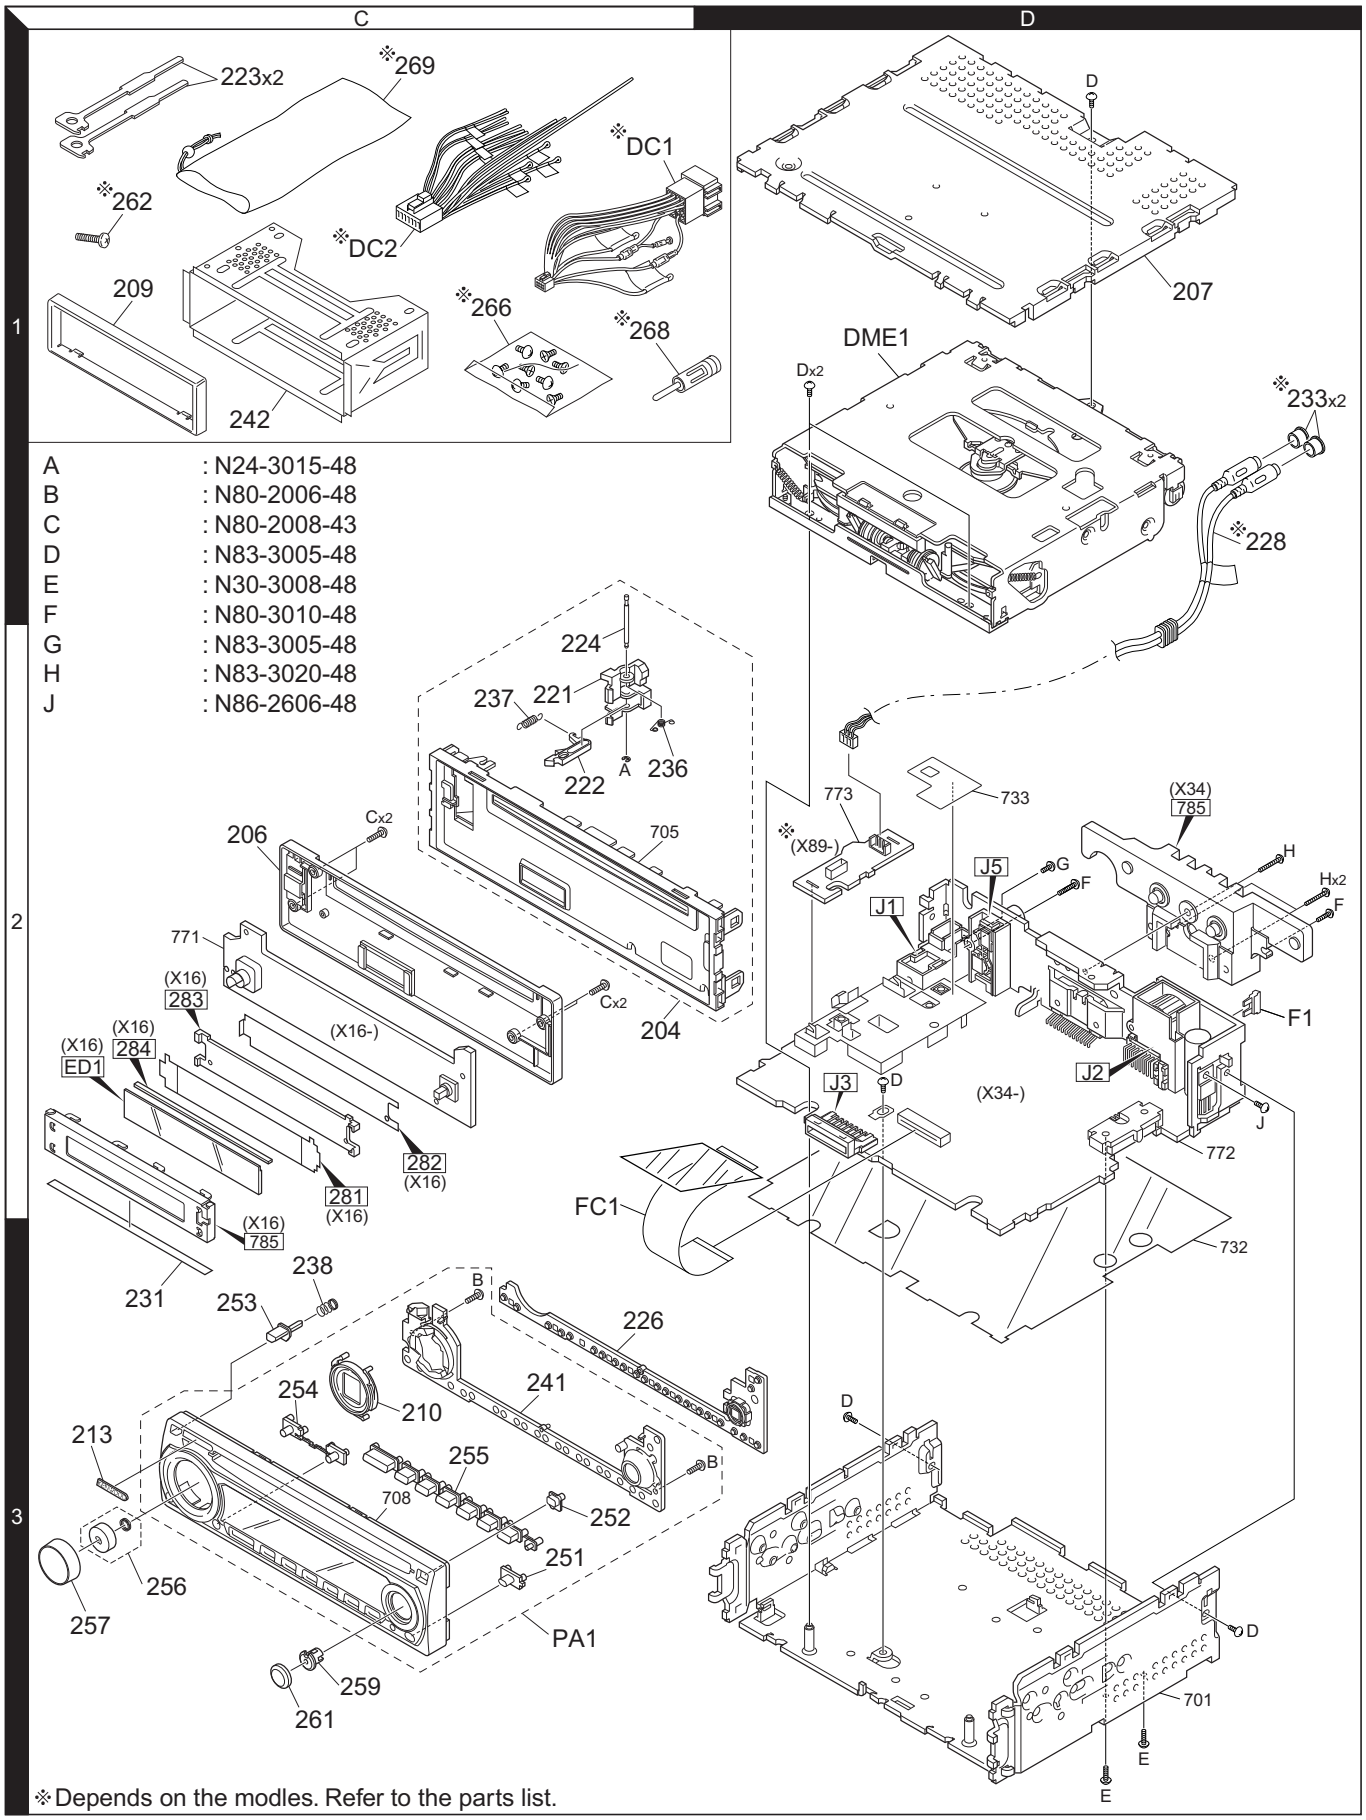

※Depends on the modles. Refer to the parts list.

A	: N24-3015-48
B	: N80-2006-48
C	: N80-2008-43
D	: N83-3005-48
E	: N30-3008-48
F	: N80-3010-48
G	: N83-3005-48
H	: N83-3020-48
J	: N86-2606-48

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KDC-1032/132/132CR/133/233/234SGY					
204	2C		A22-2863-13	SUB PANEL ASSY	
206	2C		A46-1815-01	REAR COVER	
207	1D		A52-0804-12	TOP PLATE	
PA1	3C	✻	A64-3770-02	PANEL ASSY	K
PA1	3C	✻	A64-3771-02	PANEL ASSY	K1
PA1	3C	✻	A64-3773-02	PANEL ASSY	E5
PA1	3C	✻	A64-3774-02	PANEL ASSY	M1
PA1	3C	✻	A64-3775-02	PANEL ASSY	M2
PA1	3C	✻	A64-3854-02	PANEL ASSY	K2
-		✻	B46-0681-04	ID CARD	
-			B46-0682-00	WARRANTY CARD	KK1K2
-			B46-0682-00	WARRANTY CARD	M1M2
-		✻	B64-3239-00	INST. MANUAL (ENG,SPA)	KK1K2
-		✻	B64-3245-00	INST. MANUAL (ENG,RUS)	E5
-		✻	B64-3245-00	INST. MANUAL (POL,CZE,HUN)	E5
-		✻	B64-3246-00	INST. MANUAL (CRO,SLO)	E5
-		✻	B64-3246-00	INST. MANUAL (SWE,FIN)	E5
-		✻	B64-3247-00	INST. MANUAL (ENG,T-CHI)	M1M2
-		✻	B64-3248-00	INST. MANUAL (ARABIC)	M1M2
-		✻	B64-3258-00	INST. MANUAL (FRENCH)	KK1
209	1C		B07-3122-01	ESCUTCHEON	K1K2E5
209	1C		B07-3122-01	ESCUTCHEON	M1
209	1C		B07-3123-01	ESCUTCHEON	KM2
210	3C		B19-2304-03	LIGHTING BOARD	
213	3C		B43-1518-04	BADGE	
221	2C		D10-4446-03	LEVER	
222	2C		D10-4447-03	LEVER	
223	1C		D10-4589-04	LEVER	
224	2C		D21-2329-04	SHAFT	
226	3C		E29-2027-02	CONDUCTIVE RUBBER	
228	1D	✻	E30-6499-05	CORD WITH PINPLUG	K1
⚠ DC1	1C		E30-6427-05	DC CORD	E5
⚠ DC2	1C		E30-6415-15	DC CORD	KK1K2
⚠ DC2	1C		E30-6415-15	DC CORD	M1M2
FC1	2C	✻	E39-0789-05	FLAT CABLE	
231	3C	✻	F19-1468-04	BLIND PLATE	
233	1D		F29-0626-04	INSULATING COVER	K1
⚠ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
236	2C		G01-2987-04	TORSION COIL SPRING	
237	2C		G01-3096-04	EXTENSION SPRING	
238	3C		G01-3244-04	COMPRESSION SPRING	
-			H10-4919-12	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	E5
-		✻	H25-1236-04	PROTECTION BAG (0.03X180X400)	KK1K2
-		✻	H25-1236-04	PROTECTION BAG (0.03X180X400)	M1M2
-		✻	H54-3570-03	ITEM CARTON CASE (KDC-132)	K
-		✻	H54-3571-03	ITEM CARTON CASE (KDC-1032)	K1
-		✻	H54-3576-03	ITEM CARTON CASE (KDC-234SGY)	E5
-		✻	H54-3577-03	ITEM CARTON CASE (KDC-133)	M1
-		✻	H54-3578-03	ITEM CARTON CASE (KDC-233)	M2
-		✻	H54-3583-03	ITEM CARTON CASE (KDC-132CR)	K2
241	3C		J19-7046-01	HOLDER	
242	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
251	3C		K24-4279-04	PUSH KNOB (CLK)	
252	3C		K24-4280-04	PUSH KNOB (EJECT)	
253	3C		K24-4281-04	PUSH KNOB (RELEASE)	
254	3C		K25-1689-03	PUSH KNOB (ATT/Q)	
255	3C		K25-1690-02	PUSH KNOB (SRC/PRESET/RESET)	
256	3C		K29-7132-03	KNOB ASSY (VOL)	
257	3C		K29-7135-03	KEY TOP (VOL)	K2
257	3C		K29-7136-03	KEY TOP (VOL)	KK1E5
257	3C		K29-7136-03	KEY TOP (VOL)	M1M2
259	3C		K29-7134-03	KNOB BASE (FM/AM)	
261	3C		K29-7139-03	KEY TOP (FM/AM)	K2
261	3C		K29-7140-03	KEY TOP (FM/AM)	KK1E5
261	3C		K29-7140-03	KEY TOP (FM/AM)	M1M2
262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	KK1K2
262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	M1M2
266	1C		N99-1757-05	SCREW SET	KK1K2
266	1C		N99-1757-05	SCREW SET	M1M2
A	2C	✻	N24-3015-48	E TYPE RETAINING RING	
B	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
C	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
D	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N30-3008-48	PAN HEAD MACHINE SCREW	
268	1C		T90-0523-05	ANTENNA ADAPTOR	E5
269	1C	✻	W01-1661-05	CARRYING CASE	K1K2
DME1	1D	✻	X92-5450-00	MECHANISM ASSY	
SWITCH UNIT (X16-356x-xx)					
281	2C	✻	B11-1489-04	OPTICAL DIFFUSER	
282	2C	✻	B11-1495-04	REFLECTION SHEET	
283	2C	✻	B19-2366-02	LIGHTING BOARD	
D2			B30-1698-05	LED	
D3			B30-1567-05	LED (1608, RED)	
D4			B30-1533-05	LED (1608, PG)	K2E5M1
D4			B30-1533-05	LED (1608, PG)	M2
D4			B30-1567-05	LED (1608, RED)	KK1
D5-20			B30-1533-05	LED (1608, PG)	K2E5M1
D5-20			B30-1533-05	LED (1608, PG)	M2
D5-20			B30-1567-05	LED (1608, RED)	KK1
ED1	2C	✻	B38-1171-05	LCD	
C1			CK73GB1H102K	CHIP C 1000PF K	
C2			CK73GB1H103K	CHIP C 0.010UF K	
C3,4			CK73GB1H473K	CHIP C 0.047UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	K2
284	2C	✻	E29-2068-04	CONDUCTIVE RUBBER	
J1		✻	E59-0851-05	RECTANGULAR PLUG	
R1			RK73GB2A563J	CHIP R 56K J 1/10W	
R2			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R3			RK73GB2A472J	CHIP R 4.7K J 1/10W	

K : KDC-132 **K1** : KDC-1032 **K2** : KDC-132CR **M1** : KDC-133 **M2** : KDC-233 **E5** : KDC-234SGY
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

⚠ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-356x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R5-9			RK73GB2A471J	CHIP R 470 J 1/10W	
R10			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R11			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2
R12			RK73GB2A101J	CHIP R 100 J 1/10W	K2
R21			RK73EB2E431J	CHIP R 430 J 1/4W	
R24-29			RK73FB2B431J	CHIP R 430 J 1/8W	K2E5M1
R24-29			RK73FB2B431J	CHIP R 430 J 1/8W	M2
R24-29			RK73FB2B471J	CHIP R 470 J 1/8W	KK1
W1			R92-1252-05	CHIP R 0 OHM J 1/16W	
S1			S70-0106-05	TACT SWITCH	
S2			T99-0457-15	ROTARY ENCODER	
D31-36			UDZS5.6B	ZENER DIODE	
D37			DA204U	DIODE	K2
D38			DA204U	DIODE	
IC1			LC75853NE-E	MOS-IC	
IC2			PNA4S22M	ANALOGUE IC	K2
Q1			DTA114EE	DIGITAL TRANSISTOR	

CD PLAYER UNIT (X32-5840-00)

Ref. No.	Add	New	Parts No.	Description	Destination
C1			CK73EB1A106K	CHIP C 10UF K	
C2			CK73FB1A225K	CHIP C 2.2UF K	
C3			CK73GB1A105K	CHIP C 1.0UF K	
C5			CC73GCH1H020C	CHIP C 2.0PF C	
C6			CC73GCH1H390J	CHIP C 39PF J	
C7			CK73GB1H104K	CHIP C 0.10UF K	
C8			CK73GB1A105K	CHIP C 1.0UF K	
C9			CK73GB1H472K	CHIP C 4700PF K	
C10			CK73GB1H333K	CHIP C 0.033UF K	
C11			CK73GB1H682K	CHIP C 6800PF K	
C12			CK73GB1H332K	CHIP C 3300PF K	
C13			CC73GCH1H271J	CHIP C 270PF J	
C14			CK73GB1H472K	CHIP C 4700PF K	
C15			CK73GB1H222K	CHIP C 2200PF K	
C16			CC73GCH1H331J	CHIP C 330PF J	
C17,18			CK73GB1H104K	CHIP C 0.10UF K	
C31-34			CK73GB1H104K	CHIP C 0.10UF K	
C36			CK73FB1A225K	CHIP C 2.2UF K	
C37-39			CK73GB1H103K	CHIP C 0.010UF K	
C40			CK73GB1H153K	CHIP C 0.015UF K	
C41			CK73GB1H102K	CHIP C 1000PF K	
C42			CK73GB1H473K	CHIP C 0.047UF K	
C43			CK73GB1H222K	CHIP C 2200PF K	
C44			CK73GB1H102K	CHIP C 1000PF K	
C45-47			CK73GB1H104K	CHIP C 0.10UF K	
C48			CK73GB1H682K	CHIP C 6800PF K	
C49			CK73GB1H152K	CHIP C 1500PF K	
C50			CK73GB1H472K	CHIP C 4700PF K	
C51			CK73GB1H681K	CHIP C 680PF K	
C52			CK73GB1H104K	CHIP C 0.10UF K	
C61			CK73FB1A225K	CHIP C 2.2UF K	
C62			CK73GB1H104K	CHIP C 0.10UF K	
C71,72			CK73GB1H471K	CHIP C 470PF K	
C73,74			CC73GCH1H680J	CHIP C 68PF J	
C75,76			CK73GB1H222K	CHIP C 2200PF K	
C77,78			CK73GB1H104K	CHIP C 0.10UF K	
C100-102			CK73GB1H102K	CHIP C 1000PF K	
CN1			E41-2297-05	FLAT CABLE CONNECTOR	
CN2			E41-2082-15	FLAT CABLE CONNECTOR	
X1			L78-0851-05	RESONATOR (16.93MHZ)	
CP1			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP2			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP3			RK74GB1J182J	CHIP-COM 1.8K J 1/16W	
CP4			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
CP5			RK74GB1J104J	CHIP-COM 100K J 1/16W	
R1			RK73GB2A910J	CHIP R 91 J 1/10W	
R2,3			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R4			RK73FB2B100J	CHIP R 10 J 1/8W	
R5,6			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R7			RK73GB2A362J	CHIP R 3.6K J 1/10W	
R8			RK73GB2A273J	CHIP R 27K J 1/10W	
R9			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R10			RK73GB2A104J	CHIP R 100K J 1/10W	
R11			RK73GB2A333J	CHIP R 33K J 1/10W	
R12			RK73GB2A244J	CHIP R 240K J 1/10W	
R13			RK73GB2A364J	CHIP R 360K J 1/10W	
R14			RK73GB2A104J	CHIP R 100K J 1/10W	
R15			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R31			RK73GB2A273J	CHIP R 27K J 1/10W	
R32			RK73GB2A103J	CHIP R 10K J 1/10W	
R33			RK73GB2A183J	CHIP R 18K J 1/10W	
R34			RK73GB2A103J	CHIP R 10K J 1/10W	
R35			RK73GB2A393J	CHIP R 39K J 1/10W	
R36			RK73GB2A103J	CHIP R 10K J 1/10W	
R37			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R38			RK73GB2A224J	CHIP R 220K J 1/10W	
R39			RK73GB2A104J	CHIP R 100K J 1/10W	
R40			RK73GB2A821J	CHIP R 820 J 1/10W	
R41			RK73GB2A473J	CHIP R 47K J 1/10W	
R42			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R43			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R44,45			RK73GB2A103J	CHIP R 10K J 1/10W	
R46			RK73GB2A273J	CHIP R 27K J 1/10W	
R47			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R48			RK73GB2A103J	CHIP R 10K J 1/10W	
R49			RK73GB2A473J	CHIP R 47K J 1/10W	
R50			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R51			RK73GB2A103J	CHIP R 10K J 1/10W	
R52,53			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R71			RK73GB2A133J	CHIP R 13K J 1/10W	
R72			RK73FB2B201J	CHIP R 200 J 1/8W	
R81,82			RK73FB2B183J	CHIP R 18K J 1/8W	
R83,84			RK73FB2B203J	CHIP R 20K J 1/8W	
R85,86			RK73FB2B123J	CHIP R 12K J 1/8W	
R87,88			RK73FB2B331J	CHIP R 330 J 1/8W	
R89,90			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R91,92			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R100			RK73GB2A100J	CHIP R 10 J 1/10W	

K : KDC-132 **K1** : KDC-1032 **K2** : KDC-132CR **M1** : KDC-133 **M2** : KDC-233 **E5** : KDC-234SGY ⚠ Indicates safety critical components.
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

PARTS LIST

CD PLAYER UNIT (X32-5840-00)

Ref. No.	Add	New	Parts No.	Description			Destination
S1,2			S68-0863-05	PUSH SWITCH			
S3			S68-0862-05	PUSH SWITCH			
D1			DAN202U	DIODE			
D2			MAZS0510L	ZENER DIODE			
D3			DA204U	DIODE			
IC1			AN22002A-V	ANALOGUE IC			
IC2			MN6627771KS	MOS-IC			
IC3			BA5824FP	ANALOGUE IC			
IC4			NJM4580M1-ZB	ANALOGUE IC			
Q1			2SB0970	TRANSISTOR			
Q2			2SA1362(Y)-F	TRANSISTOR			
Q3			DTC124EUA	DIGITAL TRANSISTOR			
Q4			DTA143XUA	DIGITAL TRANSISTOR			
Q5			2SC4081	TRANSISTOR			
Q6			2SA1576A	TRANSISTOR			
ELECTRIC UNIT (X34-419x-xx)							
C1			C90-5683-05	ELECTRO	3300UF	16WV	
C21			CK73GB1H103K	CHIP C	0.010UF	K	
C30			CK73GB1H103K	CHIP C	0.010UF	K	E5M1M2
C40			CK73GB1H103K	CHIP C	0.010UF	K	
C50			CD04AS1V100M	ELECTRO	10UF	35WV	
C50,51			CD04AS1V100M	ELECTRO	10UF	35WV	E5M1M2
C52-55			CD04AS1V100M	ELECTRO	10UF	35WV	
C56			CD04AT1H100M	ELECTRO	10UF	50WV	
C57		*	CD04BD1C221M	ELECTRO	220UF	16WV	
C58			C90-5686-05	ELECTRO	100UF	16WV	
C63			CD04AS1C220M	ELECTRO	22UF	16WV	
C101			CD04AS0J101M	ELECTRO	100UF	6.3WV	
C102			CK73GB1H103K	CHIP C	0.010UF	K	
C103			CK73GB1H104K	CHIP C	0.10UF	K	
C104,105			CC73GCH1H150J	CHIP C	15PF	J	
C106			CK73GB1H102K	CHIP C	1000PF	K	E5
C106			CK73GB1H152K	CHIP C	1500PF	K	KK1K2
C106			CK73GB1H152K	CHIP C	1500PF	K	M1M2
C142			CK73GB1H104K	CHIP C	0.10UF	K	
C145,146			CK73GB1H104K	CHIP C	0.10UF	K	
C204,205			CD04AS1H2R2M	ELECTRO	2.2UF	50WV	
C223,224			CD04AS1V100M	ELECTRO	10UF	35WV	KK1K2
C223,224			CD04AS1V100M	ELECTRO	10UF	35WV	M1M2
C251-254			C90-5684-05	NP-ELECT	0.22UF	50WV	
C255			CD04AS1H010M	ELECTRO	1UF	50WV	
C256			CD04AS1C101M	ELECTRO	100UF	16WV	KK2E5
C256			CD04AS1C101M	ELECTRO	100UF	16WV	M1
C256			CD04AS1C330M	ELECTRO	33UF	16WV	K1M2
C257			CD04AS1H010M	ELECTRO	1UF	50WV	
C258			C90-5663-05	ELECTRO	1UF	50WV	
C502			CK73GB1H152K	CHIP C	1500PF	K	
C503			CK73GB1H104K	CHIP C	0.10UF	K	
C504			CK73GB1H103K	CHIP C	0.010UF	K	
C505			CD04AT1V4R7M	ELECTRO	4.7UF	35WV	
C506			CK73GB1H104K	CHIP C	0.10UF	K	
C507			CD04AT1A330M	ELECTRO	33UF	10WV	
C508			CD04AT1C220M	ELECTRO	22UF	16WV	
C509			CC73GCH1H680J	CHIP C	68PF	J	

Ref. No.	Add	New	Parts No.	Description			Destination
C510			CC73GCH1H101J	CHIP C	100PF	J	
C511			CK73GB1H103K	CHIP C	0.010UF	K	
C512			CD04AT1V4R7M	ELECTRO	4.7UF	35WV	
C513,514			CK73GB1H103K	CHIP C	0.010UF	K	
C515			CK73FB1C105K	CHIP C	1.0UF	K	
C516			CC73GCH1H100D	CHIP C	10PF	D	
C521			CK73GB1H104K	CHIP C	0.10UF	K	
C522			CC73GCH1H330J	CHIP C	33PF	J	
C523			CC73GCH1H270J	CHIP C	27PF	J	
C524			CC73GCH1H101J	CHIP C	100PF	J	
C525			CK73GB1H103K	CHIP C	0.010UF	K	
C526			CC73GCH1H050C	CHIP C	5.0PF	C	
C527			CK73GB1H102K	CHIP C	1000PF	K	
C528			CC73GCH1H060D	CHIP C	6.0PF	D	
C530			CC73GCH1H040C	CHIP C	4.0PF	C	
C531			CK73FB1C105K	CHIP C	1.0UF	K	
C533,534			CK73GB1H103K	CHIP C	0.010UF	K	
C535			CC73GCH1H020C	CHIP C	2.0PF	C	
C536			CC73GCH1H040C	CHIP C	4.0PF	C	
C537,538			CC73GCH1H080D	CHIP C	8.0PF	D	
C541			CC73GCH1H040C	CHIP C	4.0PF	C	
C542			CC73GCH1H220J	CHIP C	22PF	J	
C543			CC73GCH1H680J	CHIP C	68PF	J	
C544			CC73GCH1H150J	CHIP C	15PF	J	
C545			CK73GB1H682K	CHIP C	6800PF	K	
C546			CK73GB1H103K	CHIP C	0.010UF	K	
C547			CD04AT1C100M	ELECTRO	10UF	16WV	
C548			CK73GB1H223K	CHIP C	0.022UF	K	
C549			CK73GB1H222K	CHIP C	2200PF	K	
C550			CK73GB1H333K	CHIP C	0.033UF	K	
C551,552			CK73GB1H103K	CHIP C	0.010UF	K	
C553			CK73GB1H104K	CHIP C	0.10UF	K	KK1K2
C553			CK73GB1H104K	CHIP C	0.10UF	K	M1M2
C553			CK73GB1H473K	CHIP C	0.047UF	K	E5
C554			CK73GB1H104K	CHIP C	0.10UF	K	
C555,556			CK73GB1H102K	CHIP C	1000PF	K	
C560			CC73GCH1H101J	CHIP C	100PF	J	
C561			CD04AT1H010M	ELECTRO	1UF	50WV	
C562			CD04AT1C100M	ELECTRO	10UF	16WV	
C563			CD04AT1HR47M	ELECTRO	0.47UF	50WV	
C564			CK73GB1A474K	CHIP C	0.47UF	K	
C565			CD04AS1C470M	ELECTRO	47UF	16WV	
C568			CC73GCH1H821J	CHIP C	820PF	J	
C580			CK73GB1H103K	CHIP C	0.010UF	K	
C581			CC73GCH1H020C	CHIP C	2.0PF	C	
C582,583			CK73GB1H104K	CHIP C	0.10UF	K	
C584			CD04AT1V4R7M	ELECTRO	4.7UF	35WV	
C585			CK73GB1H103K	CHIP C	0.010UF	K	
C586			CK73GB1H104K	CHIP C	0.10UF	K	
C587			CK73GB1H103K	CHIP C	0.010UF	K	
C588			CK73GB1A474K	CHIP C	0.47UF	K	
C589			CK73GB1H104K	CHIP C	0.10UF	K	
C591			CD04AT1A330M	ELECTRO	33UF	10WV	
C593			CK73FB1C105K	CHIP C	1.0UF	K	
C600			CD04AT1A101M	ELECTRO	100UF	10WV	

K : KDC-132 **K1** : KDC-1032 **K2** : KDC-132CR **M1** : KDC-133 **M2** : KDC-233 **E5** : KDC-234SGY
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-419x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
CN1		✻	E41-2611-05	FLAT CABLE CONNECTOR	
J1	2D		E04-0326-05	RF COAXIAL CABLE RECEPTACLE	
⚠ J2	2D		E58-0991-05	RECTANGULAR RECEPTACLE	
J3	2D		E58-0992-05	RECTANGULAR RECEPTACLE	
J5	2D		E63-0852-05	PIN JACK	KK1K2
J5	2D		E63-0852-05	PIN JACK	M1M2
WH1		✻	E39-0802-05	WIRING HARNESS	K1
CF51			L72-0805-05	CERAMIC FILTER	
CF52,53			L72-0805-05	CERAMIC FILTER	KK1K2
CF52,53			L72-0805-05	CERAMIC FILTER	M1M2
CF52,53		✻	L72-0806-05	CERAMIC FILTER	E5
CF54			L72-0804-05	CERAMIC FILTER	
L1			L33-1988-05	CHOKE COIL ASSY	
L2		✻	L33-2298-05	CHOKE COIL	
L4			L33-2260-05	CHOKE COIL	
L101			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH)	
L501			L40-6891-58	SMALL FIXED INDUCTOR (6.8UH)	
L502			L40-3301-58	SMALL FIXED INDUCTOR (33UH)	
L503			L40-1021-56	SMALL FIXED INDUCTOR (1MH)	
L504			L40-1011-58	SMALL FIXED INDUCTOR (100UH)	
L505		✻	L31-0979-05	FM-RF COIL	
L506		✻	L31-0981-05	FM-RF COIL	
L507		✻	L32-0945-05	FM OSCILLATING COIL	
L508		✻	L30-0779-05	FM IFT	
L509		✻	L30-0781-05	AM IFT	
L510			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH)	
L512-514			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH)	
L516,517			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH)	
X1			L77-1167-05	CRYSTAL RESONATOR (4.19MHZ)	
X501			L77-2077-05	CRYSTAL RESONATOR (10.25MHZ)	
F	2D		N80-3010-48	PAN HEAD TAPTITE SCREW	
G	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
H	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
J	2D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
R10			RK73FB2B303J	CHIP R 30K J 1/8W	
R11			RK73GB2A103J	CHIP R 10K J 1/10W	
R12			RK73GB2A104J	CHIP R 100K J 1/10W	
R20			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
R21			RD14BB2C333J	RD 33K J 1/6W	
R22			RK73GB2A103J	CHIP R 10K J 1/10W	
R23			RK73GB2A104J	CHIP R 100K J 1/10W	
R25			RD14BB2C472J	RD 4.7K J 1/6W	E5M1M2
R28			RD14BB2C472J	RD 4.7K J 1/6W	
R30			RD14BB2C103J	RD 10K J 1/6W	E5M1M2
R31			RK73GB2A473J	CHIP R 47K J 1/10W	E5M1M2
R32			RK73GB2A223J	CHIP R 22K J 1/10W	E5M1M2
R50			RD14BB2C562J	RD 5.6K J 1/6W	
R51			RK73GB2A473J	CHIP R 47K J 1/10W	
R57			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R58			RD14BB2C471J	RD 470 J 1/6W	
R67			RK73GB2A103J	CHIP R 10K J 1/10W	M1M2
R68,69			RK73GB2A103J	CHIP R 10K J 1/10W	
R71			RK73GB2A823J	CHIP R 82K J 1/10W	
R72			RK73GB2A363J	CHIP R 36K J 1/10W	
R73			RK73GB2A104J	CHIP R 100K J 1/10W	
R74,75			RK73GB2A103J	CHIP R 10K J 1/10W	
R76,77			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R78,79			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R103,104			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R105			RK73GB2A471J	CHIP R 470 J 1/10W	
R106			RK73GB2A104J	CHIP R 100K J 1/10W	
R107,108			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R110			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R113,114			RK73GB2A473J	CHIP R 47K J 1/10W	
R115			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R116			RK73GB2A103J	CHIP R 10K J 1/10W	
R117			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R118			RK73GB2A103J	CHIP R 10K J 1/10W	
R119			RK73GB2A473J	CHIP R 47K J 1/10W	
R121			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R122			RK73GB2A101J	CHIP R 100 J 1/10W	
R123			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R125			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R126			RK73GB2A104J	CHIP R 100K J 1/10W	
R127			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R128			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R129,130			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R131			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R132			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R133			RK73GB2A123J	CHIP R 12K J 1/10W	
R135			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2
R136			RK73GB2A473J	CHIP R 47K J 1/10W	KK1K2
R136			RK73GB2A473J	CHIP R 47K J 1/10W	E5
R137			RK73GB2A473J	CHIP R 47K J 1/10W	E5
R138			RK73GB2A473J	CHIP R 47K J 1/10W	KK1K2
R138			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2
R139			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2
R140			RK73GB2A473J	CHIP R 47K J 1/10W	KK1K2
R140			RK73GB2A473J	CHIP R 47K J 1/10W	E5
R141			RD14BB2C472J	RD 4.7K J 1/6W	
R143			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R144			RK73GB2A104J	CHIP R 100K J 1/10W	
R145			RD14BB2C222J	RD 2.2K J 1/6W	
R163			RD14BB2C100J	RD 10 J 1/6W	
R164,165			RD14BB2C471J	RD 470 J 1/6W	
R166			RD14BB2C102J	RD 1.0K J 1/6W	
R167			RD14BB2C101J	RD 100 J 1/6W	
R169			RD14BB2C102J	RD 1.0K J 1/6W	
R170,171			RD14BB2C102J	RD 1.0K J 1/6W	K2
R172			RD14BB2C470J	RD 47 J 1/6W	
R174			RK73GB2A473J	CHIP R 47K J 1/10W	
R181,182			RK73EB2E100J	CHIP R 10 J 1/4W	
R183-186			RK73GB2A103J	CHIP R 10K J 1/10W	
R201			RK73GB2A473J	CHIP R 47K J 1/10W	
R223,224			RK73FB2B271J	CHIP R 270 J 1/8W	KK1K2
R223,224			RK73FB2B271J	CHIP R 270 J 1/8W	M1M2
R227,228			RD14BB2C303J	RD 30K J 1/6W	KK1K2
R227,228			RD14BB2C303J	RD 30K J 1/6W	M1M2
R231,232			RD14BB2C101J	RD 100 J 1/6W	KK1K2

K : KDC-132 **K1** : KDC-1032 **K2** : KDC-132CR **M1** : KDC-133 **M2** : KDC-233 **E5** : KDC-234SGY ⚠ Indicates safety critical components.
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

PARTS LIST

ELECTRIC UNIT (X34-419x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R231,232			RD14BB2C101J	RD 100 J 1/6W	M1M2
R251			RK73GB2A472J	CHIP R 4.7K J 1/10W	KK2E5
R251			RK73GB2A472J	CHIP R 4.7K J 1/10W	M1
R252,253			RD14BB2C472J	RD 4.7K J 1/6W	KK2E5
R252,253			RD14BB2C472J	RD 4.7K J 1/6W	M1
R254			RK73GB2A472J	CHIP R 4.7K J 1/10W	KK2E5
R254			RK73GB2A472J	CHIP R 4.7K J 1/10W	M1
R255			RK73GB2A333J	CHIP R 33K J 1/10W	
R256			RK73FB2B102J	CHIP R 1.0K J 1/8W	KK2E5
R256			RK73FB2B102J	CHIP R 1.0K J 1/8W	M1
R257			RK73GB2A113J	CHIP R 11K J 1/10W	
R258			RK73GB2A101J	CHIP R 100 J 1/10W	KK2E5
R258			RK73GB2A101J	CHIP R 100 J 1/10W	M1
R258			RK73GB2A221J	CHIP R 220 J 1/10W	K1M2
R259			RD14BB2C223J	RD 22K J 1/6W	
R260			RK73GB2A751J	CHIP R 750 J 1/10W	KK2E5
R260			RK73GB2A751J	CHIP R 750 J 1/10W	M1
R261			RK73GB2A100J	CHIP R 10 J 1/10W	K1M2
R261			RK73GB2A431J	CHIP R 430 J 1/10W	KK2E5
R261			RK73GB2A431J	CHIP R 430 J 1/10W	M1
R263			RK73GB2A184J	CHIP R 180K J 1/10W	KK2E5
R263			RK73GB2A184J	CHIP R 180K J 1/10W	M1
R263			RK73GB2A432J	CHIP R 4.3K J 1/10W	K1M2
R264			RK73GB2A473J	CHIP R 47K J 1/10W	
R415			RK73GB2A104J	CHIP R 100K J 1/10W	
R501			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R502			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R503			RK73EB2E222J	CHIP R 2.2K J 1/4W	
R505			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R506			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R507			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R521-524			RK73GB2A104J	CHIP R 100K J 1/10W	
R525			RK73GB2A331J	CHIP R 330 J 1/10W	E5
R525			RK73GB2A821J	CHIP R 820 J 1/10W	KK1K2
R525			RK73GB2A821J	CHIP R 820 J 1/10W	M1M2
R526			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R527			RK73GB2A104J	CHIP R 100K J 1/10W	
R528			RD14BB2C104J	RD 100K J 1/6W	
R543			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R544			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R545			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R546			RK73GB2A333J	CHIP R 33K J 1/10W	
R547			RK73GB2A220J	CHIP R 22 J 1/10W	
R561			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R563,564			RK73GB2A103J	CHIP R 10K J 1/10W	
R565			RK73GB2A104J	CHIP R 100K J 1/10W	
R566,567			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R581			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R585			RD14BB2C1R0J	RD 1.0 J 1/6W	
W121			R92-2053-05	CHIP R 0 OHM J 1/8W	
W156			R92-2053-05	CHIP R 0 OHM J 1/8W	
W158			R92-1252-05	CHIP R 0 OHM J 1/16W	
W160			R92-2052-05	CHIP R 0 OHM J 1/10W	M1M2
W161,162			R92-2053-05	CHIP R 0 OHM J 1/8W	
W165			R92-2053-05	CHIP R 0 OHM J 1/8W	

Ref. No.	Add	New	Parts No.	Description	Destination
W405,406			R92-1252-05	CHIP R 0 OHM J 1/16W	K1M2
W409			R92-1252-05	CHIP R 0 OHM J 1/16W	K1M2
W410			R92-1252-05	CHIP R 0 OHM J 1/16W	E5
W415			R92-2053-05	CHIP R 0 OHM J 1/8W	
W500,501			R92-1252-05	CHIP R 0 OHM J 1/16W	
W506			R92-2053-05	CHIP R 0 OHM J 1/8W	
W507			R92-1252-05	CHIP R 0 OHM J 1/16W	
W508			R92-2053-05	CHIP R 0 OHM J 1/8W	
W509			R92-1252-05	CHIP R 0 OHM J 1/16W	
W510			R92-2053-05	CHIP R 0 OHM J 1/8W	
W511			R92-1252-05	CHIP R 0 OHM J 1/16W	
W516			R92-1252-05	CHIP R 0 OHM J 1/16W	KK1K2
W516			R92-1252-05	CHIP R 0 OHM J 1/16W	M1M2
W517			R92-2053-05	CHIP R 0 OHM J 1/8W	
W519			R92-2053-05	CHIP R 0 OHM J 1/8W	
W521			R92-1252-05	CHIP R 0 OHM J 1/16W	
W523,524			R92-1252-05	CHIP R 0 OHM J 1/16W	
W530			R92-2053-05	CHIP R 0 OHM J 1/8W	
W531,532			R92-1252-05	CHIP R 0 OHM J 1/16W	
W533			R92-2053-05	CHIP R 0 OHM J 1/8W	
W534			R92-1252-05	CHIP R 0 OHM J 1/16W	
W578			R92-1252-05	CHIP R 0 OHM J 1/16W	E5M1M2
W601			R92-1252-05	CHIP R 0 OHM J 1/16W	
W602			R92-2053-05	CHIP R 0 OHM J 1/8W	
D1			S2V60✻A	DIODE	
D3		✻	IMSA-6802-E	SURGE ABSORBER	
D10		✻	MAZ4068N(M)	ZENER DIODE	
D11			D1F60-5063	DIODE	E5M1M2
D12			AM01ZNF	DIODE	E5M1M2
D13			D1F60-5063	DIODE	
D14			AM01ZNF	DIODE	
D20		✻	MAZ4068N(M)	ZENER DIODE	
D30		✻	MAZ4047(M)	ZENER DIODE	E5M1M2
D40			1SS133	DIODE	
D50			DAN202U	DIODE	
D51		✻	MAZ4082N(L)	ZENER DIODE	
D70		✻	MAZ4068N(M)	ZENER DIODE	
D101			1SS133	DIODE	
D103			DA204U	DIODE	
D106		✻	MAZ4062(L)	ZENER DIODE	
D108		✻	MAZ4062(L)	ZENER DIODE	K2
D110			UDZS12B	ZENER DIODE	
D201,202		✻	MAZ4068N(M)	ZENER DIODE	
D251-253			1SS133	DIODE	
D261-263			AM01ZNF	DIODE	K1M2
D264			1SR154-400	DIODE	K1M2
D265,266			AM01ZNF	DIODE	K1M2
D267,268			1SR154-400	DIODE	K1M2
D501			RN739F	DIODE	
D503			RN739F	DIODE	
D504-506		✻	KV1720STL-G	VARIABLE CAPACITANCE DIODE	
IC1		✻	780058GC630A	MICROCONTROLLER IC	
IC4		✻	E-TDA7386	ANALOGUE IC	KK2E5
IC4		✻	E-TDA7386	ANALOGUE IC	M1

K : KDC-132 **K1** : KDC-1032 **K2** : KDC-132CR **M1** : KDC-133 **M2** : KDC-233 **E5** : KDC-234SGY
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-419x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
IC4			E-TDA7560	ANALOGUE IC	K1M2
IC7			BA4911-V4	ANALOGUE IC	
IC8			HD74HC27FP-E	MOS-IC	
IC10		✻	E-TDA7513T	ANALOGUE IC	
IC11		✻	PST3435UL-E	MOS-IC	
IC12			BR24L04FV-W	ROM IC	
Q10			2SC4081	TRANSISTOR	
Q20			2SC4081	TRANSISTOR	
Q40			DTA124EUA	DIGITAL TRANSISTOR	KK1K2
Q40			DTA124EUA	DIGITAL TRANSISTOR	M1M2
Q50			2SA1036K	TRANSISTOR	
Q51			UMC2N	TRANSISTOR	
Q53			UMC2N	TRANSISTOR	M1M2
Q55			2SD2396(J,K)	TRANSISTOR	
Q70			2SC4081	TRANSISTOR	
Q102			DTA114YUA	DIGITAL TRANSISTOR	
Q223,224			DTC143TUA	DIGITAL TRANSISTOR	KK1K2
Q223,224			DTC143TUA	DIGITAL TRANSISTOR	M1M2
Q251			DTC114YUA	DIGITAL TRANSISTOR	KK2E5
Q251			DTC114YUA	DIGITAL TRANSISTOR	M1
Q501			HN3G01J(BL)-F	TRANSISTOR	
Q502		✻	3SK126-F	DUAL FET	
TH1			PRF21BE471QB2	POSITIVE RESISTOR	
DAUGHTER UNIT (X89-2690-10)					
C221,222			CD04AS1C100M	ELECTRO 10UF 16WV	K1
CN90			E41-0956-05	PIN ASSY	K1
CN91			E41-0930-05	PIN ASSY	K1
W101			E31-0001-00	JUMPER WIRE	K1
R221,222			RK73GB2A271J	CHIP R 270 J 1/10W	K1
R225,226			RK73GB2A303J	CHIP R 30K J 1/10W	K1
R229,230			RD14BB2C101J	RD 100 J 1/6W	K1
Q221,222			DTC143TUA	DIGITAL TRANSISTOR	K1
Q225			DTA124EUA	DIGITAL TRANSISTOR	K1
MECHANISM ASSY (X92-5450-00)					
2	1B		A10-4827-32	CHASSIS	
5	1B		D10-4576-83	ARM ASSY	
8	2A		D10-4579-23	LEVER ASSY	
10	2A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-52	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4595-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B	✻	D13-2381-03	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-24	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
46	2A		G13-1258-04	CUSHION	
51	1A		J21-9676-32	MOUNTING HARDWARE	
52	3B		J21-9677-22	MOUNTING HARDWARE	
53	1B		J21-9678-13	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)	
B	1B	✻	N09-6317-05	MACHINE SCREW (M1.6X6.0)	
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5)	
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-05	TAPTITE SCREW (BIND P 2X5)	
G	2A		N19-2163-04	FLAT WASHER	
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW	
J	1B		N09-6108-05	MACHINE SCREW (M2X3.5)	
K	3B		N09-6155-05	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B	✻	T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B	✻	T42-1067-14	DC MOTOR (LOADING)	
DPU1	2B	✻	X93-2130-00	OPTICAL PICKUP ASSY	

K : KDC-132 **K1** : KDC-1032 **K2** : KDC-132CR **M1** : KDC-133 **M2** : KDC-233 **E5** : KDC-234SGY ⚠ Indicates safety critical components.
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)