EXPLODED VIEW (DVD MECHANISM)

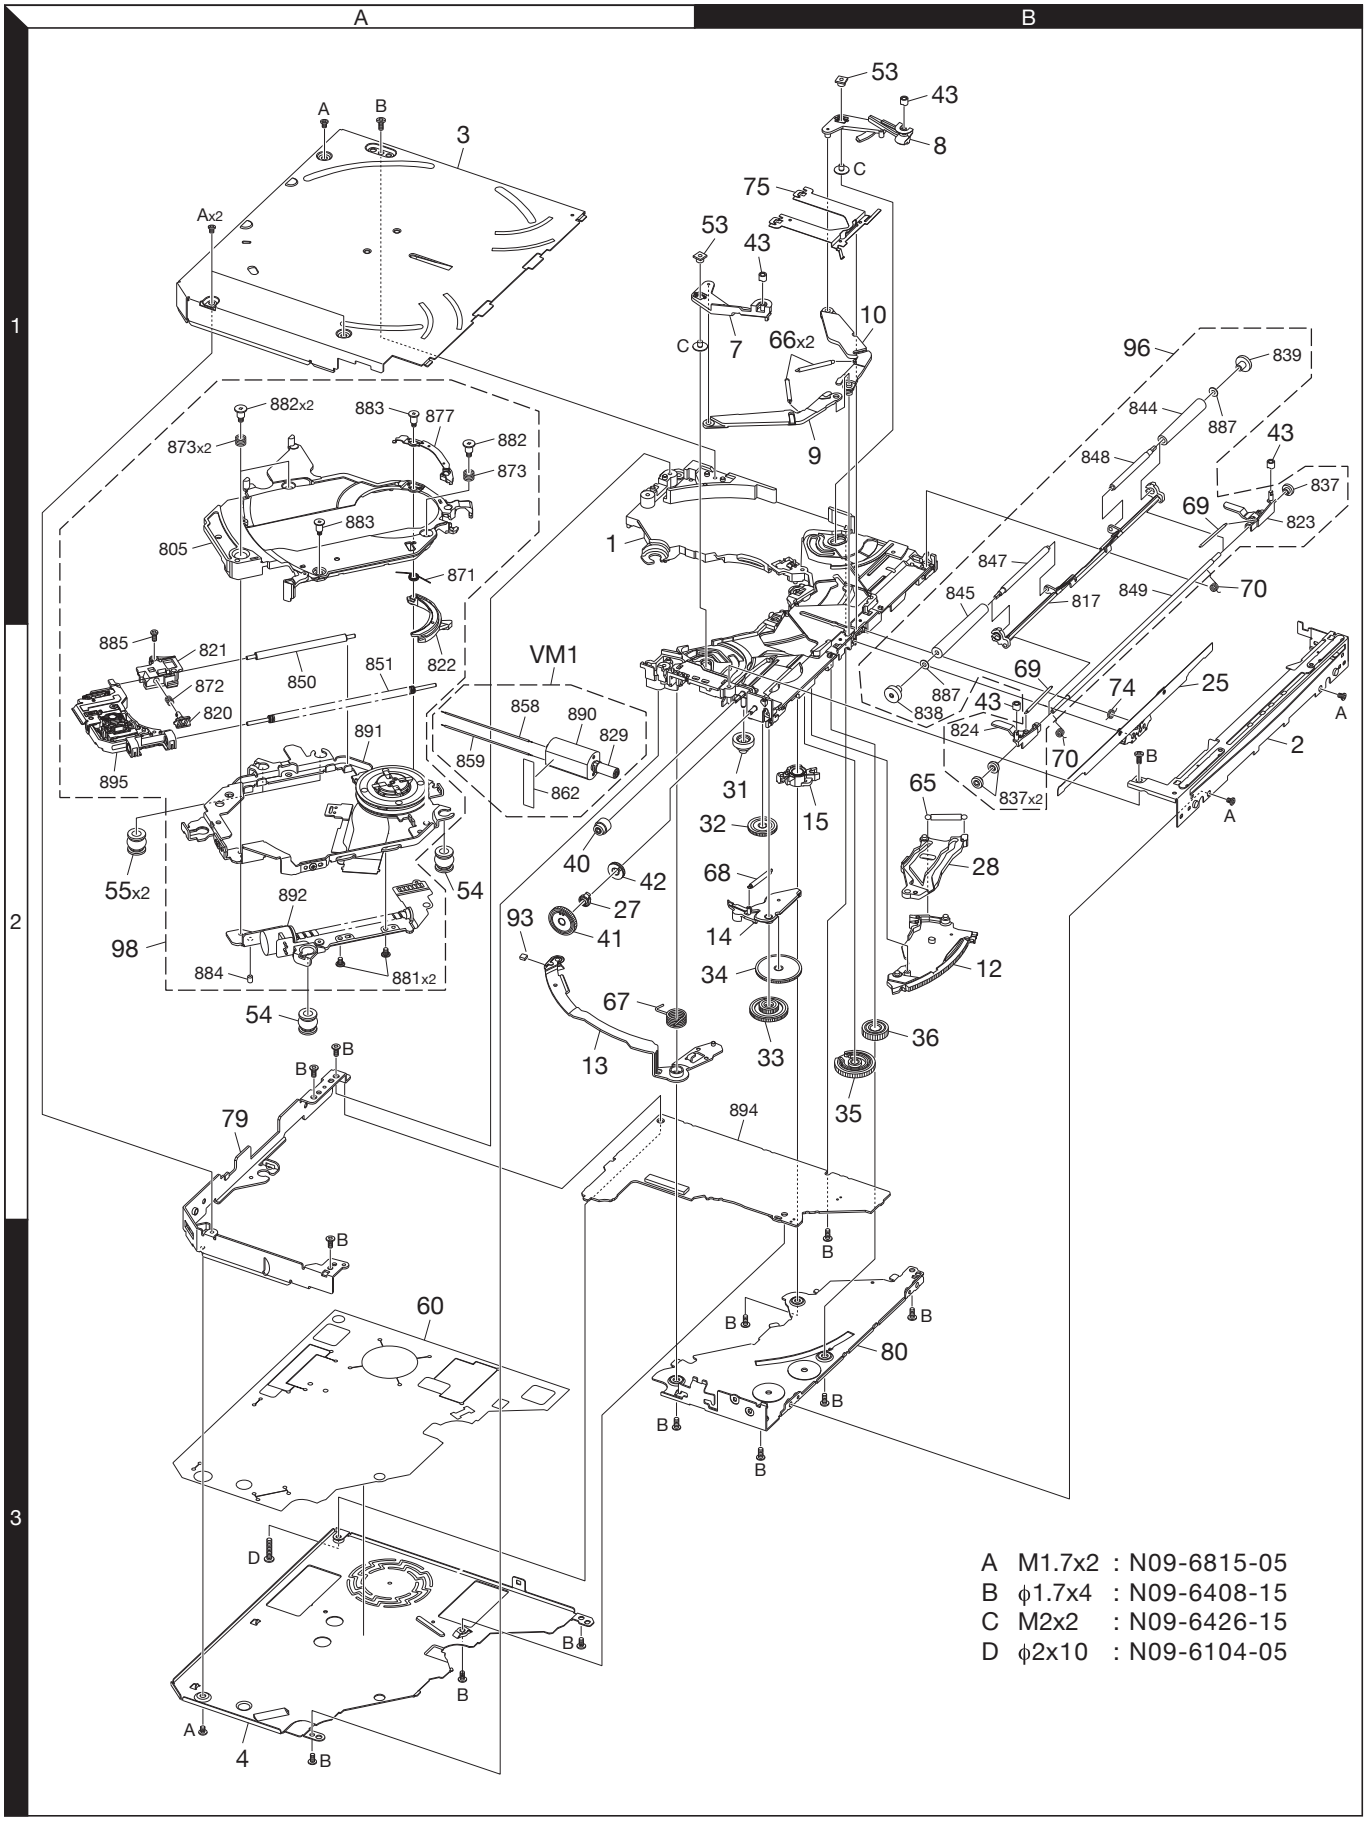

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

A	M3x14	:	N09-6821-05
B	M2.6x4	:	N35-2604-43
C	ϕ2.6x5	:	N86-2605-48
D	ϕ3x8	:	N89-3008-48
H	ϕ2.6x8	:	N82-2608-48
K	ϕ3x8	:	N09-6727-05
L	M2.6x14	:	N35-2614-48
M	ϕ3x8	:	N82-3008-48

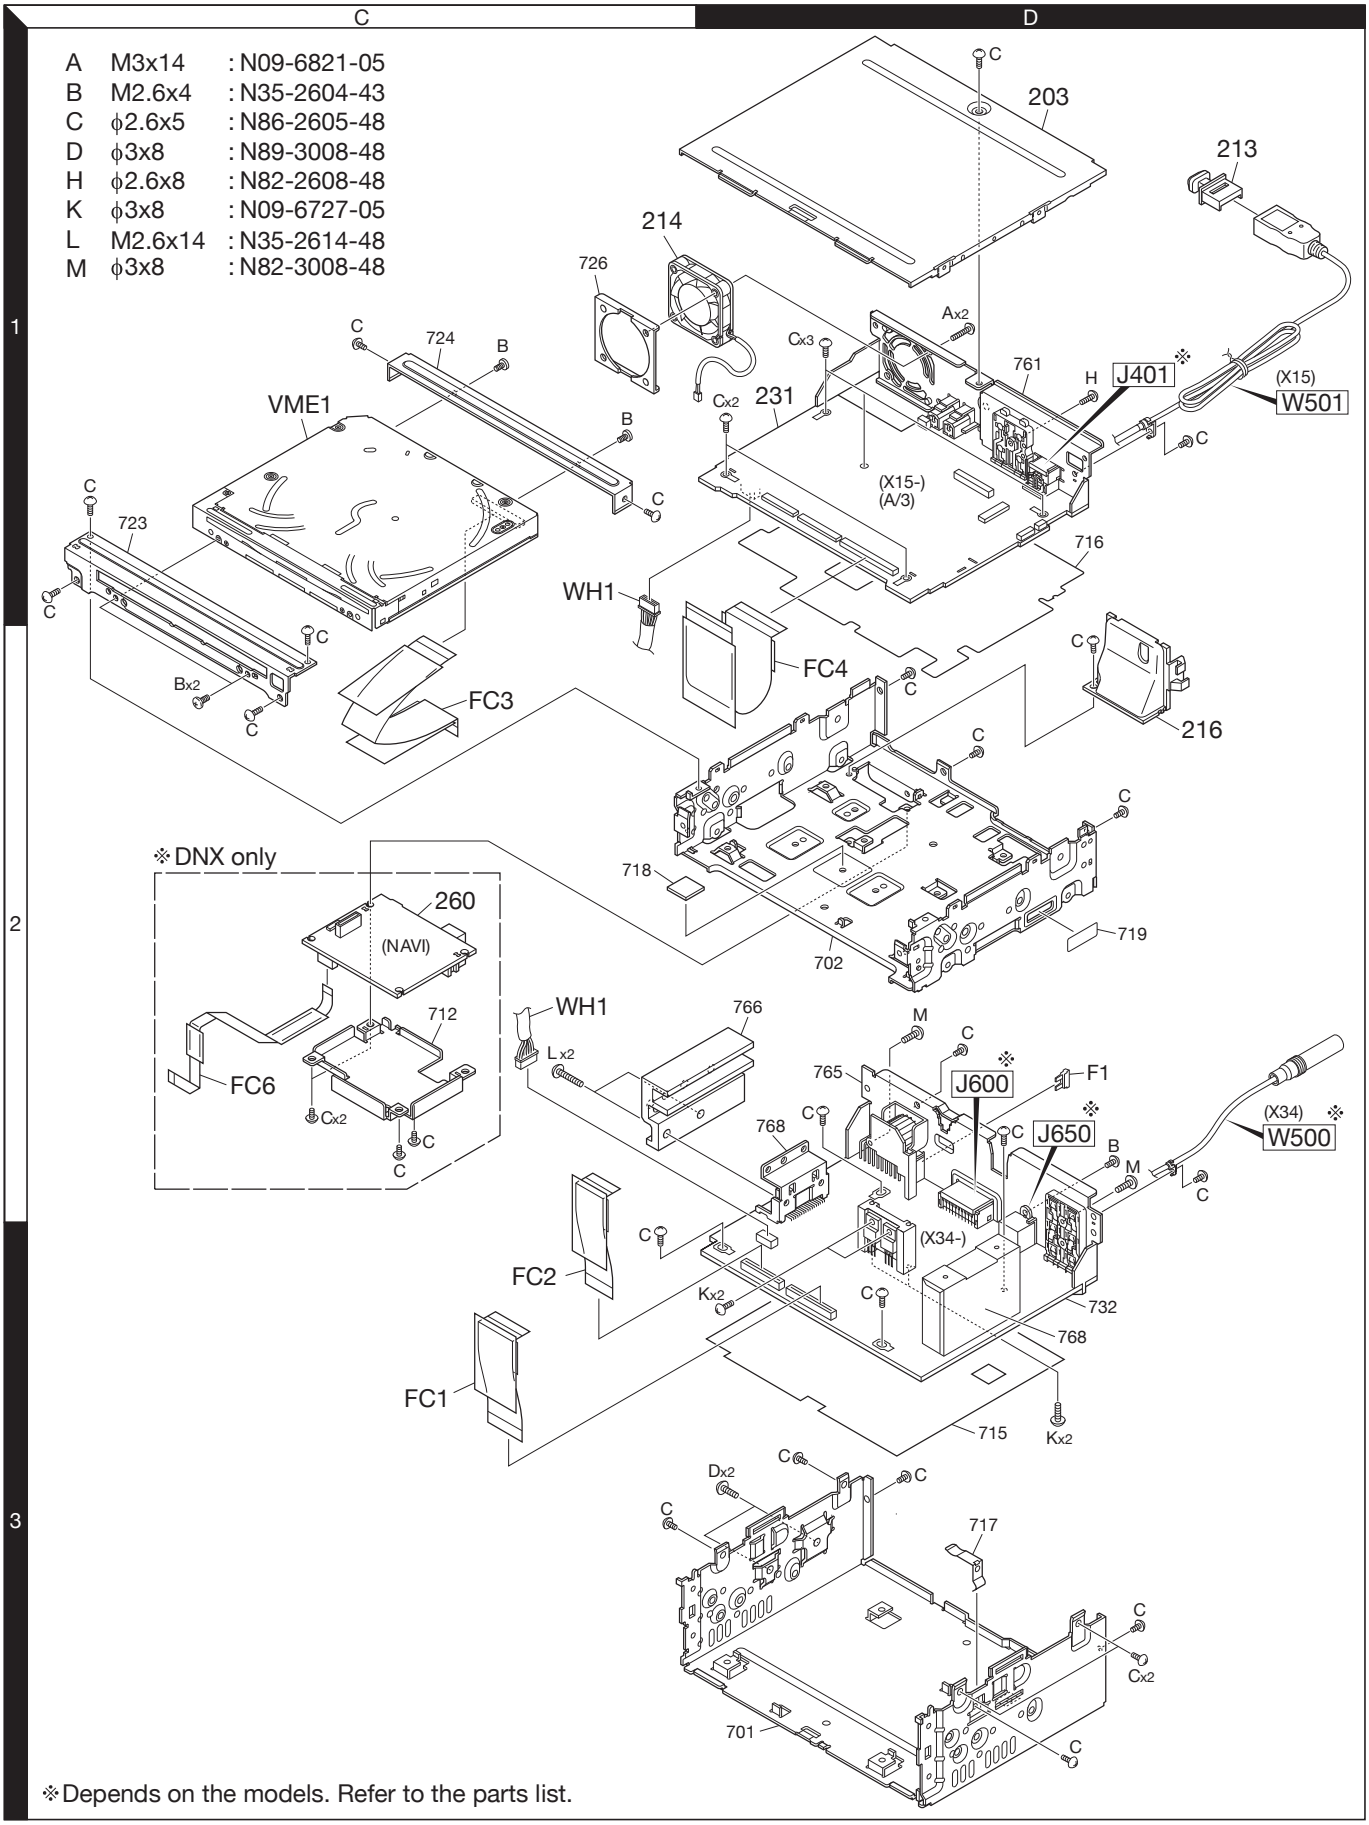

※Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL)

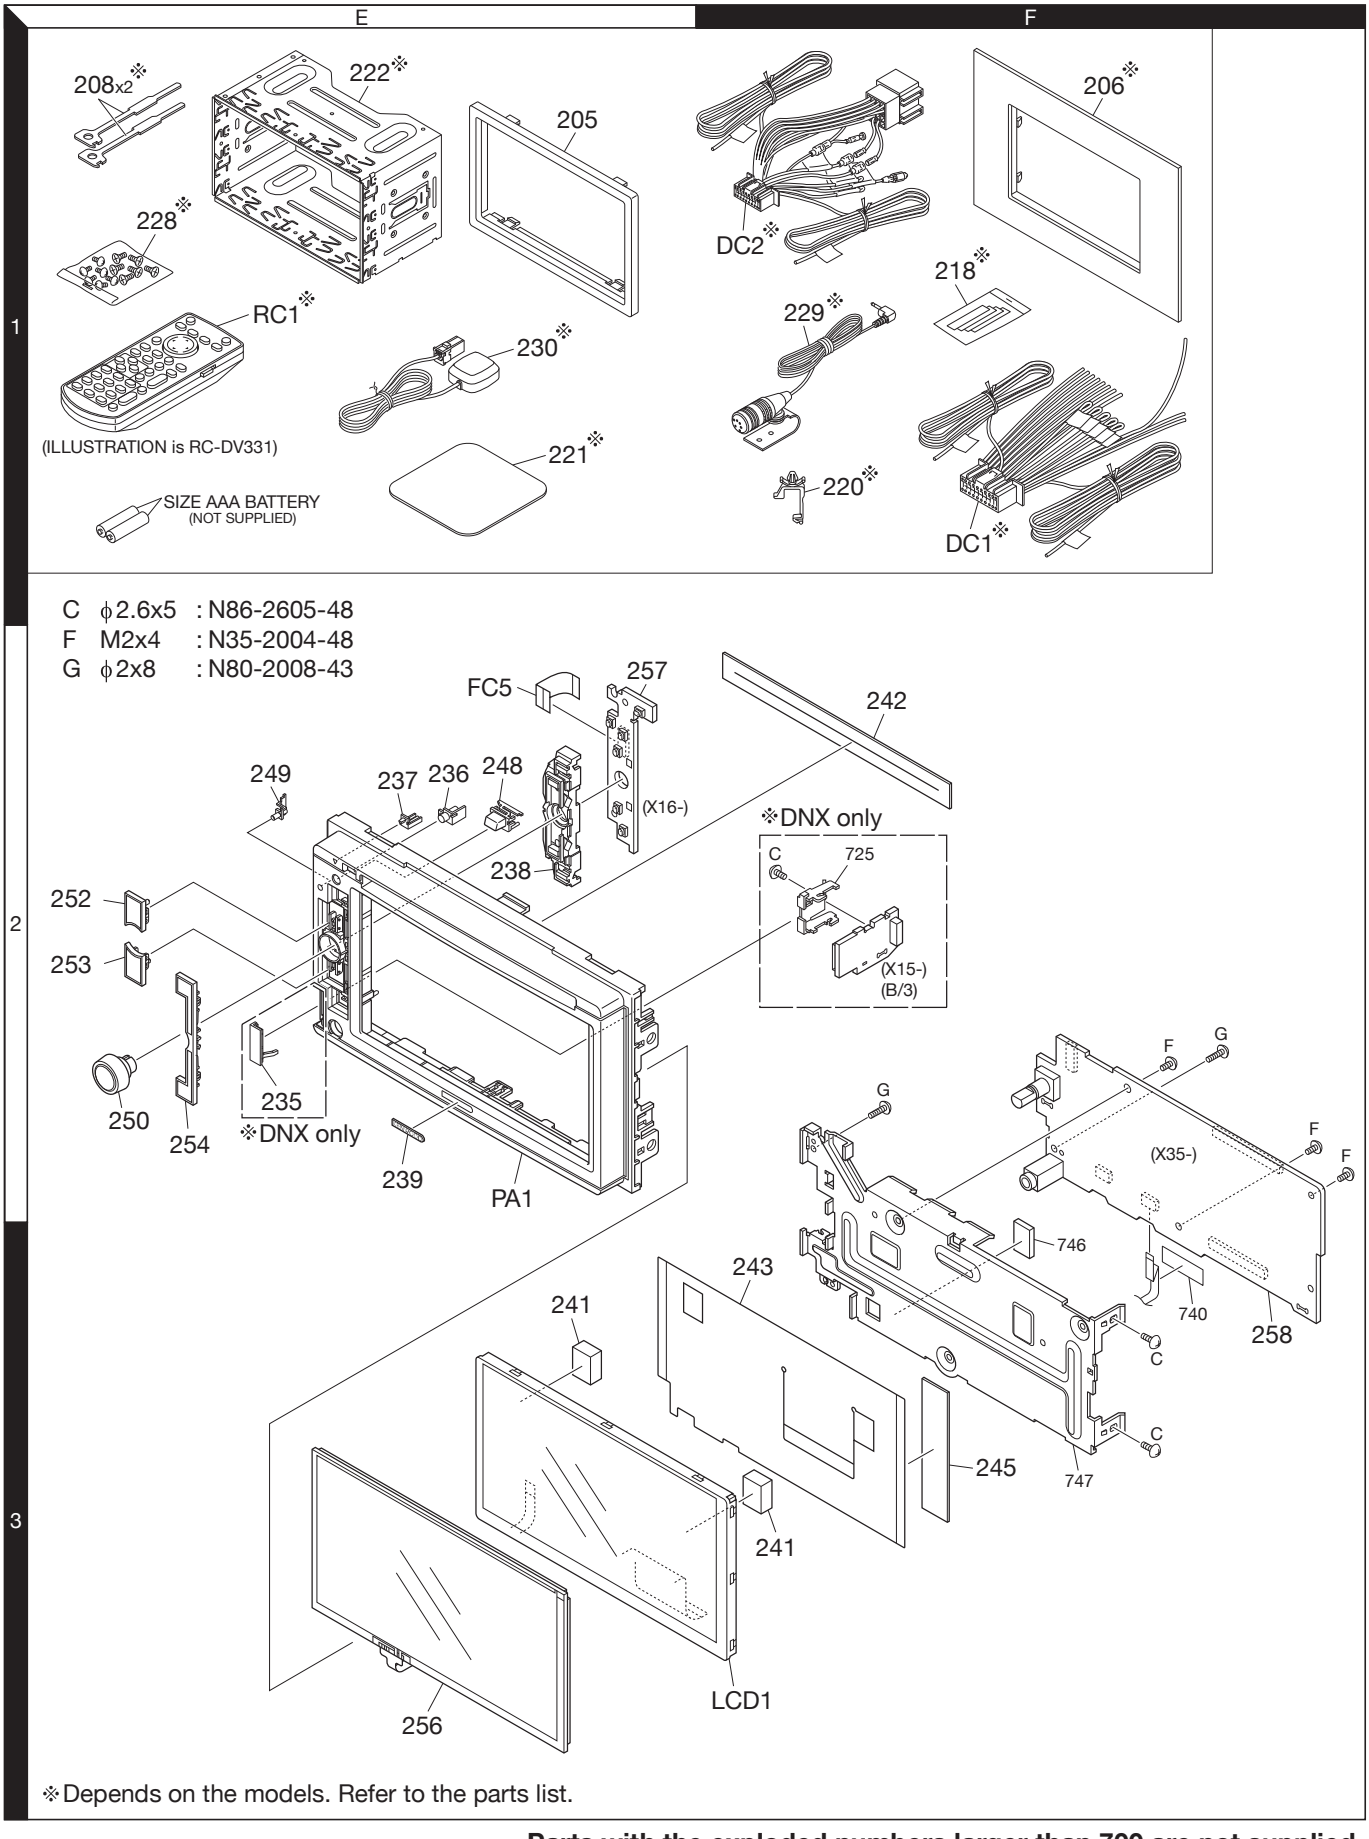

※Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
DDX5026/5036/5036M/5056/516/6046BT/616 DNX5160/5260BT/5360/5360M/6020EX/6160/6460BT/6960					
203	1D	✻	A52-1101-22	TOP PLATE	
RC1	1E		A70-2083-15	REMOTE CONTROLLER ASS (RC-DV340	Q1M3M4
RC1	1E		A70-2083-15	REMOTE CONTROLLER ASS (RC-DV340	R2E2
RC1	1E		A70-2083-15	REMOTE CONTROLLER ASS (RC-DV340	X2
RC1	1E	✻	A70-2107-05	REMOTE CONTROLLER ASS (RC-DV331	KR1M1
RC1	1E	✻	A70-2107-05	REMOTE CONTROLLER ASS (RC-DV331	M2X1
-		✻	B54-4761-00	INSTALLATION MANU (ENG.FRE.SPA)	KK1K2
-		✻	B54-4761-00	INSTALLATION MANU (ENG.FRE.SPA)	R1K3K4
-		✻	B54-4761-00	INSTALLATION MANU (ENG.FRE.SPA)	R2K5
-		✻	B54-4762-00	INSTALLATION MANUAL (POR.)	R1R2
-		✻	B54-4763-00	INSTALLATION MANUAL (ENG.)	E1E2Q1
-		✻	B54-4764-00	INSTALLATION MANUA (F.G.D.I.S.P	E1E2
-		✻	B54-4765-00	INSTALLATION MANUAL (RUS.UKR.)	Q1
-		✻	B54-4766-00	INSTALLATION MANUAL (ENG.)	M1M2X1
-		✻	B54-4766-00	INSTALLATION MANUAL (ENG.)	M3M4X2
-		✻	B54-4767-00	INSTALLATION MANUAL (S-CHI.HOR.	M1M3
-		✻	B54-4768-00	INSTALLATION MANUAL (ARA.)	M2M4
-		✻	B64-4602-00	INSTRUCTION MANUAL (ENG.)	KK1K2
-		✻	B64-4602-00	INSTRUCTION MANUAL (ENG.)	R1K3K4
-		✻	B64-4602-00	INSTRUCTION MANUAL (ENG.)	R2K5
-		✻	B64-4603-00	INSTRUCTION MANUAL (FRE.)	KK1K2
-		✻	B64-4603-00	INSTRUCTION MANUAL (FRE.)	K3K4K5
-		✻	B64-4604-00	INSTRUCTION MANUAL (SPA.)	KK1K2
-		✻	B64-4604-00	INSTRUCTION MANUAL (SPA.)	R1K3K4
-		✻	B64-4604-00	INSTRUCTION MANUAL (SPA.)	R2K5
-		✻	B64-4605-00	INSTRUCTION MANUAL (POR.)	R1R2
-		✻	B64-4606-00	INSTRUCTION MANUAL (ENG.)	E1E2Q1
-		✻	B64-4607-00	INSTRUCTION MANUAL (FRE.)	E1E2
-		✻	B64-4608-00	INSTRUCTION MANUAL (GER.)	E1E2
-		✻	B64-4609-00	INSTRUCTION MANUAL (DUT.)	E1E2
-		✻	B64-4610-00	INSTRUCTION MANUAL (ITA.)	E1E2
-		✻	B64-4611-00	INSTRUCTION MANUAL (SPA.)	E1E2
-		✻	B64-4612-00	INSTRUCTION MANUAL (POR.)	E1E2
-		✻	B64-4613-00	INSTRUCTION MANUAL (RUS.)	Q1
-		✻	B64-4614-00	INSTRUCTION MANUAL (UKR.)	Q1
-		✻	B64-4615-00	INSTRUCTION MANUAL (ENG.)	M1M2X1
-		✻	B64-4615-00	INSTRUCTION MANUAL (ENG.)	M3M4X2
-		✻	B64-4616-00	INSTRUCTION MANUAL (S-CHI.)	M1M3
-		✻	B64-4617-00	INSTRUCTION MANUAL (KOR.)	M3
-		✻	B64-4618-00	INSTRUCTION MANUAL (ARA.)	M2M4
-		✻	B64-4619-00	INSTRUCTION MANUAL (ENG.FRE.SPA	KK1K2
-		✻	B64-4619-00	INSTRUCTION MANUAL (ENG.FRE.SPA	K3
-		✻	B64-4621-00	INSTRUCTION MANUAL (ENG.SPA.POR	R1
-		✻	B64-4622-00	INSTRUCTION MANUAL (E.F.G.D.)	E1
-		✻	B64-4623-00	INSTRUCTION MANUAL (ITA.SPA.POR	E1
-		✻	B64-4625-00	INSTRUCTION MANUAL (ENG.S-CHI.)	M1
-		✻	B64-4626-00	INSTRUCTION MANUAL (ENG.)	M2X1
-		✻	B64-4627-00	INSTRUCTION MANUAL (ARA.)	M2
205	1E		B07-3165-02	ESCUTCHEON	
206	1F		B07-3172-12	ESCUTCHEON	M1M2X1
206	1F		B07-3172-12	ESCUTCHEON	M3M4X2
208	1E		D10-7012-04	LEVER	KK1K2
208	1E		D10-7012-04	LEVER	K4R2K5
208	1E		D10-7012-04	LEVER	R1E1K3
208	1E		D10-7012-04	LEVER	E2Q1
DC1	1F		E30-6881-25	DC CORD	KK1K2
DC1	1F		E30-6881-25	DC CORD	M2X1K4
DC1	1F		E30-6881-25	DC CORD	M3M4X2
DC1	1F		E30-6881-25	DC CORD	R1K3M1
DC1	1F		E30-6881-25	DC CORD	R2K5
DC2	1F		E30-6796-15	DC CORD	E1E2Q1
FC1	3C	✻	E39-1110-05	FLAT CABLE (50P)	
FC2	3C	✻	E39-1109-05	FLAT CABLE (40P)	
FC3	2C		E39-0997-15	FLAT CABLE (50P)	
FC4	2D	✻	E39-1111-05	FLAT CABLE (70P)	
WH1	1C	✻	E39-1116-05	WIRING HARNESS (20P)	
213	1D		F09-2929-04	CAP (USB)	
214	1C		F09-2959-05	FAN	
216	2D	✻	F19-1823-03	COVER	
⚠ F1	2D		F52-0007-05	FUSE (MINI BLADE TYPE) 15A	
-		✻	H54-4766-03	ITEM CARTON CASE	K
-		✻	H54-4767-03	ITEM CARTON CASE	K1
-		✻	H54-4768-03	ITEM CARTON CASE	K2
-		✻	H54-4769-03	ITEM CARTON CASE	R1
-		✻	H54-4770-03	ITEM CARTON CASE	E1
-		✻	H54-4771-03	ITEM CARTON CASE	K3
-		✻	H54-4773-03	ITEM CARTON CASE	M1X1
-		✻	H54-4774-03	ITEM CARTON CASE	M2
-		✻	H54-4775-03	ITEM CARTON CASE	K4
-		✻	H54-4776-03	ITEM CARTON CASE	R2
-		✻	H54-4777-03	ITEM CARTON CASE	K5
-		✻	H54-4778-03	ITEM CARTON CASE	R3
-		✻	H54-4779-03	ITEM CARTON CASE	E2
-		✻	H54-4780-03	ITEM CARTON CASE	Q1
-		✻	H54-4781-03	ITEM CARTON CASE	M3X2
-		✻	H54-4782-03	ITEM CARTON CASE	M4
218	1F		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	M1M2X1
218	1F		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	M3M4X2
220	1F		J11-0660-05	CLAMPER	KK1K2
220	1F		J11-0660-05	CLAMPER	K3X1
221	1E		J21-9867-04	MOUNTING HARDWARE	KK1K2
221	1E		J21-9867-04	MOUNTING HARDWARE	K3M1M2
221	1E		J21-9867-04	MOUNTING HARDWARE	X1E1R1
222	1E		J22-0657-03	MOUNTING HARDWARE ASSY	KK1K2
222	1E		J22-0657-03	MOUNTING HARDWARE ASSY	K4R2K5
222	1E		J22-0657-03	MOUNTING HARDWARE ASSY	R1E1K3
222	1E		J22-0657-03	MOUNTING HARDWARE ASSY	E2Q1
228	1E		N99-1779-15	SCREW SET	KK1K2
228	1E		N99-1779-15	SCREW SET	M2X1K4
228	1E		N99-1779-15	SCREW SET	M3M4X2
228	1E		N99-1779-15	SCREW SET	R1K3M1
228	1E		N99-1779-15	SCREW SET	R2K5
A	1D	✻	N09-6821-05	MACHINE SCREW (M3X14)	
B	1C		N35-2604-43	BINDING HEAD MACHINE SCREW	
C	3D		N86-2605-48	BINDING HEAD TAPTITE SCREW	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

DDX5026/5036/5036M/5056/516/6046BT/616
DNX5160/5260BT/5360/5360M/6020EX/6160/6460BT/6960

Ref. No.	Add	New	Parts No.	Description	Destination
D	3D		N89-3008-48	BINDING HEAD TAPTITE SCREW	
229	1F	✻	W01-1768-05	MICROPHONE	KK1K2
229	1F	✻	W01-1768-05	MICROPHONE	R1E1K4
229	1F	✻	W01-1768-05	MICROPHONE	R2
230	1E		W02-5304-05	ANTENNA MODULE (GPS)	KK1K2
230	1E		W02-5304-05	ANTENNA MODULE (GPS)	K3M1M2
230	1E		W02-5304-05	ANTENNA MODULE (GPS)	X1E1R1
231	1D	✻	X15-1410-10	VIDEO CONTROL UNIT	K4
231	1D	✻	X15-1410-11	VIDEO CONTROL UNIT	K5
231	1D	✻	X15-1410-21	VIDEO CONTROL UNIT	M3
231	1D	✻	X15-1410-22	VIDEO CONTROL UNIT	M4
231	1D	✻	X15-1410-71	VIDEO CONTROL UNIT	X2
231	1D	✻	X15-1412-71	VIDEO CONTROL UNIT	E2
231	1D	✻	X15-1413-21	VIDEO CONTROL UNIT	R2
231	1D	✻	X15-1413-81	VIDEO CONTROL UNIT	Q1
231	1D	✻	X15-1460-10	VIDEO CONTROL UNIT	K1
231	1D	✻	X15-1460-11	VIDEO CONTROL UNIT	K2
231	1D	✻	X15-1460-12	VIDEO CONTROL UNIT	K3
231	1D	✻	X15-1460-13	VIDEO CONTROL UNIT	K
231	1D	✻	X15-1460-21	VIDEO CONTROL UNIT	M1
231	1D	✻	X15-1460-22	VIDEO CONTROL UNIT	M2
231	1D	✻	X15-1460-71	VIDEO CONTROL UNIT	X1
231	1D	✻	X15-1462-71	VIDEO CONTROL UNIT	E1
231	1D	✻	X15-1463-21	VIDEO CONTROL UNIT	R1
VME1		✻	X92-6540-00	DVD MECHANISM ASSY (DVS-8230W)	

DISPLAY ASSY

Ref. No.	Add	New	Parts No.	Description	Destination
PA1	2E	✻	A64-5073-01	PANEL	K
PA1	2E	✻	A64-5074-01	PANEL	K1
PA1	2E	✻	A64-5075-01	PANEL	K2
PA1	2E	✻	A64-5076-01	PANEL	R1
PA1	2E	✻	A64-5077-01	PANEL	E1
PA1	2E	✻	A64-5078-01	PANEL	K3
PA1	2E	✻	A64-5080-01	PANEL	M1M2X1
PA1	2E	✻	A64-5081-01	PANEL	K4
PA1	2E	✻	A64-5082-01	PANEL	R2
PA1	2E	✻	A64-5083-01	PANEL	K5
PA1	2E	✻	A64-5085-01	PANEL	E2
PA1	2E	✻	A64-5086-01	PANEL	Q1
PA1	2E	✻	A64-5087-01	PANEL	M3M4X2
235	2E	✻	B09-0548-03	CAP	KK1K2
235	2E	✻	B09-0548-03	CAP	K3M1M2
235	2E	✻	B09-0548-03	CAP	X1E1R1
236	2E	✻	B10-5370-04	FRONT GLASS (REMO)	
237	2E	✻	B19-2564-04	LIGHTING BOARD (TRIANGLE)	
238	2E	✻	B19-2565-02	LIGHTING BOARD (KEY)	
239	2E		B43-1518-04	BADGE	
LCD1	3E	✻	B38-1223-05	LCD	
FC5	2E	✻	E39-1112-05	FLAT CABLE (20P)	
241	3E	✻	F12-0990-04	SHIELDING TUBE	
242	2F	✻	F19-1824-02	BLIND PLATE	
243	3F	✻	F20-2526-03	INSULATING SHEET	
245	3F	✻	G11-3767-04	CUSHION	
248	2E	✻	K24-5066-03	PUSH KNOB (EJECT)	
249	2E	✻	K24-5067-04	PUSH KNOB (RESET)	
250	2E	✻	K28-0408-03	KNOB ASSY (VOL)	
252	2E	✻	K28-0413-04	KNOB ASSY (NAV)	KK1K2
252	2E	✻	K28-0413-04	KNOB ASSY (NAV)	K3M1M2
252	2E	✻	K28-0413-04	KNOB ASSY (NAV)	X1E1R1
252	2E	✻	K28-0414-04	KNOB ASSY (TOP)	K4K5M3
252	2E	✻	K28-0414-04	KNOB ASSY (TOP)	M4X2E2
252	2E	✻	K28-0414-04	KNOB ASSY (TOP)	R2Q1
253	2E	✻	K28-0415-04	KNOB ASSY (SRC)	
254	2E	✻	K28-0416-03	KNOB ASSY (TEL/FNC)	KK1K2
254	2E	✻	K28-0416-03	KNOB ASSY (TEL/FNC)	R1K3K4
254	2E	✻	K28-0416-03	KNOB ASSY (TEL/FNC)	R2K5
254	2E	✻	K28-0417-03	KNOB ASSY (TEL/FNC)	E1E2Q1
254	2E	✻	K28-0425-03	KNOB ASSY (TEL/FNC)	M1M2X1
254	2E	✻	K28-0425-03	KNOB ASSY (TEL/FNC)	M3M4X2
F	2F		N35-2004-48	BINDING HEAD MACHINE SCREW	
G	2F		N80-2008-43	PAN HEAD TAPTITE SCREW	
256	3E	✻	S79-0870-05	SWITCH ASSY	
257	2E	✻	X16-6860-10	SWITCH UNIT	
258	3F	✻	X35-5060-10	VIDEO UNIT	

CONTROL ASSY

Ref. No.	Add	New	Parts No.	Description	Destination
FC6	2C	✻	E39-1115-05	FLAT CABLE	KK1K2
FC6	2C	✻	E39-1115-05	FLAT CABLE	K3M1M2
FC6	2C	✻	E39-1115-05	FLAT CABLE	X1E1R1
260	2C	✻	W02-5382-05	NAVIGATION MODULE (NA)	KK1K2
260	2C	✻	W02-5382-05	NAVIGATION MODULE (NA)	K3
260	2C	✻	W02-5383-05	NAVIGATION MODULE (EU)	E1
260	2C	✻	W02-5384-05	NAVIGATION MODULE (BASE MAP)	R1M1M2
260	2C	✻	W02-5384-05	NAVIGATION MODULE (BASE MAP)	X1

VIDEO CONTROL UNIT (X15-141/146x-xx)

C1		✻	C90-6939-05	ELECTRO	2200UF	16WV	
C2 ,3			CK73GB1H104K	CHIP C	0.10UF	K	
C10			CK73GB1A105K	CHIP C	1.0UF	K	
C11			CE32BQ1C221M	CHIP EL	220UF	16WV	
C12			CK73FB0J106K	CHIP C	10UF	K	
C13 -16			CK73GB1A105K	CHIP C	1.0UF	K	
C18			CK73GB1H104K	CHIP C	0.10UF	K	
C19			CE32BQ1E101M	CHIP EL	100UF	25WV	
C20			CK73GB1H103K	CHIP C	0.010UF	K	
C21			CK73GB1H104K	CHIP C	0.10UF	K	
C51			CE32BJ1C100M	CHIP EL	10UF	16WV	
C52			CE32BJ0J470M	CHIP EL	47UF	6.3WV	
C53			CK73GB1H103K	CHIP C	0.010UF	K	
C54			CK73HB1E103K	CHIP C	0.010UF	K	
C55			CK73HB1A104K	CHIP C	0.10UF	K	
C57			CK73FB1A225K	CHIP C	2.2UF	K	
C58			CK73GB1H102K	CHIP C	1000PF	K	
C100			CC73GCH1H471J	CHIP C	470PF	J	
C101			CC73GCH1H470J	CHIP C	47PF	J	
C102			CK73GB1H103K	CHIP C	0.010UF	K	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-141/146x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C103,104			CC73GCH1H470J	CHIP C	47PF	J	
C105			CK73GB1H103K	CHIP C	0.010UF	K	
C106			CK73GB1H223K	CHIP C	0.022UF	K	
C107			CK73GB1H682K	CHIP C	6800PF	K	
C108,109			CC73GCH1H101J	CHIP C	100PF	J	
C110,111			CK73GB1H102K	CHIP C	1000PF	K	
C112			CK73GB1H103K	CHIP C	0.010UF	K	
C113			CK73GB1H102K	CHIP C	1000PF	K	
C114			CC73GCH1H101J	CHIP C	100PF	J	
C115,116			CK73GB1H104K	CHIP C	0.10UF	K	
C117			CK73FB0J106K	CHIP C	10UF	K	
C118			CK73GB1H104K	CHIP C	0.10UF	K	
C119			CK73EB1E225K	CHIP C	2.2UF	K	
C120			CK73GB1H104K	CHIP C	0.10UF	K	
C121			CK73GB1H103K	CHIP C	0.010UF	K	
C122,123			CK73GB1H104K	CHIP C	0.10UF	K	
C124,125			CK73GB1H103K	CHIP C	0.010UF	K	
C126			CK73GB1H104K	CHIP C	0.10UF	K	
C127,128			CK73EB1E106K	CHIP C	10UF	K	
C131,132			CK73EB1E106K	CHIP C	10UF	K	
C133			CK73GB1H104K	CHIP C	0.10UF	K	
C134			CK73GB1H103K	CHIP C	0.010UF	K	
C135-138			CK73GB1H102K	CHIP C	1000PF	K	
C139			CE32AV0G331M	CHIP EL	330UF	4.0WV	
C140			CE32AV0J221M	CHIP EL	220UF	6.3WV	
C141,142			CK73GB1H104K	CHIP C	0.10UF	K	
C143,144			CK73GB1H103K	CHIP C	0.010UF	K	
C151,152			CK73GB1H104K	CHIP C	0.10UF	K	
C153,154			CK73GB1H103K	CHIP C	0.010UF	K	
C155,156			CK73GB1H102K	CHIP C	1000PF	K	
C159-162			CK73EB1E106K	CHIP C	10UF	K	
C163,164			CK73GB1H104K	CHIP C	0.10UF	K	
C165,166			CK73GB1H103K	CHIP C	0.010UF	K	
C167,168			CK73GB1H104K	CHIP C	0.10UF	K	
C169-172			CK73GB1H102K	CHIP C	1000PF	K	
C173			CE32AV0J221M	CHIP EL	220UF	6.3WV	
C174			CE32AV0G331M	CHIP EL	330UF	4.0WV	
C175,176			CK73GB1H104K	CHIP C	0.10UF	K	
C177,178			CK73GB1H103K	CHIP C	0.010UF	K	
C179,180			CC73GCH1H101J	CHIP C	100PF	J	
C181,182			CK73GB1H103K	CHIP C	0.010UF	K	
C183,184			CK73GB1H682K	CHIP C	6800PF	K	
C185-188			CC73GCH1H470J	CHIP C	47PF	J	
C189			CK73GB1H103K	CHIP C	0.010UF	K	
C190			CK73GB1H102K	CHIP C	1000PF	K	
C191			CC73GCH1H101J	CHIP C	100PF	J	
C192			CK73FB0J106K	CHIP C	10UF	K	
C193			CK73GB1H104K	CHIP C	0.10UF	K	
C194			CK73EB1E225K	CHIP C	2.2UF	K	
C195			CK73GB1H104K	CHIP C	0.10UF	K	
C201			CK73FB0J106K	CHIP C	10UF	K	
C202			CK73GB1H222K	CHIP C	2200PF	K	
C203			CK73FB0J106K	CHIP C	10UF	K	
C204			CK73GB1H222K	CHIP C	2200PF	K	
C207,208			CC73HCH1H080D	CHIP C	8.0PF	D	

Ref. No.	Add	New	Parts No.	Description			Destination
C209,210			CC73HCH1H120J	CHIP C	12PF	J	
C212,213			CK73HB1A104K	CHIP C	0.10UF	K	
C215			CK73HB1A104K	CHIP C	0.10UF	K	
C216			CK73HB1E103K	CHIP C	0.010UF	K	
C218			CK73HB1A104K	CHIP C	0.10UF	K	
C221			CK73HB1A104K	CHIP C	0.10UF	K	
C223,224			CK73HB1A104K	CHIP C	0.10UF	K	
C225			CK73HB1E103K	CHIP C	0.010UF	K	E1M1M2
C225			CK73HB1E103K	CHIP C	0.010UF	K	M3M4X2
C225			CK73HB1E103K	CHIP C	0.010UF	K	X1E2Q1
C227			CK73HB1A104K	CHIP C	0.10UF	K	KK1K2
C227			CK73HB1A104K	CHIP C	0.10UF	K	K5M3M4
C227			CK73HB1A104K	CHIP C	0.10UF	K	M2X1K4
C227			CK73HB1A104K	CHIP C	0.10UF	K	R1K3M1
C227			CK73HB1A104K	CHIP C	0.10UF	K	Q1
C227			CK73HB1A104K	CHIP C	0.10UF	K	X2E2R2
C231,232			CK73HB1A104K	CHIP C	0.10UF	K	
C233-236			CK73HB1E103K	CHIP C	0.010UF	K	
C238			CK73HB1E103K	CHIP C	0.010UF	K	
C239			CK73HB1A104K	CHIP C	0.10UF	K	
C240			CK73HB1E103K	CHIP C	0.010UF	K	
C241			CC73HCH1H102J	CHIP C	1000PF	J	
C242,243			CK73HB1E103K	CHIP C	0.010UF	K	
C244,245			CK73HB0J105K	CHIP C	1.0UF	K	
C246			CC73GCH1H150J	CHIP C	15PF	J	K4K5M3
C246			CC73GCH1H150J	CHIP C	15PF	J	M4X2E2
C246			CC73GCH1H150J	CHIP C	15PF	J	R2Q1
C247			CK73HB1E103K	CHIP C	0.010UF	K	KK1K2
C247			CK73HB1E103K	CHIP C	0.010UF	K	K3M1M2
C247			CK73HB1E103K	CHIP C	0.010UF	K	X1E1R1
C248-251			CK73HB1A104K	CHIP C	0.10UF	K	
C252			CK73HB1E103K	CHIP C	0.010UF	K	
C301			CK73GB1H103K	CHIP C	0.010UF	K	
C302			CK73GB1H104K	CHIP C	0.10UF	K	
C304			CK73GB1H471K	CHIP C	470PF	K	
C305			CK73EB1E106K	CHIP C	10UF	K	
C401,402			CC73GCH1H150J	CHIP C	15PF	J	K4K5M3
C401,402			CC73GCH1H150J	CHIP C	15PF	J	M4X2E2
C401,402			CC73GCH1H150J	CHIP C	15PF	J	R2Q1
C405,406			CK73GB1A474K	CHIP C	0.47UF	K	
C407		✻	CE32BR0J470M	CHIP EL	47UF	6.3WV	
C408			CK73GB1H103K	CHIP C	0.010UF	K	KK1K2
C408			CK73GB1H103K	CHIP C	0.010UF	K	K3M1M2
C408			CK73GB1H103K	CHIP C	0.010UF	K	X1E1R1
C409			CK73GB1H104K	CHIP C	0.10UF	K	KK1K2
C409			CK73GB1H104K	CHIP C	0.10UF	K	K3M1M2
C409			CK73GB1H104K	CHIP C	0.10UF	K	X1E1R1
C411			CK73HB1E103K	CHIP C	0.010UF	K	
C412			CE32BD1A101M	CHIP EL	100UF	10WV	KK1K2
C412			CE32BD1A101M	CHIP EL	100UF	10WV	K3M1M2
C412			CE32BD1A101M	CHIP EL	100UF	10WV	X1E1R1
C413			CK73HB1E103K	CHIP C	0.010UF	K	KK1K2
C413			CK73HB1E103K	CHIP C	0.010UF	K	K3M1M2
C413			CK73HB1E103K	CHIP C	0.010UF	K	X1E1R1
C414			CC73GCH1H150J	CHIP C	15PF	J	KK1K2

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-141/146x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C414			CC73GCH1H150J	CHIP C	15PF	J	K3M1M2
C414			CC73GCH1H150J	CHIP C	15PF	J	X1E1R1
C414,415			CC73GCH1H150J	CHIP C	15PF	J	K4K5M3
C414,415			CC73GCH1H150J	CHIP C	15PF	J	M4X2E2
C414,415			CC73GCH1H150J	CHIP C	15PF	J	R2Q1
C451			CK73FB0J106K	CHIP C	10UF	K	KK1K2
C451			CK73FB0J106K	CHIP C	10UF	K	R1E1K4
C451			CK73FB0J106K	CHIP C	10UF	K	R2
C452			CK73HB1A104K	CHIP C	0.10UF	K	KK1K2
C452			CK73HB1A104K	CHIP C	0.10UF	K	R1E1K4
C452			CK73HB1A104K	CHIP C	0.10UF	K	R2
C453			CC73GCH1H150J	CHIP C	15PF	J	E2Q1M3
C453			CC73GCH1H150J	CHIP C	15PF	J	K3M1M2
C453			CC73GCH1H150J	CHIP C	15PF	J	M4X2
C453			CC73GCH1H150J	CHIP C	15PF	J	X1K5
C455,456			CC73HCH1H101J	CHIP C	100PF	J	KK1K2
C455,456			CC73HCH1H101J	CHIP C	100PF	J	R1E1K4
C455,456			CC73HCH1H101J	CHIP C	100PF	J	R2
C458			CC73GCH1H150J	CHIP C	15PF	J	E2Q1M3
C458			CC73GCH1H150J	CHIP C	15PF	J	K3M1M2
C458			CC73GCH1H150J	CHIP C	15PF	J	M4X2
C458			CC73GCH1H150J	CHIP C	15PF	J	X1K5
C459			CC73HCH1H331J	CHIP C	330PF	J	KK1K2
C459			CC73HCH1H331J	CHIP C	330PF	J	R1E1K4
C459			CC73HCH1H331J	CHIP C	330PF	J	R2
C460,461			CK73GB1A105K	CHIP C	1.0UF	K	KK1K2
C460,461			CK73GB1A105K	CHIP C	1.0UF	K	R1E1K4
C460,461			CK73GB1A105K	CHIP C	1.0UF	K	R2
C462			CK73HB1A104K	CHIP C	0.10UF	K	KK1K2
C462			CK73HB1A104K	CHIP C	0.10UF	K	R1E1K4
C462			CK73HB1A104K	CHIP C	0.10UF	K	R2
C463			CC73HCH1H101J	CHIP C	100PF	J	KK1K2
C463			CC73HCH1H101J	CHIP C	100PF	J	R1E1K4
C463			CC73HCH1H101J	CHIP C	100PF	J	R2
C464			CK73HB1A104K	CHIP C	0.10UF	K	KK1K2
C464			CK73HB1A104K	CHIP C	0.10UF	K	R1E1K4
C464			CK73HB1A104K	CHIP C	0.10UF	K	R2
C466			CE32BJ1C100M	CHIP EL	10UF	16WV	KK1K2
C466			CE32BJ1C100M	CHIP EL	10UF	16WV	R1E1K4
C466			CE32BJ1C100M	CHIP EL	10UF	16WV	R2
C467			CE32BQ0J331M	CHIP EL	330UF	6.3WV	KK1K2
C467			CE32BQ0J331M	CHIP EL	330UF	6.3WV	R1E1K4
C467			CE32BQ0J331M	CHIP EL	330UF	6.3WV	R2
C477			CK73HB1A104K	CHIP C	0.10UF	K	KK1K2
C477			CK73HB1A104K	CHIP C	0.10UF	K	R1E1K4
C477			CK73HB1A104K	CHIP C	0.10UF	K	R2
C478			CK73GB1H102K	CHIP C	1000PF	K	KK1K2
C478			CK73GB1H102K	CHIP C	1000PF	K	K3M1M2
C478			CK73GB1H102K	CHIP C	1000PF	K	X1E1R1
C503			CK73FB0J106K	CHIP C	10UF	K	
C507			CC73HCH1H101J	CHIP C	100PF	J	
C509			CE32BQ0J221M	CHIP EL	220UF	6.3WV	
C520			CC73GCH1H150J	CHIP C	15PF	J	
C532			CK73FB0J106K	CHIP C	10UF	K	
C534			CK73FB0J106K	CHIP C	10UF	K	
C541			CK73HB1A104K	CHIP C	0.10UF	K	
C542			CK73FB0J106K	CHIP C	10UF	K	
C543			CK73HB1A104K	CHIP C	0.10UF	K	
C601,602			CK73GB1A105K	CHIP C	1.0UF	K	
C603			CK73GB1H104K	CHIP C	0.10UF	K	
C605-607			CK73GB1A105K	CHIP C	1.0UF	K	
C608,609		*	CE32BR1C220M	CHIP EL	22UF	16WV	
C612			CK73GB1H104K	CHIP C	0.10UF	K	
C613			CE32BQ0J331M	CHIP EL	330UF	6.3WV	
C614			CE32BJ1C470M	CHIP EL	47UF	16WV	
C615			CE32BJ1C100M	CHIP EL	10UF	16WV	
C616,617			CK73GB1H102K	CHIP C	1000PF	K	
C618			CE32BJ1C100M	CHIP EL	10UF	16WV	
C631			CK73GB1A105K	CHIP C	1.0UF	K	
C632			CK73HB0J105K	CHIP C	1.0UF	K	
C633			CK73HB1A104K	CHIP C	0.10UF	K	
C634			CK73HB0J105K	CHIP C	1.0UF	K	
C635			CK73HB1A104K	CHIP C	0.10UF	K	
C637			CK73FB0J106K	CHIP C	10UF	K	
C638-640			CK73GB1A105K	CHIP C	1.0UF	K	
C641			CK73FB0J106K	CHIP C	10UF	K	
C643,644			CK73HB1A104K	CHIP C	0.10UF	K	
C645,646			CK73EB1A106K	CHIP C	10UF	K	
C647,648			CK73HB1H222K	CHIP C	2200PF	K	
C649			CK73HB1A104K	CHIP C	0.10UF	K	
C650			CK73FB0J106K	CHIP C	10UF	K	
C651			CK73HB1A104K	CHIP C	0.10UF	K	
C652			CK73HB0J105K	CHIP C	1.0UF	K	
C653			CK73HB1H221K	CHIP C	220PF	K	
C654-656			CK73FB0J226M	CHIP C	22UF	M	
C657			CK73HB1H221K	CHIP C	220PF	K	
C658			CK73HB1E103K	CHIP C	0.010UF	K	
C661			CK73GB1A105K	CHIP C	1.0UF	K	
C662,663			CK73HB1A104K	CHIP C	0.10UF	K	
C664			CK73FB0J106K	CHIP C	10UF	K	
C671			CK73HB1A104K	CHIP C	0.10UF	K	
C674			CK73HB1H102K	CHIP C	1000PF	K	
C675,676			CK73GB0J475K	CHIP C	4.7UF	K	
C677			CK73FB0J106K	CHIP C	10UF	K	
C704			CK73FB0J106K	CHIP C	10UF	K	
C707			CK73FB0J106K	CHIP C	10UF	K	
C708			CE32BQ0J560M	CHIP EL	56UF	6.3WV	
C709			CK73FB0J106K	CHIP C	10UF	K	
C712-714			CK73HB1A104K	CHIP C	0.10UF	K	
C718,719			CK73HB1E103K	CHIP C	0.010UF	K	
C800-813			CK73HB1A104K	CHIP C	0.10UF	K	
C814			CK73FB0J106K	CHIP C	10UF	K	
C815,816			CC73HCH1H470J	CHIP C	47PF	J	
C817,818			CK73HB1A104K	CHIP C	0.10UF	K	
C819			CK73FB0J106K	CHIP C	10UF	K	
C820,821			CK73HB1A104K	CHIP C	0.10UF	K	
C822			CK73HB1E103K	CHIP C	0.010UF	K	
C823			CK73FB0J106K	CHIP C	10UF	K	
C824			CK73HB1A104K	CHIP C	0.10UF	K	
C825			CC73HCH1H150J	CHIP C	15PF	J	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-141/146x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C826			CK73HB1E103K	CHIP C 0.010UF K	
C827			CK73HB1A104K	CHIP C 0.10UF K	
C828			CC73HCH1H150J	CHIP C 15PF J	
C829-838			CK73HB1A104K	CHIP C 0.10UF K	
C839,840			CC73HCH1H100D	CHIP C 10PF D	
C841-860			CK73HB1A104K	CHIP C 0.10UF K	
C870			CK73FB0J106K	CHIP C 10UF K	
C900,901			CK73HB1A104K	CHIP C 0.10UF K	
C920,921			CC73HCH1H101J	CHIP C 100PF J	
C922-926			CK73HB1A104K	CHIP C 0.10UF K	
C927,928			CC73HCH1H101J	CHIP C 100PF J	
C929			CK73HB1A104K	CHIP C 0.10UF K	
C930,931			CC73HCH1H101J	CHIP C 100PF J	
C932-935			CK73HB1A104K	CHIP C 0.10UF K	
C936,937			CK73FB0J106K	CHIP C 10UF K	
C938-941			CK73HB1A104K	CHIP C 0.10UF K	
C942			CK73FB0J106K	CHIP C 10UF K	
C943			CK73GB0J225K	CHIP C 2.2UF K	
C944-950			CK73HB1A104K	CHIP C 0.10UF K	
C951			CK73HB0J105K	CHIP C 1.0UF K	
C952			CK73HB1A104K	CHIP C 0.10UF K	
C953			CK73FB0J106K	CHIP C 10UF K	
C954			CE32BQ0J331M	CHIP EL 330UF 6.3WV	
C955			CK73HB1A104K	CHIP C 0.10UF K	
C956			CK73FB0J106K	CHIP C 10UF K	
C957-965			CK73HB1A104K	CHIP C 0.10UF K	
C968			CK73HB1A104K	CHIP C 0.10UF K	
CN1			E41-2958-05	PIN ASSY	
CN51			E41-2624-05	FLAT CABLE CONNECTOR	
CN52			E41-2603-05	FLAT CABLE CONNECTOR	
CN53			E41-2264-05	PIN ASSY	
CN54			E41-2248-05	PIN ASSY	
CN55			E41-2735-05	PIN ASSY	
CN301			E41-2985-05	FLAT CABLE CONNECTOR	
CN401		✻	E41-3171-05	SOCKET FOR PIN ASSY	KK1K2
CN401		✻	E41-3171-05	SOCKET FOR PIN ASSY	K3M1M2
CN401		✻	E41-3171-05	SOCKET FOR PIN ASSY	X1E1R1
CN451		✻	E41-3170-05	PIN ASSY	KK1K2
CN451		✻	E41-3170-05	PIN ASSY	R1E1K4
CN451		✻	E41-3170-05	PIN ASSY	R2
CN700			E41-2979-05	FLAT CABLE CONNECTOR	
CN752		✻	E41-3145-05	FLAT CABLE CONNECTOR	KK1K2
CN752		✻	E41-3145-05	FLAT CABLE CONNECTOR	K3M1M2
CN752		✻	E41-3145-05	FLAT CABLE CONNECTOR	X1E1R1
J401			E56-0809-15	CYLINDRICAL RECEPTACLE	K4K5M3
J401			E56-0809-15	CYLINDRICAL RECEPTACLE	M4X2E2
J401			E56-0809-15	CYLINDRICAL RECEPTACLE	R2Q1
J451			E11-0625-05	PHONE JACK (LGY6502-0900)	KK1K2
J451			E11-0625-05	PHONE JACK (LGY6502-0900)	R1E1K4
J451			E11-0625-05	PHONE JACK (LGY6502-0900)	R2
J601		✻	E63-0980-05	PIN JACK	
J671			E11-0625-05	PHONE JACK (LGY6502-0900)	
J672			E11-0656-05	PHONE JACK (3.5D YELLOW)	
J674			E68-0824-05	JACK (OTHERS)	KK1K2

Ref. No.	Add	New	Parts No.	Description	Destination
J674		✻	E68-0824-05	JACK (OTHERS)	K3M1M2
J674		✻	E68-0824-05	JACK (OTHERS)	X1E1R1
W501	1D	✻	E30-6928-05	CORD WITH PLUG (USB)	
F301			F53-0372-05	FUSE (3.15A)	
L102		✻	L33-2603-05	CHOKE COIL	
L103		✻	L33-2602-05	CHOKE COIL	
L107		✻	L33-2600-05	CHOKE COIL	
L108		✻	L33-2601-05	CHOKE COIL	
L201,202			L92-0332-05	CHIP FERRITE	
L301			L33-2457-05	SMALL FIXED INDUCTOR	
L403			L33-2457-05	SMALL FIXED INDUCTOR	KK1K2
L403			L33-2457-05	SMALL FIXED INDUCTOR	K3M1M2
L403			L33-2457-05	SMALL FIXED INDUCTOR	X1E1R1
L451			L92-0373-05	CHIP FERRITE	KK1K2
L451			L92-0373-05	CHIP FERRITE	R1E1K4
L451			L92-0373-05	CHIP FERRITE	R2
L501			L92-0641-05	FERRITE CORE	
L503			L92-0373-05	CHIP FERRITE	
L602			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L631			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L671			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L700			L92-0373-05	CHIP FERRITE	
L800-802			L92-0373-05	CHIP FERRITE	
L803			L92-0376-05	CHIP FERRITE	
L804-806			L92-0373-05	CHIP FERRITE	
L808,809			L92-0373-05	CHIP FERRITE	
L920-922			L92-0373-05	CHIP FERRITE	
L925			L92-0373-05	CHIP FERRITE	
X201			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
X202			L77-2974-05	CRYSTAL RESONATOR (11.0592MHZ)	
X800			L77-2951-05	CRYSTAL RESONATOR (12.00MHZ)	
X801			L77-2886-05	CRYSTAL RESONATOR (27.00MHZ)	
H	1D		N82-2608-48	BINDING HEAD TAPTITE SCREW	
CP201-204			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP701			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP702			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP704			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP705			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP706-709			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP800-804			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP920-927			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP929-933			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP934,935			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP936-939			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP940-944			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP945-948			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP949-955			RK74HB1J331J	CHIP-COM 330 J 1/16W	
R1			RK73GH2A104D	CHIP R 100K D 1/10W	
R2			RK73GH2A513D	CHIP R 51K D 1/10W	
R3			RK73GH2A333D	CHIP R 33K D 1/10W	
R4 ,5			RK73GB2A224J	CHIP R 220K J 1/10W	
R6			RK73GH2A113D	CHIP R 11K D 1/10W	
R7			RK73GH2A104D	CHIP R 100K D 1/10W	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-141/146x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R8			RK73GH2A683D	CHIP R 68K	D	1/10W	
R9 ,10			RK73GH2A334D	CHIP R 330K	D	1/10W	
R11 ,12			RK73GB2A224J	CHIP R 220K	J	1/10W	
R13			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R14			RK73GB2A224J	CHIP R 220K	J	1/10W	
R16 -18			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R20 ,21			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R27 -31			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R32			RK73GB2A473J	CHIP R 47K	J	1/10W	
R33			RK73GB2A152J	CHIP R 1.5K	J	1/10W	
R34 ,35			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R41			RK73GB2A823J	CHIP R 82K	J	1/10W	
R42			RK73GB2A103J	CHIP R 10K	J	1/10W	
R43			RK73GB2A224J	CHIP R 220K	J	1/10W	
R44			RK73GB2A333J	CHIP R 33K	J	1/10W	
R45			RK73GB2A224J	CHIP R 220K	J	1/10W	
R51			RK73HB1J100J	CHIP R 10	J	1/16W	
R52 ,53			RK73HB1J103J	CHIP R 10K	J	1/16W	
R54			RK73FB2B1R0J	CHIP R 1.0	J	1/8W	
R55			RK73GB2A100J	CHIP R 10	J	1/10W	
R56 -59			RK73HB1J101J	CHIP R 100	J	1/16W	
R60 -62			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R63 -71			RK73GB2A101J	CHIP R 100	J	1/10W	
R100			RK73GB2A473J	CHIP R 47K	J	1/10W	
R101			RK73GH2A471D	CHIP R 470	D	1/10W	
R102			RK73GH2A681D	CHIP R 680	D	1/10W	
R103			RK73GB2A823J	CHIP R 82K	J	1/10W	
R104,105			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R106			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R107			RK73GH2A183D	CHIP R 18K	D	1/10W	
R108			RK73GH2A562D	CHIP R 5.6K	D	1/10W	
R109			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R110			RK73GH2A103D	CHIP R 10K	D	1/10W	
R111			RK73GH2A333D	CHIP R 33K	D	1/10W	
R112-115			RK73GB2A100J	CHIP R 10	J	1/10W	
R116			RK73GB2A103J	CHIP R 10K	J	1/10W	
R117,118			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R119			RK73FB2B2R2J	CHIP R 2.2	J	1/8W	
R120			RK73GB2A100J	CHIP R 10	J	1/10W	
R121			RK73GB2A2R2J	CHIP R 2.2	J	1/10W	
R122			RK73GB2A100J	CHIP R 10	J	1/10W	
R123			RK73GB2A2R2J	CHIP R 2.2	J	1/10W	
R124,125			RK73EB2E100J	CHIP R 10	J	1/4W	
R126			R92-5275-05	CHIP METAL-R 0.062		1/3W	
R128,129		*	R92-5243-05	CHIP METAL-R 0.047		1/3W	
R132			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R141,142			RK73GB2A100J	CHIP R 10	J	1/10W	
R143,144			RK73GB2A2R2J	CHIP R 2.2	J	1/10W	
R145,146			RK73EB2E100J	CHIP R 10	J	1/4W	
R147			R92-5276-05	CHIP METAL-R 0.033		1/3W	
R148			R92-5244-05	CHIP METAL-R 0.039		1/3W	
R149			R92-5276-05	CHIP METAL-R 0.033		1/3W	
R150			R92-5244-05	CHIP METAL-R 0.039		1/3W	
R151-154			RK73GB2A100J	CHIP R 10	J	1/10W	
R155,156			RK73GH2A333D	CHIP R 33K	D	1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R157			RK73GH2A562D	CHIP R 5.6K	D	1/10W	
R158			RK73GH2A103D	CHIP R 10K	D	1/10W	
R159			RK73GH2A511D	CHIP R 510	D	1/10W	
R160			RK73GH2A561D	CHIP R 560	D	1/10W	
R161,162			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R163,164			RK73GB2A823J	CHIP R 82K	J	1/10W	
R165			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R166			RK73FB2B2R2J	CHIP R 2.2	J	1/8W	
R167			RK73GB2A103J	CHIP R 10K	J	1/10W	
R168			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R169-171			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R180-189			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R201,202			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R204			RK73HB1J104J	CHIP R 100K	J	1/16W	
R205			RK73HB1J222J	CHIP R 2.2K	J	1/16W	
R206,207			RK73HB1J104J	CHIP R 100K	J	1/16W	
R210			RK73HB1J104J	CHIP R 100K	J	1/16W	KK1K2
R210			RK73HB1J104J	CHIP R 100K	J	1/16W	R1K3K4
R210			RK73HB1J104J	CHIP R 100K	J	1/16W	R2K5
R210-215			RK73HB1J104J	CHIP R 100K	J	1/16W	E2Q1M3
R210-215			RK73HB1J104J	CHIP R 100K	J	1/16W	M1M2X1
R210-215			RK73HB1J104J	CHIP R 100K	J	1/16W	M4X2
R210-216			RK73HB1J104J	CHIP R 100K	J	1/16W	E1
R212-215			RK73HB1J104J	CHIP R 100K	J	1/16W	KK1K2
R212-215			RK73HB1J104J	CHIP R 100K	J	1/16W	R1K3K4
R212-215			RK73HB1J104J	CHIP R 100K	J	1/16W	R2K5
R217			RK73HB1J104J	CHIP R 100K	J	1/16W	KK1K2
R217			RK73HB1J104J	CHIP R 100K	J	1/16W	K5M3M4
R217			RK73HB1J104J	CHIP R 100K	J	1/16W	M2X1K4
R217			RK73HB1J104J	CHIP R 100K	J	1/16W	R1K3M1
R217			RK73HB1J104J	CHIP R 100K	J	1/16W	Q1
R217			RK73HB1J104J	CHIP R 100K	J	1/16W	X2E2R2
R219-221			RK73HB1J101J	CHIP R 100	J	1/16W	
R222			RK73HB1J104J	CHIP R 100K	J	1/16W	
R223			RK73HB1J101J	CHIP R 100	J	1/16W	KK1K2
R223			RK73HB1J101J	CHIP R 100	J	1/16W	R1K3K4
R223			RK73HB1J101J	CHIP R 100	J	1/16W	R2K5
R223-225			RK73HB1J101J	CHIP R 100	J	1/16W	E1M1M2
R223-225			RK73HB1J101J	CHIP R 100	J	1/16W	M3M4X2
R223-225			RK73HB1J101J	CHIP R 100	J	1/16W	X1E2Q1
R225			RK73HB1J101J	CHIP R 100	J	1/16W	KK1K2
R225			RK73HB1J101J	CHIP R 100	J	1/16W	R1K3K4
R225			RK73HB1J101J	CHIP R 100	J	1/16W	R2K5
R226			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R227			RK73GB2A101J	CHIP R 100	J	1/10W	
R228			RK73HB1J182J	CHIP R 1.8K	J	1/16W	
R229			RK73HB1J473J	CHIP R 47K	J	1/16W	
R230-235			RK73HB1J101J	CHIP R 100	J	1/16W	
R236			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R237			RK73HB1J473J	CHIP R 47K	J	1/16W	
R238,239			RK73HB1J103J	CHIP R 10K	J	1/16W	
R240			RK73HB1J473J	CHIP R 47K	J	1/16W	
R241			RK73HB1J103J	CHIP R 10K	J	1/16W	
R242,243			RK73HB1J101J	CHIP R 100	J	1/16W	
R246			RK73HB1J473J	CHIP R 47K	J	1/16W	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-141/146x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R247			RK73HB1J103J	CHIP R	10K	J	1/16W	
R250			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R251			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R252			RK73HB1J101J	CHIP R	100	J	1/16W	
R254-256			RK73HB1J101J	CHIP R	100	J	1/16W	
R257			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R258			RK73HB1J101J	CHIP R	100	J	1/16W	
R259			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R260			RK73HB1J101J	CHIP R	100	J	1/16W	
R261-263			RK73HB1J104J	CHIP R	100K	J	1/16W	
R264			RK73HB1J103J	CHIP R	10K	J	1/16W	
R265,266			RK73HB1J101J	CHIP R	100	J	1/16W	
R267			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R268			RK73HB1J104J	CHIP R	100K	J	1/16W	
R269			RK73HB1J101J	CHIP R	100	J	1/16W	
R270			RK73HB1J104J	CHIP R	100K	J	1/16W	E2Q1M3
R270			RK73HB1J104J	CHIP R	100K	J	1/16W	K3M1M2
R270			RK73HB1J104J	CHIP R	100K	J	1/16W	M4X2
R270			RK73HB1J104J	CHIP R	100K	J	1/16W	X1K5
R271			RK73HB1J104J	CHIP R	100K	J	1/16W	KK1K2
R271			RK73HB1J104J	CHIP R	100K	J	1/16W	R1E1K4
R271			RK73HB1J104J	CHIP R	100K	J	1/16W	R2
R272			RK73HB1J103J	CHIP R	10K	J	1/16W	
R273			RK73HB1J104J	CHIP R	100K	J	1/16W	E1K3M1
R273			RK73HB1J104J	CHIP R	100K	J	1/16W	K1K2R1
R273			RK73HB1J104J	CHIP R	100K	J	1/16W	K5M3M4
R273			RK73HB1J104J	CHIP R	100K	J	1/16W	M2X1K4
R273			RK73HB1J104J	CHIP R	100K	J	1/16W	Q1
R273			RK73HB1J104J	CHIP R	100K	J	1/16W	X2E2R2
R274			RK73HB1J104J	CHIP R	100K	J	1/16W	K
R275			RK73HB1J101J	CHIP R	100	J	1/16W	
R276			RK73HB1J104J	CHIP R	100K	J	1/16W	K2M2M4
R276,277			RK73HB1J104J	CHIP R	100K	J	1/16W	E1K3M1
R276,277			RK73HB1J104J	CHIP R	100K	J	1/16W	KK1R1
R276,277			RK73HB1J104J	CHIP R	100K	J	1/16W	K5E2
R276,277			RK73HB1J104J	CHIP R	100K	J	1/16W	Q1M3X2
R276,277			RK73HB1J104J	CHIP R	100K	J	1/16W	X1K4R2
R278			RK73HB1J104J	CHIP R	100K	J	1/16W	K2M2M4
R279			RK73HB1J000J	CHIP R	0.0	J	1/16W	E1M1M2
R279			RK73HB1J000J	CHIP R	0.0	J	1/16W	M3M4X2
R279			RK73HB1J000J	CHIP R	0.0	J	1/16W	X1E2Q1
R280			RK73HB1J000J	CHIP R	0.0	J	1/16W	KK1K2
R280			RK73HB1J000J	CHIP R	0.0	J	1/16W	R1K3K4
R280			RK73HB1J000J	CHIP R	0.0	J	1/16W	R2K5
R281			RK73HB1J473J	CHIP R	47K	J	1/16W	E1M1M2
R281			RK73HB1J473J	CHIP R	47K	J	1/16W	M3M4X2
R281			RK73HB1J473J	CHIP R	47K	J	1/16W	X1E2Q1
R282			RK73HB1J103J	CHIP R	10K	J	1/16W	KK1K2
R282			RK73HB1J103J	CHIP R	10K	J	1/16W	K5M3M4
R282			RK73HB1J103J	CHIP R	10K	J	1/16W	M2X1K4
R282			RK73HB1J103J	CHIP R	10K	J	1/16W	R1K3M1
R282			RK73HB1J103J	CHIP R	10K	J	1/16W	Q1
R282			RK73HB1J103J	CHIP R	10K	J	1/16W	X2E2R2
R285			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R287			RK73HB1J104J	CHIP R	100K	J	1/16W	KK1K2
R287			RK73HB1J104J	CHIP R	100K	J	1/16W	R1K3K4
R287			RK73HB1J104J	CHIP R	100K	J	1/16W	R2K5
R288			RK73HB1J104J	CHIP R	100K	J	1/16W	E1M1M2
R288			RK73HB1J104J	CHIP R	100K	J	1/16W	M3M4X2
R288			RK73HB1J104J	CHIP R	100K	J	1/16W	X1E2Q1
R291			RK73HB1J101J	CHIP R	100	J	1/16W	
R292			RK73HB1J104J	CHIP R	100K	J	1/16W	
R294			RK73HB1J104J	CHIP R	100K	J	1/16W	
R295			RK73HB1J101J	CHIP R	100	J	1/16W	
R296			RK73HB1J104J	CHIP R	100K	J	1/16W	
R297			RK73HB1J101J	CHIP R	100	J	1/16W	
R298			RK73HB1J104J	CHIP R	100K	J	1/16W	E1K3M1
R298			RK73HB1J104J	CHIP R	100K	J	1/16W	K1K2R1
R298			RK73HB1J104J	CHIP R	100K	J	1/16W	K5M3M4
R298			RK73HB1J104J	CHIP R	100K	J	1/16W	M2X1K4
R298			RK73HB1J104J	CHIP R	100K	J	1/16W	Q1
R298			RK73HB1J104J	CHIP R	100K	J	1/16W	X2E2R2
R299			RK73HB1J104J	CHIP R	100K	J	1/16W	K
R300			RK73HB1J101J	CHIP R	100	J	1/16W	
R301,302			RK73HB1J104J	CHIP R	100K	J	1/16W	
R304			RK73HB1J103J	CHIP R	10K	J	1/16W	
R305			RK73HB1J101J	CHIP R	100	J	1/16W	
R306			RK73HB1J104J	CHIP R	100K	J	1/16W	
R307			RK73HB1J101J	CHIP R	100	J	1/16W	
R308			RK73HB1J104J	CHIP R	100K	J	1/16W	
R309			RK73HB1J101J	CHIP R	100	J	1/16W	
R310			RK73HB1J104J	CHIP R	100K	J	1/16W	
R311			RK73HB1J101J	CHIP R	100	J	1/16W	
R313			RK73HB1J104J	CHIP R	100K	J	1/16W	
R315			RK73HB1J104J	CHIP R	100K	J	1/16W	
R316			RK73HB1J101J	CHIP R	100	J	1/16W	
R317			RK73HB1J123J	CHIP R	12K	J	1/16W	
R319			RK73HB1J104J	CHIP R	100K	J	1/16W	
R320			RK73HB1J223J	CHIP R	22K	J	1/16W	
R321			RK73HB1J101J	CHIP R	100	J	1/16W	
R322			RK73HB1J104J	CHIP R	100K	J	1/16W	
R323			RK73HB1J101J	CHIP R	100	J	1/16W	
R324			RK73HB1J123J	CHIP R	12K	J	1/16W	
R325			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R326,327			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R328,329			RK73HB1J101J	CHIP R	100	J	1/16W	
R330			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R331			RK73HB1J104J	CHIP R	100K	J	1/16W	KK1K2
R331			RK73HB1J104J	CHIP R	100K	J	1/16W	K3M1M2
R331			RK73HB1J104J	CHIP R	100K	J	1/16W	X1E1R1
R332			RK73HB1J000J	CHIP R	0.0	J	1/16W	K4K5M3
R332			RK73HB1J000J	CHIP R	0.0	J	1/16W	M4X2E2
R332			RK73HB1J000J	CHIP R	0.0	J	1/16W	R2Q1
R333			RK73GB2A100J	CHIP R	10	J	1/10W	K4K5M3
R333			RK73GB2A100J	CHIP R	10	J	1/10W	M4X2E2
R333			RK73GB2A100J	CHIP R	10	J	1/10W	R2Q1
R334			RK73HB1J103J	CHIP R	10K	J	1/16W	K4K5M3
R334			RK73HB1J103J	CHIP R	10K	J	1/16W	M4X2E2
R334			RK73HB1J103J	CHIP R	10K	J	1/16W	R2Q1
R335			RK73GB2A103J	CHIP R	10K	J	1/10W	KK1K2

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-141/146x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R335			RK73GB2A103J	CHIP R	10K	J	1/10W	K3K4K5
R335			RK73GB2A153J	CHIP R	15K	J	1/10W	M1M2M3
R335			RK73GB2A153J	CHIP R	15K	J	1/10W	M4
R335			RK73GB2A242J	CHIP R	2.4K	J	1/10W	E1E2
R335			RK73GB2A393J	CHIP R	39K	J	1/10W	X1X2
R335			RK73GB2A682J	CHIP R	6.8K	J	1/10W	Q1
R336			RK73HB1J103J	CHIP R	10K	J	1/16W	KK1K2
R336			RK73HB1J103J	CHIP R	10K	J	1/16W	K3M1M2
R336			RK73HB1J103J	CHIP R	10K	J	1/16W	X1E1R1
R337			RK73GB2A103J	CHIP R	10K	J	1/10W	M2X1R2
R337			RK73GB2A103J	CHIP R	10K	J	1/10W	M3M4X2
R337			RK73GB2A103J	CHIP R	10K	J	1/10W	R1E1M1
R337			RK73GB2A103J	CHIP R	10K	J	1/10W	E2Q1
R339			RK73HB1J104J	CHIP R	100K	J	1/16W	
R342			RK73HB1J104J	CHIP R	100K	J	1/16W	
R344			RK73HB1J104J	CHIP R	100K	J	1/16W	
R345			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R346			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R347-349			RK73HB1J104J	CHIP R	100K	J	1/16W	
R350-352			RK73HB1J101J	CHIP R	100	J	1/16W	
R353,354			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R355-363			RK73HB1J101J	CHIP R	100	J	1/16W	
R364-366			RK73HB1J470J	CHIP R	47	J	1/16W	
R370			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R371-375			RK73HB1J101J	CHIP R	100	J	1/16W	
R378			RK73HB1J101J	CHIP R	100	J	1/16W	
R379,380			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R383			RK73GB2A103J	CHIP R	10K	J	1/10W	X1X2
R384			RK73GB2A103J	CHIP R	10K	J	1/10W	E2Q1M3
R384			RK73GB2A103J	CHIP R	10K	J	1/10W	KK1K2
R384			RK73GB2A103J	CHIP R	10K	J	1/10W	M1M2K4
R384			RK73GB2A103J	CHIP R	10K	J	1/10W	M4
R384			RK73GB2A103J	CHIP R	10K	J	1/10W	R1E1K3
R384			RK73GB2A103J	CHIP R	10K	J	1/10W	R2K5
R385			RK73HB1J104J	CHIP R	100K	J	1/16W	KK1K2
R385			RK73HB1J104J	CHIP R	100K	J	1/16W	K3K4K5
R386			RK73HB1J104J	CHIP R	100K	J	1/16W	M2X1R2
R386			RK73HB1J104J	CHIP R	100K	J	1/16W	M3M4X2
R386			RK73HB1J104J	CHIP R	100K	J	1/16W	R1E1M1
R386			RK73HB1J104J	CHIP R	100K	J	1/16W	E2Q1
R387			RK73HB1J103J	CHIP R	10K	J	1/16W	
R394			RK73GB2A100J	CHIP R	10	J	1/10W	
R401,402			RK73GB2A100J	CHIP R	10	J	1/10W	K4K5M3
R401,402			RK73GB2A100J	CHIP R	10	J	1/10W	M4X2E2
R401,402			RK73GB2A100J	CHIP R	10	J	1/10W	R2Q1
R403,404			RK73HB1J100J	CHIP R	10	J	1/16W	KK1K2
R403,404			RK73HB1J100J	CHIP R	10	J	1/16W	K3M1M2
R403,404			RK73HB1J100J	CHIP R	10	J	1/16W	X1E1R1
R405			RK73GB2A100J	CHIP R	10	J	1/10W	K4K5M3
R405			RK73GB2A100J	CHIP R	10	J	1/10W	M4X2E2
R405			RK73GB2A100J	CHIP R	10	J	1/10W	R2Q1
R407			RK73HB1J101J	CHIP R	100	J	1/16W	KK1K2
R407			RK73HB1J101J	CHIP R	100	J	1/16W	K3M1M2
R407			RK73HB1J101J	CHIP R	100	J	1/16W	X1E1R1
R408-410			RK73HB1J000J	CHIP R	0.0	J	1/16W	KK1K2
R408-410			RK73HB1J000J	CHIP R	0.0	J	1/16W	K3M1M2
R408-410			RK73HB1J000J	CHIP R	0.0	J	1/16W	X1E1R1
R411,412			RK73HB1J100J	CHIP R	10	J	1/16W	KK1K2
R411,412			RK73HB1J100J	CHIP R	10	J	1/16W	K3M1M2
R411,412			RK73HB1J100J	CHIP R	10	J	1/16W	X1E1R1
R413,414			RK73EB2E100J	CHIP R	10	J	1/4W	K4K5M3
R413,414			RK73EB2E100J	CHIP R	10	J	1/4W	M4X2E2
R413,414			RK73EB2E100J	CHIP R	10	J	1/4W	R2Q1
R415			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	K4K5M3
R415			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	M4X2E2
R415			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	R2Q1
R416-418			RK73GB2A100J	CHIP R	10	J	1/10W	
R419,420			RK73EB2E101J	CHIP R	100	J	1/4W	K4K5M3
R419,420			RK73EB2E101J	CHIP R	100	J	1/4W	M4X2E2
R419,420			RK73EB2E101J	CHIP R	100	J	1/4W	R2Q1
R421-424			RK73GB2A750J	CHIP R	75	J	1/10W	K4K5M3
R421-424			RK73GB2A750J	CHIP R	75	J	1/10W	M4X2E2
R421-424			RK73GB2A750J	CHIP R	75	J	1/10W	R2Q1
R425-427			RK73EB2E100J	CHIP R	10	J	1/4W	K4K5M3
R425-427			RK73EB2E100J	CHIP R	10	J	1/4W	M4X2E2
R425-427			RK73EB2E100J	CHIP R	10	J	1/4W	R2Q1
R428			RK73EB2E101J	CHIP R	100	J	1/4W	K4K5M3
R428			RK73EB2E101J	CHIP R	100	J	1/4W	M4X2E2
R428			RK73EB2E101J	CHIP R	100	J	1/4W	R2Q1
R429-431			RK73GB2A000J	CHIP R	0.0	J	1/10W	K4K5M3
R429-431			RK73GB2A000J	CHIP R	0.0	J	1/10W	M4X2E2
R429-431			RK73GB2A000J	CHIP R	0.0	J	1/10W	R2Q1
R432			RK73GB2A100J	CHIP R	10	J	1/10W	K4K5M3
R432			RK73GB2A100J	CHIP R	10	J	1/10W	M4X2E2
R432			RK73GB2A100J	CHIP R	10	J	1/10W	R2Q1
R433-435			RK73GH2A750D	CHIP R	75	D	1/10W	KK1K2
R433-435			RK73GH2A750D	CHIP R	75	D	1/10W	K3M1M2
R433-435			RK73GH2A750D	CHIP R	75	D	1/10W	X1E1R1
R436			RK73EB2E102J	CHIP R	1.0K	J	1/4W	K4K5M3
R436			RK73EB2E102J	CHIP R	1.0K	J	1/4W	M4X2E2
R436			RK73EB2E102J	CHIP R	1.0K	J	1/4W	R2Q1
R437			RK73HB1J4R7J	CHIP R	4.7	J	1/16W	KK1K2
R437			RK73HB1J4R7J	CHIP R	4.7	J	1/16W	K3M1M2
R437			RK73HB1J4R7J	CHIP R	4.7	J	1/16W	X1E1R1
R438			RK73HB1J101J	CHIP R	100	J	1/16W	KK1K2
R438			RK73HB1J101J	CHIP R	100	J	1/16W	R1E1K4
R438			RK73HB1J101J	CHIP R	100	J	1/16W	R2K5
R439-442			RK73HB1J000J	CHIP R	0.0	J	1/16W	KK1K2
R439-442			RK73HB1J000J	CHIP R	0.0	J	1/16W	K3M1M2
R439-442			RK73HB1J000J	CHIP R	0.0	J	1/16W	X1E1R1
R441,442			RK73HB1J000J	CHIP R	0.0	J	1/16W	K4K5M3
R441,442			RK73HB1J000J	CHIP R	0.0	J	1/16W	M4X2E2
R441,442			RK73HB1J000J	CHIP R	0.0	J	1/16W	R2Q1
R443			RK73HB1J104J	CHIP R	100K	J	1/16W	
R445			RK73HB1J101J	CHIP R	100	J	1/16W	
R446-450			RK73HB1J000J	CHIP R	0.0	J	1/16W	KK1K2
R446-450			RK73HB1J000J	CHIP R	0.0	J	1/16W	K3M1M2
R446-450			RK73HB1J000J	CHIP R	0.0	J	1/16W	X1E1R1
R448			RK73HB1J000J	CHIP R	0.0	J	1/16W	K4K5M3
R448			RK73HB1J000J	CHIP R	0.0	J	1/16W	M4X2E2

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-141/146x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R448			RK73HB1J000J	CHIP R	0.0	J	1/16W	R2Q1
R451			RK73HB1J100J	CHIP R	10	J	1/16W	KK1K2
R451			RK73HB1J100J	CHIP R	10	J	1/16W	R1E1K4
R451			RK73HB1J100J	CHIP R	10	J	1/16W	R2
R453			RK73HB1J102J	CHIP R	1.0K	J	1/16W	KK1K2
R453			RK73HB1J102J	CHIP R	1.0K	J	1/16W	R1E1K4
R453			RK73HB1J102J	CHIP R	1.0K	J	1/16W	R2
R456			RK73GB2A100J	CHIP R	10	J	1/10W	E2Q1M3
R456			RK73GB2A100J	CHIP R	10	J	1/10W	K3M1M2
R456			RK73GB2A100J	CHIP R	10	J	1/10W	M4X2
R456			RK73GB2A100J	CHIP R	10	J	1/10W	X1K5
R459			RK73GB2A100J	CHIP R	10	J	1/10W	E2Q1M3
R459			RK73GB2A100J	CHIP R	10	J	1/10W	K3M1M2
R459			RK73GB2A100J	CHIP R	10	J	1/10W	M4X2
R459			RK73GB2A100J	CHIP R	10	J	1/10W	X1K5
R460			RK73GB2A473J	CHIP R	47K	J	1/10W	KK1K2
R460			RK73GB2A473J	CHIP R	47K	J	1/10W	R1E1K4
R460			RK73GB2A473J	CHIP R	47K	J	1/10W	R2
R461,462			RK73GB2A103J	CHIP R	10K	J	1/10W	KK1K2
R461,462			RK73GB2A103J	CHIP R	10K	J	1/10W	R1E1K4
R461,462			RK73GB2A103J	CHIP R	10K	J	1/10W	R2
R463			RK73HB1J473J	CHIP R	47K	J	1/16W	KK1K2
R463			RK73HB1J473J	CHIP R	47K	J	1/16W	R1E1K4
R463			RK73HB1J473J	CHIP R	47K	J	1/16W	R2
R464			RK73GB2A473J	CHIP R	47K	J	1/10W	KK1K2
R464			RK73GB2A473J	CHIP R	47K	J	1/10W	R1E1K4
R464			RK73GB2A473J	CHIP R	47K	J	1/10W	R2
R465,466			RK73GB2A223J	CHIP R	22K	J	1/10W	KK1K2
R465,466			RK73GB2A223J	CHIP R	22K	J	1/10W	R1E1K4
R465,466			RK73GB2A223J	CHIP R	22K	J	1/10W	R2
R467			RK73GB2A101J	CHIP R	100	J	1/10W	KK1K2
R467			RK73GB2A101J	CHIP R	100	J	1/10W	R1E1K4
R467			RK73GB2A101J	CHIP R	100	J	1/10W	R2
R468			RK73HB1J473J	CHIP R	47K	J	1/16W	KK1K2
R468			RK73HB1J473J	CHIP R	47K	J	1/16W	R1E1K4
R468			RK73HB1J473J	CHIP R	47K	J	1/16W	R2
R469			RK73GB2A101J	CHIP R	100	J	1/10W	KK1K2
R469			RK73GB2A101J	CHIP R	100	J	1/10W	R1E1K4
R469			RK73GB2A101J	CHIP R	100	J	1/10W	R2
R472,473			RK73EB2E101J	CHIP R	100	J	1/4W	KK1K2
R472,473			RK73EB2E101J	CHIP R	100	J	1/4W	R1E1K4
R472,473			RK73EB2E101J	CHIP R	100	J	1/4W	R2
R477			RK73HB1J000J	CHIP R	0.0	J	1/16W	KK1K2
R477			RK73HB1J000J	CHIP R	0.0	J	1/16W	K3M1M2
R477			RK73HB1J000J	CHIP R	0.0	J	1/16W	X1E1R1
R478-488			RK73HB1J000J	CHIP R	0.0	J	1/16W	K4K5M3
R478-488			RK73HB1J000J	CHIP R	0.0	J	1/16W	M4X2E2
R478-488			RK73HB1J000J	CHIP R	0.0	J	1/16W	R2Q1
R491,492			RK73HB1J000J	CHIP R	0.0	J	1/16W	KK1K2
R491,492			RK73HB1J000J	CHIP R	0.0	J	1/16W	R1E1K4
R491,492			RK73HB1J000J	CHIP R	0.0	J	1/16W	R2
R502			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R503			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R504			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R505			RK73HB1J473J	CHIP R	47K	J	1/16W	

Ref. No.	Add	New	Parts No.	Description				Destination
R508			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R509			RK73HB1J220J	CHIP R	22	J	1/16W	
R511			RK73GB2A100J	CHIP R	10	J	1/10W	
R512			RK73EB2E000J	CHIP R	0.0	J	1/4W	
R519			RK73HB1J220J	CHIP R	22	J	1/16W	
R522			RK73HB1J103J	CHIP R	10K	J	1/16W	
R529			RK73GH2A162D	CHIP R	1.6K	D	1/10W	
R530			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R535			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R540-542			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R543,544			RK73HB1J103J	CHIP R	10K	J	1/16W	
R546			RK73HB1J473J	CHIP R	47K	J	1/16W	
R547			RK73HB1J331J	CHIP R	330	J	1/16W	
R548			RK73HB1J103J	CHIP R	10K	J	1/16W	
R549			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R550			RK73HB1J223J	CHIP R	22K	J	1/16W	
R602			RK73GH2A471D	CHIP R	470	D	1/10W	
R603			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R604			RK73EB2E750J	CHIP R	75	J	1/4W	
R605			RK73GH2A750D	CHIP R	75	D	1/10W	
R606			RK73EB2E101J	CHIP R	100	J	1/4W	
R607			RK73HB1J100J	CHIP R	10	J	1/16W	
R608			RK73HB1J103J	CHIP R	10K	J	1/16W	
R609-611			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R613			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R615			RK73EB2E101J	CHIP R	100	J	1/4W	
R616			RK73GB2A471J	CHIP R	470	J	1/10W	
R617			RK73GB2A223J	CHIP R	22K	J	1/10W	
R619			RK73GB2A223J	CHIP R	22K	J	1/10W	
R621			RK73EB2E101J	CHIP R	100	J	1/4W	
R622			RK73GB2A471J	CHIP R	470	J	1/10W	
R631,632			RK73HB1J620J	CHIP R	62	J	1/16W	
R633			RK73HB1J680J	CHIP R	68	J	1/16W	
R634			RK73HB1J620J	CHIP R	62	J	1/16W	
R635-638			RK73HB1J204J	CHIP R	200K	J	1/16W	
R639,640			RK73HB1J153J	CHIP R	15K	J	1/16W	
R641,642			RK73HB1J204J	CHIP R	200K	J	1/16W	
R643			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R644,645			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R646			RK73GH2A471D	CHIP R	470	D	1/10W	
R647,648			RK73HB1J153J	CHIP R	15K	J	1/16W	
R650-652			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R654			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R657			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R659,660			RK73HB1J101J	CHIP R	100	J	1/16W	
R663			RK73GB2A2R2J	CHIP R	2.2	J	1/10W	
R664			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R665,666			RK73HB1J103J	CHIP R	10K	J	1/16W	
R670			RK73GB2A202J	CHIP R	2.0K	J	1/10W	
R671			RK73HB1J100J	CHIP R	10	J	1/16W	
R672			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R673			RK73GB2A223J	CHIP R	22K	J	1/10W	
R674			RK73EB2E100J	CHIP R	10	J	1/4W	
R675			RK73GB2A223J	CHIP R	22K	J	1/10W	
R676			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-141/146x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R680			RK73GB2A620J	CHIP R 62	J	1/10W	
R682,683			RK73HB1J100J	CHIP R 10	J	1/16W	
R684,685			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R689			RK73GB2A4R7J	CHIP R 4.7	J	1/10W	
R690-697			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R698,699			RK73EB2E101J	CHIP R 100	J	1/4W	
R701			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R703			RK73HB1J103J	CHIP R 10K	J	1/16W	
R705			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R707,708			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R711			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R714			RK73HB1J103J	CHIP R 10K	J	1/16W	
R716-718			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R720,721			RK73HB1J103J	CHIP R 10K	J	1/16W	
R760			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R801,802			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R803			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R806			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R807			RK73HB1J101J	CHIP R 100	J	1/16W	
R808			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R809			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R810			RK73HB1J101J	CHIP R 100	J	1/16W	
R811			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R812-815			RK73HB1J101J	CHIP R 100	J	1/16W	
R818			RK73HB1J103J	CHIP R 10K	J	1/16W	
R820-823			RK73HB1J103J	CHIP R 10K	J	1/16W	
R825			RK73HB1J332J	CHIP R 3.3K	J	1/16W	
R826			RK73HB1J220J	CHIP R 22	J	1/16W	
R827			RK73HB1J103J	CHIP R 10K	J	1/16W	
R828			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R829			RK73HB1J332J	CHIP R 3.3K	J	1/16W	
R832,833			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R834			RK73HB1J120J	CHIP R 12	J	1/16W	
R835			RK73HB1J103J	CHIP R 10K	J	1/16W	
R836			RK73HB1J180J	CHIP R 18	J	1/16W	
R837			RK73HB1J120J	CHIP R 12	J	1/16W	
R838			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R839			RK73HB1J120J	CHIP R 12	J	1/16W	
R841			RK73HB1J103J	CHIP R 10K	J	1/16W	
R844			RK73HB1J103J	CHIP R 10K	J	1/16W	
R845			RK73HB1J473J	CHIP R 47K	J	1/16W	
R846			RK73HB1J220J	CHIP R 22	J	1/16W	KK1K2
R846			RK73HB1J220J	CHIP R 22	J	1/16W	K5M3M4
R846			RK73HB1J220J	CHIP R 22	J	1/16W	M2X1K4
R846			RK73HB1J220J	CHIP R 22	J	1/16W	R1K3M1
R846			RK73HB1J220J	CHIP R 22	J	1/16W	Q1
R846			RK73HB1J220J	CHIP R 22	J	1/16W	X2E2R2
R848			RK73HB1J000J	CHIP R 0.0	J	1/16W	KK1K2
R848			RK73HB1J000J	CHIP R 0.0	J	1/16W	K5M3M4
R848			RK73HB1J000J	CHIP R 0.0	J	1/16W	M2X1K4
R848			RK73HB1J000J	CHIP R 0.0	J	1/16W	R1K3M1
R848			RK73HB1J000J	CHIP R 0.0	J	1/16W	Q1
R848			RK73HB1J000J	CHIP R 0.0	J	1/16W	X2E2R2
R849			RK73HB1J220J	CHIP R 22	J	1/16W	
R850			RK73FB2B000J	CHIP R 0.0	J	1/8W	

Ref. No.	Add	New	Parts No.	Description			Destination
R851			RK73HB1J220J	CHIP R 22	J	1/16W	E1
R851,852			RK73HB1J220J	CHIP R 22	J	1/16W	KK1K2
R851,852			RK73HB1J220J	CHIP R 22	J	1/16W	K5M3M4
R851,852			RK73HB1J220J	CHIP R 22	J	1/16W	M2X1K4
R851,852			RK73HB1J220J	CHIP R 22	J	1/16W	R1K3M1
R851,852			RK73HB1J220J	CHIP R 22	J	1/16W	Q1
R851,852			RK73HB1J220J	CHIP R 22	J	1/16W	X2E2R2
R855			RK73HB1J103J	CHIP R 10K	J	1/16W	
R858			RK73HB1J103J	CHIP R 10K	J	1/16W	
R860			RK73HB1J103J	CHIP R 10K	J	1/16W	
R862			RK73HB1J220J	CHIP R 22	J	1/16W	
R863			RK73HB1J103J	CHIP R 10K	J	1/16W	
R864,865			RK73HB1J220J	CHIP R 22	J	1/16W	
R866-869			RK73HB1J103J	CHIP R 10K	J	1/16W	
R870			RK73GH2A622D	CHIP R 6.2K	D	1/10W	
R871,872			RK73HB1J332J	CHIP R 3.3K	J	1/16W	
R873			RK73GH2A820D	CHIP R 82	D	1/10W	
R874			RK73GH2A180D	CHIP R 18	D	1/10W	
R876			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R877			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R878			RK73GH2A820D	CHIP R 82	D	1/10W	
R879			RK73GH2A180D	CHIP R 18	D	1/10W	
R880			RK73HB1J223J	CHIP R 22K	J	1/16W	
R881,882			RK73GH2A750D	CHIP R 75	D	1/10W	
R884,885			RK73GH2A750D	CHIP R 75	D	1/10W	
R887,888			RK73GH2A750D	CHIP R 75	D	1/10W	
R889			RK73HB1J220J	CHIP R 22	J	1/16W	
R890			RK73FB2B000J	CHIP R 0.0	J	1/8W	
R891			RK73GH2A750D	CHIP R 75	D	1/10W	
R892			RK73HB1J220J	CHIP R 22	J	1/16W	
R893			RK73GH2A750D	CHIP R 75	D	1/10W	
R894,895			RK73HB1J220J	CHIP R 22	J	1/16W	
R896			RK73HB1J473J	CHIP R 47K	J	1/16W	
R897			RK73HB1J152J	CHIP R 1.5K	J	1/16W	
R898			RK73HB1J473J	CHIP R 47K	J	1/16W	
R899			RK73HB1J152J	CHIP R 1.5K	J	1/16W	
R900			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R901			RK73HB1J105J	CHIP R 1.0M	J	1/16W	
R902			RK73HB1J220J	CHIP R 22	J	1/16W	
R903			RK73HB1J222J	CHIP R 2.2K	J	1/16W	
R904			RK73HB1J103J	CHIP R 10K	J	1/16W	
R905			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R907			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R908			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R909			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R910			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R911			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R913,914			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R920-927			RK73HB1J220J	CHIP R 22	J	1/16W	
R932-939			RK73HB1J331J	CHIP R 330	J	1/16W	
R940-944			RK73HB1J220J	CHIP R 22	J	1/16W	
R945,946			RK73HB1J470J	CHIP R 47	J	1/16W	
R947,948			RK73EB2E4R7J	CHIP R 4.7	J	1/4W	
R949-964			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R965			RK73HB1J101J	CHIP R 100	J	1/16W	KK1K2

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

The IC100,150 and IC801 in the Video control unit (X15-141/146) are not replaceable components. When these ICs are defective, replace the whole Video control unit (X15-141/146).

VIDEO CONTROL UNIT (X15-141/146x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R965			RK73HB1J101J	CHIP R 100 J 1/16W	K3M1M2
R965			RK73HB1J101J	CHIP R 100 J 1/16W	X1E1R1
D2			HSU119TRF-E	DIODE	
D101-104			1SS357-F	DIODE	
D201			HSU119TRF-E	DIODE	KK1K2
D201			HSU119TRF-E	DIODE	K5M3M4
D201			HSU119TRF-E	DIODE	M2X1K4
D201			HSU119TRF-E	DIODE	R1K3M1
D201			HSU119TRF-E	DIODE	Q1
D201			HSU119TRF-E	DIODE	X2E2R2
D402-404			CVS10A180M	VARISTOR	K4K5M3
D402-404			CVS10A180M	VARISTOR	M4X2E2
D402-404			CVS10A180M	VARISTOR	R2Q1
D405-408			CVL10C270M300	VARISTOR	K4K5M3
D405-408			CVL10C270M300	VARISTOR	M4X2E2
D405-408			CVL10C270M300	VARISTOR	R2Q1
D409-411			RKZ6.2KG(B2)	ZENER DIODE	K4K5M3
D409-411			RKZ6.2KG(B2)	ZENER DIODE	M4X2E2
D409-411			RKZ6.2KG(B2)	ZENER DIODE	R2Q1
D451		✻	RKZ3.9KG(B2)	ZENER DIODE	KK1K2
D451		✻	RKZ3.9KG(B2)	ZENER DIODE	R1E1K4
D451		✻	RKZ3.9KG(B2)	ZENER DIODE	R2
D452,453			CVS10A120M	VARISTOR	KK1K2
D452,453			CVS10A120M	VARISTOR	R1E1K4
D452,453			CVS10A120M	VARISTOR	R2
D501,502			AVRL1613R3FTA	VARISTOR	
D605,606			CVL10C270M300	VARISTOR	
D607,608			KDS120-P	DIODE	
D609,610			CVS10A180M	VARISTOR	
D611		✻	MC2850-T111	DIODE	
D671			CVL10C270M300	VARISTOR	
D672-674			CVS10A120M	VARISTOR	
D675			CVL10C270M300	VARISTOR	
IC1			XC6201P502PR	ANALOGUE IC	
IC2			R1114N331B-TR	ANALOGUE IC (3.3V LF)	
IC51			NJM4565V-ZB	ANALOGUE IC	
IC100		✻	-	ANALOGUE IC	
IC150		✻	-	ANALOGUE IC	
IC201			30878FJBGP	MICROCONTROLLER IC	
IC202		✻	W05-1548-00	ROM IC	KK1K2
IC202		✻	W05-1548-00	ROM IC	K3K4K5
IC202		✻	W05-1549-00	ROM IC	E1E2
IC202		✻	W05-1549-00	ROM IC	M2M4
IC202		✻	W05-1550-00	ROM IC	M1M3
IC202		✻	W05-1551-00	ROM IC	R1R2
IC202		✻	W05-1551-00	ROM IC	X1X2
IC202		✻	W05-1552-00	ROM IC	Q1
IC202		✻	W05-1553-00	ROM IC	V
IC205			XC6120N362N-G	MOS-IC	
IC206			74AHCT1G08GW	MOS-IC	E1M1M2
IC206			74AHCT1G08GW	MOS-IC	M3M4X2
IC206			74AHCT1G08GW	MOS-IC	X1E2Q1
IC210			74AHCT1G08GW	MOS-IC	KK1K2
IC210			74AHCT1G08GW	MOS-IC	K3M1M2

Ref. No.	Add	New	Parts No.	Description	Destination
IC210			74AHCT1G08GW	MOS-IC	X1E1R1
IC211			TC7SH125FU-F	MOS-IC	
IC212			74AHC2G126DP	MOS-IC	
IC213			TC7W02FU-F	MOS-IC	
IC214			TC7SH02FU-F	MOS-IC	
IC401			74AHCT1G08GW	MOS-IC	
IC402			TC7SG08FU-F	MOS-IC	KK1K2
IC402			TC7SG08FU-F	MOS-IC	K3M1M2
IC402			TC7SG08FU-F	MOS-IC	X1E1R1
IC451			NJM4565V-ZB	ANALOGUE IC	KK1K2
IC451			NJM4565V-ZB	ANALOGUE IC	R1E1K4
IC451			NJM4565V-ZB	ANALOGUE IC	R2
IC453			74AHC2G126DP	MOS-IC	KK1K2
IC453			74AHC2G126DP	MOS-IC	R1E1K4
IC453			74AHC2G126DP	MOS-IC	R2
IC501			MIC2005-08YM6	MOS-IC	
IC506			R1173S001D-F	ANALOGUE IC (LDO ADJ)	
IC541			MFI341S2162	MICROPROCESSOR IC	
IC602			AN15885A-VF	ANALOGUE IC	
IC631		✻	AK4388AETP	MOS-IC	
IC632			NJM2516VC3-ZB	ANALOGUE IC	
IC633			NJM2561F1-ZB	ANALOGUE IC	
IC634			NJM4565V-ZB	ANALOGUE IC	
IC635			XC6201P502MR	ANALOGUE IC	
IC671			NJM2505AF-ZB	ANALOGUE IC	
IC703		✻	M29W128GH79C5	ROM IC	
IC704,705			74AHC1GU04GW	MOS-IC	
IC800			FM24C64-G	FERAM IC	
IC801		✻	-	MICROPROCESSOR IC	
IC920			BD3533FVM	ANALOGUE IC	
IC921,922			HY5D561622FT3	DRAM IC	
Q1			2SC4081	TRANSISTOR	
Q2			2SA1576A	TRANSISTOR	
Q3		✻	RT1P140M-T111	TRANSISTOR	
Q4			RT1N144M-T111	TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q6			2SA1576A	TRANSISTOR	
Q7			2SC4081	TRANSISTOR	
Q8			RT1P141M-T111	TRANSISTOR	
Q9			RT1N441M-T111	TRANSISTOR	
Q10			2SB1689	TRANSISTOR	
Q11			RT1N441M-T111	TRANSISTOR	
Q14			RT1N441M-T111	TRANSISTOR	
Q15 ,16			2SA1576A	TRANSISTOR	
Q17			TPC8110-F	FET	
Q18			RT1N441M-T111	TRANSISTOR	
Q25			RT1N441M-T111	TRANSISTOR	
Q102,103			HAT2218R-E	DUAL FET	
Q107,108			HAT2218R-E	DUAL FET	
Q201-203			2SA1576A	TRANSISTOR	
Q204			RT1N441M-T111	TRANSISTOR	
Q205			RT1P144M-T111	TRANSISTOR	E1
Q205,206			RT1P144M-T111	TRANSISTOR	KK1K2
Q205,206			RT1P144M-T111	TRANSISTOR	K5M3M4
Q205,206			RT1P144M-T111	TRANSISTOR	M2X1K4

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-141/146x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q205,206			RT1P144M-T111	TRANSISTOR	R1K3M1
Q205,206			RT1P144M-T111	TRANSISTOR	Q1
Q205,206			RT1P144M-T111	TRANSISTOR	X2E2R2
Q207		✻	RT1N436M-T111	TRANSISTOR	
Q601			RT1N430M-T111	TRANSISTOR	
Q602			RT1P441M-T111	TRANSISTOR	
Q603			RT1N430M-T111	TRANSISTOR	
A1		✻	W02-5373-05	ELECTRIC CIRCUIT MODULE (BT)	KK1K2
A1		✻	W02-5373-05	ELECTRIC CIRCUIT MODULE (BT)	R1E1K4
A1		✻	W02-5373-05	ELECTRIC CIRCUIT MODULE (BT)	R2
SWITCH UNIT (X16-6860-10)					
D101,102			B30-3201-05	LED (RGB F3)	
D103,104			B30-1779-05	LED (1608_SR)	
C101			CK73EB1E105K	CHIP C 1.0UF K	
CN101		✻	E41-3163-05	FLAT CABLE CONNECTOR	
R101			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R102			RK73GB2A223J	CHIP R 22K J 1/10W	
R103			RK73FB2B101J	CHIP R 100 J 1/8W	
R104			RK73GB2A361J	CHIP R 360 J 1/10W	
R105			RK73GB2A331J	CHIP R 330 J 1/10W	
R106			RK73GB2A000J	CHIP R 0.0 J 1/10W	
S101-106			S70-0901-05	TACT SWITCH	
D110-115			CVS10A180M	VARISTOR	
D116			UDZW6.2(B)	ZENER DIODE	
IC101			PIC95603	ANALOGUE IC	
ELECTRIC UNIT (X34-668/676x-xx)					
C1			C90-5666-05	ELECTRO 3900UF 25WV	
C2 ,3			CK73GB1H103K	CHIP C 0.010UF K	
C4			C93-1470-05	CHIP C 15000PF K	E1M1M2
C4			C93-1470-05	CHIP C 15000PF K	E2Q1M3
C4			C93-1470-05	CHIP C 15000PF K	M4
C5			CK73GB1H103K	CHIP C 0.010UF K	
C6			CK73GB1A105K	CHIP C 1.0UF K	
C7			CK73FB1C105K	CHIP C 1.0UF K	
C8			CK73GB1H103K	CHIP C 0.010UF K	
C9			CK73GB1A105K	CHIP C 1.0UF K	
C10			CK73FB1E474K	CHIP C 0.47UF K	
C11			CK73FB1A335K	CHIP C 3.3UF K	
C12			CK73GB1A105K	CHIP C 1.0UF K	
C13			CK73GB1H104K	CHIP C 0.10UF K	
C14			CK73GB1H103K	CHIP C 0.010UF K	
C15			C93-1470-05	CHIP C 15000PF K	E1M1M2
C15			C93-1470-05	CHIP C 15000PF K	E2Q1M3
C15			C93-1470-05	CHIP C 15000PF K	M4
C96			CC73GCH1H270J	CHIP C 27PF J	
C98			CC73GCH1H270J	CHIP C 27PF J	
C101			CK73FB1H334K	CHIP C 0.33UF K	
C102			CK73GB1H103K	CHIP C 0.010UF K	
C103			CK73GB1A105K	CHIP C 1.0UF K	
C104			CD04AY1A221M	ELECTRO 220UF 10WV	
C105			C90-6851-05	ELECTRO 220UF 25WV	

Ref. No.	Add	New	Parts No.	Description	Destination
C106			CK73FB1A225K	CHIP C 2.2UF K	
C107			CD04AY1A101M	ELECTRO 100UF 10WV	
C108			CK73GB1H104K	CHIP C 0.10UF K	
C109			CC73GCH1H150J	CHIP C 15PF J	E1K3M1
C109			CC73GCH1H150J	CHIP C 15PF J	K1K2R1
C109			CC73GCH1H150J	CHIP C 15PF J	K5M3M4
C109			CC73GCH1H150J	CHIP C 15PF J	M2X1K4
C109			CC73GCH1H150J	CHIP C 15PF J	Q1
C109			CC73GCH1H150J	CHIP C 15PF J	X2E2R2
C111			CK73GB1H103K	CHIP C 0.010UF K	
C112			CK73GB1A105K	CHIP C 1.0UF K	
C113			CK73GB1H104K	CHIP C 0.10UF K	KK1K2
C113			CK73GB1H104K	CHIP C 0.10UF K	K5M3M4
C113			CK73GB1H104K	CHIP C 0.10UF K	M2X1K4
C113			CK73GB1H104K	CHIP C 0.10UF K	R1K3M1
C113			CK73GB1H104K	CHIP C 0.10UF K	Q1
C113			CK73GB1H104K	CHIP C 0.10UF K	X2E2R2
C114			CK73FB1H334K	CHIP C 0.33UF K	
C115			CK73GB1A105K	CHIP C 1.0UF K	
C116			CD04BD1C221M	ELECTRO 220UF 16WV	
C123			CK73EB1C106K	CHIP C 10UF K	K
C124			CD04AV1C101M	ELECTRO 100UF 16WV	K
C125-128			CK73EB1E225K	CHIP C 2.2UF K	K
C129			CK73EB1C106K	CHIP C 10UF K	K
C130			CK73GB1H223K	CHIP C 0.022UF K	K
C131			CK73GB1H103K	CHIP C 0.010UF K	K
C132,133			CK73EB1C106K	CHIP C 10UF K	K
C134			CC73GCH1H270J	CHIP C 27PF J	
C201,202			CK73GB1H102K	CHIP C 1000PF K	
C203,204			CK73FB1C105K	CHIP C 1.0UF K	
C205			CK73FB1C106K	CHIP C 10UF K	
C206			CK73GB1H103K	CHIP C 0.010UF K	
C401,402			CK73GB1A105K	CHIP C 1.0UF K	
C403,404			CK73GB1A474K	CHIP C 0.47UF K	
C405			CK73GB1A105K	CHIP C 1.0UF K	
C406			CD04AS1H010M	ELECTRO 1UF 50WV	
C407			CD04AS1C470M	ELECTRO 47UF 16WV	
C409,410			CK73GB1A105K	CHIP C 1.0UF K	
C413,414			CK73GB1A105K	CHIP C 1.0UF K	
C417			CD04AS1V100M	ELECTRO 10UF 35WV	
C431,432			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C433-436			CK73GB1A105K	CHIP C 1.0UF K	
C443			CK73GB1A105K	CHIP C 1.0UF K	
C444			CK73FB1C106K	CHIP C 10UF K	
C445			CK73GB1A105K	CHIP C 1.0UF K	
C449			CC73GCH1H150J	CHIP C 15PF J	
C451			CD04AV1C220M	ELECTRO 22UF 16WV	
C452			CK73GB1C104K	CHIP C 0.10UF K	
C453			CK73FB0J106K	CHIP C 10UF K	
C454-458			CK73GB1A105K	CHIP C 1.0UF K	KK1K2
C454-458			CK73GB1A105K	CHIP C 1.0UF K	K5M3M4
C454-458			CK73GB1A105K	CHIP C 1.0UF K	M2X1K4
C454-458			CK73GB1A105K	CHIP C 1.0UF K	R1K3M1
C454-458			CK73GB1A105K	CHIP C 1.0UF K	Q1
C454-458			CK73GB1A105K	CHIP C 1.0UF K	X2E2R2

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-668/676x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C454-462			CK73GB1A105K	CHIP C	1.0UF	K	E1
C462			CK73GB1A105K	CHIP C	1.0UF	K	E2Q1M3
C462			CK73GB1A105K	CHIP C	1.0UF	K	M1M2X1
C462			CK73GB1A105K	CHIP C	1.0UF	K	M4X2
C462-466			CK73GB1A105K	CHIP C	1.0UF	K	K3K5
C462-468			CK73GB1A105K	CHIP C	1.0UF	K	KK1K2
C462-468			CK73GB1A105K	CHIP C	1.0UF	K	R1K4R2
C466			CK73GB1A105K	CHIP C	1.0UF	K	E2Q1M3
C466			CK73GB1A105K	CHIP C	1.0UF	K	M1M2X1
C466			CK73GB1A105K	CHIP C	1.0UF	K	M4X2
C466-468			CK73GB1A105K	CHIP C	1.0UF	K	E1
C469,470			CK73GB1A105K	CHIP C	1.0UF	K	E2Q1M3
C469,470			CK73GB1A105K	CHIP C	1.0UF	K	K3M1M2
C469,470			CK73GB1A105K	CHIP C	1.0UF	K	M4X2
C469,470			CK73GB1A105K	CHIP C	1.0UF	K	X1K5
C500,501			CC73GCH1H100D	CHIP C	10PF	D	E2Q1M3
C500,501			CC73GCH1H100D	CHIP C	10PF	D	KK1K2
C500,501			CC73GCH1H100D	CHIP C	10PF	D	M1M2K4
C500,501			CC73GCH1H100D	CHIP C	10PF	D	M4
C500,501			CC73GCH1H100D	CHIP C	10PF	D	R1E1K3
C500,501			CC73GCH1H100D	CHIP C	10PF	D	R2K5
C504			CK73GB1H103K	CHIP C	0.010UF	K	E2Q1M3
C504			CK73GB1H103K	CHIP C	0.010UF	K	KK1K2
C504			CK73GB1H103K	CHIP C	0.010UF	K	M1M2K4
C504			CK73GB1H103K	CHIP C	0.010UF	K	M4
C504			CK73GB1H103K	CHIP C	0.010UF	K	R1E1K3
C504			CK73GB1H103K	CHIP C	0.010UF	K	R2K5
C505			CC73GCH1H331J	CHIP C	330PF	J	E2Q1M3
C505			CC73GCH1H331J	CHIP C	330PF	J	KK1K2
C505			CC73GCH1H331J	CHIP C	330PF	J	M1M2K4
C505			CC73GCH1H331J	CHIP C	330PF	J	M4
C505			CC73GCH1H331J	CHIP C	330PF	J	R1E1K3
C505			CC73GCH1H331J	CHIP C	330PF	J	R2K5
C506			CC73GCH1H150J	CHIP C	15PF	J	X1X2
C515			CD04AV1V100M	ELECTRO	10UF	35WV	E2Q1M3
C515			CD04AV1V100M	ELECTRO	10UF	35WV	KK1K2
C515			CD04AV1V100M	ELECTRO	10UF	35WV	M1M2K4
C515			CD04AV1V100M	ELECTRO	10UF	35WV	M4
C515			CD04AV1V100M	ELECTRO	10UF	35WV	R1E1K3
C515			CD04AV1V100M	ELECTRO	10UF	35WV	R2K5
C516-519			CK73GB1H103K	CHIP C	0.010UF	K	
C520			CK73GB1H102K	CHIP C	1000PF	K	E1
C524			CK73GB1H102K	CHIP C	1000PF	K	
C551			CC73GCH1H180J	CHIP C	18PF	J	E1
C552			CC73GCH1H070D	CHIP C	7.0PF	D	E1
C553			CC73GCH1H150J	CHIP C	15PF	J	E1
C554			CC73GCH1H180J	CHIP C	18PF	J	E1
C555			CC73GCH1H390J	CHIP C	39PF	J	E1
C556			CC73GCH1H020C	CHIP C	2.0PF	C	E1
C557			CC73GCH1H120J	CHIP C	12PF	J	E1
C558			CK73FB1C105K	CHIP C	1.0UF	K	E1
C560-562			CC73GCH1H102J	CHIP C	1000PF	J	E1
C563			CC73GCH1H221J	CHIP C	220PF	J	E1
C564			CC73GCH1H030C	CHIP C	3.0PF	C	E1
C565,566			CC73GCH1H560J	CHIP C	56PF	J	E1

Ref. No.	Add	New	Parts No.	Description			Destination
C567			CC73GCH1H102J	CHIP C	1000PF	J	E1
C596			CC73GCH1H100D	CHIP C	10PF	D	
C597			CC73GCH1H101J	CHIP C	100PF	J	
C600-602			CK73GB1A105K	CHIP C	1.0UF	K	E1M1M2
C600-602			CK73GB1A105K	CHIP C	1.0UF	K	M3M4X2
C600-602			CK73GB1A105K	CHIP C	1.0UF	K	X1E2Q1
C606			CC73GCH1H150J	CHIP C	15PF	J	KK1K2
C606			CC73GCH1H150J	CHIP C	15PF	J	R1K3K4
C606			CC73GCH1H150J	CHIP C	15PF	J	R2K5
C616-618			CK73GB1H104K	CHIP C	0.10UF	K	E1M1M2
C616-618			CK73GB1H104K	CHIP C	0.10UF	K	M3M4X2
C616-618			CK73GB1H104K	CHIP C	0.10UF	K	X1E2Q1
C650-652			CK73GB1A105K	CHIP C	1.0UF	K	KK1K2
C650-652			CK73GB1A105K	CHIP C	1.0UF	K	K5M3M4
C650-652			CK73GB1A105K	CHIP C	1.0UF	K	M2X1K4
C650-652			CK73GB1A105K	CHIP C	1.0UF	K	R1K3M1
C650-652			CK73GB1A105K	CHIP C	1.0UF	K	Q1
C650-652			CK73GB1A105K	CHIP C	1.0UF	K	X2E2R2
C653			CK73GB1C104K	CHIP C	0.10UF	K	KK1K2
C653			CK73GB1C104K	CHIP C	0.10UF	K	K5M3M4
C653			CK73GB1C104K	CHIP C	0.10UF	K	M2X1K4
C653			CK73GB1C104K	CHIP C	0.10UF	K	R1K3M1
C653			CK73GB1C104K	CHIP C	0.10UF	K	Q1
C653			CK73GB1C104K	CHIP C	0.10UF	K	X2E2R2
C654			CC73GCH1H470J	CHIP C	47PF	J	KK1K2
C654			CC73GCH1H470J	CHIP C	47PF	J	K5M3M4
C654			CC73GCH1H470J	CHIP C	47PF	J	M2X1K4
C654			CC73GCH1H470J	CHIP C	47PF	J	R1K3M1
C654			CC73GCH1H470J	CHIP C	47PF	J	Q1
C654			CC73GCH1H470J	CHIP C	47PF	J	X2E2R2
C656			CC73GCH1H150J	CHIP C	15PF	J	E1
C801-804			CD04AS1V100M	ELECTRO	10UF	35WV	
C805,806			CK73EB1C106K	CHIP C	10UF	K	
C807-812			CK73GB1H102K	CHIP C	1000PF	K	
C813-816			CD04AS1V100M	ELECTRO	10UF	35WV	K
C817,818			CK73EB1C106K	CHIP C	10UF	K	K
C819-822			CD04AS1V100M	ELECTRO	10UF	35WV	K
C823,824			CK73EB1C106K	CHIP C	10UF	K	K
C831			CC73GCH1H101J	CHIP C	100PF	J	
C832			CC73GCH1H100D	CHIP C	10PF	D	
C833			CC73GCH1H101J	CHIP C	100PF	J	
C834			CK73GB1H102K	CHIP C	1000PF	K	
C901-904			CK73GB1C224K	CHIP C	0.22UF	K	
C905			CK73GB1A105K	CHIP C	1.0UF	K	
C906			CD04BA1E330M	ELECTRO	33UF	25WV	
C907			C90-6780-05	ELECTRO	1UF	16WV	
C909			CK73GB1A105K	CHIP C	1.0UF	K	
C913-920			CK73GB1H222K	CHIP C	2200PF	K	
C921-928			CC73GCH1H221J	CHIP C	220PF	J	
C931-934			CC73GCH1H101J	CHIP C	100PF	J	
C935-938			CC73GCH1H150J	CHIP C	15PF	J	
CN201			E41-2981-05	FLAT CABLE CONNECTOR			
CN202			E41-2979-05	FLAT CABLE CONNECTOR			
CN203			E41-2958-05	PIN ASSY			

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-668/676x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
J1			E58-1043-05	RECTANGULAR RECEPTACLE	
J600			E58-1034-05	RECTANGULAR RECEPTACLE	E1M1M2
J600			E58-1034-05	RECTANGULAR RECEPTACLE	M3M4X2
J600			E58-1034-05	RECTANGULAR RECEPTACLE	X1E2Q1
J650			E58-1097-05	RECTANGULAR RECEPTACLE	KK1K2
J650			E58-1097-05	RECTANGULAR RECEPTACLE	K5M3M4
J650			E58-1097-05	RECTANGULAR RECEPTACLE	M2X1K4
J650			E58-1097-05	RECTANGULAR RECEPTACLE	R1K3M1
J650			E58-1097-05	RECTANGULAR RECEPTACLE	Q1
J650			E58-1097-05	RECTANGULAR RECEPTACLE	X2E2R2
J800			E63-0972-05	PIN JACK	
W500		✻	E30-6926-05	CORD WITH PLUG (ANT)	
W501		✻	E30-6927-05	CORD WITH PLUG (X34-NAVI)	E1
F101			F53-0306-05	FUSE (UL,CSA) 5A	KK1K2
F101			F53-0306-05	FUSE (UL,CSA) 5A	K5M3M4
F101			F53-0306-05	FUSE (UL,CSA) 5A	M2X1K4
F101			F53-0306-05	FUSE (UL,CSA) 5A	R1K3M1
F101			F53-0306-05	FUSE (UL,CSA) 5A	Q1
F101			F53-0306-05	FUSE (UL,CSA) 5A	X2E2R2
F102			F53-0297-05	FUSE (UL,CSA) 1.6A	
L1			L33-2319-05	CHOKE COIL ASSY	
⚠ L11			L33-2436-05	CHOKE COIL ASSY	
L101			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L102			L41-2205-33	SMALL FIXED INDUCTOR (22U)	K
L502			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L505			L92-0329-05	CHIP FERRITE	E1
L551			L41-2705-33	SMALL FIXED INDUCTOR (27U)	E1
L552			L41-1588-18	SMALL FIXED INDUCTOR	E1
L553			L41-1805-33	SMALL FIXED INDUCTOR (18U)	E1
L554,555			L41-1588-18	SMALL FIXED INDUCTOR	E1
L556			L19-0825-05	BALUN TRANSFORMER	E1
L558			L41-1888-18	SMALL FIXED INDUCTOR (0.18U)	E1
X500		✻	L77-3827-05	CRYSTAL RESONATOR	E2Q1M3
X500		✻	L77-3827-05	CRYSTAL RESONATOR	KK1K2
X500		✻	L77-3827-05	CRYSTAL RESONATOR	M1M2K4
X500		✻	L77-3827-05	CRYSTAL RESONATOR	M4
X500		✻	L77-3827-05	CRYSTAL RESONATOR	R1E1K3
X500		✻	L77-3827-05	CRYSTAL RESONATOR	R2K5
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	KK1K2
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	K5M3M4
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	M2X1K4
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	R1K3M1
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	Q1
B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW	X2E2R2
K	3D		N09-6727-05	TAPTITE SCREW	
L	2C	✻	N35-2614-48	BINDING HEAD MACHINE SCREW	
M	2D		N82-3008-48	BINDING HEAD TAPTITE SCREW	
R1			RK73EB2E272J	CHIP R 2.7K J 1/4W	
R2			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R4			RK73EB2E103J	CHIP R 10K J 1/4W	
R6			RK73GB2A103J	CHIP R 10K J 1/10W	
R7			RK73GB2A473J	CHIP R 47K J 1/10W	
R9			RK73EB2E272J	CHIP R 2.7K J 1/4W	

Ref. No.	Add	New	Parts No.	Description	Destination
R10			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R12			RK73EB2E101J	CHIP R 100 J 1/4W	
R13 ,14			RK73EB2E622J	CHIP R 6.2K J 1/4W	
R15			RK73GB2A153J	CHIP R 15K J 1/10W	
R16			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R18			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R19			RK73PB2H102J	CHIP R 1.0K J 1/2W	
R20			RK73GB2A223J	CHIP R 22K J 1/10W	
R21			RK73PB2H102J	CHIP R 1.0K J 1/2W	
R22			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R24			RK73FB2B000J	CHIP R 0.0 J 1/8W	E1E2Q1
R25			RK73PB2H102J	CHIP R 1.0K J 1/2W	KK1K2
R25			RK73PB2H102J	CHIP R 1.0K J 1/2W	M2X1K4
R25			RK73PB2H102J	CHIP R 1.0K J 1/2W	M3M4X2
R25			RK73PB2H102J	CHIP R 1.0K J 1/2W	R1K3M1
R25			RK73PB2H102J	CHIP R 1.0K J 1/2W	R2K5
R26			RK73GB2A103J	CHIP R 10K J 1/10W	KK1K2
R26			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K4
R26			RK73GB2A103J	CHIP R 10K J 1/10W	M3M4X2
R26			RK73GB2A103J	CHIP R 10K J 1/10W	R1K3M1
R26			RK73GB2A103J	CHIP R 10K J 1/10W	R2K5
R27			RK73PB2H102J	CHIP R 1.0K J 1/2W	KK1K2
R27			RK73PB2H102J	CHIP R 1.0K J 1/2W	M2X1K4
R27			RK73PB2H102J	CHIP R 1.0K J 1/2W	M3M4X2
R27			RK73PB2H102J	CHIP R 1.0K J 1/2W	R1K3M1
R27			RK73PB2H102J	CHIP R 1.0K J 1/2W	R2K5
R28			RK73GB2A103J	CHIP R 10K J 1/10W	KK1K2
R28			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K4
R28			RK73GB2A103J	CHIP R 10K J 1/10W	M3M4X2
R28			RK73GB2A103J	CHIP R 10K J 1/10W	R1K3M1
R28			RK73GB2A103J	CHIP R 10K J 1/10W	R2K5
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	KK1K2
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	M2X1K4
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	M3M4X2
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	R1K3M1
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	R2K5
R30			RK73EB2E103J	CHIP R 10K J 1/4W	
R31			RK73GB2A104J	CHIP R 100K J 1/10W	
R32			RK73GB2A473J	CHIP R 47K J 1/10W	
R98			RK73GB2A100J	CHIP R 10 J 1/10W	
R101			RK73FB2B221J	CHIP R 220 J 1/8W	
R102			RK73GH2A243D	CHIP R 24K D 1/10W	
R103			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R104			RK73FB2B223J	CHIP R 22K J 1/8W	
R105,106			RK73GB2A101J	CHIP R 100 J 1/10W	
R107			RK73GB2A100J	CHIP R 10 J 1/10W	E1K3M1
R107			RK73GB2A100J	CHIP R 10 J 1/10W	K1K2R1
R107			RK73GB2A100J	CHIP R 10 J 1/10W	K5M3M4
R107			RK73GB2A100J	CHIP R 10 J 1/10W	M2X1K4
R107			RK73GB2A100J	CHIP R 10 J 1/10W	Q1
R107			RK73GB2A100J	CHIP R 10 J 1/10W	X2E2R2
R109			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R110			RK73GB2A823J	CHIP R 82K J 1/10W	KK1K2
R110			RK73GB2A823J	CHIP R 82K J 1/10W	K5M3M4
R110			RK73GB2A823J	CHIP R 82K J 1/10W	M2X1K4

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-668/676x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R110			RK73GB2A823J	CHIP R	82K	J	1/10W	R1K3M1
R110			RK73GB2A823J	CHIP R	82K	J	1/10W	Q1
R110			RK73GB2A823J	CHIP R	82K	J	1/10W	X2E2R2
R111			RK73GB2A103J	CHIP R	10K	J	1/10W	KK1K2
R111			RK73GB2A103J	CHIP R	10K	J	1/10W	K5M3M4
R111			RK73GB2A103J	CHIP R	10K	J	1/10W	M2X1K4
R111			RK73GB2A103J	CHIP R	10K	J	1/10W	R1K3M1
R111			RK73GB2A103J	CHIP R	10K	J	1/10W	Q1
R111			RK73GB2A103J	CHIP R	10K	J	1/10W	X2E2R2
R112			RK73GB2A473J	CHIP R	47K	J	1/10W	KK1K2
R112			RK73GB2A473J	CHIP R	47K	J	1/10W	K5M3M4
R112			RK73GB2A473J	CHIP R	47K	J	1/10W	M2X1K4
R112			RK73GB2A473J	CHIP R	47K	J	1/10W	R1K3M1
R112			RK73GB2A473J	CHIP R	47K	J	1/10W	Q1
R112			RK73GB2A473J	CHIP R	47K	J	1/10W	X2E2R2
R113			RK73FB2B221J	CHIP R	220	J	1/8W	
R114			RK73GH2A243D	CHIP R	24K	D	1/10W	
R115			RK73GH2A432D	CHIP R	4.3K	D	1/10W	
R117			RK73FB2B152J	CHIP R	1.5K	J	1/8W	K
R118			RK73GB2A752J	CHIP R	7.5K	J	1/10W	K
R119			RK73GB2A750J	CHIP R	75	J	1/10W	K
R120			RK73GB2A272J	CHIP R	2.7K	J	1/10W	K
R121			RK73GB2A470J	CHIP R	47	J	1/10W	K
R122			RK73GB2A752J	CHIP R	7.5K	J	1/10W	K
R123			RK73GB2A274J	CHIP R	270K	J	1/10W	K
R124			RK73GB2A563J	CHIP R	56K	J	1/10W	K
R125			RK73GB2A470J	CHIP R	47	J	1/10W	K
R126			RK73GB2A103J	CHIP R	10K	J	1/10W	K
R127,128			RK73GB2A913J	CHIP R	91K	J	1/10W	K
R130			RK73GB2A100J	CHIP R	10	J	1/10W	
R201,202			RK73FB2B100J	CHIP R	10	J	1/8W	
R203,204			RK73GB2A223J	CHIP R	22K	J	1/10W	
R205			RK73FB2B4R7J	CHIP R	4.7	J	1/8W	
R206			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R207			RK73GB2A3R9J	CHIP R	3.9	J	1/10W	
R401			RK73GB2A104J	CHIP R	100K	J	1/10W	
R402			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R403			RK73GB2A103J	CHIP R	10K	J	1/10W	
R404,405			RK73GB2A101J	CHIP R	100	J	1/10W	
R407			RK73EB2E2R2J	CHIP R	2.2	J	1/4W	
R408			RK73GB2A103J	CHIP R	10K	J	1/10W	
R411-414		✻	RK73GB2A560JH	CHIP R	56	J	1/10W	
R417,418		✻	RK73GB2A101JH	CHIP R	100	J	1/10W	
R449			RK73GB2A100J	CHIP R	10	J	1/10W	
R451,452			RK73GB2A101J	CHIP R	100	J	1/10W	
R453,454			RK73GB2A473J	CHIP R	47K	J	1/10W	
R455			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R456			RK73GB2A101J	CHIP R	100	J	1/10W	
R500			RK73GB2A222J	CHIP R	2.2K	J	1/10W	E2Q1M3
R500			RK73GB2A222J	CHIP R	2.2K	J	1/10W	KK1K2
R500			RK73GB2A222J	CHIP R	2.2K	J	1/10W	M1M2K4
R500			RK73GB2A222J	CHIP R	2.2K	J	1/10W	M4
R500			RK73GB2A222J	CHIP R	2.2K	J	1/10W	R1E1K3
R500			RK73GB2A222J	CHIP R	2.2K	J	1/10W	R2K5
R501			RK73GB2A223J	CHIP R	22K	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R502			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R504,505			RK73GB2A222J	CHIP R	2.2K	J	1/10W	E2Q1M3
R504,505			RK73GB2A222J	CHIP R	2.2K	J	1/10W	KK1K2
R504,505			RK73GB2A222J	CHIP R	2.2K	J	1/10W	M1M2K4
R504,505			RK73GB2A222J	CHIP R	2.2K	J	1/10W	M4
R504,505			RK73GB2A222J	CHIP R	2.2K	J	1/10W	R1E1K3
R504,505			RK73GB2A222J	CHIP R	2.2K	J	1/10W	R2K5
R506			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	E2Q1M3
R506			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	KK1K2
R506			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	M1M2K4
R506			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	M4
R506			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	R1E1K3
R506			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	R2K5
R510			RK73GB2A100J	CHIP R	10	J	1/10W	X1X2
R553			RK73GB2A562J	CHIP R	5.6K	J	1/10W	E1
R554			RK73GB2A332J	CHIP R	3.3K	J	1/10W	E1
R555,556			RK73GB2A331J	CHIP R	330	J	1/10W	E1
R557,558			RK73GB2A330J	CHIP R	33	J	1/10W	E1
R561			RK73GB2A270J	CHIP R	27	J	1/10W	E1
R562,563			RK73GB2A151J	CHIP R	150	J	1/10W	E1
R564			RK73GB2A431J	CHIP R	430	J	1/10W	E1
R565			RK73GB2A100J	CHIP R	10	J	1/10W	E1
R567			RK73GB2A000J	CHIP R	0.0	J	1/10W	KK1K2
R567			RK73GB2A000J	CHIP R	0.0	J	1/10W	K5M3M4
R567			RK73GB2A000J	CHIP R	0.0	J	1/10W	M2X1K4
R567			RK73GB2A000J	CHIP R	0.0	J	1/10W	R1K3M1
R567			RK73GB2A000J	CHIP R	0.0	J	1/10W	Q1
R567			RK73GB2A000J	CHIP R	0.0	J	1/10W	X2E2R2
R568			RK73GB2A000J	CHIP R	0.0	J	1/10W	E1
R597			RK73GB2A000J	CHIP R	0.0	J	1/10W	E1
R599			RK73GB2A1R0J	CHIP R	1.0	J	1/10W	
R600			RK73EB2E200J	CHIP R	20	J	1/4W	E1M1M2
R600			RK73EB2E200J	CHIP R	20	J	1/4W	M3M4X2
R600			RK73EB2E200J	CHIP R	20	J	1/4W	X1E2Q1
R601			RK73EB2E100J	CHIP R	10	J	1/4W	E1M1M2
R601			RK73EB2E100J	CHIP R	10	J	1/4W	M3M4X2
R601			RK73EB2E100J	CHIP R	10	J	1/4W	X1E2Q1
R602			RK73EB2E200J	CHIP R	20	J	1/4W	E1M1M2
R602			RK73EB2E200J	CHIP R	20	J	1/4W	M3M4X2
R602			RK73EB2E200J	CHIP R	20	J	1/4W	X1E2Q1
R603			RK73EB2E102J	CHIP R	1.0K	J	1/4W	E1M1M2
R603			RK73EB2E102J	CHIP R	1.0K	J	1/4W	M3M4X2
R603			RK73EB2E102J	CHIP R	1.0K	J	1/4W	X1E2Q1
R604			RK73EB2E101J	CHIP R	100	J	1/4W	E1M1M2
R604			RK73EB2E101J	CHIP R	100	J	1/4W	M3M4X2
R604			RK73EB2E101J	CHIP R	100	J	1/4W	X1E2Q1
R605			RK73EB2E102J	CHIP R	1.0K	J	1/4W	E1M1M2
R605			RK73EB2E102J	CHIP R	1.0K	J	1/4W	M3M4X2
R605			RK73EB2E102J	CHIP R	1.0K	J	1/4W	X1E2Q1
R606-608			RK73EB2E101J	CHIP R	100	J	1/4W	E1M1M2
R606-608			RK73EB2E101J	CHIP R	100	J	1/4W	M3M4X2
R606-608			RK73EB2E101J	CHIP R	100	J	1/4W	X1E2Q1
R609,610			RK73EB2E102J	CHIP R	1.0K	J	1/4W	E1M1M2
R609,610			RK73EB2E102J	CHIP R	1.0K	J	1/4W	M3M4X2
R609,610			RK73EB2E102J	CHIP R	1.0K	J	1/4W	X1E2Q1

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-668/676x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R611			RK73EB2E101J	CHIP R 100 J 1/4W	E1M1M2
R611			RK73EB2E101J	CHIP R 100 J 1/4W	M3M4X2
R611			RK73EB2E101J	CHIP R 100 J 1/4W	X1E2Q1
R612			RK73GB2A100J	CHIP R 10 J 1/10W	E1M1M2
R612			RK73GB2A100J	CHIP R 10 J 1/10W	M3M4X2
R612			RK73GB2A100J	CHIP R 10 J 1/10W	X1E2Q1
R613			RK73GB2A750J	CHIP R 75 J 1/10W	E1M1M2
R613			RK73GB2A750J	CHIP R 75 J 1/10W	M3M4X2
R613			RK73GB2A750J	CHIP R 75 J 1/10W	X1E2Q1
R615			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1M1M2
R615			RK73GB2A000J	CHIP R 0.0 J 1/10W	M3M4X2
R615			RK73GB2A000J	CHIP R 0.0 J 1/10W	X1E2Q1
R618-620			RK73GB2A100J	CHIP R 10 J 1/10W	E1M1M2
R618-620			RK73GB2A100J	CHIP R 10 J 1/10W	M3M4X2
R618-620			RK73GB2A100J	CHIP R 10 J 1/10W	X1E2Q1
R621			RK73GB2A100J	CHIP R 10 J 1/10W	KK1K2
R621			RK73GB2A100J	CHIP R 10 J 1/10W	R1K3K4
R621			RK73GB2A100J	CHIP R 10 J 1/10W	R2K5
R650,651			RK73EB2E200J	CHIP R 20 J 1/4W	KK1K2
R650,651			RK73EB2E200J	CHIP R 20 J 1/4W	K5M3M4
R650,651			RK73EB2E200J	CHIP R 20 J 1/4W	M2X1K4
R650,651			RK73EB2E200J	CHIP R 20 J 1/4W	R1K3M1
R650,651			RK73EB2E200J	CHIP R 20 J 1/4W	Q1
R650,651			RK73EB2E200J	CHIP R 20 J 1/4W	X2E2R2
R652			RK73EB2E100J	CHIP R 10 J 1/4W	KK1K2
R652			RK73EB2E100J	CHIP R 10 J 1/4W	K5M3M4
R652			RK73EB2E100J	CHIP R 10 J 1/4W	M2X1K4
R652			RK73EB2E100J	CHIP R 10 J 1/4W	R1K3M1
R652			RK73EB2E100J	CHIP R 10 J 1/4W	Q1
R652			RK73EB2E100J	CHIP R 10 J 1/4W	X2E2R2
R653,654			RK73EB2E102J	CHIP R 1.0K J 1/4W	KK1K2
R653,654			RK73EB2E102J	CHIP R 1.0K J 1/4W	K5M3M4
R653,654			RK73EB2E102J	CHIP R 1.0K J 1/4W	M2X1K4
R653,654			RK73EB2E102J	CHIP R 1.0K J 1/4W	R1K3M1
R653,654			RK73EB2E102J	CHIP R 1.0K J 1/4W	Q1
R653,654			RK73EB2E102J	CHIP R 1.0K J 1/4W	X2E2R2
R655			RK73GB2A473J	CHIP R 47K J 1/10W	
R656,657			RK73GB2A103J	CHIP R 10K J 1/10W	KK1K2
R656,657			RK73GB2A103J	CHIP R 10K J 1/10W	K5M3M4
R656,657			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K4
R656,657			RK73GB2A103J	CHIP R 10K J 1/10W	R1K3M1
R656,657			RK73GB2A103J	CHIP R 10K J 1/10W	Q1
R656,657			RK73GB2A103J	CHIP R 10K J 1/10W	X2E2R2
R658			RK73GB2A473J	CHIP R 47K J 1/10W	KK1K2
R658			RK73GB2A473J	CHIP R 47K J 1/10W	K5M3M4
R658			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K4
R658			RK73GB2A473J	CHIP R 47K J 1/10W	R1K3M1
R658			RK73GB2A473J	CHIP R 47K J 1/10W	Q1
R658			RK73GB2A473J	CHIP R 47K J 1/10W	X2E2R2
R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	KK1K2
R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	K5M3M4
R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	M2X1K4
R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	R1K3M1
R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	Q1
R659			RK73GB2A472J	CHIP R 4.7K J 1/10W	X2E2R2
R661-663			RK73EB2E101J	CHIP R 100 J 1/4W	KK1K2
R661-663			RK73EB2E101J	CHIP R 100 J 1/4W	K5M3M4
R661-663			RK73EB2E101J	CHIP R 100 J 1/4W	M2X1K4
R661-663			RK73EB2E101J	CHIP R 100 J 1/4W	R1K3M1
R661-663			RK73EB2E101J	CHIP R 100 J 1/4W	Q1
R661-663			RK73EB2E101J	CHIP R 100 J 1/4W	X2E2R2
R664-666			RK73GB2A103J	CHIP R 10K J 1/10W	KK1K2
R664-666			RK73GB2A103J	CHIP R 10K J 1/10W	K5M3M4
R664-666			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K4
R664-666			RK73GB2A103J	CHIP R 10K J 1/10W	R1K3M1
R664-666			RK73GB2A103J	CHIP R 10K J 1/10W	Q1
R664-666			RK73GB2A103J	CHIP R 10K J 1/10W	X2E2R2
R667-669			RK73GB2A100J	CHIP R 10 J 1/10W	KK1K2
R667-669			RK73GB2A100J	CHIP R 10 J 1/10W	K5M3M4
R667-669			RK73GB2A100J	CHIP R 10 J 1/10W	M2X1K4
R667-669			RK73GB2A100J	CHIP R 10 J 1/10W	R1K3M1
R667-669			RK73GB2A100J	CHIP R 10 J 1/10W	Q1
R667-669			RK73GB2A100J	CHIP R 10 J 1/10W	X2E2R2
R670			RK73GB2A223J	CHIP R 22K J 1/10W	KK1K2
R670			RK73GB2A223J	CHIP R 22K J 1/10W	K5M3M4
R670			RK73GB2A223J	CHIP R 22K J 1/10W	M2X1K4
R670			RK73GB2A223J	CHIP R 22K J 1/10W	R1K3M1
R670			RK73GB2A223J	CHIP R 22K J 1/10W	Q1
R670			RK73GB2A223J	CHIP R 22K J 1/10W	X2E2R2
R671			RK73GB2A100J	CHIP R 10 J 1/10W	E1
R673			RK73GB2A103J	CHIP R 10K J 1/10W	KK1K2
R673			RK73GB2A103J	CHIP R 10K J 1/10W	K5M3M4
R673			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K4
R673			RK73GB2A103J	CHIP R 10K J 1/10W	R1K3M1
R673			RK73GB2A103J	CHIP R 10K J 1/10W	Q1
R673			RK73GB2A103J	CHIP R 10K J 1/10W	X2E2R2
R801-806			RK73GB2A471J	CHIP R 470 J 1/10W	
R807-812			RK73GB2A223J	CHIP R 22K J 1/10W	
R813-818			RK73FB2B101J	CHIP R 100 J 1/8W	E1K3M1
R813-818			RK73FB2B101J	CHIP R 100 J 1/8W	K1K2R1
R813-818			RK73FB2B101J	CHIP R 100 J 1/8W	K5M3M4
R813-818			RK73FB2B101J	CHIP R 100 J 1/8W	M2X1K4
R813-818			RK73FB2B101J	CHIP R 100 J 1/8W	Q1
R813-818			RK73FB2B101J	CHIP R 100 J 1/8W	X2E2R2
R819-824			RK73GB2A104J	CHIP R 100K J 1/10W	K
R825-836			RK73FB2B103J	CHIP R 10K J 1/8W	K
R837-842			RK73EB2E820J	CHIP R 82 J 1/4W	K
R843			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
R905			RK73GB2A333J	CHIP R 33K J 1/10W	
R906			RK73GB2A123J	CHIP R 12K J 1/10W	
R907		✻	RK73GB2A300JH	CHIP R 30 J 1/10W	
R908			RK73GB2A223J	CHIP R 22K J 1/10W	
R909			RK73GB2A221J	CHIP R 220 J 1/10W	
R910			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R911-914		✻	RK73GB2A820JH	CHIP R 82 J 1/10W	
R915			RK73GB2A473J	CHIP R 47K J 1/10W	
D1			RM4ZLF-J1NF	DIODE	
D2 -4			1SS355	DIODE	
D5			UDZW6.2(B)	ZENER DIODE	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-668/676x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
D6			1SS355	DIODE	
D7			UDZW6.2(B)	ZENER DIODE	
D8 ,9			M1F60-6063	DIODE	
D10			1SS355	DIODE	
D11 ,12			M1F60-6063	DIODE	
D13			UDZW4.7(B)	ZENER DIODE	
D101			UDZW5.6(B)	ZENER DIODE	
D104			UDZW6.8(B)	ZENER DIODE	
D111			UDZW11(B)	ZENER DIODE	K
D112			UDZW5.6(B)	ZENER DIODE	K
D201-203			UDZW8.2(B)	ZENER DIODE	
D401-403			KDS120-P	DIODE	
D404,405			1SS355	DIODE	
D551			EZAEG3A50A	SURGE ABSORBER	E1
D601-611			UDZW6.2(B)	ZENER DIODE	E1M1M2
D601-611			UDZW6.2(B)	ZENER DIODE	M3M4X2
D601-611			UDZW6.2(B)	ZENER DIODE	X1E2Q1
D612,613			UDZW6.8(B)	ZENER DIODE	E1M1M2
D612,613			UDZW6.8(B)	ZENER DIODE	M3M4X2
D612,613			UDZW6.8(B)	ZENER DIODE	X1E2Q1
D650,651			UDZW6.8(B)	ZENER DIODE	KK1K2
D650,651			UDZW6.8(B)	ZENER DIODE	K5M3M4
D650,651			UDZW6.8(B)	ZENER DIODE	M2X1K4
D650,651			UDZW6.8(B)	ZENER DIODE	R1K3M1
D650,651			UDZW6.8(B)	ZENER DIODE	Q1
D650,651			UDZW6.8(B)	ZENER DIODE	X2E2R2
D652			UDZW6.2(B)	ZENER DIODE	KK1K2
D652			UDZW6.2(B)	ZENER DIODE	K5M3M4
D652			UDZW6.2(B)	ZENER DIODE	M2X1K4
D652			UDZW6.2(B)	ZENER DIODE	R1K3M1
D652			UDZW6.2(B)	ZENER DIODE	Q1
D652			UDZW6.2(B)	ZENER DIODE	X2E2R2
D654			1SS355	DIODE	KK1K2
D654			1SS355	DIODE	K5M3M4
D654			1SS355	DIODE	M2X1K4
D654			1SS355	DIODE	R1K3M1
D654			1SS355	DIODE	Q1
D654			1SS355	DIODE	X2E2R2
D655-658			UDZW6.2(B)	ZENER DIODE	KK1K2
D655-658			UDZW6.2(B)	ZENER DIODE	K5M3M4
D655-658			UDZW6.2(B)	ZENER DIODE	M2X1K4
D655-658			UDZW6.2(B)	ZENER DIODE	R1K3M1
D655-658			UDZW6.2(B)	ZENER DIODE	Q1
D655-658			UDZW6.2(B)	ZENER DIODE	X2E2R2
D663			UDZW6.2(B)	ZENER DIODE	KK1K2
D663			UDZW6.2(B)	ZENER DIODE	K5M3M4
D663			UDZW6.2(B)	ZENER DIODE	M2X1K4
D663			UDZW6.2(B)	ZENER DIODE	R1K3M1
D663			UDZW6.2(B)	ZENER DIODE	Q1
D663			UDZW6.2(B)	ZENER DIODE	X2E2R2
D801-806			KDS120-P	DIODE	
D901			KDS120-P	DIODE	
D902			1SS355	DIODE	
IC101			M5237ML-CF0J	ANALOGUE IC	
IC103			ICL7660SIBAZ	ANALOGUE IC	K

Ref. No.	Add	New	Parts No.	Description	Destination
IC104			M5237ML-CF0J	ANALOGUE IC	
IC401			E-TDA7415CB	ANALOGUE IC	
IC451		✻	AN15863UA-VB	ANALOGUE IC	
IC500			E-TDA7478AD	ANALOGUE IC	E2Q1M3
IC500			E-TDA7478AD	ANALOGUE IC	KK1K2
IC500			E-TDA7478AD	ANALOGUE IC	M1M2K4
IC500			E-TDA7478AD	ANALOGUE IC	M4
IC500			E-TDA7478AD	ANALOGUE IC	R1E1K3
IC500			E-TDA7478AD	ANALOGUE IC	R2K5
IC651			74AHCT08PW	MOS-IC	KK1K2
IC651			74AHCT08PW	MOS-IC	K5M3M4
IC651			74AHCT08PW	MOS-IC	M2X1K4
IC651			74AHCT08PW	MOS-IC	R1K3M1
IC651			74AHCT08PW	MOS-IC	Q1
IC651			74AHCT08PW	MOS-IC	X2E2R2
IC801-803			NJM4565V-ZB	ANALOGUE IC	K
IC901			E-TDA7850A	ANALOGUE IC	
Q1			KRC403-P	DIGITAL TRANSISTOR	
Q2			2SA1576A	TRANSISTOR	
Q3			KRC403-P	DIGITAL TRANSISTOR	
Q4			2SC4081	TRANSISTOR	
Q5			2SB1188(Q,R)	TRANSISTOR	
Q6			2SA1576A	TRANSISTOR	
Q7			KRA302-P	DIGITAL TRANSISTOR	
Q8			KRC406-P	DIGITAL TRANSISTOR	
Q9			2SB1188(R)	TRANSISTOR	KK1K2
Q9			2SB1188(R)	TRANSISTOR	M2X1K4
Q9			2SB1188(R)	TRANSISTOR	M3M4X2
Q9			2SB1188(R)	TRANSISTOR	R1K3M1
Q9			2SB1188(R)	TRANSISTOR	R2K5
Q10			2SC4081	TRANSISTOR	KK1K2
Q10			2SC4081	TRANSISTOR	M2X1K4
Q10			2SC4081	TRANSISTOR	M3M4X2
Q10			2SC4081	TRANSISTOR	R1K3M1
Q10			2SC4081	TRANSISTOR	R2K5
Q101			KRC403-P	DIGITAL TRANSISTOR	
Q102			KRA303-P	DIGITAL TRANSISTOR	
Q103			KRC403-P	DIGITAL TRANSISTOR	
Q104			KRA303-P	DIGITAL TRANSISTOR	
Q105			KTA1046-P	TRANSISTOR	
Q106			KRC403-P	DIGITAL TRANSISTOR	
Q107			2SA1577	TRANSISTOR	
Q108			KRC406-P	DIGITAL TRANSISTOR	KK1K2
Q108			KRC406-P	DIGITAL TRANSISTOR	K5M3M4
Q108			KRC406-P	DIGITAL TRANSISTOR	M2X1K4
Q108			KRC406-P	DIGITAL TRANSISTOR	R1K3M1
Q108			KRC406-P	DIGITAL TRANSISTOR	Q1
Q108			KRC406-P	DIGITAL TRANSISTOR	X2E2R2
Q109			TPC8110-F	FET	KK1K2
Q109			TPC8110-F	FET	K5M3M4
Q109			TPC8110-F	FET	M2X1K4
Q109			TPC8110-F	FET	R1K3M1
Q109			TPC8110-F	FET	Q1
Q109			TPC8110-F	FET	X2E2R2
Q110			KRC403-P	DIGITAL TRANSISTOR	K

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-668/676x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q111			KRA303-P	DIGITAL TRANSISTOR	K
Q114			KRC403-P	DIGITAL TRANSISTOR	
Q115			KRA303-P	DIGITAL TRANSISTOR	
Q116			KTA1046-P	TRANSISTOR	
Q117			2SC4081	TRANSISTOR	
Q118			KTA1046-P	TRANSISTOR	
Q119			2SB1443	TRANSISTOR	K
Q120			2SC4081	TRANSISTOR	K
Q121,122			2SA1576A	TRANSISTOR	K
Q123			2SC4081	TRANSISTOR	K
Q124			2SA1576A	TRANSISTOR	K
Q125,126			2SC4081	TRANSISTOR	K
Q127			KRA303-P	DIGITAL TRANSISTOR	
Q128			2SC4081	TRANSISTOR	
Q500			KRC406-P	DIGITAL TRANSISTOR	
Q501			2SA1577	TRANSISTOR	
Q551			2SC3357-A	TRANSISTOR	E1
Q650,651			2SC4081	TRANSISTOR	KK1K2
Q650,651			2SC4081	TRANSISTOR	K5M3M4
Q650,651			2SC4081	TRANSISTOR	M2X1K4
Q650,651			2SC4081	TRANSISTOR	R1K3M1
Q650,651			2SC4081	TRANSISTOR	Q1
Q650,651			2SC4081	TRANSISTOR	X2E2R2
Q653,654			KRC404-P	DIGITAL TRANSISTOR	KK1K2
Q653,654			KRC404-P	DIGITAL TRANSISTOR	K5M3M4
Q653,654			KRC404-P	DIGITAL TRANSISTOR	M2X1K4
Q653,654			KRC404-P	DIGITAL TRANSISTOR	R1K3M1
Q653,654			KRC404-P	DIGITAL TRANSISTOR	Q1
Q653,654			KRC404-P	DIGITAL TRANSISTOR	X2E2R2
Q656,657			KRC406-P	DIGITAL TRANSISTOR	
Q801-803			KRA304-P	DIGITAL TRANSISTOR	
Q804-809			KRC410-P	DIGITAL TRANSISTOR	
TH901			PRF18BE471QS2	POSITIVE RESISTOR	
A500			X86-4030-11	FRONT-END UNIT	KK1K2
A500			X86-4030-11	FRONT-END UNIT	K4R2K5
A500			X86-4030-11	FRONT-END UNIT	R1K3X1
A500			X86-4030-11	FRONT-END UNIT	X2
A500			X86-4032-70	FRONT-END UNIT	E1M1M2
A500			X86-4032-70	FRONT-END UNIT	E2Q1M3
A500			X86-4032-70	FRONT-END UNIT	M4

VIDEO UNIT (X35-5060-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C99			CC73GCH1H100D	CHIP C	10PF	D	
C100			CC73GCH1H101J	CHIP C	100PF	J	
C101-106			CK73EB1E106K	CHIP C	10UF	K	
C111,112			CK73EB1E106K	CHIP C	10UF	K	
C113			CK73GB1H104K	CHIP C	0.10UF	K	
C114			CK73HB1E103K	CHIP C	0.010UF	K	
C117,118			CK73HB1C473K	CHIP C	0.047UF	K	
C119,120			CK73HB0J224K	CHIP C	0.22UF	K	
C123			CK73HB1E103K	CHIP C	0.010UF	K	
C124			CK73HB1H682K	CHIP C	6800PF	K	
C125,126			CC73HCH1H101J	CHIP C	100PF	J	
C127			CC73GCH1H102J	CHIP C	1000PF	J	
C129			CC73GCH1H102J	CHIP C	1000PF	J	
C131,132		*	C92-2031-05	ELECTRO	220UF		
C133,134			CK73GB1H104K	CHIP C	0.10UF	K	
C135,136			CK73GB1H103K	CHIP C	0.010UF	K	
C137-141			CK73FB0J226M	CHIP C	22UF	M	
C142			CK73HB1E103K	CHIP C	0.010UF	K	
C143			CK73HB1A104K	CHIP C	0.10UF	K	
C151,152			CK73EB1E106K	CHIP C	10UF	K	
C153			CK73GB1H103K	CHIP C	0.010UF	K	
C154			CK73GB1H104K	CHIP C	0.10UF	K	
C155-157			CK73EB1E106K	CHIP C	10UF	K	
C158			CC73GCH1H471J	CHIP C	470PF	J	
C160-163			CK73EB1H475K	CHIP C	4.7UF	K	
C164			CC73HCH1H470J	CHIP C	47PF	J	
C165			CC73HCH1H101J	CHIP C	100PF	J	
C166,167			CK73HB1E103K	CHIP C	0.010UF	K	
C168			CK73HB1A104K	CHIP C	0.10UF	K	
C169			CK73FB1E475K	CHIP C	4.7UF	K	
C170			CK73GB1H103K	CHIP C	0.010UF	K	
C171			CK73GB1H104K	CHIP C	0.10UF	K	
C181-184			CK73GB1A105K	CHIP C	1.0UF	K	
C190,191			CK73FB0J226M	CHIP C	22UF	M	
C201-203			CK73GB0J106M	CHIP C	10UF	M	
C204			CK73HB1E103K	CHIP C	0.010UF	K	
C205			CK73GB1C104K	CHIP C	0.10UF	K	
C207			CK73GB1E154K	CHIP C	0.15UF	K	
C208			CK73GB1H103K	CHIP C	0.010UF	K	
C209			CK73GB1H104K	CHIP C	0.10UF	K	
C210			CK73EB1E106K	CHIP C	10UF	K	
C211			CC73HCH1H102J	CHIP C	1000PF	J	
C212			CC73HCH1H151J	CHIP C	150PF	J	
C213			CK73GB1C225K	CHIP C	2.2UF	K	
C214			CK73GB1C104K	CHIP C	0.10UF	K	
C215-217			CK73FB1C106K	CHIP C	10UF	K	
C218			CK73GB1C224K	CHIP C	0.22UF	K	
C219			CK73GB1H103K	CHIP C	0.010UF	K	
C220			CK73GB1H104K	CHIP C	0.10UF	K	
C221			CK73FB1C106K	CHIP C	10UF	K	
C231			CK73FB1E475K	CHIP C	4.7UF	K	
C232			CK73FB1C106K	CHIP C	10UF	K	
C233			CK73GB1H104K	CHIP C	0.10UF	K	
C234			CK73FB1C106K	CHIP C	10UF	K	
C235			CK73GB1H103K	CHIP C	0.010UF	K	
C236			CK73GB1C104K	CHIP C	0.10UF	K	
C237			CK73FB1C106K	CHIP C	10UF	K	
C238,239			CK73GB1C104K	CHIP C	0.10UF	K	
C251,252			CK73FB1E475K	CHIP C	4.7UF	K	
C301,302			CC73HCH1H180J	CHIP C	18PF	J	
C303			CK73GB0J106M	CHIP C	10UF	M	
C304			CK73HB1A104K	CHIP C	0.10UF	K	
C305			CK73GB0J106M	CHIP C	10UF	M	
C306-309			CK73HB1A104K	CHIP C	0.10UF	K	
C310-316			CK73HB1E103K	CHIP C	0.010UF	K	
C317			CK73HB1A104K	CHIP C	0.10UF	K	
C318			CK73HB1E103K	CHIP C	0.010UF	K	
C319-328			CK73HB1A104K	CHIP C	0.10UF	K	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO UNIT (X35-5060-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C329			CK73HB1E103K	CHIP C	0.010UF	K	
C330			CK73HB1A104K	CHIP C	0.10UF	K	
C331			CK73HB1E103K	CHIP C	0.010UF	K	
C332			CK73HB1A104K	CHIP C	0.10UF	K	
C333-335			CK73GB0J106M	CHIP C	10UF	M	
C338			CK73GB0J106M	CHIP C	10UF	M	
C341-344			CK73HB1A104K	CHIP C	0.10UF	K	
C345			CK73GB0J106M	CHIP C	10UF	M	
C355			CK73HB1A104K	CHIP C	0.10UF	K	
C356-359			CC73HCH1H101J	CHIP C	100PF	J	
C360,361			CK73HB1A104K	CHIP C	0.10UF	K	
C363-365			CK73HB1A104K	CHIP C	0.10UF	K	
C366			CK73GB0J106M	CHIP C	10UF	M	
C368			CK73FB0J226M	CHIP C	22UF	M	
C369-375			CK73HB1A104K	CHIP C	0.10UF	K	
C376			CK73GB0J106M	CHIP C	10UF	M	
C378			CK73HB1A104K	CHIP C	0.10UF	K	
C379			CK73GB0J106M	CHIP C	10UF	M	
C380			CK73HB1A104K	CHIP C	0.10UF	K	
C381			CK73HB1E103K	CHIP C	0.010UF	K	
C382			CK73HB1A104K	CHIP C	0.10UF	K	
C383			CK73FB0J226M	CHIP C	22UF	M	
C384-387			CK73HB1A104K	CHIP C	0.10UF	K	
C391-393			CK73FB0J226M	CHIP C	22UF	M	
C394			CC73HCH1H330J	CHIP C	33PF	J	
C395,396			CK73FB0J226M	CHIP C	22UF	M	
C401			CK73FB1E475K	CHIP C	4.7UF	K	
C402			CK73HB1E103K	CHIP C	0.010UF	K	
C403			CK73GB1H104K	CHIP C	0.10UF	K	
C404			CK73HB1E103K	CHIP C	0.010UF	K	
C405			CK73GB1H104K	CHIP C	0.10UF	K	
C406			CK73FB1E475K	CHIP C	4.7UF	K	
C407-409			CK73GB0J106M	CHIP C	10UF	M	
C410			CK73HB1A104K	CHIP C	0.10UF	K	
C411			CK73HB1E103K	CHIP C	0.010UF	K	
C412-414			CK73FB1C106K	CHIP C	10UF	K	
C415			CK73GB1C104K	CHIP C	0.10UF	K	
C416			CK73HB1E103K	CHIP C	0.010UF	K	
C451			CK73FB0J226M	CHIP C	22UF	M	
C452			CK73HB1E103K	CHIP C	0.010UF	K	
C453			CK73GB1H104K	CHIP C	0.10UF	K	
C454			CK73FB0J226M	CHIP C	22UF	M	
C455			CK73HB1A104K	CHIP C	0.10UF	K	
C456			CC73HCH1H102J	CHIP C	1000PF	J	
C458			CK73HB1A104K	CHIP C	0.10UF	K	
C459			CC73HCH1H102J	CHIP C	1000PF	J	
C461			CK73HB1A104K	CHIP C	0.10UF	K	
C462			CC73HCH1H102J	CHIP C	1000PF	J	
C464			CK73HB1A104K	CHIP C	0.10UF	K	
C465			CC73HCH1H102J	CHIP C	1000PF	J	
C467			CK73HB1A104K	CHIP C	0.10UF	K	
C468			CC73HCH1H102J	CHIP C	1000PF	J	
C470			CK73HB1A104K	CHIP C	0.10UF	K	
C471			CC73HCH1H102J	CHIP C	1000PF	J	
C473			CK73HB1A104K	CHIP C	0.10UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C474			CC73HCH1H102J	CHIP C	1000PF	J	
C481			CK73HB1E103K	CHIP C	0.010UF	K	
C482			CK73GB0J106M	CHIP C	10UF	M	
C501			CK73FB0J106K	CHIP C	10UF	K	
C502,503			CK73HB1E103K	CHIP C	0.010UF	K	
C511-513			CK73HB1A104K	CHIP C	0.10UF	K	
C514			CK73FB0J226M	CHIP C	22UF	M	
C515-518			CK73GB1H102K	CHIP C	1000PF	K	
C521			CK73GB0J106M	CHIP C	10UF	M	
C522			CK73HB1A104K	CHIP C	0.10UF	K	
C525			CC73GCH1H101J	CHIP C	100PF	J	
C526			CC73GCH1H100D	CHIP C	10PF	D	
C551-553			CK73HB1A104K	CHIP C	0.10UF	K	
C562			CC73GCH1H101J	CHIP C	100PF	J	
CN101			E41-2985-05	FLAT CABLE CONNECTOR			
CN103			E41-2615-05	FLAT CABLE CONNECTOR			
CN401			E41-2812-05	FLAT CABLE CONNECTOR			
CN501			E41-2276-05	FLAT CABLE CONNECTOR			
CN502			E41-2613-05	FLAT CABLE CONNECTOR			
J501			E11-1001-05	3.5D PHONE JACK			
F201			F53-0280-05	FUSE (0.63A)			
L101		✻	L33-2582-05	CHOKE COIL			
L102			L92-0364-05	CHIP FERRITE			
L103,104		✻	L33-2582-05	CHOKE COIL			
L105		✻	L33-2583-05	CHOKE COIL			
L106		✻	L33-2607-05	CHOKE COIL			
L201		✻	L33-2583-05	CHOKE COIL			
L202			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)			
L203		✻	L33-2610-05	CHOKE COIL			
L205			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L206			L41-1001-34	SMALL FIXED INDUCTOR (10U, 2520			
L207			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L301-304			L92-0180-05	CHIP FERRITE			
L305			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L306-309			L92-0180-05	CHIP FERRITE			
L310			L92-0668-05	CHIP FERRITE			
L311			L92-0388-05	CHIP FERRITE			
L312-314			L92-0180-05	CHIP FERRITE			
L315			L92-0364-05	CHIP FERRITE			
L317			L92-0180-05	CHIP FERRITE			
L331-348		✻	L92-0172-05	CHIP FERRITE			
L349			L41-2281-15	SMALL FIXED INDUCTOR (220NH)			
L401-403			L92-0180-05	CHIP FERRITE			
L404			L92-0668-05	CHIP FERRITE			
L405			L92-0180-05	CHIP FERRITE			
L406			L92-0668-05	CHIP FERRITE			
L411			L92-0388-05	CHIP FERRITE			
L412			L92-0668-05	CHIP FERRITE			
L413			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L502			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
X301			L77-2996-05	CRYSTAL RESONATOR (14.31818MHZ)			
CP215			RK74HB1J560J	CHIP-COM 56	J	1/16W	
CP301			RK74HB1J101J	CHIP-COM 100	J	1/16W	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5060-10)

Ref. No.	Add	New	Parts No.	Description			Destination
CP302-307			RK74HB1J121J	CHIP-COM 120	J	1/16W	
CP308-312			RK74HB1J101J	CHIP-COM 100	J	1/16W	
CP313-315			RK74HB1J560J	CHIP-COM 56	J	1/16W	
CP401-404			RK74HB1J820J	CHIP-COM 82	J	1/16W	
R1 -12			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R101-103			RK73HB1J101J	CHIP R 100	J	1/16W	
R104,105			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R106			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R107			RK73HB1J100J	CHIP R 10	J	1/16W	
R108,109			RK73HB1J101J	CHIP R 100	J	1/16W	
R110			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R121			RK73HH1J333D	CHIP R 33K	D	1/16W	
R122			RK73HH1J473D	CHIP R 47K	D	1/16W	
R123			RK73HH1J622D	CHIP R 6.2K	D	1/16W	
R124			RK73HH1J153D	CHIP R 15K	D	1/16W	
R125			RK73HB1J563J	CHIP R 56K	J	1/16W	
R126			RK73HB1J433J	CHIP R 43K	J	1/16W	
R127,128			RK73HB1J104J	CHIP R 100K	J	1/16W	
R129			RK73HH1J683D	CHIP R 68K	D	1/16W	
R130			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R131			RK73HB1J473J	CHIP R 47K	J	1/16W	
R132			RK73HB1J101J	CHIP R 100	J	1/16W	
R133,134			RK73EB2E100J	CHIP R 10	J	1/4W	
R137-140			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R141,142			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R151			RK73EB2E100J	CHIP R 10	J	1/4W	
R152			RK73HH1J104D	CHIP R 100K	D	1/16W	
R153			RK73HH1J472D	CHIP R 4.7K	D	1/16W	
R154			RK73HH1J103D	CHIP R 10K	D	1/16W	
R155			RK73HB1J103J	CHIP R 10K	J	1/16W	
R156			RK73HB1J302J	CHIP R 3.0K	J	1/16W	
R157		✻	RK73HH1J514D	CHIP R 510K	D	1/16W	
R158			RK73HH1J273D	CHIP R 27K	D	1/16W	
R159			RK73HB1J302J	CHIP R 3.0K	J	1/16W	
R160			RK73HB1J563J	CHIP R 56K	J	1/16W	
R161			RK73HB1J104J	CHIP R 100K	J	1/16W	
R162			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R163			RK73HB1J104J	CHIP R 100K	J	1/16W	
R164			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R165			RK73HB1J104J	CHIP R 100K	J	1/16W	
R166			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R167			RK73HH1J104D	CHIP R 100K	D	1/16W	
R170,171			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R172			RK73HB1J104J	CHIP R 100K	J	1/16W	
R176			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R181,182			RK73HB1J101J	CHIP R 100	J	1/16W	
R183,184			RK73HB1J473J	CHIP R 47K	J	1/16W	
R185			RK73FB2B152J	CHIP R 1.5K	J	1/8W	
R186			RK73HB1J100J	CHIP R 10	J	1/16W	
R191			RK73EB2E000J	CHIP R 0.0	J	1/4W	
R192			RK73HH1J202D	CHIP R 2.0K	D	1/16W	
R193			RK73HH1J182D	CHIP R 1.8K	D	1/16W	
R194			RK73HH1J912D	CHIP R 9.1K	D	1/16W	
R195			RK73GB2A2R2J	CHIP R 2.2	J	1/10W	
R196			RK73FB2B000J	CHIP R 0.0	J	1/8W	

Ref. No.	Add	New	Parts No.	Description			Destination
R197			RK73FB2B100J	CHIP R 10	J	1/8W	
R198			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R202			RK73HB1J473J	CHIP R 47K	J	1/16W	
R203			RK73HH1J104D	CHIP R 100K	D	1/16W	
R204			RK73HH1J133D	CHIP R 13K	D	1/16W	
R205		✻	RK73HH1J114D	CHIP R 110K	D	1/16W	
R206			RK73HH1J822D	CHIP R 8.2K	D	1/16W	
R209			RK73GB2A103J	CHIP R 10K	J	1/10W	
R212			RK73HB1J473J	CHIP R 47K	J	1/16W	
R213			RK73HB1J302J	CHIP R 3.0K	J	1/16W	
R214			RK73HB1J272J	CHIP R 2.7K	J	1/16W	
R215			RK73HB1J332J	CHIP R 3.3K	J	1/16W	
R216			RK73HB1J272J	CHIP R 2.7K	J	1/16W	
R217			RK73HH1J183D	CHIP R 18K	D	1/16W	
R218			RK73HH1J912D	CHIP R 9.1K	D	1/16W	
R219			RK73HH1J621D	CHIP R 620	D	1/16W	
R220			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R222			RK73HB1J101J	CHIP R 100	J	1/16W	
R223			RK73HB1J103J	CHIP R 10K	J	1/16W	
R224			RK73HB1J101J	CHIP R 100	J	1/16W	
R225			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R226			RK73HB1J103J	CHIP R 10K	J	1/16W	
R227			RK73HH1J822D	CHIP R 8.2K	D	1/16W	
R228			RK73HH1J113D	CHIP R 11K	D	1/16W	
R229,230			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R251			RK73HB1J101J	CHIP R 100	J	1/16W	
R252			RK73HB1J103J	CHIP R 10K	J	1/16W	
R253			RK73HB1J101J	CHIP R 100	J	1/16W	
R254			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R255			RK73HB1J103J	CHIP R 10K	J	1/16W	
R301			RK73HB1J471J	CHIP R 470	J	1/16W	
R302			RK73HB1J105J	CHIP R 1.0M	J	1/16W	
R303			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R304			RK73HH1J303D	CHIP R 30K	D	1/16W	
R305			RK73HH1J473D	CHIP R 47K	D	1/16W	
R306,307			RK73HH1J102D	CHIP R 1.0K	D	1/16W	
R308-311			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R313-320			RK73HH1J102D	CHIP R 1.0K	D	1/16W	
R321			RK73HB1J104J	CHIP R 100K	J	1/16W	
R322			RK73HB1J103J	CHIP R 10K	J	1/16W	
R323			RK73HH1J273D	CHIP R 27K	D	1/16W	
R324			RK73HH1J123D	CHIP R 12K	D	1/16W	
R325			RK73HB1J103J	CHIP R 10K	J	1/16W	
R326			RK73HH1J123D	CHIP R 12K	D	1/16W	
R327			RK73HH1J153D	CHIP R 15K	D	1/16W	
R328-330			RK73HB1J103J	CHIP R 10K	J	1/16W	
R332			RK73HB1J103J	CHIP R 10K	J	1/16W	
R334			RK73HB1J103J	CHIP R 10K	J	1/16W	
R336			RK73HB1J103J	CHIP R 10K	J	1/16W	
R338			RK73HB1J103J	CHIP R 10K	J	1/16W	
R340			RK73HB1J104J	CHIP R 100K	J	1/16W	
R341			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R343-349			RK73HB1J103J	CHIP R 10K	J	1/16W	
R350,351			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R352,353			RK73HB1J101J	CHIP R 100	J	1/16W	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO UNIT (X35-5060-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R355			RK73HB1J103J	CHIP R	10K	J 1/16W	
R356-358			RK73HB1J101J	CHIP R	100	J 1/16W	
R359			RK73HB1J560J	CHIP R	56	J 1/16W	
R361			RK73HB1J101J	CHIP R	100	J 1/16W	
R362,363			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R365			RK73HB1J101J	CHIP R	100	J 1/16W	
R366			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R368,369			RK73HB1J330J	CHIP R	33	J 1/16W	
R370			RK73HB1J101J	CHIP R	100	J 1/16W	
R371			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R372,373			RK73HB1J330J	CHIP R	33	J 1/16W	
R374			RK73HB1J101J	CHIP R	100	J 1/16W	
R375,376			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R377			RK73HB1J101J	CHIP R	100	J 1/16W	
R378			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R379			RK73HB1J101J	CHIP R	100	J 1/16W	
R380			RK73HB1J470J	CHIP R	47	J 1/16W	
R381,382			RK73HB1J560J	CHIP R	56	J 1/16W	
R383-386			RK73HB1J101J	CHIP R	100	J 1/16W	
R388			RK73HB1J101J	CHIP R	100	J 1/16W	
R389			RK73GB2A101J	CHIP R	100	J 1/10W	
R390,391			RK73HB1J103J	CHIP R	10K	J 1/16W	
R392			RK73HH1J103D	CHIP R	10K	D 1/16W	
R397,398			RK73HB1J103J	CHIP R	10K	J 1/16W	
R399			RK73HB1J100J	CHIP R	10	J 1/16W	
R401			RK73HB1J101J	CHIP R	100	J 1/16W	
R402			RK73EB2E392J	CHIP R	3.9K	J 1/4W	
R403			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R406			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R407			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R408			RK73HB1J103J	CHIP R	10K	J 1/16W	
R418			RK73HH1J131D	CHIP R	130	D 1/16W	
R419			RK73HH1J161D	CHIP R	160	D 1/16W	
R420			RK73HH1J430D	CHIP R	43	D 1/16W	
R421			RK73HH1J390D	CHIP R	39	D 1/16W	
R422			RK73HH1J101D	CHIP R	100	D 1/16W	
R423			RK73HH1J161D	CHIP R	160	D 1/16W	
R424			RK73HH1J101D	CHIP R	100	D 1/16W	
R425			RK73HH1J390D	CHIP R	39	D 1/16W	
R426			RK73HH1J430D	CHIP R	43	D 1/16W	
R427			RK73HH1J161D	CHIP R	160	D 1/16W	
R428		✻	RK73HH1J620D	CHIP R	62	D 1/16W	
R429			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R451-457			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R458,459			RK73HB1J820J	CHIP R	82	J 1/16W	
R460			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R461			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R462			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R472			RK73HH1J752D	CHIP R	7.5K	D 1/16W	
R473			RK73HH1J123D	CHIP R	12K	D 1/16W	
R474			RK73HH1J472D	CHIP R	4.7K	D 1/16W	
R475			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R476			RK73HH1J103D	CHIP R	10K	D 1/16W	
R501-504			RK73GB2A100J	CHIP R	10	J 1/10W	
R505-508			RK73HB1J000J	CHIP R	0.0	J 1/16W	

Ref. No.	Add	New	Parts No.	Description			Destination
R513,514			RK73HB1J333J	CHIP R	33K	J 1/16W	
R517-519			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R521			RK73HB1J473J	CHIP R	47K	J 1/16W	
R522			RK73GH2A131D	CHIP R	130	D 1/10W	
R524			RK73HB1J473J	CHIP R	47K	J 1/16W	
R525			RK73GH2A131D	CHIP R	130	D 1/10W	
R527			RK73HB1J473J	CHIP R	47K	J 1/16W	
R528			RK73GH2A131D	CHIP R	130	D 1/10W	
R530-532			RK73FB2B100J	CHIP R	10	J 1/8W	
R533			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R534,535			RK73GB2A103J	CHIP R	10K	J 1/10W	
R538			RK73HB1J221J	CHIP R	220	J 1/16W	
R539-542			RK73FB2B101J	CHIP R	100	J 1/8W	
R543,544			RK73FB2B100J	CHIP R	10	J 1/8W	
R545			RK73FB2B101J	CHIP R	100	J 1/8W	
R546			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R547			RK73FB2B100J	CHIP R	10	J 1/8W	
R548,549			RK73GB2A103J	CHIP R	10K	J 1/10W	
R550,551			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R552,553			RK73FB2B100J	CHIP R	10	J 1/8W	
R555			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R574			RK73GB2A750J	CHIP R	75	J 1/10W	
R576			RK73FB2B101J	CHIP R	100	J 1/8W	
R577			RK73GB2A100J	CHIP R	10	J 1/10W	
R578,579			RK73HB1J303J	CHIP R	30K	J 1/16W	
R580			RK73HB1J272J	CHIP R	2.7K	J 1/16W	
R582			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R592			RK73FB2B100J	CHIP R	10	J 1/8W	
R598			RK73FB2B101J	CHIP R	100	J 1/8W	
R600			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R601			RK73HB1J473J	CHIP R	47K	J 1/16W	
R602			RK73GH2A131D	CHIP R	130	D 1/10W	
R613			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R618			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R621			RK73GB2A000J	CHIP R	0.0	J 1/10W	
S501			T99-0484-05	ROTARY ENCODER			
D101,102			CVL10C270M300	VARISTOR			
D111,112			EC31QS04AG	DIODE			
D113,114			1SS357-F	DIODE			
D115			EC31QS04AG	DIODE			
D116			RKZ5.6KG(B2)	ZENER DIODE			
D117			HSU119TRF-E	DIODE			
D201-203			EP05Q04	DIODE			
D204			EP05Q06	DIODE			
D501-504			CVS10A120M	VARISTOR			
D505		✻	MC2850-T111	DIODE			
D511,512			CVS10A120M	VARISTOR			
D513			CVS10A180M	VARISTOR			
D514,515			CVS10A120M	VARISTOR			
D516			CVS10A180M	VARISTOR			
D517			CVS10A120M	VARISTOR			
D518-520			CVS10A180M	VARISTOR			
D521-523			CVS10A120M	VARISTOR			
D525		✻	MC2850-T111	DIODE			

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

The IC101 and IC102 in the Video unit (X35-5060-10) are not replaceable components. When these ICs are defective, replace the whole Video unit (X35-5060-10).

VIDEO UNIT (X35-5060-10)

Ref. No.	Add	New	Parts No.	Description	Destination
D553			CVS10A180M	VARISTOR	
IC101		✻	-	ANALOGUE IC	
IC102		✻	-	ANALOGUE IC	
IC103			TC7SET125FU-F	MOS-IC	
IC104			BA00DD0WHFP	ANALOGUE IC	
IC105			XC6219B332PR	ANALOGUE IC	
IC106			XC6219B182PR	ANALOGUE IC	
IC201			LT1947-PBF	ANALOGUE IC	
IC301		✻	MST7703-A-LF	MOS-IC	
IC302		✻	AT25DF161	ROM IC	
IC401		✻	M12L641645TR	DRAM IC	
IC402			NJM2107F-ZB	ANALOGUE IC	
Q102			2SC4081	TRANSISTOR	
Q103,104		✻	RT1N144U-T111	TRANSISTOR	
Q202		✻	RT1N144U-T111	TRANSISTOR	
Q203			RT1P144U-T111	TRANSISTOR	
Q204			2SA1577	TRANSISTOR	
Q205			2SC4081	TRANSISTOR	
Q206			2SA1576A	TRANSISTOR	
Q207			2SC4081	TRANSISTOR	
Q208		✻	RT1N144U-T111	TRANSISTOR	
Q209			RT1P144U-T111	TRANSISTOR	
Q210		✻	RT1N144U-T111	TRANSISTOR	
Q211			2SC4081	TRANSISTOR	
Q212			2SC4097	TRANSISTOR	
Q213			2SC4081	TRANSISTOR	
Q214			2SA1576A	TRANSISTOR	
Q231		✻	RT1N144U-T111	TRANSISTOR	
Q232			RT1P144U-T111	TRANSISTOR	
Q233			2SA1576A	TRANSISTOR	
Q234			2SA1577	TRANSISTOR	
Q301		✻	RT1N144U-T111	TRANSISTOR	
Q302			2SC4081	TRANSISTOR	
Q501,502		✻	RT1N436U-T111	TRANSISTOR	
Q503		✻	RT1N144U-T111	TRANSISTOR	
Q504		✻	RT1P436U-T111	TRANSISTOR	
Q505		✻	RT1N144U-T111	TRANSISTOR	
Q506		✻	RT1P436U-T111	TRANSISTOR	
Q511-515			2SC4081	TRANSISTOR	
Q521			2SC4081	TRANSISTOR	

DVD UNIT (X37-1250-01)

C3			CK73HB1A104K	CHIP C	0.10UF	K	
C4			CC73HCH1H471J	CHIP C	470PF	J	
C5 -7			CK73HB1E103K	CHIP C	0.010UF	K	
C8			CC73HCH1H471J	CHIP C	470PF	J	
C9			CK73HB0J105K	CHIP C	1.0UF	K	
C11 ,12			CK73HB1E103K	CHIP C	0.010UF	K	
C13			CK73HB1H472K	CHIP C	4700PF	K	
C14			CK73FB0J106K	CHIP C	10UF	K	
C15			CK73HB1A104K	CHIP C	0.10UF	K	
C16			CK73FB0J106K	CHIP C	10UF	K	
C17			CK73GB0J475K	CHIP C	4.7UF	K	
C18			CK73FB0J226M	CHIP C	22UF	M	
C21			CK73FB0J106K	CHIP C	10UF	K	
C22 ,23			CK73GB0J475K	CHIP C	4.7UF	K	
C50			CK73HB1E103K	CHIP C	0.010UF	K	
C51			CK73HB1A104K	CHIP C	0.10UF	K	
C52			CK73HB1E223K	CHIP C	0.022UF	K	
C53			CC73HCH1H470J	CHIP C	47PF	J	
C54			CC73HCH1H102J	CHIP C	1000PF	J	
C55			CC73HCH1H100D	CHIP C	10PF	D	
C56			CC73HCH1H102J	CHIP C	1000PF	J	
C57			CC73HCH1E681J	CHIP C	680PF	J	
C58			CK73HB1H682K	CHIP C	6800PF	K	
C60 ,61			CK73HB1A104K	CHIP C	0.10UF	K	
C62			CC73HCH1H102J	CHIP C	1000PF	J	
C63			CC73HCH1H331J	CHIP C	330PF	J	
C64			CK73HB1H222K	CHIP C	2200PF	K	
C65			CC73HCH1E681J	CHIP C	680PF	J	
C66			CK73HB1H152K	CHIP C	1500PF	K	
C67 ,68			CC73HCH1H102J	CHIP C	1000PF	J	
C69 -72			CC73HCH1H151J	CHIP C	150PF	J	
C73 -82			CK73HB1A104K	CHIP C	0.10UF	K	
C84			CK73HB0J105K	CHIP C	1.0UF	K	
C85			CK73HB1A104K	CHIP C	0.10UF	K	
C90			CK73HB1E103K	CHIP C	0.010UF	K	
C93 -95			CK73HB1A104K	CHIP C	0.10UF	K	
C97			CK73HB1A104K	CHIP C	0.10UF	K	
C99			CK73HB1A104K	CHIP C	0.10UF	K	
C100			CK73FB0J226M	CHIP C	22UF	M	
C101			CK73GB0J475K	CHIP C	4.7UF	K	
C103			CK73FB0J226M	CHIP C	22UF	M	
C104			CK73GB0J475K	CHIP C	4.7UF	K	
C120,121			CK73HB1E223K	CHIP C	0.022UF	K	
C143,144			CC73HCH1H100D	CHIP C	10PF	D	
C202			CK73FB0J226M	CHIP C	22UF	M	
C207,208			CK73HB1A104K	CHIP C	0.10UF	K	
C210			CK73HB1A104K	CHIP C	0.10UF	K	
C212			CK73HB1A104K	CHIP C	0.10UF	K	
C213			CK73HB1H332K	CHIP C	3300PF	K	
C214,215			CK73HB1A104K	CHIP C	0.10UF	K	
C216			CC73HCH1H471J	CHIP C	470PF	J	
C217			CK73HB1A104K	CHIP C	0.10UF	K	
C218			CK73HB1C473K	CHIP C	0.047UF	K	
C219-222			CK73HB1A104K	CHIP C	0.10UF	K	
C223			CK73HB0J105K	CHIP C	1.0UF	K	
C224			CK73HB1A104K	CHIP C	0.10UF	K	
C225			CK73GB0J475K	CHIP C	4.7UF	K	
C227			CK73FB0J226M	CHIP C	22UF	M	
C434			CK73FB0J106K	CHIP C	10UF	K	
C435			CK73HB1E103K	CHIP C	0.010UF	K	
C436,437			CK73HB1A104K	CHIP C	0.10UF	K	
C440-442			CK73FB0J226M	CHIP C	22UF	M	
C446			CC73HCH1H101J	CHIP C	100PF	J	
C447,448			CC73HCH1H102J	CHIP C	1000PF	J	
C449,450			CK73HB1H472K	CHIP C	4700PF	K	
C451			CC73HCH1H102J	CHIP C	1000PF	J	
C452-454			CK73HB0J105K	CHIP C	1.0UF	K	
C455			CK73FB0J226M	CHIP C	22UF	M	
C456			CC73HCH1H150J	CHIP C	15PF	J	

⚠Indicates safety critical compo nents.

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

PARTS LIST

The IC3, and IC11 in the DVD unit (X37-1250-01) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6540-00).

DVD UNIT (X37-1250-01)

Ref. No.	Add	New	Parts No.	Description	Destination
CN1			E41-2594-05	FLAT CABLE CONNECTOR	
CN2			E41-2114-15	FLAT CABLE CONNECTOR	
CN3			E41-2596-05	FLAT CABLE CONNECTOR	
L5			L92-0365-05	CHIP FERRITE	
X2			L77-3803-05	CRYSTAL RESONATOR (16.897849MHZ	
CP2 -4			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP5 -9			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP10			RK74HB1J820J	CHIP-COM 82 J 1/16W	
CP11			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R3 ,4			RK73HB1J103J	CHIP R 10K J 1/16W	
R5 ,6			RK73HH1J123D	CHIP R 12K D 1/16W	
R7			RK73HH1J333D	CHIP R 33K D 1/16W	
R8 ,9			RK73HB1J103J	CHIP R 10K J 1/16W	
R10			RK73HB1J163J	CHIP R 16K J 1/16W	
R11			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R13			RK73HB1J103J	CHIP R 10K J 1/16W	
R16			RK73HB1J103J	CHIP R 10K J 1/16W	
R17			RK73HB1J271J	CHIP R 270 J 1/16W	
R19			RK73HB1J301J	CHIP R 300 J 1/16W	
R21 ,22			RK73HH1J103D	CHIP R 10K D 1/16W	
R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R50 ,51			RK73HB1J510J	CHIP R 51 J 1/16W	
R52			RK73HH1J153D	CHIP R 15K D 1/16W	
R53			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R54			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R55			RK73HB1J103J	CHIP R 10K J 1/16W	
R56			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R57 ,58			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R59 ,60			RK73HB1J103J	CHIP R 10K J 1/16W	
R63			RK73HB1J103J	CHIP R 10K J 1/16W	
R64 ,65			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R81			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R83 ,84			RK73HB1J473J	CHIP R 47K J 1/16W	
R85			RK73HB1J223J	CHIP R 22K J 1/16W	
R86			RK73HB1J103J	CHIP R 10K J 1/16W	
R87			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R88			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R89 ,90			RK73HB1J123J	CHIP R 12K J 1/16W	
R91			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R92			RK73HB1J273J	CHIP R 27K J 1/16W	
R96			RK73HB1J103J	CHIP R 10K J 1/16W	
R98			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R101			RK73HH1J273D	CHIP R 27K D 1/16W	
R105			RK73HB1J103J	CHIP R 10K J 1/16W	
R120			RK73HB1J103J	CHIP R 10K J 1/16W	
R121			RK73HB1J820J	CHIP R 82 J 1/16W	
R122			RK73HB1J103J	CHIP R 10K J 1/16W	
R123			RK73HB1J330J	CHIP R 33 J 1/16W	
R124-126			RK73HB1J820J	CHIP R 82 J 1/16W	
R150,151			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R152,153			RK73HB1J104J	CHIP R 100K J 1/16W	
R154,155			RK73HB1J103J	CHIP R 10K J 1/16W	
R158,159			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R160			R92-3350-05	CHIP R 2.2 F 1/10W	
R162,163			RK73HB1J104J	CHIP R 100K J 1/16W	
R164,165			RK73HH1J101D	CHIP R 100 D 1/16W	
R167			RK73HH1J113D	CHIP R 11K D 1/16W	
R168			RK73HH1J273D	CHIP R 27K D 1/16W	
R169			RK73HB1J125J	CHIP R 1.2M J 1/16W	
R255			R92-5112-05	CHIP R 4.7 F 1/10W	
R256			RK73HH1J111D	CHIP R 110 D 1/16W	
R257			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R260			RK73HH1J132D	CHIP R 1.3K D 1/16W	
R261			RK73HH1J203D	CHIP R 20K D 1/16W	
R262			RK73HB1J821J	CHIP R 820 J 1/16W	
R263			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R272			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R273			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R274			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R275			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R278			R92-5112-05	CHIP R 4.7 F 1/10W	
R279			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R284			RK73HB1J470J	CHIP R 47 J 1/16W	
R288			R92-3416-05	CHIP METAL-R 0.27 1/2W	
R298,299			RK73HB1J330J	CHIP R 33 J 1/16W	
R300			RK73HB1J103J	CHIP R 10K J 1/16W	
R301,302			RK73HB1J000J	CHIP R 0.0 J 1/16W	
S1			S68-0911-15	PUSH SWITCH	
S2			S68-0917-05	PUSH SWITCH	
D5 ,6			015AZ5.1-F(Y)	ZENER DIODE	
D8			1SS387-F	DIODE	
IC1			AN22022ABV	ANALOGUE IC	
IC3			-	ROM IC	
IC4			MN103S71F	MOS-IC	
IC5			S1000N28I4T1G	ANALOGUE IC	
IC10			AN41250A-VB	ANALOGUE IC	
IC11			-	ROM IC	
IC13			NJM2845DL115B	ANALOGUE IC	
IC14			NJM2845DL133B	ANALOGUE IC	
IC15			NJU7042	ANALOGUE IC	
Q1 ,2			DTA143XE	DIGITAL TRANSISTOR	
Q4			DTA143XE	DIGITAL TRANSISTOR	
Q5 ,6			2SK3019	FET	
Q12 ,13			2SB1709	TRANSISTOR	
Q14			SSM3J15FU-F	FET	

DVD MECHANISM ASSY (X92-6540-00) (DVS-8230W)

1	1A		A10-5523-11+	CHASSIS	
2	2B		A10-5524-01+	CHASSIS	
3	1A		A10-5535-01	CHASSIS	
4	3A		A10-5534-12	CHASSIS	
7	1B		D10-7080-02+	ARM	
8	1B		D10-7081-02+	ARM	
9	1B		D10-7082-02+	LEVER	
10	1B		D10-7083-02+	LEVER	
12	2B		D10-7084-02+	SLIDER	
13	2A		D10-7085-02+	ARM	
14	2B		D10-7086-03+	ARM	

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian)
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

DVD MECHANISM ASSY (X92-6540-00) (DVS-8230W)

Ref. No.	Add	New	Parts No.	Description	Destination
15	2B		D10-7087-02+	ARM	
25	2B		D10-7092-04+	SLIDER ASSY	
27	2A		D10-7091-04+	LEVER	
28	2B		D12-0640-02+	CAM	
31	2B		D13-3029-04+	GEAR	
32	2B		D13-3030-04+	GEAR	
33	2B		D13-3031-04+	GEAR	
34	2B		D13-3032-04+	GEAR	
35	2B		D13-3033-04+	GEAR	
36	2B		D13-3034-04+	GEAR	
40	2A		D13-3038-04+	GEAR	
41	2A		D13-3039-04+	GEAR	
42	2A		D13-3040-04+	GEAR	
43	1B		D14-1034-04+	ROLLER	
53	1B		D21-2487-24+	SHAFT	
54	2A		D39-0275-05	DAMPER	
55	2A		D39-0276-05	DAMPER	
60	3A		F09-3019-03	SHEET	
65	2B		G01-4734-04	EXTENSION SPRING	
66	1B		G01-4735-14	EXTENSION SPRING	
67	2A		G01-3300-14+	TORSION COIL SPRING	
68	2B		G01-4737-14	EXTENSION SPRING	
69	1B		G01-4602-14+	EXTENSION SPRING	
70	1B		G01-4740-04	TORSION COIL SPRING	
74	2B		G01-4609-24+	TORSION COIL SPRING	
75	1B		G02-1904-03+	FLAT SPRING	
79	2A		J22-0898-01	MOUNTING HARDWARE	
80	3B		J22-0891-11+	MOUNTING HARDWARE	
A	1A		N09-6815-05	MACHINE SCREW (M1.7X2.0)	
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4.0 P-T)	
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW	
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
93	2A		T99-0471-05	MAGNET	
96	1B		X94-2080-00	ROLLER ASSY	
98	2A	✻	X94-2120-00	TRAVERSE ASSY (PICKUP,SPINDLE)	
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)	

Ref. No.	Add	New	Parts No.	Description	Destination

E1: DNX5260BT **E2**: DDX5026 (Europe) **Q1**: DDX5056 (Russian) ⚠Indicates safety critical compo nents.
K: DNX6960 **K1**: DNX6160 **K2**: DNX6020EX **K3**: DNX5160 **K4**: DDX616 **K5**: DDX516 (North America)
X1: DNX5360 **X2**: DDX5036 (Australia) **R1**: DNX6460BT **R2**: DDX6046BT (Latin America)
M1: DNX5360 **M2**: DNX5360M **M3**: DDX5036 **M4**: DDX5036M (Other Areas)