9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

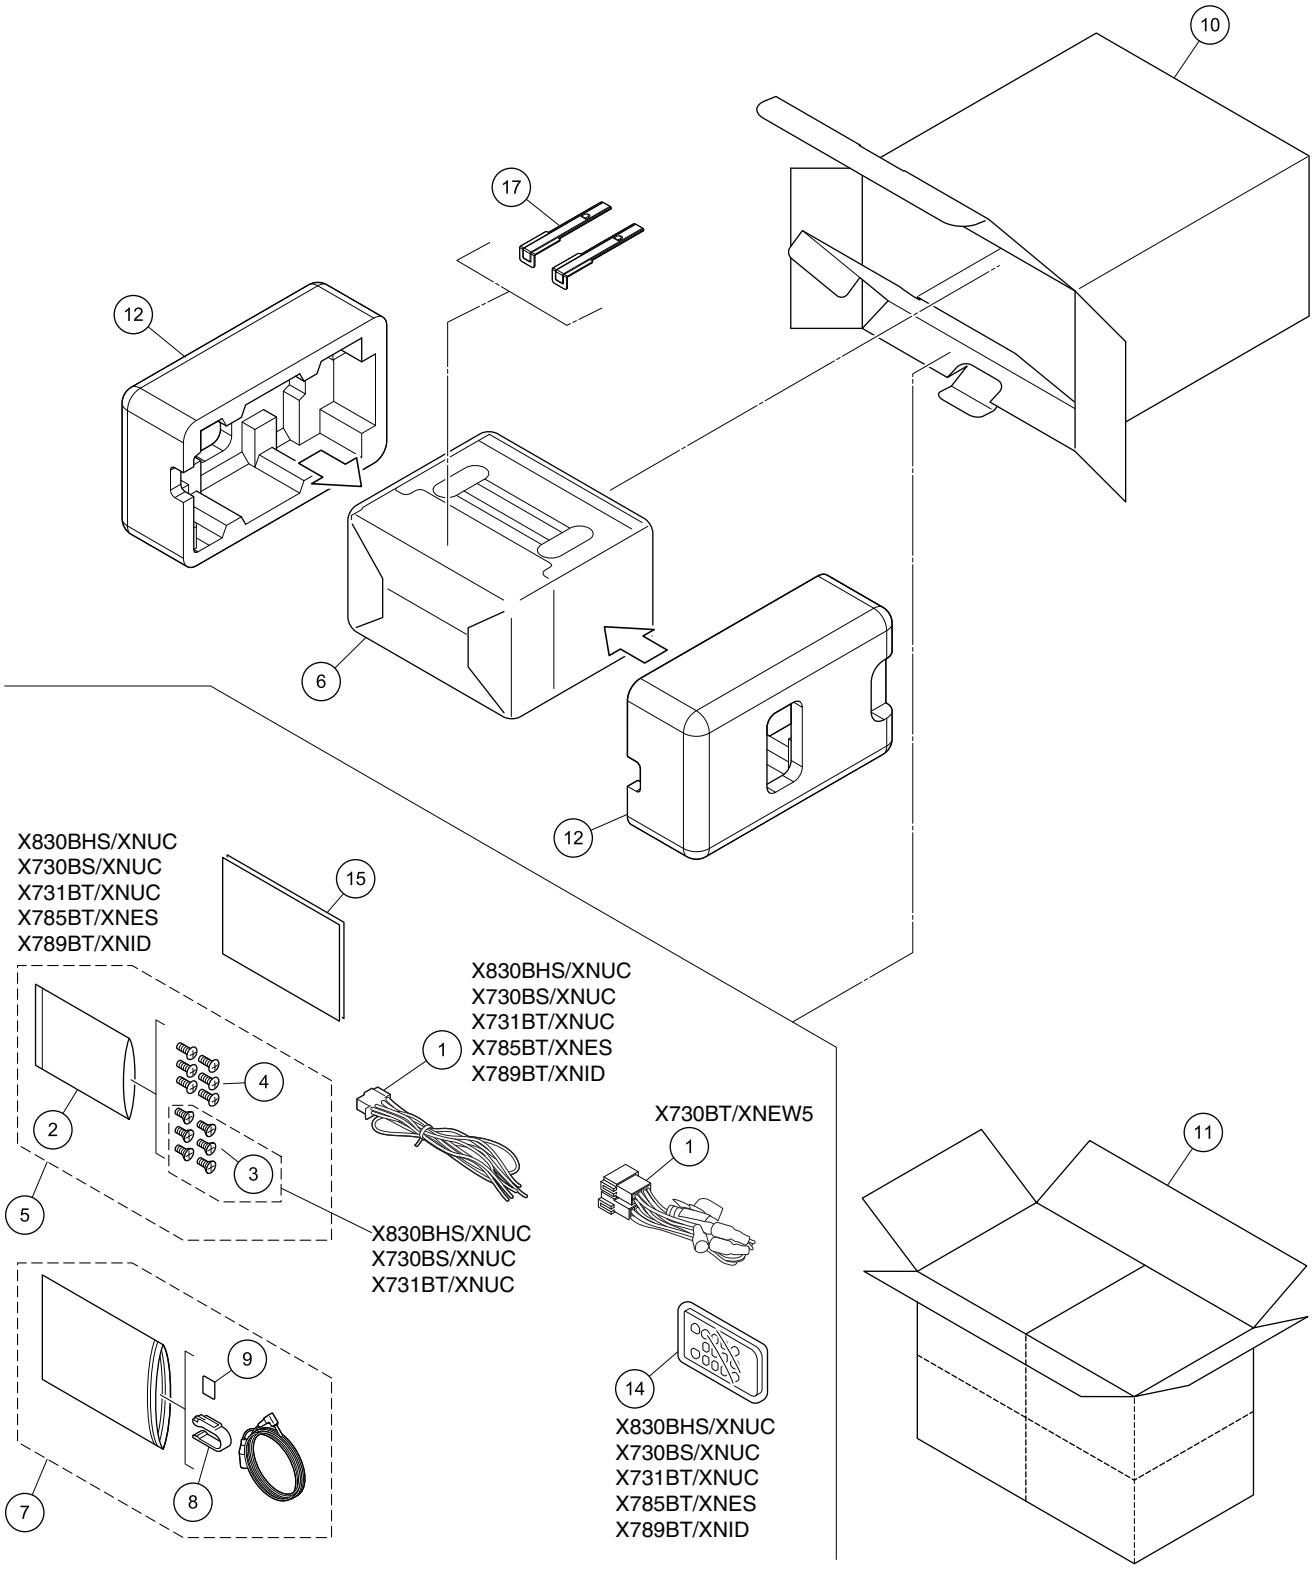

PACKING SECTION PARTS LIST

Mark	No.	Description	FH-X830BHS/ XNUC	FH-X730BS/ XNUC	FH-X731BT/ XNUC	FH-X730BT/ XNEW5	FH-X785BT/ XNES	FH-X789BT/ XNID
	1	Cord Assy	CDP1484	CDP1484	CDP1484	QDP3072	CDP1484	CDP1484
*	2	Polyethylene Bag	CEG1160	CEG1160	CEG1160	Not used	CEG1160	CEG1160
	3	Screw	CBA2383	CBA2383	CBA2383	Not used	Not used	Not used
	4	Screw	CBA2384	CBA2384	CBA2384	Not used	CBA2384	CBA2384
	5	Accessory Assy	QEA3335	QEA3335	QEA3335	Not used	QEA3336	QEA3336
	6	Cover	CEG1359	CEG1359	CEG1359	CEG1356	CEG1356	CEG1356
	7	Microphone Assy	CPM1109	CPM1109	CPM1109	CPM1109	CPM1109	CPM1109
	8	Holder	CZN7192	CZN7192	CZN7192	CZN7192	CZN7192	CZN7192
	9	Cushion	CZN7193	CZN7193	CZN7193	CZN7193	CZN7193	CZN7193
	10	Unit Box	QHG3868	QHG4022	QHG3873	QHG3869	QHG3871	QHG3872
	11	Contain Box	QHL3868	QHL4022	QHL3873	QHL3869	QHL3871	QHL3872
	12	Protector	QHP3044	QHP3044	QHP3044	QHP3045	QHP3045	QHP3044
	13	.....						
	14	Card Remote Control Unit	QXE1044	QXE1044	QXE1044	Not used	QXE1044	QXE1044
	15-1	Owner's Manual	QRD3341	QRD3341	QRD3341	QRD3340	QRD3342	QRB3538
*	15-2	Warranty Card	QRY3001	QRY3001	QRY3001	CRY1376	Not used	CRY1304
*	15-3	Caution Card	Not used	Not used	CRP1386	Not used	Not used	Not used
	16	.....						
	17	Handle	Not used	Not used	Not used	CND6289	CND6289	Not used

Owner's Manual, Installation Manual

Part No.	Language
QRD3340	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3341	English, French, Spanish(Espanol)
QRD3342	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic, Persian
QRB3538	English

9.2 EXTERIOR (1)

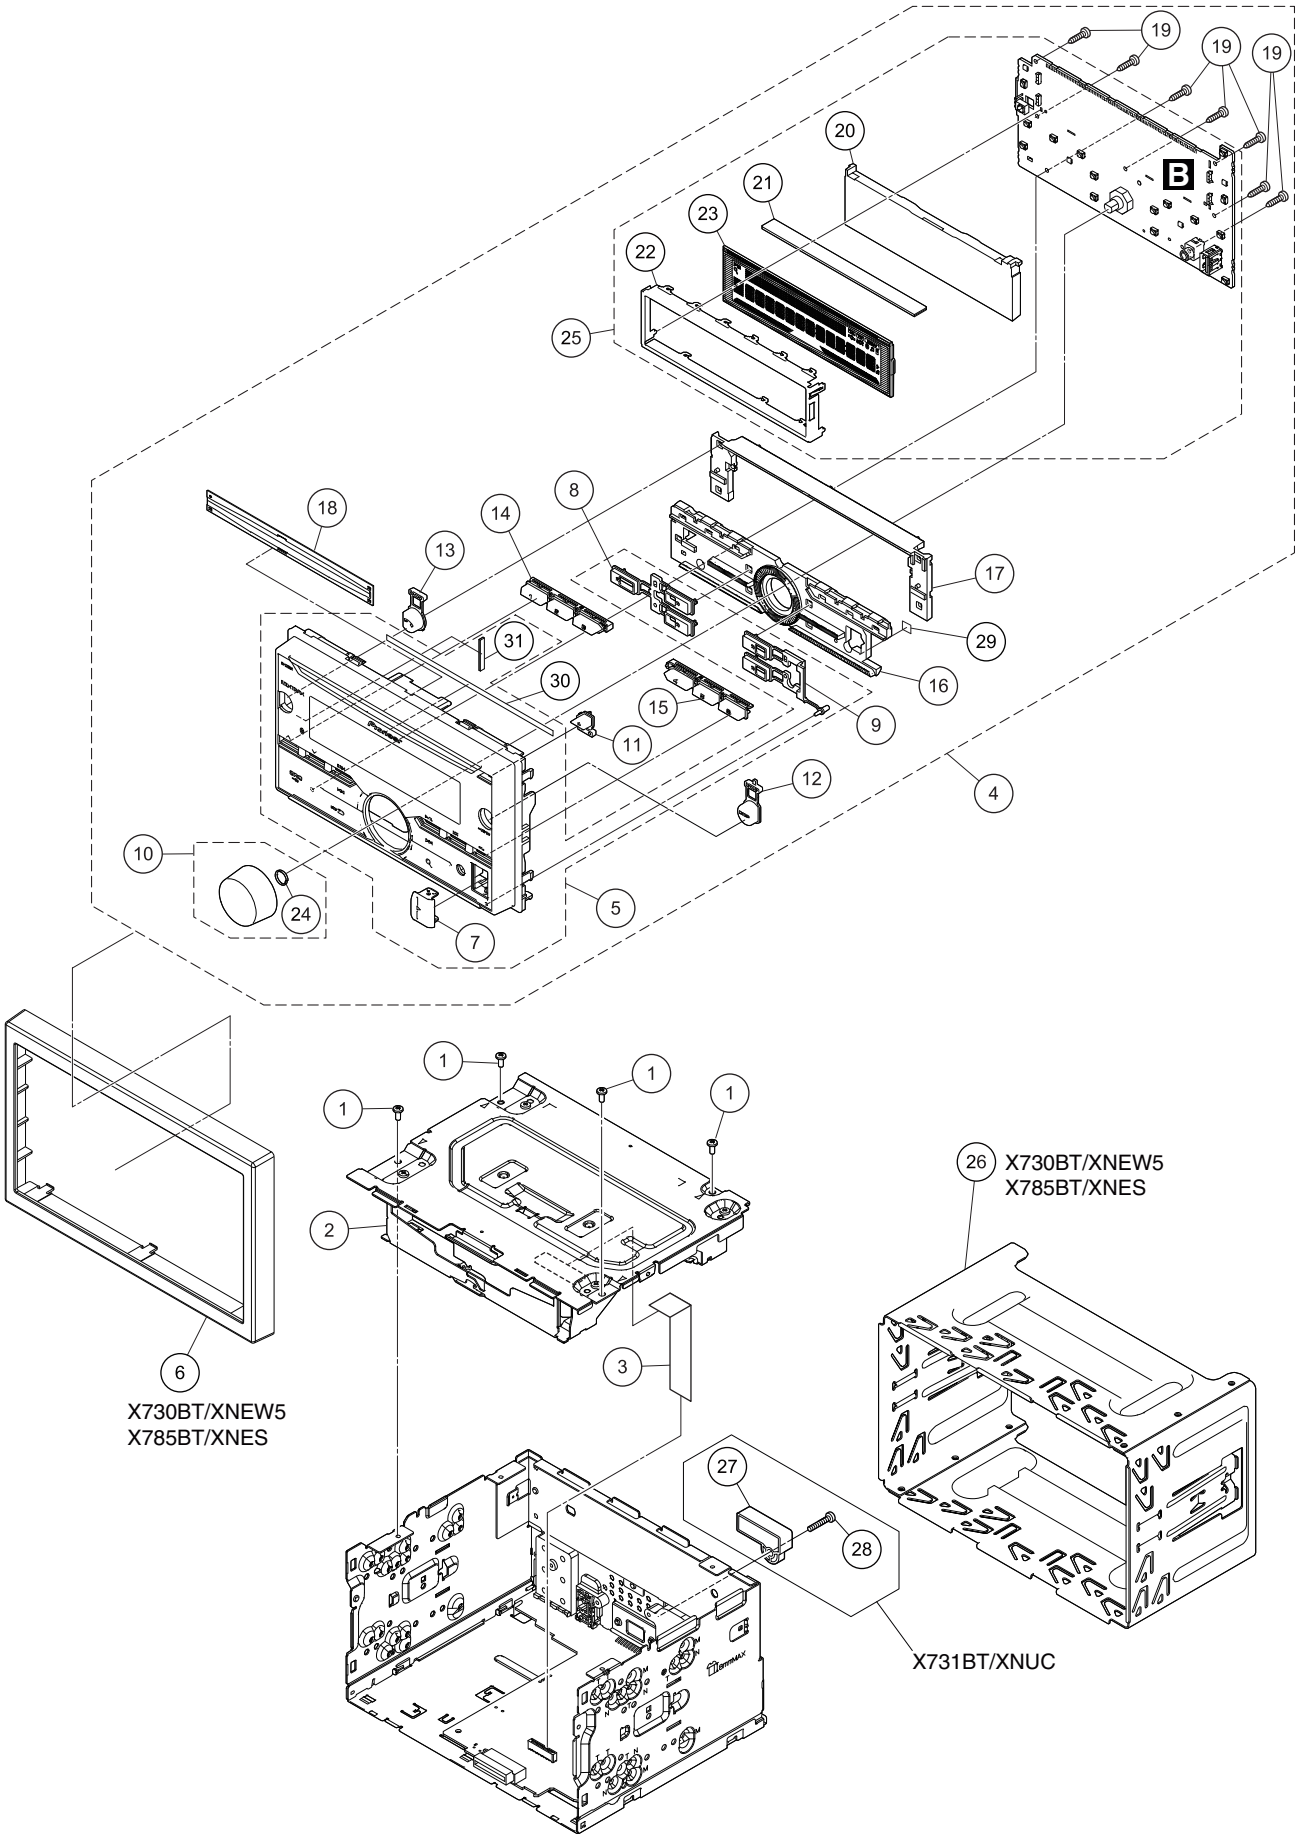

(1) EXTERIOR (1) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BSZ26P060FTC
	2	CD Mechanism Module(S11.6STD-FH)	CXK5806
	3	Cable	QDE3029
	4	Grille Assy	See Contrast table (2)
	5	Grille Unit	See Contrast table (2)
	6	Panel	See Contrast table (2)
	7	Door	QAT3022
	8	Button	QAC3235
	9	Button	QAC3236
	10	Knob Unit	QXA4278
	11	Button(EJECT)	QAC3230
	12	Button(DISP)	QAC3231
	13	Button(PHONE)	QAC3232
	14	Button(1-3)	QAC3233
	15	Button(4-6)	QAC3234
	16	Lighting Conductor	QNV3122
	17	Lighting Conductor	QNV3124
	18	Cover	QNM3151
	19	Screw	BPZ20P100FTC
	20	Lighting Conductor	QNV3123
	21	Rubber Connector	QNV3125
	22	Holder	QNC3121
	23	Segment LCD(V1801)	CAW2058
*	24	Spring	YBL5010
	25	Keyboard Unit	QWM4168
	26	Holder	See Contrast table (2)
	27	Holder	See Contrast table (2)
	28	Screw	See Contrast table (2)
	29	Sheet	QNM3145
	30	Sheet	QNM3149
	31	Cushion	QNM3152

(2) CONTRAST TABLE

FH-X830BHS/XNUC, FH-X730BS/XNUC, FH-X731BT/XNUC, FH-X730BT/XNEW5, FH-X785BT/XNES and FH-X789BT/XNID are constructed the same except for the following:

Mark	No.	Description	FH-X830BHS/ XNUC	FH-X730BS/ XNUC	FH-X731BT/ XNUC	FH-X730BT/ XNEW5	FH-X785BT/ XNES	FH-X789BT/ XNID
	4	Grille Assy	QXA4603	QXA4611	QXA4606	QXA4604	QXA4607	QXA4608
	5	Grille Unit	QXA4616	QXA4625	QXA4619	QXA4617	QXA4620	QXA4621
	6	Panel	Not used	Not used	Not used	QNS4003	QNS4003	Not used
	26	Holder	Not used	Not used	Not used	CND7102	CND7102	Not used
	27	Holder	Not used	Not used	CNV7619	Not used	Not used	Not used
	28	Screw	Not used	Not used	BSZ30P160FTC	Not used	Not used	Not used

9.3 EXTERIOR (2)

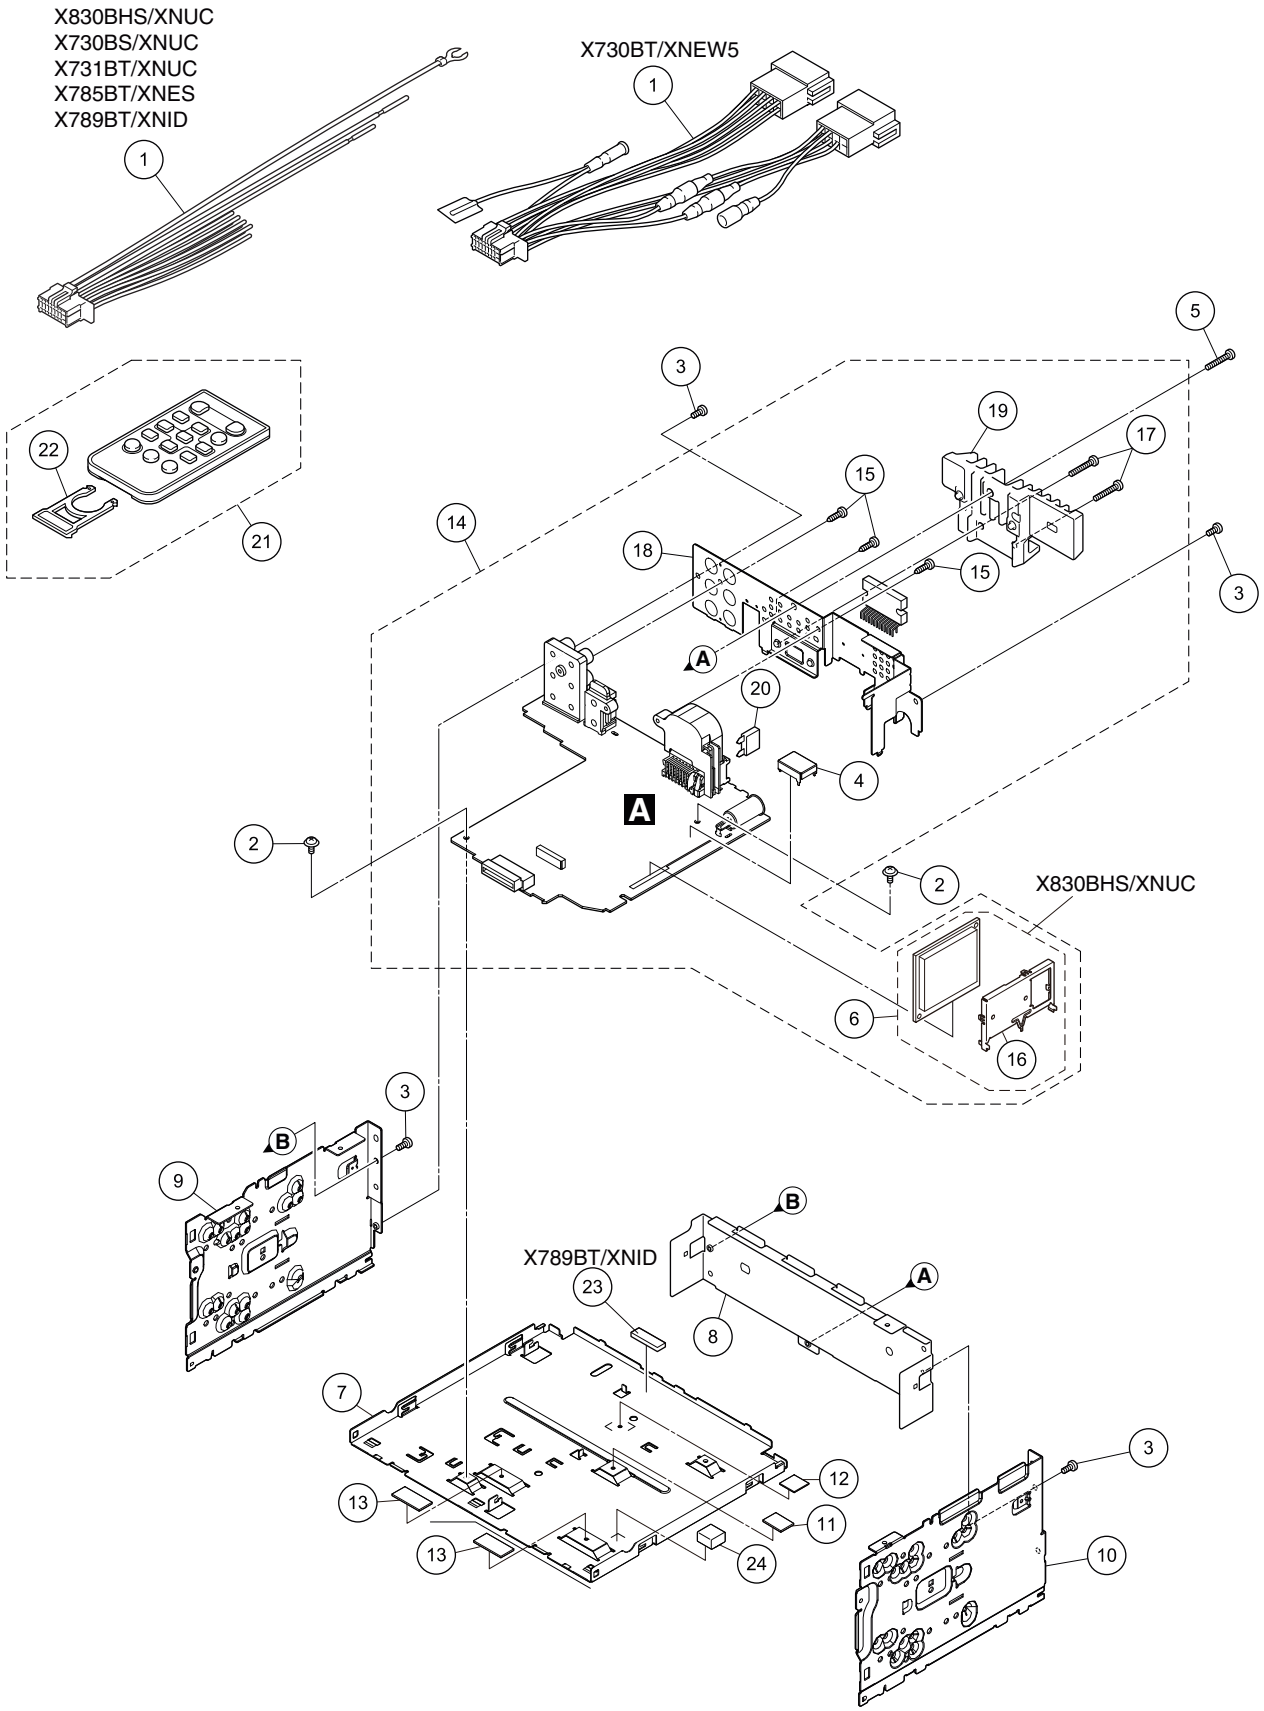

(1) EXTERIOR (2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	See Contrast table (2)
	2	Screw	ASZ26P050FTC
	3	Screw	BSZ26P060FTC
	4	Shield Case	QNC3107
	5	Screw	BSZ26P120FTC
	6	BE Core Unit(U951)	See Contrast table (2)
	7	Case	QNB3034
	8	Holder	QNC3057
	9	Bracket	QNC3093
	10	Bracket	QNC3094
	11	Heat Conductor Sheet	QNM3164
	12	Heat Conductor Sheet	QNM3165
	13	Heat Conductor Sheet	QNM3135
	14	Tuner Amp Unit	See Contrast table (2)
	15	Screw	BPZ26P080FTC
	16	Holder	See Contrast table (2)
	17	Screw	BSZ26P120FTC
	18	Holder	See Contrast table (2)
	19	Heat Sink	See Contrast table (2)
⚠	20	Fuse (10 A)	YEK5001
	21	Card Remote Control Unit	See Contrast table (2)
	22	Cover	See Contrast table (2)
	23	Heat Conductor Sheet	See Contrast table (2)
	24	Gasket	QNM3174

(2) CONTRAST TABLE

FH-X830BHS/XNUC, FH-X730BS/XNUC, FH-X731BT/XNUC, FH-X730BT/XNEW5, FH-X785BT/XNES and FH-X789BT/XNID are constructed the same except for the following:

Mark	No.	Description	FH-X830BHS/ XNUC	FH-X730BS/ XNUC	FH-X731BT/ XNUC	FH-X730BT/ XNEW5	FH-X785BT/ XNES	FH-X789BT/ XNID
	1	Cord Assy	CDP1484	CDP1484	CDP1484	QDP3072	CDP1484	CDP1484
	6	BE Core Unit(U951)	CWE2518	Not used	Not used	Not used	Not used	Not used
	14	Tuner Amp Unit	QWM4161	QWM4163	QWM4173	QWM4162	QWM4164	QWM4165
	16	Holder	CND7288	Not used	Not used	Not used	Not used	Not used
	18	Holder	QNC3112	QNC3112	QNC3113	QNC3113	QNC3113	QNC3113
	19	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3010	QNR3002	QNR3002
	21	Card Remote Control Unit	QXE1044	QXE1044	QXE1044	Not used	QXE1044	QXE1044
	22	Cover	CNS7068	CNS7068	CNS7068	Not used	CNS7068	CNS7068
	23	Heat Conductor Sheet	Not used	Not used	Not used	Not used	Not used	QNM3130

9.4 CD MECHANISM MODULE

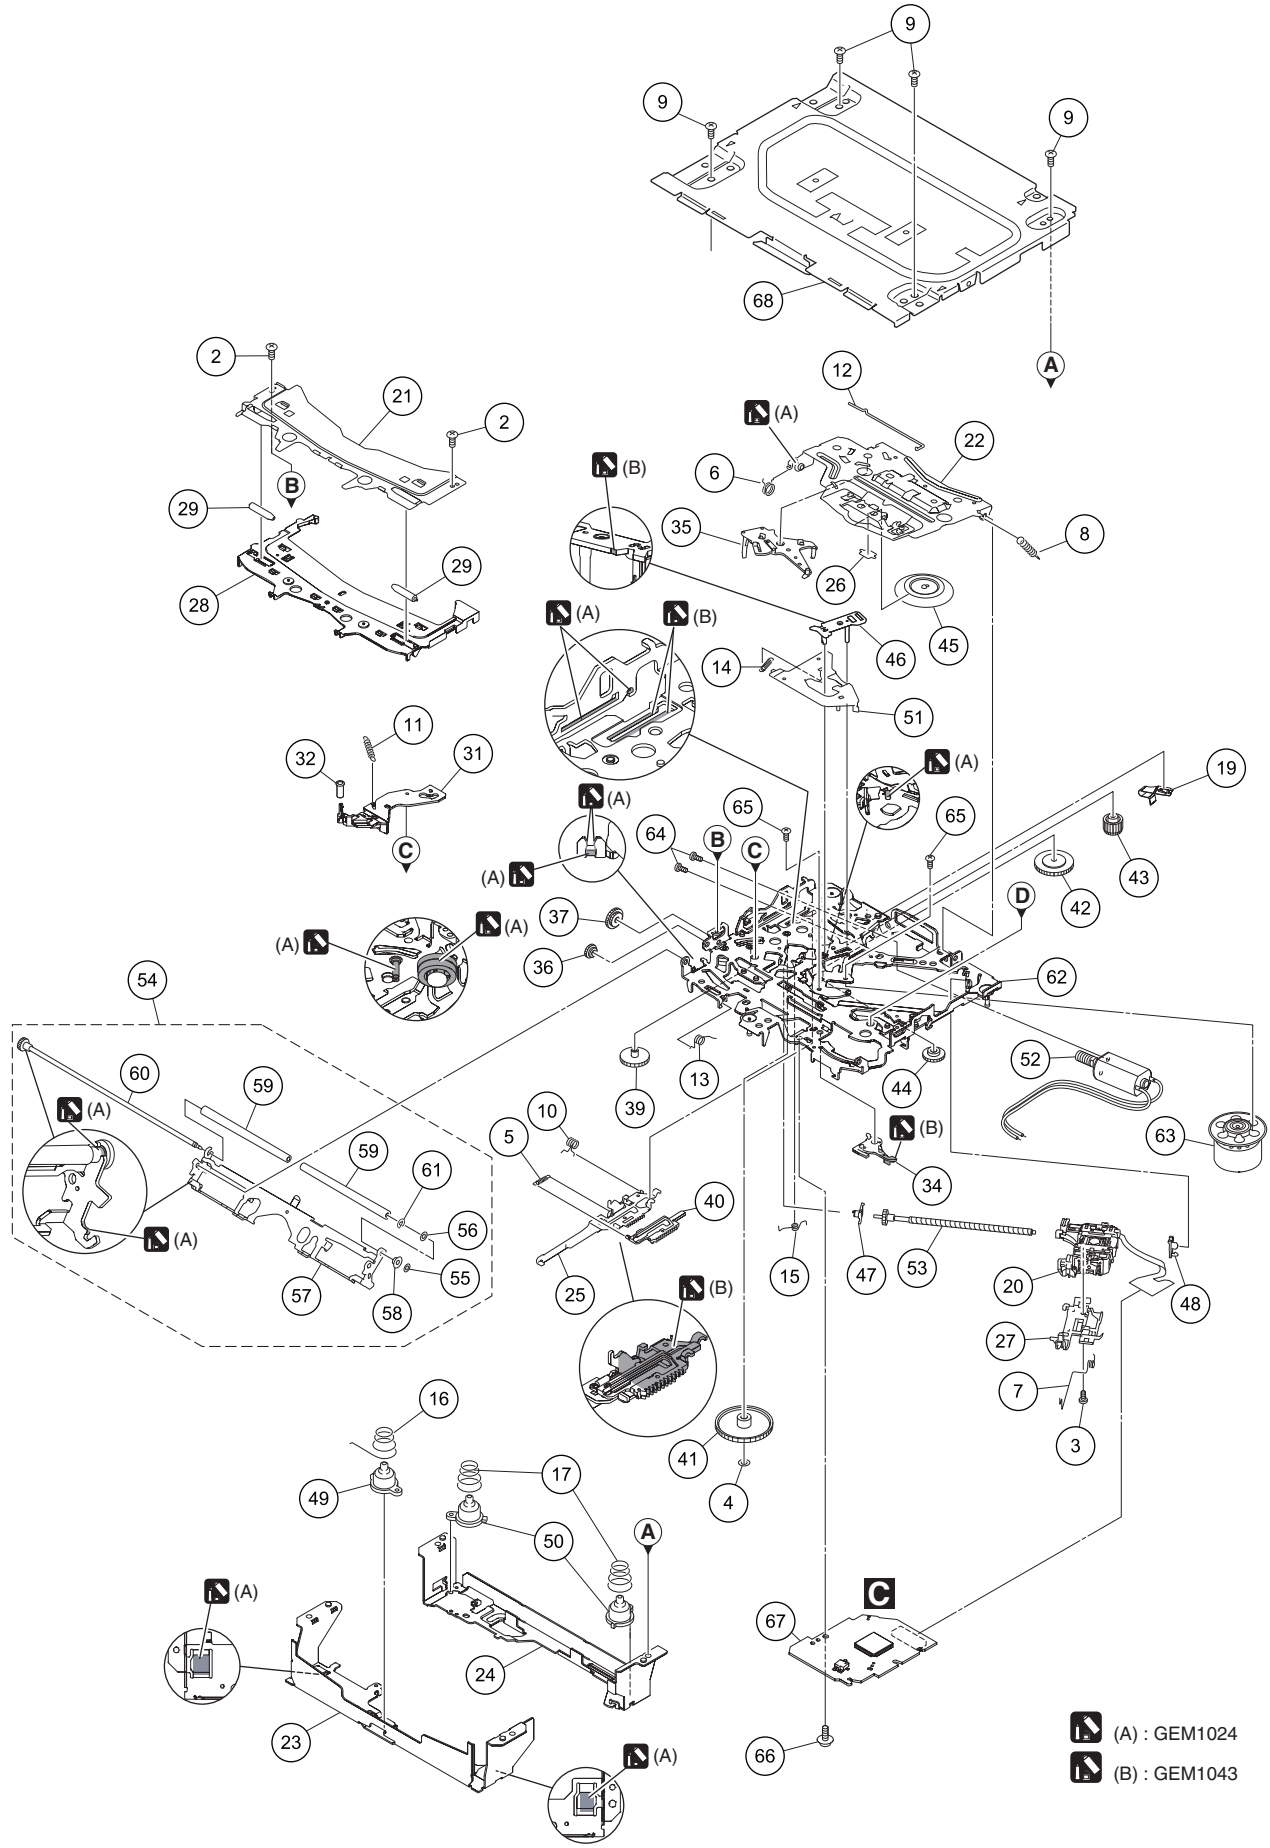

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	.....	
2	Screw	BSZ20P040FTC
3	Screw(M2 x 4)	CBA1835
4	Washer	CBF1038
5	Spring	CBH3010
6	Spring	CBH2855
7	Spring	CBH2856
8	Spring	CBH2860
9	Screw	BSZ26P060FTC
10	Spring	CBH3011
11	Coil Spring	CBH3095
12	Spring	CBH3014
13	Spring	CBH3015
14	Spring	CBH3016
15	Spring	CBH3017
16	Spring	CBH3086
17	Spring	CBH3019
18	.....	
19	Leaf Spring	CBL1824
20	Pickup Unit(P10.6)(Service)	CXX3556
21	Bracket	CND4553
22	Arm	CND6406
23	Bracket	CND6127
24	Bracket	CND5710
25	Lever	CND6834
26	Sheet	CNN3678
27	Rack	CNV8342
28	Guide	CNW3489
29	Roller	CNW1172
30	.....	
31	Arm	CNW2241
32	Roller	CNW1175
33	.....	
34	Arm	CNW1177
35	Arm	CNW1178
36	Gear	CNW1180
37	Gear	CNW1181
38	.....	
39	Gear	CNW1183
40	Rack	CNW1184
41	Gear	CNW1185
42	Gear	CNW1186
43	Gear	CNW1187
44	Gear	CNW2287
45	Clamper	CNW1190
46	Arm	CNW1192
47	Holder	CNW1193
48	Holder	CNW1194
49	Damper	CNW1197
50	Damper	CNW1198
51	Arm	CNW1726
52	Motor Unit(M2)(LOAD/CRG)	CXC4026
53	Screw Unit	CXC8894
54	Arm Assy	CXE6232
55	Washer	CBF1037
56	Washer	CBF1038
57	Arm	CND6242
58	Collar	CNW2444
59	Roller	CNW2500
60	Gear Unit	CXE6225
61	Washer	YE15FTC
62	Chassis Unit	CXE4528
63	Motor Unit(M1)(SPDL)	CXE2273
64	Screw	JFZ20P025FTC
65	Screw	JGZ17P022FTC
66	Screw	EBA1028
67	CD Core Unit (S11.6STD)	CWX4023
68	Case	CNB3762

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*
  Chip Resistor
  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J
  Chip Capacitor (except for CQS.....)
  CKS....., CCS....., CSZS.....
- *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:FH-X830BHS/XNUC
B:FH-X730BS/XNUC
C:FH-X731BT/XNUC
D:FH-X730BT/XNEW5
E:FH-X785BT/XNES
F:FH-X789BT/XNID

Unit Number : QWM4161(A)
Unit Number : QWM4163(B)
Unit Number : QWM4173(C)
Unit Number : QWM4162(D)
Unit Number : QWM4164(E)
Unit Number : QWM4165(F)
Unit Name : Tuner Amp Unit
Unit Number : QWM4168
Unit Name : Keyboard Unit
Unit Number : CWX4023
Unit Name : CD Core Unit(S11.6STD)

A

Unit Number : QWM4161(A)
Unit Number : QWM4163(B)
Unit Number : QWM4173(C)
Unit Number : QWM4162(D)
Unit Number : QWM4164(E)
Unit Number : QWM4165(F)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 201	Power supply IC	BD49101AEFS
IC 202	Power supply IC	BD2232G-G
IC 301	DC/DC Converter IC(A)	KBD9876EFJ
IC 422	Regulator IC(A)	MM3411A33N
IC 423	Regulator IC(A)	S-1172B12-E6
* IC501	Microprocessor IC	STA1080
IC 502	IC	S-80827CNMC-B8M
IC 503	L-MOS And Gate(A,B)	TC7SET08FUS1
IC 504	IC(A,B)	TC7SH126FU
IC 701	IC	337S3959
IC 702	RAM IC	M12L128168A-5TG2N
IC 731	ROM IC	M95512-RMN6P
IC 741	IC(A)	QWW4080
IC 741	IC(B,C)	QWW4081
IC 741	IC(D,E,F)	QWW4078
IC 742	IC	MX25L1636EM2I-08G
IC 751	E-VOL System LSI	PM9015A
IC 851	Tuner IC(A)	TEF6688HN-V102
IC 851	Tuner IC(Except A)	TEF6686HN-V102
IC 1301	Power Amp IC(Except E)	PAL013B
IC 1301	Power Amp IC(E)	PA2032A
Q 111	Bipolar Transistor	LSCR523UB
Q 121	Resistor Built-in Transistor	LTC014EEB
Q 141	Bipolar Transistor	LSCR523UB
Q 142	Bipolar Transistor	LSCR523UB
Q 201	Bipolar Transistor	LSCR523UB
Q 202	FET	SSM3J332R
Q 203	Power MOS FET	RRR040P03
Q 441	Transistor	2SAR502UB
Q 442	Resistor Built-in Transistor	LTC023YEB
Q 481	Transistor	2SAR502UB
Q 482	Resistor Built-in Transistor	LTC043EEB
Q 701	Bipolar Transistor	LSAR523UB
Q 851	Bipolar Transistor(A)	MMBT2369L
Q 852	Bipolar Transistor(A)	MMBT2369L
Q 853	Bipolar Transistor(A)	MMBT2369L
Q 854	Bipolar Transistor(A)	MMBT2369L
Q 1241	Transistor	EMH53
Q 1242	Transistor	EMH53
Q 1243	Transistor	EMH53
Q 1276	Transistor(E,F)	EMD53
Q 1301	Transistor	EMD52
D 101	Diode	D1F60-5053
D 102	Diode	D1F60-5053
D 111	Diode(Except D)	DZ2J068M0
D 111	Diode(D)	DZ2J075M0
D 121	Diode	CRG03

Circuit Symbol and No.		Part No.
D 141	Diode	DZ2J075M0
D 201	Schottky Diode	RB162M-40
D 202	Diode	RR264MM-400TF
D 203	Diode	RB056L-40
D 206	Schottky Diode	CMS30I30A
D 207	Schottky Diode	RB751SM-40
D 208	Diode	DZ2S068C
D 210	Diode	DZ2S068C
D 301	Diode(A)	RB056L-40
D 302	Diode(A)	RB060M-30
D 422	Diode(A)	RR264MM-400TF
D 423	Diode(A)	RR264MM-400TF
D 424	Diode(A)	RR264MM-400TF
D 425	Diode(A)	RR264MM-400TF
D 501	Schottky Diode(A,B,C,D)	RB751SM-40
D 502	Schottky Diode(A,B,C,D)	RB751SM-40
D 504	Diode	EZAEG2A50AX
D 505	Diode	EZAEG2A50AX
D 1102	Diode	DZ2S068C
D 1201	Diode	DZ2S068C
D 1206	Diode	DZ2S068C
D 1207	Diode	DZ2S068C
D 1208	Diode	DZ2S068C
D 1209	Diode	DZ2S068C
D 1210	Diode	DZ2S068C
D 1293	Rectifier Diode	DAN202UM
D 1301	Diode(Except E)	CRG03
D 1302	Diode	CRG03
L 101	Choke Coil	CTH1620
L 201	SMD SPL Inductor	CTH1521
L 202	SMD SPL Inductor	CTH1524
L 301	SMD SPL Inductor(A)	CTH1584
L 401	Inductor	CTF1793
L 502	Inductor	CTF1645
L 503	Chip Beads	VTL1133
L 504	Chip Beads	VTL1133
L 505	Chip Beads	VTL1133
L 854	Inductor	LCMAR27J1608
L 855	Inductor	CTF1786
L 856	Inductor(A,B,C,D)	CTF1389
L 857	Inductor(E,F)	ATL7033
L 858	Chip Coil(E,F)	LCTAWR27J2520
L 859	Chip Coil(E,F)	LCTAW3R3J2520
L 860	Inductor(A,B,C,D)	LCYC150K1608
L 1001	Inductor	CTF1786
L 1101	Inductor	CTF1389
L 1102	Chip Beads	VTL1133
L 1103	Chip Beads	VTL1133
L 1104	Chip Beads	VTL1133
L 1276	Chip Beads	VTL1126
L 1277	Chip Beads	VTL1126
L 1278	Chip Beads	VTL1126
L 1279	Chip Beads	VTL1126
L 1292	Chip Beads	VTL1126
L 1293	Chip Beads	VTL1126
L 1294	Chip Beads	VTL1126
L 1295	Chip Beads	VTL1126
L 1296	Chip Beads	VTL1126
L 1297	Chip Beads	VTL1126
T 851	Variable Coil	CTC1215

Circuit Symbol and No.		Part No.
X 501	Resonator 24 MHz	CSS1773
X 502	Resonator 32.768 kHz	CSS1807
X 751	Crystal Resonator 18.432MHz	CSS1826
X 851	Crystal Resonator	CSS1868
P 401	Poly Switch(A,B)	FSMD110-24R
P 852	Surge Absorber	IMSA-6803-01Y900
P 1243	Poly Switch	FSMD075-24R
P 1276	Poly Switch	FSMD075-24R
VA321	SMD Varistor	MLV0402ES012V0010N
VA1101	SMD Varistor	MLV0402ES012V0010N
VA1201	SMD Varistor	MLV0402ES012V0010N
VA1202	SMD Varistor	MLV0402ES012V0010N
U 951	BE Core Unit(A)	CWE2518
U 1001	BT Module	CWX4751
CN1101	Connector	VKN1192
CN1201	Connector	CKS6452
JA101	Plug	CKM1624
JA851	Antenna Jack	CKX1104
JA1231	Connector(A,B)	CKS3806
JA1241	Jack	CKB1113
JA1276	Jack	CKN1103

RESISTORS

R 111		RS1/16SS223J
R 112		RS1/16SS473J
R 113	(Except D)	RS1/16SS682J
R 113	(D)	RS1/16SS333J
R 114	(Except D)	RS1/4SA102J
R 114	(D)	RS1/4SA122J
R 121		RS1/16SS103J
R 123		RS1/4SA102J
R 141		RS1/16SS104J
R 142		RS1/16SS473J
R 143		RS1/16SS103J
R 144		RS1/16SS472J
R 145		RS1/16SS0R0J
R 202		RS1/16SS3303D
R 207		RS1/16SS222J
R 208		RS1/16SS472J
R 209		RS1/4SA472J
R 210		RS1/16SS103J
R 214		RS1/16SS102J
R 215		RS1/16SS2403D
R 216		RS1/16SS7502D
R 217		RS1/16SS4303D
R 218		RS1/16SS4303D
R 219		RS1/16SS104J
R 220		RS1/16SS3903D
R 221		RS1/16SS6202D
R 222		RS1/16SS6802D
R 223	0.02 ohm	CCN1401
R 224		RS1/16SS6802D
R 225		RS1/16SS102J
R 226		RS1/16SS1203D
R 227		RS1/16SS1802D
R 229		RS1/16SS3902D
R 230		RS1/16SS682J
R 231		RS1/16SS4703D
R 232		RS1/16SS1503D
R 233		RS1/16SS1003D

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 234		RS1/16SS7503D	R 534		RS1/10SR103J
R 235		RS1/16SS1603D	R 537		RS1/16SS473J
R 236		RS1/16SS102J	R 538	(A,B,D)	RS1/16SS472J
R 237		RS1/16SS102J	R 538	(C)	RS1/16SS473J
R 238		RS1/16SS102J	R 538	(E)	RS1/16SS103J
R 239		RS1/16SS101J	R 538	(F)	RS1/16SS223J
R 240		RS1/16SS221J	R 539	(C)	RS1/16SS223J
R 241		RS1/16SS121J	R 539	(E,F)	RS1/16SS473J
R 242		RS1/16SS6801F	R 540		RS1/16SS103J
R 243		RS1/16SS393J	R 541		RS1/16SS103J
R 244		RS1/16SS103J	R 546		RS1/16SS103J
R 245		RS1/8SQ0R0J	R 547		RS1/16SS473J
R 248		RS1/16SS332J	R 548		RS1/16SS102J
R 250		RS1/10SR471J	R 550		RS1/16SS103J
R 256		RS1/16SS0R0J	R 551		RS1/16SS103J
R 260		RS1/16SS473J	R 554		RS1/16SS222J
R 263		RS1/10SR471J	R 555		RS1/16SS0R0J
R 264		RS1/10SR0R0J	R 557		RS1/16SS221J
R 268		RS1/10SR0R0J	R 558		RS1/16SS221J
R 269		RS1/16SS101J	R 559		RS1/16SS221J
R 301	(A)	RS1/10SR471J	R 560		RS1/16SS473J
R 303	(A)	RS1/16SS1803D	R 561		RS1/16SS103J
R 304	(A)	RS1/16SS4302D	R 563		RS1/16SS0R0J
R 305	(A)	RS1/16SS682J	R 564		RS1/16SS472J
R 306	(A)	RS1/16SS0R0J	R 565		RS1/16SS0R0J
R 322		RS1/16SS0R0J	R 566		RAB4CQ473J
R 323	(A)	RS1/16SS102J	R 570		RS1/16SS221J
R 404	(A,B)	RS1/10SR0R0J	R 571		RS1/16SS221J
R 406		RS1/16SS183J	R 573		RS1/16SS473J
R 422	(A)	RS1/16SS102J	R 574		RS1/16SS473J
R 441		RS1/16SS103J	R 575		RS1/16SS473J
R 442		RS1/10SR221J	R 576		RS1/16SS473J
R 481		RS1/16SS471J	R 577		RS1/16SS473J
R 482		RS1/16SS103J	R 578		RS1/16SS473J
R 503		RS1/16SS222J	R 579		RS1/16SS473J
R 504		RS1/16SS222J	R 580		RS1/16SS473J
R 506		RS1/16SS473J	R 581		RS1/16SS472J
R 507		RS1/16SS473J	R 584		RS1/16SS102J
R 508		RS1/16SS473J	R 586		RS1/16SS103J
R 509		RS1/16SS473J	R 587		RS1/16SS0R0J
R 510		RS1/16SS473J	R 591		RS1/16SS361J
R 511		RS1/16SS473J	R 595		RS1/16SS0R0J
R 512		RS1/16SS101J	R 596		RS1/16SS0R0J
R 513		RS1/16SS222J	R 597		RS1/16SS102J
R 514		RS1/16SS221J	R 599		RS1/16SS102J
R 515		RS1/16SS221J	R 610	(Except A)	RS1/16SS473J
R 516		RS1/16SS221J	R 611		RS1/16SS472J
R 517		RS1/16SS221J	R 612		RS1/16SS473J
R 518		RS1/16SS472J	R 614		RS1/16SS473J
R 519		RS1/16SS271J	R 615		RS1/16SS103J
R 520	(A)	RS1/16SS472J	R 617		RS1/16SS473J
R 522		RS1/16SS0R0J	R 619		RS1/16SS473J
R 524		RS1/16SS3001D	R 620		RS1/16SS0R0J
R 525		RS1/16SS103J	R 622		RS1/16SS0R0J
R 526		RS1/16SS1213F	R 627		RS1/16SS153J
R 529		RS1/16SS0R0J	R 628		RS1/16SS153J
R 530		RS1/16SS0R0J	R 629		RS1/16SS472J
R 531		RS1/16SS222J	R 630		RS1/16SS101J
R 532		RS1/16SS102J	R 631		RS1/16SS221J
R 533		RS1/10SR103J	R 632		RS1/16SS101J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 633		RS1/16SS101J	R 744		RS1/16SS330J
R 634		RS1/16SS101J	R 745		RS1/16SS330J
R 635		RS1/16SS101J	R 746		RS1/16SS103J
R 636		RS1/16SS101J	R 747		RS1/16SS330J
R 637		RS1/16SS221J	R 748		RS1/16SS330J
R 638		RS1/16SS221J	R 749		RS1/16SS330J
R 639		RS1/16SS101J	R 750		RS1/16SS103J
R 640		RS1/16SS101J	R 753		RS1/16SS0R0J
R 642		RS1/16SS0R0J	R 754		RS1/16SS105J
R 643		RS1/16SS101J	R 755		RS1/16SS471J
R 644		RS1/16SS102J	R 758		RS1/10SR221J
R 645		RS1/16SS101J	R 798	(A,B,C,D)	RS1/10SR0R0J
R 646		RS1/16SS102J	R 799	(E,F)	RS1/16SS0R0J
R 647		RS1/16SS102J	R 800		RS1/16SS0R0J
R 648		RS1/16SS102J	R 810		RS1/10SR0R0J
R 649		RS1/16SS102J	R 851		RS1/16SS105J
R 650		RS1/16SS121J	R 852		RS1/16SS105J
R 651		RS1/16SS102J	R 853	(A,B,C,D)	RS1/16SS391J
R 652		RS1/16SS101J	R 853	(E,F)	RS1/16SS101J
R 653		RS1/16SS102J	R 860	(A)	RS1/16SS0R0J
R 654		RS1/16SS102J	R 861	(A)	RS1/16SS0R0J
R 655		RS1/16SS102J	R 862	(A)	RS1/16SS0R0J
R 657		RS1/4SA0R0J	R 864		RS1/16SS103J
R 658		RS1/4SA0R0J	R 865	(A)	RS1/16SS332J
R 659		RS1/10SR0R0J	R 866	(A)	RS1/16SS182J
R 672		RS1/16SS101J	R 868		RS1/16SS103J
R 701		RS1/16SS103J	R 869	(A)	RS1/16SS0R0J
R 702		RS1/16SS472J	R 870		RS1/16SS101J
R 703		RS1/16SS101J	R 871	(A)	RS1/16SS102J
R 704		RS1/16SS101J	R 872	(A)	RS1/16SS121J
R 705		RS1/16SS222J	R 873		RS1/16SS472J
R 706		RS1/16SS222J	R 874		RS1/16SS101J
R 707		RS1/16SS472J	R 875		RS1/16SS472J
R 708		RS1/16SS272J	R 876	(A)	RS1/16SS121J
R 709		RS1/16SS473J	R 877	(A)	RS1/16SS121J
R 710		RS1/16SS0R0J	R 878	(A)	RS1/16SS121J
R 711		RS1/16SS0R0J	R 879	(A)	RS1/16SS121J
R 714		RAB4CQ121J	R 881	(A)	RS1/16SS332J
R 715		RAB4CQ121J	R 882	(A)	RS1/16SS182J
R 716		RAB4CQ121J	R 883	(A)	RS1/16SS102J
R 717		RAB4CQ121J	R 884	(A)	RS1/16SS121J
R 718		RAB4CQ121J	R 890		RS1/16SS0R0J
R 719		RAB4CQ121J	R 891		RS1/10SR0R0J
R 720		RAB4CQ121J	R 952	(A)	RS1/16SS101J
R 721		RAB4CQ121J	R 953	(A)	RS1/16SS101J
R 722		RAB4CQ121J	R 954	(A)	RS1/16SS101J
R 724		RS1/16SS121J	R 955	(A)	RS1/16SS101J
R 728		RS1/10SR0R0J	R 957	(A)	RS1/16SS101J
R 729		RS1/10SR0R0J	R 958	(A)	RS1/16SS101J
R 730		RS1/10SR0R0J	R 959	(A)	RS1/16SS101J
R 731		RS1/16SS330J	R 960	(A)	RS1/16SS101J
R 732		RS1/16SS330J	R 961	(A)	RS1/10SR102J
R 733		RS1/16SS103J	R 962	(A)	RS1/10SR221J
R 734		RS1/16SS103J	R 963	(A)	RS1/10SR121J
R 735		RS1/16SS103J	R 966		RS1/10SR0R0J
R 736		RS1/16SS330J	R 968		RS1/10SR0R0J
R 737		RS1/16SS330J	R 970		RS1/4SA0R0J
R 741		RS1/16SS330J	R 971		RS1/4SA0R0J
R 742		RS1/16SS103J	R 1001		RS1/16SS0R0J
R 743		RS1/16SS103J	R 1002		RS1/16SS221J

Circuit Symbol and No.		Part No.
R 1004		RS1/16SS473J
R 1005		RS1/16SS221J
R 1006		RS1/16SS0R0J
R 1007		RS1/16SS0R0J
R 1008		RS1/10SR0R0J
R 1011		RS1/16SS0R0J
R 1012		RS1/16SS221J
R 1013		RS1/16SS0R0J
R 1014		RS1/10SR0R0J
R 1015		RS1/10SR0R0J
R 1016		RS1/4SA0R0J
R 1017		RS1/16SS473J
R 1018		RS1/16SS473J
R 1101		RS1/16SS104J
R 1104		RS1/16SS104J
R 1105		RS1/16SS221J
R 1106		RS1/16SS221J
R 1107		RS1/16SS101J
R 1108		RS1/16SS221J
R 1109		RS1/16SS101J
R 1110		RS1/16SS102J
R 1112		RS1/16SS221J
R 1113		RS1/16SS104J
R 1114		RS1/16SS473J
R 1115		RS1/16SS472J
R 1116		RS1/16SS472J
R 1117		RS1/16SS472J
R 1120		RS1/16SS151J
R 1121		RS1/16SS151J
R 1122		RS1/16SS151J
R 1123		RS1/16SS0R0J
R 1126		RS1/16SS0R0J
R 1201		RS1/10SR0R0J
R 1203		RS1/16SS223J
R 1204		RS1/16SS223J
R 1205		RS1/10SR222J
R 1206		RS1/10SR221J
R 1207		RS1/10SR221J
R 1208		RS1/10SR0R0J
R 1209		RS1/10SR222J
R 1210		RS1/10SR222J
R 1211		RS1/10SR222J
R 1212		RS1/10SR222J
R 1213		RS1/16SS123J
R 1214		RS1/10SR222J
R 1215		RS1/10SR101J
R 1217		RS1/16SS0R0J
R 1218		RS1/10SR0R0J
R 1231	(A,B)	RS1/16SS181J
R 1232	(A,B)	RS1/16SS181J
R 1233	(A,B)	RS1/16SS223J
R 1234	(A,B)	RS1/16SS223J
R 1235	(A,B)	RS1/16SS181J
R 1236	(A,B)	RS1/16SS181J
R 1237	(A,B)	RAB4CQ102J
R 1241		RS1/16SS821J
R 1242		RS1/16SS821J
R 1243		RS1/16SS821J
R 1244		RS1/16SS821J
R 1245		RS1/16SS821J

Circuit Symbol and No.		Part No.
R 1246		RS1/16SS821J
R 1247		RS1/16SS223J
R 1248		RS1/16SS223J
R 1249		RS1/16SS223J
R 1250		RS1/16SS223J
R 1251		RS1/16SS223J
R 1252		RS1/16SS223J
R 1253		RS1/16SS0R0J
R 1255		RS1/16SS0R0J
R 1257		RS1/16SS0R0J
R 1258		RS1/16SS0R0J
R 1259		RS1/16SS0R0J
R 1260		RS1/16SS0R0J
R 1261		RS1/16SS0R0J
R 1262		RS1/16SS0R0J
R 1263		RS1/10SR0R0J
R 1277	(E,F)	RS1/16SS471J
R 1278		RS1/16SS102J
R 1279	(E,F)	RS1/16SS471J
R 1280		RS1/16SS102J
R 1281		RS1/16SS101J
R 1282		RS1/16SS101J
R 1284		RS1/10SR0R0J
R 1286		RS1/16SS0R0J
R 1287		RS1/16SS0R0J
R 1301		RS1/16SS103J
R 1302		RS1/16SS223J
R 1303		RS1/16SS221J
R 1306		RS1/16SS103J
R 1307		RS1/16SS0R0J
R 1309		RS1/10SR0R0J
R 1313		RS1/10SR0R0J
R 1314		RS1/10SR0R0J

CAPACITORS

C 101	2 200 uF/16 V	CCH1405
C 102		CKSRYB103K50
C 103		CKSSYB102K50
C 104		CKSSYB102K50
C 105		CKSSYB102K50
C 106		CKSSYB102K50
C 107		CKSSYB102K50
C 108		CKSSYB102K50
C 109		CKSSYB102K50
C 110		CKSSYB102K50
C 111		CKSRYB104K50
C 122	1 uF	CCG1396
C 201		CCSSCH681J50
C 202		CEVW101M16
C 203	10 uF	CCG1192
C 204		CEVQW221M6R3
C 205	1 uF	CCG1396
C 206	10 uF	CCG1236
C 208		CCSSCH471J50
C 209		CCSSCH681J50
C 210	2 200 uF/16 V	CCH1405
C 211	10 uF	CCG1192
C 213	1 uF	CCG1396
C 214	10 uF	CCG1192
C 216	10 uF	CCG1236

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
C 217		CKSRYB105K10	C 482	1 uF	DCH1246
C 218	10 uF	CCG1236	C 502		CKSSYB104K10
C 220	10 uF	CCG1236	C 503	4.7 uF	CCG1212
C 221	10 uF	CCG1236	C 505		CKSSYB104K10
C 222		XCEVW221M10	C 506	4.7 uF	CCG1212
C 223		CCSSCH221J50	C 507	4.7 uF	CCG1212
C 224		CKSRYB105K10	C 508		CKSSYB104K10
C 225		CKSRYB105K10	C 509	4.7 uF	CCG1212
C 227		CCSSCH391J50	C 510		CKSSYB104K10
C 228		CCSSCH681J50	C 511	4.7 uF	CCG1212
C 230	10 uF	CCG1192	C 512		CKSSYB104K10
C 231		CKSRYB104K16	C 513	4.7 uF	CCG1212
C 232		CEVQW221M6R3	C 514		CKSSYB104K10
C 234	4.7 uF	CCG1212	C 517		CKSSYB104K10
C 236	10 uF	CCG1236	C 518		CCSSCH100D50
C 238	22 uF	CCG1254	C 519		CCSSCH100D50
C 239		CCSSCH100D50	C 520	4.7 uF	CCG1212
C 240		CCSSCH100D50	C 521		CKSSYB104K10
C 241	10 uF	CCG1192	C 522	4.7 uF	CCG1212
C 242		CEVW101M16	C 523	4.7 uF	CCG1212
C 243	10 uF	CCG1236	C 524	4.7 uF	CCG1212
C 245		CKSRYB104K16	C 525	10 uF	CCG1192
C 247		CKSRYB105K10	C 526		CKSSYB103K16
C 248	1 uF	CCG1393	C 527	10 uF	CCG1192
C 249		CKSRYB105K10	C 528		CKSSYB103K16
C 250		CKSRYB105K10	C 529		CKSSYB104K10
C 251		CKSRYB105K10	C 530	4.7 uF	CCG1212
C 252	4.7 uF	CCG1212	C 531	1 uF	DCH1246
C 253	1 uF	CCG1393	C 532	1 uF	DCH1246
C 255	1 uF	DCH1246	C 533	4.7 uF	CCG1212
C 257	10 uF	CCG1236	C 534		CKSSYB104K10
C 259	10 uF	CCG1192	C 535		XCEVW221M10
C 260	10 uF	CCG1192	C 536		CCSSCH101J50
C 261		CKSSYB104K10	C 537		CKSSYB103K16
C 265	10 uF	CCG1236	C 538	10 uF	CCG1192
C 266	10 uF	CCG1236	C 539		CKSSYB103K16
C 270	4.7 uF	CCG1212	C 540	10 uF	CCG1192
C 302	(A)	CEVQW221M6R3	C 541		CKSSYB222K50
C 303	1 uF(A)	DCH1246	C 542		CKSSYB104K10
C 304	(A)	CKSRYB105K10	C 543	1 uF	DCH1246
C 305	4.7 uF(A)	CCG1212	C 544		CKSSYB473K16
C 306	(A)	CKSSYB682K25	C 545		CCSSCH100D50
C 308	(A)	CKSRYB103K50	C 546		CCSSCH120J50
C 309	10 uF(A)	CCG1236	C 551		CKSSYB104K10
C 311	1 uF(A)	CCG1396	C 552	4.7 uF	CCG1212
C 312	(A)	CEAT102M16	C 553	10 uF	CCG1192
C 313		CKSRYB102K50	C 555		CKSSYB103K16
C 315		CKSRYB104K16	C 556		CKSSYB104K10
C 317		CKSRYB105K10	C 557	(A,B)	CKSSYB104K10
C 321		CKSRYB105K10	C 558	(A,B)	CKSSYB104K10
C 425	4.7 uF(A)	CCG1212	C 559		CKSQYB224K50
C 426	10 uF(A)	CCG1192	C 560		CKSSYB103K16
C 427	4.7 uF(A)	CCG1212	C 565		CCSRCH330J50
C 428	10 uF(A)	CCG1192	C 566		CCSRCH330J50
C 430	10 uF(A)	CCG1192	C 569		CCSSCH101J50
C 432	10 uF(A)	CCG1192	C 573		CCSRCH101J50
C 433	1 uF(A)	DCH1246	C 574		CCSSCH101J50
C 442	10 uF	CCG1192	C 575		CKSSYB104K10
C 444	10 uF	CCG1192	C 577		CCSSCH101J50
C 481		CEVQW470M6R3	C 578		CKSSYB104K10

Circuit Symbol and No.		Part No.
C 579		CKSSYB104K10
C 580		CKSRYB104K16
C 586		CCSSCH102J50
C 701		CKSSYB104K10
C 702		CKSSYB104K10
C 711	4.7 uF	CCG1212
C 712	1 uF	DCH1246
C 713		CKSSYB104K10
C 714	1 uF	DCH1246
C 715	1 uF	DCH1246
C 716	1 uF	DCH1246
C 718		CKSSYB104K10
C 719		CKSSYB104K10
C 720	1 uF	DCH1246
C 722		CKSSYB104K10
C 724		CKSRYB102K50
C 730	10 uF	CCG1192
C 731		CKSSYB104K10
C 741	2.2 uF	CCG1205
C 742		CKSSYB104K10
C 743		CKSSYB104K10
C 751	(A,B)	CKSRYB105K10
C 752	(A,B)	CKSRYB105K10
C 753		CKSRYB105K10
C 754		CKSRYB105K10
C 755		CKSRYB105K10
C 757		CKSRYB105K10
C 758		CKSRYB105K10
C 759	(A,B)	CKSRYB105K10
C 760	(A,B)	CKSRYB105K10
C 762		CEVQW470M6R3
C 763	(D,E,F)	CKSSYB104K10
C 764		CKSSYB104K10
C 765		CCSSCH151J50
C 766		CCSSCH151J50
C 767		CEVQW470M6R3
C 768		CEVQW470M6R3
C 771	10 uF	CCG1192
C 772		CKSSYB104K10
C 773		CKSSYB104K10
C 774		CCSSCH100D50
C 775		CCSSCH100D50
C 776		CKSRYB105K10
C 777		CKSRYB105K10
C 778		CKSRYB105K10
C 783	1 uF	DCH1246
C 790		CKSSYB102K50
C 791	10 uF	CCG1192
C 792		CKSSYB472K50
C 793		CKSSYB103K16
C 799		CKSSYB222K50
C 800		CKSSYB222K50
C 853		CCSSCH100D50
C 854		CCSSCH471J50
C 858		CCSSCH220J50
C 859		CCSSCH331J50
C 860	(E,F)	CCSSCK2R0C50
C 861	(E,F)	CCSSCK1R0C50
C 862	(E,F)	CCSSCK1R0C50
C 863	(E,F)	CCSSCH120J50
C 866		CKSSYB224K6R3

Circuit Symbol and No.		Part No.
C 867		CKSSYB102K50
C 870		CCSSCH102J50
C 871		CKSSYB104K10
C 872		CKSSYB104K10
C 874		CCSSCH390J50
C 878		CKSSYB152K50
C 882	1 uF(Except A)	DCH1246
C 885	(A,E,F)	CKSSYB104K10
C 886		CKSRYB102K50
C 887		CKSRYB104K50
C 888	(Except A)	CKSRYB104K16
C 889		CKSSYB104K10
C 890	2.2 uF	CCG1205
C 891	2.2 uF	CCG1205
C 892		CKSRYB105K10
C 954	(A)	CCSSCH150J50
C 955	(A)	CCSSCH150J50
C 958	10 uF(A)	CCG1192
C 959	(A)	CKSSYB104K10
C 960	10 uF(A)	CCG1192
C 961	(A)	CKSSYB104K10
C 1003		CKSRYB104K16
C 1004		CKSRYB104K16
C 1101		CKSSYB103K16
C 1105	1 uF	DCH1246
C 1106	1 uF	DCH1246
C 1107		CKSRYB104K16
C 1108		CKSRYB104K16
C 1111		CKSSYB102K50
C 1201		CCSRCH102J50
C 1202		CKSRYB104K50
C 1203		CKSRYB104K16
C 1204		CKSRYB105K10
C 1205		CCSRCH221J50
C 1206		CCSRCH221J50
C 1207		CKSRYB474K10
C 1210		CKSRYB105K10
C 1213		CKSRYB104K16
C 1214		CKSRYB102K50
C 1215		CKSRYB105K10
C 1217		CCSSCH121J50
C 1218		CKSRYB104K16
C 1231	(A,B)	CKSRYB104K16
C 1232	(A,B)	CKSRYB105K16
C 1241	10 uF	CCG1192
C 1242	10 uF	CCG1192
C 1243	10 uF	CCG1192
C 1244	10 uF	CCG1192
C 1245	10 uF	CCG1192
C 1246	10 uF	CCG1192
C 1247		CCSSCH101J50
C 1248		CCSSCH101J50
C 1249		CCSSCH101J50
C 1250		CCSSCH101J50
C 1251		CCSSCH101J50
C 1252		CCSSCH101J50
C 1253		CKSSYB103K16
C 1254		CKSSYB104K10
C 1255		CKSSYB104K10
C 1257		CKSSYB102K50

Circuit Symbol and No.		Part No.
C 1276		CKSRYB104K16
C 1277		CKSRYB104K16
C 1278		CKSRYB104K16
C 1279		CKSRYB104K16
C 1280		CKSSYB102K50
C 1281		CKSSYB102K50
C 1301		CKSRYB474K10
C 1302		CKSRYB474K10
C 1303		CKSRYB474K10
C 1304		CKSRYB474K10
C 1306		CKSRYB105K10
C 1310	10 uF/16 V	DCH1263
C 1311	2.2 uF	CCG1205
C 1312		CKSRYB104K50
C 1316		CKSRYB104K50
C 1317		CKSRYB105K10
C 1319		CKSSYB103K16
C 1328		CKSRYB105K10

B

Unit Number : QWM4168
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	Driver IC	BU97540KV-M
IC 1802	Driver IC	BU97540KV-M
IC 1803	IC	PNJ4833M
Q 1801	Bipolar Transistor	LSCR523UB
Q 1802	Bipolar Transistor	LSCR523UB
Q 1803	Bipolar Transistor	LSCR523UB
Q 1804	Bipolar Transistor	LSCR523UB
Q 1805	Bipolar Transistor	LSCR523UB
Q 1806	Bipolar Transistor	LSCR523UB
Q 1807	Bipolar Transistor	LSCR523UB
Q 1808	Bipolar Transistor	LSCR523UB
Q 1809	Bipolar Transistor	LSCR523UB
Q 1810	Bipolar Transistor	LSCR523UB
Q 1811	Bipolar Transistor	LSCR523UB
Q 1812	Bipolar Transistor	LSCR523UB
D 1801	LED	NSSM124-6717
D 1802	LED	NSSM124-6717
D 1803	LED	NSSM124-6717
D 1804	LED	NSSM124-6717
D 1806	LED	MSL0101RGBU
D 1807	LED	MSL0101RGBU
D 1809	SMD Varistor	MLV0603ES012V0010N
D 1810	SMD Varistor	MLV0603ES012V0010N
D 1811	LED	MSL0101RGBU
D 1812	LED	MSL0101RGBU
D 1815	LED	NSSM124-6717
L 1801	Inductor	CTF1713
L 1803	Inductor	CTF1379
L 1804	Inductor	CTF1379
L 1805	Inductor	CTF1379
S 1801	Push Switch	CSG1155
S 1802	Push Switch	CSG1155
S 1803	Push Switch	CSG1155
S 1804	Push Switch	CSG1155
S 1805	Push Switch	CSG1155

Circuit Symbol and No.		Part No.
S 1806	Push Switch	CSG1155
S 1807	Push Switch	CSG1155
S 1808	Push Switch	CSG1155
S 1809	Push Switch	CSG1155
S 1810	Push Switch	CSG1155
S 1811	Push Switch	CSG1155
S 1812	Push Switch	CSG1155
S 1813	Push Switch	CSG1155
S 1814	Push Switch	CSG1155
S 1815	Encoder(MULTI-CONTROL)	CSD1168
S 1816	Push Switch	CSG1155
CN1801	Connector	CKS6451
JA1801	Connector	CKS6443
JA1802	Jack	CKN1090
V 1801	LCD	CAW2058

RESISTORS

R 1801	RS1/10SR182J
R 1802	RS1/10SR680J
R 1804	RS1/10SR332J
R 1805	RS1/10SR182J
R 1806	RS1/10SR680J
R 1808	RS1/10SR332J
R 1809	RS1/10SR182J
R 1810	RS1/10SR680J
R 1812	RS1/10SR332J
R 1813	RS1/10SR182J
R 1814	RS1/10SR680J
R 1816	RS1/10SR332J
R 1817	RS1/10SR182J
R 1818	RS1/10SR680J
R 1820	RS1/10SR332J
R 1821	RS1/10SR182J
R 1822	RS1/10SR680J
R 1824	RS1/10SR332J
R 1827	RS1/10SR182J
R 1828	RS1/10SR390J
R 1831	RS1/10SR332J
R 1832	RS1/10SR182J
R 1833	RS1/10SR390J
R 1835	RS1/10SR101J
R 1836	RS1/10SR332J
R 1840	RS1/10SR182J
R 1841	RS1/10SR390J
R 1843	RS1/10SR332J
R 1844	RS1/10SR273J
R 1846	RS1/10SR182J
R 1847	RS1/10SR390J
R 1849	RS1/10SR332J
R 1850	RS1/10SR182J
R 1851	RS1/10SR390J
R 1853	RS1/10SR332J
R 1857	RS1/10SR182J
R 1858	RS1/10SR390J
R 1860	RS1/10SR332J
R 1863	RS1/10SR222J
R 1864	RS1/10SR222J
R 1865	RS1/10SR222J
R 1866	RS1/10SR222J
R 1869	RS1/10SR0R0J

Circuit Symbol and No.		Part No.
R 1870		RS1/10SR0R0J
R 1871		RS1/10SR0R0J
R 1872		RS1/10SR0R0J
R 1873		RS1/10SR472J
R 1877		RS1/10SR121J
R 1878		RS1/10SR121J
R 1879		RS1/10SR221J
R 1880		RS1/10SR121J
R 1881		RS1/10SR121J
R 1882		RS1/8SQ221J
R 1883		RS1/10SR121J
R 1884		RS1/10SR121J
R 1885		RS1/8SQ221J

CAPACITORS

C 1801		CKSRYB105K10
C 1802		CKSRYB105K10
C 1818	10 uF	CCG1192
C 1819		CKSRYB105K10
C 1822		CKSRYB104K16
C 1843		CKSRYB105K16
C 1844		CKSRYB105K16
C 1849	4.7 uF	CCG1212
C 1850		CCSRCH470J50
C 1851		CCSRCH470J50

C

Unit Number : CWX4023
Unit Name : CD Core Unit(S11.6STD)

MISCELLANEOUS

IC 201	IC	PE5791A
IC 301	IC	BD8223EFV
Q 101	Transistor	2SA1577
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603
S 901	Spring Switch(HOME)	CSN1080
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

RESISTORS

R 101		RS1/10SR2R4J
R 102		RS1/10SR2R4J
R 103		RS1/10SR2R7J
R 108		RS1/16SS105J
R 109		RS1/16SS222J
R 214		RS1/16SS103J
R 215		RS1/16SS393J
R 216		RS1/16SS122J
R 217		RS1/16SS562J
R 218		RS1/16SS472J
R 229		RS1/16SS471J
R 232		RS1/16SS0R0J
R 237		RS1/16SS221J
R 240		RS1/16SS473J
R 245		RS1/16SS104J
R 254		RS1/16SS104J

Circuit Symbol and No.	Part No.
R 260	RS1/16SS103J
R 264	RS1/16SS102J
R 281	RS1/16SS560J
R 282	RS1/16SS560J
R 291	RS1/16SS560J
R 294	RS1/16SS471J
R 303	RS1/16SS123J
R 304	RS1/16SS123J
R 305	RS1/16SS102J
R 306	RS1/16SS472J
R 307	RS1/16SS102J
R 308	RS1/16SS472J
R 309	RS1/16SS473J
R 310	RS1/16SS472J
R 311	RS1/16SS472J
R 312	RS1/16SS472J
R 313	RS1/16SS472J
R 701	RS1/16SS101J
R 702	RS1/16SS101J
R 706	RS1/16SS221J

CAPACITORS

C 104	CKSQYB475K6R3
C 203	CKSSYB104K10
C 209	CKSRYB104K16
C 210	CKSSYB104K10
C 211	CKSSYB104K10
C 212	CKSSYB104K10
C 213	CKSSYB332K50
C 214	CKSSYB473K16
C 215	CKSSYB104K10
C 216	CKSSYB182K50
C 217	CCSSCH560J50
C 218	CCSSCH4R0C50
C 219	CKSSYB104K10
C 220	CKSSYB104K10
C 221	CKSSYB104K10
C 222	CKSSYB104K10
C 223	CCSSCH680J50
C 224	CCSSCH470J50
C 225	CKSSYB103K16
C 228	CCSSCH270J50
C 229	CKSSYB104K10
C 233	CKSSYB103K16
C 236	CKSSYB104K10
C 238	CKSRYB104K16
C 299	CKSSYB104K10
C 302	CKSSYB102K50
C 303	CKSSYB102K50
C 304	CKSSYB223K16
C 305	CKSSYB104K10
C 306	CKSSYB104K10
C 307	CKSRYB105K10
C 308	CKSRYB105K10
C 710	CKSSYB102K50