EXPLODED VIEW (DVD MECHANISM)

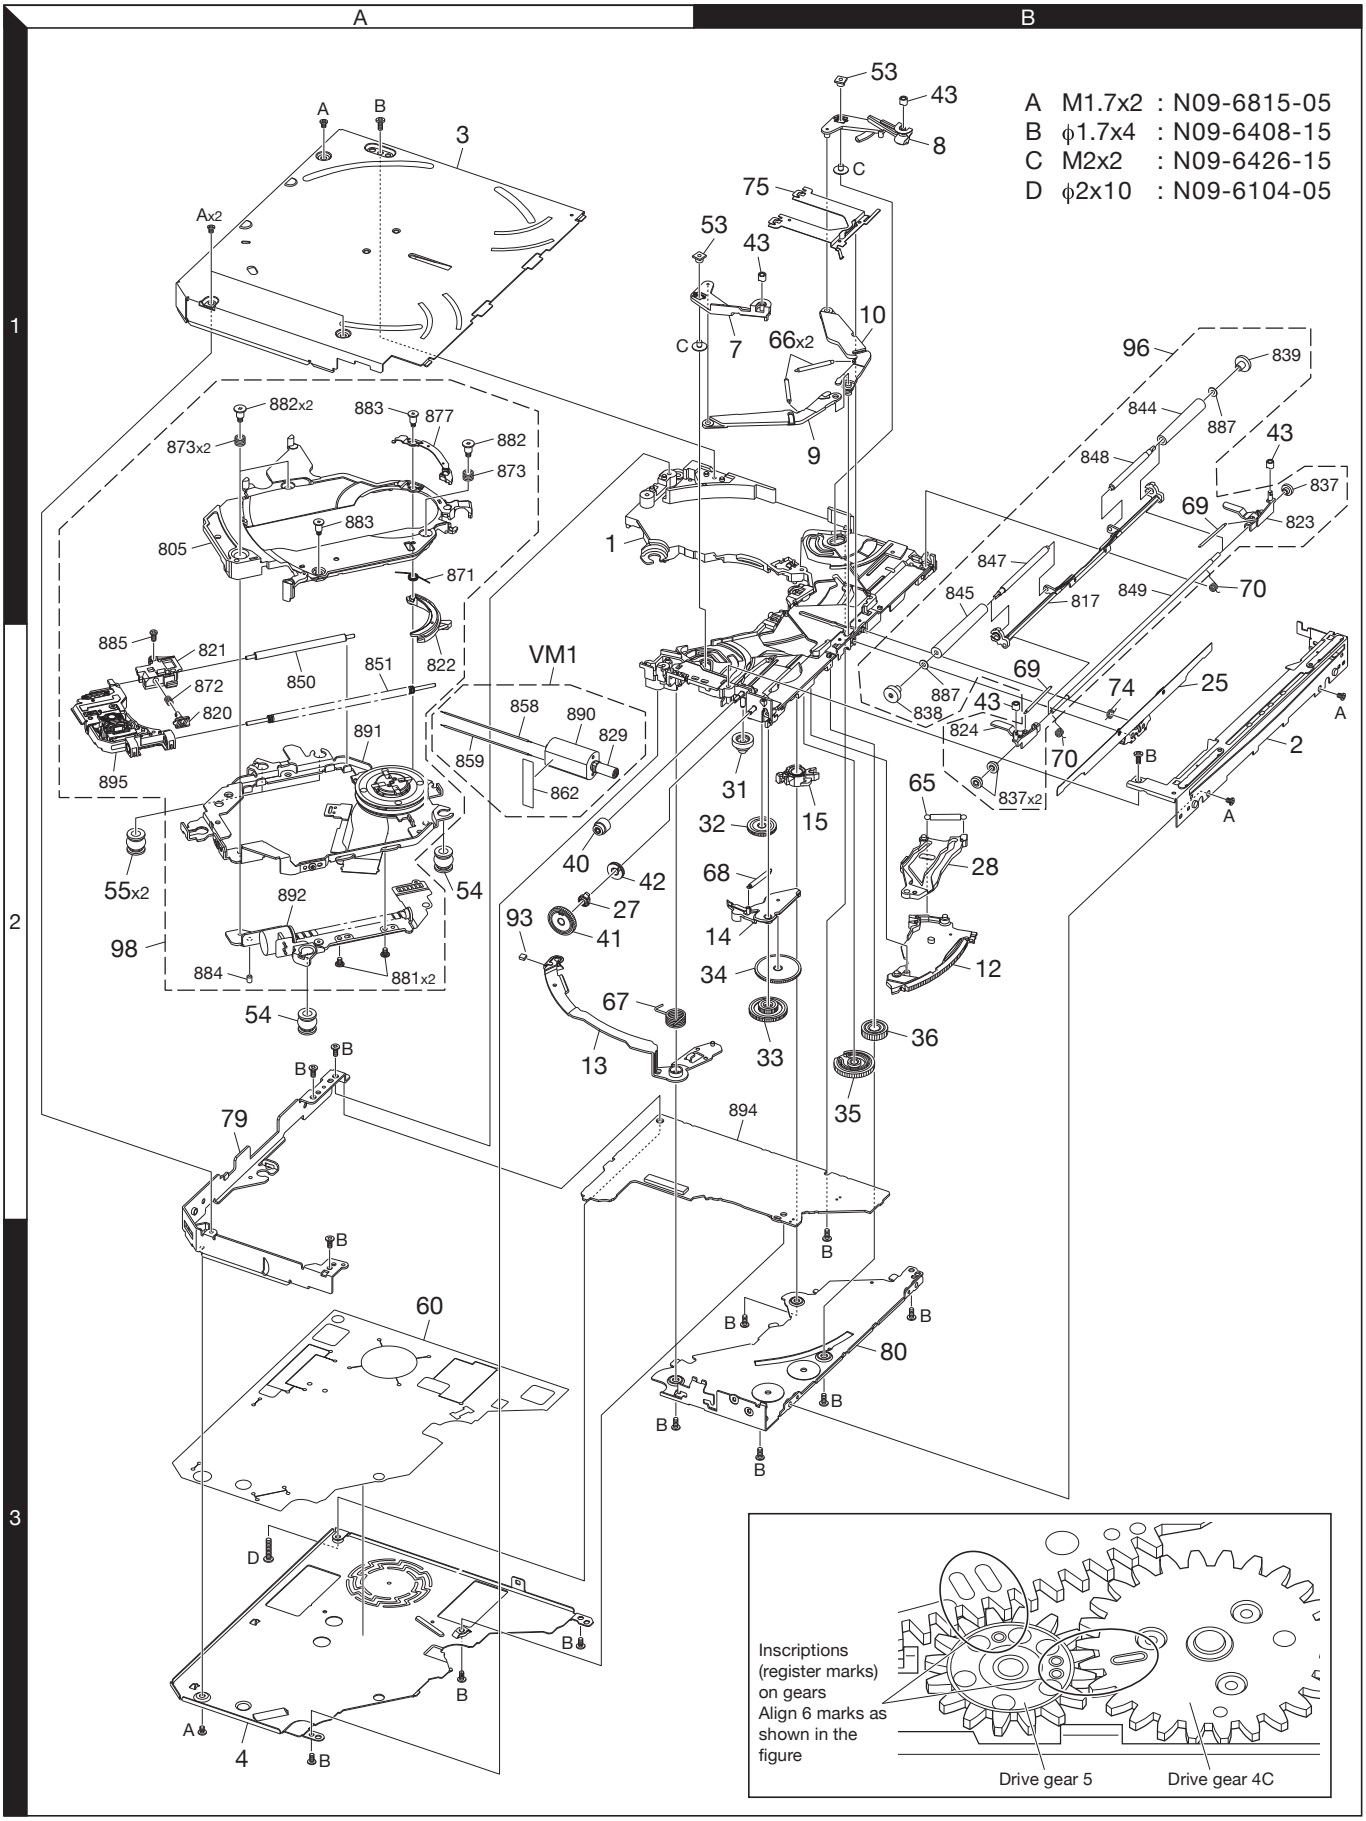

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

A : N09-6227-15
B : N09-6425-15
D : N09-6490-05
E : N09-6491-05
F : N09-6493-05
P : N09-6494-05
S : N82-2005-48
T : N09-6864-05
Z : N10-2030-43
AA : N09-6731-05
AB : N35-2604-43

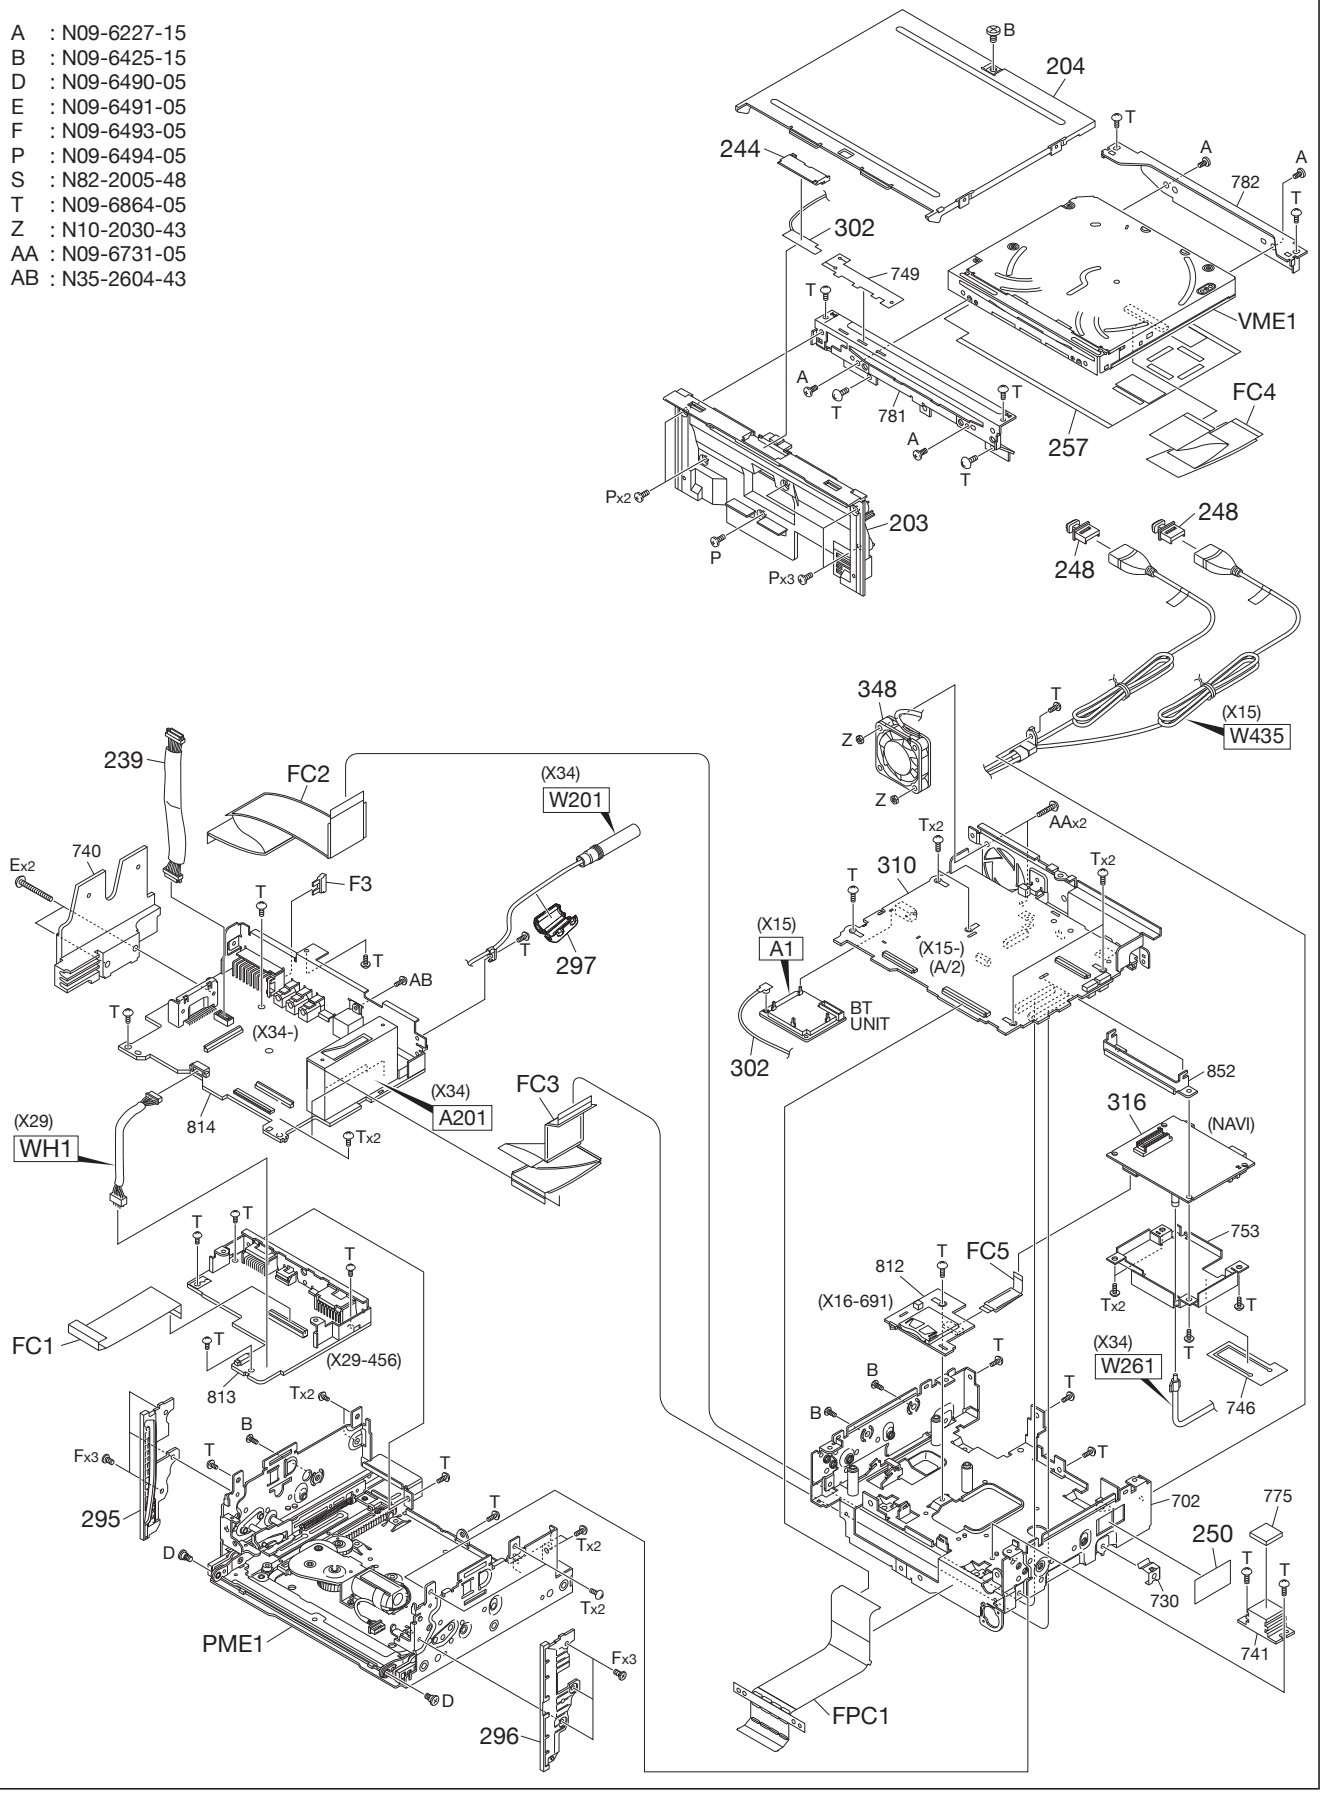

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL ASSY)

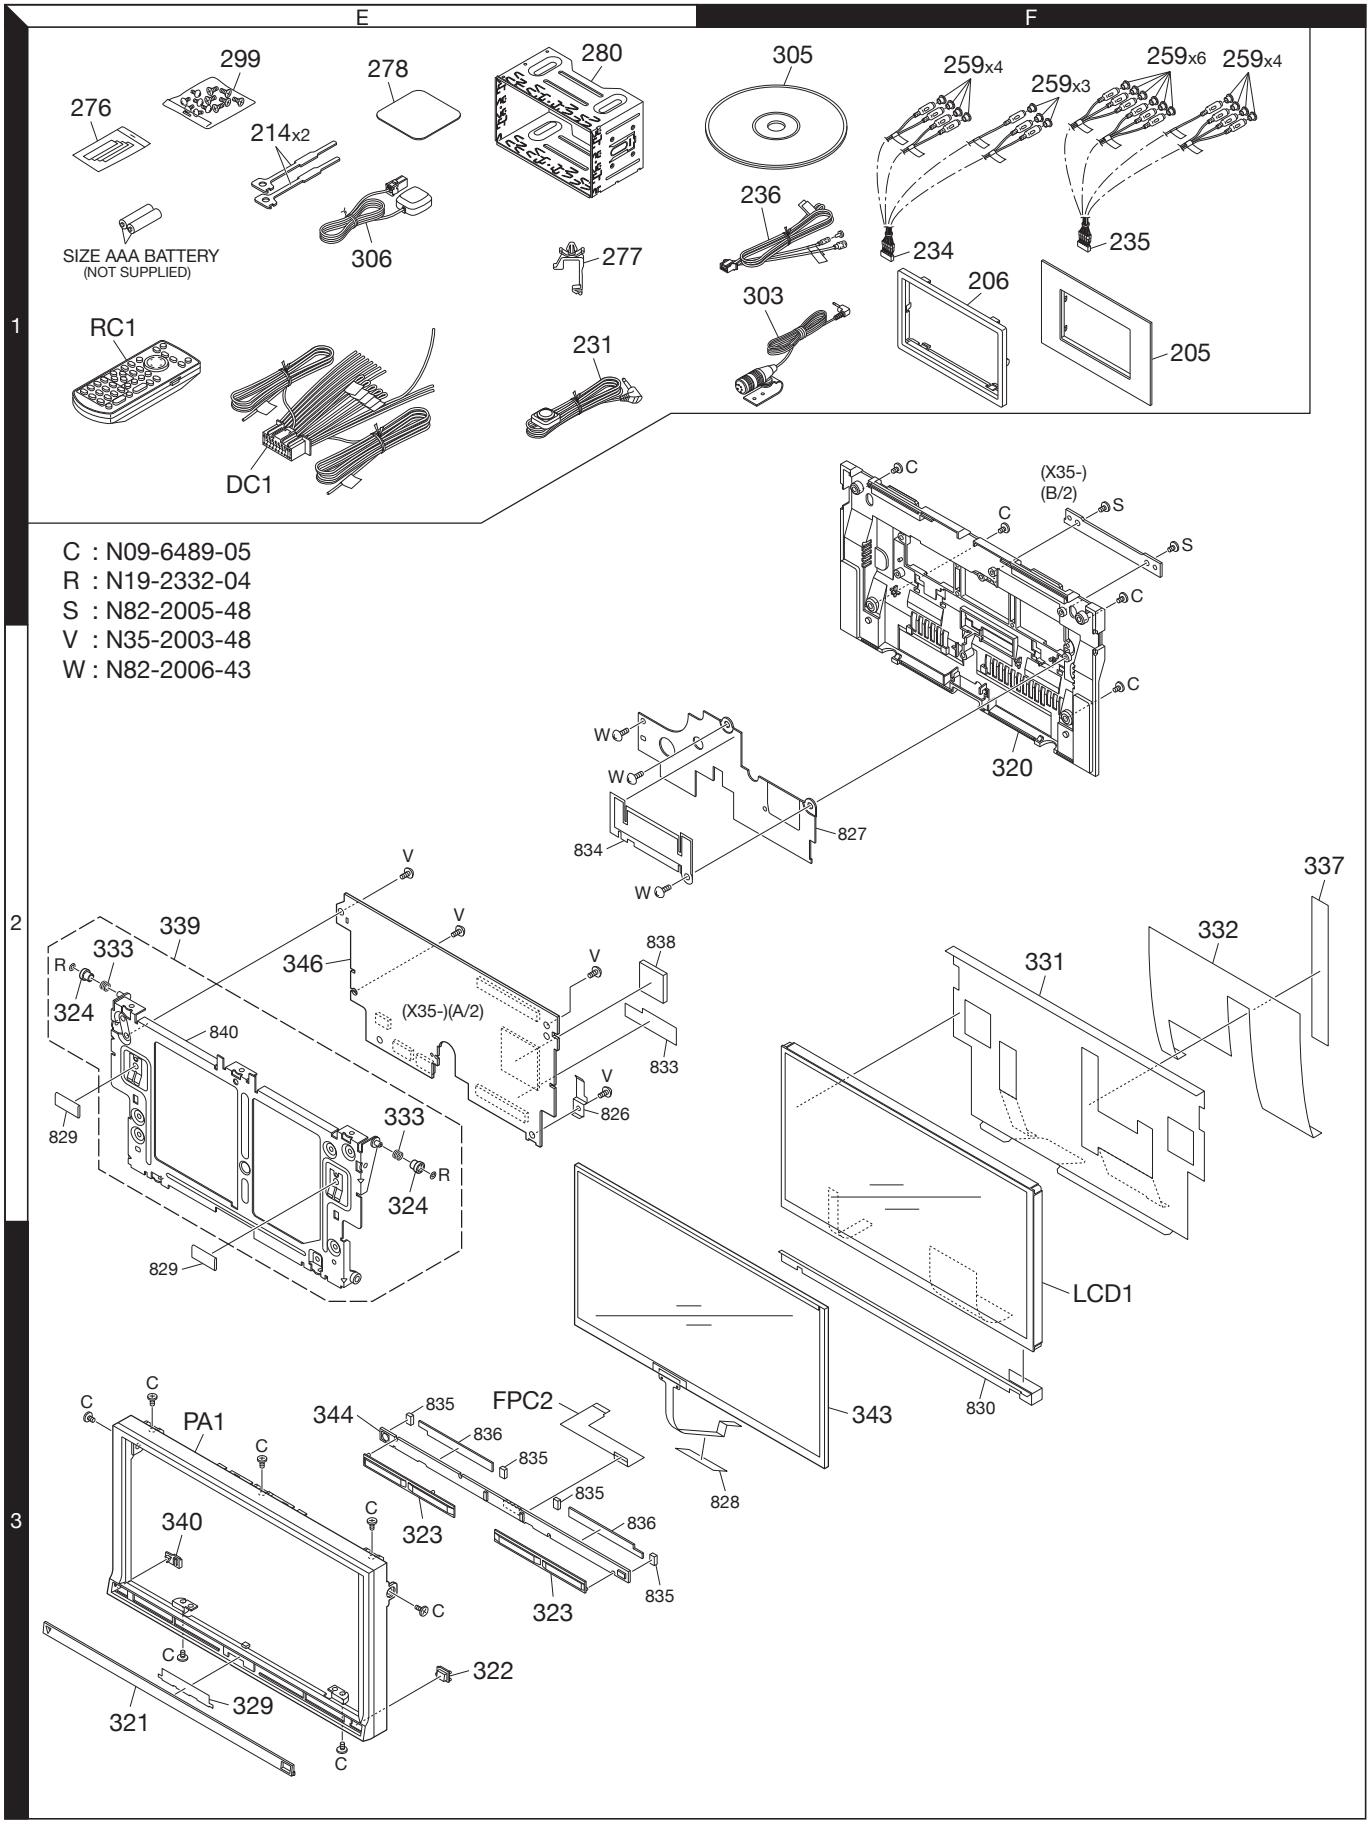

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (CHASSIS ASSY)

G	M2x2.5	: N09-6361-05
H	M1.7x3.7	: N09-6363-05
J	M2x2.5	: N09-6375-05
K	M2x3.5	: N09-6376-05
L	M2x2.5	: N09-6377-05
M	ø2x2	: N09-6378-05
N	M2.6x4	: N09-6379-05
Y	WASHER	: N19-2321-04

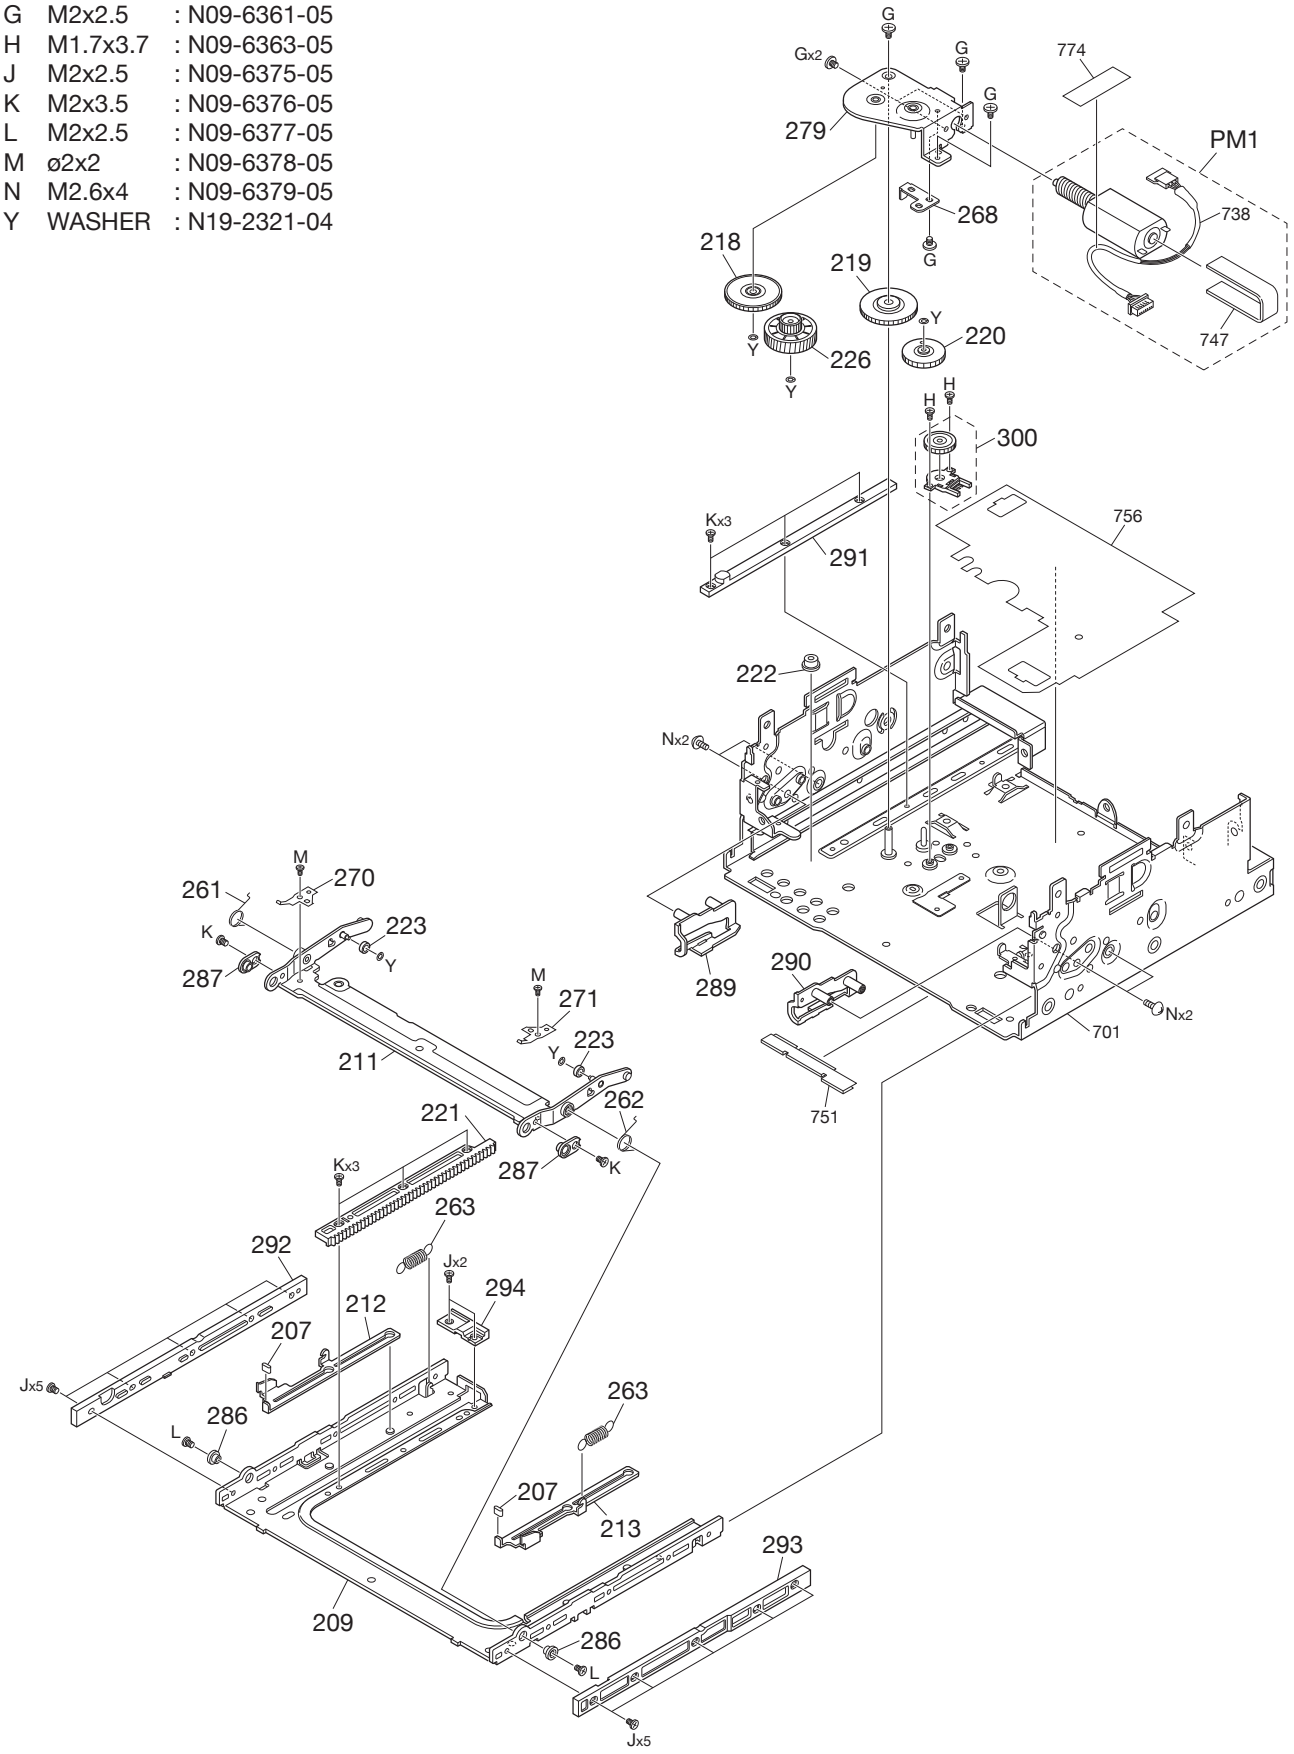

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
DNX9980HD					
203	1D	✻	A22-3305-01	SUB PANEL ASSY	
204	1D		A52-0895-02	TOP PLATE	
PME1	3C		A10-5300-51	CHASSIS ASSY	
RC1	1E		A70-2107-05	REMOTE CONTROLLER ASS (RC-DV331	
-		✻	B59-2041-00	SUB-INSTRUCTION MA (ENG.FRE.SPA	
-		✻	B59-2067-00	SUB-INSTRUCTION MANUAL	
205	1F		B07-3172-12	ESCUTCHEON	
206	1F		B07-3224-31	ESCUTCHEON	
207	3G		B09-0541-04	CAP	
209	3G		D10-4895-22	SLIDER ASSY	
211	2G		D10-4897-13	ARM ASSY	
212	3G		D10-4899-03	LEVER	
213	3G		D10-4900-03	LEVER	
214	1E		D10-7012-04	LEVER	
218	1H		D13-2394-04	GEAR	
219	1H		D13-2395-04	GEAR	
220	1H		D13-2396-04	GEAR	
221	2G		D13-2397-03	RACK (GEAR)	
222	2H		D14-1010-04	ROLLER	
223	2G		D14-1011-14	ROLLER	
226	1H		D19-0653-23	CLUTCH ASSY	
231	1E		E30-6889-05	CORD WITH PINPLUG (SWITCH,3M)	
234	1F		E30-6951-05	CORD WITH PINPLUG (3PRE+C)	
235	1F		E30-6952-05	CORD WITH PINPLUG (2AV IN)	
236	1F		E30-6954-05	CORD WITH PLUG	
239	2C		E39-1128-05	WIRING HARNESS	
DC1	1E		E30-6881-25	DC CORD	
FC1	3C		E39-1024-05	FLAT CABLE	
FC2	2C		E39-1117-05	FLAT CABLE	
FC3	2C		E39-1118-05	FLAT CABLE	
FC4	1D		E39-1119-05	FLAT CABLE	
244	1D		F07-2224-03	COVER	
248	1D		F09-2929-04	CAP	
250	3D		F09-3038-04	SHEET	
257	1D		F20-2522-13	INSULATING SHEET	
259	1F		F29-0626-04	INSULATING COVER	
⚠ F3	2C		F52-0007-05	FUSE (MINI BLADE TYPE) 15A	
261	2G		G01-3288-04	TORSION COIL SPRING	
262	2G		G01-3289-04	TORSION COIL SPRING	
263	3G		G01-3290-04	EXTENSION SPRING	
268	1H		G02-1539-04	FLAT SPRING	
270	2G		G02-1544-04	FLAT SPRING	
271	2G		G02-1545-04	FLAT SPRING	
-		✻	H54-5050-03	ITEM CARTON CASE	
276	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	
277	1E		J11-0660-05	CLAMPER	
278	1E		J22-0964-04	MOUNTING HARDWARE	
279	1H		J22-0444-13	MOUNTING HARDWARE ASSY	
280	1E		J22-0657-03	MOUNTING HARDWARE ASSY	
286	3G		J31-1075-14	COLLAR (ARM COLLAR)	
287	2G		J31-1077-04	COLLAR (PANEL COLLAR)	
289	2H		J90-1124-13	GUIDE ASSY	
290	2H		J90-1126-13	GUIDE ASSY	
291	1H		J90-1128-03	RAIL	
292	3G		J90-1129-23	RAIL	
293	3H		J90-1130-23	RAIL	
294	3G		J90-1131-03	GUIDE	
295	3C		J90-1160-01	RAIL	
296	3C		J90-1161-01	RAIL	
FPC1	3D		J86-0076-05	FPC (LEAD FREE)	
297	2C		L92-0638-05	FERRITE CORE	
299	1E		N99-1779-15	SCREW SET	
A	1D		N09-6227-15	MACHINE SCREW (M2.6X 3.2)	
B	1D		N09-6425-15	MACHINE SCREW (M3.0X5)	
D	3C		N09-6490-05	STEPPED SCREW (PANEL SCREW)	
E	2C		N09-6491-05	MACHINE SCREW (M2.6X27)	
F	3C		N09-6493-05	MACHINE SCREW (M2.6X5)	
G	1H		N09-6361-05	MACHINE SCREW (M2X2.5)	
H	1H		N09-6363-05	MACHINE SCREW (M1.7X3.7)	
J	3G		N09-6375-05	MACHINE SCREW (M2X2.5)	
K	2G		N09-6376-05	MACHINE SCREW (M2X3.5)	
L	3G		N09-6377-05	MACHINE SCREW (M2X2.5)	
M	2G		N09-6378-05	TAPTITE SCREW (STITE 2X2)	
N	2H		N09-6379-05	MACHINE SCREW (M2.6X4)	
P	1D		N09-6494-05	MACHINE SCREW	
S	1F		N82-2005-48	BINDING HEAD TAPTITE SCREW	
T	1D		N09-6864-05	TAPTITE SCREW	
Y	1H		N19-2321-04	FLAT WASHER	
300	1H		R31-0248-05	VARIABLE RESISTOR	
302	1D		T90-0598-05	ANTENNA ASSY	
PM1	1H		T42-1322-24	MOTOR ASSY	
303	1F		W01-1768-15	MICROPHONE	
305	1F	✻	W01-2002-05	COMPACT DISC (MANUAL)	
306	1E		W02-5304-05	ANTENNA MODULE (GPS)	
310	2D	✻	X15-1520-10	VIDEO CONTROL UNIT	
VME1	1D	✻	X92-6640-02	DVD MECHANISM ASSY (DVS-8712W)	
CONTROL ASSY					
FC5	3D		E39-1121-05	FLAT CABLE	
316	2D	✻	W02-5465-15	NAVIGATION MODULE	
DISPLAY ASSY					
320	2F		A46-1910-21	REAR COVER	
PA1	3E	✻	A64-5224-01	PANEL	
321	3E	✻	B10-5377-43	FRONT GLASS	
322	3E		B10-5379-04	FRONT GLASS	
323	3E		B11-2043-14	OPTICAL DIFFUSER	
LCD1	3F		B38-1222-05	LCD	
324	2E		D14-1024-04	ROLLER	
329	3E		F09-3039-24	SHEET	
331	2F		F20-2532-03	INSULATING SHEET	

K : North America

⚠Indicates safety critical components.

PARTS LIST

DISPLAY ASSY

Ref. No.	Add	New	Parts No.	Description			Destination
332	2F		F20-2537-04	INSULATING SHEET			
333	2E		G01-4659-04	COMPRESSION SPRING			
337	2F		G16-1749-04	SHEET			
339	2E		J22-0922-12	MOUNTING HARDWARE ASSY			
FPC2	3E		J86-0077-05	FPC (LEAD FREE)			
340	3E		K24-5070-14	PUSH KNOB			
C	3E		N09-6489-05	MACHINE SCREW (M2.0X3.0)			
R	2E		N19-2332-04	FLAT WASHER			
V	2E		N35-2003-48	BINDING HEAD MACHINE SCREW			
W	2E		N82-2006-43	BINDING HEAD TAPTITE SCREW			
343	3F		S79-0880-05	SWITCH ASSY (TOUCH PANEL)			
344	3E		W05-1653-00	SWITCH UNIT			
346	2E		X35-5070-10	VIDEO UNIT			
VIDEO CONTROL UNIT (X15-1520-10)							
D17			B30-3210-05	LED (1608 BLUE)			
C1			CK73GB1H104K	CHIP C	0.10UF	K	
C2			CK73ER2J333K	CHIP C	33000PF	K	
C3			C90-5670-05	ELECTRO	2200UF	16WV	
C4			CK73GB1H104K	CHIP C	0.10UF	K	
C5			CK73HB1E103K	CHIP C	0.010UF	K	
C6			CK73HB1A104K	CHIP C	0.10UF	K	
C7			CK73HB1E103K	CHIP C	0.010UF	K	
C8			CK73HB1A104K	CHIP C	0.10UF	K	
C9			CK73HB1E103K	CHIP C	0.010UF	K	
C10			CK73HB1A104K	CHIP C	0.10UF	K	
C11			CE32BF1E221M	CHIP EL	220UF	25WV	
C12			CK73FB1A225K	CHIP C	2.2UF	K	
C13			CK73HB1E103K	CHIP C	0.010UF	K	
C14			CE32BM1C221M	CHIP EL	220UF	16WV	
C15			CK73GB1A105K	CHIP C	1.0UF	K	
C16			CK73GB0J106M	CHIP C	10UF	M	
C17			CK73GB1A105K	CHIP C	1.0UF	K	
C18			CK73GB1H104K	CHIP C	0.10UF	K	
C19			CE32BM1E101M	CHIP EL	100UF	25WV	
C20			CK73HB1E103K	CHIP C	0.010UF	K	
C21			CK73GB1H104K	CHIP C	0.10UF	K	
C22			CC73HCH1H101J	CHIP C	100PF	J	
C23			CC73HCH1H470J	CHIP C	47PF	J	
C24			CK73HB1H221K	CHIP C	220PF	K	
C25			CK73HB1H102K	CHIP C	1000PF	K	
C26			CC73HCH1H101J	CHIP C	100PF	J	
C27 ,28			CK73HB1E103K	CHIP C	0.010UF	K	
C29			CK73HB1E223K	CHIP C	0.022UF	K	
C30			CK73HB1E103K	CHIP C	0.010UF	K	
C31			CK73HB1H221K	CHIP C	220PF	K	
C34 -37			CK73HB1H102K	CHIP C	1000PF	K	
C38			CK73HB1C473K	CHIP C	0.047UF	K	
C39			CK73HB1E103K	CHIP C	0.010UF	K	
C40			CK73GB1H104K	CHIP C	0.10UF	K	
C41			CK73HB1A104K	CHIP C	0.10UF	K	
C42			CK73GB1H104K	CHIP C	0.10UF	K	
C43			CK73GB0J106M	CHIP C	10UF	M	
C44			CK73GB1H104K	CHIP C	0.10UF	K	
C45			CK73FB1E475K	CHIP C	4.7UF	K	
C46			CK73GB1H104K	CHIP C	0.10UF	K	
C47			CK73HB1E103K	CHIP C	0.010UF	K	
C48			CK73HB1H102K	CHIP C	1000PF	K	
C49 ,50			CK73EB1E106K	CHIP C	10UF	K	
C51			CK73GB1H104K	CHIP C	0.10UF	K	
C52			CK73HB1E103K	CHIP C	0.010UF	K	
C53 ,54			CK73HB1H102K	CHIP C	1000PF	K	
C55			CE32BL1A121M	CHIP EL	120UF	10WV	
C56			CK73HB1A104K	CHIP C	0.10UF	K	
C57			CK73HB1E103K	CHIP C	0.010UF	K	
C58			CK73GB1H104K	CHIP C	0.10UF	K	
C59			CK73HB1E103K	CHIP C	0.010UF	K	
C61 ,62			CK73EB1E106K	CHIP C	10UF	K	
C63			CK73GB1H104K	CHIP C	0.10UF	K	
C64			CK73HB1E103K	CHIP C	0.010UF	K	
C65 ,66			CK73HB1H102K	CHIP C	1000PF	K	
C67			CE32BL0J221M	CHIP EL	220UF	6.3WV	
C68			CK73HB1A104K	CHIP C	0.10UF	K	
C69			CK73HB1E103K	CHIP C	0.010UF	K	
C70 ,71			CC73HCH1H470J	CHIP C	47PF	J	
C72			CK73HB1E103K	CHIP C	0.010UF	K	
C73 ,74			CC73HCH1H470J	CHIP C	47PF	J	
C75 ,76			CK73HB1E103K	CHIP C	0.010UF	K	
C77			CK73HB1E223K	CHIP C	0.022UF	K	
C80 -82			CK73HB1H102K	CHIP C	1000PF	K	
C83			CK73HB1E103K	CHIP C	0.010UF	K	
C84			CC73HCH1H101J	CHIP C	100PF	J	
C85 ,86			CK73GB1H104K	CHIP C	0.10UF	K	
C87			CK73HB1A104K	CHIP C	0.10UF	K	
C88			CK73GB0J106M	CHIP C	10UF	M	
C89			CK73GB1H104K	CHIP C	0.10UF	K	
C90			CK73FB1E475K	CHIP C	4.7UF	K	
C91			CK73GB1H104K	CHIP C	0.10UF	K	
C92			CK73HB1E103K	CHIP C	0.010UF	K	
C94 ,95			CK73EB1E106K	CHIP C	10UF	K	
C96			CK73GB1H104K	CHIP C	0.10UF	K	
C97			CK73HB1E103K	CHIP C	0.010UF	K	
C98 ,99			CK73HB1H102K	CHIP C	1000PF	K	
C100			CE32BL0J221M	CHIP EL	220UF	6.3WV	
C101			CK73HB1A104K	CHIP C	0.10UF	K	
C102			CK73HB1E103K	CHIP C	0.010UF	K	
C103			CK73GB1H104K	CHIP C	0.10UF	K	
C106,107			CK73HB1E103K	CHIP C	0.010UF	K	
C108			CK73GB1H104K	CHIP C	0.10UF	K	
C109			CE32BM1E470M	CHIP EL	47UF	25WV	
C110,111			CK73HB1H102K	CHIP C	1000PF	K	
C112			CE32BL0G331M	CHIP EL	330UF	4.0WV	
C113			CK73HB1A104K	CHIP C	0.10UF	K	
C114			CK73HB1E103K	CHIP C	0.010UF	K	
C115			CK73GB1H104K	CHIP C	0.10UF	K	
C116			CK73HB1E103K	CHIP C	0.010UF	K	
C117			CK73FB1A475K	CHIP C	4.7UF	K	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-1520-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C118,119			CK73EB1E106K	CHIP C	10UF	K	
C120			CK73FB1E475K	CHIP C	4.7UF	K	
C121,122			CK73GB1H104K	CHIP C	0.10UF	K	
C123			CK73HB1E223K	CHIP C	0.022UF	K	
C124			CK73HB1H221K	CHIP C	220PF	K	
C125			CK73HB1E103K	CHIP C	0.010UF	K	
C126			CK73HB1H472K	CHIP C	4700PF	K	
C127			CC73HCH1H151J	CHIP C	150PF	J	
C128			CK73GB1H104K	CHIP C	0.10UF	K	
C129			CK73EB1E106K	CHIP C	10UF	K	
C131			CE32BL0J221M	CHIP EL	220UF	6.3WV	
C132			CK73HB1A104K	CHIP C	0.10UF	K	
C133			CK73HB1E103K	CHIP C	0.010UF	K	
C134,135			CK73HB1A104K	CHIP C	0.10UF	K	
C136,137			CK73GB0J106M	CHIP C	10UF	M	
C138,139			CK73HB1A104K	CHIP C	0.10UF	K	
C141			CK73GB1H104K	CHIP C	0.10UF	K	
C142			CK73HB1E103K	CHIP C	0.010UF	K	
C143,144			CK73EB1E106K	CHIP C	10UF	K	
C145			CK73GB1H104K	CHIP C	0.10UF	K	
C146			CK73HB1E103K	CHIP C	0.010UF	K	
C147,148			CK73HB1A104K	CHIP C	0.10UF	K	
C149			CK73FB0J226M	CHIP C	22UF	M	
C150			CC73HCH1H470J	CHIP C	47PF	J	
C151-153			CK73FB0J226M	CHIP C	22UF	M	
C156,157			CK73GB1A105K	CHIP C	1.0UF	K	
C159			CK73GB1A105K	CHIP C	1.0UF	K	
C160,161			CK73HB1A104K	CHIP C	0.10UF	K	
C162			CK73GB1A105K	CHIP C	1.0UF	K	
C163			CK73GB0J106M	CHIP C	10UF	M	
C166			CK73GB1A105K	CHIP C	1.0UF	K	
C168			CK73GB1A105K	CHIP C	1.0UF	K	
C169,170			CC73HCH1H220J	CHIP C	22PF	J	
C171			CK73HB1A104K	CHIP C	0.10UF	K	
C172			CK73GB1A105K	CHIP C	1.0UF	K	
C174			CK73HB1A104K	CHIP C	0.10UF	K	
C176			CK73HB1A104K	CHIP C	0.10UF	K	
C178			CK73GB0J106M	CHIP C	10UF	M	
C179			CK73FB1A225K	CHIP C	2.2UF	K	
C180			CC73HCH1H220J	CHIP C	22PF	J	
C181			CK73HB0J105K	CHIP C	1.0UF	K	
C182			CK73HB1A104K	CHIP C	0.10UF	K	
C183			CK73HB1E103K	CHIP C	0.010UF	K	
C185,186			CK73HB1A104K	CHIP C	0.10UF	K	
C188			CK73GB0J106M	CHIP C	10UF	M	
C189			CK73HB1H222K	CHIP C	2200PF	K	
C190			CK73GB0J106M	CHIP C	10UF	M	
C191			CK73HB1H222K	CHIP C	2200PF	K	
C192			CC73HCH1H120J	CHIP C	12PF	J	
C193			CC73HCH1H100D	CHIP C	10PF	D	
C194,195			CC73HCH1H060D	CHIP C	6.0PF	D	
C196			CK73HB1A104K	CHIP C	0.10UF	K	
C198			CK73HB1A104K	CHIP C	0.10UF	K	
C199			CK73HB1E103K	CHIP C	0.010UF	K	
C200-202			CK73HB1A104K	CHIP C	0.10UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C206,207			CK73HB1A104K	CHIP C	0.10UF	K	
C208,209			CK73HB0J105K	CHIP C	1.0UF	K	
C210,211			CK73HB1E103K	CHIP C	0.010UF	K	
C212			CC73HCH1H220J	CHIP C	22PF	J	
C213			CK73HB1E103K	CHIP C	0.010UF	K	
C214			CK73HB1A104K	CHIP C	0.10UF	K	
C215,216			CK73HB1E103K	CHIP C	0.010UF	K	
C217			CK73HB1A104K	CHIP C	0.10UF	K	
C218			CK73HB1E103K	CHIP C	0.010UF	K	
C219			CK73HB1A104K	CHIP C	0.10UF	K	
C220			CK73HB1H471K	CHIP C	470PF	K	
C221			CK73EB1E106K	CHIP C	10UF	K	
C222			CK73HB1E103K	CHIP C	0.010UF	K	
C223			CK73HB1A104K	CHIP C	0.10UF	K	
C224			CK73HB1H471K	CHIP C	470PF	K	
C225			CK73EB1E106K	CHIP C	10UF	K	
C226			CK73HB1E103K	CHIP C	0.010UF	K	
C230			CK73GB1H103K	CHIP C	0.010UF	K	
C231			CK73HB1A104K	CHIP C	0.10UF	K	
C232			CK73GB1H102K	CHIP C	1000PF	K	
C234			CK73GB0J106M	CHIP C	10UF	M	
C236			CK73GB1A474K	CHIP C	0.47UF	K	
C237			CK73HB1E103K	CHIP C	0.010UF	K	
C238			CK73GB1A105K	CHIP C	1.0UF	K	
C239,240			CK73GB0J106M	CHIP C	10UF	M	
C241			CK73GB1A105K	CHIP C	1.0UF	K	
C243			CK73HB1A104K	CHIP C	0.10UF	K	
C244			CK73GB0J106M	CHIP C	10UF	M	
C245			CC73HCH1H221J	CHIP C	220PF	J	
C246			CK73HB1A104K	CHIP C	0.10UF	K	
C247			CK73GB0J475K	CHIP C	4.7UF	K	
C248			CE32CL1C470M	CHIP EL	47UF	16WV	
C249,250			CK73HB1H102K	CHIP C	1000PF	K	
C252			CK73HB0J105K	CHIP C	1.0UF	K	
C253-255			CK73GB0J475K	CHIP C	4.7UF	K	
C256			CK73HB0J474K	CHIP C	0.47UF	K	
C257,258			CK73GB1A105K	CHIP C	1.0UF	K	
C259-261			CK73GB0J475K	CHIP C	4.7UF	K	
C263			CK73HB1E103K	CHIP C	0.010UF	K	
C265			CK73HB1E103K	CHIP C	0.010UF	K	
C266			CK73EB1E106K	CHIP C	10UF	K	
C267,268			CK73HB1A104K	CHIP C	0.10UF	K	
C269			CK73FB0J106K	CHIP C	10UF	K	
C270			CK73EB1E106K	CHIP C	10UF	K	
C271,272			CK73HB1A104K	CHIP C	0.10UF	K	
C273			CK73FB0J106K	CHIP C	10UF	K	
C274,275			CK73HB1E103K	CHIP C	0.010UF	K	
C281			CK73HB1H102K	CHIP C	1000PF	K	
C400			CK73HB1A104K	CHIP C	0.10UF	K	
C401			CK73HB1E103K	CHIP C	0.010UF	K	
C402			CK73HB1H222K	CHIP C	2200PF	K	
C403			CK73HB1E103K	CHIP C	0.010UF	K	
C404			CK73HB1A104K	CHIP C	0.10UF	K	
C406,407			CK73HB1A104K	CHIP C	0.10UF	K	
C408			CK73HB1E103K	CHIP C	0.010UF	K	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-1520-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C409			CK73GB0J106M	CHIP C	10UF	M	
C410			CE32CL1A101M	CHIP EL	100UF	10WV	
C411-413			CK73GB0J106M	CHIP C	10UF	M	
C415,416			CK73HB1A104K	CHIP C	0.10UF	K	
C418			CK73GB0J106M	CHIP C	10UF	M	
C419			CK73HB1H471K	CHIP C	470PF	K	
C420			CK73GB0J106M	CHIP C	10UF	M	
C421,422			CK73HB1A104K	CHIP C	0.10UF	K	
C424,425			CK73GB0J106M	CHIP C	10UF	M	
C426,427			CK73HB1H222K	CHIP C	2200PF	K	
C428			CK73HB1A104K	CHIP C	0.10UF	K	
C431,432			CK73HB1H222K	CHIP C	2200PF	K	
C435			CK73GB1A105K	CHIP C	1.0UF	K	
C438			CK73HB1A104K	CHIP C	0.10UF	K	
C439			CK73GB0J106M	CHIP C	10UF	M	
C440-442			CK73HB1A104K	CHIP C	0.10UF	K	
C444			CK73GB0J106M	CHIP C	10UF	M	
C445			CK73HB1A104K	CHIP C	0.10UF	K	
C446			CC73GCH1H471J	CHIP C	470PF	J	
C448,449			CK73HB0J105K	CHIP C	1.0UF	K	
C450			CK73GB0J106M	CHIP C	10UF	M	
C452			CK73FB0J226M	CHIP C	22UF	M	
C453			CK73HB1A104K	CHIP C	0.10UF	K	
C454,455			CK73HB0J105K	CHIP C	1.0UF	K	
C456,457			CK73FB0J226M	CHIP C	22UF	M	
C458-465			CK73GB1A105K	CHIP C	1.0UF	K	
C466,467			CK73HB1A104K	CHIP C	0.10UF	K	
C468,469			CK73HB0J105K	CHIP C	1.0UF	K	
C470			CK73GB0J106M	CHIP C	10UF	M	
C471,472			CK73HB0J105K	CHIP C	1.0UF	K	
C475			CK73GB0J106M	CHIP C	10UF	M	
C480			CK73HB0J105K	CHIP C	1.0UF	K	
C481			CK73HB1A104K	CHIP C	0.10UF	K	
C482			CK73HB0J105K	CHIP C	1.0UF	K	
C483			CK73HB1A104K	CHIP C	0.10UF	K	
C484-486			CK73GB1A105K	CHIP C	1.0UF	K	
C490			CK73HB1A104K	CHIP C	0.10UF	K	
C491			CK73GB0J106M	CHIP C	10UF	M	
C492,493			CK73HB1A104K	CHIP C	0.10UF	K	
C496-498			CK73EB0J476M	CHIP C	47UF	M	
C500			CK73HB1A104K	CHIP C	0.10UF	K	
C503			CK73HB0J105K	CHIP C	1.0UF	K	
C504			CK73HB1A104K	CHIP C	0.10UF	K	
C507			CK73GB0J106M	CHIP C	10UF	M	
C508			CK73HB1H222K	CHIP C	2200PF	K	
C509,510			CK73GB0J106M	CHIP C	10UF	M	
C514,515			CC73HCH1H070D	CHIP C	7.0PF	D	
C516			CK73HB1A104K	CHIP C	0.10UF	K	
C519			CK73HB1A104K	CHIP C	0.10UF	K	
C521,522			CE32BQ0J221M	CHIP EL	220UF	6.3WV	
C525			CK73HB1H102K	CHIP C	1000PF	K	
C527,528			CK73HB0J105K	CHIP C	1.0UF	K	
C529,530			CK73HB1H102K	CHIP C	1000PF	K	
C536			CK73HB1H102K	CHIP C	1000PF	K	
C538			CK73HB1H102K	CHIP C	1000PF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C540-543			CK73HB1H102K	CHIP C	1000PF	K	
C544			CK73GB0J106M	CHIP C	10UF	M	
C545-548			CK73HB1A104K	CHIP C	0.10UF	K	
C549			CK73HB1H102K	CHIP C	1000PF	K	
C551,552			CK73HB1H102K	CHIP C	1000PF	K	
C652			CK73GB0J106M	CHIP C	10UF	M	
C655			CK73HB1A104K	CHIP C	0.10UF	K	
C656			CK73GB0J106M	CHIP C	10UF	M	
C657-660			CK73HB1A104K	CHIP C	0.10UF	K	
C662			CK73HB1H102K	CHIP C	1000PF	K	
C663			CK73HB1A104K	CHIP C	0.10UF	K	
C664			CC73HCH1H331J	CHIP C	330PF	J	
C665			CK73HB1A104K	CHIP C	0.10UF	K	
C666			CK73HB0J105K	CHIP C	1.0UF	K	
C667			CK73HB1A104K	CHIP C	0.10UF	K	
C668			CC73HCH1H470J	CHIP C	47PF	J	
C669-675			CK73HB1A104K	CHIP C	0.10UF	K	
C676			CK73GB0J106M	CHIP C	10UF	M	
C677,678			CK73HB1A104K	CHIP C	0.10UF	K	
C680,681			CK73HB1A104K	CHIP C	0.10UF	K	
C683-685			CK73HB1A104K	CHIP C	0.10UF	K	
C687-689			CK73HB1A104K	CHIP C	0.10UF	K	
C691-693			CK73HB1A104K	CHIP C	0.10UF	K	
C694			CK73GB0J106M	CHIP C	10UF	M	
C695			CK73HB1A104K	CHIP C	0.10UF	K	
C697			CK73HB1A104K	CHIP C	0.10UF	K	
C698			CK73HB0J105K	CHIP C	1.0UF	K	
C700			CK73HB1H102K	CHIP C	1000PF	K	
C701			CK73HB1A104K	CHIP C	0.10UF	K	
C703			CK73HB1A104K	CHIP C	0.10UF	K	
C705			CK73HB1A104K	CHIP C	0.10UF	K	
C707			CK73HB1A104K	CHIP C	0.10UF	K	
C711,712			CK73HB1A104K	CHIP C	0.10UF	K	
C714			CK73HB1A104K	CHIP C	0.10UF	K	
C715			CK73HB0J105K	CHIP C	1.0UF	K	
C716,717			CC73HCH1H150J	CHIP C	15PF	J	
C718			CC73HCH1H180J	CHIP C	18PF	J	
C719			CC73HCH1H220J	CHIP C	22PF	J	
C720			CK73HB1A104K	CHIP C	0.10UF	K	
C723			CK73HB1A104K	CHIP C	0.10UF	K	
C724			CK73HB1H102K	CHIP C	1000PF	K	
C725			CK73HB1A104K	CHIP C	0.10UF	K	
C726			CK73HB1H102K	CHIP C	1000PF	K	
C727			CK73HB1A104K	CHIP C	0.10UF	K	
C728			CK73HB1H102K	CHIP C	1000PF	K	
C729			CK73HB1A104K	CHIP C	0.10UF	K	
C731,732			CK73HB1A104K	CHIP C	0.10UF	K	
C734			CK73HB1H102K	CHIP C	1000PF	K	
C735			CK73HB0J105K	CHIP C	1.0UF	K	
C737			CK73HB1A104K	CHIP C	0.10UF	K	
C738			CK73HB1H102K	CHIP C	1000PF	K	
C743,744			CK73HB1A104K	CHIP C	0.10UF	K	
C745			CK73GB0J106M	CHIP C	10UF	M	
C746,747			CK73HB1A104K	CHIP C	0.10UF	K	
C748,749			CC73HCH1H470J	CHIP C	47PF	J	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-1520-10)

Ref. No.	Add	New	Parts No.	Description	Destination
C751-754			CK73HB1A104K	CHIP C 0.10UF K	
C755			CK73HB1E103K	CHIP C 0.010UF K	
C763-766			CK73HB1A104K	CHIP C 0.10UF K	
C767-769			CK73HB1E103K	CHIP C 0.010UF K	
C770-772			CK73HB1A104K	CHIP C 0.10UF K	
C773			CK73HB1E103K	CHIP C 0.010UF K	
C774-776			CK73HB1A104K	CHIP C 0.10UF K	
C777			CK73HB0J105K	CHIP C 1.0UF K	
C778-781			CK73HB1A104K	CHIP C 0.10UF K	
C782-784			CK73HB0J105K	CHIP C 1.0UF K	
C785			CK73HB1E103K	CHIP C 0.010UF K	
C786,787			CK73HB1A104K	CHIP C 0.10UF K	
C788			CK73HB1E103K	CHIP C 0.010UF K	
C789			CK73HB1A104K	CHIP C 0.10UF K	
C790			CK73HB1E103K	CHIP C 0.010UF K	
C791-795			CK73HB1A104K	CHIP C 0.10UF K	
C796			CK73HB1E103K	CHIP C 0.010UF K	
C797,798			CK73HB1A104K	CHIP C 0.10UF K	
C799			CK73HB0J105K	CHIP C 1.0UF K	
C800-809			CK73HB1A104K	CHIP C 0.10UF K	
C810			CK73HB0J105K	CHIP C 1.0UF K	
C811			CK73HB1A104K	CHIP C 0.10UF K	
C812			CK73HB0J105K	CHIP C 1.0UF K	
C813			CK73HB1A104K	CHIP C 0.10UF K	
C814			CK73HB0J105K	CHIP C 1.0UF K	
C816-819			CC73HCH1H101J	CHIP C 100PF J	
C825			CK73HB1A104K	CHIP C 0.10UF K	
CN1			E41-2958-05	PIN ASSY	
CN3			E41-2248-05	PIN ASSY	
CN4			E41-2207-05	PIN ASSY	
CN6			E41-2735-05	PIN ASSY	
CN8			E41-2985-05	FLAT CABLE CONNECTOR	
CN9			E41-3157-05	PIN ASSY	
CN10			E41-3140-05	PIN ASSY	
CN101,102			E41-2980-05	FLAT CABLE CONNECTOR	
CN400			E41-2603-05	FLAT CABLE CONNECTOR	
J2			E11-0610-05	3.5D PHONE JACK	
W435		*	E30-8207-15	CORD WITH PLUG (USB)	
348	2D		F09-2959-05	FAN	
F1			F53-0369-05	FUSE (1.6A)	
F2			F53-0371-05	FUSE (2.5A)	
⚠ L1			L33-2436-05	CHOKE COIL ASSY	
L2			L92-0373-05	CHIP FERRITE	
L4			L33-2457-05	SMALL FIXED INDUCTOR	
L6			L33-2467-05	SMALL FIXED INDUCTOR	
L8			L33-2519-05	CHOKE COIL	
L10			L33-2467-05	SMALL FIXED INDUCTOR	
L12			L33-2467-05	SMALL FIXED INDUCTOR	
L13			L92-0374-05	CHIP FERRITE	
L14 -16			L92-0332-05	CHIP FERRITE	
L17 ,18			L33-2457-05	SMALL FIXED INDUCTOR	
L21			L92-0373-05	CHIP FERRITE	
L400			L33-2457-05	SMALL FIXED INDUCTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
L401-408			L92-0373-05	CHIP FERRITE	
L409			L92-0319-05	CHIP FERRITE	
L410			L92-0332-05	CHIP FERRITE	
L411			L92-0641-05	FERRITE CORE	
L413			L92-0641-05	FERRITE CORE	
L415,416			L92-0373-05	CHIP FERRITE	
L650-663			L92-0373-05	CHIP FERRITE	
L666,667			L92-0373-05	CHIP FERRITE	
X1			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
X2			L77-2974-05	CRYSTAL RESONATOR (11.0592MHZ)	
X401			L77-3828-05	CRYSTAL RESONATOR (15.6672MHZ)	
X651			L77-2951-05	CRYSTAL RESONATOR (12.00MHZ)	
X652			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
AA	2D		N09-6731-05	MACHINE SCREW (M3.0X14)	
Z	2D		N10-2030-43	HEXAGON NUT (M 3)	
CP1			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP400			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP402			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP659			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP661-676			RK74HB1J220J	CHIP-COM 22 J 1/16W	
R1			RK73GH2A104D	CHIP R 100K D 1/10W	
R2			RK73GH2A334D	CHIP R 330K D 1/10W	
R3			RK73GH2A513D	CHIP R 51K D 1/10W	
R4			RK73GH2A333D	CHIP R 33K D 1/10W	
R5			RK73GH2A334D	CHIP R 330K D 1/10W	
R6			RK73HB1J224J	CHIP R 220K J 1/16W	
R7			RK73GH2A113D	CHIP R 11K D 1/10W	
R8			RK73HB1J224J	CHIP R 220K J 1/16W	
R9			RK73GH2A104D	CHIP R 100K D 1/10W	
R10			RK73GH2A683D	CHIP R 68K D 1/10W	
R11 -13			RK73HB1J224J	CHIP R 220K J 1/16W	
R14			RK73HB1J473J	CHIP R 47K J 1/16W	
R15			RK73FB2B223J	CHIP R 22K J 1/8W	
R16 ,17			RK73HB1J101J	CHIP R 100 J 1/16W	
R18			RK73HB1J823J	CHIP R 82K J 1/16W	
R19			RK73HB1J103J	CHIP R 10K J 1/16W	
R20			RK73HB1J224J	CHIP R 220K J 1/16W	
R21			RK73HB1J333J	CHIP R 33K J 1/16W	
R22			RK73HB1J224J	CHIP R 220K J 1/16W	
R23			RK73HB1J333J	CHIP R 33K J 1/16W	
R24			RK73GH2A470D	CHIP R 47 D 1/10W	
R25			RK73HB1J103J	CHIP R 10K J 1/16W	
R26			RK73HB1J683J	CHIP R 68K J 1/16W	
R28			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R29			RK73GH2A362D	CHIP R 3.6K D 1/10W	
R31			RK73GH2A681D	CHIP R 680 D 1/10W	
R32			RK73GH2A333D	CHIP R 33K D 1/10W	
R33			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R34			RK73HB1J100J	CHIP R 10 J 1/16W	
R35 ,36			RK73GH2A561D	CHIP R 560 D 1/10W	
R37			RK73GH2A333D	CHIP R 33K D 1/10W	
R38			RK73GH2A561D	CHIP R 560 D 1/10W	
R40			RK73GH2A561D	CHIP R 560 D 1/10W	
R42			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-1520-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R43			RK73HB1J100J	CHIP R	10	J 1/16W	
R45			RK73HB1J100J	CHIP R	10	J 1/16W	
R47			RK73EB2E6R2J	CHIP R	6.2	J 1/4W	
R48 ,49			R92-5255-05	CHIP R	0.1	1/3W	
R50			RK73EB2E3R6J	CHIP R	3.6	J 1/4W	
R51 -53			R92-5244-05	CHIP R	0.039		
R54			RK73HB1J203J	CHIP R	20K	J 1/16W	
R55			RK73GH2A201D	CHIP R	200	D 1/10W	
R56			RK73GH2A162D	CHIP R	1.6K	D 1/10W	
R57			RK73HB1J153J	CHIP R	15K	J 1/16W	
R59			RK73GH2A562D	CHIP R	5.6K	D 1/10W	
R60			RK73GH2A223D	CHIP R	22K	D 1/10W	
R62			RK73GH2A333D	CHIP R	33K	D 1/10W	
R63			RK73GH2A223D	CHIP R	22K	D 1/10W	
R64 -67			RK73HB1J100J	CHIP R	10	J 1/16W	
R68			RK73HB1J103J	CHIP R	10K	J 1/16W	
R70			RK73HB1J100J	CHIP R	10	J 1/16W	
R71			RK73HB1J2R2J	CHIP R	2.2	J 1/16W	
R72			RK73GB2A2R2J	CHIP R	2.2	J 1/10W	
R73			RK73HB1J100J	CHIP R	10	J 1/16W	
R74			RK73HB1J2R2J	CHIP R	2.2	J 1/16W	
R75			RK73EB2E4R7J	CHIP R	4.7	J 1/4W	
R76 ,77			R92-5276-05	CHIP R	0.033	1/3W	
R78			RK73EB2E3R6J	CHIP R	3.6	J 1/4W	
R79 ,80			R92-5244-05	CHIP R	0.039		
R81			RK73HB1J2R2J	CHIP R	2.2	J 1/16W	
R82			RK73HB1J123J	CHIP R	12K	J 1/16W	
R83			RK73HB1J473J	CHIP R	47K	J 1/16W	
R84			RK73GH2A333D	CHIP R	33K	D 1/10W	
R86			RK73GH2A563D	CHIP R	56K	D 1/10W	
R87 -89			RK73HB1J104J	CHIP R	100K	J 1/16W	
R90			RK73HB1J473J	CHIP R	47K	J 1/16W	
R91			RK73GB2A271J	CHIP R	270	J 1/10W	
R92			RK73HB1J473J	CHIP R	47K	J 1/16W	
R93			RK73GB2A151J	CHIP R	150	J 1/10W	
R94			RK73GH2A203D	CHIP R	20K	D 1/10W	
R95			RK73GH2A243D	CHIP R	24K	D 1/10W	
R96			RK73HB1J473J	CHIP R	47K	J 1/16W	
R97			RK73HB1J750J	CHIP R	75	J 1/16W	
R98			RK73GH2A201D	CHIP R	200	D 1/10W	
R103			RK73HB1J223J	CHIP R	22K	J 1/16W	
R104			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R105			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R113			RK73HB1J104J	CHIP R	100K	J 1/16W	
R117,118			RK73HB1J103J	CHIP R	10K	J 1/16W	
R119			RK73HB1J473J	CHIP R	47K	J 1/16W	
R120			RK73HB1J103J	CHIP R	10K	J 1/16W	
R121			RK73HB1J473J	CHIP R	47K	J 1/16W	
R122,123			RK73HB1J101J	CHIP R	100	J 1/16W	
R126			RK73HB1J473J	CHIP R	47K	J 1/16W	
R127-129			RK73HB1J103J	CHIP R	10K	J 1/16W	
R130,131			RK73HB1J473J	CHIP R	47K	J 1/16W	
R133			RK73HB1J223J	CHIP R	22K	J 1/16W	
R134			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R135			RK73HB1J104J	CHIP R	100K	J 1/16W	
R136			RK73HB1J473J	CHIP R	47K	J 1/16W	
R137			RK73HB1J104J	CHIP R	100K	J 1/16W	
R138			RK73HB1J473J	CHIP R	47K	J 1/16W	
R139			RK73HB1J104J	CHIP R	100K	J 1/16W	
R140			RK73HB1J223J	CHIP R	22K	J 1/16W	
R141			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R142-147			RK73HB1J101J	CHIP R	100	J 1/16W	
R149			RK73HB1J101J	CHIP R	100	J 1/16W	
R151			RK73HB1J473J	CHIP R	47K	J 1/16W	
R152-155			RK73HB1J101J	CHIP R	100	J 1/16W	
R156			RK73HB1J473J	CHIP R	47K	J 1/16W	
R157			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R158			RK73HB1J103J	CHIP R	10K	J 1/16W	
R159,160			RK73HB1J223J	CHIP R	22K	J 1/16W	
R161			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R162,163			RK73HB1J101J	CHIP R	100	J 1/16W	
R164			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R165			RK73HB1J101J	CHIP R	100	J 1/16W	
R166			RK73HB1J100J	CHIP R	10	J 1/16W	
R167			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R168			RK73HB1J101J	CHIP R	100	J 1/16W	
R169			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R170,171			RK73HB1J101J	CHIP R	100	J 1/16W	
R172-174			RK73HB1J223J	CHIP R	22K	J 1/16W	
R175,176			RK73HB1J103J	CHIP R	10K	J 1/16W	
R177			RK73HB1J101J	CHIP R	100	J 1/16W	
R178			RK73GB2A471J	CHIP R	470	J 1/10W	
R179,180			RK73HB1J104J	CHIP R	100K	J 1/16W	
R182			RK73HB1J104J	CHIP R	100K	J 1/16W	
R184			RK73HB1J104J	CHIP R	100K	J 1/16W	
R185			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R187			RK73HB1J104J	CHIP R	100K	J 1/16W	
R190-192			RK73HB1J101J	CHIP R	100	J 1/16W	
R193			RK73HB1J104J	CHIP R	100K	J 1/16W	
R194-196			RK73HB1J223J	CHIP R	22K	J 1/16W	
R198			RK73HB1J223J	CHIP R	22K	J 1/16W	
R199			RK73HB1J104J	CHIP R	100K	J 1/16W	
R200-202			RK73HB1J223J	CHIP R	22K	J 1/16W	
R204,205			RK73HB1J223J	CHIP R	22K	J 1/16W	
R208			RK73HB1J223J	CHIP R	22K	J 1/16W	
R209			RK73HB1J104J	CHIP R	100K	J 1/16W	
R211			RK73HB1J471J	CHIP R	470	J 1/16W	
R212			RK73HB1J103J	CHIP R	10K	J 1/16W	
R213			RK73HB1J101J	CHIP R	100	J 1/16W	
R215			RK73HB1J104J	CHIP R	100K	J 1/16W	
R216,217			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R218			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R219			RK73HB1J103J	CHIP R	10K	J 1/16W	
R220			RK73HB1J101J	CHIP R	100	J 1/16W	
R221,222			RK73HB1J104J	CHIP R	100K	J 1/16W	
R223			RK73HB1J101J	CHIP R	100	J 1/16W	
R224			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R225			RK73HB1J101J	CHIP R	100	J 1/16W	
R226			RK73HB1J223J	CHIP R	22K	J 1/16W	
R228			RK73HB1J105J	CHIP R	1.0M	J 1/16W	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-1520-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R230			RK73HB1J223J	CHIP R	22K	J 1/16W	
R231			RK73GB2A103J	CHIP R	10K	J 1/10W	
R235			RK73HB1J223J	CHIP R	22K	J 1/16W	
R237,238			RK73HB1J223J	CHIP R	22K	J 1/16W	
R240-243			RK73HB1J101J	CHIP R	100	J 1/16W	
R244-247			RK73HH1J100D	CHIP R	10	D 1/16W	
R248,249			RK73HB1J101J	CHIP R	100	J 1/16W	
R251,252			RK73HB1J100J	CHIP R	10	J 1/16W	
R253,254			RK73HB1J101J	CHIP R	100	J 1/16W	
R255			RK73HH1J330D	CHIP R	33	D 1/16W	
R256			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R257			RK73HH1J330D	CHIP R	33	D 1/16W	
R259			RK73HH1J330D	CHIP R	33	D 1/16W	
R260			RK73HB1J823J	CHIP R	82K	J 1/16W	
R261			RK73HB1J470J	CHIP R	47	J 1/16W	
R262			RK73HB1J103J	CHIP R	10K	J 1/16W	
R263			RK73HB1J470J	CHIP R	47	J 1/16W	
R264-266			RK73HH1J470D	CHIP R	47	D 1/16W	
R270,271			RK73HB1J101J	CHIP R	100	J 1/16W	
R272,273			RK73HB1J470J	CHIP R	47	J 1/16W	
R274			RK73HB1J101J	CHIP R	100	J 1/16W	
R276,277			RK73HB1J100J	CHIP R	10	J 1/16W	
R278			RK73GB2A750J	CHIP R	75	J 1/10W	
R279			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R280			RK73GH2A102D	CHIP R	1.0K	D 1/10W	
R281			RK73GH2A511D	CHIP R	510	D 1/10W	
R282			RK73HB1J100J	CHIP R	10	J 1/16W	
R283			RK73HB1J224J	CHIP R	220K	J 1/16W	
R284			RK73HB1J4R7J	CHIP R	4.7	J 1/16W	
R295			RK73HB1J333J	CHIP R	33K	J 1/16W	
R296			RK73HB1J224J	CHIP R	220K	J 1/16W	
R297			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R299			RK73GB2A100J	CHIP R	10	J 1/10W	
R304			RK73HB1J223J	CHIP R	22K	J 1/16W	
R305			RK73HB1J101J	CHIP R	100	J 1/16W	
R306			RK73HB1J223J	CHIP R	22K	J 1/16W	
R307			RK73HB1J473J	CHIP R	47K	J 1/16W	
R310			RK73GH2A472D	CHIP R	4.7K	D 1/10W	
R311			RK73GH2A101D	CHIP R	100	D 1/10W	
R312			RK73GH2A202D	CHIP R	2.0K	D 1/10W	
R314			RK73HB1J473J	CHIP R	47K	J 1/16W	
R315			RK73HB1J681J	CHIP R	680	J 1/16W	
R316,317			RK73HB1J101J	CHIP R	100	J 1/16W	
R318			RK73HB1J223J	CHIP R	22K	J 1/16W	
R319,320			RK73HB1J101J	CHIP R	100	J 1/16W	
R321			RK73HB1J473J	CHIP R	47K	J 1/16W	
R323,324			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R326			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R327			RK73HB1J104J	CHIP R	100K	J 1/16W	
R331-333			RK73HB1J560J	CHIP R	56	J 1/16W	
R334,335			RK73HB1J220J	CHIP R	22	J 1/16W	
R336			RK73HB1J104J	CHIP R	100K	J 1/16W	
R337,338			RK73HB1J220J	CHIP R	22	J 1/16W	
R341,342			RK73FB2B101J	CHIP R	100	J 1/8W	
R343,344			RK73GB2A101J	CHIP R	100	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R345			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R349			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R350			R92-5276-05	CHIP R	0.033	1/3W	
R353-355			RK73HB1J101J	CHIP R	100	J 1/16W	
R358,359			RK73HB1J103J	CHIP R	10K	J 1/16W	
R360			RK73HB1J223J	CHIP R	22K	J 1/16W	
R364			RK73HB1J103J	CHIP R	10K	J 1/16W	
R365			RK73HB1J101J	CHIP R	100	J 1/16W	
R369			RK73HB1J103J	CHIP R	10K	J 1/16W	
R370			RK73HB1J223J	CHIP R	22K	J 1/16W	
R371			RK73HB1J202J	CHIP R	2.0K	J 1/16W	
R372,373			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R374-377			RK73HB1J473J	CHIP R	47K	J 1/16W	
R380			RK73HB1J2R2J	CHIP R	2.2	J 1/16W	
R383-386			RK73HB1J473J	CHIP R	47K	J 1/16W	
R390			RK73HB1J473J	CHIP R	47K	J 1/16W	
R391			RK73GB2A151J	CHIP R	150	J 1/10W	
R392			RK73HB1J4R7J	CHIP R	4.7	J 1/16W	
R400			RK73GB2A100J	CHIP R	10	J 1/10W	
R401,402			RK73GB2A101J	CHIP R	100	J 1/10W	
R403			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R404			RK73GB2A101J	CHIP R	100	J 1/10W	
R405-409			RK73HB1J220J	CHIP R	22	J 1/16W	
R410			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R412			RK73GB2A470J	CHIP R	47	J 1/10W	
R415			RK73HB1J223J	CHIP R	22K	J 1/16W	
R417			RK73HB1J223J	CHIP R	22K	J 1/16W	
R418,419			RK73GB2A471J	CHIP R	470	J 1/10W	
R420			RK73HB1J223J	CHIP R	22K	J 1/16W	
R421,422			RK73GB2A473J	CHIP R	47K	J 1/10W	
R424			RK73HB1J910J	CHIP R	91	J 1/16W	
R425			RK73HB1J331J	CHIP R	330	J 1/16W	
R426,427			RK73HB1J223J	CHIP R	22K	J 1/16W	
R434,435			RK73HB1J471J	CHIP R	470	J 1/16W	
R436,437			RK73GH2A750D	CHIP R	75	D 1/10W	
R438			RK73GH2A151D	CHIP R	150	D 1/10W	
R439,440			RK73HB1J223J	CHIP R	22K	J 1/16W	
R441			RK73GH2A362D	CHIP R	3.6K	D 1/10W	
R443			RK73GH2A201D	CHIP R	200	D 1/10W	
R444-447			RK73GH2A750D	CHIP R	75	D 1/10W	
R448,449			RK73HB1J471J	CHIP R	470	J 1/16W	
R452,453			RK73GH2A750D	CHIP R	75	D 1/10W	
R455			RK73GH2A471D	CHIP R	470	D 1/10W	
R460			RK73GH2A471D	CHIP R	470	D 1/10W	
R462			RK73HB1J103J	CHIP R	10K	J 1/16W	
R463			RK73GH2A151D	CHIP R	150	D 1/10W	
R464			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R466			RK73HB1J103J	CHIP R	10K	J 1/16W	
R468,469			RK73GH2A151D	CHIP R	150	D 1/10W	
R470			RK73HB1J473J	CHIP R	47K	J 1/16W	
R473,474			RK73HB1J204J	CHIP R	200K	J 1/16W	
R478			RK73HB1J103J	CHIP R	10K	J 1/16W	
R479,480			RK73HB1J204J	CHIP R	200K	J 1/16W	
R481			RK73HB1J103J	CHIP R	10K	J 1/16W	
R482			RK73HB1J102J	CHIP R	1.0K	J 1/16W	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-1520-10)

Ref. No.	Add	New	Parts No.	Description				Destination
R483			RK73HB1J101J	CHIP R	100	J	1/16W	
R485,486			RK73HB1J204J	CHIP R	200K	J	1/16W	
R488,489			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R491			RK73HB1J223J	CHIP R	22K	J	1/16W	
R492			RK73HB1J512J	CHIP R	5.1K	J	1/16W	
R493-498			RK73HB1J223J	CHIP R	22K	J	1/16W	
R500			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R501			RK73HB1J223J	CHIP R	22K	J	1/16W	
R502			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R503-505			RK73HB1J101J	CHIP R	100	J	1/16W	
R507			RK73GB2A101J	CHIP R	100	J	1/10W	
R508			RK73HB1J331J	CHIP R	330	J	1/16W	
R509-512			RK73HB1J101J	CHIP R	100	J	1/16W	
R513			RK73HB1J154J	CHIP R	150K	J	1/16W	
R514			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R516			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R518			RK73HB1J101J	CHIP R	100	J	1/16W	
R519			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R520			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R522,523			RK73HB1J101J	CHIP R	100	J	1/16W	
R525			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R526,527			RK73HB1J101J	CHIP R	100	J	1/16W	
R530			RK73HB1J101J	CHIP R	100	J	1/16W	
R531			RK73HB1J223J	CHIP R	22K	J	1/16W	
R532			RK73HB1J101J	CHIP R	100	J	1/16W	
R533,534			RK73HB1J223J	CHIP R	22K	J	1/16W	
R536			RK73HB1J101J	CHIP R	100	J	1/16W	
R541			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R545			RK73HB1J223J	CHIP R	22K	J	1/16W	
R546			RK73HB1J101J	CHIP R	100	J	1/16W	
R547			RK73HB1J104J	CHIP R	100K	J	1/16W	
R550			RK73HB1J101J	CHIP R	100	J	1/16W	
R555-557			RK73HB1J223J	CHIP R	22K	J	1/16W	
R560,561			RK73HB1J223J	CHIP R	22K	J	1/16W	
R563,564			RK73HB1J223J	CHIP R	22K	J	1/16W	
R566			RK73HB1J223J	CHIP R	22K	J	1/16W	
R571			RK73HB1J101J	CHIP R	100	J	1/16W	
R572,573			RK73HB1J223J	CHIP R	22K	J	1/16W	
R574			RK73HB1J101J	CHIP R	100	J	1/16W	
R575			RK73HB1J223J	CHIP R	22K	J	1/16W	
R577			RK73HB1J223J	CHIP R	22K	J	1/16W	
R578			RK73HB1J101J	CHIP R	100	J	1/16W	
R579			RK73HB1J103J	CHIP R	10K	J	1/16W	
R580			RK73HB1J101J	CHIP R	100	J	1/16W	
R581			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R582			RK73HB1J103J	CHIP R	10K	J	1/16W	
R583			RK73HB1J101J	CHIP R	100	J	1/16W	
R585			RK73HB1J101J	CHIP R	100	J	1/16W	
R588,589			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R593			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R595			RK73HB1J101J	CHIP R	100	J	1/16W	
R596			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R601			RK73HB1J104J	CHIP R	100K	J	1/16W	
R602-605			RK73HB1J223J	CHIP R	22K	J	1/16W	
R607,608			RK73HB1J473J	CHIP R	47K	J	1/16W	
R609			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R610			RK73HB1J223J	CHIP R	22K	J	1/16W	
R616-619			RK73HB1J223J	CHIP R	22K	J	1/16W	
R621-623			RK73HB1J101J	CHIP R	100	J	1/16W	
R624,625			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R641			RK73HB1J101J	CHIP R	100	J	1/16W	
R642,643			RK73HB1J220J	CHIP R	22	J	1/16W	
R644			RK73HB1J223J	CHIP R	22K	J	1/16W	
R645,646			RK73HB1J220J	CHIP R	22	J	1/16W	
R647			RK73HB1J223J	CHIP R	22K	J	1/16W	
R652			RK73HB1J220J	CHIP R	22	J	1/16W	
R653			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R654-658			RK73HB1J220J	CHIP R	22	J	1/16W	
R659			RK73GB2A106J	CHIP R	10M	J	1/10W	
R660			RK73HB1J223J	CHIP R	22K	J	1/16W	
R668			RK73HB1J223J	CHIP R	22K	J	1/16W	
R669			RK73HH1J44R2D	CHIP R	44.2	D	1/16W	
R670			RK73HB1J104J	CHIP R	100K	J	1/16W	
R671			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R675			RK73HB1J223J	CHIP R	22K	J	1/16W	
R677,678			RK73HB1J220J	CHIP R	22	J	1/16W	
R679			RK73HB1J103J	CHIP R	10K	J	1/16W	
R680			RK73HB1J101J	CHIP R	100	J	1/16W	
R681-686			RK73HB1J220J	CHIP R	22	J	1/16W	
R688			RK73HH1J122D	CHIP R	1.2K	D	1/16W	
R690,691			RK73HB1J220J	CHIP R	22	J	1/16W	
R693-699			RK73HB1J220J	CHIP R	22	J	1/16W	
R701			RK73HB1J220J	CHIP R	22	J	1/16W	
R703,704			RK73HB1J220J	CHIP R	22	J	1/16W	
R706,707			RK73HB1J220J	CHIP R	22	J	1/16W	
R709-711			RK73HB1J220J	CHIP R	22	J	1/16W	
R712			RK73HB1J223J	CHIP R	22K	J	1/16W	
R713-723			RK73HB1J220J	CHIP R	22	J	1/16W	
R724			RK73HB1J223J	CHIP R	22K	J	1/16W	
R726			RK73HB1J220J	CHIP R	22	J	1/16W	
R727			RK73HB1J223J	CHIP R	22K	J	1/16W	
R729			RK73HB1J220J	CHIP R	22	J	1/16W	
R731-733			RK73HB1J220J	CHIP R	22	J	1/16W	
R734			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R736,737			RK73HB1J220J	CHIP R	22	J	1/16W	
R738			RK73HB1J223J	CHIP R	22K	J	1/16W	
R739			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R742			RK73HB1J220J	CHIP R	22	J	1/16W	
R743			RK73HB1J223J	CHIP R	22K	J	1/16W	
R745,746			RK73HB1J220J	CHIP R	22	J	1/16W	
R748			RK73HB1J220J	CHIP R	22	J	1/16W	
R749			RK73HB1J101J	CHIP R	100	J	1/16W	
R750			RK73HB1J223J	CHIP R	22K	J	1/16W	
R751-754			RK73HB1J220J	CHIP R	22	J	1/16W	
R756			RK73HB1J220J	CHIP R	22	J	1/16W	
R757			RK73HB1J101J	CHIP R	100	J	1/16W	
R760			RK73HB1J101J	CHIP R	100	J	1/16W	
R764			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R766-768			RK73HB1J223J	CHIP R	22K	J	1/16W	
R769			RK73HB1J301J	CHIP R	300	J	1/16W	

K : North America

⚠Indicates safety critical components.

PARTS LIST

The IC653,656 and IC657 in the Video control unit (X15-1520-10) are not replaceable components. When these ICs are defective, replace the whole Video control unit (X15-1520-10).

VIDEO CONTROL UNIT (X15-1520-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R770-789			RK73HB1J220J	CHIP R 22 J 1/16W	
R791-798			RK73HB1J220J	CHIP R 22 J 1/16W	
R799			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R800			RK73HB1J220J	CHIP R 22 J 1/16W	
R803-806			RK73HB1J220J	CHIP R 22 J 1/16W	
R812,813			RK73GH2A103D	CHIP R 10K D 1/10W	
R817,818			RK73GH2A103D	CHIP R 10K D 1/10W	
R821,822			RK73HB1J301J	CHIP R 300 J 1/16W	
R825-827			RK73HB1J223J	CHIP R 22K J 1/16W	
R831			RK73HB1J223J	CHIP R 22K J 1/16W	
R832			RK73HB1J331J	CHIP R 330 J 1/16W	
R833			RK73HB1J620J	CHIP R 62 J 1/16W	
R834			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R835			RK73HB1J220J	CHIP R 22 J 1/16W	
R836			RK73HB1J223J	CHIP R 22K J 1/16W	
R840-842			RK73HB1J223J	CHIP R 22K J 1/16W	
R843			RK73HB1J220J	CHIP R 22 J 1/16W	
R844			RK73HB1J5R1J	CHIP R 5.1 J 1/16W	
R845-847			RK73HB1J220J	CHIP R 22 J 1/16W	
R848			RK73HB1J223J	CHIP R 22K J 1/16W	
R849			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R873			RK73HB1J220J	CHIP R 22 J 1/16W	
R899			RK73HB1J102J	CHIP R 1.0K J 1/16W	
W50			R92-5428-05	JUMPER WIRE (RESISTOR TYPE)	
W52			R92-5428-05	JUMPER WIRE (RESISTOR TYPE)	
W671			R92-5428-05	JUMPER WIRE (RESISTOR TYPE)	
W678			R92-5428-05	JUMPER WIRE (RESISTOR TYPE)	
D1			1SR154-400	DIODE	
D2			RKZ9.1KG(B2)	ZENER DIODE	
D3			1SR154-400	DIODE	
D6 ,7			1SS357-F	DIODE	
D9 ,10			1SS357-F	DIODE	
D12			F2J4	DIODE	
D16			HSU119TRF-E	DIODE	
D19			VR1005AAA270	VARISTOR	
D22 ,23			HSU119TRF-E	DIODE	
D35 ,36			VR1005DDA080	VARISTOR	
D400			MC2846-T111	DIODE	
D408,409			AVRL1613R3FTA	VARISTOR	
IC1			XC6209B502P1	ANALOGUE IC	
IC2			74AHC1GU04GW	MOS-IC	
IC3			LTC3728LEUH	ANALOGUE IC	
IC4			LTC3850EUFD	ANALOGUE IC	
IC5			LM26003MHX	ANALOGUE IC	
IC6			R1173S001D-F	ANALOGUE IC (LDO ADJ)	
IC7			XC6120N362N-G	MOS-IC	
IC8			XC6219B122PR	ANALOGUE IC	
IC10			NJM4565V-ZB	ANALOGUE IC	
IC13			XC6209B502P1	ANALOGUE IC	
IC14			W05-1548-00	ROM IC (K)	
IC16			XC6120N362N-G	MOS-IC	
IC17			W05-1734-00	MICROCONTROLLER IC (MAIN)	
IC18			TC7SET08FU-F	MOS-IC	
IC21,22			TC7SET08FU-F	MOS-IC	

Ref. No.	Add	New	Parts No.	Description	Destination
IC23			R1173S001D-F	ANALOGUE IC (LDO ADJ)	
IC24			TC7WH126FU-F	MOS-IC	
IC25			R1114N331B-TR	ANALOGUE IC (3.3V LF)	
IC26			WM8974GEFL/RV	MOS-IC	
IC27,28			XC6201P502PR	ANALOGUE IC	
IC400			AK4388AETP	MOS-IC	
IC402			TC7SG86FU-F	MOS-IC	
IC403			THS8136IPHPR	MOS-IC	
IC404			TC7SG04FU-F	MOS-IC	
IC406			MM1503-E	ANALOGUE IC	
IC407			NJM2561F1-ZB	ANALOGUE IC	
IC409			MM1734XVBE	MOS-IC	
IC410			AN15886A-VF	MOS-IC	
IC411			MFI341S2162	MICROPROCESSOR IC	
IC413			NJM2516VC3-ZB	ANALOGUE IC	
IC414,415		✻	RT9715EGB	MOS-IC	
IC417			W05-1632-00	MICROCONTROLLER IC (SUB)	
IC418			W05-1733-00	ROM IC	
IC421			TC7SZ125FU-F	MOS-IC	
IC653			-	MICROPROCESSOR IC (BGA)	
IC656,657			-	DRAM IC (FBGA)	
IC658			TC7SZ125FU-F	MOS-IC	
Q1			RT1N441U-T111	TRANSISTOR	
Q2			2SC4617	TRANSISTOR	
Q3			2SA1774	TRANSISTOR	
Q4			RT1N144U-T111	TRANSISTOR	
Q5			RT1P140M-T111	TRANSISTOR	
Q6			2SC4617	TRANSISTOR	
Q7			2SA1774	TRANSISTOR	
Q8			2SC4617	TRANSISTOR	
Q9			RT1P141U-T111	TRANSISTOR	
Q10			RT1N441U-T111	TRANSISTOR	
Q11			2SB1184(Q,R)	TRANSISTOR	
Q12			2SC4617	TRANSISTOR	
Q13			RT1N441U-T111	TRANSISTOR	
Q14 ,15			2SA1774	TRANSISTOR	
Q16			TPC8110-F	FET	
Q18 ,19			RT1N441U-T111	TRANSISTOR	
Q20 -23			HAT2218R-E	DUAL FET	
Q24 ,25			RT1N441U-T111	TRANSISTOR	
Q26			CPH3105-E	TRANSISTOR	
Q27			RT1N144U-T111	TRANSISTOR	
Q28			CPH3105-E	TRANSISTOR	
Q29			2SK3019	FET	
Q30			2SB1689	TRANSISTOR	
Q34			2SA1774	TRANSISTOR	
Q35			2SC4617	TRANSISTOR	
Q36 ,37			2SA1774	TRANSISTOR	
Q38			RT1N441U-T111	TRANSISTOR	
Q39 ,40			2SC4617	TRANSISTOR	
Q41			RT1P144U-T111	TRANSISTOR	
Q42			RT1N436U-T111	TRANSISTOR	
Q44			RT1P144U-T111	TRANSISTOR	
Q45			2SA1774	TRANSISTOR	
Q54 ,55			2SK3019	FET	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-1520-10)

Ref. No.	Add	New	Parts No.	Description	Destination
Q56			2SA1774	TRANSISTOR	
Q57 ,58			RT1N441U-T111	TRANSISTOR	
Q59 ,60			2SA1774	TRANSISTOR	
Q61			TPC8110-F	FET	
Q62			RT1N144U-T111	TRANSISTOR	
Q63			RT1P141U-T111	TRANSISTOR	
Q302			RT1N441U-T111	TRANSISTOR	
Q400			RT1P144U-T111	TRANSISTOR	
Q401,402		✻	KRC410E-P	DIGITAL TRANSISTOR	
Q405			RT1N441U-T111	TRANSISTOR	
Q406			RT1P144U-T111	TRANSISTOR	
A1	2D	✻	W02-5490-05	ELECTRIC CIRCUIT MODULE (BT)	
SWITCH UNIT (W05-1653-00) (X16-6870-10)					
D101			B30-3218-05	LED	
D104			B30-1784-05	LED (RGB SIDE)	
D106			B30-1784-05	LED (RGB SIDE)	
C101			CK73HB1A104K	CHIP C 0.10UF K	
C102			CC73HCH1H102J	CHIP C 1000PF J	
CN101			E41-3150-05	FLAT CABLE CONNECTOR	
R110-113			RK73HB1J561J	CHIP R 560 J 1/16W	
R115-118			RK73HB1J561J	CHIP R 560 J 1/16W	
S101			S70-0948-05	TACT SWITCH	
D102			CVS10A120M	VARISTOR	
D107			CVS10A120M	VARISTOR	
D108-111			AVRM1005270MAA	VARISTOR	
IC101			CY8C2023412KA	MOS-IC	
IC102			PIC95603	ANALOGUE IC	
SUB-CIRCUIT UNIT (X16-6910-10)					
C1			CK73GB1A105K	CHIP C 1.0UF K	
C2			CK73GB1H103K	CHIP C 0.010UF K	
C3			CK73GB1A105K	CHIP C 1.0UF K	
CN1			E41-3153-05	FLAT CABLE CONNECTOR	
J1			E68-0826-05	JACK (SD CARD SLOT)	
R1			RK73GB2A103J	CHIP R 10K J 1/10W	
R2			RK73GB2A224J	CHIP R 220K J 1/10W	
R4			RK73GB2A000J	CHIP R 0.0 J 1/10W	
D1			MC2850-T111	DIODE	
Q1			RTQ025P02	FET	
CONTROL CIRCUIT UNIT (X29-4560-10)					
C101,102			CK73FB1C105K	CHIP C 1.0UF K	
C103			CK73FB1C106K	CHIP C 10UF K	
C104			CK73GB1H103K	CHIP C 0.010UF K	
C111,112			CE32BJ1C100M	CHIP EL 10UF 16WV	
C113,114			CK73GB1H102K	CHIP C 1000PF K	
C151			CK73GB1H104K	CHIP C 0.10UF K	
C161			CK73GB1H104K	CHIP C 0.10UF K	
C171			CD04AT0J331M	ELECTRO 330UF 6.3WV	
C172			CK73GB1H104K	CHIP C 0.10UF K	
C201,202			CK73FB1C105K	CHIP C 1.0UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C203			CK73FB1C106K	CHIP C 10UF K	
C204			CK73GB1H103K	CHIP C 0.010UF K	
C251			CK73GB1H104K	CHIP C 0.10UF K	
C299			CK73FB0J106K	CHIP C 10UF K	
C301			CK73GB1H103K	CHIP C 0.010UF K	
C302			CK73GB1H473K	CHIP C 0.047UF K	
C303,304			CK73GB1H103K	CHIP C 0.010UF K	
C305			CK73GB1H102K	CHIP C 1000PF K	
C306,307			CK73GB1H103K	CHIP C 0.010UF K	
C308			CK73GB1C104K	CHIP C 0.10UF K	
C309,310			CK73GB1A105K	CHIP C 1.0UF K	
C401			CK73GB1H473K	CHIP C 0.047UF K	
C402			CK73EB1E105K	CHIP C 1.0UF K	
C421			CK73GB1H473K	CHIP C 0.047UF K	
C422			CK73EB1E105K	CHIP C 1.0UF K	
C453			CC73GCH1H101J	CHIP C 100PF J	
C454			CK73GB1H104K	CHIP C 0.10UF K	
C501-503			CK73GB1A105K	CHIP C 1.0UF K	
C526			CK73GB1H104K	CHIP C 0.10UF K	
C528			CK73GB1H104K	CHIP C 0.10UF K	
C531,532			CK73GB1H103K	CHIP C 0.010UF K	
C599			CK73GB1H102K	CHIP C 1000PF K	
C601			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-2980-05	FLAT CABLE CONNECTOR	
CN2			E40-6469-05	PIN ASSY	
CN101			E41-2959-05	PIN ASSY	
J401			E58-1067-05	RECTANGULAR RECEPTACLE	
J501			E58-1034-05	RECTANGULAR RECEPTACLE	
WH1			E39-0985-15	WIRING HARNESS	
R1			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R101,102			RK73EB2E332J	CHIP R 3.3K J 1/4W	
R103,104			RK73GB2A103J	CHIP R 10K J 1/10W	
R105,106			RK73GB2A123J	CHIP R 12K J 1/10W	
R107			RK73EB2E162J	CHIP R 1.6K J 1/4W	
R108			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R111,112			RK73GB2A471J	CHIP R 470 J 1/10W	
R115,116			RK73GB2A223J	CHIP R 22K J 1/10W	
R117,118			RK73FB2B101J	CHIP R 100 J 1/8W	
R121-123			RK73GB2A100J	CHIP R 10 J 1/10W	
R151			RK73EB2E100J	CHIP R 10 J 1/4W	
R152			RK73GH2A750D	CHIP R 75 D 1/10W	
R154,155			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R156			RK73FB2B100J	CHIP R 10 J 1/8W	
R161			RK73EB2E100J	CHIP R 10 J 1/4W	
R162			RK73GB2A750J	CHIP R 75 J 1/10W	
R164			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R166			RK73FB2B100J	CHIP R 10 J 1/8W	
R171			RK73EB2E750J	CHIP R 75 J 1/4W	
R173			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R201,202			RK73EB2E332J	CHIP R 3.3K J 1/4W	
R203,204			RK73GB2A103J	CHIP R 10K J 1/10W	
R205,206			RK73GB2A123J	CHIP R 12K J 1/10W	
R207			RK73EB2E162J	CHIP R 1.6K J 1/4W	
R208			RK73EB2E102J	CHIP R 1.0K J 1/4W	

K : North America

⚠Indicates safety critical components.

PARTS LIST

CONTROL CIRCUIT UNIT (X29-4560-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R221-223			RK73GB2A100J	CHIP R	10	J 1/10W	
R251			RK73EB2E100J	CHIP R	10	J 1/4W	
R252			RK73GB2A750J	CHIP R	75	J 1/10W	
R254,255			RK73FB2B000J	CHIP R	0.0	J 1/8W	
R256			RK73FB2B100J	CHIP R	10	J 1/8W	
R301,302			RK73GB2A303J	CHIP R	30K	J 1/10W	
R303			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R304			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R305			RK73GH2A333D	CHIP R	33K	D 1/10W	
R306			RK73GH2A222D	CHIP R	2.2K	D 1/10W	
R307			RK73GH2A153D	CHIP R	15K	D 1/10W	
R308			RK73GB2A302J	CHIP R	3.0K	J 1/10W	
R309			RK73GB2A623J	CHIP R	62K	J 1/10W	
R310			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R311			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R312,313			RK73GB2A473J	CHIP R	47K	J 1/10W	
R314			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R315			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R316			RK73GB2A104J	CHIP R	100K	J 1/10W	
R317			RK73GB2A473J	CHIP R	47K	J 1/10W	
R318			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R319			RK73GB2A104J	CHIP R	100K	J 1/10W	
R320			RK73GB2A473J	CHIP R	47K	J 1/10W	
R321			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R322			RK73GB2A101J	CHIP R	100	J 1/10W	
R401			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R402			RK73GB2A473J	CHIP R	47K	J 1/10W	
R403			RK73EB2E152J	CHIP R	1.5K	J 1/4W	
R404			RK73GB2A473J	CHIP R	47K	J 1/10W	
R405			RK73GB2A621J	CHIP R	620	J 1/10W	
R406			RK73GB2A242J	CHIP R	2.4K	J 1/10W	
R407,408			RK73PB2H2R0J	CHIP R	2.0	J 1/2W	
R409			RK73GB2A124J	CHIP R	120K	J 1/10W	
R410			RK73GB2A103J	CHIP R	10K	J 1/10W	
R411			RK73GB2A473J	CHIP R	47K	J 1/10W	
R412			RK73FB2B472J	CHIP R	4.7K	J 1/8W	
R421			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R422			RK73GB2A473J	CHIP R	47K	J 1/10W	
R423			RK73EB2E152J	CHIP R	1.5K	J 1/4W	
R424			RK73GB2A473J	CHIP R	47K	J 1/10W	
R425			RK73GB2A621J	CHIP R	620	J 1/10W	
R426			RK73GB2A242J	CHIP R	2.4K	J 1/10W	
R427,428			RK73PB2H2R0J	CHIP R	2.0	J 1/2W	
R429			RK73GB2A124J	CHIP R	120K	J 1/10W	
R430			RK73GB2A103J	CHIP R	10K	J 1/10W	
R431			RK73GB2A473J	CHIP R	47K	J 1/10W	
R432			RK73FB2B472J	CHIP R	4.7K	J 1/8W	
R451			RK73EB2E182J	CHIP R	1.8K	J 1/4W	
R452			RK73EB2E111J	CHIP R	110	J 1/4W	
R453			RK73GB2A243J	CHIP R	24K	J 1/10W	
R454			RK73GB2A103J	CHIP R	10K	J 1/10W	
R455,456			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R457			RK73GB2A103J	CHIP R	10K	J 1/10W	
R458			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R459,460			RK73GB2A473J	CHIP R	47K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R461			RK73GB2A223J	CHIP R	22K	J 1/10W	
R501,502			RK73EB2E200J	CHIP R	20	J 1/4W	
R503,504			RK73GB2A100J	CHIP R	10	J 1/10W	
R505			RK73EB2E100J	CHIP R	10	J 1/4W	
R506			RK73GB2A100J	CHIP R	10	J 1/10W	
R511			RK73EB2E100J	CHIP R	10	J 1/4W	
R512			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R513			RK73GB2A750J	CHIP R	75	J 1/10W	
R521			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R522			RK73EB2E241J	CHIP R	240	J 1/4W	
R523-525			RK73EB2E101J	CHIP R	100	J 1/4W	
R526			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R527			RK73EB2E101J	CHIP R	100	J 1/4W	
R528			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R601			RK73GB2A101J	CHIP R	100	J 1/10W	
D100			MC2846-T111	DIODE			
D104			RKZ6.2KG(B2)	ZENER DIODE			
D105,106			RKZ8.2KG(B2)	ZENER DIODE			
D111,112			CVS10A180M	VARISTOR			
D115			MC2850-T111	DIODE			
D151			CVL10C270M300	VARISTOR			
D152			CVS10A120M	VARISTOR			
D153,154			RKZ6.2KG(B2)	ZENER DIODE			
D161			CVL10C270M300	VARISTOR			
D162			CVS10A120M	VARISTOR			
D163,164			RKZ6.2KG(B2)	ZENER DIODE			
D172			CVL10C270M300	VARISTOR			
D173,174			RKZ6.2KG(B2)	ZENER DIODE			
D204			RKZ6.2KG(B2)	ZENER DIODE			
D205,206			RKZ8.2KG(B2)	ZENER DIODE			
D251			CVL10C270M300	VARISTOR			
D252			CVS10A120M	VARISTOR			
D253,254			RKZ6.2KG(B2)	ZENER DIODE			
D301			MC2850-T111	DIODE			
D401,402			1SR154-400	DIODE			
D421,422			1SR154-400	DIODE			
D451			HSU119TRF-E	DIODE			
D455			CVL10C270M300	VARISTOR			
D501,502			RKZ6.8KG(B2)	ZENER DIODE			
D503			RKZ6.2KG(B2)	ZENER DIODE			
D511,512			RKZ6.2KG(B2)	ZENER DIODE			
D513			CVS10A120M	VARISTOR			
D514			CVL10C270M300	VARISTOR			
D521-527			RKZ6.2KG(B2)	ZENER DIODE			
D528			CVS10A120M	VARISTOR			
IC301			R1114N331B-TR	ANALOGUE IC (3.3V LF)			
IC601			TC7SET08FU-F	MOS-IC			
Q111,112			RT1N430M-T111	TRANSISTOR			
Q113			RT1P441M-T111	TRANSISTOR			
Q301-305			2SC4081	TRANSISTOR			
Q306			2SA1576A	TRANSISTOR			
Q307			2SC4081	TRANSISTOR			
Q308			2SA1576A	TRANSISTOR			
Q401			RT1N140M-T111	TRANSISTOR			
Q402			2SC4154T1(E,F	TRANSISTOR			

K : North America

⚠Indicates safety critical components.

PARTS LIST

CONTROL CIRCUIT UNIT (X29-4560-10)

Ref. No.	Add	New	Parts No.	Description			Destination
Q403			2SB1443	TRANSISTOR			
Q404			ISA1602AM1(F)	TRANSISTOR			
Q405,406			2SC4154T1(E,F	TRANSISTOR			
Q421			RT1N140M-T111	TRANSISTOR			
Q422			2SC4154T1(E,F	TRANSISTOR			
Q423			2SB1443	TRANSISTOR			
Q424			ISA1602AM1(F)	TRANSISTOR			
Q425,426			2SC4154T1(E,F	TRANSISTOR			
Q451			2SC4154T1(E,F	TRANSISTOR			
Q452,453			ISA1602AM1(F)	TRANSISTOR			
Q454			2SC4154T1(E,F	TRANSISTOR			
ELECTRIC UNIT (X34-6940-10)							
C1			C90-6866-05	ELECTRO	6800UF	16WV	
C2 ,3			CK73GB1H103K	CHIP C	0.010UF	K	
C5 -8			C90-6779-05	ELECTRO	0.47UF	16WV	
C9 -24			CC73HCH1H150J	CHIP C	15PF	J	
C25 ,26			C90-6780-05	ELECTRO	1UF	16WV	
C27 ,28			CC73HCH1H150J	CHIP C	15PF	J	
C29			CK73HB0J105K	CHIP C	1.0UF	K	
C31			CK73HB1E103K	CHIP C	0.010UF	K	
C32			CK73HB0J105K	CHIP C	1.0UF	K	
C33			CE32BM1C100M	CHIP EL	10UF	16WV	
C34			CE32CL1C100M	CHIP EL	10UF	16WV	
C35 ,36			CC73HCH1H101J	CHIP C	100PF	J	
C37			CK73HB1H222K	CHIP C	2200PF	K	
C38			CK73GB1A105K	CHIP C	1.0UF	K	
C39			CK73HB1E103K	CHIP C	0.010UF	K	
C40			CK73HB0J105K	CHIP C	1.0UF	K	
C41			CC73GCH1H470J	CHIP C	47PF	J	
C42			CK73HB1E103K	CHIP C	0.010UF	K	
C43			CC73HCH1H102J	CHIP C	1000PF	J	
C44			CE32BM1C221M	CHIP EL	220UF	16WV	
C45			CE32BM1V150M	CHIP EL	15UF	35WV	
C46			CK73GB1H104K	CHIP C	0.10UF	K	
C47			CE32BM1C220M	CHIP EL	22UF	16WV	
C48			CK73HB1E103K	CHIP C	0.010UF	K	
C52			CK73HB1E103K	CHIP C	0.010UF	K	
C53			CK73HB1A104K	CHIP C	0.10UF	K	
C54			CE32BM1C101M	CHIP EL	100UF	16WV	
C71			CK73FB1C106K	CHIP C	10UF	K	
C72			CE32BM1C101M	CHIP EL	100UF	16WV	
C73 -75			CK73EB1E225K	CHIP C	2.2UF	K	
C76			CK73FB1C106K	CHIP C	10UF	K	
C77			CK73EB1E225K	CHIP C	2.2UF	K	
C78			CK73GB1H223K	CHIP C	0.022UF	K	
C79			CK73HB1E103K	CHIP C	0.010UF	K	
C80 ,81			CK73EB1C106K	CHIP C	10UF	K	
C91			CK73GB1H103K	CHIP C	0.010UF	K	
C101			CK73FB1E474K	CHIP C	0.47UF	K	
C111			CK73FB1A335K	CHIP C	3.3UF	K	
C112			CK73FB1C105K	CHIP C	1.0UF	K	
C113			CK73GB1H104K	CHIP C	0.10UF	K	
C131			CK73HB0J105K	CHIP C	1.0UF	K	
C132			CK73HB1E103K	CHIP C	0.010UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C141			CK73HB1E103K	CHIP C	0.010UF	K	
C161			CK73FB1C105K	CHIP C	1.0UF	K	
C171			CK73HB0J105K	CHIP C	1.0UF	K	
C172			CK73HB1E103K	CHIP C	0.010UF	K	
C201			CE32BM1V220M	CHIP EL	22UF	35WV	
C202			CK73GB1H104K	CHIP C	0.10UF	K	
C203			CK73GB1A474K	CHIP C	0.47UF	K	
C204			CK73GB1H103K	CHIP C	0.010UF	K	
C205			CK73HB1H102K	CHIP C	1000PF	K	
C206			CC73HCH1H100D	CHIP C	10PF	D	
C207			CE32BL1A470M	CHIP EL	47UF	10WV	
C208			CK73GB1A105K	CHIP C	1.0UF	K	
C209,210			CK73GB1H104K	CHIP C	0.10UF	K	
C211			CK73GB0J106M	CHIP C	10UF	M	
C212			CE32BM1V150M	CHIP EL	15UF	35WV	
C213			CK73HB1E103K	CHIP C	0.010UF	K	
C214			CK73GB1H104K	CHIP C	0.10UF	K	
C215			CE32BM1C101M	CHIP EL	100UF	16WV	
C216			CK73FB1C106K	CHIP C	10UF	K	
C217			CK73HB1A104K	CHIP C	0.10UF	K	
C218			CK73HB1E103K	CHIP C	0.010UF	K	
C219			CK73FB0J226M	CHIP C	22UF	M	
C220			CK73HB1E103K	CHIP C	0.010UF	K	
C221			CK73HB1A104K	CHIP C	0.10UF	K	
C222			CK73GB0J106M	CHIP C	10UF	M	
C223			CK73FB1C106K	CHIP C	10UF	K	
C224			CK73HB1A104K	CHIP C	0.10UF	K	
C225			CK73HB1E103K	CHIP C	0.010UF	K	
C228			CK73HB0J105K	CHIP C	1.0UF	K	
C229,230			CK73HB1A104K	CHIP C	0.10UF	K	
C231			CK73HB0J105K	CHIP C	1.0UF	K	
C232			CK73FB1C106K	CHIP C	10UF	K	
C233			CK73HB1E103K	CHIP C	0.010UF	K	
C236			CC73GCH1H470J	CHIP C	47PF	J	
C237			CK73GB1H102K	CHIP C	1000PF	K	
C239			CK73GB1A105K	CHIP C	1.0UF	K	
C261			CC73GCH1H060D	CHIP C	6.0PF	D	
C262			CC73GCH1H040C	CHIP C	4.0PF	C	
C263			CC73GCH1H680J	CHIP C	68PF	J	
C264			CC73GCH1H080D	CHIP C	8.0PF	D	
C265			CK73GB1H103K	CHIP C	0.010UF	K	
C266			CK73GB1H102K	CHIP C	1000PF	K	
C267			CC73GCH1H390J	CHIP C	39PF	J	
C268			CK73GB1H102K	CHIP C	1000PF	K	
C300			CE32CL1C470M	CHIP EL	47UF	16WV	
C301,302			CK73GB1A474K	CHIP C	0.47UF	K	
C303,304			CK73GB1A105K	CHIP C	1.0UF	K	
C305			CK73HB0J105K	CHIP C	1.0UF	K	
C307,308			CK73FB1A335K	CHIP C	3.3UF	K	
C309			CK73GB1A105K	CHIP C	1.0UF	K	
C310			CK73HB1E103K	CHIP C	0.010UF	K	
C317			CK73GB1A474K	CHIP C	0.47UF	K	
C318			CK73FB1C106K	CHIP C	10UF	K	
C319			CK73GB1A474K	CHIP C	0.47UF	K	
C320			CE32CL1C100M	CHIP EL	10UF	16WV	

K : North America

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-6940-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C321-326			CK73GB1A474K	CHIP C	0.47UF	K	
C329			CC73HCH1H470J	CHIP C	47PF	J	
C332			CC73HCH1H470J	CHIP C	47PF	J	
C334			CC73HCH1H221J	CHIP C	220PF	J	
C336			CC73HCH1H221J	CHIP C	220PF	J	
C339			CK73GB1A105K	CHIP C	1.0UF	K	
C341,342			CE32CL1C100M	CHIP EL	10UF	16WV	
C343,344			CK73HB1H102K	CHIP C	1000PF	K	
C345			CK73GB1H104K	CHIP C	0.10UF	K	
C351,352			CE32CL1C100M	CHIP EL	10UF	16WV	
C353,354			CK73HB1H102K	CHIP C	1000PF	K	
C355			CK73GB1H104K	CHIP C	0.10UF	K	
C361,362			CK73EB1C106K	CHIP C	10UF	K	
C363,364			CK73HB1H102K	CHIP C	1000PF	K	
C365			CK73GB1H104K	CHIP C	0.10UF	K	
C371,372			CE32CL1C100M	CHIP EL	10UF	16WV	
C375,376			CK73GB1H102K	CHIP C	1000PF	K	
C381,382			CE32CL1C100M	CHIP EL	10UF	16WV	
C385,386			CK73GB1H102K	CHIP C	1000PF	K	
C391,392			CK73EB1C106K	CHIP C	10UF	K	
C395,396			CK73GB1H102K	CHIP C	1000PF	K	
C401			CK73GB1A105K	CHIP C	1.0UF	K	
C402			CK73HB1A104K	CHIP C	0.10UF	K	
C403			CK73FB0J226M	CHIP C	22UF	M	
C404			CK73HB1A104K	CHIP C	0.10UF	K	
C405-409			CK73GB1A105K	CHIP C	1.0UF	K	
C411			CK73FB1C106K	CHIP C	10UF	K	
C412,413			CK73GB1A105K	CHIP C	1.0UF	K	
C415			CK73FB1C106K	CHIP C	10UF	K	
C471-473			CK73GB1A474K	CHIP C	0.47UF	K	
C474			CK73HB1A104K	CHIP C	0.10UF	K	
C501-503			CK73GB1H102K	CHIP C	1000PF	K	
C521,522			CK73GB0J475K	CHIP C	4.7UF	K	
C523			CK73GB0J106M	CHIP C	10UF	M	
C524			CK73HB1A104K	CHIP C	0.10UF	K	
C525,526			CK73GB1H102K	CHIP C	1000PF	K	
C561			CK73HB1A104K	CHIP C	0.10UF	K	
C562,563			CK73FB1C106K	CHIP C	10UF	K	
C564			CK73HB1E103K	CHIP C	0.010UF	K	
C565,566			CK73GB1C104K	CHIP C	0.10UF	K	
C567,568			CK73GB1H103K	CHIP C	0.010UF	K	
C572			CK73GB1H104K	CHIP C	0.10UF	K	
C574			CK73GB1C104K	CHIP C	0.10UF	K	
C575-577			CK73GB1A474K	CHIP C	0.47UF	K	
C578			CK73GB1H103K	CHIP C	0.010UF	K	
C601-604			CC73GCH1H101J	CHIP C	100PF	J	
C605-608			CC73GCH1H221J	CHIP C	220PF	J	
C609			CK73GB1H222K	CHIP C	2200PF	K	
C610-612			CC73GCH1H221J	CHIP C	220PF	J	
C613-619			CK73GB1H222K	CHIP C	2200PF	K	
C620			CC73GCH1H221J	CHIP C	220PF	J	
C622			CC73HCH1H180J	CHIP C	18PF	J	
C625			CK73HB1A104K	CHIP C	0.10UF	K	
C626			CK73HB1E103K	CHIP C	0.010UF	K	
C627			CK73HB1A104K	CHIP C	0.10UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C628			CK73HB1E103K	CHIP C	0.010UF	K	
C629			CK73HB1A104K	CHIP C	0.10UF	K	
C630			CK73HB1E103K	CHIP C	0.010UF	K	
C631			CK73GB1H104K	CHIP C	0.10UF	K	
C632			CK73GB1H103K	CHIP C	0.010UF	K	
C633			CK73GB1H104K	CHIP C	0.10UF	K	
C634			CK73GB1H103K	CHIP C	0.010UF	K	
C635,636			CC73HCH1H120J	CHIP C	12PF	J	
C637			CC73HCH1H180J	CHIP C	18PF	J	
C639			CC73HCH1H150J	CHIP C	15PF	J	
C640			CC73HCH1H070D	CHIP C	7.0PF	D	
C641			CK73HB1E103K	CHIP C	0.010UF	K	
C642			CC73HCH1H102J	CHIP C	1000PF	J	
C645			CC73HCH1H090D	CHIP C	9.0PF	D	
C646			CC73HCH1H150J	CHIP C	15PF	J	
C647			CC73HCH1H090D	CHIP C	9.0PF	D	
C648			CC73HCH1H020C	CHIP C	2.0PF	C	
C649			CC73HCH1H080D	CHIP C	8.0PF	D	
C652			CC73HCH1H470J	CHIP C	47PF	J	
C655			CC73HCH1H050C	CHIP C	5.0PF	C	
C656			CC73HCH1H270J	CHIP C	27PF	J	
C751-754			CE32CL1C100M	CHIP EL	10UF	16WV	
C755,756			CC73HCH1H681J	CHIP C	680PF	J	
C757-760			CC73HCH1H561J	CHIP C	560PF	J	
C771,772			CK73EB1C106K	CHIP C	10UF	K	
C773,774			CK73HB1H152K	CHIP C	1500PF	K	
C775,776			CC73HCH1H561J	CHIP C	560PF	J	
C781,782			CK73EB1C106K	CHIP C	10UF	K	
C783			CC73HCH1H102J	CHIP C	1000PF	J	
C784			CK73HB1H152K	CHIP C	1500PF	K	
C785			CC73HCH1H181J	CHIP C	180PF	J	
C786			CC73HCH1H561J	CHIP C	560PF	J	
C801,802			CK73EB1C106K	CHIP C	10UF	K	
C803			CK73HB1A104K	CHIP C	0.10UF	K	
C805			CK73HB1A104K	CHIP C	0.10UF	K	
C818			CC73HCH1H390J	CHIP C	39PF	J	
C830,831			CC73HCH1H150J	CHIP C	15PF	J	
C836			CK73HB1E103K	CHIP C	0.010UF	K	
C837			CK73HB1A104K	CHIP C	0.10UF	K	
C838			CK73HB1H102K	CHIP C	1000PF	K	
C839			CK73HB1E103K	CHIP C	0.010UF	K	
C841,842			CK73GB1A105K	CHIP C	1.0UF	K	
C843			CK73HB1E103K	CHIP C	0.010UF	K	
C844			CK73GB1H102K	CHIP C	1000PF	K	
C845			CK73GB0J106M	CHIP C	10UF	M	
C851			CK73HB1A104K	CHIP C	0.10UF	K	
C852			CK73HB0J105K	CHIP C	1.0UF	K	
C853			CK73HB1E103K	CHIP C	0.010UF	K	
C854			CK73HB1A104K	CHIP C	0.10UF	K	
C855			CK73HB0J105K	CHIP C	1.0UF	K	
C856			CK73GB0J106M	CHIP C	10UF	M	
C857			CK73HB1A104K	CHIP C	0.10UF	K	
C858			CK73HB1E103K	CHIP C	0.010UF	K	
C859			CK73HB1A104K	CHIP C	0.10UF	K	
C860			CK73HB1E103K	CHIP C	0.010UF	K	

K : North America

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-6940-10)

Ref. No.	Add	New	Parts No.	Description	Destination
C861			CK73HB1A104K	CHIP C 0.10UF K	
C862			CK73HB1E103K	CHIP C 0.010UF K	
C863			CK73HB1A104K	CHIP C 0.10UF K	
C864			CK73HB1E103K	CHIP C 0.010UF K	
C865			CK73HB1A104K	CHIP C 0.10UF K	
C866			CK73HB1E103K	CHIP C 0.010UF K	
C867			CK73HB1A104K	CHIP C 0.10UF K	
C868			CK73HB1E103K	CHIP C 0.010UF K	
C869			CK73HB1A104K	CHIP C 0.10UF K	
C870			CK73HB1E103K	CHIP C 0.010UF K	
C871			CK73HB1A104K	CHIP C 0.10UF K	
C872			CK73GB0J106M	CHIP C 10UF M	
C873			CK73HB1A104K	CHIP C 0.10UF K	
C874			CK73HB1E103K	CHIP C 0.010UF K	
C875			CK73HB1A104K	CHIP C 0.10UF K	
C876			CK73HB1E103K	CHIP C 0.010UF K	
C877			CK73HB1A104K	CHIP C 0.10UF K	
C878			CK73HB1E103K	CHIP C 0.010UF K	
C879			CK73HB1A104K	CHIP C 0.10UF K	
C880,881			CK73HB1E103K	CHIP C 0.010UF K	
C882			CK73HB1A104K	CHIP C 0.10UF K	
C884			CK73GB1A105K	CHIP C 1.0UF K	
C885,886			CK73HB1A104K	CHIP C 0.10UF K	
C887			CE32CL1C100M	CHIP EL 10UF 16WV	
C888			CK73HB1A104K	CHIP C 0.10UF K	
C889			CK73HB1H102K	CHIP C 1000PF K	
C890			CE32CL1C100M	CHIP EL 10UF 16WV	
C891			CK73HB1A104K	CHIP C 0.10UF K	
C892			CK73HB1H102K	CHIP C 1000PF K	
C893			CK73HB0J105K	CHIP C 1.0UF K	
C894			CK73HB1A104K	CHIP C 0.10UF K	
C895			CK73HB1H102K	CHIP C 1000PF K	
C896			CK73HB1A104K	CHIP C 0.10UF K	
C897			CK73HB1H102K	CHIP C 1000PF K	
C898			CK73HB1A104K	CHIP C 0.10UF K	
C899			CK73HB1H102K	CHIP C 1000PF K	
CN1			E41-2958-05	PIN ASSY	
CN101,102			E41-2980-05	FLAT CABLE CONNECTOR	
CN201			E41-2237-05	FLAT CABLE CONNECTOR	
CN202			E40-6470-05	PIN ASSY	
CN301			E41-2964-05	PIN ASSY	
J1			E58-1043-05	RECTANGULAR RECEPTACLE	
J501			E11-0625-05	PHONE JACK (LGY6502-0900)	
J521			E11-0656-05	PHONE JACK (3.5D YELLOW)	
J541			E11-0665-05	PHONE JACK (LGY6502-0950)	
J571			E58-1097-05	RECTANGULAR RECEPTACLE	
W201	2C		E30-6883-05	CORD WITH PLUG (FM/AM ANT)	
W261	3D		E30-6945-05	CORD WITH PLUG (TMC)	
F41			F53-0297-05	FUSE (UL,CSA) 1.6A	
F51			F53-0297-05	FUSE (UL,CSA) 1.6A	
F71			F53-0297-05	FUSE (UL,CSA) 1.6A	
F561			F53-0371-05	FUSE 2.5A	
F571			F53-0306-05	FUSE (UL,CSA) 5A	

Ref. No.	Add	New	Parts No.	Description	Destination
⚠ L1			L33-2436-05	CHOKE COIL ASSY	
L71			L41-2205-33	SMALL FIXED INDUCTOR (22U)	
L201			L33-2466-05	SMALL FIXED INDUCTOR	
L261		✻	L41-5685-61	SMALL FIXED INDUCTOR (2012 R56	
L262			L41-1588-61	SMALL FIXED INDUCTOR (C2012C-RD	
L263			L92-0329-05	CHIP FERRITE	
L264		✻	L41-3388-61	SMALL FIXED INDUCTOR (C2012CR33	
L521			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	
L801			L41-1001-28	SMALL FIXED INDUCTOR (10U)	
L802			L92-0329-05	CHIP FERRITE	
X801			L77-3810-05	CRYSTAL RESONATOR (11.2896MHZ)	
AB	2C		N35-2604-43	BINDING HEAD MACHINE SCREW	
R5 ,6			RK73HB1J680JH	CHIP R 68 J 1/16W	
R7 ,8		✻	RK73HB1J820JH	CHIP R 82 J 1/16W	
R9			RK73HB1J473J	CHIP R 47K J 1/16W	
R10			RK73HB1J220JH	CHIP R 22 J 1/16W	
R11			RK73GB2A240JH	CHIP R 24 J 1/10W	
R13			RK73HB1J123J	CHIP R 12K J 1/16W	
R14			RK73HB1J221J	CHIP R 220 J 1/16W	
R15			RK73HB1J473J	CHIP R 47K J 1/16W	
R16			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R17			RK73GH2A622D	CHIP R 6.2K D 1/10W	
R18 ,19			RK73EB2E271J	CHIP R 270 J 1/4W	
R20			RK73HB1J471J	CHIP R 470 J 1/16W	
R21			RK73HH1J473D	CHIP R 47K D 1/16W	
R22			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R23			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R24			RK73HB1J101J	CHIP R 100 J 1/16W	
R25			RK73HB1J471J	CHIP R 470 J 1/16W	
R26			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R27			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R28			RK73HH1J302D	CHIP R 3.0K D 1/16W	
R30 ,31			RK73HH1J473D	CHIP R 47K D 1/16W	
R32			RK73HH1J432D	CHIP R 4.3K D 1/16W	
R33			RK73HH1J752D	CHIP R 7.5K D 1/16W	
R34			RK73HB1J223J	CHIP R 22K J 1/16W	
R35			RK73HB1J220J	CHIP R 22 J 1/16W	
R36			RK73HB1J223J	CHIP R 22K J 1/16W	
R38			RK73HB1J432J	CHIP R 4.3K J 1/16W	
R39			RK73HB1J201J	CHIP R 200 J 1/16W	
R40			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R41			RK73HB1J561J	CHIP R 560 J 1/16W	
R42			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R43			RK73GH2A622D	CHIP R 6.2K D 1/10W	
R44			R92-5279-05	CHIP R 0.47 1/4W	
R45			RK73GH2A203D	CHIP R 20K D 1/10W	
R46			RK73GH2A362D	CHIP R 3.6K D 1/10W	
R47			RK73HB1J223J	CHIP R 22K J 1/16W	
R48			RK73GB2A103J	CHIP R 10K J 1/10W	
R49			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R51			RK73FB2B911J	CHIP R 910 J 1/8W	
R58 ,59			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R71			RK73FB2B152J	CHIP R 1.5K J 1/8W	

K : North America

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-6940-10)

Ref. No.	Add	New	Parts No.	Description				Destination
R72			RK73HB1J104J	CHIP R	100K	J	1/16W	
R73			RK73HB1J750J	CHIP R	75	J	1/16W	
R74			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R75			RK73HB1J470J	CHIP R	47	J	1/16W	
R76			RK73HB1J752J	CHIP R	7.5K	J	1/16W	
R77			RK73HB1J274J	CHIP R	270K	J	1/16W	
R78			RK73HB1J563J	CHIP R	56K	J	1/16W	
R79			RK73HB1J470J	CHIP R	47	J	1/16W	
R80			RK73HB1J103J	CHIP R	10K	J	1/16W	
R81 ,82			RK73HB1J913J	CHIP R	91K	J	1/16W	
R83			RK73HB1J473J	CHIP R	47K	J	1/16W	
R91			RK73GB2A223J	CHIP R	22K	J	1/10W	
R92			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R93			RK73GB2A223J	CHIP R	22K	J	1/10W	
R94			RK73GB2A103J	CHIP R	10K	J	1/10W	
R102			RK73EB2E153J	CHIP R	15K	J	1/4W	
R103,104			RK73EB2E622J	CHIP R	6.2K	J	1/4W	
R105			RK73HB1J912J	CHIP R	9.1K	J	1/16W	
R111			RK73FB2B472J	CHIP R	4.7K	J	1/8W	
R112			RK73GB2A223J	CHIP R	22K	J	1/10W	
R113,114			RK73PB2H102J	CHIP R	1.0K	J	1/2W	
R121			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R124			RK73FB2B472J	CHIP R	4.7K	J	1/8W	
R132			RK73EB2E272J	CHIP R	2.7K	J	1/4W	
R133			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R141			RK73HB1J104J	CHIP R	100K	J	1/16W	
R142			RK73HB1J473J	CHIP R	47K	J	1/16W	
R143			RK73EB2E103J	CHIP R	10K	J	1/4W	
R152			RK73EB2E101J	CHIP R	100	J	1/4W	
R163			RK73EB2E103J	CHIP R	10K	J	1/4W	
R172			RK73EB2E272J	CHIP R	2.7K	J	1/4W	
R173			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R201			RK73HB1J101J	CHIP R	100	J	1/16W	
R202			RK73HB1J154J	CHIP R	150K	J	1/16W	
R203			RK73GH2A243D	CHIP R	24K	D	1/10W	
R204			RK73GH2A154D	CHIP R	150K	D	1/10W	
R205			RK73HB1J153J	CHIP R	15K	J	1/16W	
R206			R92-5279-05	CHIP R	0.47		1/4W	
R207			RK73HB1J223J	CHIP R	22K	J	1/16W	
R208			RK73GH2A752D	CHIP R	7.5K	D	1/10W	
R209			RK73GH2A472D	CHIP R	4.7K	D	1/10W	
R212			RK73FB2B1R0J	CHIP R	1.0	J	1/8W	
R216			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R218			R92-5279-05	CHIP R	0.47		1/4W	
R219			RK73GB2A121J	CHIP R	120	J	1/10W	
R226			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R263			RK73GB2A153J	CHIP R	15K	J	1/10W	
R265			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R266			RK73GB2A200J	CHIP R	20	J	1/10W	
R268			RK73GB2A683J	CHIP R	68K	J	1/10W	
R269			RK73GB2A623J	CHIP R	62K	J	1/10W	
R270			RK73GB2A393J	CHIP R	39K	J	1/10W	
R301			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R302			RK73HB1J103J	CHIP R	10K	J	1/16W	
R303,304			RK73HB1J101J	CHIP R	100	J	1/16W	

Ref. No.	Add	New	Parts No.	Description				Destination
R305			RK73EB2E000J	CHIP R	0.0	J	1/4W	
R308			RK73HB1J104J	CHIP R	100K	J	1/16W	
R309			RK73HB1J103J	CHIP R	10K	J	1/16W	
R310			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R311-316		✻	RK73HB1J750JH	CHIP R	75	J	1/16W	
R317			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R319,320		✻	RK73HB1J560JH	CHIP R	56	J	1/16W	
R322			RK73HB1J223JH	CHIP R	22K	J	1/16W	
R323			RK73HB1J472JH	CHIP R	4.7K	J	1/16W	
R327			RK73HB1J472JH	CHIP R	4.7K	J	1/16W	
R328			RK73HB1J223JH	CHIP R	22K	J	1/16W	
R330			RK73HB1J223JH	CHIP R	22K	J	1/16W	
R332			RK73HB1J223JH	CHIP R	22K	J	1/16W	
R334			RK73HB1J472JH	CHIP R	4.7K	J	1/16W	
R336			RK73HB1J472JH	CHIP R	4.7K	J	1/16W	
R337,338			RK73HB1J680JH	CHIP R	68	J	1/16W	
R341,342			RK73HB1J471J	CHIP R	470	J	1/16W	
R343,344			RK73HB1J223J	CHIP R	22K	J	1/16W	
R351,352			RK73HB1J471J	CHIP R	470	J	1/16W	
R353,354			RK73HB1J223J	CHIP R	22K	J	1/16W	
R361,362			RK73HB1J471J	CHIP R	470	J	1/16W	
R363,364			RK73HB1J223J	CHIP R	22K	J	1/16W	
R371-374			RK73HB1J103J	CHIP R	10K	J	1/16W	
R375,376			RK73EB2E820J	CHIP R	82	J	1/4W	
R381-384			RK73HB1J103J	CHIP R	10K	J	1/16W	
R385,386			RK73EB2E820J	CHIP R	82	J	1/4W	
R391-394			RK73HB1J103J	CHIP R	10K	J	1/16W	
R395,396			RK73EB2E820J	CHIP R	82	J	1/4W	
R402,403			RK73HB1J101J	CHIP R	100	J	1/16W	
R404,405			RK73HB1J473J	CHIP R	47K	J	1/16W	
R406			RK73GB2A2R2J	CHIP R	2.2	J	1/10W	
R407,408			RK73GB2A154J	CHIP R	150K	J	1/10W	
R409,410			RK73HB1J471J	CHIP R	470	J	1/16W	
R474			RK73HB1J473J	CHIP R	47K	J	1/16W	
R478			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R479			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	
R501,502			RK73EB2E100J	CHIP R	10	J	1/4W	
R503			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R504			RK73HB1J202J	CHIP R	2.0K	J	1/16W	
R505,506			RK73GB2A223J	CHIP R	22K	J	1/10W	
R521,522			RK73EB2E100J	CHIP R	10	J	1/4W	
R523			RK73HB1J620J	CHIP R	62	J	1/16W	
R524			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R525			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R541			RK73EB2E101J	CHIP R	100	J	1/4W	
R542			RK73HB1J101J	CHIP R	100	J	1/16W	
R561			RK73HB1J511J	CHIP R	510	J	1/16W	
R562			RK73HB1J104J	CHIP R	100K	J	1/16W	
R564			RK73HB1J562J	CHIP R	5.6K	J	1/16W	
R565,566			RK73HB1J103J	CHIP R	10K	J	1/16W	
R571			RK73GB2A823J	CHIP R	82K	J	1/10W	
R572			RK73GB2A103J	CHIP R	10K	J	1/10W	
R575			RK73GB2A473J	CHIP R	47K	J	1/10W	
R576			RK73HB1J103J	CHIP R	10K	J	1/16W	
R578			RK73HB1J223J	CHIP R	22K	J	1/16W	

K : North America

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-6940-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R579			RK73HB1J473J	CHIP R	47K	J 1/16W	
R580-582			RK73EB2E101J	CHIP R	100	J 1/4W	
R583,584			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R585-587			RK73HB1J223J	CHIP R	22K	J 1/16W	
R588			RK73EB2E200J	CHIP R	20	J 1/4W	
R590			RK73EB2E100J	CHIP R	10	J 1/4W	
R592			RK73EB2E200J	CHIP R	20	J 1/4W	
R602,603			RK73HB1J100J	CHIP R	10	J 1/16W	
R610,611			RK73HB1J100J	CHIP R	10	J 1/16W	
R614-618			RK73HB1J100J	CHIP R	10	J 1/16W	
R645-647			RK73HB1J100J	CHIP R	10	J 1/16W	
R648			RK73HB1J300J	CHIP R	30	J 1/16W	
R652			RK73HB1J100J	CHIP R	10	J 1/16W	
R655,656			RK73HB1J100J	CHIP R	10	J 1/16W	
R751-754			RK73HH1J153D	CHIP R	15K	D 1/16W	
R755-758			RK73HH1J242D	CHIP R	2.4K	D 1/16W	
R759-762			RK73HH1J332D	CHIP R	3.3K	D 1/16W	
R763-770			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R771,772			RK73HB1J752J	CHIP R	7.5K	J 1/16W	
R773,774			RK73HB1J202J	CHIP R	2.0K	J 1/16W	
R775,776			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R781,782			RK73HB1J752J	CHIP R	7.5K	J 1/16W	
R783			RK73HB1J432J	CHIP R	4.3K	J 1/16W	
R784			RK73HB1J202J	CHIP R	2.0K	J 1/16W	
R785			RK73HB1J113J	CHIP R	11K	J 1/16W	
R786			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R797			RK73HB1J103J	CHIP R	10K	J 1/16W	
R800			RK73FB2B000J	CHIP R	0.0	J 1/8W	
R801-803			RK73HB1J430J	CHIP R	43	J 1/16W	
R804,805			RK73EB2E560J	CHIP R	56	J 1/4W	
R806,807			RK73EB2E750J	CHIP R	75	J 1/4W	
R808			RK73HB1J120J	CHIP R	12	J 1/16W	
R811-813			RK73HB1J750J	CHIP R	75	J 1/16W	
R814,815			RK73HB1J820J	CHIP R	82	J 1/16W	
R816,817			RK73HB1J101J	CHIP R	100	J 1/16W	
R818,819			RK73HB1J620J	CHIP R	62	J 1/16W	
R820,821			RK73HB1J360J	CHIP R	36	J 1/16W	
R822,823			RK73HB1J680J	CHIP R	68	J 1/16W	
R824,825			RK73HB1J680JH	CHIP R	68	J 1/16W	
R828			RK73HB1J101J	CHIP R	100	J 1/16W	
R829			RK73GH2A123D	CHIP R	12K	D 1/10W	
R831			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R832			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R833			RK73HB1J101J	CHIP R	100	J 1/16W	
R834,835			RK73HB1J301J	CHIP R	300	J 1/16W	
R836-838			RK73HB1J101J	CHIP R	100	J 1/16W	
R839			RK73HB1J470J	CHIP R	47	J 1/16W	
R841,842			RK73GB2A471J	CHIP R	470	J 1/10W	
R843			RK73HB1J104J	CHIP R	100K	J 1/16W	
R844			RK73HB1J101J	CHIP R	100	J 1/16W	
R845			RK73HB1J104J	CHIP R	100K	J 1/16W	
R846-848			RK73HB1J101J	CHIP R	100	J 1/16W	
R849			RK73HB1J473J	CHIP R	47K	J 1/16W	
R850			RK73HB1J104J	CHIP R	100K	J 1/16W	
R851,852			RK73GB2A471J	CHIP R	470	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R853			RK73HB1J104J	CHIP R	100K	J 1/16W	
R854			RK73HB1J101J	CHIP R	100	J 1/16W	
R855			RK73HB1J104J	CHIP R	100K	J 1/16W	
R856-858			RK73HB1J101J	CHIP R	100	J 1/16W	
R859			RK73HB1J473J	CHIP R	47K	J 1/16W	
R860			RK73HB1J101J	CHIP R	100	J 1/16W	
R861			RK73HB1J473J	CHIP R	47K	J 1/16W	
R863			RK73HB1J101J	CHIP R	100	J 1/16W	
R866,867			RK73HB1J101J	CHIP R	100	J 1/16W	
R868			RK73HB1J104J	CHIP R	100K	J 1/16W	
R871			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R872-874			RK73HB1J1R0J	CHIP R	1.0	J 1/16W	
R875,876			RK73GB2A1R0J	CHIP R	1.0	J 1/10W	
R878			RK73GB2A1R0J	CHIP R	1.0	J 1/10W	
D1			RM30LF014-102	DIODE			
D3 ,4			1SS355	DIODE			
D6			MC2846-T111	DIODE			
D7			RKZ5.6KG(B2)	ZENER DIODE			
D11			RKZ6.8KG(B2)	ZENER DIODE			
D12			RKZ5.1KG(B2)	ZENER DIODE			
D13			1SS355	DIODE			
D41			FF1J4L	DIODE			
D71			RKZ11KG(B2)	ZENER DIODE			
D72			RKZ5.6KG(B2)	ZENER DIODE			
D101			RKZ6.2KG(B2)	ZENER DIODE			
D102			1SS355	DIODE			
D111			1SS355	DIODE			
D112,113			M1F60-6063	DIODE			
D121,122			M1F60-6063	DIODE			
D131			1SS355	DIODE			
D141			RKZ4.7KG(B2)	ZENER DIODE			
D151			RKZ6.2KG(B2)	ZENER DIODE			
D161			1SS355	DIODE			
D171			1SS355	DIODE			
D201		*	RB055L-40	DIODE			
D202			FF1J4L	DIODE			
D203			CRS04	DIODE			
D204			EZAEG3A50A	SURGE ABSORBER			
D301-304			MC2846-T111	DIODE			
D305			1SS355	DIODE			
D341,342			MC2846-T111	DIODE			
D352			MC2846-T111	DIODE			
D356			MC2846-T111	DIODE			
D361,362			MC2846-T111	DIODE			
D501-503			CVS10A120M	VARISTOR			
D521,522			VR1005AAA270	VARISTOR			
D541			VR1005AAA270	VARISTOR			
D561			RKZ5.6KG(B2)	ZENER DIODE			
D571			VR1005AAA270	VARISTOR			
D573			VR1005AAA270	VARISTOR			
D575			VR1005AAA270	VARISTOR			
D576			1SS355	DIODE			
D577-581			VR1005AAA270	VARISTOR			
D601			MC2850-T111	DIODE			

K : North America

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-6940-10)

Ref. No.	Add	New	Parts No.	Description	Destination
D602,603			M1F60-6063	DIODE	
D801			CRS04	DIODE	
IC1			TB2923HQ	ANALOGUE IC	
IC2			NJM4565V-ZB	ANALOGUE IC	
IC3			NJU7109F3-ZB	ANALOGUE IC	
IC42			BA00DD0WHFP	ANALOGUE IC	
IC71			ICL7660SIBAZ	ANALOGUE IC	
IC201			LT3685EMSE	ANALOGUE IC	
IC202			XC6201P502MR	ANALOGUE IC	
IC203			BA00DD0WHFP	ANALOGUE IC	
IC204			E-LD1117DTC	ANALOGUE IC	
IC205			XC6219F132P1	ANALOGUE IC	
IC301			E-TDA7415CB	ANALOGUE IC	
IC303			NJM4565V-ZB	ANALOGUE IC	
IC371-373			NJM4565V-ZB	ANALOGUE IC	
IC401			AN15863UA-VB	ANALOGUE IC	
IC471			HEF4053BT	MOS-IC	
IC521			NJM2505AF-ZB	ANALOGUE IC	
IC561			LB1836M-TLM-E	ANALOGUE IC	
IC571			74AHCT08PW	MOS-IC	
IC751-754			NJM4565V-ZB	ANALOGUE IC	
IC755			NJM2123V-ZB	ANALOGUE IC	
IC801			DSPC56371AF18	MOS-IC	
IC802			AK4588VQ	MOS-IC	
IC803			TC7WHU04FU-F	MOS-IC	
IC804			S-1132B33U5T1G	ANALOGUE IC	
IC805			E-LD1117DTC	ANALOGUE IC	
IC806			XC6201P502PR	ANALOGUE IC	
IC807			TC7SET08FU-F	MOS-IC	
Q1			2SC4617	TRANSISTOR	
Q2			RT1N441M-T111	TRANSISTOR	
Q41			2SB1449(R)-E	TRANSISTOR	
Q42			RT1N241M-T111	TRANSISTOR	
Q43			2SA1774	TRANSISTOR	
Q44			2SC4617	TRANSISTOR	
Q45 ,46			2SA1774	TRANSISTOR	
Q51			2SB1449(R)-E	TRANSISTOR	
Q52			RT1N241M-T111	TRANSISTOR	
Q53			RT1P241M-T111	TRANSISTOR	
Q54			2SC4617	TRANSISTOR	
Q72			2SA1797	TRANSISTOR	
Q73			2SC4617	TRANSISTOR	
Q74			2SA1774	TRANSISTOR	
Q75			2SC4617	TRANSISTOR	
Q76			2SA1774	TRANSISTOR	
Q77			2SC4617	TRANSISTOR	
Q78			2SA1774	TRANSISTOR	
Q79			2SC4617	TRANSISTOR	
Q91			2SA1774	TRANSISTOR	
Q92			RT1N441M-T111	TRANSISTOR	
Q93			RT1N241M-T111	TRANSISTOR	
Q94			2SA1774	TRANSISTOR	
Q101			2SC4617	TRANSISTOR	
Q111			2SB1188(R)	TRANSISTOR	
Q112			2SA1774	TRANSISTOR	
Q113			RT1P241M-T111	TRANSISTOR	
Q114			RT1N237M-T111	TRANSISTOR	
Q131			RT1N241M-T111	TRANSISTOR	
Q161			RT1P144M-T111	TRANSISTOR	
Q171			RT1N241M-T111	TRANSISTOR	
Q261		*	3SK263-E	DUAL FET	
Q341,342			RT1N430M-T111	TRANSISTOR	
Q343			RT1P436M-T111	TRANSISTOR	
Q344			RT1N144M-T111	TRANSISTOR	
Q351,352			RT1N430M-T111	TRANSISTOR	
Q354			RT1N144M-T111	TRANSISTOR	
Q355			RT1N241M-T111	TRANSISTOR	
Q361,362			RT1N430M-T111	TRANSISTOR	
Q363			RT1P436M-T111	TRANSISTOR	
Q364			RT1N144M-T111	TRANSISTOR	
Q401,402			RT1N430M-T111	TRANSISTOR	
Q403			RT1P144M-T111	TRANSISTOR	
Q471			RT1N144M-T111	TRANSISTOR	
Q561			2SB1188(R)	TRANSISTOR	
Q562			2SC4617	TRANSISTOR	
Q563			RT1N144M-T111	TRANSISTOR	
Q571			RT1N144M-T111	TRANSISTOR	
Q572			MTM981400BF	FET	
Q573,574			RT1N441M-T111	TRANSISTOR	
Q801			RT1N144M-T111	TRANSISTOR	
TH1			PRF18BE471QS2	POSITIVE RESISTOR	
A201		*	X86-4280-10	TUNER UNIT (HD/FM AM)	

VIDEO UNIT (X35-5070-10)

C1			CK73HB1E103K	CHIP C	0.010UF	K	
C2			CK73HB1A104K	CHIP C	0.10UF	K	
C3			CK73HB1E223K	CHIP C	0.022UF	K	
C4			CC73HCH1H101J	CHIP C	100PF	J	
C5			CK73HB1E103K	CHIP C	0.010UF	K	
C6			CC73HCH1H101J	CHIP C	100PF	J	
C9			CK73HB1C473K	CHIP C	0.047UF	K	
C10			CK73GB1H103K	CHIP C	0.010UF	K	
C11			CK73GB1H104K	CHIP C	0.10UF	K	
C12 ,13			CK73EB1E106K	CHIP C	10UF	K	
C14			CK73HB1C473K	CHIP C	0.047UF	K	
C15			CK73HB0J224K	CHIP C	0.22UF	K	
C18			CK73GB1H103K	CHIP C	0.010UF	K	
C19			CK73GB1H104K	CHIP C	0.10UF	K	
C20			C92-2031-05	ELECTRO	220UF		
C21 ,22			CK73FB0J226M	CHIP C	22UF	M	
C23			CK73HB0J224K	CHIP C	0.22UF	K	
C26			CK73GB1H103K	CHIP C	0.010UF	K	
C27			CK73GB1H104K	CHIP C	0.10UF	K	
C28			C92-2031-05	ELECTRO	220UF		
C29 -33			CK73FB0J226M	CHIP C	22UF	M	
C34 -37			CK73GB1A105K	CHIP C	1.0UF	K	
C38			CK73HB1A104K	CHIP C	0.10UF	K	
C40 ,41			CK73FB0J226M	CHIP C	22UF	M	
C42			CK73FB1E475K	CHIP C	4.7UF	K	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5070-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C100,101			CK73FB1E475K	CHIP C	4.7UF	K	
C104			CK73GB0J106M	CHIP C	10UF	M	
C105			CK73GB1H103K	CHIP C	0.010UF	K	
C106			CK73GB1H104K	CHIP C	0.10UF	K	
C107			CK73EB1E106K	CHIP C	10UF	K	
C108			CK73GB1H104K	CHIP C	0.10UF	K	
C109			CK73GB1H103K	CHIP C	0.010UF	K	
C110			CK73GB1E154K	CHIP C	0.15UF	K	
C112			CC73GCH1H102J	CHIP C	1000PF	J	
C113			CK73GB1C224K	CHIP C	0.22UF	K	
C114			CC73HCH1H151J	CHIP C	150PF	J	
C115			CK73FB1C106K	CHIP C	10UF	K	
C116			CK73GB1C104K	CHIP C	0.10UF	K	
C117-119			CK73FB1C106K	CHIP C	10UF	K	
C120			CK73GB1H103K	CHIP C	0.010UF	K	
C121			CK73GB1H104K	CHIP C	0.10UF	K	
C122			CK73FB1C106K	CHIP C	10UF	K	
C123			CK73FB1E475K	CHIP C	4.7UF	K	
C124			CK73FB1C106K	CHIP C	10UF	K	
C125			CK73GB1H104K	CHIP C	0.10UF	K	
C126			CK73FB1C106K	CHIP C	10UF	K	
C127			CK73GB1H103K	CHIP C	0.010UF	K	
C128			CK73GB1C104K	CHIP C	0.10UF	K	
C129			CK73FB1C106K	CHIP C	10UF	K	
C130,131			CK73GB1C104K	CHIP C	0.10UF	K	
C133,134			CK73HB0J105K	CHIP C	1.0UF	K	
C135,136			CK73FB1C106K	CHIP C	10UF	K	
C200			CK73HB1E103K	CHIP C	0.010UF	K	
C201			CK73HB0J224K	CHIP C	0.22UF	K	
C202			CK73HB1A104K	CHIP C	0.10UF	K	
C203			CC73HCH1H101J	CHIP C	100PF	J	
C204			CK73FB1E475K	CHIP C	4.7UF	K	
C205-209			CK73EB1E106K	CHIP C	10UF	K	
C210			CK73GB1H104K	CHIP C	0.10UF	K	
C211			CK73GB1H103K	CHIP C	0.010UF	K	
C212			CC73GCH1H471J	CHIP C	470PF	J	
C214			CK73GB1H103K	CHIP C	0.010UF	K	
C215			CK73GB1H104K	CHIP C	0.10UF	K	
C216			CC73HCH1H470J	CHIP C	47PF	J	
C217-220			CK73EB1H475K	CHIP C	4.7UF	K	
C221			CK73GB1H103K	CHIP C	0.010UF	K	
C222			CK73GB1H104K	CHIP C	0.10UF	K	
C223			CK73HB1E103K	CHIP C	0.010UF	K	
C224			CK73HB1A104K	CHIP C	0.10UF	K	
C225			CC73GCH1H101J	CHIP C	100PF	J	
C227			CK73FB1E475K	CHIP C	4.7UF	K	
C228,229			CK73HB1A104K	CHIP C	0.10UF	K	
C300			CK73HB1A104K	CHIP C	0.10UF	K	
C303			CK73HB0J105K	CHIP C	1.0UF	K	
C305			CK73HB0J105K	CHIP C	1.0UF	K	
C306			CK73GB1H104K	CHIP C	0.10UF	K	
C307			CK73HB0J105K	CHIP C	1.0UF	K	
C308-310			CK73GB1H104K	CHIP C	0.10UF	K	
C311			CK73GB0J106M	CHIP C	10UF	M	
C312			CK73FB0J226M	CHIP C	22UF	M	

Ref. No.	Add	New	Parts No.	Description			Destination
C314			CC73GCH1H101J	CHIP C	100PF	J	
C315,316			CK73GB1H102K	CHIP C	1000PF	K	
C317			CC73GCH1H101J	CHIP C	100PF	J	
C318			CK73GB1H102K	CHIP C	1000PF	K	
C319,320			CK73HB1H102K	CHIP C	1000PF	K	
C401			CK73HB1A104K	CHIP C	0.10UF	K	
C402			CC73HCH1H330J	CHIP C	33PF	J	
C403			CK73HB1A104K	CHIP C	0.10UF	K	
C404			CK73GB0J106M	CHIP C	10UF	M	
C405,406			CK73HB1A104K	CHIP C	0.10UF	K	
C407-410			CC73HCH1H101J	CHIP C	100PF	J	
C411-414			CK73HB1A104K	CHIP C	0.10UF	K	
C415			CK73FB0J226M	CHIP C	22UF	M	
C416-419			CK73HB1A104K	CHIP C	0.10UF	K	
C420			CK73HB1E103K	CHIP C	0.010UF	K	
C421			CK73HB1A104K	CHIP C	0.10UF	K	
C422			CK73HB1E103K	CHIP C	0.010UF	K	
C423			CK73HB1A104K	CHIP C	0.10UF	K	
C424			CK73FB1E475K	CHIP C	4.7UF	K	
C425			CK73GB1H104K	CHIP C	0.10UF	K	
C426			CK73HB1E103K	CHIP C	0.010UF	K	
C427			CK73GB0J106M	CHIP C	10UF	M	
C428-430			CK73HB1A104K	CHIP C	0.10UF	K	
C431			CK73GB0J106M	CHIP C	10UF	M	
C432			CK73HB1A104K	CHIP C	0.10UF	K	
C433			CK73FB1E475K	CHIP C	4.7UF	K	
C434			CK73GB1H104K	CHIP C	0.10UF	K	
C435			CK73HB1E103K	CHIP C	0.010UF	K	
C436-444			CK73HB1A104K	CHIP C	0.10UF	K	
C445			CK73HB1E103K	CHIP C	0.010UF	K	
C446,447			CK73HB1A104K	CHIP C	0.10UF	K	
C448,449			CK73HB1E103K	CHIP C	0.010UF	K	
C450-452			CK73GB0J106M	CHIP C	10UF	M	
C453			CK73HB1A104K	CHIP C	0.10UF	K	
C454-459			CK73HB1E103K	CHIP C	0.010UF	K	
C460			CK73FB1C106K	CHIP C	10UF	K	
C461			CK73GB1H104K	CHIP C	0.10UF	K	
C462			CK73HB1E103K	CHIP C	0.010UF	K	
C463,464			CK73FB1C106K	CHIP C	10UF	K	
C465			CK73HB1A104K	CHIP C	0.10UF	K	
C466			CK73GB0J106M	CHIP C	10UF	M	
C467-470			CK73HB1A104K	CHIP C	0.10UF	K	
C471-473			CK73EB1E106K	CHIP C	10UF	K	
C474			CK73FB0J226M	CHIP C	22UF	M	
C475			CC73HCH1H180J	CHIP C	18PF	J	
C476			CK73FB0J226M	CHIP C	22UF	M	
C477,478			CK73EB1E106K	CHIP C	10UF	K	
C479			CK73FB0J226M	CHIP C	22UF	M	
C481			CK73EB1E106K	CHIP C	10UF	K	
C482			CC73HCH1H180J	CHIP C	18PF	J	
C483			CK73GB0J106M	CHIP C	10UF	M	
C484			CK73FB0J226M	CHIP C	22UF	M	
C485			CK73HB1E103K	CHIP C	0.010UF	K	
C486			CK73HB1A104K	CHIP C	0.10UF	K	
C487			CK73GB0J106M	CHIP C	10UF	M	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5070-10)

Ref. No.	Add	New	Parts No.	Description	Destination
C488-490			CK73HB1A104K	CHIP C 0.10UF K	
C492-494			CK73HB1A104K	CHIP C 0.10UF K	
C506			CK73FB0J226M	CHIP C 22UF M	
C508			CK73HB1E103K	CHIP C 0.010UF K	
C509			CK73GB1H104K	CHIP C 0.10UF K	
C510			CK73FB0J226M	CHIP C 22UF M	
C511			CK73GB0J106M	CHIP C 10UF M	
C512			CK73HB1E103K	CHIP C 0.010UF K	
C513-517			CK73HB1A104K	CHIP C 0.10UF K	
C518-522			CC73HCH1H102J	CHIP C 1000PF J	
C528			CK73GB0J106M	CHIP C 10UF M	
C529			CK73HB1E103K	CHIP C 0.010UF K	
C532,533			CC73HCH1H102J	CHIP C 1000PF J	
C534,535			CK73HB1A104K	CHIP C 0.10UF K	
C536,537			CK73FB1C106K	CHIP C 10UF K	
C538			CK73HB0J105K	CHIP C 1.0UF K	
C541			CK73GB1H103K	CHIP C 0.010UF K	
C542			CK73GB1H104K	CHIP C 0.10UF K	
C543			CK73GB1H102K	CHIP C 1000PF K	
C544			CK73HB1E103K	CHIP C 0.010UF K	
CN2			E41-2985-05	FLAT CABLE CONNECTOR	
CN200			E41-2615-05	FLAT CABLE CONNECTOR	
CN300			E41-2276-05	FLAT CABLE CONNECTOR	
CN301			E41-3144-05	FLAT CABLE CONNECTOR	
CN400			E41-2812-05	FLAT CABLE CONNECTOR	
F100			F53-0280-05	FUSE 0.63A	
L1			L92-0364-05	CHIP FERRITE	
L2			L33-2593-05	CHOKE COIL	
L3			L33-1995-05	CHOKE COIL	
L100			L33-2583-05	CHOKE COIL	
L101			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)	
L102			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L103			L33-2611-05	CHOKE COIL	
L105,106			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L200			L33-2583-05	CHOKE COIL	
L201			L33-2587-05	CHOKE COIL	
L301-303			L92-0180-05	CHIP FERRITE	
L400			L41-2281-15	SMALL FIXED INDUCTOR (220NH)	
L401			L92-0378-05	CHIP FERRITE	
L402-407			L92-0172-05	CHIP FERRITE	
L408			L92-0378-05	CHIP FERRITE	
L409-420			L92-0172-05	CHIP FERRITE	
L421-426			L92-0378-05	CHIP FERRITE	
L427,428			L92-0668-05	CHIP FERRITE	
L429,430			L92-0378-05	CHIP FERRITE	
L431			L33-2581-05	CHOKE COIL	
L432			L92-0378-05	CHIP FERRITE	
L433			L92-0364-05	CHIP FERRITE	
L434,435			L92-0378-05	CHIP FERRITE	
L436			L92-0668-05	CHIP FERRITE	
L437-440			L92-0378-05	CHIP FERRITE	
L442			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L443			L92-0668-05	CHIP FERRITE	
L444			L41-1005-33	SMALL FIXED INDUCTOR (10U)	

Ref. No.	Add	New	Parts No.	Description	Destination
X400			L77-2996-05	CRYSTAL RESONATOR (14.31818MHZ)	
CP400,401			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP402			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP403-406			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP407-411			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP412-415			RK74HB1J560J	CHIP-COM 56 J 1/16W	
CP416-419			RK74HB1J820J	CHIP-COM 82 J 1/16W	
R1 ,2			RK73HB1J473J	CHIP R 47K J 1/16W	
R3			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R4			RK73HH1J683D	CHIP R 68K D 1/16W	
R5			RK73HB1J753J	CHIP R 75K J 1/16W	
R6			RK73HB1J683J	CHIP R 68K J 1/16W	
R8			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R9			RK73HH1J153D	CHIP R 15K D 1/16W	
R12			RK73HH1J622D	CHIP R 6.2K D 1/16W	
R13			RK73HH1J333D	CHIP R 33K D 1/16W	
R14			RK73HH1J473D	CHIP R 47K D 1/16W	
R15			RK73HB1J104J	CHIP R 100K J 1/16W	
R16			RK73HB1J473J	CHIP R 47K J 1/16W	
R17			RK73HB1J104J	CHIP R 100K J 1/16W	
R20			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R21			RK73HH1J912D	CHIP R 9.1K D 1/16W	
R22 ,23			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R24			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R25			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R26 ,27			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R28			RK73HB1J473J	CHIP R 47K J 1/16W	
R30			RK73FB2B302J	CHIP R 3.0K J 1/8W	
R31			RK73FB2B392J	CHIP R 3.9K J 1/8W	
R100			RK73HB1J101J	CHIP R 100 J 1/16W	
R101			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R102			RK73HB1J103J	CHIP R 10K J 1/16W	
R104			RK73HB1J101J	CHIP R 100 J 1/16W	
R105			RK73HB1J103J	CHIP R 10K J 1/16W	
R106			RK73HB1J473J	CHIP R 47K J 1/16W	
R108			RK73HH1J114D	CHIP R 110K D 1/16W	
R109			RK73HH1J822D	CHIP R 8.2K D 1/16W	
R111			RK73HH1J104D	CHIP R 100K D 1/16W	
R112			RK73HH1J133D	CHIP R 13K D 1/16W	
R113			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R115			RK73HB1J473J	CHIP R 47K J 1/16W	
R116			RK73HB1J302J	CHIP R 3.0K J 1/16W	
R118			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R119			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R120			RK73HH1J361D	CHIP R 360 D 1/16W	
R122			RK73HH1J183D	CHIP R 18K D 1/16W	
R123			RK73HH1J912D	CHIP R 9.1K D 1/16W	
R124			RK73HB1J203J	CHIP R 20K J 1/16W	
R125			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R126			RK73HB1J101J	CHIP R 100 J 1/16W	
R127			RK73HB1J103J	CHIP R 10K J 1/16W	
R129			RK73HB1J101J	CHIP R 100 J 1/16W	
R130			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R131			RK73HB1J103J	CHIP R 10K J 1/16W	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5070-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R132			RK73HH1J822D	CHIP R	8.2K	D 1/16W	
R133			RK73HH1J113D	CHIP R	11K	D 1/16W	
R135,136			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R137			RK73HB1J473J	CHIP R	47K	J 1/16W	
R200			RK73HH1J104D	CHIP R	100K	D 1/16W	
R201			RK73HB1J104J	CHIP R	100K	J 1/16W	
R202			RK73GB2A104J	CHIP R	100K	J 1/10W	
R203			RK73HB1J104J	CHIP R	100K	J 1/16W	
R204			RK73HB1J302J	CHIP R	3.0K	J 1/16W	
R205			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R208			RK73GB2A563J	CHIP R	56K	J 1/10W	
R209			RK73HB1J104J	CHIP R	100K	J 1/16W	
R210			RK73HH1J273D	CHIP R	27K	D 1/16W	
R211			RK73HB1J302J	CHIP R	3.0K	J 1/16W	
R212			RK73HH1J514D	CHIP R	510K	D 1/16W	
R213			RK73HH1J104D	CHIP R	100K	D 1/16W	
R214			RK73HB1J103J	CHIP R	10K	J 1/16W	
R215			RK73EB2E100J	CHIP R	10	J 1/4W	
R216			RK73HH1J472D	CHIP R	4.7K	D 1/16W	
R217			RK73HH1J103D	CHIP R	10K	D 1/16W	
R219			RK73FB2B182J	CHIP R	1.8K	J 1/8W	
R220			RK73HB1J473J	CHIP R	47K	J 1/16W	
R221			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R223			RK73FB2B302J	CHIP R	3.0K	J 1/8W	
R224			RK73FB2B392J	CHIP R	3.9K	J 1/8W	
R225			RK73HH1J473D	CHIP R	47K	D 1/16W	
R226			RK73HH1J512D	CHIP R	5.1K	D 1/16W	
R227,228			RK73HB1J473J	CHIP R	47K	J 1/16W	
R229,230			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R231,232			RK73HB1J473J	CHIP R	47K	J 1/16W	
R300			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R301			RK73HB1J473J	CHIP R	47K	J 1/16W	
R302			RK73FB2B152J	CHIP R	1.5K	J 1/8W	
R306			RK73HB1J473J	CHIP R	47K	J 1/16W	
R307			RK73GH2A331D	CHIP R	330	D 1/10W	
R308			RK73GH2A361D	CHIP R	360	D 1/10W	
R310			RK73HB1J473J	CHIP R	47K	J 1/16W	
R312,313			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R315			RK73GH2A331D	CHIP R	330	D 1/10W	
R316			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R317			RK73GH2A361D	CHIP R	360	D 1/10W	
R318			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R319			RK73HB1J473J	CHIP R	47K	J 1/16W	
R321-324			RK73GH2A100D	CHIP R	10	D 1/10W	
R325			RK73GH2A331D	CHIP R	330	D 1/10W	
R326			RK73GH2A361D	CHIP R	360	D 1/10W	
R327			RK73GB2A221J	CHIP R	220	J 1/10W	
R328,329			RK73HB1J473J	CHIP R	47K	J 1/16W	
R330			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R331			RK73GH2A331D	CHIP R	330	D 1/10W	
R332,333			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R334			RK73GB2A100J	CHIP R	10	J 1/10W	
R335			RK73GB2A470J	CHIP R	47	J 1/10W	
R336-341			RK73GB2A100J	CHIP R	10	J 1/10W	
R342			RK73GB2A101J	CHIP R	100	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R343			RK73GB2A431J	CHIP R	430	J 1/10W	
R344,345			RK73GB2A101J	CHIP R	100	J 1/10W	
R346			RK73GH2A361D	CHIP R	360	D 1/10W	
R347			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R353-360			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R363			RK73GB2A101J	CHIP R	100	J 1/10W	
R364			RK73GB2A473J	CHIP R	47K	J 1/10W	
R367			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R400			RK73HB1J101J	CHIP R	100	J 1/16W	
R401			RK73HB1J330J	CHIP R	33	J 1/16W	
R402			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R403-405			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R406			RK73HB1J101J	CHIP R	100	J 1/16W	
R407			RK73HB1J330J	CHIP R	33	J 1/16W	
R409			RK73HB1J100J	CHIP R	10	J 1/16W	
R410			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R411			RK73HB1J560J	CHIP R	56	J 1/16W	
R413			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R414			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R417,418			RK73HB1J101J	CHIP R	100	J 1/16W	
R421,422			RK73HB1J330J	CHIP R	33	J 1/16W	
R423-425			RK73HB1J101J	CHIP R	100	J 1/16W	
R426,427			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R428			RK73HB1J470J	CHIP R	47	J 1/16W	
R429-432			RK73HB1J101J	CHIP R	100	J 1/16W	
R436			RK73HB1J103J	CHIP R	10K	J 1/16W	
R437			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R438			RK73HB1J470J	CHIP R	47	J 1/16W	
R440,441			RK73HB1J103J	CHIP R	10K	J 1/16W	
R442,443			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R445			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R447-454			RK73HB1J103J	CHIP R	10K	J 1/16W	
R456-458			RK73HB1J103J	CHIP R	10K	J 1/16W	
R459,460			RK73HB1J101J	CHIP R	100	J 1/16W	
R464			RK73HB1J103J	CHIP R	10K	J 1/16W	
R466			RK73HB1J103J	CHIP R	10K	J 1/16W	
R467,468			RK73HH1J301D	CHIP R	300	D 1/16W	
R469			RK73HB1J103J	CHIP R	10K	J 1/16W	
R470			RK73HH1J301D	CHIP R	300	D 1/16W	
R471			RK73HH1J153D	CHIP R	15K	D 1/16W	
R472			RK73HH1J123D	CHIP R	12K	D 1/16W	
R473			RK73HB1J101J	CHIP R	100	J 1/16W	
R474,475			RK73HB1J100J	CHIP R	10	J 1/16W	
R476			RK73HB1J103J	CHIP R	10K	J 1/16W	
R477			RK73HH1J220D	CHIP R	22	D 1/16W	
R478			RK73HH1J123D	CHIP R	12K	D 1/16W	
R479			RK73HH1J273D	CHIP R	27K	D 1/16W	
R480			RK73HH1J220D	CHIP R	22	D 1/16W	
R481			RK73HB1J101J	CHIP R	100	J 1/16W	
R482			RK73HB1J103J	CHIP R	10K	J 1/16W	
R483			RK73HH1J220D	CHIP R	22	D 1/16W	
R484			RK73HB1J101J	CHIP R	100	J 1/16W	
R485			RK73EB2E392J	CHIP R	3.9K	J 1/4W	
R486			RK73HB1J104J	CHIP R	100K	J 1/16W	
R487			RK73HB1J101J	CHIP R	100	J 1/16W	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5070-10)

The IC2 in the Video unit (X35-5070-10) are not replaceable components. When these ICs are defective, replace the whole Video unit (X35-5070-10).

Ref. No.	Add	New	Parts No.	Description	Destination
R488,489			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R490			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R492			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R493			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R494			RK73HB1J101J	CHIP R 100 J 1/16W	
R495			RK73HB1J470J	CHIP R 47 J 1/16W	
R496			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R497,498			RK73HB1J101J	CHIP R 100 J 1/16W	
R499-505			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R507-511			RK73HB1J101J	CHIP R 100 J 1/16W	
R512			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R513,514			RK73HB1J101J	CHIP R 100 J 1/16W	
R515			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R516			RK73HB1J101J	CHIP R 100 J 1/16W	
R517			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R518			RK73HB1J471J	CHIP R 470 J 1/16W	
R519			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R522			RK73HB1J101J	CHIP R 100 J 1/16W	
R523			RK73HH1J620D	CHIP R 62 D 1/16W	
R524			RK73HB1J101J	CHIP R 100 J 1/16W	
R525			RK73HH1J161D	CHIP R 160 D 1/16W	
R526,527			RK73HB1J101J	CHIP R 100 J 1/16W	
R529			RK73HH1J430D	CHIP R 43 D 1/16W	
R530			RK73HB1J103J	CHIP R 10K J 1/16W	
R531			RK73HB1J470J	CHIP R 47 J 1/16W	
R532			RK73HB1J101J	CHIP R 100 J 1/16W	
R533,534			RK73HB1J560J	CHIP R 56 J 1/16W	
R535			RK73HH1J390D	CHIP R 39 D 1/16W	
R536			RK73HH1J101D	CHIP R 100 D 1/16W	
R537			RK73HH1J161D	CHIP R 160 D 1/16W	
R538			RK73HH1J101D	CHIP R 100 D 1/16W	
R539			RK73HH1J390D	CHIP R 39 D 1/16W	
R540			RK73HH1J430D	CHIP R 43 D 1/16W	
R541			RK73HH1J161D	CHIP R 160 D 1/16W	
R542			RK73HH1J131D	CHIP R 130 D 1/16W	
R543-547			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R549			RK73HH1J822D	CHIP R 8.2K D 1/16W	
R550			RK73HH1J123D	CHIP R 12K D 1/16W	
R551			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R552,553			RK73HB1J820J	CHIP R 82 J 1/16W	
R554			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R555			RK73HH1J123D	CHIP R 12K D 1/16W	
R556			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R557			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R558-560			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R561			RK73GB2A100J	CHIP R 10 J 1/10W	
R562,563			RK73HH1J391D	CHIP R 390 D 1/16W	
R565			RK73HH1J391D	CHIP R 390 D 1/16W	
R566,567			RK73HH1J131D	CHIP R 130 D 1/16W	
R569			RK73HH1J131D	CHIP R 130 D 1/16W	
R570			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R571			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R572			RK73HH1J103D	CHIP R 10K D 1/16W	
D1			RKZ3.9KG(B2)	ZENER DIODE	

Ref. No.	Add	New	Parts No.	Description	Destination
D2			EC31QS04AG	DIODE	
D3			RB521S-30	DIODE	
D4			EC31QS04AG	DIODE	
D5 ,6			RB521S-30	DIODE	
D100			EP05Q06	DIODE	
D101-103			EP05Q04	DIODE	
D105			MC2850-T111	DIODE	
D107			MC2850-T111	DIODE	
D200			EC31QS04AG	DIODE	
D202			RKZ3.9KG(B2)	ZENER DIODE	
D300,301			MC2850-T111	DIODE	
D302-305			CVL10C270M300	VARISTOR	
D306			CVS10A120M	VARISTOR	
D307-309			CVL10C270M300	VARISTOR	
D311-314			CVS10A180M	VARISTOR	
D315-319			CVS10A120M	VARISTOR	
D322			CVS10A120M	VARISTOR	
D406-416			CVL10C270M300	VARISTOR	
IC1			TC7SH125FU-F	MOS-IC	
IC2			-	ANALOGUE IC	
IC3			BA00DD0WHFP	ANALOGUE IC	
IC4			XC6219B332PR	ANALOGUE IC	
IC5			XC6219B182PR	ANALOGUE IC	
IC6			TC7SH17FU-F	MOS-IC	
IC100			LT1947-PBF	ANALOGUE IC	
IC101			XC6213B332N-G	ANALOGUE IC	
IC200			LT3598EFE-F	ANALOGUE IC	
IC201			TC7SH17FU-F	MOS-IC	
IC202,203			TC7SH08FU-F	MOS-IC	
IC300			XC6213B332N-G	ANALOGUE IC	
IC400			AT25DF161	ROM IC	
IC401			MST7703-A-LF	MOS-IC	
IC402			NJM2107F-ZB	ANALOGUE IC	
IC403			A3V64S40ETPG6	DRAM IC	
Q1			2SC4081	TRANSISTOR	
Q3 ,4			RT1N144U-T111	TRANSISTOR	
Q5			CPH3105-E	TRANSISTOR	
Q6			2SC4617	TRANSISTOR	
Q100			2SA1577	TRANSISTOR	
Q101			2SA1576A	TRANSISTOR	
Q102			RT1N144U-T111	TRANSISTOR	
Q103			RT1P144U-T111	TRANSISTOR	
Q107			2SA1577	TRANSISTOR	
Q108			2SC4081	TRANSISTOR	
Q109			2SA1576A	TRANSISTOR	
Q110			2SC4081	TRANSISTOR	
Q111,112			RT1N144U-T111	TRANSISTOR	
Q113			RT1P144U-T111	TRANSISTOR	
Q114			2SC4081	TRANSISTOR	
Q115			2SC4097	TRANSISTOR	
Q116			2SC4081	TRANSISTOR	
Q117			2SA1576A	TRANSISTOR	
Q201			2SC4081	TRANSISTOR	
Q202			CPH3105-E	TRANSISTOR	
Q203			2SC4617	TRANSISTOR	

K : North America

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5070-10)

Ref. No.	Add	New	Parts No.	Description	Destination
Q204			RT1P144M-T111	TRANSISTOR	
Q205			2SC4617	TRANSISTOR	
Q300			RT1N144U-T111	TRANSISTOR	
Q301			2SB1689	TRANSISTOR	
Q307			2SC4081	TRANSISTOR	
Q309			RT1N144U-T111	TRANSISTOR	
Q310			RT1P144U-T111	TRANSISTOR	
Q311			2SC4081	TRANSISTOR	
Q313,314			2SC4081	TRANSISTOR	
Q400			RT1N144U-T111	TRANSISTOR	
DVD UNIT (X37-1300-01)					
C5 -7			CK73HB1E103K	CHIP C 0.010UF K	
C11			CK73HB1E103K	CHIP C 0.010UF K	
C15			CK73HB1A104K	CHIP C 0.10UF K	
C16			CK73FB0J106K	CHIP C 10UF K	
C17			CK73GB0J475K	CHIP C 4.7UF K	
C72			CK73HB1A104K	CHIP C 0.10UF K	
C100			CK73HB1A104K	CHIP C 0.10UF K	
C102			CK73HB1A104K	CHIP C 0.10UF K	
C106			CK73HB1A104K	CHIP C 0.10UF K	
C109			CK73HB1A104K	CHIP C 0.10UF K	
C111			CK73HB1C333K	CHIP C 0.033UF K	
C113			CK73HB1A104K	CHIP C 0.10UF K	
C114			CK73GB1H562K	CHIP C 5600PF K	
C115			CK73HB1C183K	CHIP C 0.018UF K	
C117			CK73HB1A104K	CHIP C 0.10UF K	
C118			CK73HB0J105K	CHIP C 1.0UF K	
C120,121			CK73HB1A104K	CHIP C 0.10UF K	
C122			CK73GB0J475K	CHIP C 4.7UF K	
C126-129			CK73HB1A104K	CHIP C 0.10UF K	
C130-133			CC73HCH1H151J	CHIP C 150PF J	
C134			CC73HCH1H102J	CHIP C 1000PF J	
C137,138			CK73HB0J105K	CHIP C 1.0UF K	
C143,144			CC73HCH1H100D	CHIP C 10PF D	
C145			CK73HB1A104K	CHIP C 0.10UF K	
C148			CK73HB1A104K	CHIP C 0.10UF K	
C153			CK73HB1A104K	CHIP C 0.10UF K	
C158			CK73HB1A104K	CHIP C 0.10UF K	
C200-203			CK73FB0J106K	CHIP C 10UF K	
C271			CC73HCH1H102J	CHIP C 1000PF J	
C272			CK73HB0J105K	CHIP C 1.0UF K	
C302			CK73FB0J106K	CHIP C 10UF K	
C434			CK73FB0J106K	CHIP C 10UF K	
C435			CK73HB1E103K	CHIP C 0.010UF K	
C443			CK73FB0J226M	CHIP C 22UF M	
C450			CK73HB1A104K	CHIP C 0.10UF K	
C454,455			CK73HB1A104K	CHIP C 0.10UF K	
C461			CK73HB1H472K	CHIP C 4700PF K	
C462			CK73HB1E103K	CHIP C 0.010UF K	
C467			CC73HCH1H121J	CHIP C 120PF J	
C468,469			CK73HB1A104K	CHIP C 0.10UF K	
C476			CC73HCH1H101J	CHIP C 100PF J	
C498			CK73FB0J226M	CHIP C 22UF M	
C510			CC73HCH1H102J	CHIP C 1000PF J	
C511			CK73GB0J475K	CHIP C 4.7UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C521			CK73HB1A104K	CHIP C 0.10UF K	
C531-539			CK73HB1A104K	CHIP C 0.10UF K	
C541-546			CK73HB1A104K	CHIP C 0.10UF K	
C548,549			CK73HB1A104K	CHIP C 0.10UF K	
C551			CK73HB1A104K	CHIP C 0.10UF K	
C552			CK73FB0J226M	CHIP C 22UF M	
C553			CK73HB0J105K	CHIP C 1.0UF K	
C554			CK73FB0J106K	CHIP C 10UF K	
C557			CC73HCH1H680J	CHIP C 68PF J	
C558			CK73HB1A104K	CHIP C 0.10UF K	
C561			CK73HB0J105K	CHIP C 1.0UF K	
C563			CK73HB1A104K	CHIP C 0.10UF K	
C566			CK73FB0J226M	CHIP C 22UF M	
C567			CK73HB0J105K	CHIP C 1.0UF K	
C805			CC73HCH1H102J	CHIP C 1000PF J	
C807			CK73HB0J105K	CHIP C 1.0UF K	
C808			CK73HB1A104K	CHIP C 0.10UF K	
C809,810			CC73HCH1H471J	CHIP C 470PF J	
C811,812			CC73HCH1H102J	CHIP C 1000PF J	
C813,814			CK73HB1H472K	CHIP C 4700PF K	
C815			CK73FB0J106K	CHIP C 10UF K	
C816-819			CC73HCH1H102J	CHIP C 1000PF J	
C821,822			CC73HCH1H102J	CHIP C 1000PF J	
CN1			E41-2594-05	FLAT CABLE CONNECTOR	
CN3			E41-2596-05	FLAT CABLE CONNECTOR	
CN6			E41-2603-05	FLAT CABLE CONNECTOR	
L15			L33-2280-05	SMALL FIXED INDUCTOR	
X2			L77-3830-05	CRYSTAL RESONATOR (27MHZ)	
CP61			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP68			RK74HB1J470J	CHIP-COM 47 J 1/16W	
R2 -4			RK73HB1J103J	CHIP R 10K J 1/16W	
R10			RK73HB1J163J	CHIP R 16K J 1/16W	
R16			RK73HB1J103J	CHIP R 10K J 1/16W	
R17			RK73HB1J271J	CHIP R 270 J 1/16W	
R19			RK73HB1J301J	CHIP R 300 J 1/16W	
R21 ,22			RK73HB1J103J	CHIP R 10K J 1/16W	
R80			RK73HB1J220J	CHIP R 22 J 1/16W	
R81			RK73HB1J470J	CHIP R 47 J 1/16W	
R84 ,85			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R86			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R87			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R89			RK73HH1J303D	CHIP R 30K D 1/16W	
R90			RK73HB1J223J	CHIP R 22K J 1/16W	
R92			RK73HH1J123D	CHIP R 12K D 1/16W	
R94			RK73HH1J512D	CHIP R 5.1K D 1/16W	
R112,113			RK73HB1J101J	CHIP R 100 J 1/16W	
R116			RK73HB1J103J	CHIP R 10K J 1/16W	
R119			RK73HB1J103J	CHIP R 10K J 1/16W	
R150,151			RK73HB1J100J	CHIP R 10 J 1/16W	
R152,153			RK73HB1J471J	CHIP R 470 J 1/16W	
R154,155			RK73HB1J751J	CHIP R 750 J 1/16W	
R156,157			RK73HB1J560J	CHIP R 56 J 1/16W	
R158,159			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	

K : North America

⚠Indicates safety critical components.

PARTS LIST

The IC5 in the DVD unit (X37-1300-01) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6640-02).

DVD UNIT (X37-1300-01)

Ref. No.	Add	New	Parts No.	Description	Destination
R164,165			RK73HB1J101J	CHIP R 100 J 1/16W	
R200			RK73HH1J201D	CHIP R 200 D 1/16W	
R206			RK73HH1J151D	CHIP R 150 D 1/16W	
R400,401			RK73HB1J470J	CHIP R 47 J 1/16W	
R409			RK73HB1J470J	CHIP R 47 J 1/16W	
R410,411			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R470			RK73HB1J103J	CHIP R 10K J 1/16W	
R475			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R476			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R478			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R481			RK73HH1J203D	CHIP R 20K D 1/16W	
R485,486			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R487			RK73HB1J103J	CHIP R 10K J 1/16W	
R497			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R501			RK73HB1J132J	CHIP R 1.3K J 1/16W	
R502			RK73HB1J333J	CHIP R 33K J 1/16W	
R503			RK73HB1J203J	CHIP R 20K J 1/16W	
R504			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R505			RK73HB1J821J	CHIP R 820 J 1/16W	
R511,512			RK73HB1J103J	CHIP R 10K J 1/16W	
R523,524			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R588			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R591			RK73HB1J820J	CHIP R 82 J 1/16W	
R615			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R621			RK73HB1J103J	CHIP R 10K J 1/16W	
R622			RK73HB1J333J	CHIP R 33K J 1/16W	
R630			R92-3416-05	METAL GLAZE RESISTOR	
R631-634			RK73HB1J103J	CHIP R 10K J 1/16W	
R651			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R653			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R654-656			RK73HB1J330J	CHIP R 33 J 1/16W	
R659			RK73HB1J103J	CHIP R 10K J 1/16W	
R675			RK73HH1J151D	CHIP R 150 D 1/16W	
R679			RK73HH1J151D	CHIP R 150 D 1/16W	
R688			RK73HH1J124D	CHIP R 120K D 1/16W	
R689			RK73HH1J274D	CHIP R 270K D 1/16W	
R694-696			RK73HB1J103J	CHIP R 10K J 1/16W	
R697			RK73HB1J153J	CHIP R 15K J 1/16W	
R698			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R701			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R707			RK73HB1J103J	CHIP R 10K J 1/16W	
R712			RK73HB1J103J	CHIP R 10K J 1/16W	
R713			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R715			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R716-718			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R803-805			RK73HH1J181D	CHIP R 180 D 1/16W	
R806			RK73HH1J151D	CHIP R 150 D 1/16W	
R807,808			RK73HB1J123J	CHIP R 12K J 1/16W	
R809,810			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R811,812			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R813			RK73HB1J103J	CHIP R 10K J 1/16W	
R815,816			RK73HB1J221JH	CHIP R 220 J 1/16W	
R817,818			RK73HB1J471JH	CHIP R 470 J 1/16W	
R823,824			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
S1			S68-0911-15	PUSH SWITCH	
S2			S68-0917-05	PUSH SWITCH	
IC1			MN2DS0016AA	MOS-IC	
IC5			-	ROM IC	
IC10			AN41250A-VB	ANALOGUE IC	
IC54			M12L1281687L	DRAM IC	
IC59			XC9223B082A1	MOS-IC	
IC61			AK4387ET	MOS-IC	
IC64			THS7316D	MOS-IC	
IC65			MM1671XNRE	ANALOGUE IC	
Q1 ,2			RT1P432U-T111	TRANSISTOR	
Q4			RT1P432U-T111	TRANSISTOR	
Q10 ,11			2SC5383-T1(F)	TRANSISTOR	
Q12 ,13			2SB1709	TRANSISTOR	
Q14 ,15			2SK3019	FET	

DVD MECHANISM ASSY (X92-6640-02) (DVS-8712W)

1	1A		A10-5523-11+	CHASSIS	
2	2B		A10-5543-01	CHASSIS	
3	1A		A10-5535-01	CHASSIS	
4	3A		A10-5534-12	CHASSIS	
7	1B		D10-7080-02	ARM	
8	1B		D10-7081-02	ARM	
9	1B		D10-7082-02	LEVER	
10	1B		D10-7083-02	LEVER	
12	2B		D10-7084-02+	SLIDER	
13	2A		D10-7100-02	ARM	
14	2B		D10-7086-03+	ARM	
15	2B		D10-7087-02	ARM	
25	2B		D10-7092-04+	SLIDER ASSY	
27	2A		D10-7091-04	LEVER	
28	2B		D12-0640-02+	CAM	
31	2B		D13-3029-04	GEAR	
32	2B		D13-3030-04	GEAR	
33	2B		D13-3031-04	GEAR	
34	2B		D13-3032-04	GEAR	
35	2B		D13-3033-04	GEAR	
36	2B		D13-3034-04	GEAR	
40	2A		D13-3038-04	GEAR	
41	2A		D13-3039-04	GEAR	
42	2A		D13-3040-04	GEAR	
43	1B		D14-1034-04	ROLLER	
53	1B		D21-2487-24+	SHAFT	
54	2A		D39-0275-05	DAMPER	
55	2A		D39-0276-05	DAMPER	
60	3A		F09-3037-03	SHEET	
65	2B		G01-4734-04	EXTENSION SPRING	
66	1B		G01-4735-14	EXTENSION SPRING	
67	2A		G01-3300-14+	TORSION COIL SPRING	
68	2B		G01-4737-14	EXTENSION SPRING	
69	1B		G01-4602-14+	EXTENSION SPRING	
70	1B		G01-4740-04	TORSION COIL SPRING	
74	2B		G01-4609-24+	TORSION COIL SPRING	
75	1B		G02-1904-03+	FLAT SPRING	

K : North America

⚠Indicates safety critical components.

PARTS LIST

DVD MECHANISM ASSY (X92-6640-02) (DVS-8712W)

Ref. No.	Add	New	Parts No.	Description	Destination
79	2A		J22-0898-01	MOUNTING HARDWARE	
80	3B		J22-0891-11+	MOUNTING HARDWARE	
A	1A		N09-6815-05	MACHINE SCREW (M1.7X2.0)	
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4.0 P-T)	
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW	
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
93	2A		T99-0471-05	MAGNET	
96	1B		X94-2080-00	ROLLER ASSY	
98	2A		X94-2120-00	TRAVERSE ASSY (PICKUP,SPINDLE)	
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)	

Ref. No.	Add	New	Parts No.	Description	Destination

K : North America

⚠Indicates safety critical components.